

# CONTENTS

Foreword .....	0-1	8. Operation in the special work sites .....	4-19
Before servicing this machine .....	0-2	9. Normal operation of excavator .....	4-21
EC regulation approved .....	0-3	10. Attachment lowering .....	4-22
Table to enter S/No and distribution .....	0-4	11. Storage .....	4-23
Safety labels .....	0-5	12. RCV lever operating pattern .....	4-25
Machine data plate .....	0-18	13. Switching hydraulic attachment circuit .....	4-27
Guide (direction, S/No, symbol) .....	0-19		
<b>SAFETY HINTS</b>			
1. Before operating the machine .....	1-1	1. Preparation for transportation .....	5-1
2. During operating the machine .....	1-16	2. Dimension and weight .....	5-2
3. During maintenance .....	1-23	3. Loading the machine .....	5-8
4. Parking .....	1-26	4. Fixing the machine .....	5-10
<b>SPECIFICATIONS</b>			
1. Major components .....	2-1	5. Loading and unloading by crane .....	5-11
2. Specifications .....	2-2	6. Disassemble for transportation .....	5-12
3. Working range .....	2-8	7. Adjustable track gauge (R520LC-9 only) .....	5-15
4. Weight .....	2-15		
5. Lifting capacities .....	2-17		
6. Bucket selection guide .....	2-22		
7. Undercarriage .....	2-26		
8. Specification for major components .....	2-30		
9. Recommended oils .....	2-34		
<b>CONTROL DEVICES</b>			
1. Cab devices .....	3-1		
2. Cluster .....	3-2		
3. Switches .....	3-23		
4. Levers and pedals .....	3-27		
5. Air conditioner and heater .....	3-29		
6. Others .....	3-36		
<b>OPERATION</b>			
1. Suggestion for new machine .....	4-1		
2. Check before starting the engine .....	4-2		
3. Starting and stop the engine .....	4-3		
4. Mode selection system .....	4-6		
5. Operation of the working device .....	4-11		
6. Traveling of the machine .....	4-12		
7. Efficient working method .....	4-15		
<b>TRANSPORTATION</b>			
1. Preparation for transportation .....	5-1		
2. Dimension and weight .....	5-2		
3. Loading the machine .....	5-8		
4. Fixing the machine .....	5-10		
5. Loading and unloading by crane .....	5-11		
6. Disassemble for transportation .....	5-12		
7. Adjustable track gauge (R520LC-9 only) .....	5-15		
<b>MAINTENANCE</b>			
1. Instruction .....	6-1		
2. Tightening torque .....	6-6		
3. Fuel, coolant and lubricants .....	6-10		
4. Maintenance check list .....	6-12		
5. Maintenance chart .....	6-17		
6. Service instruction .....	6-19		
7. Electrical system .....	6-41		
8. Air conditioner and heater .....	6-44		
<b>TROUBLESHOOTING GUIDE</b>			
1. Engine .....	7-1		
2. Electrical system .....	7-2		
3. Others .....	7-3		
<b>HYDRAULIC BREAKER AND QUICK CLAMP</b>			
1. Selecting hydraulic breaker .....	8-1		
2. Circuit configuration .....	8-2		
3. Maintenance .....	8-3		
4. Precaution while operating the breaker .....	8-4		
5. Quick clamp .....	8-6		
<b>OTHERS</b>			
1. Semi auto grease lubrication system .....	9-1		
<b>INDEX .....</b>			
	10-1		