

A

Accel dial switch	3-35
After engine start	4-5
Air breather element	6-32
Air cleaner filter	6-26
Air conditioner & heater	3-41
Air conditioner filter	6-44
Alternate exit	0-11
Attachment lowering	4-32

B

Battery	6-41
Before starting engine	4-2
Boom lowering	4-32
Bucket clearance adjustment	6-39
Bucket replacement	6-37
Bucket selection guide	2-18
Bucket tooth replacement	6-38

C

Cab air filter	6-44
Cab device	3-1
Changing machine control pattern	4-35
Cigar lighter	3-48
Cluster	3-2
Coolant	6-20
Cooling fan	6-24
Corrosion resister	6-29

D

Drain filter	6-32
--------------------	------

E

Emergency engine starting connector	3-60
Engine oil filter	6-18
Engine oil level	6-26
Engine starting & stop	4-7
Engine starting by booster	6-42
Engine stop	4-10

F

Fan belt	6-24
Fan belt tensioner	6-25
Fuel filter	6-27
Fuel leakage	6-30
Fuel tank	6-27
Fuse & relay box	3-59

G

Gauge	3-3, 3-24
-------------	-----------

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-31
Hydraulic oil filling	6-30
Hydraulic oil level	6-30

L

LCD	3-2, 3-26
Levers & pedals	3-39
Lifting capacities	2-6
Lubricant specification	2-30, 6-10

M

Maintenance check list	6-11
Major component	2-1
MCU (Machine Control Unit)	3-59
Mode selection system	4-11, 4-16
Monitor panel	3-2, 3-23
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-35

P

Pedals	3-40
Periodical replacement parts	6-5
Pilot filter	6-33
Pin & bushing lubrication	6-40
Prefilter	6-28
Pilot lamps	3-7, 3-30

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-20
Radio & USB player	3-49
RCV lever lubricate	6-35
Recommended oils	2-30, 6-10
Relieving pressure	6-3
Return filter	6-32

RCV lever operating pattern	4-35
-----------------------------------	------

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-57, 3-58
Seat belt	3-57, 3-58
Service meter	3-60
Service socket	3-48, 3-60
Specification for major component	2-26
Specification	2-2
Start switch	3-34
Storage	4-33
Suction strainer	6-31
Swing bearing grease	6-34
Swing gear & pinion grease	6-33
Swing reduction gear oil	6-33
Switch panel	3-32
Switches	3-9, 3-34

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-24
Track adjustment	6-36
Track shoe selection	2-23
Transportation	5-1
Travel reduction gear oil	6-34
Traveling machine	4-22
Troubleshooting guide	7-1

U

Undercarriage	2-22
USB socket	3-37

W

Warming up operation	4-5
Warning lamps	3-4, 3-25
Weight	2-12
Windshield	3-61
Working device operation	4-21
Working method	4-25
Working range	2-6