


12. RCV LEVER OPERATING PATTERN

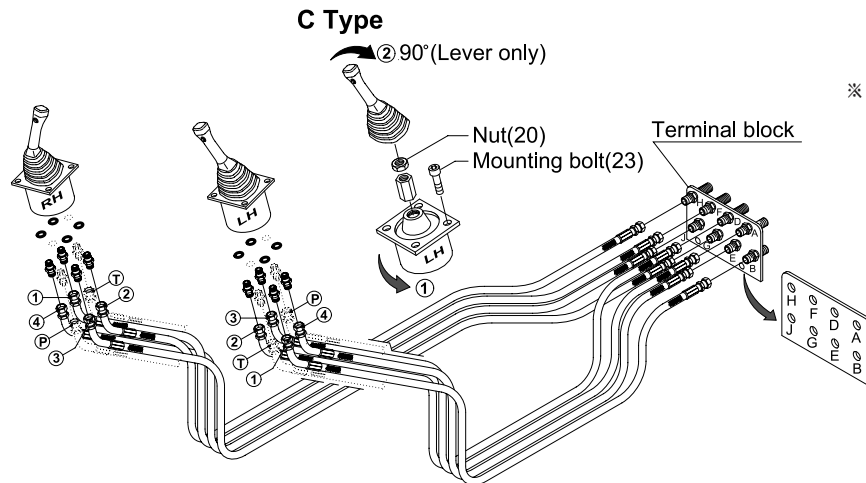

360740P28

Pattern	Operation		Control function	Hose connection(Port)			
	Left	Right		RCV lever	Change of MCV port		
					From	To	
ISO Type			Left	① Arm out ② Arm in ③ Swing right ④ Swing left	② ④ ③ ①	D E A B	- - - -
Hyundai			Right	⑤ Boom lower ⑥ Boom raise ⑦ Bucket out ⑧ Bucket in	④ ② ① ③	J H F G	- - - -
A Type			Left	① Boom lower ② Boom raise ③ Swing right ④ Swing left	② ④ ③ ①	D E A B	J H - -
			Right	⑤ Arm out ⑥ Arm in ⑦ Bucket out ⑧ Bucket in	④ ② ① ③	J H F G	D E - -
B Type			Left	① Boom lower ② Boom raise ③ Bucket in ④ Bucket out	② ④ ③ ①	D E A B	J H G F
			Right	⑤ Arm out ⑥ Arm in ⑦ Swing right ⑧ Swing left	④ ② ① ③	J H F G	D E A B
C Type			Left	① Loosen the RCV lever mounting bolt(21) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut(20) and rotates only lever 90° clockwise.			
			Right	Same as ISO type			