

INDEX

A

- After engine start 4-5
- Air breather element 6-29
- Air cleaner filter 6-24
- Air conditioner & heater 3-15
- Air conditioner filter 6-40
- Attachment lowering 4-18

B

- Battery 6-36
- Before starting engine 4-2
- Boom lowering 4-18
- Bucket replacement 6-33
- Bucket selection guide 2-7
- Bucket tooth replacement 6-34

C

- Cab device 3-1
- Cassette & radio 3-15
- Changing machine control pattern 4-21
- Cigar lighter 3-20
- Coolant 6-20
- Cooling fan 6-24

D

- Dozer control 4-7

E

- Emergency exit 0-9
- Engine oil filter 6-18
- Engine oil level 6-18
- Engine starting & stop 4-3
- Engine starting by booster 6-37
- Engine stop 4-6

F

- Fan belt 6-23
- Fuel filter 6-26
- Fuel leakage 6-26
- Fuel system bleeding 6-26
- Fuel tank 6-25
- Fuse box 3-19

H

- Hydraulic breaker 8-1
- Hydraulic oil changing 6-27
- Hydraulic oil filling 6-27
- Hydraulic oil level 6-27

L

- Levers & pedals 3-10
- Lifting capacities 2-5
- Lubricant specification 2-16, 6-10

M

- Maintenance check list 6-11
- Major component 2-1
- Monitor panel 3-2
- Mounting and dismounting 1-12

N

- New machine operation 4-1

O

- Oil cooler 6-23
- Operating pattern 4-21

P

- Pedals 3-10
- Periodical replacement parts 6-5
- Pilot line filter 6-29

R

- Radiator flushing 6-20
- Radio 3-15
- RCV lever lubricate 6-31
- Recommended oils 2-16, 6-10
- Relieving pressure 6-3
- Return filter 6-28

S

- Safety hints 1-1
- Safety labels 0-5
- Safety parts 6-5
- Seat 3-18
- Seat belt 3-18

| | |
|--------------------------------------|------|
| Service meter | 3-3 |
| Speciation for major component | 2-13 |
| Specification | 2-2 |
| Start switch | 3-7 |
| Storage | 4-19 |
| Suction strainer | 6-28 |
| Swing bearing grease | 6-30 |
| Swing reduction gear oil | 6-29 |
| Switch panel | 3-7 |
| Switches | 3-7 |

T

| | |
|---------------------------------|------|
| Torques-major component | 6-8 |
| Torques-fastener | 6-6 |
| Towing machine | 4-10 |
| Track adjustment | 6-32 |
| Track shoe | 2-12 |
| Transportation | 5-1 |
| Travel reduction gear oil | 6-31 |
| Travelling machine | 4-8 |
| Troubleshooting guide | 7-1 |

U

| | |
|---------------------|------|
| Undercarriage | 2-12 |
|---------------------|------|

W

| | |
|--------------------------------|------|
| Warming up operation | 4-5 |
| Warning lamps | 3-4 |
| Water separator | 6-25 |
| Weight | 2-4 |
| Working device operation | 4-7 |
| Working method | 4-11 |
| Working range | 2-3 |