


## SAFETY LABELS

### 1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

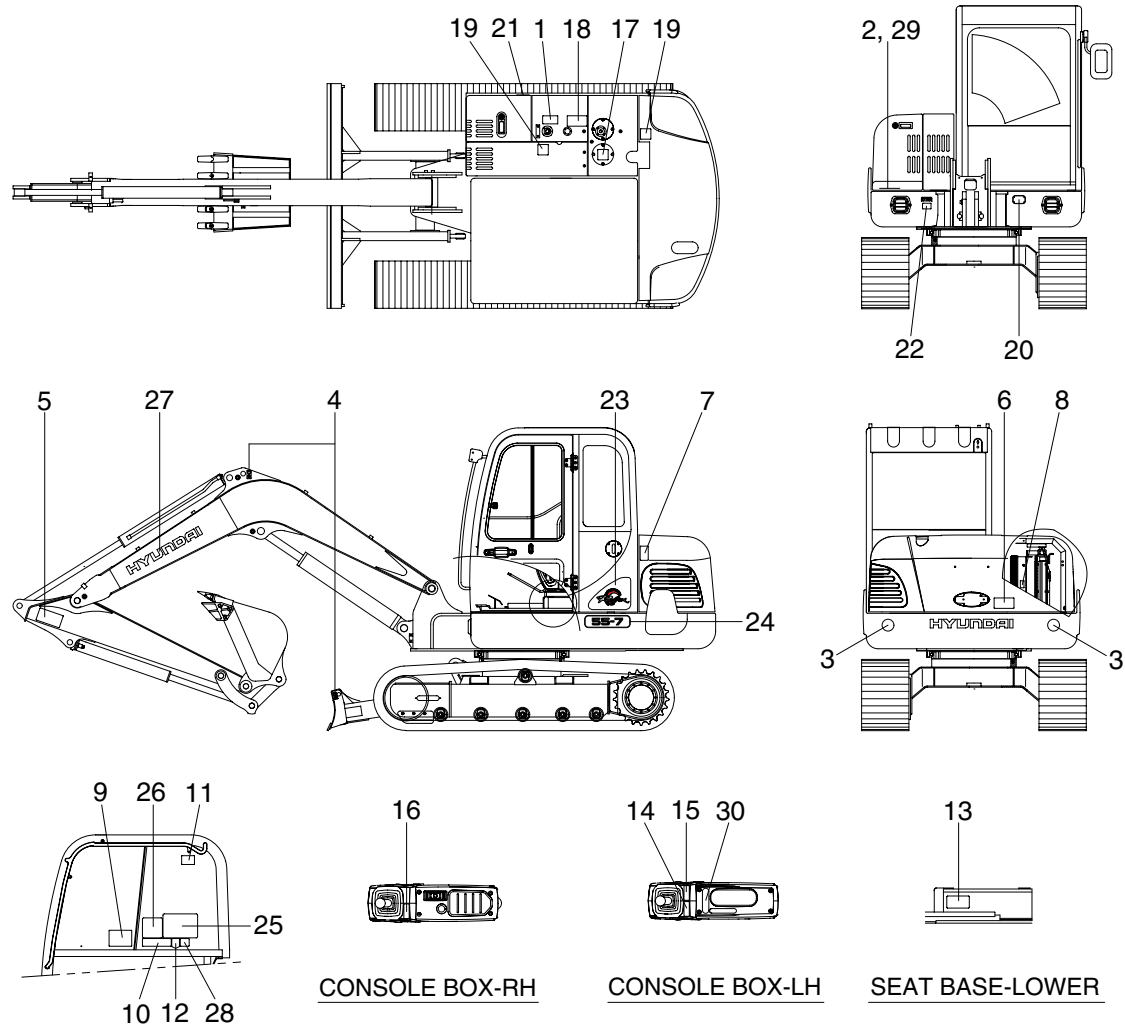

R5570SL01A

- |                           |                              |                          |
|---------------------------|------------------------------|--------------------------|
| 1 Fueling                 | 11 Safety front window       | 21 General warning-frame |
| 2 Battery-accident        | 12 Emergency exit            | 22 Indicate-grease       |
| 3 Reflecting              | 13 Decal-aircon filter       | 23 Robex                 |
| 4 Lifting point ideogram  | 14 Decal console filing      | 24 Model name            |
| 5 Keep clear-boom/arm     | 15 Control ideogram-LH       | 25 Service instruction   |
| 6 Keep clear-rear         | 16 Control ideogram-RH       | 26 Lifting chart         |
| 7 Keep clear-rear         | 17 Hydraulic oil lubrication | 27 Trade mark-boom       |
| 8 Caution-engine room     | 18 Falling                   | 28 Boom swing lock       |
| 9 Control ideograms       | 19 No step-engine hood       | 29 ECU connector(#1459~) |
| 10 General cautions-cabin | 20 Name plate                | 30 Safety lever(#1556~)  |

## 2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

### 1) FUELING(Item 1)

This warning label is positioned on the right side of fuel filler neck.

- ⚠ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

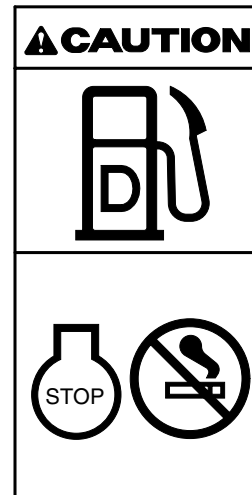


R5570FW04

### 2) BATTERY ACCIDENT(Item 2)

This warning label is positioned on the battery cover.

- ⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**
- ※ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**  
**With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.**
- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **For safety from electric shock, do not battery terminals with a wet hand.**

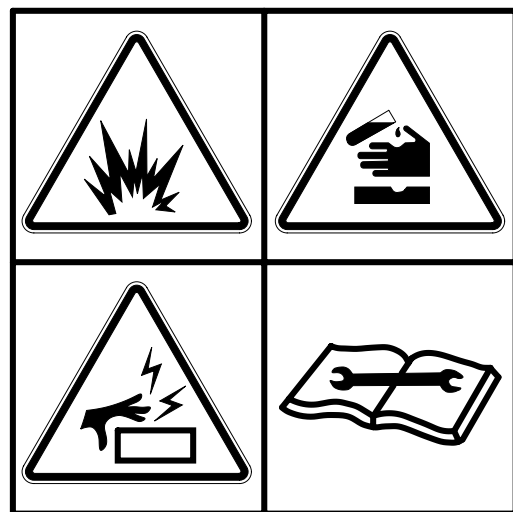

36070FW05

### 3) KEEP CLEAR-BOOM/ARM(Item 5)

This warning label is positioned on both side of the boom.

- ⚠ Serious injury or death can result from falling of the attachment.
- ⚠ To prevent serious injury or death, keep clear the underneath of attachment.




R5570FW31

### 4) KEEP CLEAR-REAR(Item 6)

This warning label is positioned on the rear of engine hood.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.

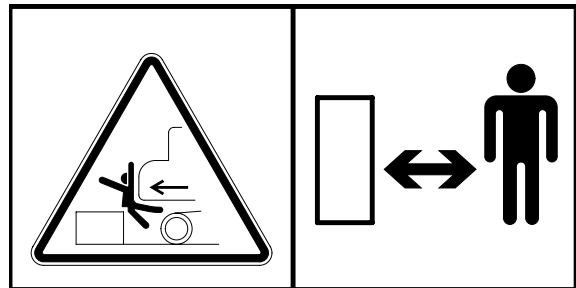


R5570FW09A

### 5) SIDE KEEP CLEAR(Item 7)

This warning label is positioned on the side of engine hood.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.

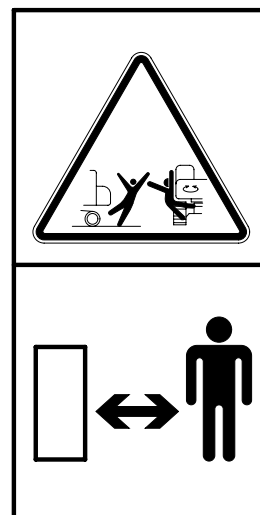


R5570FW13

## 6) CAUTION-ENGINE ROOM(Item 8)

This warning label is positioned on the side of radiator.

- ⚠ Do not open the engine hood during the engine's running.
- ⚠ Escaping fluid under pressure can penetrate the skin causing serious injury.
- ※ Study the service manual before service job.
- ⚠ Never open the filler cap while engine running or at high coolant oil temperature.
- ⚠ Study the operator's manual before starting and operating machine.
- ⚠ Do not touch exhaust pipe or it may cause severe burn.

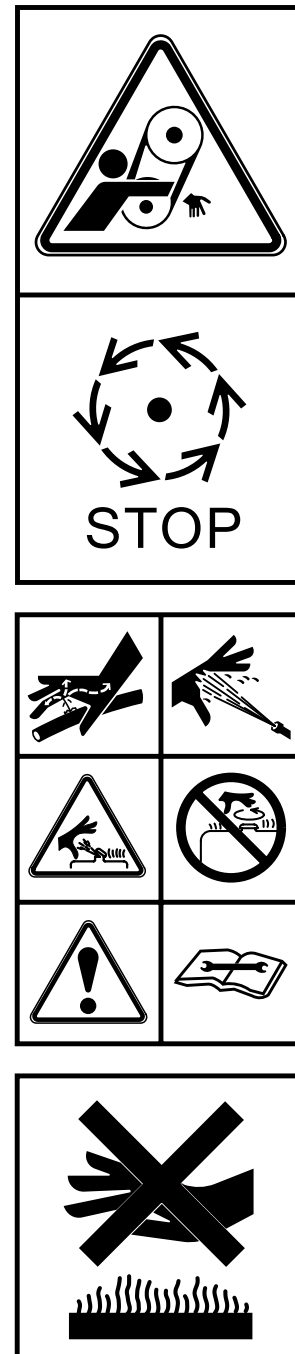


R5570FW14

## 7) CONTROL IDEOGRAM(Item 9)

This warning label is positioned in right window of the cab.

- ⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ⚠ Failure to do so could result in injury or death.
- ※ See page 4-7 for details.

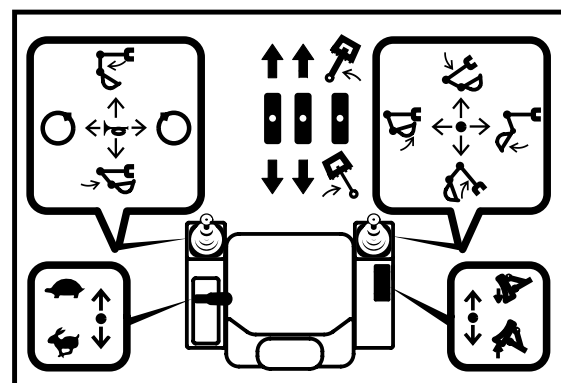

R5570FW19A

#### 8) GENERAL CAUTIONS-CABIN(Item 10)

This warning label is positioned on the right side window of the cab.

- ⚠ **Serious injury or death can result from contact with electric lines.**

An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**




R5570FW15

#### 9) SAFETY FRONT WINDOW(Item 11)

This warning label is positioned on the both side window of the cab.

- ⚠ **Be careful that the front window may be promptly closed.**

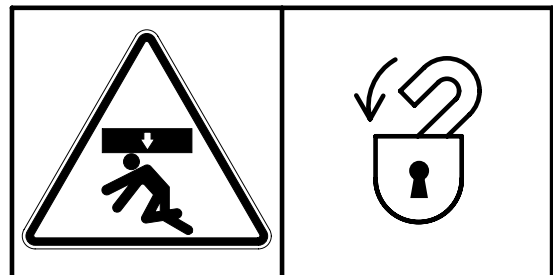


21070FW24

#### 10) EMERGENCY EXIT(Item 12)

This warning label is positioned on the right side window of the cab.

- ⚠ **The right side window serves us an alternate exit.**
- ⚠ **At case of emergency, use the hammer for braking the right side window of the cab.**

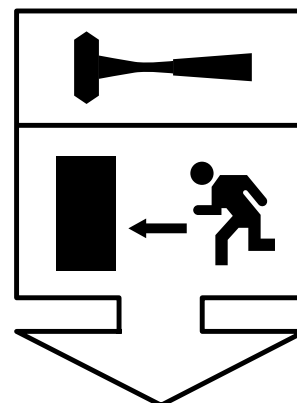


R5570FW16

#### 11) DECAL-AIRCON FILTER(Item 13)

This warning label is positioned on the lower seat base.

- ※ Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.

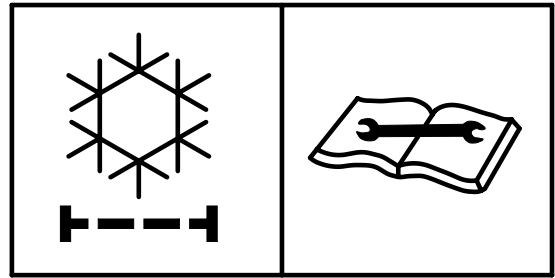


21070FW26

#### 12) DECAL-CONSOLE TILTING(Item 14)

This warning label is positioned on the LH console box.

- ※ Before you get off the machine be sure to tilt the LH console box.

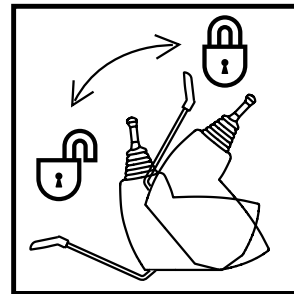


R5570FW17

#### 13) CONTROL IDEOGRAM-LH(Item 15)

This warning label is positioned on the LH console box.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ▲ Failure to do so could result in injury or death.
- ※ See page 4-7 for details.

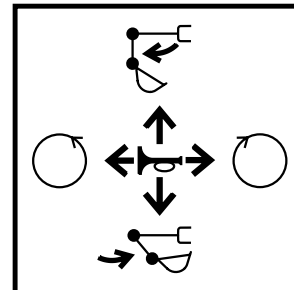


R5570FW18

#### 14) CONTROL IDEOGRAM-RH(Item 16)

This warning label is positioned on the RH console box.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ▲ Failure to do so could result in injury or death.
- ※ See page 4-7 for details.

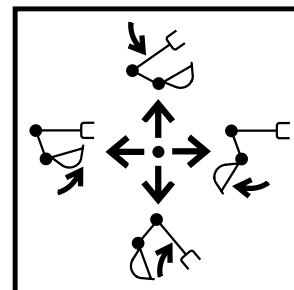

R5570FW20

#### 15) HYDRAULIC OIL LUBRICATION(Item 17)

This warning label is positioned on the right side of air breather.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while engine running or at high hydraulic oil temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.




21070FW08

#### 16) FALLING(Item 18)

This warning label is positioned on the top of the hydraulic tank.

- ▲ Falling is one of the major cause of personal injury.
- ▲ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.

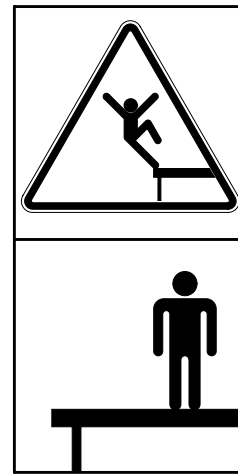


14070FW30

#### 17) NO STEP-ENGINE HOOD(Item 19)

This warning label is positioned on the engine hood.

- ▲ Do not step on the engine hood.

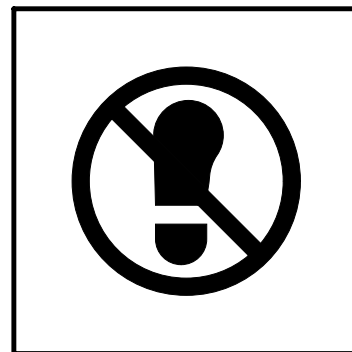

21070FW16

#### 18) GENERAL WARNING-FRAME(Item 21)

This warning label is positioned right side of upper frame.

- ▲ Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.

※ See page 5-6 for details.



- ▲ Make sure wire rope is proper size and keep correct hoisting method.

※ See page 5-7 for details.

- ▲ Place the bucket on the ground whenever servicing the hydraulic system.

※ Check oil level on the level gauge.

※ Refill the recommended hydraulic oil up to specified level if necessary.

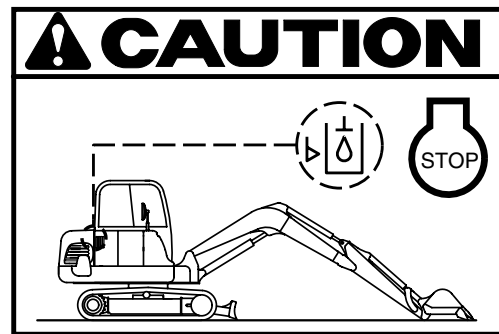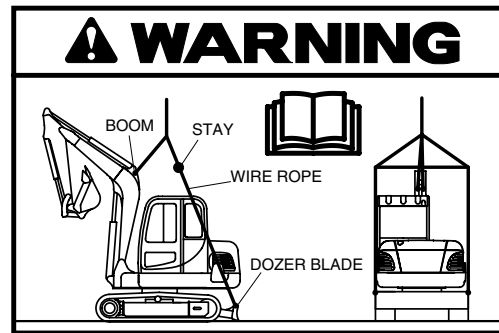

R5570FW21

#### 19) SAFETY LEVER(Item 30, #1556~)

This warning label is positioned on the LH console box.

- ▲ The machine is able to travel even when the safety lever is in the LOCK position.

