


SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

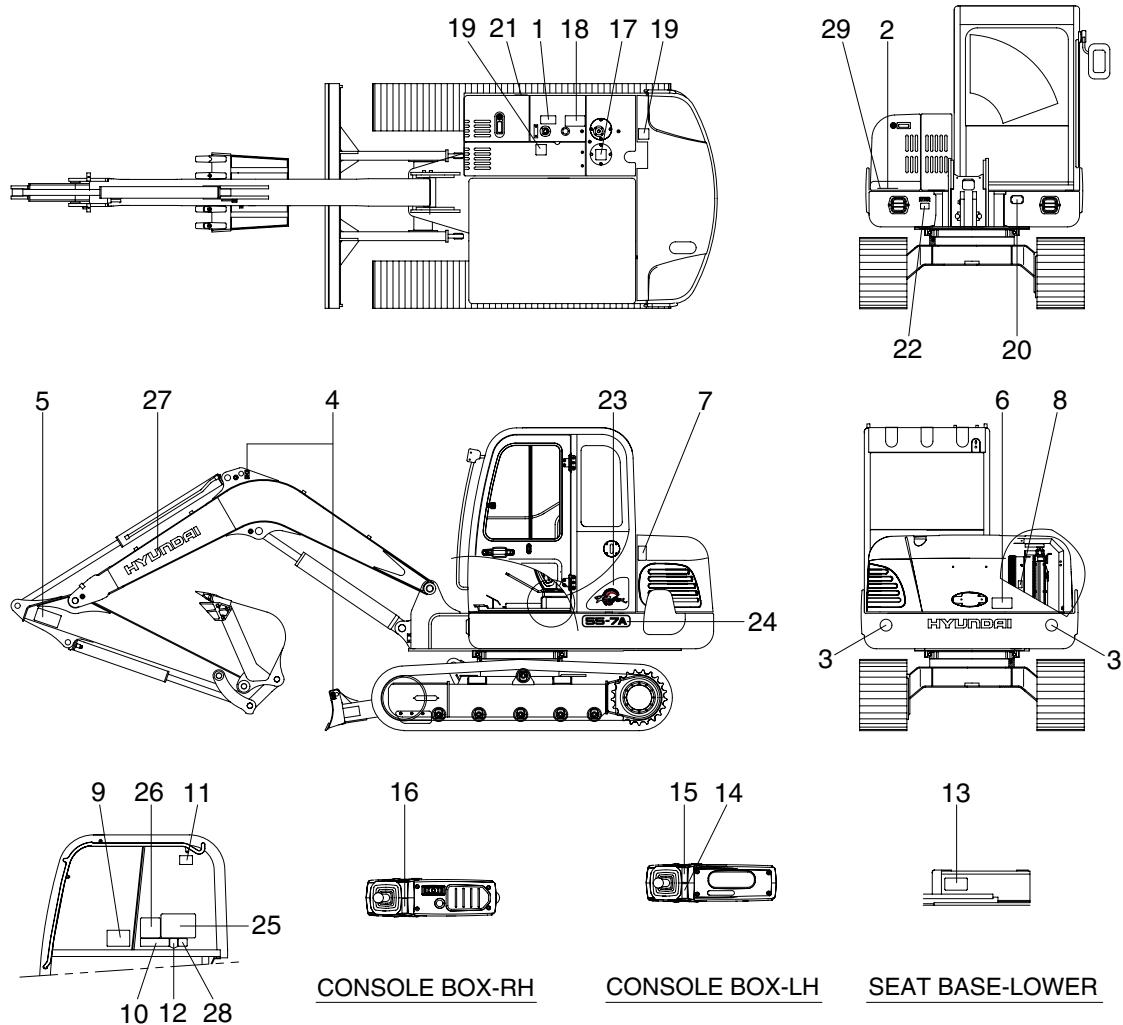

R557A0SL01

- | | | |
|---------------------------|------------------------------|--------------------------|
| 1 Fueling | 11 Safety front window | 21 General warning-frame |
| 2 Battery-accident | 12 Emergency exit | 22 Indicate-grease |
| 3 Reflecting | 13 Decal-aircon filter | 23 Robex |
| 4 Lifting point ideogram | 14 Decal console tilting | 24 Model name |
| 5 Keep clear-boom/arm | 15 Control ideogram-LH | 25 Service instruction |
| 6 Keep clear-rear | 16 Control ideogram-RH | 26 Lifting chart |
| 7 Keep clear-side | 17 Hydraulic oil lubrication | 27 Trade mark-boom |
| 8 Caution-engine room | 18 Falling | 28 Boom swing lock |
| 9 Control ideograms | 19 No step-engine hood | 29 ECM connector |
| 10 General cautions-cabin | 20 Name plate | |

2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

1) FUELING(Item 1)

This warning label is positioned on the right side of fuel filler neck.

- ▲ Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.
- ▲ EPA Regulation : use low sulfur fuel or ultra low sulfur fuel only.

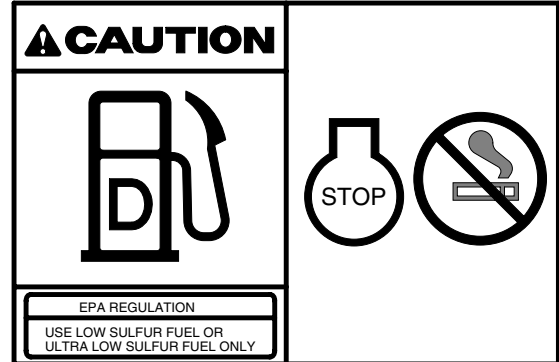


807A0FW04

2) BATTERY ACCIDENT(Item 2)

This warning label is positioned on the battery cover.

- ▲ Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.
- ※ Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.
With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.
- ▲ Extinguish all smoking materials and open flames before checking the battery.
- ▲ Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.
- ▲ Do not allow unauthorized personnel to change the battery or to use booster cables.
- ▲ For safety from electric shock, do not battery terminals with a wet hand.

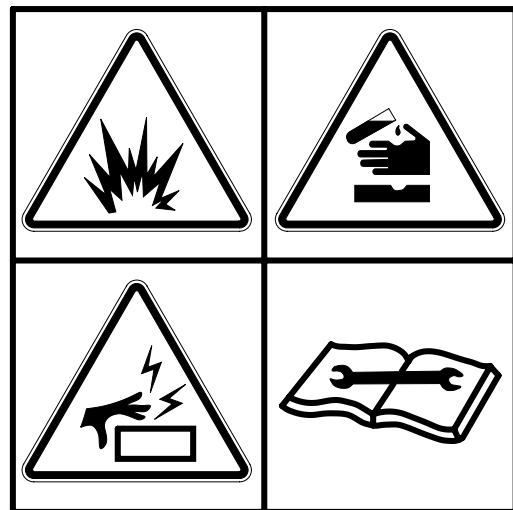

36070FW05

3) KEEP CLEAR-BOOM/ARM(Item 5)

This warning label is positioned on both side of the boom.

- ⚠ Serious injury or death can result from falling of the attachment.
- ⚠ To prevent serious injury or death, keep clear the underneath of attachment.




R5570FW31

4) KEEP CLEAR-REAR(Item 6)

This warning label is positioned on the rear of engine hood.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.

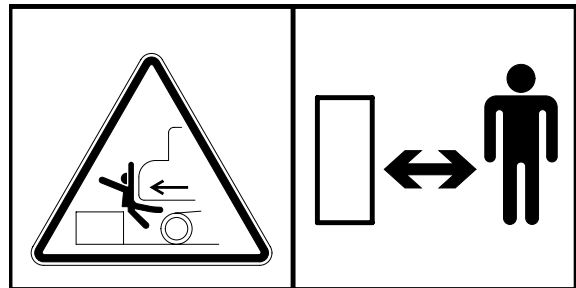


R5570FW09A

5) SIDE KEEP CLEAR(Item 7)

This warning label is positioned on the side of engine hood.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.

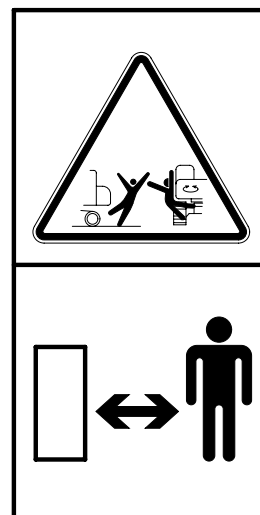


R5570FW13

6) CAUTION-ENGINE ROOM(Item 8)

This warning label is positioned on the side of radiator.

- ⚠ Do not open the engine hood during the engine's running.
- ⚠ Escaping fluid under pressure can penetrate the skin causing serious injury.
- ※ Study the service manual before service job.
- ⚠ Never open the filler cap while engine running or at high coolant oil temperature.
- ⚠ Study the operator's manual before starting and operating machine.
- ⚠ Do not touch exhaust pipe or it may cause severe burn.

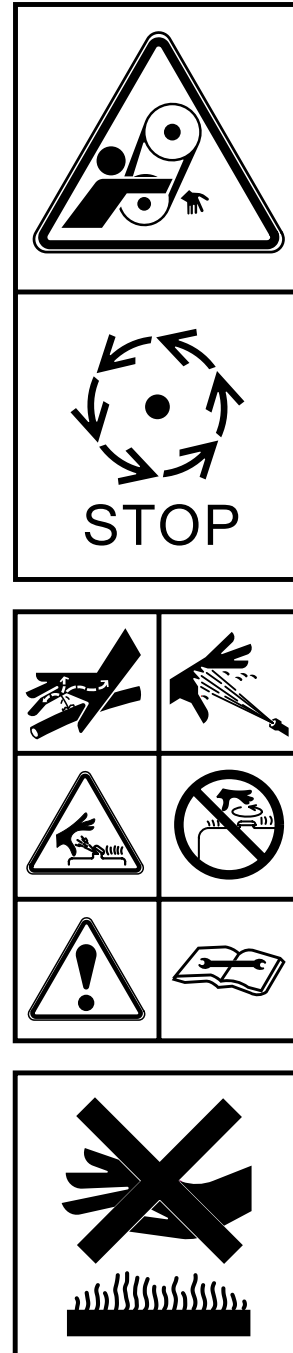


R5570FW14

7) CONTROL IDEOGRAM(Item 9)

This warning label is positioned in right window of the cab.

- ⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ⚠ Failure to do so could result in injury or death.
- ※ See page 4-6 for details.

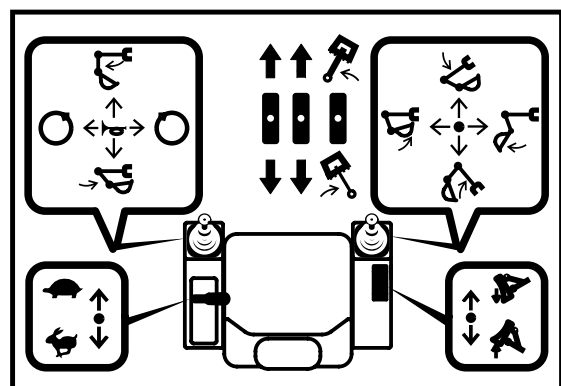

R5570FW19A


8) GENERAL CAUTIONS-CABIN(Item 10)

This warning label is positioned on the right side window of the cab.

- ⚠ **Serious injury or death can result from contact with electric lines.**

An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

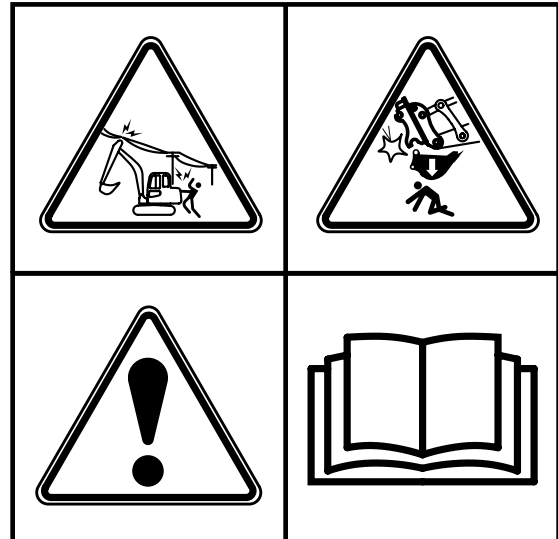


R5570FW15

9) SAFETY FRONT WINDOW(Item 11)

This warning label is positioned on the both side window of the cab.

- ⚠ **Be careful that the front window may be promptly closed.**

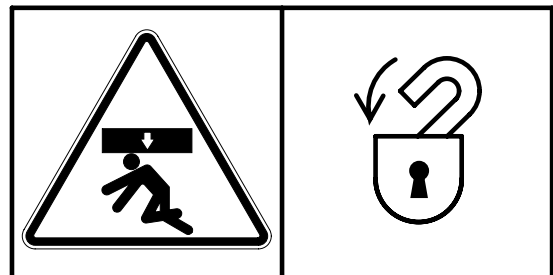


21070FW24

10) EMERGENCY EXIT(Item 12)

This warning label is positioned on the right side window of the cab.

- ⚠ **The right side window serves us an alternate exit.**
- ⚠ **At case of emergency, use the hammer for braking the right side window of the cab.**

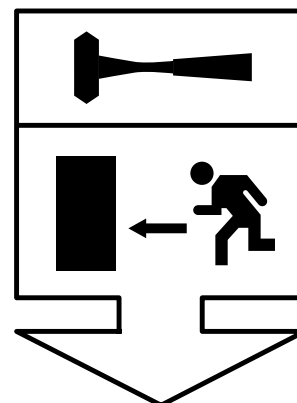


R5570FW16

11) DECAL-AIRCON FILTER(Item 13)

This warning label is positioned on the lower seat base.

- ※ Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.

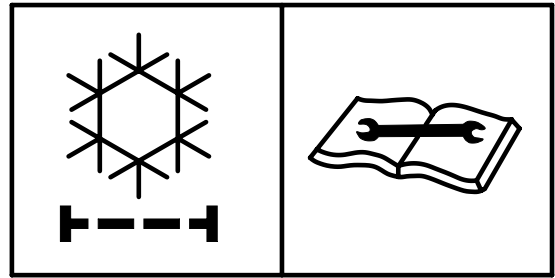


21070FW26

12) DECAL-CONSOLE TILTING(Item 14)

This warning label is positioned on the LH console box.

- ※ Before you get off the machine be sure to tilt the LH console box.

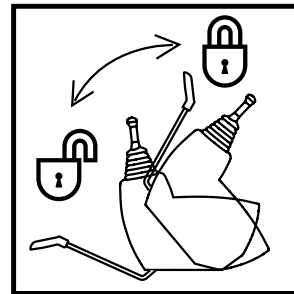


R5570FW17

13) CONTROL IDEOGRAM-LH(Item 15)

This warning label is positioned on the LH console box.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ▲ Failure to do so could result in injury or death.
- ※ See page 4-6 for details.

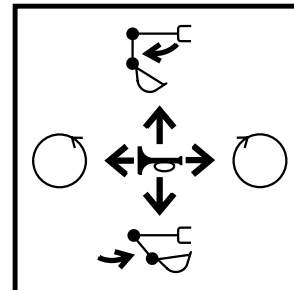


R5570FW18

14) CONTROL IDEOGRAM-RH(Item 16)

This warning label is positioned on the RH console box.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ▲ Failure to do so could result in injury or death.
- ※ See page 4-6 for details.

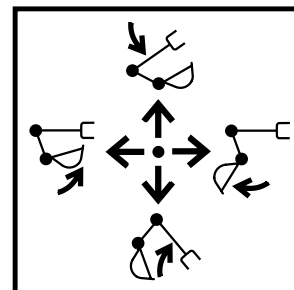

R5570FW20

15) HYDRAULIC OIL LUBRICATION(Item 17)

This warning label is positioned on the right side of air breather.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while engine running or at high hydraulic oil temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.




21070FW08

16) FALLING(Item 18)

This warning label is positioned on the top of the hydraulic tank.

- ▲ Falling is one of the major cause of personal injury.
- ▲ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.

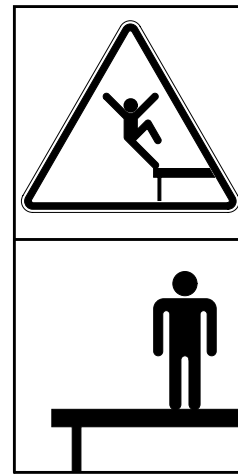


14070FW30

17) NO STEP-ENGINE HOOD(Item 19)

This warning label is positioned on the engine hood.

- ▲ Do not step on the engine hood.

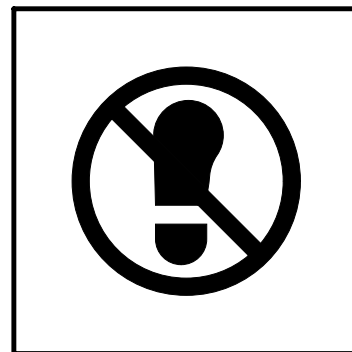

21070FW16

18) GENERAL WARNING-FRAME (Item 21)

This warning label is positioned right side of upper frame.

- ▲ Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.

※ See page 5-6 for details.




- ▲ Make sure wire rope is proper size and keep correct hoisting method.

※ See page 5-7 for details.

- ▲ Place the bucket on the ground whenever servicing the hydraulic system.

※ Check oil level on the level gauge.

※ Refill the recommended hydraulic oil up to specified level if necessary.

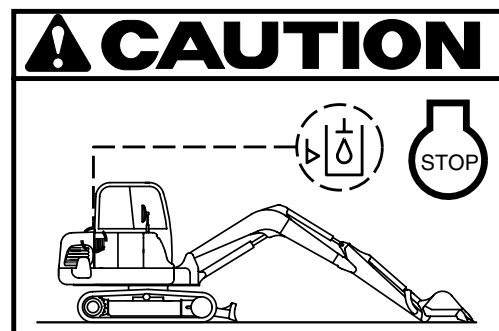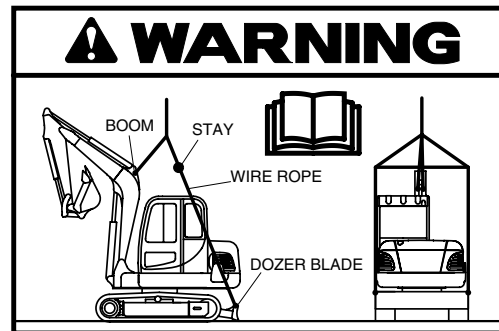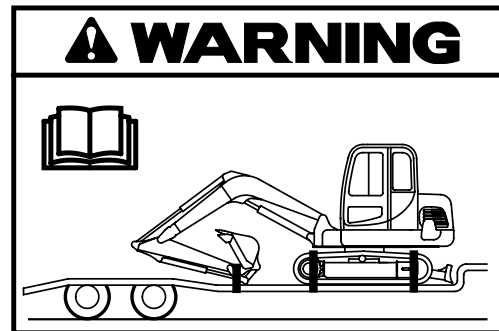

R5570FW21


19) ECM CONNECTOR (Item 29)

This warning label is positioned on the battery cover.

- ▲ Before carrying out any electric welding on this machine follow the below procedure.

- Pull the connectors out of all electric control units.
- Connector the ground lead of the welding equipment as close to the welding point as possible.

※ See page 6-38 for detail.

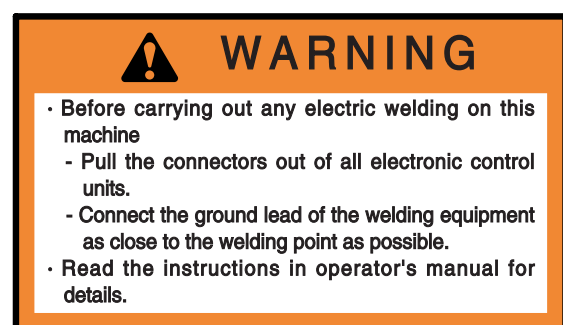

7807AFW20