

CONTENTS

Foreword	0-1
Before servicing this machine	0-2
EC regulation approved	0-3
Table to enter S/No and distribution	0-4
Safety labels	0-5
Machine data plate	0-14
Guide(Direction, S/No, Symbol)	0-15

SAFETY HINTS

1. Before operating the machine	1-1
2. During operating the machine	1-16
3. During maintenance	1-23
4. Parking	1-26

SPECIFICATIONS

1. Major components	2-1
2. Specifications	2-2
3. Working range	2-3
4. Weight	2-4
5. Lifting capacities	2-5
6. Bucket selection guide	2-6
7. Specification for major components	2-7
8. Recommended oils	2-10

CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-2
3. Switches	3-14
4. Levers and pedals	3-21
5. Air conditioner and heater	3-24
6. Others	3-28

OPERATION

1. Suggestion for new machine	4-1
2. Check before starting the engine	4-2
3. Starting and stop the engine	4-3
4. Operation of the working device	4-7
5. Traveling of the machine	4-8
6. Efficient working method	4-14

7. Operation in the special work sites	4-19
8. Normal operation of excavator	4-21
9. Attachment lowering	4-22
10. Storage	4-23
11. RCV lever operating pattern	4-25

TRANSPORTATION

1. Road traveling	5-1
2. Preparation for transportation	5-2
3. Dimension and weight	5-3
4. Loading the machine	5-5
5. Fixing the machine	5-7
6. Loading and unloading by crane	5-8

MAINTENANCE

1. Instruction	6-1
2. Tightening torque	6-6
3. Fuel, coolant and lubricants	6-9
4. Maintenance check list	6-11
5. Maintenance chart	6-15
6. Service instruction	6-17
7. Electrical system	6-38
8. Air conditioner and heater	6-41

TROUBLESHOOTING GUIDE

1. Engine	7-1
2. Electrical system	7-2
3. Others	7-3

HYDRAULIC BREAKER AND QUICK CLAMP

1. Selecting hydraulic breaker	8-1
2. Circuit configuration	8-2
3. Maintenance	8-3
4. Precaution while operating the breaker	8-4
5. Quick clamp	8-6

INDEX	9-1
-------------	-----