

# CONTENTS

Foreword .....	0-1	6. Traveling of the machine .....	4-13	
Before servicing this machine .....	0-2	7. Efficient working method .....	4-16	
EC regulation approved .....	0-3	8. Operation in the special work sites .....	4-20	
Table to enter S/No and distribution .....	0-4	9. Normal operation of excavator .....	4-22	
Safety labels .....	0-5	10. Attachment lowering .....	4-23	
Guide(Direction, S/No, Symbol) .....	0-14	11. Storage .....	4-24	
<b>SAFETY HINTS</b>		12. RCV lever operating pattern .....	4-26	
1. Before operating the machine .....	1-1	13. Switching hydraulic attachment circuit .....	4-27	
2. During operating the machine .....	1-6	<b>TRANSPOTATION</b>		
3. During maintenance .....	1-13	1. Preparation for transportation .....	5-1	
4. Parking .....	1-16	2. Dimension and weight .....	5-2	
<b>SPECIFICATIONS</b>		3. Loading the machine .....	5-4	
1. Major components .....	2-1	4. Fixing the machine .....	5-6	
2. Specifications .....	2-2	5. Loading and unloading by crane .....	5-7	
3. Working range .....	2-3	<b>MAINTENANCE</b>		
4. Weight .....	2-4	1. Instruction .....	6-1	
5. Lifting capacities .....	2-5	2. Tightening torque .....	6-6	
6. Bucket selection guide .....	2-6	3. Fuel, coolant and lubricants .....	6-9	
7. Undercarriage .....	2-7	4. Maintenance check list .....	6-11	
8. Specification for major components .....	2-8	5. Maintenance chart .....	6-16	
9. Recommended oils .....	2-11	6. Service instruction .....	6-18	
<b>CONTROL DEVICES</b>		7. Electrical system .....	6-38	
1. Cab devices .....	3-1	8. Air conditioner and heater .....	6-41	
2. Cluster .....	3-2	<b>TROUBLESHOOTING GUIDE</b>		
3. Switches .....	3-9	1. Engine .....	7-1	
4. Levers and pedals .....	3-13	2. Electrical system .....	7-2	
5. Air conditioner and heater .....	3-16	3. Others .....	7-3	
6. Others .....	3-19	<b>HYDRAULIC BREAKER AND QUICK CLAMP</b>		
<b>OPERATION</b>		1. Selecting hydraulic breaker .....	8-1	
1. Suggestion for new machine .....	4-1	2. Circuit configuration .....	8-2	
2. Check before starting the engine .....	4-2	3. Maintenance .....	8-3	
3. Starting and stop the engine .....	4-3	4. Precaution while operating the breaker .....	8-4	
4. Mode selection system .....	4-7	5. Quick clamp .....	8-6	
5. Operation of the working device .....	4-12	<b>INDEX</b> .....		9-1