
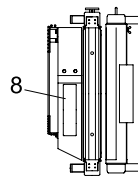



SAFETY LABELS

1. LOCATION


Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

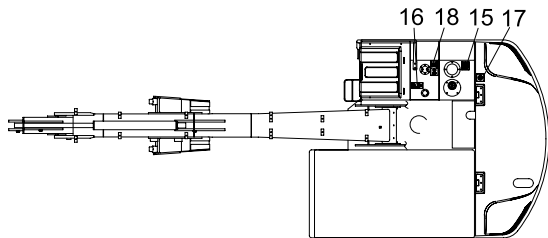



 
FAN SHROUD






BATTERY

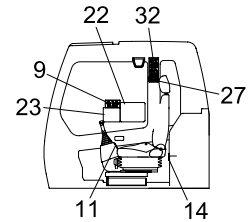

CABIN INSIDE-RH

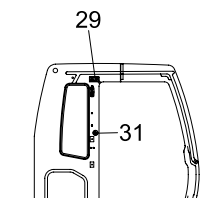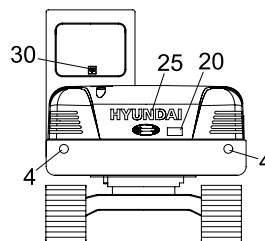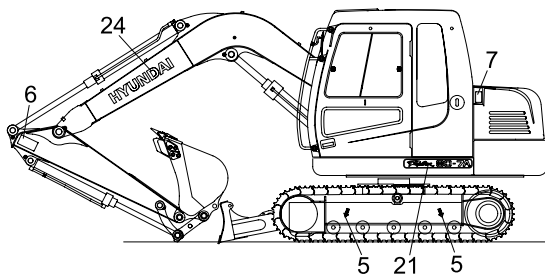

CABIN INSIDE-LH

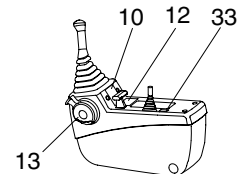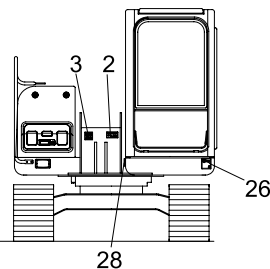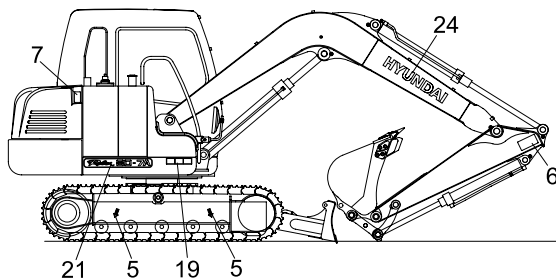

LH CONSOLE BOX

807A0SL01

- | | | |
|-------------------------|------------------------------|----------------------------|
| 1 Battery accident | 12 Control box tilting | 23 Lifting chart |
| 2 Reduction gear grease | 13 Safety lever | 24 Hyundai logo |
| 3 High pressure hose | 14 Air conditioner filter | 25 Hyundai logo |
| 4 Reflecting | 15 Hydraulic oil lubrication | 26 Noise level(LWA) |
| 5 Sliding ideogram | 16 Falling | 27 Clamp locking |
| 6 Keep clear(Boom/Arm) | 17 No step engine hood | 28 Name plate |
| 7 Side keep clear | 18 Fueling | 29 Safety front window |
| 8 Engine room caution | 19 General warning-frame | 30 Alternate exit |
| 9 Control ideogram | 20 Rear keep clear | 31 Hammer |
| 10 Control ideogram(LH) | 21 Model name | 32 Cabin RH pillar decal |
| 11 Control ideogram(RH) | 22 Service instruction | 33 Control ideogram(Dozer) |

2. DESCRIPTION

There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

1) BATTERY ACCIDENT(Item 1)


This warning label is positioned on the battery cover.

- ⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**

- ※ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**

With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.

- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **For safety from electric shock, do not battery terminals with a wet hand.**

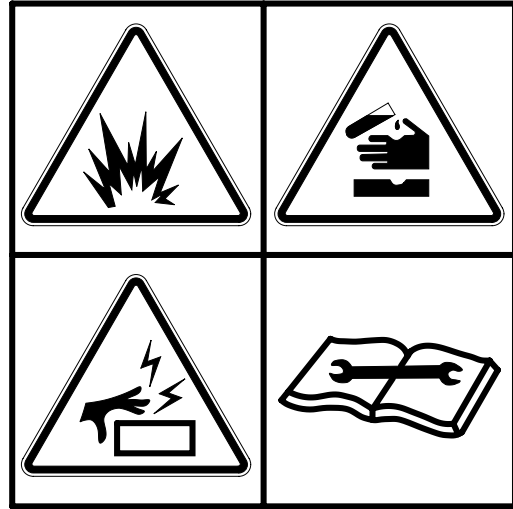


36070FW05

2) REDUCTION GEAR GREASE(Item 2)

This warning label is positioned in the front of upper frame.

- ⚠ **Grease is under high pressure. Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.**

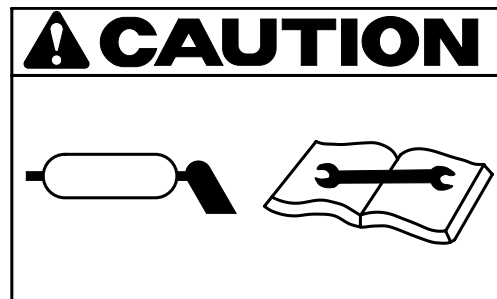

21070FW35

3) HIGH PRESSURE HOSE (Item 3)

This warning label is positioned on the upper frame.

⚠ Escaping fluid under pressure can penetrate the skin causing serious injury.

※ Study the service manual before service job.



14070FW29

4) KEEP CLEAR-BOOM/ARM (Item 6)

This warning label is positioned on both side of the boom.

⚠ Serious injury or death can result from falling of the attachment.

⚠ To prevent serious injury or death, keep clear the underneath of attachment.




R5570FW31

5) SIDE KEEP CLEAR (Item 7)

This warning label is positioned on the side of engine hood.

⚠ To prevent serious personal injury or death keep clear of machine swing radius.

⚠ Do not deface or remove this label from the machine.

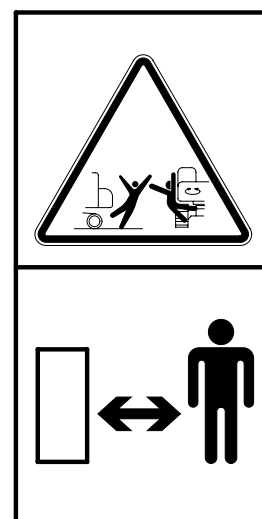


R5570FW13

6) ENGINE ROOM CAUTION(Item 8)

This warning label is positioned on the side of radiator.

- ⚠ Do not open the engine hood during the engine's running.**
- ⚠ Escaping fluid under pressure can penetrate the skin causing serious injury.**
 - ※ Study the service manual before service job.**
- ⚠ Never open the filler cap while engine running or at high coolant oil temperature.**
- ⚠ Study the operator's manual before starting and operating machine.**
- ⚠ Do not touch exhaust pipe or it may cause severe burn.**

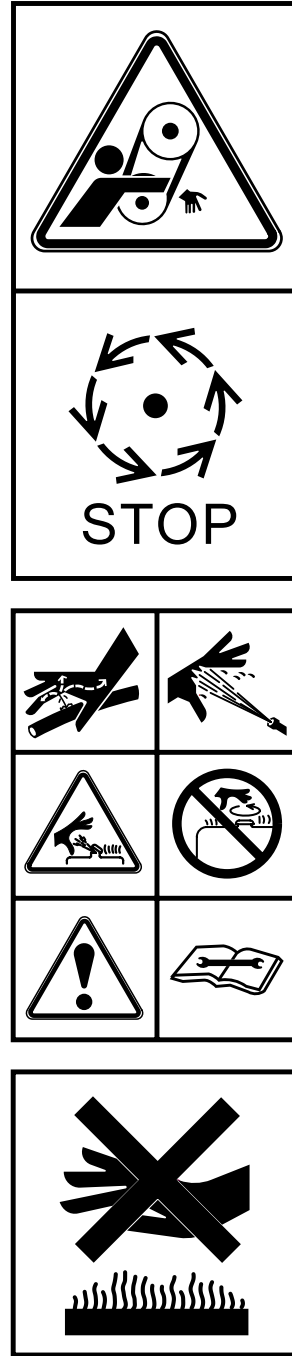


R5570FW14

7) CONTROL IDEOGRAM (Item 9)

This warning label is positioned in right window of the cab.

- ⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ⚠ Failure to do so could result in injury or death.
- ※ See page 4-10 for details.

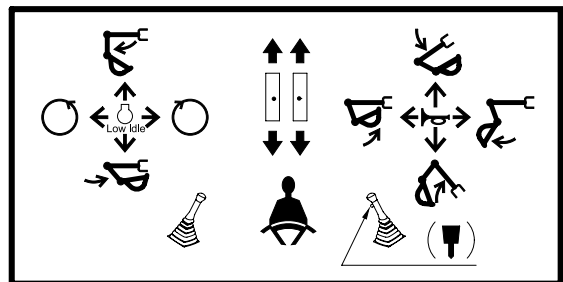

7070FW19


8) CONTROL IDEOGRAM-LH(Item 10)

This warning label is positioned on the LH console box.

▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.

▲ Failure to do so could result in injury or death.

※ See page 4-10 for details.

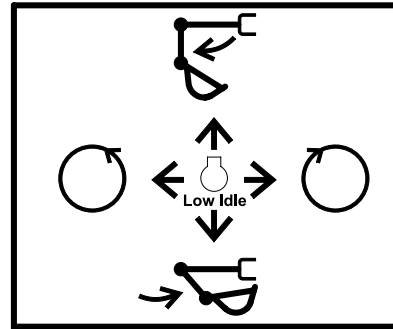

11070FW20


9) CONTROL IDEOGRAM-RH(Item 11)

This warning label is positioned on the RH console box.

▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.

▲ Failure to do so could result in injury or death.

※ See page 4-10 for details.

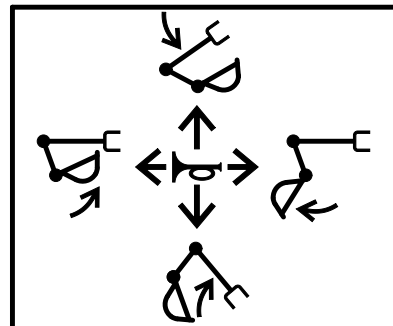


21070FW21

10) CONSOLE BOX TILTING(Item 12)

This warning label is positioned on the LH console box.

※ Before you get off the machine be sure to tilt the LH console box.

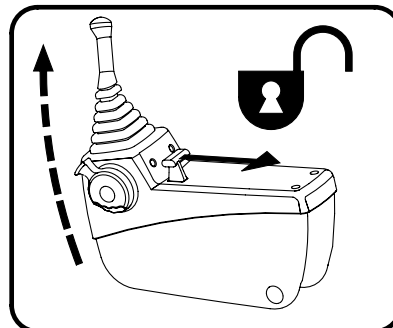


21070FW27

11) SAFETY LEVER(Item 13)

This warning label is positioned on the cover safety.

▲ Before you get off the machine be sure to place the safety lever LOCKED position.

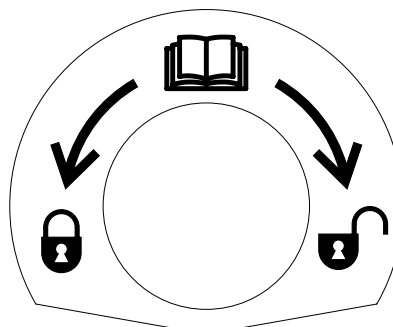


21070FW28

12) AIR CONDITIONER FILTER (Item 14)

This warning label is positioned on the air conditioner cover up.

- ※ Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.

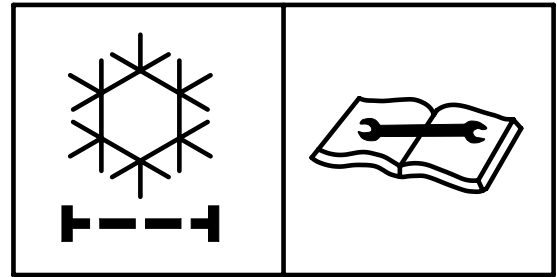

21070FW26

13) HYDRAULIC OIL LUBRICATION (Item 15)

This warning label is positioned on the right side of air breather.

- ※ Do not mix with different brand oils.
- ⚠ Never open the filler cap while engine running or at high hydraulic oil temperature.
- ⚠ Loosen the cap slowly and release internal pressure completely.



21070FW08

14) FALLING (Item 16)

This warning label is positioned on the top of the hydraulic tank.

- ⚠ Falling is one of the major cause of personal injury.
- ⚠ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.




14070FW30

15) NO STEP-ENGINE HOOD (Item 17)

This warning label is positioned on the engine hood.

- ⚠ Do not step on the engine hood.

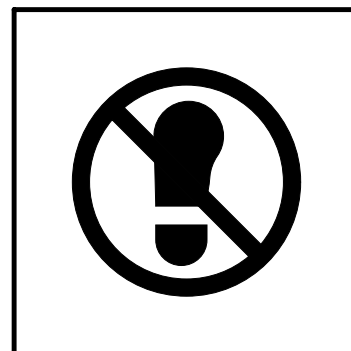


21070FW16

16) FUELING (Item 18)

This warning label is positioned on the right side of fuel filler neck.

- ⚠ Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.
- ⚠ EPA Regulation : use low sulfur fuel or ultra low sulfur fuel only.


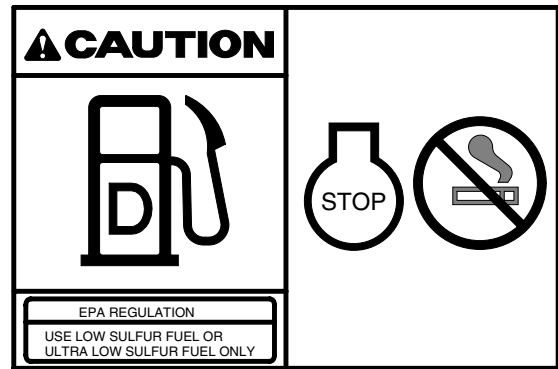


807A0FW04

17) GENERAL WARNING-FRAME (Item 19)

This warning label is positioned right side of upper frame.

- ⚠ Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.
- ※ See page 5-6 for details.
- ⚠ Place the bucket on the ground whenever servicing the hydraulic system.
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.

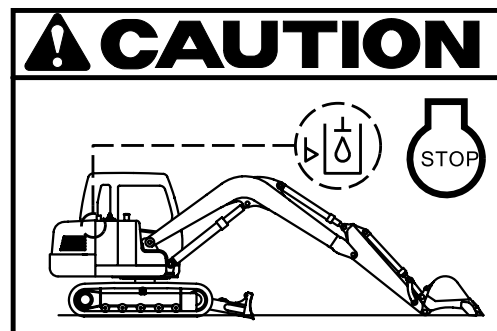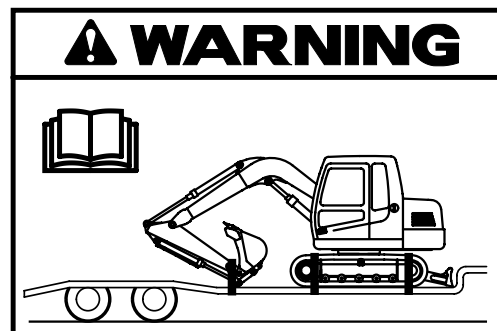

7070FW21

18) KEEP CLEAR-REAR (Item 20)

This warning label is positioned on the rear of engine hood.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.




R5570FW09

19) CLAMP-LOCKING(Item 27)

This warning label is positioned on the right side window of cab.

- ▲ Serious injury or death can result from dropping bucket.
- ▲ Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.

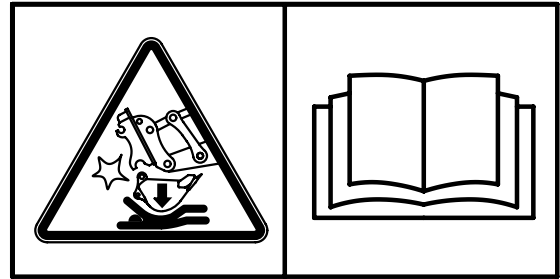


14070FW60

20) SAFETY FRONT WINDOW(Item 29)

This warning label is positioned on the left side frame of the cab.

- ▲ Be careful that the front window may be promptly closed.

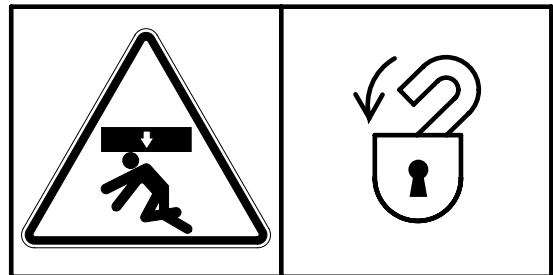


21070FW24

21) ALTERNATE EXIT(Item 30)

This warning label is positioned on the inside of rear window.

- ※ The rear window serves us an alternate exit.
- ※ To remove rear window, pull the ring and push out the glass.

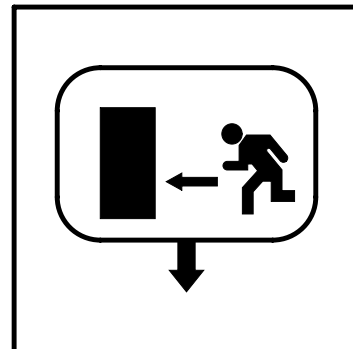


21070FW25

22) CABIN RH PILLER DECAL(Item 32)

This warning label is positioned on the right side pillar of the cab.

- ⚠ Be careful that the front window may be promptly closed.
- ⚠ Study the operator's manual before starting and operating machine.
- ⚠ Serious injury or death can result from contact with electric lines.
An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.
- ⚠ Be careful to operate machine equipped with quick clamp or extensions.
Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.

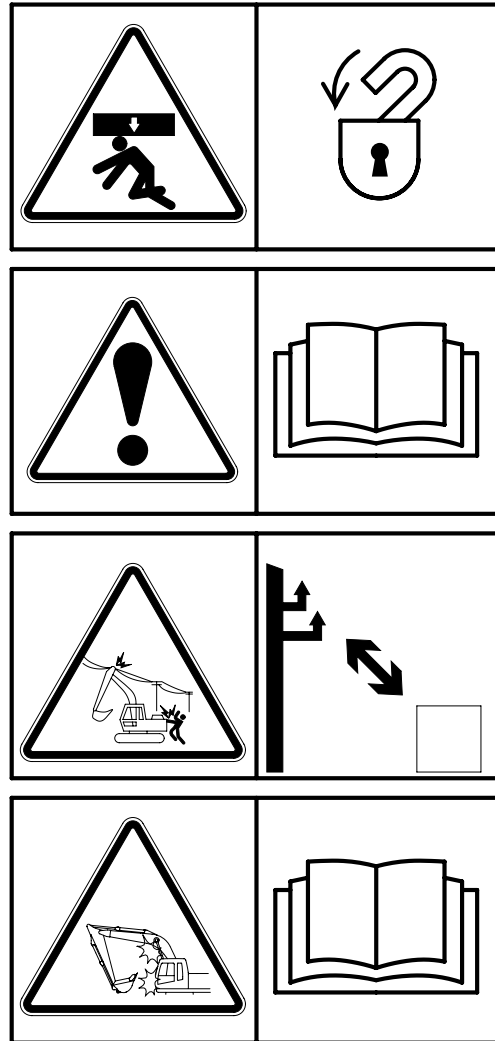

7070FW20