

A

Accel dial switch	3-14
Adjustable track gauge	5-10
After engine start	4-4
Air breather element	6-32
Air cleaner filter	6-26
Air conditioner & heater	3-19
Air conditioner filter	6-43
Alternate exit	0-12

B

Battery	6-41
Before starting engine	4-2
Bucket replacement	6-37
Bucket selection guide	2-7
Bucket tooth replacement	6-38

C

Cab air filter	6-44
Cab device	3-1
Central grease lubrication system	8-1
Cigar lighter	3-23
Coolant	6-20
Coolant filter	6-28
Cooling fan	6-25
Corrosion resister	6-29

D

Disassembling for transportation	5-5
Drain filter	6-32

E

Emergency engine speed control	3-26
Emergency engine starting connector	3-26
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-41
Engine stop	4-5
Excavation work	4-15

F

Fan belt	6-24
Fuel filter	6-27
Fuel leakage	6-30
Fuel tank	6-27

Fuse box	3-25
----------------	------

H

Hydraulic oil changing	6-31
Hydraulic oil filling	6-30
Hydraulic oil level	6-30

L

LCD	3-5
Levers & pedals	3-17
Loading the machine	5-7
Lubricant specification	2-13

M

Maintenance check list	6-11
Major component	2-10
MCU(Machine Control Unit)	3-25
Mode selection system	4-6
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
------------------	------

P

Pedals	3-17
Periodical replacement parts	3-16
Pilot filter	6-33
Pin & bushing adjustment	6-39
Prefilter	6-28
Prolix resistor	3-26

R

Radiator flushing	6-20
Radio and USB player	3-28
RCV lever lubricate	6-35
Recommended oils	2-13, 6-10
Relieving pressure	6-3
Remote controller	3-36
Return filter	6-32

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-24
Seat belt	3-24
Service meter	3-26
Special work	4-18
Speciation for major component	2-10
Specification	2-2
Start switch	3-13
Storage	4-21
Suction strainer	6-31
Surge tank	6-20
Swing bearing grease	6-34
Swing gear & pinion grease	6-34
Swing reduction gear oil	6-33
Switch panel	3-11
Switches	3-13

T

Tightening torque	6-6
Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-13
Track adjustment	6-36
Track shoe selection	2-8
Transportation	5-1
Travel reduction gear oil	6-35
Travelling machine	4-12
Troubleshooting guide	7-1

U

Undercarriage	2-10
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-2
Weight	2-5
Welding repair	6-42
Windshield	3-27
Working device operation	4-11
Working method	4-14
Working range	2-4