

CONTENTS

Foreword	0-1
Before servicing this machine	0-2
EC regulation approved	0-3
Table to enter S/No and distribution	0-4
Safety labels	0-5
Machine data plate	0-16
Guide(Direction, S/No, Symbol)	0-17

SAFETY HINTS

1. Before operating the machine	1-1
2. During operating the machine	1-6
3. During maintenance	1-13
4. Parking	1-16

SPECIFICATIONS

1. Major components	2-1
2. Specifications	2-2
3. Working range	2-4
4. Weight	2-5
5. Bucket selection guide	2-7
6. Undercarriage	2-8
7. Specification for major components	2-10
8. Recommended oils	2-13

CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-2
3. Switches	3-13
4. Levers and pedals	3-17
5. Air conditioner and heater	3-19
6. Others	3-23

OPERATION

1. Suggestion for new machine	4-1
2. Check before starting the engine	4-2
3. Starting and stop the engine	4-3
4. Mode selection system	4-6
5. Operation of working device	4-11
6. Traveling of the machine	4-12

7. Efficient working method	4-14
8. Operation in the special work sites	4-18
9. Storage	4-20

TRANSPORTATION

1. Preparation for transportation	5-1
2. Dimension and weight	5-2
3. Disassembling for transportation	5-5
4. Loading the machine	5-7
5. Fixing the machine	5-9
6. Adjustable track gauge	5-10

MAINTENANCE

1. Instruction	6-1
2. Tightening torque	6-6
3. Fuel, coolant and lubricants	6-9
4. Maintenance check list	6-11
5. Maintenance chart	6-16
6. Service instruction	6-18
7. Electrical system	6-40
8. Air conditioner and heater	6-43

TROUBLESHOOTING GUIDE

1. Engine	7-1
2. Electrical system	7-2
3. Others	7-3

OTHERS

1. Central grease lubrication system	8-1
--	-----

INDEX	9-1
-------------	-----