

2. ELECTRICAL SYSTEM

Trouble	Service	Remark
Lamp does not glow brightly even when engine runs at high speed. Lamp flickers while engine runs.	• Check for loose terminals and open-circuit wiring. • Adjust belt tension.	
Battery charging lamp does not go out even when engine runs at high speed.	• Check the alternator. • Check and repair wiring.	
Unusual noise is emitted from the alternator.	• Check the alternator.	
Starting motor does not turn when starting switch is turned ON.	• Check and repair the wiring. • Charge the battery. • Check the starting motor. • Check the safety relay.	
The pinion of the starting motor keeps going in and out.	• Charge the battery. • Check the safety relay.	
Starting motor turns the engine sluggishly.	• Charge the battery. • Check the starting motor.	
The starting motor disengages before the engine starts up.	• Check and repair the wiring. • Charge the battery.	
The engine warming up lamp does not go ON.	• Check and repair wiring. • Check the monitor.	
The engine oil pressure lamp does not light up when engine is stationary(When the starting switch is in ON position.)	• Check the monitor. • Check the caution lamp switch.	
Battery charging lamp does not light up when the engine is stationary. (When the starting switch is in ON position.)	• Check the monitor. • Check and repair the wiring.	