

A

Accel dial switch	3-14
Adjustable track gauge	5-12
After engine start	4-4
Air breather element	6-32
Air cleaner filter	6-26
Air conditioner & heater	3-20
Air conditioner filter	6-44
Alternate exit	0-12
Attachment lowering	4-22

B

Battery	6-41
Before starting engine	4-2
Boom lowering	4-22
Bucket clearance adjustment	6-39
Bucket replacement	6-37
Bucket selection guide	2-12
Bucket tooth replacement	6-38

C

Cab air filter	6-44
Cab device	3-1
Cassette & radio	3-32
Central grease lubrication system	8-8
Changing machine control pattern	4-25
Cigar lighter	3-27
Coolant	6-20
Coolant filter	6-28
Cooling fan	6-25
CPU controller	3-29

D

Disassembling for transportation	5-6
Drain filter	6-32

E

Emergency engine speed control	3-30
Emergency engine starting connector	3-30
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-42
Engine stop	4-5

F

Fan belt	6-24
----------------	------

Fuel filter	6-27
Fuel leakage	6-30
Fuel tank	6-27
Fuse box	3-29

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-31
Hydraulic oil filling	6-30
Hydraulic oil level	6-30

L

Levers & pedals	3-18
Lifting capacities	2-9
Lubricant specification	2-19

M

Maintenance check list	6-11
Major component	2-16
Mode selection system	4-6
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-25

P

Pedals	3-18
Periodical replacement parts	3-17
Pilot filter	6-33
Pin & bushing adjustment	6-39
Prefilter	6-28
Prolix resistor	3-30

R

Radiator flushing	6-20
Radio	3-32
RCV lever lubricate	6-35
Recommended oils	2-19, 6-10
Relieving pressure	6-3
Return filter	6-32

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-28
Seat belt	3-28
Service meter	3-30
Speciation for major component	2-16
Specification	2-2
Start switch	3-13
Storage	4-23
Suction strainer	6-31
Swing bearing grease	6-34
Swing gear & pinion grease	6-34
Swing reduction gear oil	6-33
Switch panel	3-11
Switches	3-13

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-14
Track adjustment	6-36
Track shoe selection	2-15
Transportation	5-1
Travel reduction gear oil	6-35
Travelling machine	4-12
Troubleshooting guide	7-1

U

Undercarriage	2-14
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-2
Weight	2-8
Working device operation	4-11
Working method	4-15
Working range	2-9