

A

Accel dial switch	3-24
After engine start	4-4
Air breather element	6-32
Air cleaner filter	6-26
Air conditioner & heater	3-30
Air conditioner filter	6-44
Alternate exit	0-12
Attachment lowering	4-22

B

Battery	6-41
Before starting engine	4-2
Boom lowering	4-22
Breaker	8-1
Bucket clearance adjustment	6-39
Bucket replacement	6-37
Bucket selection guide	2-15
Bucket tooth replacement	6-38

C

Cab air filter	6-44
Cab device	3-1
Central grease lubrication system	8-8
Charge machine control pattern	4-26
Cigar lighter	3-37
Cluster	3-2
Coolant	6-20
Cooling fan	6-25
Coolant filter (corrosion resister)	6-29

D

Disassembling for transportation	5-6
Drain filter	6-32

E

Emergency engine starting connector	3-57
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-42
Engine stop	4-5

F

Fan belt	6-24
Fixing the machine	5-11
Fuel filter	6-27

Fuel leakage	6-30
Fuel tank	6-27
Fuse & relay box	3-56

G

Gauge	3-3
Gear box oil level	6-33

H

Handsfree	3-38
Hydraulic oil changing	6-31
Hydraulic oil filling	6-30
Hydraulic oil level	6-30

L

LCD	3-2
Levers & pedals	3-28
Lifting capacities	2-11
Lubricant specification	2-22

M

Maintenance check list	6-11
Major component	2-19
MCU (Machine Control Unit)	3-56
Mode selection system	4-6
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
------------------	------

P

Pedals	3-29
Periodical replacement parts	6-5
Pilot filter	6-33
Pin & bushing lubrication	6-40
Prefilter	6-28
Pilot lamps	3-7

R

Radiator flushing	6-21
Radio & USB player	3-42
RCV lever lubricate	6-35
Recommended oils	2-22, 6-10
Relieving pressure	6-3

Remote controller	3-40
Return filter	6-32

S

Safety hints	1-1
Safety labels	0-6
Safety parts	6-5
Seat	3-55
Seat belt	3-55
Service meter	3-57
Service socket	3-39, 3-57
Specification for major component	2-19
Specification	2-2
Start switch	3-23
Storage	4-23
Suction strainer	6-31
Swing bearing grease	6-34
Swing gear & pinion grease	6-34
Swing reduction gear oil	6-34
Switch panel	3-23
Switches	3-9, 3-23

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-14
Track adjustment	6-36
Track shoe selection	2-18
Transportation	5-1
Travel reduction gear oil	6-35
Traveling machine	4-12
Troubleshooting guide	7-1

U

Undercarriage	2-17
USB socket	3-38

W

Warming up operation	4-5
Warning lamps	3-4
Weight	2-10
Windshield	3-58
Working device operation	4-11
Working method	4-15
Working range	2-6