

A

Accel dial switch	3-24
Adjustable track gauge	5-10
After engine start	4-4
Air breather element	6-32
Air cleaner filter	6-26
Air conditioner & heater	3-31
Air conditioner filter	6-43
Alternate exit	0-12

B

Battery	6-41
Before starting engine	4-2
Bucket clearance adjustment	6-39
Bucket replacement	6-37
Bucket selection guide	2-5
Bucket tooth replacement	6-38

C

Cab air filter	6-43
Cab device	3-1
Central grease lubrication system	8-1
Cigar lighter	3-35
Cluster	3-2
Coolant	6-20
Cooling fan	6-25
Coolant filter (corrosion resister)	6-29

D

Disassembling for transportation	5-5
Drain filter	6-32

E

Emergency engine speed connector	3-55
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-41
Engine stop	4-5
Excavation work	4-16

F

Fan belt	6-24
Fixing the machine	5-9
Fuel filter	6-27
Fuel leakage	6-30

Fuel tank	6-27
Fuse & relay box	3-54

G

Gauge	3-3
Gear box oil level	6-33

H

Handsfree	3-36
Hydraulic oil changing	6-31
Hydraulic oil filling	6-30
Hydraulic oil level	6-30

L

LCD	3-2
Levers & pedals	3-28
Loading the machine	5-7
Lubricant specification	2-11

M

Maintenance check list	6-11
Major component	2-8
MCU (Machine Control Unit)	3-54
Mode selection system	4-6
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
------------------	------

P

Pedals	3-29
Periodical replacement parts	6-5
Pilot filter	6-33
Pin & bushing lubrication	6-39
Prefilter	6-28
Pilot lamps	3-7

R

Radiator flushing	6-21
Radio & USB player	3-40
RCV lever lubricate	6-35
Recommended oils	2-11, 6-10
Relieving pressure	6-3

Remote controller	3-38
Return filter	6-32

S

Safety hints	1-1
Safety labels	0-6
Safety parts	6-5
Seat	3-53
Seat belt	3-55
Service meter	3-57
Service socket	3-39, 3-57
Special work	4-19
Specification for major component	2-8
Specification	2-2
Start switch	3-23
Storage	4-21
Suction strainer	6-31
Swing bearing grease	6-34
Swing gear & pinion grease	6-34
Swing reduction gear oil	6-33
Switch panel	3-23
Switches	3-9, 3-23

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-14
Track adjustment	6-36
Track shoe selection	2-7
Transportation	5-1
Travel reduction gear oil	6-35
Traveling machine	4-12
Troubleshooting guide	7-1

U

Undercarriage	2-6
USB socket	3-36

W

Warming up operation	4-5
Warning lamps	3-4
Weight	2-4
Windshield	3-56
Working device operation	4-11
Working method	4-15
Working range	2-3