



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91K4-07310-EN

⚠ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

※ For more information go to www.P65warnings.ca.gov/diesel.

Foreword	0-1
Emission-related components warranty (USA and CANADA only)	0-1-1
Before servicing this machine	0-2
EC regulation approved	0-3
Table to enter S/No and distribution	0-4
Safety labels	0-5
Machine data plate	0-15
Guide (direction, S/No, Symbol)	0-16

1. SAFETY HINTS

1. Before operating the machine	1-1
2. During operating the machine	1-16
3. During maintenance	1-23
4. Parking	1-26

2. SPECIFICATIONS

1. Major components	2-1
2. Specifications	2-2
3. Working range	2-3
4. Weight	2-4
5. Lifting capacities	2-5
6. Bucket selection guide	2-6
7. Undercarriage	2-7
8. Specification for major components	2-8
9. Recommended oils	2-11

3. CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-2
3. Switches	3-53
4. Levers and pedals	3-58
5. Air conditioner and heater	3-61
6. Others	3-65

4. OPERATION

1. Suggestion for new machine	4-1
2. Check before starting the engine	4-2
3. Starting and stop the engine	4-3

4. Operation of the working device	4-7
5. Traveling of the machine	4-8
6. Efficient working method	4-11
7. Operation in the special work sites	4-15
8. Normal operation of excavator	4-17
9. Attachment lowering	4-18
10. Storage	4-19
11. RCV lever operating pattern	4-21

5. TRANSPORTATION

1. Preparation for transportation	5-1
2. Dimension and weight	5-2
3. Loading the machine	5-4
4. Fixing the machine	5-6
5. Loading and unloading by crane	5-7

6. MAINTENANCE

1. Instruction	6-1
2. Tightening torque	6-6
3. Fuel, coolant and lubricants	6-9
4. Maintenance check list	6-11
5. Maintenance chart	6-16
6. Service instruction	6-18
7. Electrical system	6-37
8. Air conditioner and heater	6-40

7. TROUBLESHOOTING GUIDE

1. Engine	7-1
2. Electrical system	7-2
3 Others	7-3

8. HYDRAULIC BREAKER

1. Selecting hydraulic breaker	8-1
2. Circuit configuration	8-2
3. Maintenance	8-3
4. Precaution when operating the breaker	8-4
5. Quick coupler	8-6