


SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

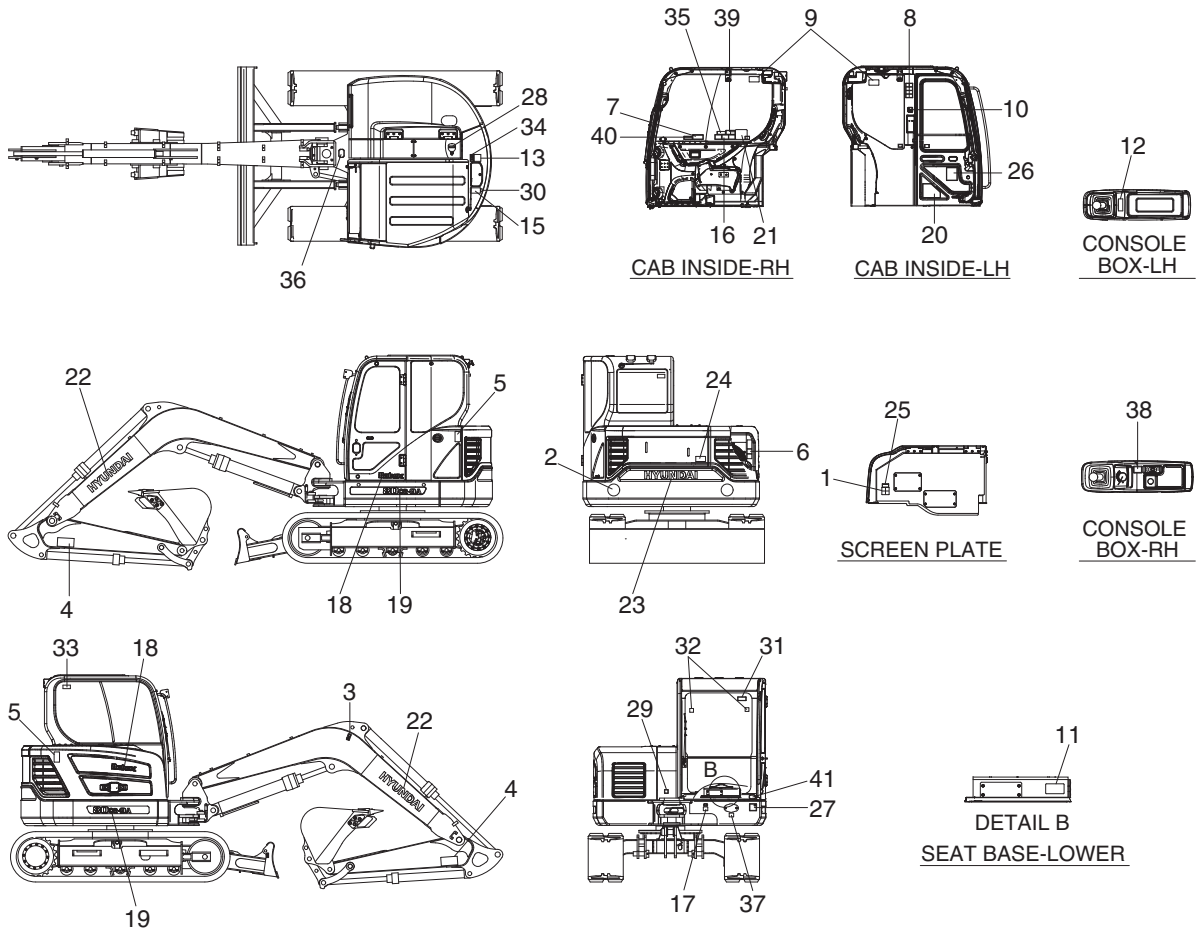

80CR9A0SL01

- | | | |
|------------------------------|----------------------------|-----------------------------|
| 1 Battery accident | 16 General warning - frame | 30 Ultra low sulfur fuel |
| 2 Reflecting | 17 Indicate - grease | 31 Front window warning |
| 3 Lifting point | 18 Logo - ROBEX | 32 Stay fix - cab |
| 4 Keep clear - boom/arm | 19 Model name | 33 Beacon lamp |
| 5 Keep clear - side | 20 Service instruction | 34 Fuel shut off |
| 6 Engine room caution | 21 Lifting chart | 35 Water separator |
| 7 Control ideogram | 22 Hyundai logo - boom | 36 Name plate |
| 8 General cautions - cab | 23 Hyundai logo - CWT | 37 Cab tilting |
| 9 Front window safety | 24 Keep clear - rear | 38 Control ideogram - dozer |
| 10 Hammer | 25 Electric welding | 39 Cab tilting caution |
| 11 Aircon filter | 26 Machine control - cab | 40 Lubrication oil |
| 12 Console tilting | 27 Noise level | 41 ROPS plate |
| 13 Hydraulic oil lubrication | 28 Accumulator | |
| 15 Fueling | 29 Battery position | |

2. DESCRIPTION

There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

1) BATTERY ACCIDENT (item 1)

This warning label is positioned on the screen plate.

⚠ Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.

※ Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.

With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.

⚠ Extinguish all smoking materials and open flames before checking the battery.

⚠ Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.

⚠ Do not allow unauthorized personnel to change the battery or to use booster cables.

⚠ For safety from electric shock, do not battery terminals with a wet hand.



36070FW05

2) KEEP CLEAR-BOOM/ARM (item 4)

This warning label is positioned on both side of the arm.

⚠ **Serious injury or death can result from falling of the attachment.**

⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**




R5570FW31

3) KEEP CLEAR-REAR (item 24)

This warning label is positioned on the both side of the counterweight.

⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**

⚠ **Do not deface or remove this label from the machine.**

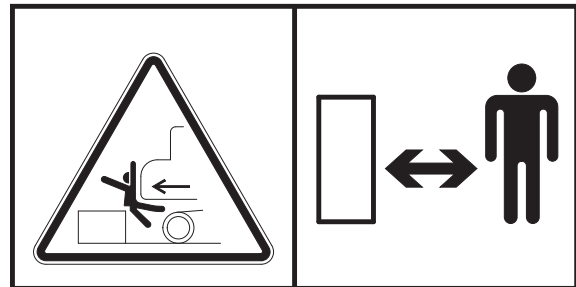

R35Z70FW09

4) KEEP CLEAR-SIDE (item 5)

This warning label is positioned on the side of engine hood.

⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**

⚠ **Do not deface or remove this label from the machine.**




R5570FW13

5) ENGINE ROOM CAUTION (item 6)

This warning label is positioned on the side of radiator.

- ⚠ Do not open the engine hood during the engine's running.
- ⚠ Escaping fluid under pressure can penetrate the skin causing serious injury.
- ✳ Study the service manual before service job.
- ⚠ Never open the filler cap while engine running or at high coolant oil temperature.
- ⚠ Study the operator's manual before starting and operating machine.
- ⚠ Do not touch exhaust pipe or it may cause severe burn.

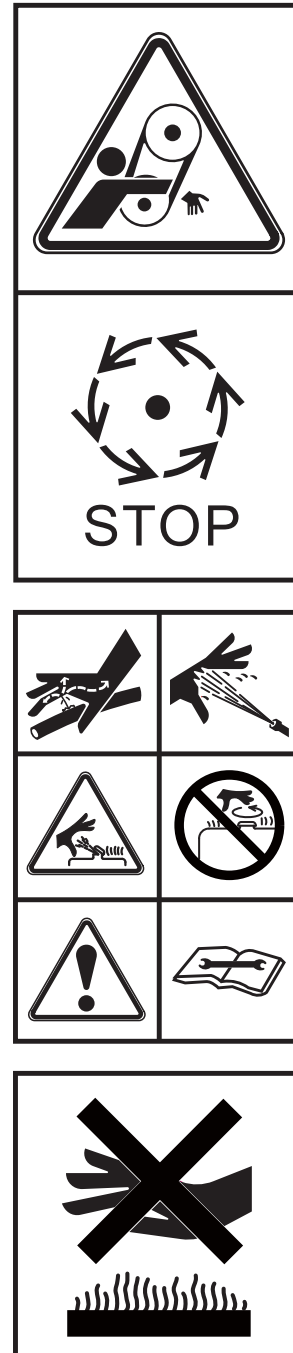


R5570FW14

6) CONTROL IDEOGRAM (item 7)

This warning label is positioned on the right side window of the cab.

- ⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ⚠ Failure to do so could result in injury or death.
- ✳ See page 4-7 for details.

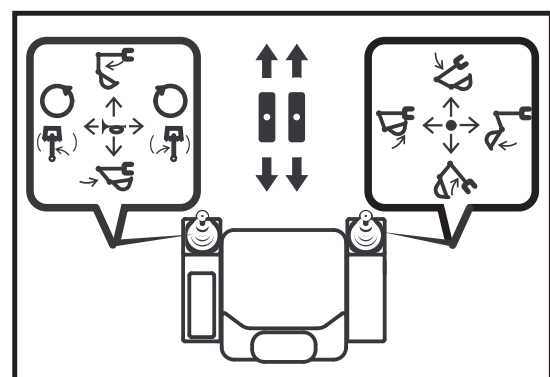

80CR9A0FW03


7) GENERAL CAUTIONS-CAB (item 8)

This warning label is positioned on the right side window of the cab.

- ⚠ **Serious injury or death can result from contact with electric lines.**

An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

- ⚠ **Serious injury or death can result from dropping bucket.**
 - ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**
 - ⚠ **Be careful to operate machine equipped with quick clamp or extensions.**
 - ⚠ **Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.**
 - ⚠ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**
- See page 5-6 for details.

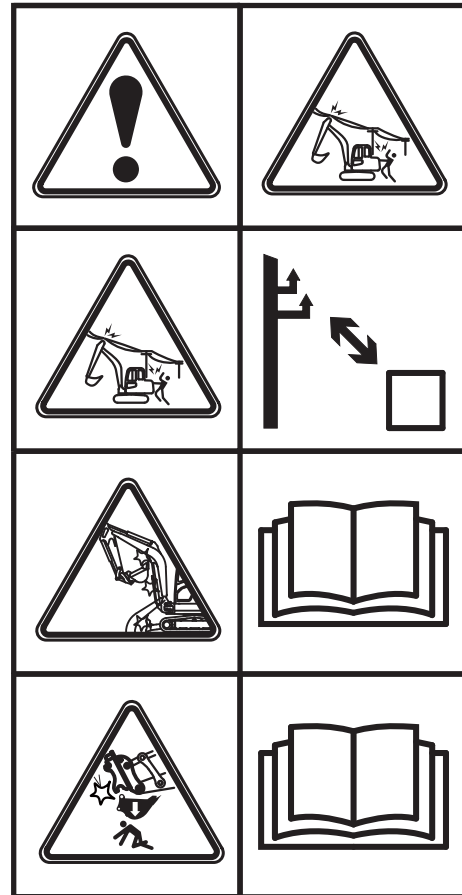


R25Z9A0FW11

8) FRONT WINDOW SAFETY (item 9)

This warning label is positioned on the both side window of the cab.

- ⚠ **Be careful that the front window may be promptly closed.**

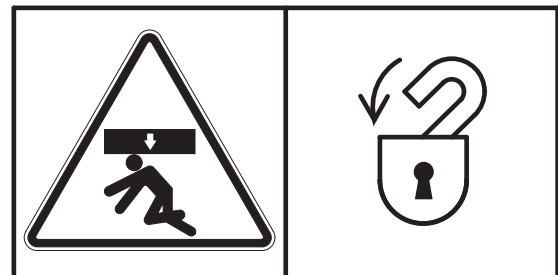


21070FW24

9) AIR CONDITIONER FILTER (item 11)

This warning label is positioned on the air front seat base.

- ※ **Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.**

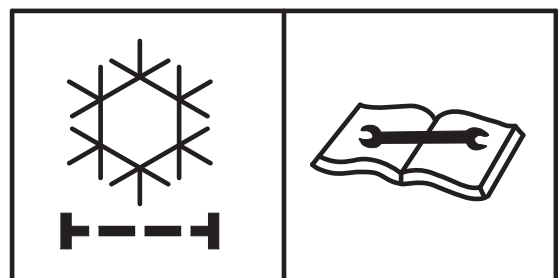


21070FW26

10) CONSOLE TILTING (item 12)

This warning label is positioned on the LH console box.

- ※ Before you get off the machine be sure to tilt the LH console box.

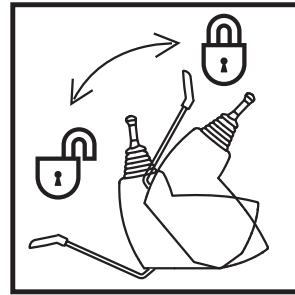

R5570FW17

11) HYDRAULIC OIL LUBRICATION (item 13)

This warning label is positioned on the rear cover.

- ※ Do not mix with different brand oils.
- ⚠ Never open the filler cap while engine running or at high hydraulic oil temperature.
- ⚠ Loosen the cap slowly and release internal pressure completely.




21070FW08

12) FUELING (item 15)

This warning label is positioned on the rear cover.

- ⚠ Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.

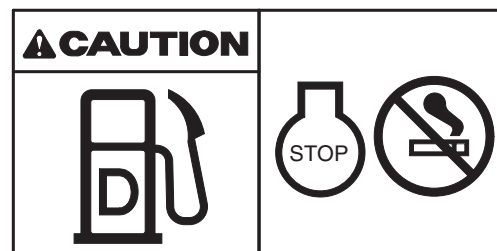


R35Z70FW04

13) GENERAL WARNING-FRAME (item 16)

This warning label is positioned on the right side window of the cab.

- ⚠ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**
- ※ See page 5-7 for details.
- ⚠ **Place the bucket on the ground whenever servicing the hydraulic system.**
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.

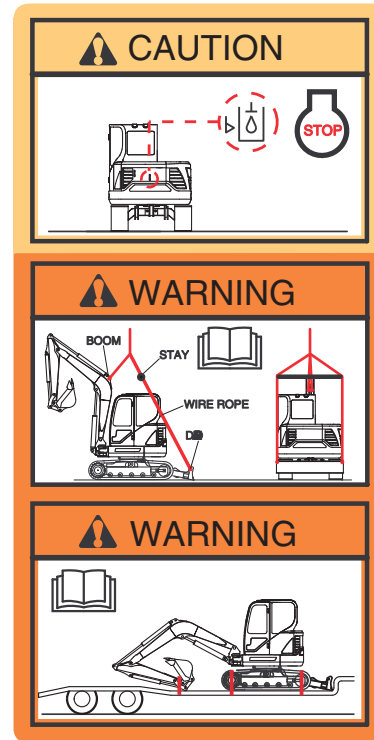


80CR90SL02

14) ELECTRIC WELDING (item 25)

This warning label is positioned on the screen plate.

- ⚠ **Before carrying out any electric welding on this machine follow the below procedure.**
 - Pull the connectors out of all electric control units.
 - Connector the ground lead of the welding equipment as close to the welding point as possible.
- ※ See page 6-39 for detail.

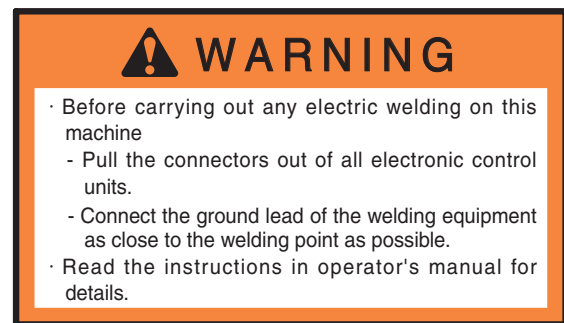


7807AFW20

15) MACHINE CONTROL-CAB (item 26)

This warning label is positioned on the right side window of the cab.

- ⚠ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**
- ⚠ **Failure to do so could result in injury or death.**

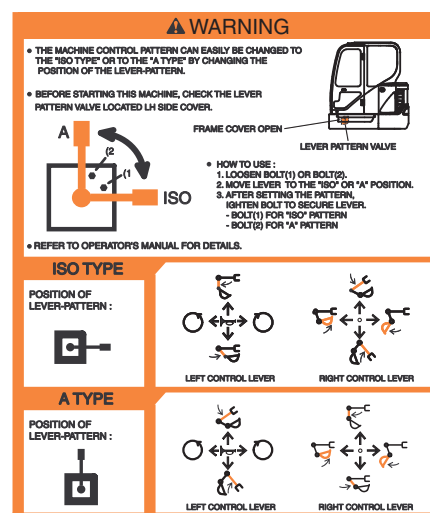

80CR90FW04

16) ACCUMULATOR (item 28)

This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

▲ Never make any hole in the accumulator expose it to flame or fire.

▲ Do not weld anything to the accumulator.


- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.



1107A0FW46

17) BATTERY POSITION (item 29)

This warning label is positioned on the right side of tool box.

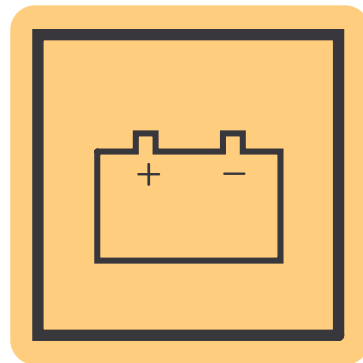

38090FW03

18) ULTRA LOW SULFUR FUEL (item 30)

This warning label is positioned on the left side of the fuel filler neck.


- ※ Use ultra low sulfur fuel only.
- ※ Ultra low sulfur fuel
sulfur content ≤ 15 ppm
- ※ If ultra low sulfur diesel is not used, the aftertreatment diesel particulate filter can be damaged.



559A1FW09

19) FRONT WINDOW WARNING (item 31)

This warning label is positioned on the front window of the cab.

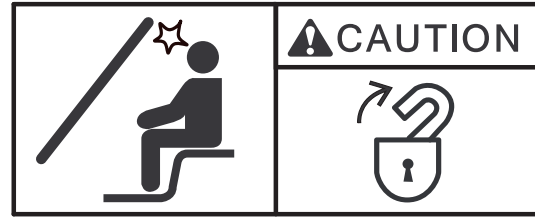

5591FW05

20) STAY FIX-CAB (item 32)

This warning label is positioned on the front window of the cab.

- ▲ **Be sure to support the stay when the window needs to be opened.**
- ▲ **Be careful that the opened window may be closed by the external or natural force.**




5591FW06

21) FUEL SHUT OFF (item 34)

This warning label is positioned on the rear cover.

- ※ **Fill only the hydraulic oil.**
- ※ **Do not fill the diesel fuel.**

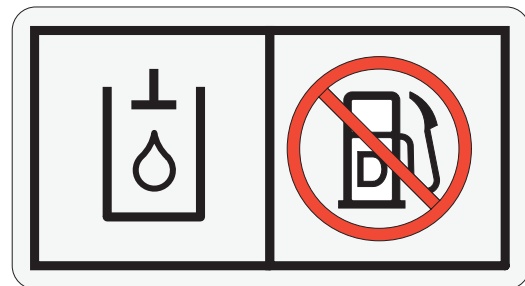

140WH90FW51

22) WATER SEPARATOR (item 35)

This warning label is positioned on the right side window of the cab.

- ▲ **In order to protect high pressure fuel system, please drain water in water separator before starting the engine.**




210N90FW50

23) CAB TILTING (item 37)

This warning label is positioned on the front of upper frame.

- ▲ **Keep clearance of people except the operator before tilting the cab.**
- ※ **See page 6-36 for detail.**

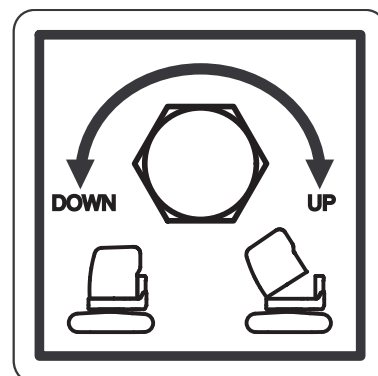


80CR90FW05

24) CONTROL IDEOGRAM-DOZER (item 37)

This warning label is positioned on the RH console box.

- ※ See page 4-7 for details.
- ※ Guidelines for using the general dozer blade.
 - Be careful not to apply an excessive load when using a blade.
 - Avoid impacts and loads on the bottom due to machine modification or excessive working conditions.
 - Check the BLADE UP status before traveling the machine.
 - Avoid any collision with the upper working device and the blade.
 - Do not move machine in the blade jack up state.
 - When using blade jack up, use it in an environment where the ground is not rough and the machine and ground are same level.

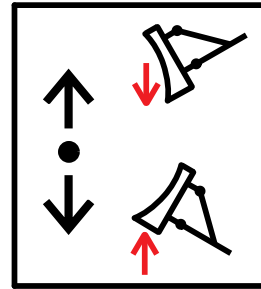


R25Z9A0FW06

25) CAB TILTING CAUTION (item 39)

This warning label is positioned on the right side window of the cab.

- ※ Before tilting the cab, remove the mounting bolts and nuts inside the cab.

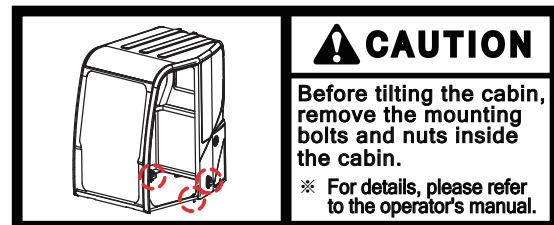

80CR9A0FW05

26) LUBRICATION OIL (item 40)

This warning label is positioned on the right side window of the cab.

- ※ Recommended lube oil ACEA-E6 is equivalent to CJ-4.



80CR9A0FW06