

A

Accel dial switch	3-24
After engine start	4-5
Air breather element	6-32
Air cleaner element	6-25
Air conditioner & heater	3-30
Air conditioner filter	6-44
Attachment lowering	4-23

B

Battery	6-41
Before starting engine	4-2
Boom lowering	4-23
Breaker maintenance	8-3
Breaker precautions	8-4
Bucket clearance adjustment	6-39
Bucket replacement	6-37
Bucket selection guide	2-6
Bucket tooth replacement	6-38

C

Cab air filter	6-44
Cab device	3-1
Changing machine control pattern	4-26
Cigar lighter	3-37
Cluster	3-2
Coolant	6-20
Cooling fan	6-24

D

Drain filter	6-32
Dimension and weight	5-2

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-42
Engine stop	4-6

F

Fan belt	6-24
Fixing the machine	5-6
Fuel filter	6-26, 27
Fuel leakage	6-29
Fuel system bleeding	6-29

Fuel tank	6-25
Fuse & relay box	3-56

G

Gauge	3-3
-------------	-----

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-30
Hydraulic oil filling	6-30
Hydraulic oil level	6-29

L

LCD	3-2
LCD display map	3-3
LCD main operation display	3-11
Levers & pedals	3-28
Lifting capacities	2-5
Loading the machine	5-7
Lubricant specification	2-12

M

Maintenance check list	6-11
Major component	2-1
Master switch	3-24
MCU (Machine Control Unit)	3-56
Mode selection system	4-10
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-26

P

Pedals	3-29
Periodical replacement parts	6-5
Pilot line filter	6-33
Pin & bushing lubrication	6-40
Prefilter	6-26
Pilot lamps	3-7
Precaution for transportation	5-1

Q

Quick clamp 8-6

R

Radiator flushing 6-20

Radio & USB player 3-38

RCV lever lubricate 6-35

Recommended oils 2-12, 6-10

Relieving pressure 6-3

Return filter 6-31

RCV lever operating pattern 4-26

RS 232 service socket 3-57

S

Safety hints 1-1

Safety labels 0-4

Safety parts 6-5

Seat 3-54, 55

Seat belt 3-54

Service meter 3-57

Socket 12V 3-37

Specification for major component 2-9

Specification 2-2

Start switch 3-23

Storage 4-24

Suction strainer 6-31

Swing bearing grease 6-33

Swing gear & pinion grease 6-34

Swing reduction gear oil 6-33

Switch panel 3-23

Switches 3-23

T

Torques-major component 6-8

Torques-fastener 6-6

Towing machine 4-15

Track adjustment 6-35

Track shoe selection 2-11

Transportation 5-1

Travel reduction gear oil 6-35

Traveling machine 4-13

Troubleshooting guide 7-1

U

Undercarriage 2-7

W

Warming up operation 4-5

Warning lamps 3-4

Weight 2-4

Windshield 3-57

Working device operation 4-12

Working method 4-16

Working range 2-3