

# CONTENTS

## SECTION 1 GENERAL

Group 1 Safety hints .....	1-1
Group 2 Specifications .....	1-5
Group 3 Operational checkout record sheet .....	1-19

## SECTION 2 REMOVAL & INSTALLATION OF UNIT

Group 1 Major components .....	2-1
Group 2 Removal and installation of unit .....	2-2

## SECTION 3 POWER TRAIN SYSTEM

Group 1 Structure and operation .....	3-1
Group 2 Operation and maintenance .....	3-60
Group 3 Disassembly and assembly .....	3-73
Group 4 Adjustment .....	3-191

## SECTION 4 BRAKE SYSTEM

Group 1 Structure and function .....	4-1
Group 2 Operational checks and troubleshooting .....	4-32
Group 3 Tests and adjustments .....	4-40
Group 4 Disassembly and assembly .....	4-43

## SECTION 5 STEERING SYSTEM

Group 1 Structure and function .....	5-1
Group 2 Operational checks and troubleshooting .....	5-10
Group 3 Tests and adjustments .....	5-18
Group 4 Disassembly and assembly .....	5-22

## SECTION 6 HYDRAULIC SYSTEM

Group 1 Structure and function .....	6-1
Group 2 Operational checks and troubleshooting .....	6-36
Group 3 Disassembly and assembly .....	6-41

## SECTION 7 ELECTRICAL SYSTEM

Group 1 Component location .....	7-1
Group 2 Electrical circuit .....	7-3
Group 3 Cluster .....	7-23

Group 4 Transmission message display .....	7-54
Group 5 Switches .....	7-57
Group 6 Electrical component specification .....	7-65
Group 7 Connectors .....	7-79
Group 8 Troubleshooting .....	7-98

## **SECTION 8 MAST**

Group 1 Structure .....	8-1
Group 2 Operational checks and troubleshooting .....	8-4
Group 3 Adjustment .....	8-7
Group 4 Removal and Installation .....	8-9