

SECTION 1 GENERAL

Group 1 Safety Hints	1-1
Group 2 Specifications	1-4
Group 3 Periodic replacement	1-13

SECTION 2 REMOVAL & INSTALLATION of unit

Group 1 Major components	2-1
Group 2 Removal and Installation of Unit	2-2

SECTION 3 POWER TRAIN SYSTEM

Group 1 Structure and operation	3-1
Group 2 Troubleshooting	3-3
Group 3 Disassembly and assembly	3-5

SECTION 4 BRAKE SYSTEM

Group 1 Structure and function	4-1
--------------------------------------	-----

SECTION 5 STEERING SYSTEM

Group 1 Structure and function	5-1
--------------------------------------	-----

SECTION 6 HYDRAULIC SYSTEM

Group 1 Structure and function	6-1
Group 2 Operational checks and troubleshooting	6-12
Group 3 Disassembly and assembly	6-16

SECTION 7 ELECTRICAL SYSTEM

Group 1 Component location	7-1
Group 2 Electrical circuit	7-2
Group 3 Electric components	7-3

SECTION 8 MAST

Group 1 Structure	8-1
Group 2 Operational checks and troubleshooting	8-4
Group 3 Adjustment	8-7
Group 4 Removal and installation	8-10