

SECTION 1 GENERAL

Group 1 Safety hints 1-1

Group 2 Specifications 1-5

Group 3 Operational checkout record sheet 1-13

SECTION 2 REMOVAL & INSTALLATION

Group 1 Major components 2-1

Group 2 Removal and installation of unit 2-2

SECTION 3 POWER TRAIN SYSTEM

Group 1 Structure and operation 3-1

Group 2 Operation and maintenance 3-50

Group 3 Disassembly and assembly 3-63

Group 4 Adjustment 3-156

SECTION 4 BRAKE SYSTEM

Group 1 Structure and function 4-1

Group 2 Operational checks and troubleshooting 4-32

Group 3 Tests and adjustments 4-40

Group 4 Disassembly and assembly 4-43

SECTION 5 STEERING SYSTEM

Group 1 Structure and function 5-1

Group 2 Operational checks and troubleshooting 5-10

Group 3 Tests and adjustments 5-18

Group 4 Disassembly and assembly 5-22

SECTION 6 HYDRAULIC SYSTEM

Group 1 Structure and function 6-1

Group 2 Operational checks and troubleshooting 6-37

Group 3 Disassembly and assembly 6-42

SECTION 7 ELECTRICAL SYSTEM

Group 1 Component location 7-1

Group 2 Electrical circuit 7-5

Group 3 Cluster 7-21

Group 4 Transmission message display 7-48

Group 5 Switches 7-51

Group 6 Electrical component specification 7-59

Group 7 Connectors 7-68

Group 8 Troubleshooting 7-88

SECTION 8 MAST

Group 1 Structure 8-1

Group 2 Operational checks and troubleshooting 8-4

Group 3 Adjustment 8-7

Group 4 Removal and Installation 8-9