

CONTENT

FOREWORD.....	1
SECTION 1 GENERAL	3
GROUP 1 SAFETY HINTS	3
GROUP 2 SPECIFICATIONS.....	6
GROUP 3 PERIODIC REPLACEMENT	19
SECTION 2REMOVAL &INSTALLATION OFUNIT	20
GROUP 1 MAJOR COMPONENTS.....	20
GROUP 2 REMOVAL AND INSTALLATION OF UNIT	21
GROUP 3 MAINTENANCE FOR HOSE.....	31
SECTION 3 POWER TRAIN SYSTEM.....	32
GROUP 1 STRUCTURE AND OPERATION	32
GROUP 2 FAILURE DIAGNOSIS AND CORRECTIVE ACTIONS.....	35
GROUP 3 DISASSEMBLY AND ASSEMBLY	36
SECTION 4 BRAKE SYSTEM.....	51
GROUP 1 STRUCTURE AND FUNCTIONS.....	51
GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING.....	54
GROUP 3 TESTING AND ADJUSTMENT	55
SECTION 5 STEERING SYSTEM.....	57
GROUP 1 STRUCTURE AND FUNCTIONS.....	57
GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING.....	64
GROUP 3 DISASSEMBLY AND ASSEMBLY	66
SECTION 6 HYDRAULIC SYSTEM.....	75
GROUP 1 STRUCTURE AND FUNCTIONS.....	75
GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING.....	83
GROUP 3 DISASSEMBLY AND ASSEMBLY	87
SECTION 7 ELECTRIC SYSTEM.....	92
GROUP 1 GENERAL LOCATIONS OF PARTS.....	92
GROUP 2 ELECTRIC CIRCUIT DIAGRAMS	93

GROUP 3 ELECTRIC FUNCTIONAL PARTS	96
SECTION 8 MAST	181
GROUP 1 STRUCTURE	181
GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING.....	185
GROUP 3 ADJUSTMENT	188
GROUP 4 REMOVAL AND INSTALLATION	191