

SECTION 1 GENERAL

Group 1 Safety hints	1-1
Group 2 Specifications	1-5
Group 3 Operational checkout record sheet	1-17

SECTION 2 REMOVAL & INSTALLATION OF UNIT

Group 1 Structure	2-1
Group 2 Removal and installation of unit	2-2

SECTION 3 POWER TRAIN SYSTEM

Group 1 Structure and operation	3-1
Group 2 Operation and maintenance	3-49
Group 3 Disassembly and assembly	3-60
Group 4 Adjustment	3-188

SECTION 4 BRAKE SYSTEM

Group 1 Structure and function	4-1
Group 2 Operational checks and troubleshooting	4-30
Group 3 Tests and adjustments	4-38
Group 4 Disassembly and assembly	4-41

SECTION 5 STEERING SYSTEM

Group 1 Structure and function	5-1
Group 2 Operational checks and troubleshooting	5-9
Group 3 Tests and adjustments	5-17
Group 3 Disassembly and assembly	5-21

SECTION 6 HYDRAULIC SYSTEM

Group 1 Structure and function	6-1
Group 2 Operational checks and troubleshooting	6-40
Group 3 Disassembly and assembly	6-45

SECTION 7 ELECTRICAL SYSTEM

Group 1 Component location	7-1
Group 2 Electrical circuit	7-3
Group 3 Cluster	7-20
Group 4 Transmission message display	7-51

Group 5 Switches	7-54
Group 6 Electrical component specification	7-61
Group 7 Connectors	7-76
Group 8 Troubleshooting	7-95

SECTION 8 MAST

Group 1 Structure	8-1
Group 2 Operational checks and troubleshooting	8-4
Group 3 Adjustment	8-7
Group 4 Removal and Installation	8-9