

SECTION 1 GENERAL

Group 1 Safety hints	1-1
Group 2 Specifications	1-5
Group 3 Operational checkout record sheet	1-13

SECTION 2 REMOVAL & INSTALLATION

Group 1 Structure	2-1
Group 2 Removal and installation of unit	2-2

SECTION 3 POWER TRAIN SYSTEM

Group 1 Structure and operation	3-1
Group 2 Operation and maintenance	3-46
Group 3 Disassembly and assembly	3-57
Group 4 Adjustment	3-185

SECTION 4 BRAKE SYSTEM

Group 1 Structure and function	4-1
Group 2 Operational checks and troubleshooting	4-32
Group 3 Tests and adjustments	4-40
Group 4 Disassembly and assembly	4-43

SECTION 5 STEERING SYSTEM

Group 1 Structure and function	5-1
Group 2 Operational checks and troubleshooting	5-9
Group 3 Tests and adjustments	5-17
Group 4 Disassembly and assembly	5-21

SECTION 6 HYDRAULIC SYSTEM

Group 1 Structure and function	6-1
Group 2 Operational checks and troubleshooting	6-28
Group 3 Disassembly and assembly	6-33

SECTION 7 ELECTRICAL SYSTEM

Group 1 Component location (-#0041)	7-1
Component location (#0042-)	7-1-1
Group 2 Electrical circuit (-#0041)	7-3
Electrical circuit (#0042-)	7-3-1

Group 3	Cluster (-#0041)	7-14
	Cluster (#0042-)	7-14-1
Group 4	Transmission message indication (-#0041)	7-23
	Transmission message indication (#0042-)	7-23-1
Group 5	Switches (-#0041)	7-27
	Switches (#0042-)	7-27-1
Group 6	Electrical component specification (-#0041)	7-35
	Electrical component specification (#0042-)	7-35-1
Group 7	Connectors (-#0041)	7-45
	Connectors (#0042-)	7-45-1
Group 8	Troubleshooting	7-64

SECTION 8 MAST

Group 1	Structure	8-1
Group 2	Operational checks and troubleshooting	8-3
Group 3	Adjustment	8-6
Group 4	Removal and Installation	8-8