

CONTENT

FOREWORD.....	1
SECTION 1 GENERAL	3
GROUP 1 SAFETY HINTS	3
GROUP 2 SPECIFICATIONS	6
GROUP 3 PERIODIC REPLACEMENT	19
SECTION 2 REMOVAL & INSTALLATION OF UNIT	20
GROUP 1 MAJOR COMPONENTS.....	20
GROUP 2 REMOVAL AND INSTALLATION OF UNIT	21
GROUP 3 MAINTENANCE FOR HOSE	31
SECTION 3 POWER TRAIN SYSTEM.....	32
GROUP 1 STRUCTURE AND OPERATION	32
GROUP 2 FAILURE DIAGNOSIS AND CORRECTIVE ACTIONS.....	35
GROUP 3 DISASSEMBLY AND ASSEMBLY	36
SECTION 4 BRAKE SYSTEM.....	53
GROUP 1 STRUCTURE AND FUNCTIONS.....	53
GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING.....	56
GROUP 3 TESTING AND ADJUSTMENT	57
SECTION 5 STEERING SYSTEM.....	60
GROUP 1 STRUCTURE AND FUNCTIONS.....	60
GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING.....	67
GROUP 3 DISASSEMBLY AND ASSEMBLY	69
SECTION 6 HYDRAULIC SYSTEM.....	79
GROUP 1 STRUCTURE AND FUNCTIONS.....	79
GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING.....	89
GROUP 3 DISASSEMBLY AND ASSEMBLY	93
SECTION 7 ELECTRIC SYSTEM.....	99
GROUP 1 GENERAL LOCATIONS OF PARTS.....	99
GROUP 2 ELECTRIC CIRCUIT DIAGRAMS	100

GROUP 3 ELECTRIC FUNCTIONAL PARTS	105
SECTION 8 MAST	192
GROUP 1 STRUCTURE	192
GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING.....	196
GROUP 3 ADJUSTMENT	199
GROUP 4 REMOVAL AND INSTALLATION	202