

SECTION 1 GENERAL

Group 1 Safety hints	1-1
Group 2 Specifications	1-5
Group 3 Periodic replacement	1-18

SECTION 2 REMOVAL & INSTALLATION

Group 1 Major components	2-1
Group 2 Removal and installation of unit	2-2
Group 3 Maintenance for hose	2-17

SECTION 3 POWER TRAIN SYSTEM (25/30D-9V, 35DN-9V)

Group 1 Structure and operation	3-1
Group 2 Disassembly and assembly	3-18
Group 3 Maintenance and troubleshooting	3-61

SECTION 3 POWER TRAIN SYSTEM (25/30D-9VS, 35DN-9VS)

Group 1 Structure and operation	3-74
Group 2 Disassembly and assembly	3-87
Group 3 Maintenance and troubleshooting	3-130

SECTION 4 BRAKE SYSTEM

Group 1 Structure and function	4-1
Group 2 Operational checks and troubleshooting	4-10
Group 3 Tests and adjustments	4-13

SECTION 5 STEERING SYSTEM

Group 1 Structure and function	5-1
Group 2 Operational checks and troubleshooting	5-13
Group 3 Disassembly and assembly	5-16

SECTION 6 HYDRAULIC SYSTEM

Group 1 Structure and function	6-1
Group 2 Operational checks and troubleshooting	6-31
Group 3 Disassembly and assembly	6-35

SECTION 7 ELECTRICAL SYSTEM

Group 1 Component location	7-1
Group 2 Electrical circuit	7-3
Group 3 Component Specification	7-23
Group 4 Connector Destination	7-24
Group 5 Troubleshooting	7-32

SECTION 8 MAST

Group 1 Structure	8-1
Group 2 Operational Checks and Troubleshooting	8-5
Group 3 Adjustment	8-8
Group 4 Removal and Installation	8-11