

SECTION 1 GENERAL

Group 1 Safety hints	1-1
Group 2 Specifications	1-5
Group 3 Operational checkout record sheet	1-13

SECTION 2 REMOVAL & INSTALLATION

Group 1 Structure	2-1
Group 2 Removal and installation of unit	2-2

SECTION 3 POWER TRAIN SYSTEM

Group 1 Structure and operation	3-1
Group 2 Operation and maintenance	3-46
Group 3 Disassembly and assembly	3-57
Group 4 Adjustment	3-185

SECTION 4 BRAKE SYSTEM

Group 1 Structure and function	4-1
Group 2 Operational checks and troubleshooting	4-32
Group 3 Tests and adjustments	4-40
Group 4 Disassembly and assembly	4-43

SECTION 5 STEERING SYSTEM

Group 1 Structure and function	5-1
Group 2 Operational checks and troubleshooting	5-9
Group 3 Tests and adjustments	5-17
Group 4 Disassembly and assembly	5-21

SECTION 6 HYDRAULIC SYSTEM

Group 1 Structure and function	6-1
Group 2 Operational checks and troubleshooting	6-29
Group 3 Disassembly and assembly	6-34

SECTION 7 ELECTRICAL SYSTEM

Group 1 Component location	7-1
Group 2 Electrical circuit	7-3
Group 3 Cluster	7-19
Group 4 Transmission message indication	7-46

Group 5 Switches	7-49
Group 6 Electrical component specification	7-56
Group 7 Connectors	7-69
Group 8 Troubleshooting	7-88

SECTION 8 MAST

Group 1 Structure	8-1
Group 2 Operational checks and troubleshooting	8-3
Group 3 Adjustment	8-6
Group 4 Removal and Installation	8-8