

A message to hyundai lift truck operators .....	0-1	12. Solid tire .....	2-7
Introduction .....	0-2	13. Weight indicator (option) .....	2-8
How to use this manual .....	0-3		
EC regulation approved .....	0-5	<b>3. KNOW YOUR TRUCK</b>	
Safety labels .....	0-6	1. General locations .....	3-1
Guide (Direction, Serial number, Symbols) .....	0-15	2. Name plate .....	3-2
		3. Cab devices .....	3-3
<b>1. SAFETY HINTS</b>		4. Cluster .....	3-4
1. Daily inspection .....	1-1	5. Switches .....	3-45
2. Do's and don'ts .....	1-2	6. Control devices .....	3-52
3. Seat belt .....	1-4	7. Air conditioner and heater .....	3-57
4. No riders .....	1-5	8. Others .....	3-60
5. Pedestrians .....	1-6		
6. Operator protection .....	1-7	<b>4. OPERATOR MAINTENANCE AND CARE</b>	
7. Fork safety .....	1-8	1. Daily safety inspection .....	4-1
8. Pinch points .....	1-9	2. Suggestion for new truck .....	4-3
9. Travel .....	1-10	3. Fuel safety practices .....	4-4
10. Grades, ramps, slopes, and inclines .....	1-11	4. Engine oil service interval&management ..	4-5
11. Tip over .....	1-12		
12. Surface and capacity .....	1-14	<b>5. STARTING AND OPERATING PROCEDURES</b>	
13. Parking .....	1-15	1. Before operating the truck .....	5-1
14. Refueling .....	1-16	2. Check before operation .....	5-2
15. Step .....	1-17	3. Check before starting engine .....	5-3
16. Operator's safety rules .....	1-18	4. Seat adjustment .....	5-8
17. Side shift and fork positioner (option) .....	1-19	5. Starting from a safe condition .....	5-9
		6. General starting and operating tips .....	5-10
<b>2. OPERATING HAZARDS</b>		7. Starting the engine .....	5-11
1. Loose loads .....	2-1	8. Check after starting engine .....	5-12
2. Long and wide loads .....	2-2	9. Warming up operation .....	5-14
3. Rear swing .....	2-2	10. Levers and pedals .....	5-15
4. Low overhead clearance .....	2-3	11. Traveling of the truck .....	5-17
5. Fast turns and high loads .....	2-3	12. Operating safely .....	5-21
6. Right angle stacking .....	2-4	13. Load handling .....	5-23
7. Chain slack .....	2-4	14. Shut down procedure .....	5-29
8. Pallets and skids .....	2-5	15. Storage .....	5-30
9. Caution for electrical lines .....	2-5	16. Transport .....	5-32
10. Lifting loads .....	2-6	17. Loading and unloading by crane .....	5-33
11. Fork positioner .....	2-7		

## **6. EMERGENCY PROCEDURES**

1. How to tow a disabled truck ..... 6-1
2. Parking brake release ..... 6-3
3. How to use battery jumper cables ..... 6-4
4. Emergency fork lowering ..... 6-6
5. Key-lowering interlock ..... 6-7

## **7. PLANNED MAINTENANCE AND LUBRICATION**

1. Introduction ..... 7-1
2. Safe maintenance practices ..... 7-2
3. Instructions before maintenance ..... 7-5
4. Planned maintenance intervals ..... 7-8
5. How to perform planned maintenance ..... 7-13
6. Service instruction..... 7-18
7. Electrical system ..... 7-46
8. Air conditioner and heater ..... 7-47
9. Replacement and check ..... 7-49
10. Handling truck in extremely hot places ..... 7-62
11. Cold weather operation ..... 7-63
12. Recommendation table for lubricants ..... 7-64
13. Fuel and lubricants ..... 7-65

## **8. SPECIFICATIONS**

1. Specification table ..... 8-1
2. Specification for major components ..... 8-2
3. Tightening torque ..... 8-5

## **9. TROUBLESHOOTING**

1. Engine system ..... 9-1
2. Electrical system ..... 9-2
3. Torque flow system ..... 9-3
4. Steering system ..... 9-7
5. Brake system ..... 9-8
6. Hydraulic system ..... 9-9
7. Mast and fork ..... 9-10

## **10. TESTING AND ADJUSTING**

1. Engine system ..... 10-1
2. Drive system ..... 10-4
3. Travel system ..... 10-6
4. Steering system ..... 10-7