

A MESSAGE TO HYUNDAI LIFT TRUCK OPERATORS

Lift trucks are specialized machines with unique operating characteristics, designed to perform a specific job. Their function and operation is not like a car or ordinary truck. They require specific instructions and rules for safe operation and maintenance.

Safe operation of lift trucks is of primary importance to HYUNDAI.

Our experience with lift truck accidents has shown that when accidents happen and people are killed or injured, the causes are:

- **Operator not properly trained**
- **Operator not experienced with lift truck operation**
- **Basic safety rules not followed**
- **Lift truck not maintained in safe operating condition**

For these reasons, HYUNDAI wants you to know about the safe operation and correct maintenance of your lift truck.

This manual is designed to help you operate your lift truck safely.

This manual shows and tells you about safety inspections and the important general safety rules and hazards of lift truck operation. It describes the special components and features of the truck and explains their function. The correct operating procedures are shown and explained. Illustrations and important safety messages are included for clear understanding. A section on maintenance and lubrication is included for the lift truck mechanic.

The operator's manual is not a training manual. It is a guide to help trained and authorized operators safely operate their lift truck by emphasizing and illustrating the correct procedures. However, it cannot cover every possible situation that may result in an accident. You must watch for hazards in your work areas and avoid or correct them. It is important that you know and understand the information in this manual and that you know and follow your company safety rules!

Be sure that your equipment is maintained in a safe condition. Do not operate a damaged or malfunctioning truck. Practice safe operation every time you use your lift truck. Let's join together to set high standards in safety.

Remember, before you start operating this lift truck, be sure you understand all driving procedures. It is your responsibility, and it is important to you and your family, to operate your lift truck safely and efficiently.

△ Be aware that the Federal Occupational Safety and Health Act (OSHA) and state laws require that operators be completely trained in the safe operation of lift trucks; It is also an (OSHA) requirement that a machine inspection be performed before every shift. If you need training in operating or inspecting your lift truck, ask your supervisor.

HYUNDAI lift trucks are built to take hard work, but not abuse. They are built to be dependable, but they are only as safe and efficient as the operator and the persons responsible for maintaining them. Do not make any repairs to this truck unless you have been trained in safe lift truck repair procedures and are authorized by your employer.

This manual describes procedures for operation, handling, lubrication, maintenance, checking and adjustment. It will help the operator realize peak performance through effective, economical and safe machine operation.

INTRODUCTION

HYUNDAI welcomes you to the growing group of professionals who own, operate and maintain HYUNDAI lift trucks. We take pride in the long tradition of quality products and superior value the HYUNDAI name represents. This manual familiarizes you with safety, operating, and maintenance information about your new lift truck. It has been specially prepared to help you use and maintain your HYUNDAI lift truck in a safe and correct manner.

Your HYUNDAI lift truck has been designed and built to be as safe and efficient as today's technology can make it. As manufactured, for some models, it meets all the applicable mandatory requirements of ANSI B56.1-1988 Safety Standard for Powered Industrial Trucks. Some trucks are also furnished with equipment to help you operate safely; for example, load back rest, parking brake and horn are standard equipment.

Safe, productive operation of a lift truck requires both skill and knowledge on the part of the operator. The operator must know, understand, and practice the safety rules and safe driving and load handling techniques described in this manual. To develop the skill required, the operator must become familiar with the construction and features of the lift truck and how they function, the operator must understand its capabilities and limitations, and see that it is kept in a safe condition.

Routine Servicing and Maintenance

Regular maintenance and care of your lift truck is not only important for economy and utilization reasons; it is essential for your safety. A faulty lift truck is a potential source of danger to the operator, and to other personnel working near it. As with all quality equipment, keep your lift truck in good operating condition by following the recommended schedule of maintenance.

Operator Daily Inspection - Safety and Operating Checks

A lift truck should always be examined by the operator, before driving, to be sure it is safe to operate. The importance of this procedure is emphasized in this manual with a brief illustrated review and later with more detailed instructions. HYUNDAI dealers can supply copies of a helpful **Drivers Daily Checklist**. It is an OSHA requirement.

Planned Maintenance

In addition to the daily operator inspection, HYUNDAI recommends that a planned maintenance and safety inspection program (PM) be performed by a trained and authorized mechanic on a regular basis. The PM will provide an opportunity to make a thorough inspection of the safety and operating condition of your lift truck. Necessary adjustments and repairs can be done during the PM, which will increase the life of components and reduce unscheduled downtime and increase safety. The PM can be scheduled to meet your particular application and lift truck usage.

The procedures for a periodic planned maintenance program that covers inspections, operational checks, cleaning, lubrication, and minor adjustments are outlined in this manual. Your HYUNDAI dealer is prepared to help you with a Planned Maintenance Program by trained service personnel who know your lift truck and can keep it operating safely and efficiently.

Service Manual

In-depth service information for trained service personnel is found in Service Manual.

HOW TO USE THIS MANUAL

This manual is a digest of essential information about the safe operation, the features and functions and explains how to maintain your lift truck. This manual is organized into ten major parts:

Section 1. Safety hints, reviews and illustrates accepted practices for safe operation of a lift truck.

Section 2. Operating Hazards, warns of conditions that could cause damage to the truck or injury to the operator or other personnel.

Section 3. Know Your Truck, describes the major operating components, systems, controls, and other features of your truck and tells how they function.

Section 4. Operator Maintenance and Care, presents details on how to perform the operator's daily safety inspection and refuel the lift truck.

Section 5. Starting and Operating Procedures, discusses specific instructions on the safe, efficient operation of your lift truck.

Section 6. Emergency Starting and Towing, gives instructions for towing your truck in an emergency and for using battery jumper cables to start your truck in an emergency.

Section 7. Planned Maintenance and Lubrication, describes the PM (Planned Maintenance) program.

Section 8. Specifications, provides reference information and data on features, components, and maintenance items.

Section 9. Troubleshooting, provides trouble symptoms, causes and methods of remedy.

Section 10. Testing and Adjusting, gives instructions for testing and adjusting.

※**The descriptions and specifications included in this manual were in effect at the time of printing.** HYUNDAI reserves the right to make improvements and changes in specifications or design, without notice and without incurring obligation. Please check with your authorized HYUNDAI dealer for information on possible updates or revisions.

The examples, illustrations, and explanations in this manual should help you improve your skill and knowledge as a professional lift truck operator and take full advantage of the capabilities and safety features of your new lift truck.

The first section of the manual is devoted to a review, with illustrations and brief messages, of general safety rules and the major operating hazards you can encounter while operating a lift truck. Next, you will find description's of the components of your specific lift truck model and how the instruments, gauges, and controls operate. Then, you will find a discussion of safe and efficient operating procedures, followed by instruction's on how to tow a disabled lift truck. The later sections of the manual are devoted to maintenance and truck specifications.

Take time to carefully read the **Know Your Truck** section. By acquiring a good basic understanding of your truck's features, and how they function, you are better prepared to operate it both efficiently and safely.

In **Planned Maintenance**, you will find essential information for correct servicing and periodic maintenance of your truck, including charts with recommended maintenance intervals and component capacities. Carefully follow these instructions and procedures.

Each major section has its own table of contents, so that you can find the various topics more easily.

We urge you to first carefully read the manual from cover to cover. Take time to read and understand the information on general safety rules and operating hazards. Acquaint yourself with the various procedures in this manual. Understand how all gauges, indicator lights, and controls function. Please contact your authorized HYUNDAI dealer for the answers to any questions you may have about your lift truck's features, operation, or manuals.

Operate your lift truck safely; careful driving is your responsibility.

Drive defensively and think about the safety of people who are working nearby. Know your truck's capabilities and limitations. Follow all instructions in this manual, including all symbols (▲, △, ※) and messages to avoid damage to your lift truck or the possibility of any harm to yourself or others.

This manual is intended to be a permanently attached part of your lift truck. Keep it on the truck as a ready reference for anyone who may drive or service it. If the truck you operate is not equipped with a manual, ask your supervisor to obtain one and have it attached to the truck. And, remember, your HYUNDAI dealer is pleased to answer any questions about the operation and maintenance of your lift truck and will provide you with additional information should you require it.

※ Illustrations may differ from your truck, but they are applicable to your truck.

EC REGULATION APPROVED

- Noise level (2000/14/EC and EN 12053) are as followings.

Model	LWA (EU only)	LPA
100D-9	107 dB	77.3 dB

 
- The value of vibrations transmitted by the operator's seat are lower than standard value of (2005/88/EC)



SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

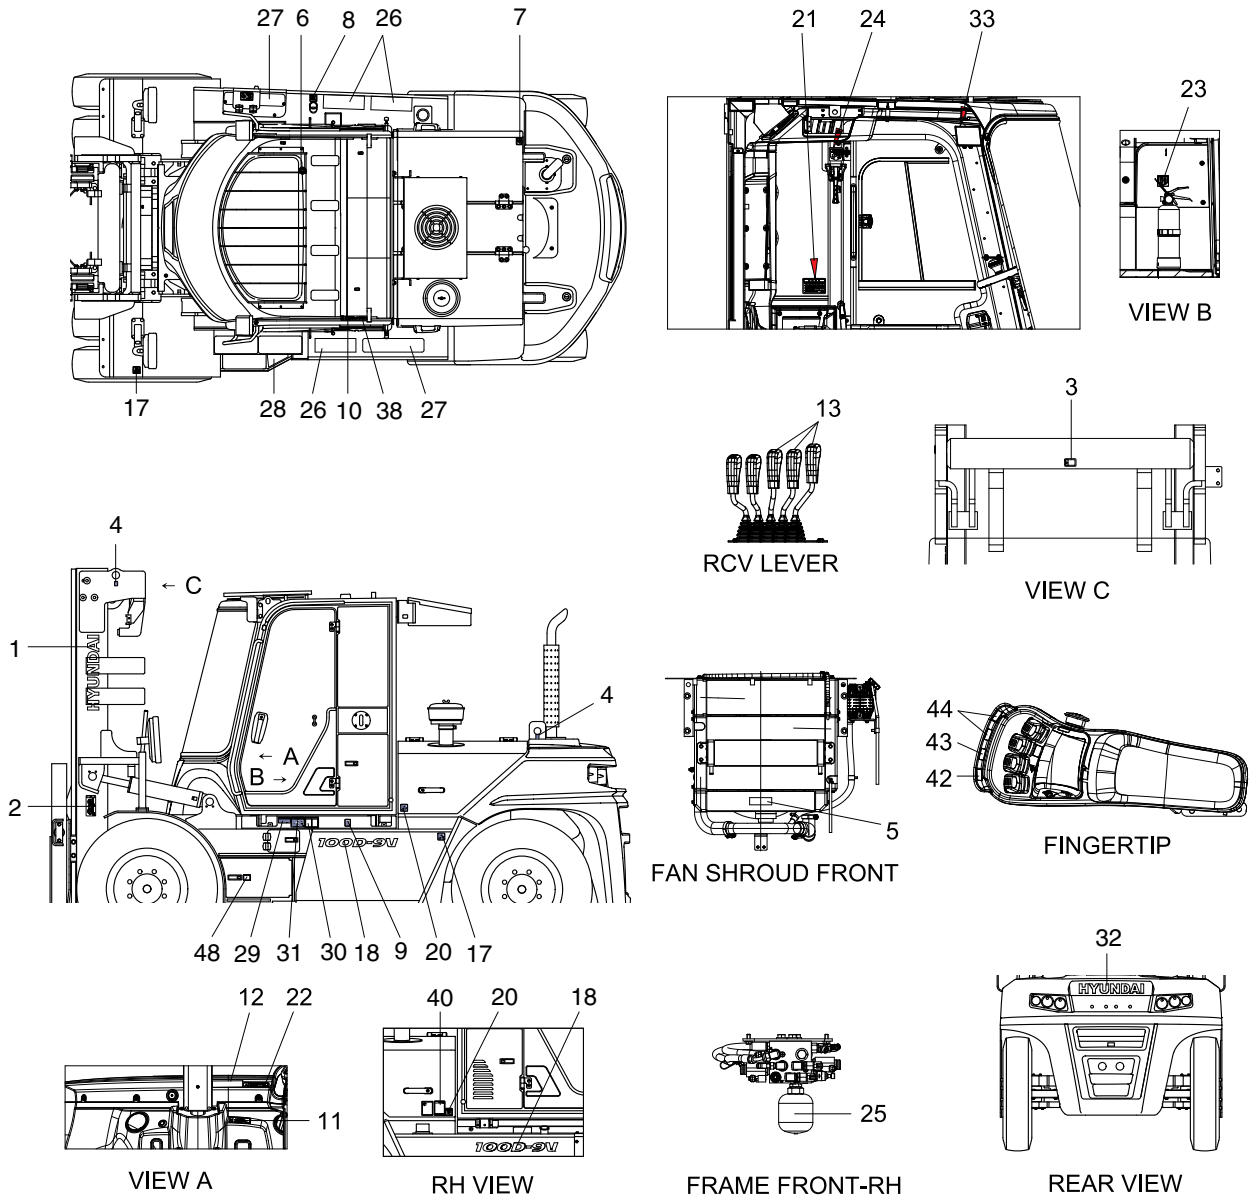

9ZFJ-00120-99

1 HYUNDAI logo	13 Attachment (option)	29 Tilt cabin warning
2 Mast warning	17 Tire	30 Cabin tilt lock
3 Hand caution	18 Model name	31 Warning cabin tilt
4 Hook	20 Engine room	32 HYUNDAI logo
5 Radiator & fan	21 Safety instruction	33 Name plate
6 Start key	22 Parking brake	40 Refrigerant regulation
7 Temperature	23 Fire extinguisher	42 Fork lift
8 Diesel fuel	24 Hammer	43 Fork tilt
9 Hydraulic oil	25 Accumulator	44 Attachment (option)
10 Warning safety	26 Safety work	48 Battery box
11 Start caution	27 Safety work	
12 Solid tire	28 Safety work	

2. DESCRIPTION

There are several specific warning labels on this truck please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

1) MAST WARNING (item 2)

This label is positioned on the both side of the mast.

- ⚠ **Never stand or work under the raised forks at any circumstances without supporting with block.**
- ⚠ **In case of working under the forks, it is essential to support the carriage with blocks.**



2) HAND CAUTION (item 3)

This label is positioned on the center side of the mast cross plate.

- ⚠ **It warns of the danger of injury from movement between rails, chains, sheaves, fork carriage, and other parts of the mast assembly. Do not climb on or reach into the mast. Personal injury will result if any part of your body is put between moving parts of the mast.**



3) HOOK (item 4)

This label is positioned on the both top side of mast and lifting bracket of the both side of the main frame.

- ⚠ **Refer to page 5-33 for safe loading procedures.**



4) RADIATOR & FAN (item 5)

This label is positioned on the cooling fan shroud of the radiator.

 
- ⚠ It warns of the danger or injury from spinning fan blades and forbid so open the cap of the surge tank because operator might get scalded due to spouting of hot water.
- ⚠ When the engine is running, be sure that you keep your hands, fingers, arms, and clothing away from a spinning fan.
- ⚠ Don't stand in line with a spinning fan. Fan blades can break at excessively high rpm and be thrown out of the engine compartment.
Never open the surge tank cap while engine running or at high coolant temperature.



5) TEMPERATURE (item 7)

This label is positioned on the top side of the RH cover.

- ⚠ Coolant must be checked as specified in the maintenance chart.

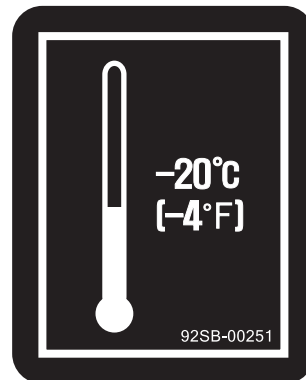

6) DIESEL FUEL (item 8)

This label is positioned on the top side of the fuel tank.

- ※ Fill only ultra low sulfur diesel.
- ※ Do not fill the gasoline.
- ※ Diesel engine must be operated only on commercially available diesel fuel that complies with EU standard or international standard. Do not use marine diesel fuel, heating oils, or non-approved fuel additives, as this will increase wear and cause damage to the engine and fuel system. The use of non-approved fuels and / or fuel additives will result in a limitation of your warranty rights.
- ※ If the engine is to be operated within the union on diesel or non-road gas-oil, a fuel with sulphur content not greater than 10 mg/kg (20 mg/kg at point of final distribution) and a FAME content not greater than 8 % v/v shall be used. Cetane number of 45 is minimum. Cetane number greater than 50 is preferred, especially for temperatures below -20°C (-4°F) or elevations above 1500 m (5000 ft).



7) HYDRAULIC OIL (item 9)

This label is positioned on the left side of the frame.


- ※ Fill only the hydraulic oil.
- ※ Do not fill the diesel fuel.



8) WARNING SAFETY (item 10)

This label is positioned on the top side of LH rear cover of the cabin inside.

- ① Refer to operator's manual in detail.
- ② Always buckle up the seat belt for safety operation.
- ③ When the operator get off the truck, always press the parking brake switch so that the truck can keep with stopping condition.
- ④ The people should not pass through under forks and other attachments which are lifted or being lifted.
- ⑤ Do not jump down from the truck. It can be caused that the operator have severe injury or death in the event of a tip over.
- ⑥ Outstretch the legs as widely as possible and grasp firmly the steering handle.
- ⑦ Lean the body to the opposite direction in order to avoid severe injury or death when the truck is tipped over.

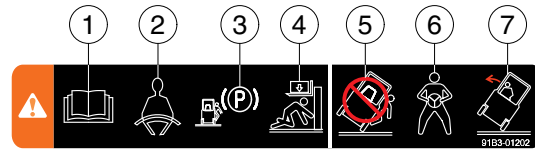

▲ Safety and warning labels are placed in conspicuous locations on the truck to remind you of essential procedures or to prevent you from making an error that could damage the truck or possibly cause personal injury. You should know, understand, and follow these instructions. Safety and warning labels. Should be replaced immediately if missing or defaced (Damaged or illegible). Refer to page 0-6 of this manual for the location of all labels.

▲ Operator/Tip-over warning label

This label is located on the upper left side of the drivers overhead. Its purpose is to remind the operator that staying in the seat provides the best chance of avoiding injury in the event of a truck-tipping or driving off a dock mishap.

 
Lift trucks can be tipped over if operated improperly. Experience with lift truck accidents has shown that the driver cannot react quickly enough to jump clear of the truck and overhead guard as the truck tips. To protect operators from severe injury or death in the event of a tip over, it is best to be held securely in the seat. So, please, always buckle up when driving your lift truck.

9) START CAUTION (item 11)

This label is located on the right side of the dashboard.

Warnings before leaving the operator seat.

- ① Be sure to lower the attachment to the ground.
- ② Apply the parking brake.

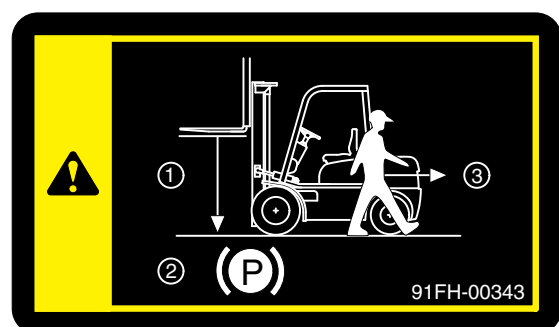

91FH-00343


10) SOLID TIRE (Item 12)

This label is located on the right top side of the dashboard.

※ **When "solid tires" are equipped.**

- (1) Do not travel more than 25 kph (16 mph).
- (2) Do not travel further than 8 km (5 miles) in an hour.
- (3) Do not drive on the road for automobile.
- (4) Be sure to check wheel nut tightness every 50 hours.
- (5) Retighten the wheel nuts after the first 10 hours after changing the wheel.

▲ **The durability of the solid tire is not guaranteed with non-compliance.**

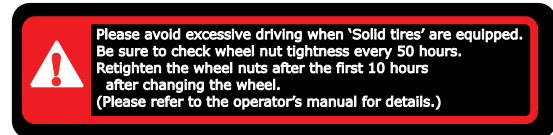


97HN-00911

11) TIRE PRESSURE (Item 17)

This label is positioned on the top side of the front left fender and rear left side of the frame.

▲ **Tire pressure must be checked in accordance planned maintenance intervals.**

 ▲ **Refer to page 5-3 for the regulated tire air pressure (A and B).**

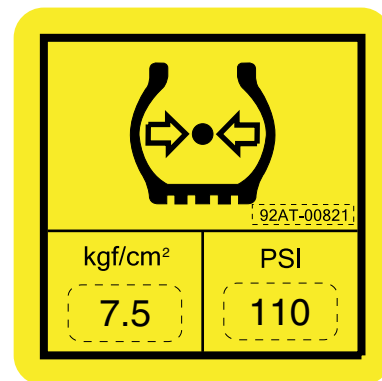

92AT-00801

12) ENGINE ROOM (Item 20)

This label is positioned on the door cover of the LH and RH side.

▲ **Do not wash the engine room.**



 
13) SAFETY INSTRUCTION (item 21)

This label is positioned on the inside of the rear left side of the cabin if the truck is equipped with *OPSS.

▲ This forklift is equipped with an operator existence sensing system per ISO 3691.

- Powered travel movement of the truck shall be possible only if the operator is in the normal operating position. Transmission will automatically shift to neutral upon the exiting of the operator.
- The gear selector lever must be cycled through neutral with the operator in the normal operating position to regain powered direction control.
- Control of mast tilting, lifting and lowering is not possible through operation of the appropriate control when the operator is not in the normal position.

Truck for travel and mast *OPSS

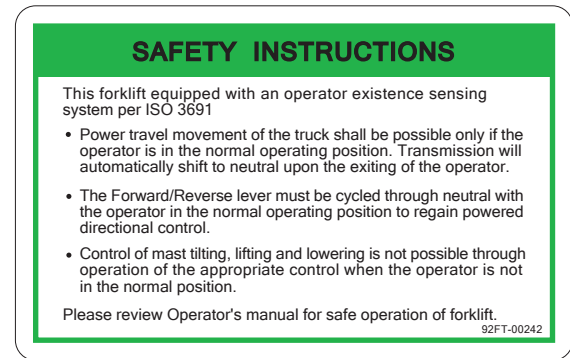


92FT-00242

*OPSS : Operator Presence Sensing System

14) PARKING BRAKE (item 22)

This label is located on the right top side of the dashboard.

 - ※ Refer to page 6-3 to release the parking brake manually for emergency towing.

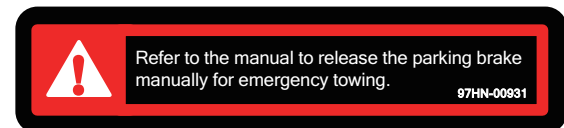

15) FIRE EXTINGUISHER (item 23)

This label is positioned on the inside of the left rear side of the cabin.

- ※ Read and understand the instructions adhered label on the fire extinguisher.



16) HAMER (Item 24)

This label is positioned on the inside of the left stay of the cabin.

 
- ※ The rear window serves as an alternate exit.
- ※ To remove the rear window, pull the ring and push out the glass.



17) ACCUMULATOR (item 25)

This label is positioned on the accumulator of the cutoff solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.
- ⚠ Never make any hole in the accumulator expose it to flame or fire.
- ⚠ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.

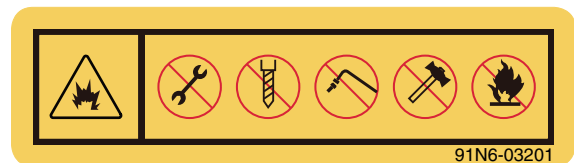


91N6-03201

18) TILT CABIN WARNING (Item 29)

This label is positioned on the left side of the frame.

 
- ⚠ When tilting the cab for service, the cab must be fully extended up or down.
- (1) To raise cab, depress the switch down until fully raised.
- (2) To lower cab, depress switch down until fully lowered.
- (3) Do not tilt cab when door opened.
- ⚠ Do not change the directional change lever manually when opening cab.

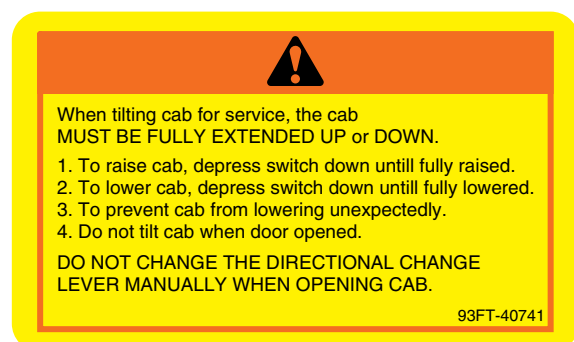

19) CABIN TILT LOCK (Item 30)

This label is positioned on the left side of the frame.

 
- (1) Release the cabin tilt lock assembly by turning the tilt lever to the UNLOCK position before tilting the cabin.
- (2) Lock the cabin tilt lock assembly by turning the tilt lever to the LOCK position after the cabin original position.

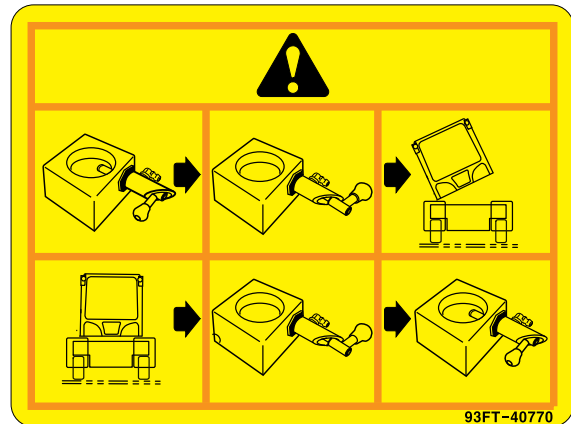

20) WARNING CABIN TILT (Item 31)

This label is positioned on the left side of the frame.

 - ⚠ Refer to page 7-16 for safe tilting procedure.

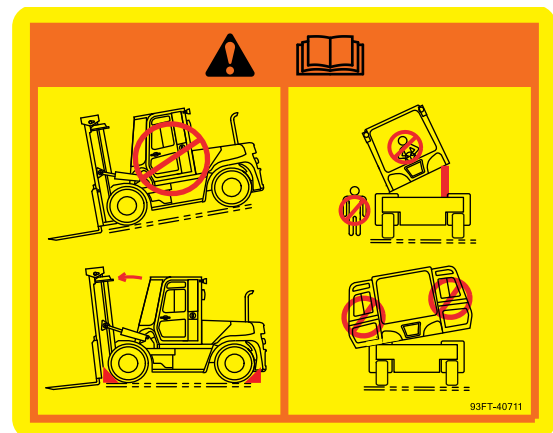

21) REFRIGERANT REGULATION (item 40)

This label is located on the door cover of the LH side.

- ⚠ Inhalation of A/C refrigerant gas in any form can result in serious injury or death.

- ※ Refer to page 7-48.

EN]Contains fluorinated greenhouse gases
BG]Съдържа флуоросъдържащи парникови газове
ES]Contiene gases fluorados de efecto invernadero
CS]Obsahuje fluorované skleníkové plyny
DK]Indeholder fluorholdige drivhusgasser
DE]Enthält fluorierte Treibhausgase
ET]sisaldab fluurituid kasvuhoonegaase
EL]Περιέχει φθοριούχα αέρια του θερμοκηπίου
FR]Contient des gaz à effet de serre fluorés
GA]Contains fluorinated greenhouse gases
HR]Sadržava fluorirane stakleničke plinove
IT]Contiene gas fluorurati a effetto serra
LV]Satur fluorētas siltumnīcefekta gāzes
LT]sudėtyje yra fluorintų šiltnamio efektą sukeliančių dujų
HU]Fluortartalmú üvegházhatású gázokat tartalmaz
MT]Fih gassijiet fluworurati b'effett ta' serra
NL]Bevat gefluoreerde broeikasgassen
PL]Zawiera fluorowane gazy cieplarniane
PT]Contém gases fluorados com efeito de estufa
RO]Conține gaze fluorurate cu efect de seră
SK]obsahuje fluórované skleníkové plyny
SL]vsebuje fluorirane toplogredne pline
FI]Sisältää fluorattuja kasvihuonekaasuja
SV]Innehåller fluorerade växthusgaser


HFC-134a	GWP : 1430
Total mass : 0.55	Total eq(CO2) : 0.79t

9DFQ-00401

9DFQ-00401

1. DIRECTION

 The directions of this truck indicate forward, backward, right and left when truck is in the travelling direction.

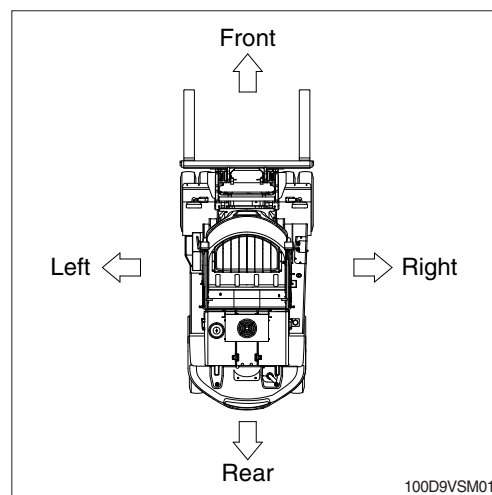


2. SERIAL NUMBER

Inform following when you order parts or the truck is out of order.


1) TRUCK SERIAL NUMBER

 It is shown on the right fender.

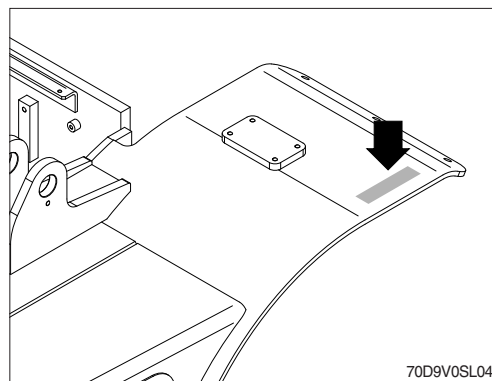

2) ENGINE SERIAL NUMBER

 The numbers are located on the engine name plate.

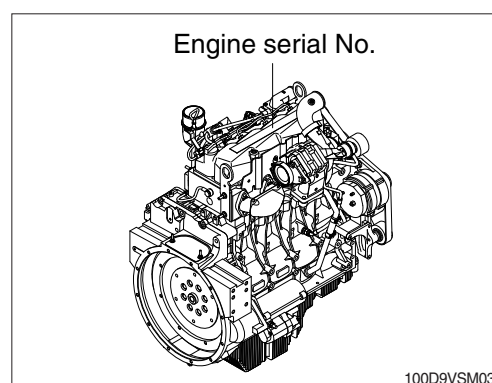

3. SYMBOLS

▲ Important safety hint.

△ It indicates matters which can cause the great loss on the truck or the surroundings.

※ It indicates the useful information for operator.