

CONTENTS

A message to hyundai lift truck operators	0-1
Introduction	0-2
How to use this manual	0-3
EC regulation approved	0-5
Safety labels	0-6
Guide (Direction, Serial number, Symbols)	0-16

1. SAFETY HINTS

1. Daily inspection	1-1
2. Do's and don'ts	1-2
3. Seat belt	1-4
4. No riders	1-5
5. Pedestrians	1-6
6. Operator protection	1-7
7. Fork safety	1-8
8. Pinch points	1-9
9. Travel	1-10
10. Grades, ramps, slopes, and inclines	1-11
11. Tip over	1-12
12. Surface and capacity	1-14
13. Parking	1-15
14. Refueling	1-16
15. Step	1-17
16. Operator's safety rules	1-18
17. Side shift and fork positioner (option)	1-19

2. OPERATING HAZARDS

1. Loose loads	2-1
2. Long and wide loads	2-2
3. Rear swing	2-2
4. Low overhead clearance	2-3
5. Fast turns and high loads	2-3
6. Right angle stacking	2-4
7. Chain slack	2-4
8. Pallets and skids	2-5
9. Caution for electrical lines	2-5
10. Lifting loads	2-6
11. Weight indicator (option)	2-7

3. KNOW YOUR TRUCK

1. General locations	3-1
2. Name plate	3-2
3. Cab devices	3-3
4. Cluster	3-4
5. Switches	3-42
6. Control devices	3-48
7. Air conditioner and heater	3-52
8. Others	3-54
9. Regeneration system	3-74

4. OPERATOR MAINTENANCE AND CARE

1. Daily safety inspection	4-1
2. Suggestion for new truck	4-3
3. Fuel safety practices	4-4
4. Engine oil service interval&management	4-5

5. STARTING AND OPERATING PROCEDURES

1. Before operating the truck	5-1
2. Check before operation	5-2
3. Check before starting engine	5-3
4. Seat adjustment	5-7
5. Starting from a safe condition	5-8
6. General starting and operating tips	5-9
7. Starting the engine	5-10
8. Check after starting engine	5-11
9. Warming up operation	5-13
10. Levers and pedals	5-14
11. Traveling of the truck	5-16
12. Operating safely	5-20
13. Load handling	5-22
14. Shut down procedure	5-28
15. Storage	5-29
16. Transport	5-31
17. Loading and unloading by crane	5-32

6. EMERGENCY PROCEDURES

- 1. How to tow a disabled truck 6-1
- 2. Parking brake release 6-3
- 3. How to use battery jumper cables 6-4
- 4. Emergency fork lowering 6-6
- 5. Key-lowering interlock 6-7

7. PLANNED MAINTENANCE AND LUBRICATION

- 1. Introduction 7-1
- 2. Safe maintenance practices 7-2
- 3. Instructions before maintenance 7-5
- 4. Planned maintenance intervals 7-8
- 5. How to perform planned maintenance 7-13
- 6. Service instruction..... 7-18
- 7. Electrical system 7-41
- 8. Air conditioner and heater 7-42
- 9. Replacement and check 7-44
- 10. Handling truck in extremely hot places 7-57
- 11. Cold weather operation
7-58
- 12. Recommendation table for lubricants 7-59
- 13. Fuel and lubricants 7-60

8. SPECIFICATIONS

- 1. Specification table 8-1
- 2. Specification for major components 8-2
- 3. Tightening torque 8-5

9. TROUBLESHOOTING

- 1. Engine system 9-1
- 2. Electrical system 9-3
- 3. Torque flow system 9-4
- 4. Steering system 9-8
- 5. Brake system 9-9
- 6. Hydraulic system 9-10
- 7. Mast and fork 9-11

10. TESTING AND ADJUSTING

- 1. Engine system 10-1
- 2. Drive system 10-4
- 3. Travel system 10-6
- 4. Steering system 10-7



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91B1-07310