

1. SAFETY HINTS

1. DAILY INSPECTION

At the beginning of each shift, inspect your battery tractor and fill out a check, maintenance and lubrication table.

Check for damage and maintenance problems.

Have repairs made before you operate the battery tractor.

Do not make repairs yourself. Battery tractor mechanics are trained professionals. They know how to make repairs safe.



2. DO'S AND DON'TS



Do watch for pedestrians.



Do wear safety equipment when required.



Don't mix drugs or alcohol with your job.




Don't block safety or emergency equipment.



Don't smoke in NO SMOKING areas or when charging.




Don't operate the truck outdoors in rainy day.

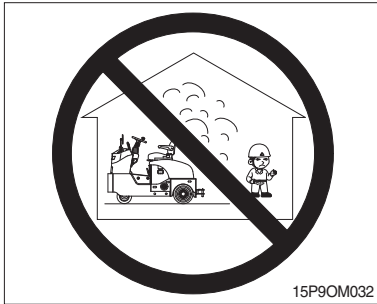


Don't perform battery charging service in the room without adequate ventilation.

3. SEAT BELTS

⚠ Always buckle up for the machine equipped with safety belt.

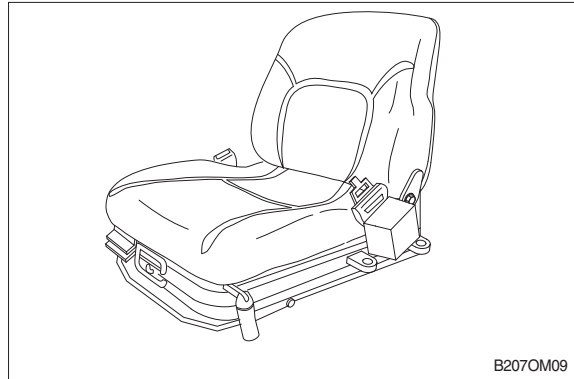


⚠ Seat belts can reduce injuries.

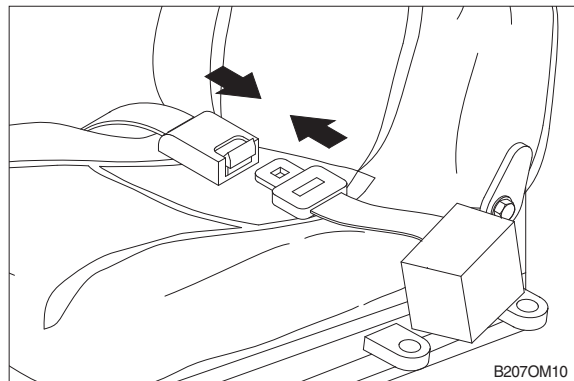

4. NO RIDERS


- 1) The operator is the only one who should be on a battery tractor.

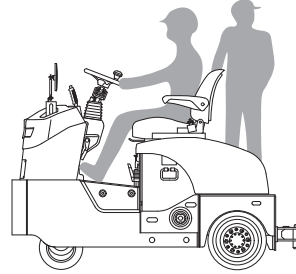


15P9OM11

5. PEDESTRIANS


- 1) Watch where you are going. Look in the direction of travel. Pedestrians may use the same roadway you do. Sound your horn at all intersections or blind spots.

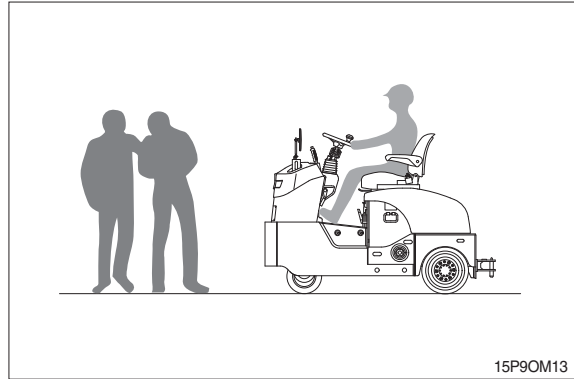

- 2) Watch for people in your work area even if your battery tractor has warning lights or alarms. People may not watch for you.

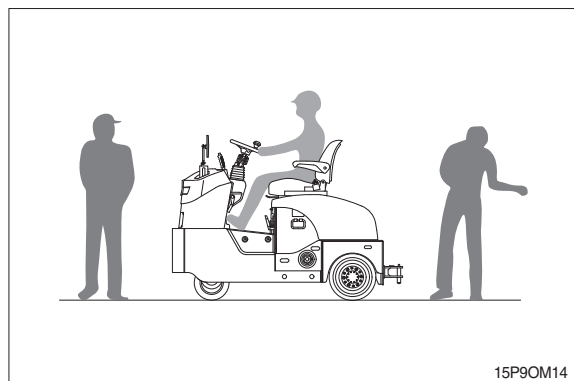


- 3) Make people stand back, even when you are parked.

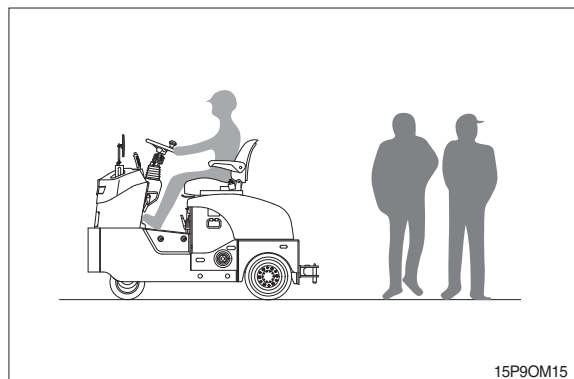

6. OPERATOR PROTECTION

1) Always keep your body within the confines of the tractor.


⚠ Always buckle up for the machine equipped with safety belt.

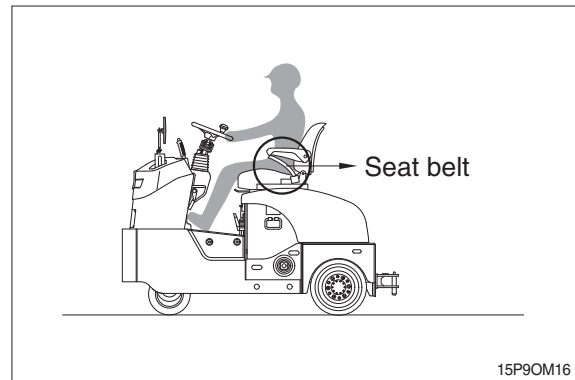

7. SURFACE AND CAPACITY


Avoid such as icy surface, oily surface or uneven ground, etc.. They can lose traction for braking or driving.

⚠ Know the weight of your tractor and load. Especially when using towing, know the capacity of the towing you intend to use. Do not overload.

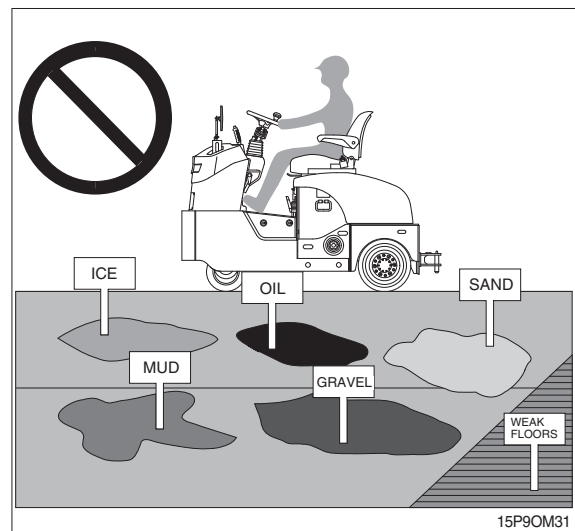


8. PARKING


- 1) Never park on a grade.

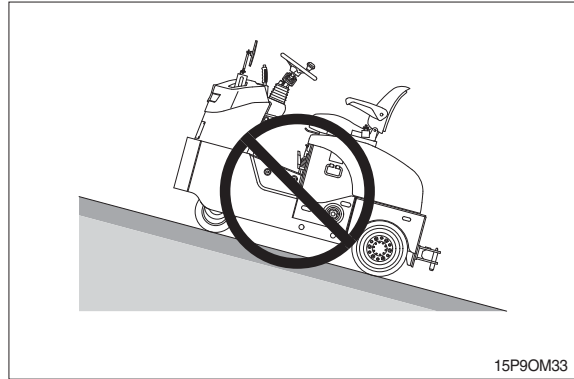


- 2) Always come to a complete stop before leaving tractor. Put the directional control lever in the neutral position.

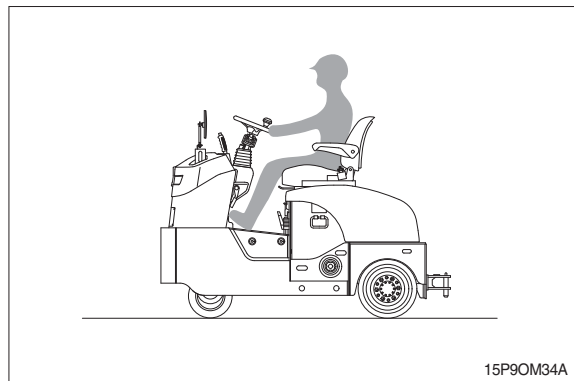

- 3) Put the parking brake lever to the lock position.

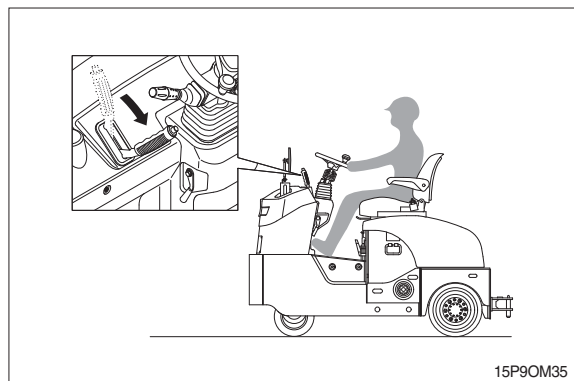


- 4) Turn start switch to OFF position.

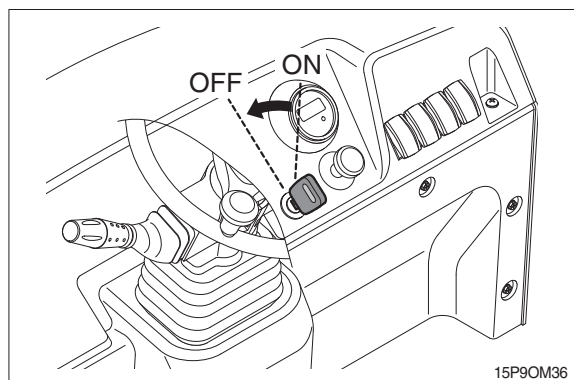

9. LOADING AND UNLOADING BY CRANE

- 1) Check the weight, length, width and height of the truck referring to the chapter 8, specifications when you are going to hoist the tractor.

⚠ Before loading the tractor, battery must be removed. Refer to page 5-4 for a safe battery removal.

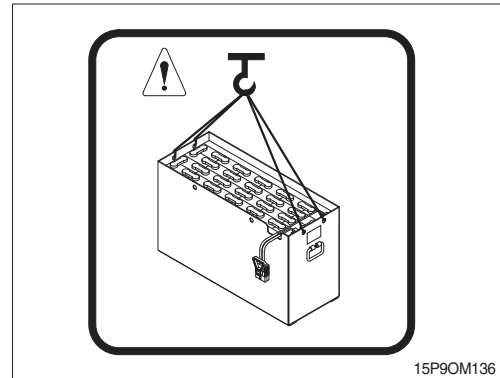


- 2) Use long wire rope and stay to keep the distance with the tractor as it should avoid touching with the truck body.
- 3) Put a rubber plate where the wire rope contact with the tractor's body to prevent damage.
- 4) Place crane on the proper place.
- 5) Install the wire rope and stay like the illustration.

⚠ Make sure wire rope is proper size.

⚠ The wrong hoisting method or installation of wire rope can cause damage to driver and tractor.

⚠ Do not load abruptly.

⚠ Keep area clear of personnel.

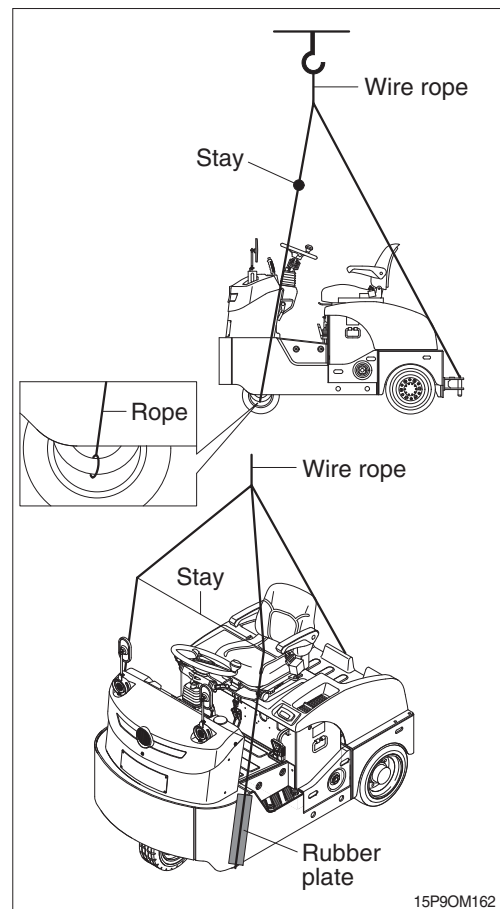

⚠ Do not install the wire to unsafe position such as seat, steering wheel, front cover, etc.. It can cause a serious damage to driver and tractor.

⚠ If there is any problem to lift a tractor, please contact your dealer.

⚠ Perform the lifting service with skilled service man.

