

CONTENTS

| | |
|---|------|
| A message to hyundai lift truck operators | 0-1 |
| Introduction | 0-2 |
| How to use this manual | 0-3 |
| Safety labels | 0-5 |
| Guide (direction, S/No, symbol) | 0-10 |

1. GENERAL SAFETY RULES

| | |
|--|------|
| 1. Daily inspection | 1-1 |
| 2. Do's and don'ts | 1-2 |
| 3. Seat belts | 1-3 |
| 4. No riders | 1-4 |
| 5. Pedestrians | 1-5 |
| 6. Operator protection | 1-6 |
| 7. Fork safety | 1-7 |
| 8. Pinch points | 1-8 |
| 9. Travel | 1-9 |
| 10. Grades, ramps, slopes and inclines | 1-10 |
| 11. Tip over | 1-11 |
| 12. Surface and capacity | 1-13 |
| 13. Parking | 1-14 |
| 14. Lifting, jacking and blocking | 1-15 |
| 15. Loading and unloading by crane | 1-20 |

2. OPERATING HAZARDS

| | |
|--|-----|
| 1. Loose loads | 2-1 |
| 2. Long and wide loads | 2-2 |
| 3. Rear swing | 2-2 |
| 4. Low overhead clearance | 2-3 |
| 5. Fast turns and high loads | 2-3 |
| 6. Drop-offs | 2-4 |
| 7. Right-angle stacking | 2-4 |
| 8. Chain slack | 2-5 |
| 9. Pallets and skids | 2-5 |
| 10. Caution for electrical lines | 2-6 |
| 11. Solid tire | 2-7 |

3. KNOW YOUR TRUCK

| | |
|--|------|
| 1. General locations | 3-1 |
| 2. Data/safety plates and decals | 3-2 |
| 3. Instruments and controls | 3-5 |
| 4. Instruments panel | 3-6 |
| 5. Operating switches and levers | 3-13 |
| 6. Seat adjustment | 3-17 |
| 7. Battery compartment access | 3-18 |

4. DAILY SAFETY INSPECTION

| | |
|------------------------------------|-----|
| 1. Inspecting your truck | 4-1 |
| 2. Visual checks | 4-2 |
| 3. Functional checks | 4-3 |
| 4. Concluding the inspection | 4-3 |

5. OPERATING PROCEDURES

| | |
|---|------|
| 1. Before operating the truck | 5-1 |
| 2. Starting from a safe condition | 5-1 |
| 3. Adjusting the seat | 5-2 |
| 4. Starting the truck | 5-3 |
| 5. Controlling Speed | 5-5 |
| 6. Braking | 5-5 |
| 7. Plugging | 5-5 |
| 8. Operating safely | 5-6 |
| 9. Load handling | 5-8 |
| 10. Shut down procedure | 5-14 |

6. EMERGENCY TOWING

| | |
|-----------------------------|-----|
| 1. Towing precautions | 6-1 |
| 2. Towing procedures | 6-2 |

7. PLANNED MAINTENANCE

| | |
|---------------------------------|-----|
| 1. Introduction | 7-1 |
| 2. Lift truck maintenance | 7-1 |
| 3. Planned maintenance | 7-1 |

| | |
|--|------|
| 4. Planned maintenance intervals | 7-2 |
| 5. Major component locations | 7-3 |
| 6. Daily maintenance checks | 7-4 |
| 7. Periodic maintenance checks | 7-5 |
| 8. Safe maintenance practices | 7-6 |
| 9. Maintenance guide | 7-8 |
| 10. Visual inspection | 7-12 |
| 11. Checking the hydraulic fluid | 7-15 |
| 12. Critical fastener checks | 7-15 |
| 13. Air cleaning the truck | 7-16 |
| 14. Electric truck battery maintenance | 7-17 |
| 15. Battery handling | 7-18 |
| 16. Battery charging | 7-19 |
| 17. Battery removal from truck | 7-21 |
| 18. Battery cleaning and care | 7-23 |
| 19. New machine oil | 7-24 |
| 20. Recommended lubricants | 7-24 |

8. SPECIFICATIONS

| | |
|---|-----|
| 1. Specification | 8-1 |
| 2. Specification for major components | 8-2 |
| 3. Tightening torque | 8-4 |