

# CONTENTS

## FOREWORD

A message to Hyundai lift truck operators .....	0-1
Introduction .....	0-2
How to use this manual .....	0-3
Ec regulation approved .....	0-5
Safety labels .....	0-6
Guide (Direction, Serial number, Symbols) .....	0-12

## 1. SAFETY HINTS

1. Daily inspection .....	1-1
2. Do's and don'ts .....	1-2
3. Seat belts .....	1-4
4. No riders .....	1-5
5. Pedestrians .....	1-6
6. Operator protection .....	1-7
7. Fork safety .....	1-8
8. Pinch points .....	1-9
9. Travel .....	1-10
10. Grades, ramps, slopes and inclines .....	1-11
11. Tip over .....	1-12
12. Surface and capacity .....	1-14
13. Parking .....	1-15
14. Refueling .....	1-16
15. Step .....	1-17
16. Operator's safety rules .....	1-18
17. Side shift .....	1-19

## 2. OPERATING HAZARDS

1. Loose loads .....	2-1
2. Long and wide loads .....	2-2
3. Rear swing .....	2-2
4. Low overhead clearance .....	2-3
5. Fast turns and high loads .....	2-3
6. Drop-offs .....	2-4
7. Right angle stacking .....	2-4
8. Chain slack .....	2-5
9. Pallets and skids .....	2-5
10. Caution for electrical lines .....	2-6

11. Lifting loads .....	2-7
12. Side shift .....	2-7
13. Fork positioner .....	2-9

### **3. KNOW YOUR TRUCK**

1. General locations .....	3-1
2. Data/safety plates and decals .....	3-2
3. Instruments and controls .....	3-4
4. Cluster .....	3-5
5. Operating lever and switch .....	3-40
6. Radio and USB player .....	3-45

### **4. OPERATOR MAINTENANCE AND CARE**

1. Daily safety inspection .....	4-1
2. Fuel safety practices .....	4-3
3. Engine oil service interval and management .....	4-4

### **5. STARTING AND OPERATING PROCEDURES**

1. Before operating the truck .....	5-1
2. Check before starting .....	5-2
3. Check before starting engine .....	5-3
4. Seat adjustment .....	5-8
5. Starting from a safe condition .....	5-9
6. General starting and operating tips .....	5-10
7. Starting the engine .....	5-11
8. Check after starting engine .....	5-12
9. Levers and pedals .....	5-14
10. Operating safely .....	5-16
11. Load handling .....	5-18
12. Shut down procedure .....	5-24

### **6. EMERGENCY STARTING AND TOWING**

1. How to tow a disabled truck .....	6-1
2. How to use battery jumper cables .....	6-3

### **7. PLANNED MAINTENANCE AND LUBRICATION**

1. Introduction .....	7-1
2. Safe maintenance practices .....	7-2
3. Instructions before maintenance .....	7-5

4. Planned maintenance intervals .....	7-8
5. How to perform planned maintenance .....	7-12
6. Replacement and check .....	7-15
7. Lubrication chart .....	7-37
8. Greasing point .....	7-38
9. Handling machine in extremely hot places .....	7-39
10. Cold weather operation .....	7-40
11. Storage .....	7-41
12. Transport .....	7-42
13. Loading and unloading by crane .....	7-43
14. Recommendation table for lubricants .....	7-44
15. Fuel and lubricants .....	7-45

## **8. SPECIFICATIONS**

1. Specification table .....	8-1
2. Specification for major components .....	8-2
3. Tightening torque .....	8-4

## **9. TROUBLESHOOTING**

1. Engine system .....	9-1
2. Electrical system .....	9-2
3. Torque flow system .....	9-3
4. Steering system .....	9-7
5. Brake system .....	9-8
6. Hydraulic system .....	9-9

## **10. TESTING AND ADJUSTING**

1. Engine system .....	10-1
2. Drive system .....	10-5
3. Travel system .....	10-8
4. Steering system .....	10-9