

CONTENTS

A message to hyundai lift truck operators	0-1
Introduction	0-2
How to use this manual	0-3
Safety labels	0-5
Guide (direction, S/No, symbol)	0-10

1. GENERAL SAFETY RULES

1. Daily inspection	1-1
2. Do's and don'ts	1-2
3. Seat belts	1-4
4. No riders	1-5
5. Pedestrians	1-6
6. Operator protection	1-7
7. Fork safety	1-8
8. Pinch points	1-9
9. Travel	1-10
10. Grades, ramps, slopes and inclines	1-11
11. Tip over	1-12
12. Surface and capacity	1-14
13. Parking	1-15
14. Lifting, jacking and blocking	1-16
15. Loading and unloading by crane	1-21
16. Side shift	1-22

2. OPERATING HAZARDS

1. Loose loads	2-1
2. Long and wide loads	2-2
3. Rear swing	2-2
4. Low overhead clearance	2-3
5. Fast turns and high loads	2-3
6. Drop-offs	2-4
7. Right-angle stacking	2-4
8. Chain slack	2-5
9. Pallets and skids	2-5
10. Caution for electrical lines	2-6
11. Side shift	2-7
12. Fork positioner	2-8
13. Solid tire	2-9

3. KNOW YOUR TRUCK

1. General locations	3-1
2. Data/safety plates and decals	3-2
3. Instruments and controls	3-5
4. Instruments panel	3-6
5. Operating switches and levers	3-13
6. Seat adjustment	3-19
7. Battery compartment access	3-20

4. DAILY SAFETY INSPECTION

1. Inspecting your truck	4-1
2. Visual checks	4-2
3. Functional checks	4-3
4. Concluding the inspection	4-3

5. OPERATING PROCEDURES

1. Before operating the truck	5-1
2. Starting from a safe condition	5-1
3. Adjusting the seat	5-2
4. Starting the truck	5-3
5. Controlling Speed	5-5
6. Braking	5-5
7. Plugging	5-5
8. Operating safely	5-6
9. Load handling	5-8
10. Shut down procedure	5-14

6. EMERGENCY TOWING

1. Towing precautions	6-1
2. Towing procedures	6-2

7. PLANNED MAINTENANCE

1. Introduction	7-1
2. Lift truck maintenance	7-1
3. Planned maintenance	7-1

4. Planned maintenance intervals	7-2
5. Major component locations	7-3
6. Daily maintenance checks	7-4
7. Periodic maintenance checks	7-5
8. Safe maintenance practices	7-6
9. Maintenance guide	7-8
10. Visual inspection	7-12
11. Checking the hydraulic fluid	7-15
12. Critical fastener checks	7-15
13. Air cleaning the truck	7-16
14. Electric truck battery maintenance	7-17
15. Battery handling	7-18
16. Battery charging	7-19
17. Battery removal from truck	7-21
18. Battery cleaning and care	7-23
19. New machine oil	7-24
20. Recommended lubricants	7-24

8. SPECIFICATIONS

1. Specification	8-1
2. Specification for major components	8-2
3. Tightening torque	8-4