

1. SAFETY HINTS

1. Daily inspection	1-1
2. Do's and don'ts	1-2
3. Seat belts	1-4
4. No riders	1-5
5. Pedestrians	1-6
6. Operator protection	1-7
7. Fork safety	1-8
8. Pinch points	1-9
9. Travel	1-10
10. Grades, ramps, slopes and inclines	1-11
11. Tip over	1-12
12. Surface and capacity	1-14
13. Parking	1-15
14. Refueling	1-16
15. Step	1-17
16. Operator's safety rules	1-18

2. OPERATING HAZARDS

1. Loose loads	2-1
2. Long and wide loads	2-2
3. Rear swing	2-2
4. Low overhead clearance	2-3
5. Fast turns and high loads	2-3
6. Right angle stacking	2-4
7. Chain slack	2-4
8. Pallets and skids	2-5
9. Caution for electrical lines	2-5
10. Lifting loads	2-6

3. KNOW YOUR TRUCK

1. General locations	3-1
2. Data/safety plate and decal	3-2
3. Cab devices	3-4
4. Cluster	3-5
5. Transmission message indicator	3-14
6. Switches and lamps	3-18

7. Control device	3-26
8. Air conditioner and heater	3-29
9. Others	3-31

4. OPERATOR MAINTENANCE AND CARE

1. Daily safety inspection	4-1
2. Suggestion for new truck	4-3
3. Fuel safety practices	4-4
4. Engine oil service interval and management	4-5

5. STARTING AND OPERATING PROCEDURES

1. Before operating the truck	5-1
2. Check before operation	5-2
3. Check before starting engine	5-3
4. Seat adjustment	5-8
5. Starting from a safe condition	5-9
6. General starting and operating tips	5-10
7. Starting and stopping the engine	5-11
8. Warming-up operation	5-16
9. Levers and pedals	5-17
10. Traveling of the truck	5-19
11. Operating safely	5-23
12. Load handling	5-25
13. Shut down procedure	5-31
14. Storage	5-32
15. Transport	5-33
16. Loading and unloading by crane	5-34

6. EMERGENCY STARTING AND TOWING

1. How to tow a disabled truck	6-1
2. How to use battery jumper cables	6-3

7. PLANNED MAINTENANCE AND LUBRICATION

1. Introduction	7-1
2. Safe maintenance practices	7-2
3. Instructions before maintenance	7-5
4. Planned maintenance intervals	7-8
5. Maintenance chart	7-12

6. Service instruction	7-17
7. Electrical system	7-46
8. Air conditioner and heater	7-47
9. Replacement and check	7-48
10. Handling truck in extremely hot places	7-56
11. Cold weather operation	7-57
12. Recommendation table for lubricants	7-58
13. Fuel and lubricants	7-59

8. SPECIFICATIONS

1. Specification table	8-1
2. Specification for major components	8-2
3. Tightening torque	8-4

9. TROUBLESHOOTING

1. Engine system	9-1
2. Electrical system	9-2
3. Torque flow system	9-3
4. Steering system	9-7
5. Brake system	9-8
6. Hydraulic system	9-9

10. TESTING AND ADJUSTING

1. Engine system	10-1
2. Drive system	10-4
3. Travel system	10-6
4. Steering system	10-7



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91B1-07310