

# CONTENTS

|                                                 |      |
|-------------------------------------------------|------|
| A message to hyundai lift truck operators ..... | 0-1  |
| Introduction .....                              | 0-2  |
| How to use this manual .....                    | 0-3  |
| EC regulation approved .....                    | 0-5  |
| Safety labels .....                             | 0-6  |
| Guide (Direction, Serial number, Symbols) ..... | 0-13 |

## 1. SAFETY HINTS

|                                                   |      |
|---------------------------------------------------|------|
| 1. Daily inspection .....                         | 1-1  |
| 2. Do's and don'ts .....                          | 1-2  |
| 3. Seat belts .....                               | 1-4  |
| 4. No riders .....                                | 1-5  |
| 5. Pedestrians .....                              | 1-6  |
| 6. Operator protection .....                      | 1-7  |
| 7. Fork safety .....                              | 1-8  |
| 8. Pinch points .....                             | 1-9  |
| 9. Travel .....                                   | 1-10 |
| 10. Grades, ramps, slopes and inclines .....      | 1-11 |
| 11. Tip over .....                                | 1-12 |
| 12. Surface and capacity .....                    | 1-14 |
| 13. Parking .....                                 | 1-15 |
| 14. Step .....                                    | 1-16 |
| 15. Operator's safety rules .....                 | 1-17 |
| 16. Side shift and fork positioner (option) ..... | 1-18 |

## 2. OPERATING HAZARDS

|                                        |     |
|----------------------------------------|-----|
| 1. Loose loads .....                   | 2-1 |
| 2. Long and wide loads .....           | 2-2 |
| 3. Rear swing .....                    | 2-2 |
| 4. Low overhead clearance .....        | 2-3 |
| 5. Fast turns and high loads .....     | 2-3 |
| 6. Drop-offs .....                     | 2-4 |
| 7. Right angle stacking .....          | 2-4 |
| 8. Chain slack .....                   | 2-5 |
| 9. Pallets and skids .....             | 2-5 |
| 10. Caution for electrical lines ..... | 2-6 |
| 11. Lifting loads .....                | 2-7 |
| 12. Solid tire .....                   | 2-8 |
| 13. Weight indicator (option) .....    | 2-8 |

## 3. KNOW YOUR TRUCK

|                            |      |
|----------------------------|------|
| 1. General locations ..... | 3-1  |
| 2. Name plate .....        | 3-2  |
| 3. Cab devices .....       | 3-3  |
| 4. Cluster .....           | 3-4  |
| 5. Switches .....          | 3-33 |
| 6. Control devices .....   | 3-37 |
| 7. Fuel system .....       | 3-41 |
| 8. Others .....            | 3-42 |

## 4. OPERATOR MAINTENANCE AND CARE

|                                                 |     |
|-------------------------------------------------|-----|
| 1. Daily safety inspection .....                | 4-1 |
| 2. Suggestion for new truck .....               | 4-3 |
| 3. Refueling LPG tank .....                     | 4-4 |
| 4. Safety precedures for LPG truck .....        | 4-5 |
| 5. Engine oil service interval&management ..... | 4-6 |

## 5. STARTING AND OPERATING PROCEDURES

|                                              |      |
|----------------------------------------------|------|
| 1. Before operating the truck .....          | 5-1  |
| 2. Check before starting .....               | 5-2  |
| 3. Check before starting engine .....        | 5-3  |
| 4. Seat adjustment .....                     | 5-7  |
| 5. Starting from a safe condition .....      | 5-8  |
| 6. General starting and operating tips ..... | 5-9  |
| 7. Starting the engine .....                 | 5-10 |
| 8. Check after starting engine .....         | 5-11 |
| 9. Levers and pedals .....                   | 5-13 |
| 10. Traveling of the truck .....             | 5-15 |
| 11. Operating safely .....                   | 5-19 |
| 12. Load handling .....                      | 5-21 |
| 13. Shut down procedure .....                | 5-27 |
| 14. Storage .....                            | 5-28 |
| 15. Transport .....                          | 5-29 |
| 16. Loading and unloading by crane .....     | 5-30 |

## **6. EMERGENCY PROCEDURES**

- 1. How to tow a disabled truck ..... 6-1
- 2. How to use battery jumper cables ..... 6-3
- 3. Parking brake release ..... 6-5
- 4. Emergency fork lowering ..... 6-6
- 5. Key-lowering interlock ..... 6-7

## **7. PLANNED MAINTENANCE AND LUBRICATION**

- 1. Introduction ..... 7-1
- 2. Safe maintenance practices ..... 7-2
- 3. Instructions before maintenance ..... 7-5
- 4. Planned maintenance intervals ..... 7-8
- 5. How to perform planned maintenance ..... 7-12
- 6. Service instruction ..... 7-15
- 7. Electrical system ..... 7-32
- 8. Air conditioner and heater ..... 7-33
- 9. Replacement and check ..... 7-34
- 10. Handling truck in extremely hot places ..... 7-46
- 11. Cold weather operation ..... 7-47
- 12. Recommendation table for lubricants ..... 7-48
- 13. Fuel and lubricants ..... 7-49

## **8. INFORMATION FOR LPG**

- 1. Foreword ..... 8-1
- 2. Starting engine ..... 8-1
- 3. LPG device components ..... 8-2
- 4. LPG tank and related parts ..... 8-3
- 5. Changing the LPG tank ..... 8-4
- 6. Recommended safety maintenance procedures ..... 8-6
- 7. Installation ..... 8-7

## **9. SPECIFICATIONS**

- 1. Specification table ..... 9-1
- 2. Specification for major components ..... 9-2
- 3. Tightening torque ..... 9-5

## **10. TROUBLESHOOTING**

- 1. Engine system ..... 10-1
- 2. Electrical system ..... 10-2
- 3. Torque flow system ..... 10-3
- 4. Steering system ..... 10-7
- 5. Brake system ..... 10-8
- 6. Hydraulic system ..... 10-9
- 7. Mast and fork ..... 10-10

## **11. TESTING AND ADJUSTING**

- 1. Engine system ..... 11-1
- 2. Drive system ..... 11-4
- 3. Travel system ..... 11-6
- 4. Steering system ..... 11-7