

CONTENTS

A message to hyundai lift truck operators	0-1
Introduction	0-2
How to use this manual	0-3
EC regulation approved	0-5
Safety labels	0-6
Guide (Direction, Serial number, Symbols)	0-14

1. SAFETY HINTS

1. Daily inspection	1-1
2. Do's and don'ts	1-2
3. Seat belts	1-4
4. No riders	1-5
5. Pedestrians	1-6
6. Operator protection	1-7
7. Fork safety	1-8
8. Pinch points	1-9
9. Travel	1-10
10. Grades, ramps, slopes and inclines	1-11
11. Tip over	1-12
12. Surface and capacity	1-14
13. Parking	1-15
14. Step	1-16
15. Operator's safety rules	1-17
16. Side shift and fork positioner (option)	1-18

2. OPERATING HAZARDS

1. Loose loads	2-1
2. Long and wide loads	2-2
3. Rear swing	2-2
4. Low overhead clearance	2-3
5. Fast turns and high loads	2-3
6. Drop-offs	2-4
7. Right angle stacking	2-4
8. Chain slack	2-5
9. Pallets and skids	2-5
10. Caution for electrical lines	2-6
11. Lifting loads	2-7
12. Solid tire	2-8
13. Weight indicator (option)	2-8

3. KNOW YOUR TRUCK

1. General locations	3-1
2. Name plate	3-2
3. Cab devices	3-3
4. Cluster	3-4
5. Switches	3-33
6. Control devices	3-37
7. Fuel system	3-41
8. Air conditioner and heater (option)	3-42
9. Others	3-44

4. OPERATOR MAINTENANCE AND CARE

1. Daily safety inspection	4-1
2. Suggestion for new truck	4-3
3. Refueling LPG tank	4-4
4. Safety precedures for LPG truck	4-5
5. Engine oil service interval&management	4-6

5. STARTING AND OPERATING PROCEDURES

1. Before operating the truck	5-1
2. Check before starting	5-2
3. Check before starting engine	5-3
4. Seat adjustment	5-7
5. Starting from a safe condition	5-8
6. General starting and operating tips	5-9
7. Starting the engine	5-10
8. Check after starting engine	5-11
9. Levers and pedals	5-13
10. Traveling of the truck	5-15
11. Operating safely	5-19
12. Load handling	5-21
13. Shut down procedure	5-27
14. Storage	5-28
15. Transport	5-29
16. Loading and unloading by crane	5-30

6. EMERGENCY PROCEDURES

- 1. How to tow a disabled truck 6-1
- 2. How to use battery jumper cables 6-3
- 3. Parking brake release 6-5
- 4. Emergency fork lowering 6-6
- 5. Key-lowering interlock 6-7

7. PLANNED MAINTENANCE AND LUBRICATION

- 1. Introduction 7-1
- 2. Safe maintenance practices 7-2
- 3. Instructions before maintenance 7-5
- 4. Planned maintenance intervals 7-8
- 5. How to perform planned maintenance 7-12
- 6. Service instruction..... 7-15
- 7. Electrical system 7-32
- 8. Air conditioner and heater 7-33
- 9. Replacement and check 7-34
- 10. Handling truck in extremely hot places 7-46
- 11. Cold weather operation 7-47
- 12. Recommendation table for lubricants 7-48
- 13. Fuel and lubricants 7-49

8. INFORMATION FOR LPG

- 1. Foreword 8-1
- 2. Starting engine 8-1
- 3. LPG device components 8-2
- 4. LPG tank and related parts 8-3
- 5. Changing the LPG tank 8-4
- 6. Recommended safety maintenance procedures 8-6
- 7. Installation 8-7

9. SPECIFICATIONS

- 1. Specification table 9-1
- 2. Specification for major components 9-2
- 3. Tightening torque 9-5

10. TROUBLESHOOTING

- 1. Engine system 10-1
- 2. Electrical system 10-2
- 3. Torque flow system 10-3
- 4. Steering system 10-7
- 5. Brake system 10-8
- 6. Hydraulic system 10-9
- 7. Mast and fork 10-10

11. TESTING AND ADJUSTING

- 1. Engine system 11-1
- 2. Drive system 11-4
- 3. Travel system 11-6
- 4. Steering system 11-7