

FOREWORD

A message to hyundai lift truck operators	0-1
Introduction	0-2
How to use this manual	0-3
EC regulation approved	0-5
Safety labels	0-6
Guide (Direction, Serial number, Symbols)	0-13

1. SAFETY HINTS

1. Daily inspection	1-1
2. Do's and don'ts	1-2
3. Seat belts	1-4
4. No riders	1-5
5. Pedestrians	1-6
6. Operator protection	1-7
7. Fork safety	1-8
8. Pinch points	1-9
9. Travel	1-10
10. Grades, ramps, slopes and inclines	1-11
11. Tip over	1-12
12. Surface and capacity	1-14
13. Parking	1-15
14. Refueling	1-16
15. Step	1-17
16. Operator's safety rules	1-18
17. Side shift	1-19

2. OPERATING HAZARDS

1. Loose loads	2-1
2. Long and wide loads	2-2
3. Rear swing	2-2
4. Low overhead clearance	2-3
5. Fast turns and high loads	2-3
6. Drop-offs	2-4
7. Right angle stacking	2-4
8. Chain slack	2-5

9. Pallets and skids	2-5
10. Caution for electrical lines	2-6
11. Lifting loads	2-7
12. Side shift	2-7
13. Fork positioner	2-9

3. KNOW YOUR TRUCK

1. General locations	3-1
2. Data/safety plates and decals	3-2
3. Cab devices	3-4
4. Cluster	3-5
5. Switches	3-43
6. Control devices	3-48
7. Air conditioner and heater	3-52
8. Others	3-54

4. OPERATOR MAINTENANCE AND CARE

1. Daily safety inspection	4-1
2. Suggestion for new machine	4-3
3. Fuel safety practices	4-4
4. Engine oil service interval and management	4-5

5. STARTING AND OPERATING PROCEDURES

1. Before operating the truck	5-1
2. Check before starting	5-2
3. Check before starting engine	5-3
4. Seat adjustment	5-8
5. Starting from a safe condition	5-9
6. General starting and operating tips	5-10
7. Starting the engine	5-11
8. Check after starting engine	5-12
9. Levers and pedals	5-14
10. Traveling of the truck	5-16
11. Operating safely	5-20
12. Load handling	5-22
13. Shut down procedure	5-28
14. Storage	5-29
15. Transport	5-30
16. Loading and unloading by crane	5-31

6. EMERGENCY STARTING AND TOWING

- | | |
|---|-----|
| 1. How to tow a disabled truck | 6-1 |
| 2. How to use battery jumper cables | 6-3 |

7. PLANNED MAINTENANCE AND LUBRICATION

- | | |
|--|------|
| 1. Introduction | 7-1 |
| 2. Safe maintenance practices | 7-2 |
| 3. Instructions before maintenance | 7-5 |
| 4. Planned maintenance intervals | 7-8 |
| 5. How to perform planned maintenance | 7-12 |
| 6. Service instruction | 7-15 |
| 7. Electrical system | 7-37 |
| 8. Air conditioner and heater | 7-38 |
| 9. Replacement and check | 7-39 |
| 10. Handling machine in extremely hot places | 7-52 |
| 11. Cold weather operation | 7-53 |
| 12. Recommendation table for lubricants | 7-54 |
| 13. Fuel and lubricants | 7-55 |

8. SPECIFICATIONS

- | | |
|---|-----|
| 1. Specification table | 8-1 |
| 2. Specification for major components | 8-2 |
| 3. Tightening torque | 8-4 |

9. TROUBLESHOOTING

- | | |
|-----------------------------|------|
| 1. Engine system | 9-1 |
| 2. Electrical system | 9-2 |
| 3. Torque flow system | 9-3 |
| 4. Steering system | 9-7 |
| 5. Brake system | 9-8 |
| 6. Hydraulic system | 9-9 |
| 7. Mast and fork | 9-10 |

10. TESTING AND ADJUSTING

- | | |
|--|------|
| 1. Engine system | 10-1 |
| 2. Drive system | 10-4 |
| 3. Travel system | 10-7 |
| 4. Steering system | 10-8 |
| 5. Adjustment of parking brake lever | 10-9 |



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91B1-07310