

CONTENTS

A message to hyundai lift truck operators	0-1	13. Fork positioner	2-9
Introduction	0-2	14. Solid tire	2-9
How to use this manual	0-3	15. Weight indicator (option)	2-9
EC regulation approved	0-5		
Safety labels	0-6		
Guide (Direction, Serial number, Symbols)	0-13		
1. SAFETY HINTS			
1. Daily inspection	1-1	1. General locations	3-1
2. Do's and don'ts	1-2	2. Name plate	3-2
3. Seat belts	1-4	3. Cab devices	3-3
4. No riders	1-5	4. Cluster	3-4
5. Pedestrians	1-6	5. Switches	3-36
6. Operator protection	1-7	6. Control devices	3-40
7. Fork safety	1-8	7. Air conditioner and heater	3-44
8. Pinch points	1-9	8. Others	3-46
9. Travel	1-10	9. Regeneration system	3-61
10. Grades, ramps, slopes and inclines	1-11		
11. Tip over	1-12		
12. Surface and capacity	1-14		
13. Parking	1-15		
14. Refueling	1-16		
15. Step	1-17		
16. Operator's safety rules	1-18		
17. Side shift	1-19		
2. OPERATING HAZARDS			
1. Loose loads	2-1	1. Before operating the truck	5-1
2. Long and wide loads	2-2	2. Check before starting	5-2
3. Rear swing	2-2	3. Check before starting engine	5-3
4. Low overhead clearance	2-3	4. Seat adjustment	5-7
5. Fast turns and high loads	2-3	5. Starting from a safe condition	5-8
6. Drop-offs	2-4	6. General starting and operating tips	5-9
7. Right angle stacking	2-4	7. Starting the engine	5-10
8. Chain slack	2-5	8. Check after starting engine	5-11
9. Pallets and skids	2-5	9. Levers and pedals	5-13
10. Caution for electrical lines	2-6	10. Traveling of the truck	5-15
11. Lifting loads	2-7	11. Operating safely	5-19
12. Side shift	2-7	12. Load handling	5-21
		13. Shut down procedure	5-27
		14. Storage	5-28
		15. Transport	5-29
		16. Loading and unloading by crane	5-30

6. EMERGENCY PROCEDURES

1. How to tow a disabled truck	6-1
2. How to use battery jumper cables	6-3
3. Emergency fork lowering	6-5
4. Key-lowering interlock	6-6

7. PLANNED MAINTENANCE AND LUBRICATION

1. Introduction	7-1
2. Safe maintenance practices	7-2
3. Instructions before maintenance	7-5
4. Planned maintenance intervals	7-8
5. How to perform planned maintenance	7-13
6. Service instruction.....	7-16
7. Electrical system	7-36
8. Air conditioner and heater	7-37
9. Replacement and check	7-38
10. Handling truck in extremely hot places	7-50
11. Cold weather operation	7-51
12. Recommendation table for lubricants	7-52
13. Fuel and lubricants	7-53

8. SPECIFICATIONS

1. Specification table	8-1
2. Specification for major components	8-2
3. Tightening torque	8-5

9. TROUBLESHOOTING

1. Engine system	9-1
2. Electrical system	9-3
3. Torque flow system	9-4
4. Steering system	9-8
5. Brake system	9-9
6. Hydraulic system	9-10
7. Mast and fork	9-11

10. TESTING AND ADJUSTING

1. Engine system	10-1
2. Drive system	10-4
3. Travel system	10-6
4. Steering system	10-7