

## 6. EMERGENCY STARTING AND TOWING


### 1. HOW TO TOW A DISABLED TRUCK

If your lift truck becomes disabled but it can be moved freely on its own wheels without further damage, use the following procedures to tow it safely to a repair area.

△ It is important for your safety and the care of your lift truck to use the proper equipment and carefully follow these recommendations for safe towing.

▲ DO NOT tow a lift truck if there is a problem with the brakes or tires or the steering cannot be operated. DO NOT tow up or down ramps and steep inclines. DO NOT attempt to tow a lift truck if traction or weather conditions are poor.

- 1) Be sure to apply the parking brake or block the drive wheels on the disabled truck while working around it.
- 2) When possible, raise the carriage (forks) on the disabled truck about 300 mm (12 in) from the floor or ground. Secure the carriage with a chain.
- 3) Obtain another lift truck of equal or larger size carrying a partial load for traction.
- 4) Check that the counterweight bolts are in place and properly torqued. (This bolt is made of a special high tensile steel and is not commercially available. Replace it, when necessary, only with a genuine HYUNDAI replacement part).
- 5) Use an approved, solid metal tow bar with towing couplers that connect to the towing pins in the counterweights.
- 6) Release the parking brake on the towed truck.
- 7) Put the directional control lever in the NEUTRAL position.

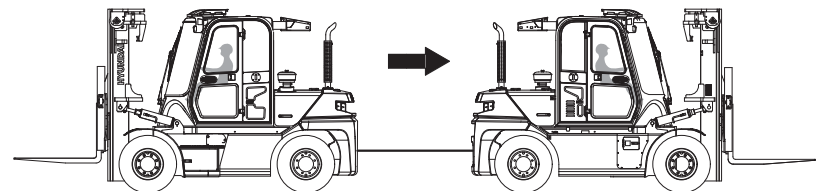

50D9OM144


- 8) Tow the disabled truck backward. An operator must be on the towed truck.

Tow the truck slowly. Careful towing is necessary to prevent injury to personnel or damage to the truck. The truck should be towed at a speed of less than 8 km/h (5 mph) with a driver in the seat. Do not lift the truck or any wheels off the floor or ground while the truck is being towed.

▲ The power steering will not operate on the disabled truck when the engine is not running.

- 9) Park the disabled truck in authorized areas only. Fully lower the forks to the floor, put the directional control lever in the NEUTRAL position and turn the starting switch to the OFF position. Set the parking brake switch the ON (LOCK) position. Remove the key and, when necessary, block the wheels to prevent the truck from rolling.

Lift truck parking

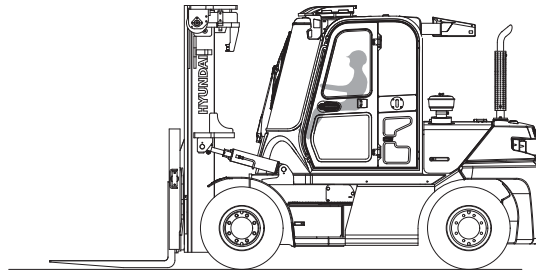

50D9OM32

- ⚠ Always engage the parking brake when parking a lift truck. The truck can move and cause injury or death to personnel near it.**


## 2. PARKING BRAKE RELEASE

In case of malfunction of transmission, it's hard to supply pressure at parking brake.

Using function of parking force release at carrier sub assembly of drive axle, it is possible to tow the truck.

- 1) Loosen the 12 socket bolt (1) to minimum 3 mm.

※ If the socket bolt (1) is loosened then the clearance is no more formed because the the dust cover (5) functions as a stopper.

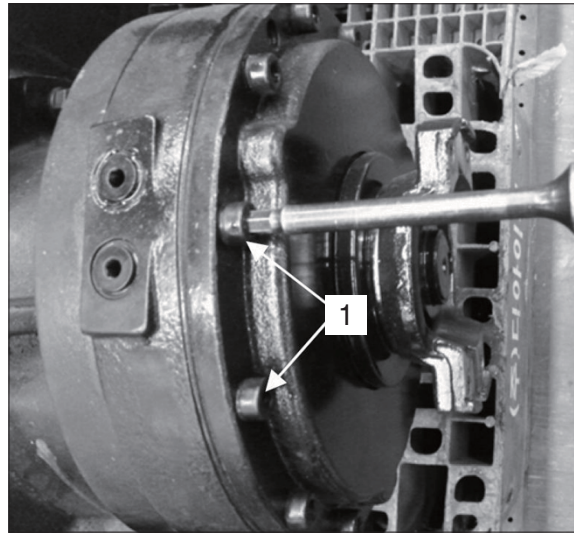


50D96ES01

- 2) Check the clearance (A) between the differential carrier (2) and the piston housing (3) and the clearance (B) between the cover (4) and the piston housing (3).

**Clearance** (A+B) = minimum 3 mm

※ The parking brake will be released when the clearance is formed anyone of A or B.

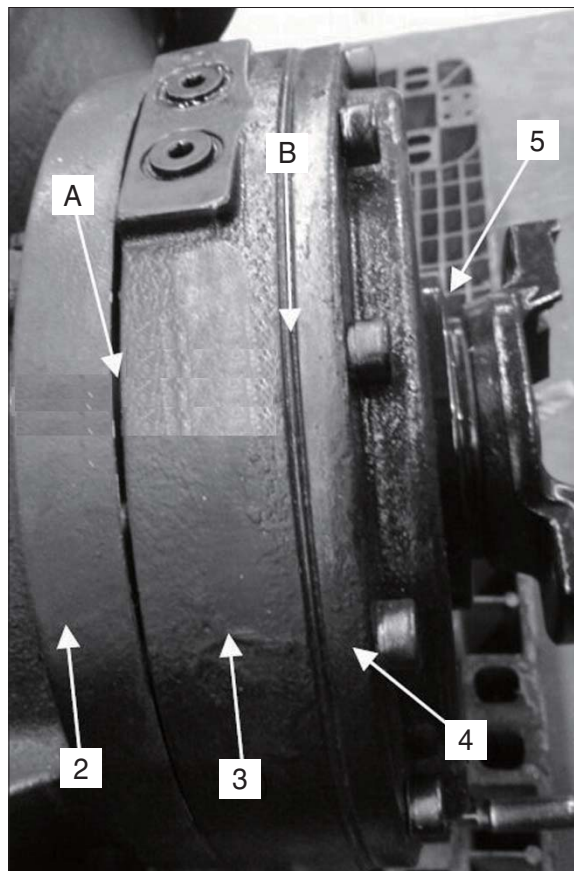

50D96ES02

### 3. HOW TO USE BATTERY JUMPER CABLES

If your lift truck battery is discharged (dead), you can start your lift truck by jumping it from another lift truck that has a 24V negative-ground electrical system. The "Booster" battery must be fully charged and in good condition. This section explains how to perform this procedure safely. To avoid damage to your lift truck and your battery or the possibility of harm to yourself, follow the instructions and warnings carefully. If you have any doubts, ask for help from an experienced mechanic.

If your truck has a battery with terminals on the side you will need a set of jumper cables with matching connector clamps or cable adapters for side mounted battery terminals.

**△ Use only a 24V NEGATIVE GROUND SYSTEM to jump your truck. You can injure yourself and permanently damage your truck's 24V starting motor and ignition system by connecting it to a 24V power supply or to a positive ground system.**

**▲ BATTERIES CONTAIN SULFURIC ACID. Avoid acid contact with skin, eyes, or clothing. If acid contacts your eyes or skin, flush immediately with water and get medical assistance. Wear safety glasses when working near the battery to protect against possible splashing of the acid solution.**

1) If the discharged battery has filler caps, check the fluid level. Do not use an open flame to check and do not smoke. If low, add distilled water to the correct level. Be sure to install the caps before jump starting.

2) Do not jump start, charge, or test a sealed type battery if the test indicator looks illuminated or has a bright color. Install a new battery.


**▲ BATTERIES EMIT EXPLOSIVE GAS. Do not smoke or have open flames or sparks in battery charging areas or near batteries. An explosion can result and cause injury or death. Hydrogen gas is produced during normal battery operation. Hydrogen can explode if flames, sparks, or lighted tobacco are brought near the battery. When charging or using a battery in an enclosed space, always provide ventilation and shield your eyes. Wear safety glasses when working around batteries.**

3) Put the truck with the booster battery as near to the other truck as necessary for the jumper cables to reach both batteries. Check and make sure that the trucks do not touch each other. Use particular care when connecting a booster battery to prevent sparks.

4) On both trucks:

- ① Apply the parking brake.
- ② Put the directional control lever in the NEUTRAL position.
- ③ Turn the starting switch to the OFF position.
- ④ Turn all accessories to the OFF position and leave them off until after the engine has been started and the jumper cables have been removed.

**▲ To avoid short circuits, remove all jewelry and do not permit any metal tools to make contact between the positive battery terminal and other metal on the truck. When you connect jumper cable clamps to the positive terminals of the two batteries, make sure that neither clamp contacts any other metal. Injury can occur from electrical shock or explosion.**

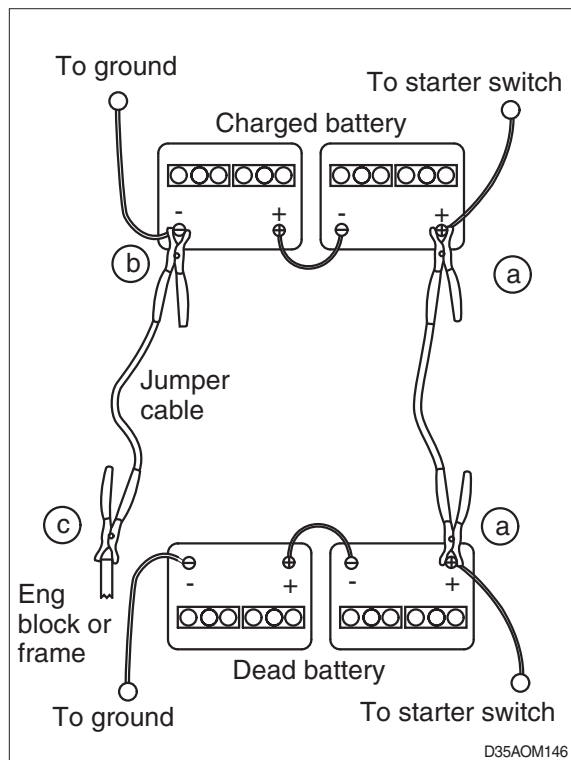

5) Connect the jumper cables in the following sequence:

- ① Connect a jumper cable from the positive (+; red) terminal on one battery to the positive (+; red) terminal on the other battery. Never connect positive (+; red) to negative (-; black), or negative to positive.
- ② Connect one end of the second cable to the grounded negative (-; black) terminal of the jumper vehicle battery.
- ③ Connect the other end of the second cable to a stationary, solid metallic point on the engine of the stalled vehicle, not to the negative (-; black) terminal of its battery. Make this connection at a point at least 450 mm (18 in) away from the battery, if possible. Do not connect it to pulleys, fans or other parts that move. Do not touch hot manifolds that can cause severe burns.

6) Start the engine on the jumper vehicle and run the engine at a moderate speed for a minimum of five minutes.

7) Start the engine on the stalled vehicle. Follow the starting instructions in section 5, Starting and Operating Procedures in this manual. Be sure that the engine is at idle speed before disconnecting the jumper cables.

8) Remove the jumper cables by reversing the installation sequence exactly. Start by removing the last jumper cable from the stalled vehicle first. Remove the cable end from the engine block first, then the other end of the negative (-; black) cable.

9) Remove both ends of the positive (+; red) cable.