

A message to HYUNDAI lift truck operators	0-1
Introduction	0-2
How to use this manual	0-3
EC regulation approved	0-5
Safety labels	0-6
Guide (Direction, Serial number, Symbols)	0-15

1. SAFETY HINTS

1. Daily inspection	1-1
2. Do's and Don'ts	1-2
3. Seat belts	1-4
4. No riders	1-5
5. Pedestrians	1-6
6. Operator protection	1-7
7. Fork safety	1-8
8. Pinch points	1-9
9. Travel	1-10
10. Grades, ramps, slopes and inclines	1-11
11. Tip over	1-12
12. Surface and capacity	1-14
13. Parking	1-15
14. Refueling	1-16
15. Step	1-17
16. Operator's safety rules	1-18
17. Side shift	1-19

2. OPERATING HAZARDS

1. Loose loads	2-1
2. Long and wide loads	2-2
3. Rear swing	2-2
4. Low overhead clearance	2-3
5. Fast turns and high loads	2-3
6. Right angle stacking	2-4
7. Chain slack	2-4
8. Pallets and skids	2-5
9. Caution for electrical lines	2-5
10. Lifting loads	2-6
11. Side shift	2-7
12. Fork positioner	2-8
13. Solid tire	2-8

3. KNOW YOUR TRUCK

1. General locations	3-1
2. Name plate and safety warning decal	3-2
3. Cab devices	3-4
4. Cluster	3-5
5. Transmission message indicator	3-16
6. Switches	3-21
7. Control device	3-26
8. Air conditioner and heater	3-30
9. Others	3-32

4. OPERATOR MAINTENANCE AND CARE

1. Daily safety inspection	4-1
2. Suggestion for new truck	4-3
3. Fuel safety practices	4-4
4. Engine oil service interval and management	4-5

5. STARTING AND OPERATING PROCEDURES

1. Before operating the truck	5-1
2. Check before operation	5-2
3. Check before starting engine	5-3
4. Seat adjustment	5-8
5. Starting from a safe condition	5-9
6. General starting and operating tips	5-10
7. Starting and stopping the engine	5-11
8. Warming-up operation	5-16
9. Levers and pedals	5-17
10. Traveling of the truck	5-19
11. Operating safely	5-23
12. Load handling	5-25
13. Shut down procedure	5-31
14. Storage	5-32
15. Transport	5-33
16. Loading and unloading by crane	5-34

6. EMERGENCY STARTING AND TOWING

- 1. How to tow a disabled truck 6-1
- 2. Parking brake release 6-3
- 3. How to use battery jumper cables 6-4

7. PLANNED MAINTENANCE AND LUBRICATION

- 1. Introduction 7-1
- 2. Safe maintenance practices 7-2
- 3. Instructions before maintenance 7-5
- 4. Planned maintenance intervals 7-8
- 5. How to perform planned maintenance 7-12
- 6. Service instruction 7-18
- 7. Electrical system 7-42
- 8. Air conditioner and heater 7-43
- 9. Replacement and check 7-45
- 10. Handling truck in extremely hot places 7-55
- 11. Cold weather operation 7-56
- 12. Recommendation table for lubricants 7-57
- 13. Fuel and lubricants 7-58

8. SPECIFICATIONS

- 1. Specification table 8-1
- 2. Specification for major components 8-2
- 3. Tightening torque 8-4

9. TROUBLESHOOTING

- 1. Engine system 9-1
- 2. Electrical system 9-2
- 3. Power train system 9-3
- 4. Steering system 9-7
- 5. Brake system 9-8
- 6. Hydraulic system 9-9
- 7. Mast and fork 9-10

10. TESTING AND ADJUSTING

- 1. Engine system 10-1
- 2. Drive system 10-2
- 3. Travel system 10-4
- 4. Steering system 10-5



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91B1-07310