

FOREWORD

A message to hyundai lift truck operators	0-1
Introduction	0-2
How to use this manual	0-3
EC regulation approved	0-5
Safety labels	0-6
Guide (Direction, Serial number, Symbols)	0-13

1. SAFETY HINTS

1. Daily inspection	1-1
2. Do's and don'ts	1-2
3. Seat belts	1-4
4. No riders	1-5
5. Pedestrians	1-6
6. Operator protection	1-7
7. Fork safety	1-8
8. Pinch points	1-9
9. Travel	1-10
10. Grades, ramps, slopes and inclines	1-11
11. Tip over	1-12
12. Surface and capacity	1-14
13. Parking	1-15
14. Refueling	1-16
15. Step	1-17
16. Operator's safety rules	1-18
17. Side shift	1-19

2. OPERATING HAZARDS

1. Loose loads	2-1
2. Long and wide loads	2-2
3. Rear swing	2-2
4. Low overhead clearance	2-3
5. Fast turns and high loads	2-3
6. Right angle stacking	2-4
7. Chain slack	2-4
8. Pallets and skids	2-5
9. Caution for electrical lines	2-5

10. Lifting loads	2-6
11. Side shift	2-6
12. Fork positioner	2-8

3. KNOW YOUR TRUCK

1. General locations	3-1
2. Data/safety plate and decal	3-2
3. Cab devices	3-4
4. Cluster	3-5
5. Transmission message indicator	3-17
6. Switches & lamps	3-22
7. Control device	3-29
8. Air conditioner and heater	3-33
9. Others	3-35

4. OPERATOR MAINTENANCE AND CARE

1. Daily safety inspection	4-1
2. Suggestion for new truck	4-3
3. Fuel safety practices	4-4
4. Engine oil service interval and management	4-5

5. STARTING AND OPERATING PROCEDURES

1. Before operating the truck	5-1
2. Check before operation	5-2
3. Check before starting engine	5-3
4. Seat adjustment	5-7
5. Starting from a safe condition	5-8
6. General starting and operating tips	5-9
7. Starting and stopping the engine	5-10
8. Warming-up operation	5-14
9. Levers and pedals	5-15
10. Traveling of the truck	5-17
11. Operating safely	5-21
12. Load handling	5-23
13. Shut down procedure	5-29
14. Storage	5-30
15. Transport	5-31
16. Loading and unloading by crane	5-32

6. EMERGENCY STARTING AND TOWING

- | | |
|---|-----|
| 1. How to tow a disabled truck | 6-1 |
| 2. How to use battery jumper cables | 6-3 |

7. PLANNED MAINTENANCE AND LUBRICATION

- | | |
|--|------|
| 1. Introduction | 7-1 |
| 2. Safe maintenance practices | 7-2 |
| 3. Instructions before maintenance | 7-5 |
| 4. Planned maintenance intervals | 7-8 |
| 5. How to perform planned maintenance | 7-12 |
| 6. Service instruction | 7-17 |
| 7. Electrical system..... | 7-41 |
| 8. Air conditioner and heater | 7-42 |
| 9. Replacement and check | 7-43 |
| 10. Handling truck in extremely hot places | 7-54 |
| 11. Cold weather operation | 7-55 |
| 12. Recommendation table for lubricants | 7-56 |
| 13. Fuel and lubricants | 7-57 |

8. SPECIFICATIONS

- | | |
|---|-----|
| 1. Specification table | 8-1 |
| 2. Specification for major components | 8-2 |
| 3. Tightening torque | 8-4 |

9. TROUBLESHOOTING

- | | |
|-----------------------------|-----|
| 1. Engine system | 9-1 |
| 2. Electrical system | 9-2 |
| 3. Torque flow system | 9-3 |
| 4. Steering system | 9-7 |
| 5. Brake system | 9-8 |
| 6. Hydraulic system | 9-9 |

10. TESTING AND ADJUSTING

- | | |
|--------------------------|------|
| 1. Engine system | 10-1 |
| 2. Drive system | 10-4 |
| 3. Travel system | 10-6 |
| 4. Steering system | 10-7 |