

FORWARD

Group 1 Structure	0-1
Group 2 How to read the service manual	0-2
Group 3 Conversion table	0-3

SECTION 1 GENERAL

Group 1 Safety Hints	1-1
Group 2 Specifications	1-10

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device	2-1
Group 2 Main Control Valve	2-17
Group 3 Swing Device	2-46
Group 4 Travel Device	2-57
Group 5 RCV Lever	2-71
Group 6 RCV Pedal	2-78

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit	3-1
---------------------------------	-----

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Electric Circuit	4-3
Group 3 Electrical Component Specification	4-18
Group 4 Connectors	4-26

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline	5-1
Group 2 Mode Selection System	5-3
Group 3 Automatic Deceleration System	5-6
Group 4 Power Boost System	5-7
Group 5 Travel Speed Control System	5-8

Group 6 Automatic Warming Up System	5-9
Group 7 Engine Overheat Prevention System	5-10
Group 8 Variable power control system	5-11
Group 9 Electronic Pump Independent Control System(EPIC)	5-12
Group 10 Anti -restart system	5-13
Group 11 Self-Diagnostic System	5-14
Group 12 Engine Control System	5-26
Group 13 EPPR (Electro Proportional Pressure Reducing) Valve	5-27
Group 14 Monitoring System	5-32

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting	6-1
Group 2 Hydraulic and Mechanical System	6-4
Group 3 Electrical System	6-24
Group 4 Mechatronics System	6-40

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test	7-1
Group 2 Major Components	7-19
Group 3 Track and Work Equipment	7-27

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution	8-1
Group 2 Tightening Torque	8-4
Group 3 Pump Device	8-7
Group 4 Main Control Valve	8-50
Group 5 Swing Device	8-63
Group 6 Travel Device	8-96
Group 7 RCV Lever	8-126
Group 8 Turning Joint	8-140
Group 9 Boom, Arm and Bucket Cylinder	8-145
Group 10 Undercarriage	8-162
Group 11 Work Equipment	8-174