

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints	1-1
Group 2 Specifications	1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device	2-1
Group 2 Main Control Valve	2-19
Group 3 Swing Device	2-42
Group 4 Travel Device	2-54
Group 5 RCV Lever	2-68
Group 6 RCV Pedal	2-75

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit	3-1
Group 2 Main Circuit	3-2
Group 3 Pilot Circuit	3-5
Group 4 Single Operation	3-12
Group 5 Combined Operation	3-24

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Electrical Circuit	4-3
Group 3 Electrical Component Specification	4-23
Group 4 Connectors	4-35

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline	5-1
Group 2 Mode Selection System	5-3
Group 3 Power Boost System	5-4
Group 4 Travel Speed Control System	5-5
Group 5 Automatic Warming Up Function	5-6
Group 6 Engine Overheat Prevention Function	5-7
Group 7 Anti-Restart System	5-8
Group 8 Self-Diagnostic System	5-9

Group 9 Engine Control System	5-11
Group 10 EPPR(Electro Proportional Pressure Reducing) Valve	5-17
Group 11 Prolix Switch	5-20
Group 12 Monitoring System	5-21

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting	6-1
Group 2 Hydraulic and Mechanical System	6-4
Group 3 Electrical System	6-24
Group 4 Mechatronics System	6-41

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test	7-1
Group 2 Major Components	7-21
Group 3 Track and Work Equipment	7-28

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution	8-1
Group 2 Tightening Torque	8-4
Group 3 Pump Device	8-7
Group 4 Main Control Valve	8-29
Group 5 Swing Device	8-43
Group 6 Travel Device	8-65
Group 7 RCV Lever	8-103
Group 8 Turning Joint	8-118
Group 9 Boom, Arm and Bucket Cylinder	8-123
Group 10 Undercarriage	8-140
Group 11 Work Equipment	8-152

SECTION 9 COMPONENT MOUNTING TORQUE

Group 1 Introduction Guide	9-1
Group 2 Engine System	9-2
Group 3 Electric System	9-4
Group 4 Hydraulic System	9-6
Group 5 Undercarriage	9-10
Group 6 Structure	9-11
Group 7 Work Equipment	9-14