

CONTENTS

SECTION 1 GENERAL

| | |
|---|------|
| Group 1 Safety Hints | 1-1 |
| Group 2 Specifications | 1-10 |
| Group 3 Operational Checkout Record Sheet | 1-23 |

SECTION 2 ENGINE

| | |
|--|------|
| Group 1 Structure and Function | 2-1 |
| Group 2 Engine speed and Stall rpm | 2-12 |
| Group 3 Fuel Warmer System | 2-13 |

SECTION 3 POWER TRAIN SYSTEM

| | |
|--|------|
| Group 1 Structure and Function (fault code) | 3-1 |
| Group 2 Operational Checks and Troubleshooting | 3-78 |
| Group 3 Test and Adjustments | 3-90 |
| Group 4 Disassembly and Assembly | 3-92 |

SECTION 4 BRAKE SYSTEM

| | |
|--|------|
| Group 1 Structure and Function | 4-1 |
| Group 2 Operational Checks and Troubleshooting | 4-32 |
| Group 3 Tests and Adjustments | 4-39 |
| Group 4 Disassembly and assembly | 4-41 |

SECTION 5 STEERING SYSTEM

| | |
|--|------|
| Group 1 Structure and Function | 5-1 |
| Group 2 Operational Checks and Troubleshooting | 5-13 |
| Group 3 Tests and Adjustments | 5-21 |
| Group 4 Disassembly and Assembly | 5-28 |

SECTION 6 WORK EQUIPMENT

| | |
|--|------|
| Group 1 Structure and Function | 6-1 |
| Group 2 Operational Checks and Troubleshooting | 6-40 |
| Group 3 Tests and Adjustments | 6-51 |
| Group 4 Disassembly and Assembly | 6-63 |

SECTION 7 ELECTRICAL SYSTEM

| | |
|--|------|
| Group 1 Component Location | 7-1 |
| Group 2 Electrical Circuit | 7-3 |
| Group 3 Monitoring System | 7-22 |
| Group 4 Electrical Component Specification | 7-69 |
| Group 5 Connectors | 7-76 |
| Group 6 Troubleshooting | 7-97 |