



INDEX

CHAPTER 7

INDEX

SAFETY FIRST	NUMBER		Cabin & Chassis	5-39
	1 Speed model	3-13	Cabin components.....	6-3
	2 Speed model	3-13	Cabin components disassembly & Assembly ...	6-49
	4 CYL.....	2-76	Cabin removal	6-46
ENGINE	A		Cabin system inspection.....	6-27
	A/C hose (Refrigerant).....	6-72	Camshaft	2-34
	Acceleration system	2-55	Cause for blown fuse.....	5-9
	Accelerator pedal sensor.....	5-44	Cautions for high pressure hoses.....	1-5
	Air cleaner check	1-31	Cautions when handling the battery	1-5
	Air conditioner.....	6-11	Cautions when handling tires	1-8
	Air conditioner & Heater disassembly.....	6-61	CCRT (Catalyzed Continuously Regenerating Trap)	2-62
	Air conditioner controller.....	6-3	Chain box oil change	1-30
	Air control vavle	2-61	Charging pump pressure	4-107
	Air inlet/vent.....	6-18	Check & Adjustment	3-10
DRIVING & CHASSIS	Air intrusion into cycle.....	6-24	Check & Adjustment	4-105
	Alert symbols	1-2	Circuit and component location	5-3
	Alternator	5-14	Circuit diagram for hydraulic system	4-9
	American standard screws, bolts and nuts with unc or unf threads	1-40	Clean working area.....	1-3
	Antenna	6-6	Clutch fan	2-44
	Assembling the engine	2-118	Common rail (Fuel rail).....	2-52
	Assembly and disassembly	1-35	Components	2-7
	Assignment standard for engine model code	2-4	Components	6-8
	Avoid fires.....	1-4	Composition.....	2-210
	Axle case disassembly, assembly	3-35	Compressor.....	6-8
HYDRAULIC SYSTEM	Axle disassembly.....	3-40	Compressor assembly.....	6-71
	B		Compressor disassembly	6-69
	Battery	5-11	Condenser.....	6-10
	Bleeding the fuel system	2-49	Condenser disassembly	6-67
	Body and power train system	2-32	Connecting lines by hydraulic system groups ...	4-11
	Boom disassembly	3-43	Connecting lines for hydraulic valves	4-25
	Boom operation (Down).....	4-96	Connecting rod	2-34
	Boom operation (Up)	4-95	Control system.....	3-23
	Brake (Parking brake).....	3-12	Coolant check.....	1-25
	ELECTRIC SYSTEM	Brake horse power (HP).....	2-9	Coolant flow route.....
Brake lamp (Rear lamp) / Turn signal lamp		5-96	Coolant temperature sensor	5-16
Bubble test for radiator		2-78	Cooling cycle	6-21
Bucket operation (Dump).....		4-100	Cooling operation	6-20
Bucket operation (Roll back)		4-99	Cooling system	2-14
C		Cooling system	2-41	
Cabin		6-2	Crankshaft	2-33
			CRDI (Common Rail Direct Injection) system ...	2-16

Cross sectional area of wiring	5-8
Cylinder block	2-33
Cylinder head	2-32
Cylinder head	2-145
Cylinder honing.....	2-33

D

Daily check	1-24
Defective expansion valve	6-25
Description for symbols and abbreviations	1-15
Diagnosis	2-184
Diagnostic program	2-184
Dimensions	1-19
Disassembly, service and assembly	2-103
Disposal of environmental waste	1-8
Driving chain tension adjustment.....	3-10
Driving hydraulic system/brake.....	3-16
Driving system	3-2
DTC (Diagnostic Trouble Code)	2-210

E

ECU	5-18
ECU(Electronic Control Unit).....	2-18
EGR cooler	2-59
EGR valve	2-59
Electric circuit diagram	5-3
Electric components	5-11
Electric device diagnosis	5-10
Electric fan motor.....	6-18
Engine accelerator dial	5-43
Engine body.....	2-11
Engine component removal.....	2-135
Engine dimension	2-6
Engine disassembly.....	2-141
Engine EPA decal (A)	2-3
Engine identification	2-3
Engine number	2-3
Engine oil check	1-27
Engine oil flow	2-37
Engine oil flow chart	2-38
Engine oil pressure switch.....	5-18
Engine performance curve	2-8
Engine performance curve analysis	2-9

Engine removal.....	2-103
Engine room	5-11
Engine serial number.....	1-16
Error code & action.....	2-211
Escort unit.....	5-40
Excessive refrigerant and insufficient condenser cooling performance	6-24
Exploded view	3-4
Exploded view	2-80
EH5-G111001 Cylinder block group	2-80
EH5-G113003 Cylinder head group	2-81
EH5-G114002 Gear case group	2-82
EH5-G121001 Crank shaft group	2-83
EH5-G122001 Piston connecting rod group...	2-84
EH5-G123001 Camshaft group	2-85
EH5-G124002 Idle gear group	2-86
EH5-G125001 Rocker arm valve group	2-87
EH5-G131001 Intake manifold group	2-88
EH5-G134001 Turbo group	2-89
EH5-G135001 Turbo pipe group	2-90
EH5-G141001 Oil pump group.....	2-91
EH5-G144001 Oil filter group	2-92
EH5-G151001 Fuel equipment group	2-93
EH5-G162001 Water flange group	2-94
EH5-G163003 Water pump group	2-95
EH5-G171001 EGR group	2-96
EH5-G172001 EGR cooler group.....	2-97
EH5-G191002 Glow plug group	2-98
EH5-G192001 Engine electrical group.....	2-99
EH5-G194001 ECU group.....	2-100
LF1-G012002 Cooling fan group	2-101
LF1-G014001 Aftertreatment group	2-102
Exploded view	3-24
LF1-G111003 Drive chain group.....	3-24
LF1-G112003 Axle group	3-25
LF1-G121002 Clutch housing group	3-26
LF1-G4D2001 Lever guide group.....	3-27
LF1-G431003 Fuel tank group	3-28
LF1-G432001 Fuel cooler group	3-29
LF1-G461001 Main frame group	3-30
LF1-G462001 Boom frame group	3-31
LF1-G463001 Rotation frame group	3-32

GMW-0035

High flow valve	4-64	Hydraulic system overview	4-5
High flow valve detach & Disassembly	4-159	I	
High pressure fuel pump	2-50	Identification number	1-16
High pressure fuel pump	2-149	Ignition switch	5-39
High pressure fuel pump (for injection)	2-27	Illumination	1-3
High pressure hose union nut	1-40	Implement holder (Quick coupler) disassembly ...	3-41
Horn	5-93	Injector [C3I (Calibration Improved Individual Injector)]	2-53
Hose connecting lines for a driving system and circulation system	4-33	Injector [C3I]	2-28
Hour meter operation	5-109	Inspection	5-9
HST (Driving) pump flow rate	4-109	Inspection and adjustment	6-23
HST (Driving) pump pressure	4-108	Inspection with gauge	6-23
HST filter	4-79	Instrument panel	5-47
HST filter replacement	4-169	Insufficient refrigerant	6-23
HST group	4-11	Intake & exhaust system	2-57
HST motor	4-87	Intake and exhaust valves	2-35
HST motor (Driving moter)	4-54	Intake and exhaust valves	2-147
HST motor disassembly	4-133	Intercooler disassembly	3-47
HST pump (Driving pump)	4-49	Interior cabin	1-18
HST pump detach	4-124	Interior devices	6-2
HVAC system flow diagram	6-7	L	
Hydraulic cylinder	4-74	Lamps (Bulb replacement)	5-95
Hydraulic filter	4-77	Leakage test	6-27
Hydraulic hose - Charge (LF13-0323C)	4-33	Led work lamp	5-95
Hydraulic hose - HST A(LH) (LF13-0700A)	4-39	Lift cylinder	4-74
Hydraulic hose - HST A(RH) (LF13-0703A)	4-37	Lift cylinder disassembly	4-172
Hydraulic hose - HST B(LH) (LF13-0702A)	4-38	Lift cylinder group	4-21
Hydraulic hose - HST T (LF13-0204C)	4-46	Location of decals	1-9
Hydraulic hose - Motor(LH) T (LF13-0201C)	4-44	Location of electronic components	5-5
Hydraulic hose - Parking P (LF13-0102B)	4-35	Lubricant	1-36
Hydraulic hose - Parking T (LF13-0089C)	4-48	Lubricating system	2-14
Hydraulic hose - Parking(LH) (LF13-0087B)	4-43	Lubricating system	2-37
Hydraulic hose - Parking(RH) (LF13-0088B)	4-42	Lubrication list	1-23
Hydraulic hose - Shift motor(LH) (LF13-0397B)	4-41	M	
Hydraulic hose - Shift motor(RH) (LF13-0396B)	4-40	Main components	4-49
Hydraulic hose - Shift P (LF13-0110B)	4-34	Main control valve (LF13-0028)	4-30
Hydraulic hose - Shift T (LF13-0199C)	4-47	Main control valve (MCV)	4-59
Hydraulic hose -HST B(RH) (LF13-0701A)	4-36	Main control valve (MCV) system pressure	4-105
Hydraulic hose- Motor(RH) T (LF13-0203C)	4-45	Main control valve detach & Disassembly	4-135
Hydraulic pump group	4-18	Main pump detach	4-123
Hydraulic system layout	4-5	Main pump flow rate	4-106
Hydraulic system maintenance	4-123		

SAFETY FIRST	Main pump, charge pump, high flow pump disassembly.....	4-128
	Maintenance	1-22
	Maintenance	3-35
	Maintenance	6-45
	Maintenance schedule chart.....	1-22
ENGINE	Major specification.....	3-3
	MCU (Micro Controller Unit)	5-74
	Measurement and adjustment	2-75
	MLS cylinder head gasket	2-36
	Moisture intrusion into cooling cycle.....	6-26
DRIVING & CHASSIS	N	
	Normal condition.....	6-23
	O	
	Oil cooler	4-85
	Oil cooler group	4-19
HYDRAULIC SYSTEM	Oil filter	2-174
	Oil pressure measurement	2-78
	Oil pump	2-175
	Oil strainer	4-81
	Oil tank group	4-17
ELECTRIC SYSTEM	Oil temperature sensor	5-93
	Opening the cabin (Lifting up)	6-45
	Operating principle	2-16
	Operating principle	4-86
	Operating principle	6-20
CABIN	O-ring face type screw.....	1-40
	Overview.....	2-57
	Overview.....	3-2
	Overview & Operating principle	3-12
	Overview for fuel supply	2-46
INDEX	P	
	Parking valve	4-67
	Parking valve (LF13-0090)	4-27
	Parking valve detach & Disassembly	4-156
	Part number assignment standard for HYUNDAI bolts	1-41
	Part number assignment standard for HYUNDAI bolts and nuts	1-41
	Part number assignment standard for HYUNDAI nuts.....	1-42
	Pilot lock valve	4-61
	Pilot lock valve (LF13-0094)	4-25
	Pilot lock valve detach & Disassembly	4-150
	Piston and connecting rod	2-160
	Piston and piston ring	2-33
	Piston compression pressure measurement	2-75
	Poor compressor compression.....	6-25
	Poor cooling performance	6-33
	Poor heating	6-35
	Poor recirculation of refrigerant	6-26
	Power transfer system.....	3-5
	Prevention of scald	1-7
	Principle of power transfer & Specifications of components	3-5
	Q	
	Quick attachment	4-101
	Quick attachment check	3-10
	Quick attachment cylinder	4-76
	Quick attachment cylinder disassembly	4-177
	Quick attachment cylinder group	4-23
	Quick attachment valve	4-69
	Quick attachment valve (LF13-0307)	4-29
	Quick attachment valve detach & Disassembly	4-166
	Quick coupler (External hydraulic).....	4-83
	R	
	Radiator	2-43
	Radiator cap	2-43
	RCV (R/H)	4-94
	RCV assembly & Oil tank disassembly	4-178
	RCV assembly (LH).....	4-70
	RCV assembly (LH) (LF13-0055).....	4-32
	RCV assembly (LH) (RH)	5-90
	RCV assembly (RH)	4-72
	RCV assembly (RH) (LF13-0056)	4-31
	Rear door operation check	3-11
	Receiver-drier	6-9
	Refrigerant and refrigeration oil	6-22
	Relay box.....	5-46
	Relief pressure setting	4-110
	Return filter	4-77
	Return filter replacement	4-171
	Ride control	4-98

Ride control valve	4-68
Ride control valve detach & Disassembly	4-163
Rocker arm assembly	2-34
Rocker arm assembly	2-143
Room lamp	5-97

S

S.F.C (Specific Fuel Consumption) (for reference only)	2-10
Safe working place	1-3
Safety decals	1-9
Safety equipment	1-3
Safety gear	1-3
Safety instructions when preparing tractor	1-4
Safety sensor (safety bar)	5-91
Safety tips	1-3
Seat switch	5-92
Self level valve	4-90
Self level valve	4-62
Self level valve (LF13-0218)	4-28
Self level valve detach & Disassembly	4-145
Self leveling	4-97
Sensor	2-68
Sensors and relays	5-19
Sensors as input/output for ECU	2-71
Servicing specifications	2-11
Skid loader serial number	1-16
Soft shift valve	4-66
Soft shift valve (LF13-0259)	4-26
Soft shift valve detach & Disassembly	4-153
Speaker	6-6
Specifications	1-20
Specifications	2-5
Specifications	3-7
Specifications	4-3
Specifications	5-2
Specifications	6-7
Starter motor	5-13
Stereo (Bluetooth)	6-6
Structure & Components	3-12
Stud bolts	1-39
Suction line group	4-17
Switch panel	5-41

Symbols for electric components	5-8
---------------------------------------	-----

T

Telematics controller	5-88
Temperature gauge operation	5-108
Thermostat	2-42
Thermostat	2-177
Tightening torque	1-39
Tightening torques for engine	2-15
Tilt cylinder	4-75
TILT cylinder disassembly	4-175
Tilt cylinder group	4-20
Timing gear	2-35
Tire check	1-32
Torque	2-9
Troubleshooting	2-72
Troubleshooting	3-16
Troubleshooting	4-111
Troubleshooting	5-98
Troubleshooting	6-31
Troubleshooting by symptoms	6-32
Troubleshooting poor cooling/heating performance	6-33
Tubes and rubbers	1-36
Turbo charger	2-67
Turbo charger	2-180
Turbo charger wastegate pressure check	2-79
Turn signal lamp	5-95

U

Unit conversion table	1-43
Use of appropriate tools and equipment	1-6

V

Valve clearance	2-76
Valve lift (Deflection and worn condition of valve cam, tappet, push rod, rocker arm, etc.)	2-77
Ventilating system	1-3
Visual and auditory inspection	6-31

W

Washer tank	6-6
Water pump	2-42
Water pump	2-178
When assembling	6-27
When the engine cannot be started	5-98

SAFETY FIRST

When the system is not charged 5-100

When the system is not preheated automatically... 5-102

When work lamp cannot be operated..... 5-105

Wiper motor 5-94

Wiper notor 6-5

Wiper/Washer fluid switch 6-6

ENGINE

Wiring color identification 5-7

Wiring diagram 5-111

Main..... 5-111

MCU update 5-115

Wiring identification 5-7

Work place 1-3

DRIVING & CHASSIS

Working system 3-14

Working system holder (Quick Coupler)..... 3-14

HYDRAULIC SYSTEM

ELECTRIC SYSTEM

CABIN

INDEX