

SECTION 1 GENERAL

Group 1 Safety Hints	1-1
Group 2 Specifications	1-10

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device	2-1
Group 2 Main Control Valve	2-20
Group 3 Swing Device	2-51
Group 4 Travel Device	2-62
Group 5 RCV Lever	2-83
Group 6 RCV Pedal	2-90

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit	3-1
Group 2 Main Circuit	3-3
Group 3 Pilot Circuit	3-6
Group 4 Single Operation	3-16
Group 5 Combined Operation	3-28

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Electrical Circuit	4-3
Group 3 Electrical Component Specification	4-23
Group 4 Connectors	4-36

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline	5-1
Group 2 Mode selection System	5-3
Group 3 Automatic Deceleration System	5-6
Group 4 Power Boost System	5-7
Group 5 Travel Speed Control System	5-8
Group 6 Automatic Warming Up Function	5-9
Group 7 Engine Overheat Prevention Function	5-10

Group 8	Variable Power Control System	5-11
Group 9	Attachment Flow Control System	5-12
Group 10	Intelligent Power Control System.....	5-13
Group 11	Anti-Restart System	5-15
Group 12	Self-Diagnostic System	5-16
Group 13	Engine Control System	5-61
Group 14	EPFR Valve	5-62
Group 15	Monitoring System	5-67
Group 16	Fuel Warmer System	5-109
Group 17	1 or 2-Way Optional Piping Pressure Removal System	5-110

SECTION 6 TROUBLESHOOTING

Group 1	Before troubleshooting	6-1
Group 2	Hydraulic and Mechanical System	6-4
Group 3	Electrical System	6-25
Group 4	Mechatronics System	6-43
Group 5	Air conditioner and Heater System	6-71

SECTION 7 MAINTENANCE STANDARD

Group 1	Operational Performance Test	7-1
Group 2	Major Components	7-21
Group 3	Track and Work Equipment	7-30

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1	Precaution	8-1
Group 2	Tightening Torque	8-3
Group 3	Pump Device	8-7
Group 4	Main Control Valve	8-29
Group 5	Swing Device	8-43
Group 6	Travel Device	8-62
Group 7	RCV Lever	8-126
Group 8	Turning Joint	8-140
Group 9	Boom, Arm and Bucket Cylinder	8-145
Group 10	Undercarriage	8-168
Group 11	Work Equipment	8-182

1. STRUCTURE

This service manual has been prepared as an aid to improve the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every opportunity.

This service manual mainly contains the necessary technical information for operations performed in a service workshop.

For ease of understanding, the manual is divided into the following sections.

SECTION 1 GENERAL

This section explains the safety hints and gives the specification of the machine and major components.

SECTION 2 STRUCTURE AND FUNCTION

This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

SECTION 3 HYDRAULIC SYSTEM

This section explains the hydraulic circuit, single and combined operation.

SECTION 4 ELECTRICAL SYSTEM

This section explains the electrical circuit, monitoring system and each component. It serves not only to give an understanding electrical system, but also serves as reference material for trouble shooting.

SECTION 5 MECHATRONICS SYSTEM

This section explains the computer aided power optimization system and each component.

SECTION 6 TROUBLESHOOTING

This section explains the troubleshooting charts correlating **problems** to **causes**.

SECTION 7 MAINTENANCE STANDARD

This section gives the judgement standards when inspecting disassembled parts.

SECTION 8 DISASSEMBLY AND ASSEMBLY

This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations.

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Contact your HD Hyundai Construction Equipment distributor for the latest information.

2. HOW TO READ THE SERVICE MANUAL

Distribution and updating

Any additions, amendments or other changes will be sent to HD Hyundai Construction Equipment distributors.

Get the most up-to-date information before you start any work.

Filing method

1. See the page number on the bottom of the page.

File the pages in correct order.

2. Following examples shows how to read the page number.

Example 1

2 - 3

Item number
(2. Structure and Function)
Consecutive page number for each item.

3. Additional pages : Additional pages are indicated by a hyphen (-) and number after the page number. File as in the example.

8 - 4

8 - 4 - 1

8 - 4 - 2

8 - 5

Added pages

Revised edition mark (①②③···)



When a manual is revised, an edition mark is recorded on the bottom outside corner of the pages.

Revisions

Revised pages are shown at the list of revised pages on the between the contents page and section 1 page.

Symbols

So that the shop manual can be of ample practical use, important places for safety and quality are marked with the following symbols.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing the work.
		Extra special safety precautions are necessary when performing the work because it is under internal pressure.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing the work.

3. CONVERSION TABLE

Method of using the Conversion Table

The Conversion Table in this section is provided to enable simple conversion of figures. For details of the method of using the Conversion Table, see the example given below.

Example

1. Method of using the Conversion Table to convert from millimeters to inches

Convert 55 mm into inches.

- (1) Locate the number 50 in the vertical column at the left side, take this as (a), then draw a horizontal line from (a).
- (2) Locate the number 5 in the row across the top, take this as (b), then draw a perpendicular line down from (b).
- (3) Take the point where the two lines cross as (c). This point (c) gives the value when converting from millimeters to inches. Therefore, 55 mm = 2.165 inches.

2. Convert 550 mm into inches.

- (1) The number 550 does not appear in the table, so divide by 10 (Move the decimal point one place to the left) to convert it to 55 mm.
- (2) Carry out the same procedure as above to convert 55 mm to 2.165 inches.
- (3) The original value (550 mm) was divided by 10, so multiply 2.165 inches by 10 (Move the decimal point one place to the right) to return to the original value.
This gives 550 mm = 21.65 inches.

Millimeters to inches

(b)

1 mm = 0.03937 in

	0	1	2	3	4	5	6	7	8	9
0		0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
(a) 50	1.969	2.008	2.047	2.087	2.126	(c) 2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Millimeters to inches

1 mm = 0.03937 in

	0	1	2	3	4	5	6	7	8	9
0		0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Kilogram to Pound

1 kg = 2.2046 lb

	0	1	2	3	4	5	6	7	8	9
0		2.20	4.41	6.61	8.82	11.02	13.23	15.43	17.64	19.84
10	22.05	24.25	26.46	28.66	30.86	33.07	35.27	37.48	39.68	41.89
20	44.09	46.30	48.50	50.71	51.91	55.12	57.32	59.5	61.73	63.93
30	66.14	68.34	70.55	72.75	74.96	77.16	79.37	81.57	83.78	85.98
40	88.18	90.39	92.59	94.80	97.00	99.21	101.41	103.62	105.82	108.03
50	110.23	112.44	114.64	116.85	119.05	121.25	123.46	125.66	127.87	130.07
60	132.28	134.48	136.69	138.89	141.10	143.30	145.51	147.71	149.91	152.12
70	154.32	156.53	158.73	160.94	163.14	165.35	167.55	169.76	171.96	174.17
80	176.37	178.57	180.78	182.98	185.19	187.39	189.60	191.80	194.01	196.21
90	198.42	200.62	202.83	205.03	207.24	209.44	211.64	213.85	216.05	218.26

Liter to U.S. Gallon
 $1 \ell = 0.2642 \text{ U.S. Gal}$

	0	1	2	3	4	5	6	7	8	9
0		0.264	0.528	0.793	1.057	1.321	1.585	1.849	2.113	2.378
10	2.642	2.906	3.170	3.434	3.698	3.963	4.227	4.491	4.755	5.019
20	5.283	5.548	5.812	6.076	6.340	6.604	6.869	7.133	7.397	7.661
30	7.925	8.189	8.454	8.718	8.982	9.246	9.510	9.774	10.039	10.303
40	10.567	10.831	11.095	11.359	11.624	11.888	12.152	12.416	12.680	12.944
50	13.209	13.473	13.737	14.001	14.265	14.529	14.795	15.058	15.322	15.586
60	15.850	16.115	16.379	16.643	16.907	17.171	17.435	17.700	17.964	18.228
70	18.492	18.756	19.020	19.285	19.549	19.813	20.077	20.341	20.605	20.870
80	21.134	21.398	21.662	21.926	22.190	22.455	22.719	22.983	23.247	23.511
90	23.775	24.040	24.304	24.568	24.832	25.096	25.631	25.625	25.889	26.153

Liter to U.K. Gallon
 $1 \ell = 0.21997 \text{ U.K. Gal}$

	0	1	2	3	4	5	6	7	8	9
0		0.220	0.440	0.660	0.880	1.100	1.320	1.540	1.760	1.980
10	2.200	2.420	2.640	2.860	3.080	3.300	3.520	3.740	3.950	4.179
20	4.399	4.619	4.839	5.059	5.279	5.499	5.719	5.939	6.159	6.379
30	6.599	6.819	7.039	7.259	7.479	7.699	7.919	8.139	8.359	8.579
40	8.799	9.019	9.239	9.459	9.679	9.899	10.119	10.339	10.559	10.778
50	10.998	11.281	11.438	11.658	11.878	12.098	12.318	12.528	12.758	12.978
60	13.198	13.418	13.638	13.858	14.078	14.298	14.518	14.738	14.958	15.178
70	15.398	15.618	15.838	16.058	16.278	16.498	16.718	16.938	17.158	17.378
80	17.598	17.818	18.037	18.257	18.477	18.697	18.917	19.137	19.357	19.577
90	19.797	20.017	20.237	20.457	20.677	20.897	21.117	21.337	21.557	21.777

kgf · m to lbf · ft

1 kgf · m = 7.233 lbf · ft

	0	1	2	3	4	5	6	7	8	9
		7.2	14.5	21.7	28.9	36.2	43.4	50.6	57.9	65.1
10	72.3	79.6	86.8	94.0	101.3	108.5	115.7	123.0	130.2	137.4
20	144.7	151.9	159.1	166.4	173.6	180.8	188.1	195.3	202.5	209.8
30	217.0	224.2	231.5	238.7	245.9	253.2	260.4	267.6	274.9	282.1
40	289.3	296.6	303.8	311.0	318.3	325.5	332.7	340.0	347.2	354.4
50	361.7	368.9	376.1	383.4	390.6	397.8	405.1	412.3	419.5	426.8
60	434.0	441.2	448.5	455.7	462.9	470.2	477.4	484.6	491.8	499.1
70	506.3	513.5	520.8	528.0	535.2	542.5	549.7	556.9	564.2	571.4
80	578.6	585.9	593.1	600.3	607.6	614.8	622.0	629.3	636.5	643.7
90	651.0	658.2	665.4	672.7	679.9	687.1	694.4	701.6	708.8	716.1
100	723.3	730.5	737.8	745.0	752.2	759.5	766.7	773.9	781.2	788.4
110	795.6	802.9	810.1	817.3	824.6	831.8	839.0	846.3	853.5	860.7
120	868.0	875.2	882.4	889.7	896.9	904.1	911.4	918.6	925.8	933.1
130	940.3	947.5	954.8	962.0	969.2	976.5	983.7	990.9	998.2	10005.4
140	1012.6	1019.9	1027.1	1034.3	1041.5	1048.8	1056.0	1063.2	1070.5	1077.7
150	1084.9	1092.2	1099.4	1106.6	1113.9	1121.1	1128.3	1135.6	1142.8	1150.0
160	1157.3	1164.5	1171.7	1179.0	1186.2	1193.4	1200.7	1207.9	1215.1	1222.4
170	1129.6	1236.8	1244.1	1251.3	1258.5	1265.8	1273.0	1280.1	1287.5	1294.7
180	1301.9	1309.2	1316.4	1323.6	1330.9	1338.1	1345.3	1352.6	1359.8	1367.0
190	1374.3	1381.5	1388.7	1396.0	1403.2	1410.4	1417.7	1424.9	1432.1	1439.4

kgf/cm² to lbf/in²1 kgf / cm² = 14.2233 lbf / in²

	0	1	2	3	4	5	6	7	8	9
		14.2	28.4	42.7	56.9	71.1	85.3	99.6	113.8	128.0
10	142.2	156.5	170.7	184.9	199.1	213.4	227.6	241.8	256.0	270.2
20	284.5	298.7	312.9	327.1	341.4	355.6	369.8	384.0	398.3	412.5
30	426.7	440.9	455.1	469.4	483.6	497.8	512.0	526.3	540.5	554.7
40	568.9	583.2	597.4	611.6	625.8	640.1	654.3	668.5	682.7	696.9
50	711.2	725.4	739.6	753.8	768.1	782.3	796.5	810.7	825.0	839.2
60	853.4	867.6	881.8	896.1	910.3	924.5	938.7	953.0	967.2	981.4
70	995.6	1010	1024	1038	1053	1067	1081	1095	1109	1124
80	1138	1152	1166	1181	1195	1209	1223	1237	1252	1266
90	1280	1294	1309	1323	1337	1351	1365	1380	1394	1408
100	1422	1437	1451	1465	1479	1493	1508	1522	1536	1550
110	1565	1579	1593	1607	1621	1636	1650	1664	1678	1693
120	1707	1721	1735	1749	1764	1778	1792	1806	1821	1835
130	1849	2863	1877	1892	1906	1920	1934	1949	1963	1977
140	1991	2005	2020	2034	2048	2062	2077	2091	2105	2119
150	2134	2148	2162	2176	2190	2205	2219	2233	2247	2262
160	2276	2290	2304	2318	2333	2347	2361	2375	2389	2404
170	2418	2432	2446	2460	2475	2489	2503	2518	2532	2546
180	2560	2574	2589	5603	2617	2631	2646	2660	2674	2688
200	2845	2859	2873	2887	2901	2916	2930	2944	2958	2973
210	2987	3001	3015	3030	3044	3058	3072	3086	3101	3115
220	3129	3143	3158	3172	3186	3200	3214	3229	3243	3257
230	3271	3286	3300	3314	3328	3343	3357	3371	3385	3399
240	3414	3428	3442	3456	3470	3485	3499	3513	3527	3542

TEMPERATURE

Fahrenheit-Centigrade Conversion.

A simple way to convert a fahrenheit temperature reading into a centigrade temperature reading or vice verse is to enter the accompanying table in the center or boldface column of figures.

These figures refer to the temperature in either Fahrenheit or Centigrade degrees.

If it is desired to convert from Fahrenheit to Centigrade degrees, consider the center column as a table of Fahrenheit temperatures and read the corresponding Centigrade temperature in the column at the left.

If it is desired to convert from Centigrade to Fahrenheit degrees, consider the center column as a table of Centigrade values, and read the corresponding Fahrenheit temperature on the right.

°C		°F	°C		°F	°C		°F	°C		°F
-40.4	-40	-40.0	-11.7	11	51.8	7.8	46	114.8	27.2	81	117.8
-37.2	-35	-31.0	-11.1	12	53.6	8.3	47	116.6	27.8	82	179.6
-34.4	-30	-22.0	-10.6	13	55.4	8.9	48	118.4	28.3	83	181.4
-31.7	-25	-13.0	-10.0	14	57.2	9.4	49	120.2	28.9	84	183.2
-28.9	-20	-4.0	-9.4	15	59.0	10.0	50	122.0	29.4	85	185.0
-28.3	-19	-2.2	-8.9	16	60.8	10.6	51	123.8	30.0	86	186.8
-27.8	-18	-0.4	-8.3	17	62.6	11.1	52	125.6	30.6	87	188.6
-27.2	-17	1.4	-7.8	18	64.4	11.7	53	127.4	31.1	88	190.4
-26.7	-16	3.2	-6.7	20	68.0	12.8	55	131.0	32.2	90	194.0
-26.1	-15	5.0	-6.7	20	68.0	12.8	55	131.0	32.2	90	194.0
-25.6	-14	6.8	-6.1	21	69.8	13.3	56	132.8	32.8	91	195.8
-25.0	-13	8.6	-5.6	22	71.6	13.9	57	134.6	33.3	92	197.6
-24.4	-12	10.4	-5.0	23	73.4	14.4	58	136.4	33.9	93	199.4
-23.9	-11	12.2	-4.4	24	75.2	15.0	59	138.2	34.4	94	201.2
-23.3	-10	14.0	-3.9	25	77.0	15.6	60	140.0	35.0	95	203.0
-22.8	-9	15.8	-3.3	26	78.8	16.1	61	141.8	35.6	96	204.8
-22.2	-8	17.6	-2.8	27	80.6	16.7	62	143.6	36.1	97	206.6
-21.7	-7	19.4	-2.2	28	82.4	17.2	63	145.4	36.7	98	208.4
-21.1	-6	21.2	-1.7	29	84.2	17.8	64	147.2	37.2	99	210.2
-20.6	-5	23.0	-1.1	35	95.0	21.1	70	158.0	51.7	125	257.0
-20.0	-4	24.8	-0.6	31	87.8	18.9	66	150.8	40.6	105	221.0
-19.4	-3	26.6	0	32	89.6	19.4	67	152.6	43.3	110	230.0
-18.9	-2	28.4	0.6	33	91.4	20.0	68	154.4	46.1	115	239.0
-18.3	-1	30.2	1.1	34	93.2	20.6	69	156.2	48.9	120	248.0
-17.8	0	32.0	1.7	35	95.0	21.1	70	158.0	51.7	125	257.0
-17.2	1	33.8	2.2	36	96.8	21.7	71	159.8	54.4	130	266.0
-16.7	2	35.6	2.8	37	98.6	22.2	72	161.6	57.2	135	275.0
-16.1	3	37.4	3.3	38	100.4	22.8	73	163.4	60.0	140	284.0
-15.6	4	39.2	3.9	39	102.2	23.3	74	165.2	62.7	145	293.0
-15.0	5	41.0	4.4	40	104.0	23.9	75	167.0	65.6	150	302.0
-14.4	6	42.8	5.0	41	105.8	24.4	76	168.8	68.3	155	311.0
-13.9	7	44.6	5.6	42	107.6	25.0	77	170.6	71.1	160	320.0
-13.3	8	46.4	6.1	43	109.4	25.6	78	172.4	73.9	165	329.0
-12.8	9	48.2	6.7	44	111.2	26.1	79	174.2	76.7	170	338.0
-12.2	10	50.0	7.2	45	113.0	26.7	80	176.0	79.4	172	347.0

SECTION 1 GENERAL



Group 1 Safety Hints 1-1

Group 2 Specifications 1-10

SECTION 1 GENERAL


GROUP 1 SAFETY

FOLLOW SAFE PROCEDURE

Unsafe work practices are dangerous. Understand service procedure before doing work; Do not attempt shortcuts.

WEAR PROTECTIVE CLOTHING


Wear close fitting clothing and safety equipment appropriate to the job.

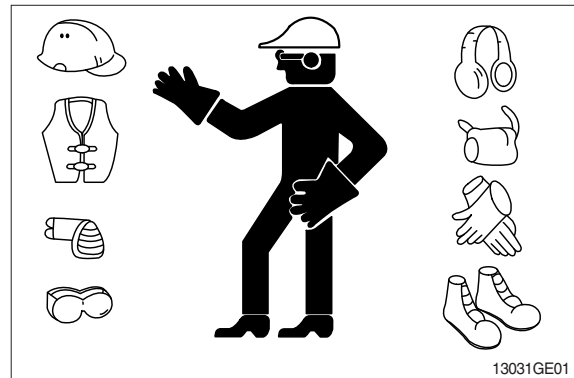

WARN OTHERS OF SERVICE WORK

Unexpected machine movement can cause serious injury.

Before performing any work on the excavator, attach a 「Do Not Operate」 tag on the right side control lever.

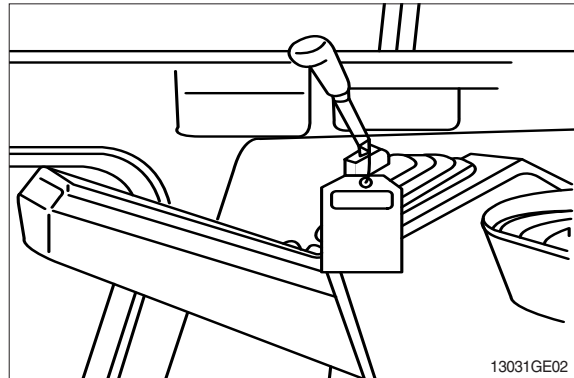


USE HANDHOLDS AND STEPS

Falling is one of the major causes of personal injury.

When you get on and off the machine, always maintain a three point contact with the steps and handrails and face the machine. Do not use any controls as handholds.

Never jump on or off the machine. Never mount or dismount a moving machine.

Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.

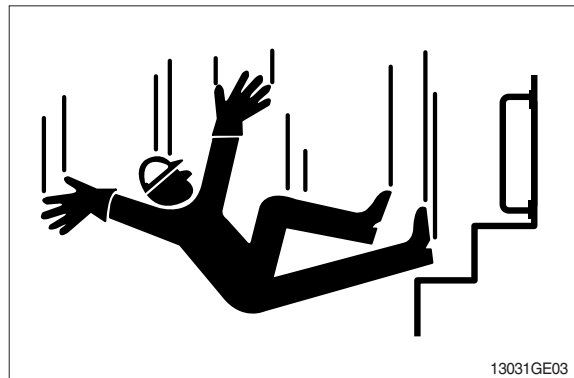


PREPARE FOR EMERGENCIES

Be prepared if a fire starts.


Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

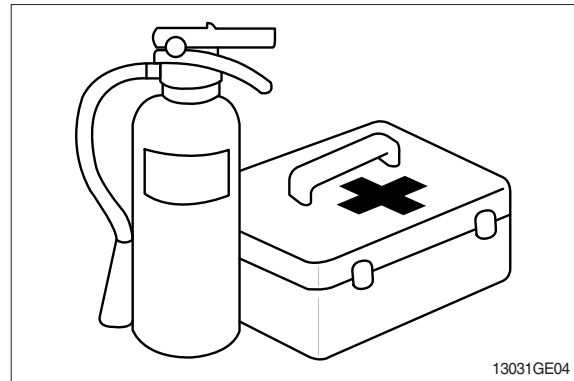

PROTECT AGAINST FLYING DEBRIS


Guard against injury from flying pieces of metal or debris; Wear goggles or safety glasses.

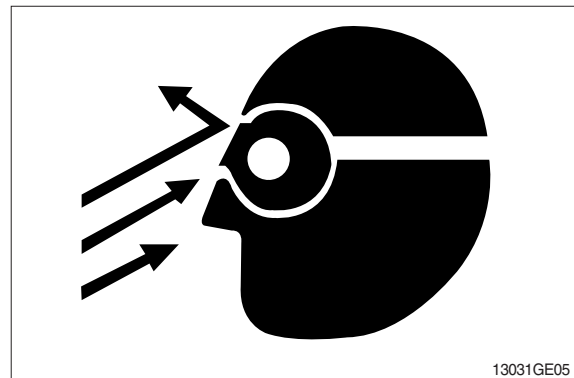

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.


Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

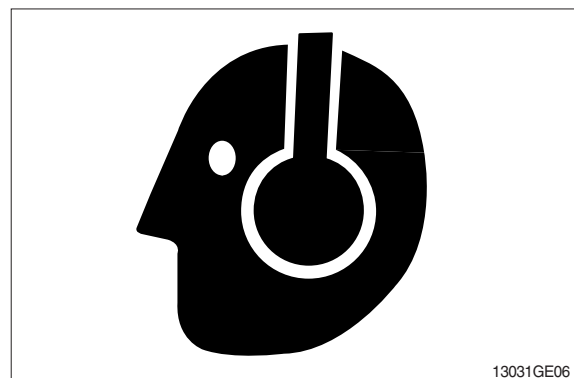

AVOID POWER LINES

Serious injury or death can result from contact with electric lines.


Never move any part of the machine or load closer to electric line than 3m(10ft) plus twice the line insulator length.

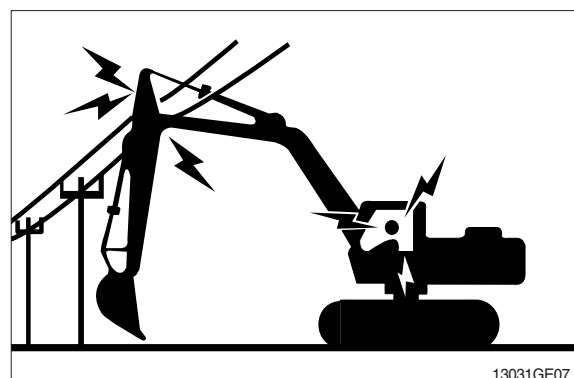

KEEP RIDERS OFF EXCAVATOR

Only allow the operator on the excavator. Keep riders off.

Riders on excavator are subject to injury such as being struck by foreign objects and being thrown off the excavator. Riders also obstruct the operator's view resulting in the excavator being operated in an unsafe manner.

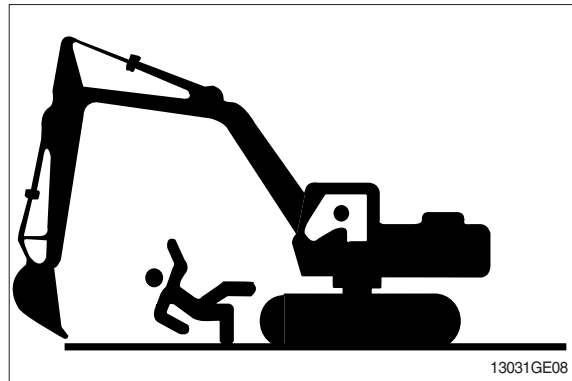


MOVE AND OPERATE MACHINE SAFELY

Bystanders can be run over. Know the location of bystanders before moving, swinging, or operating the machine.

Always keep the travel alarm in working condition. It warns people when the excavator starts to move.

Use a signal person when moving, swinging, or operating the machine in congested areas. Coordinate hand signals before starting the excavator.

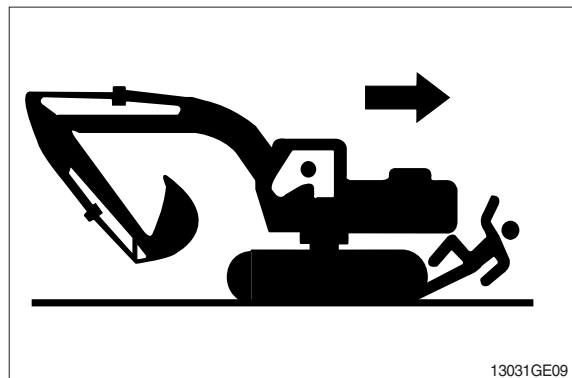

OPERATE ONLY FROM OPERATOR'S SEAT

Avoid possible injury machine damage. Do not start engine by shorting across starter terminals.

NEVER start engine while standing on ground. Start engine only from operator's seat.



PARK MACHINE SAFELY

Before working on the machine:


- Park machine on a level surface.
- Lower bucket to the ground.
- Turn auto idle switch off.
- Run engine at low idle speed without load for 5 minutes.
- Turn key switch to OFF to stop engine. Remove key from switch.
- Place safety lever to locked position.
- Allow engine to cool.

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load.


Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

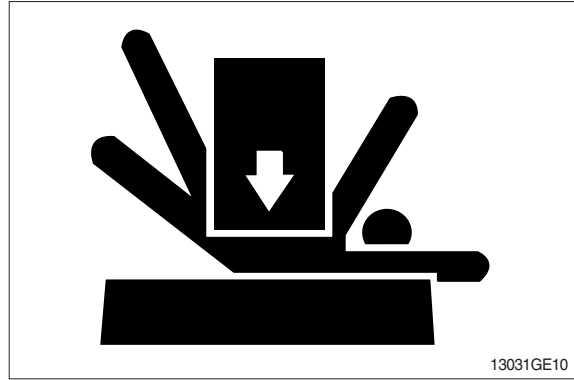

SERVICE COOLING SYSTEM SAFELY


Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands.

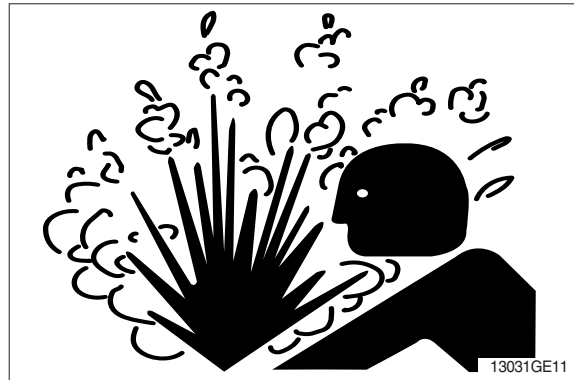

HANDLE FLUIDS SAFELY-AVOID FIRES


Handle fuel with care; It is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks. Always stop engine before refueling machine. Fill fuel tank outdoors.

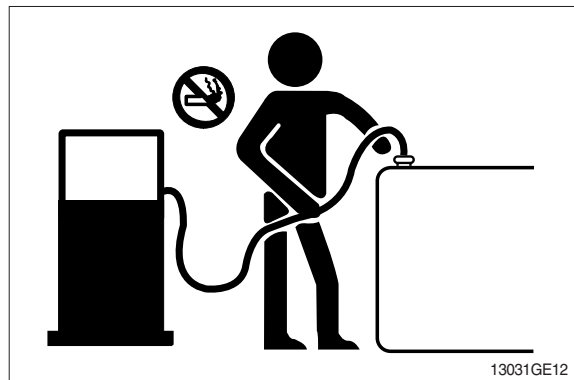

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; They can ignite and burn spontaneously.

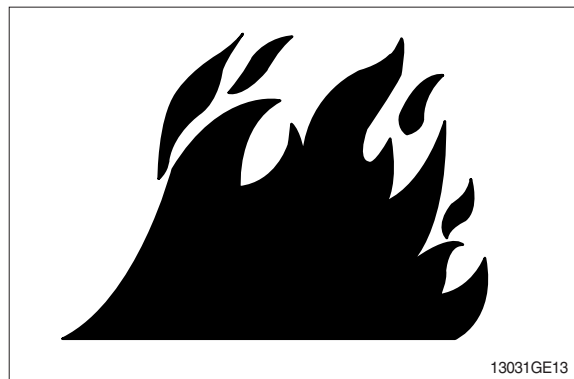

BEWARE OF EXHAUST FUMES

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in a building, be positive there is adequate ventilation. Either use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring enough outside air into the area.

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust.
Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

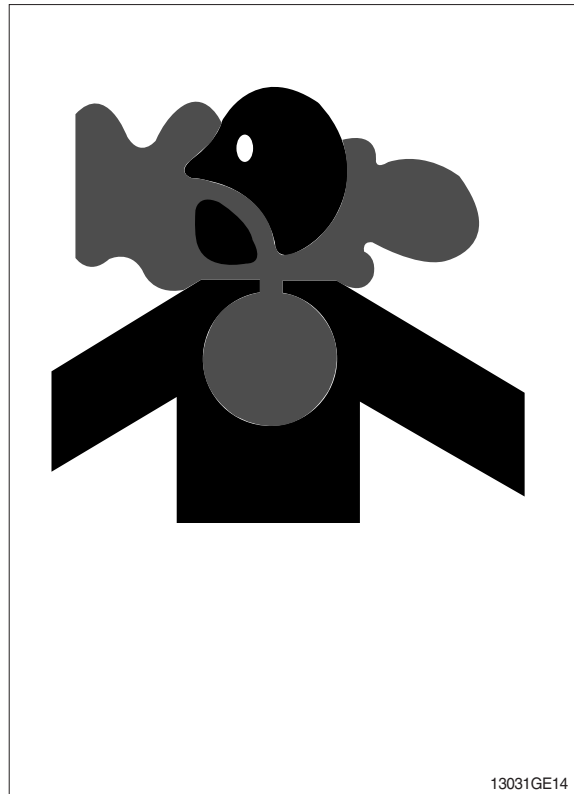

ILLUMINATE WORK AREA SAFELY


Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.



SERVICE MACHINE SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.


Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

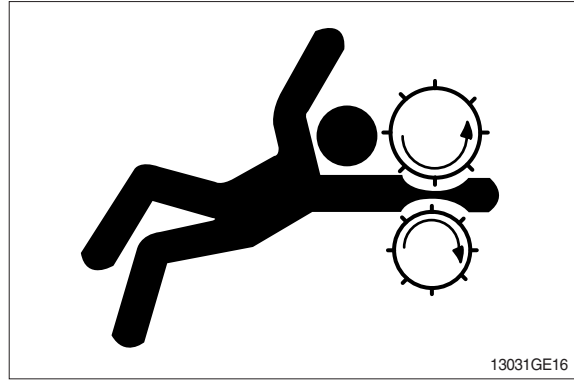

STAY CLEAR OF MOVING PARTS

Entanglements in moving parts can cause serious injury.

To prevent accidents, use care when working around rotating parts.

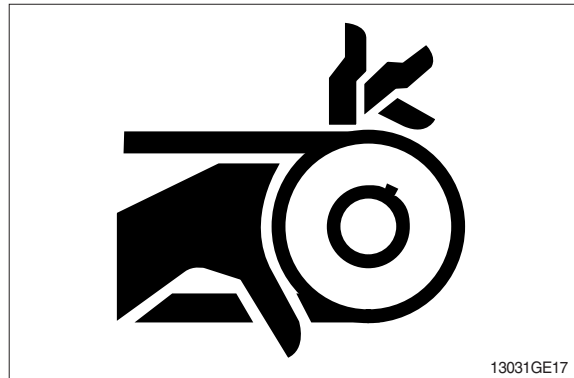


AVOID HIGH PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result.

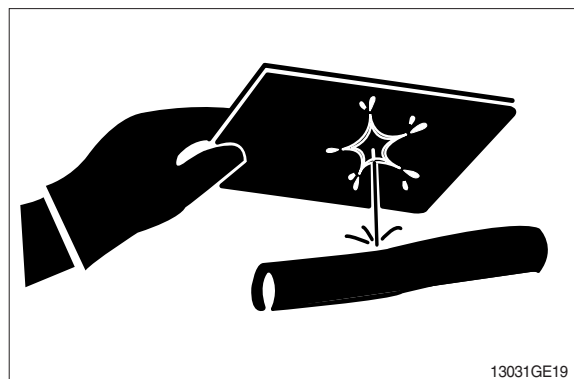

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials.

Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area. Install fire resisting guards to protect hoses or other materials.



PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and flame away from the top of battery.

Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; It may explode. Warm battery to 16°C (60°F).



PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.


If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10-15 minutes.

Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

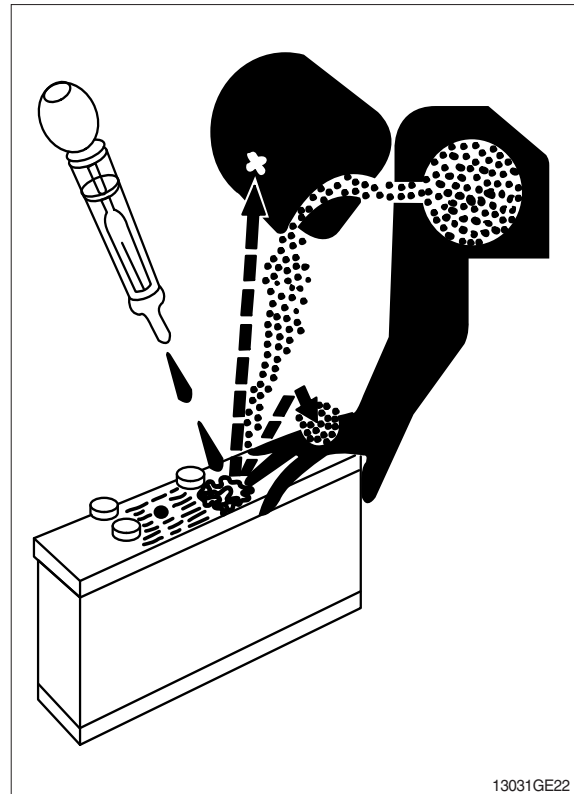

USE TOOLS PROPERLY


Use tools appropriate to the work. Makeshift tools, parts, and procedures can create safety hazards.

Use power tools only to loosen threaded tools and fasteners.

For loosening and tightening hardware, use the correct size tools.

DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only recommended replacement parts.
(See Parts manual.)

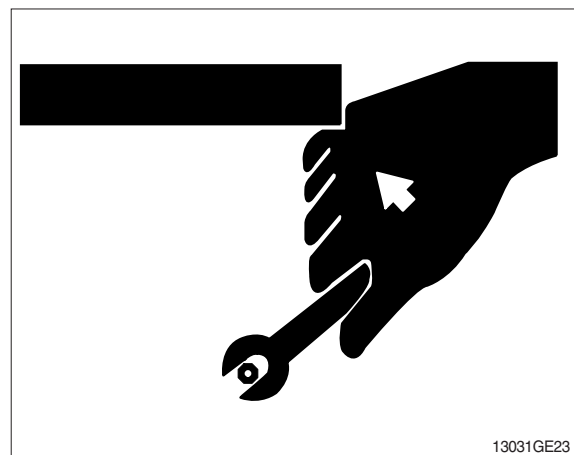


DISPOSE OF FLUIDS PROPERLY

Improperly disposing of fluids can harm the environment and ecology. Before draining any fluids, find out the proper way to dispose of waste from your local environmental agency.


Use proper containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

DO NOT pour oil into the ground, down a drain, or into a stream, pond, or lake. Observe relevant environmental protection regulations when disposing of oil, fuel, coolant, brake fluid, filters, batteries, and other harmful waste.

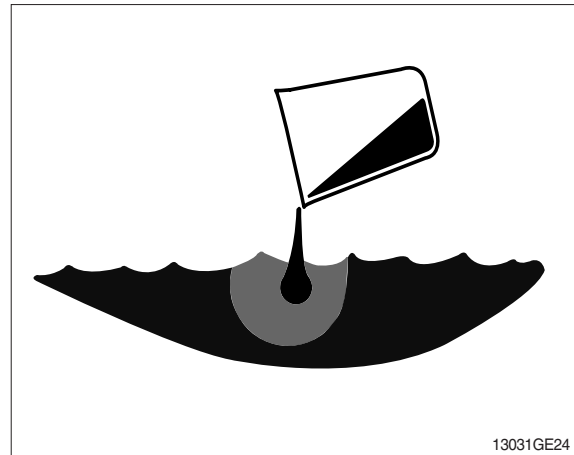

REPLACE SAFETY LABELS

Replace missing or damaged safety labels. See the machine operator's manual for correct safety label placement.


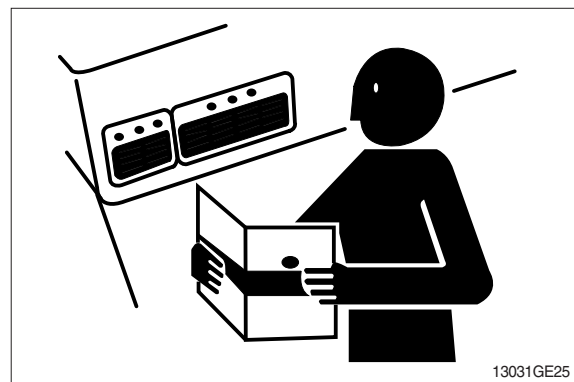


LIVE WITH SAFETY

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.

GROUP 2 SPECIFICATIONS


1. MAJOR COMPONENT

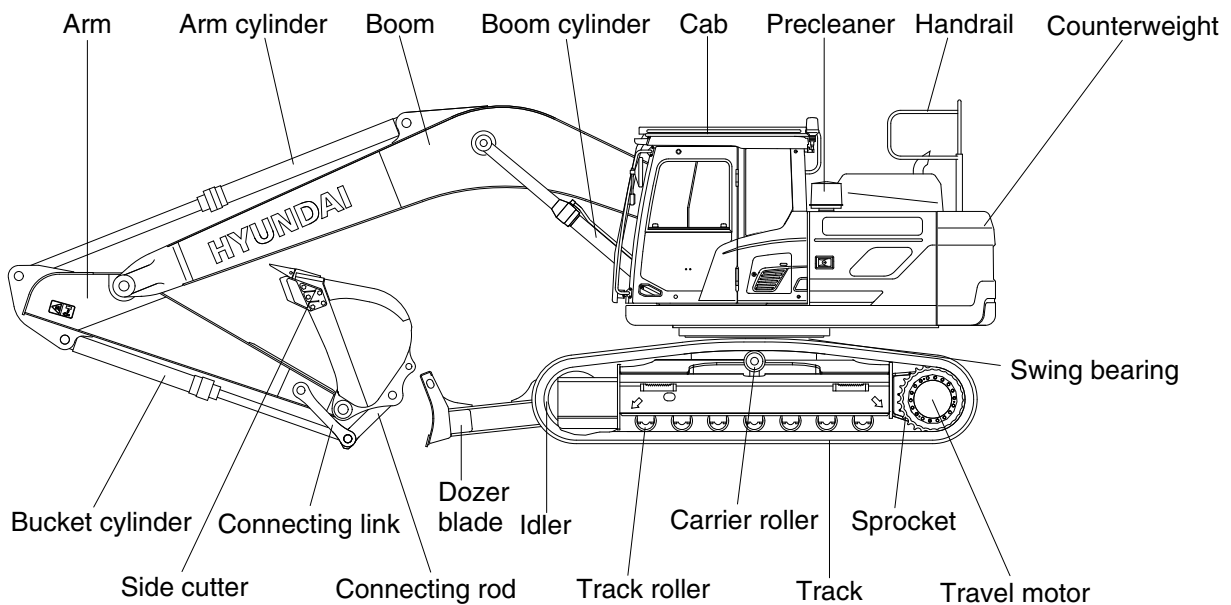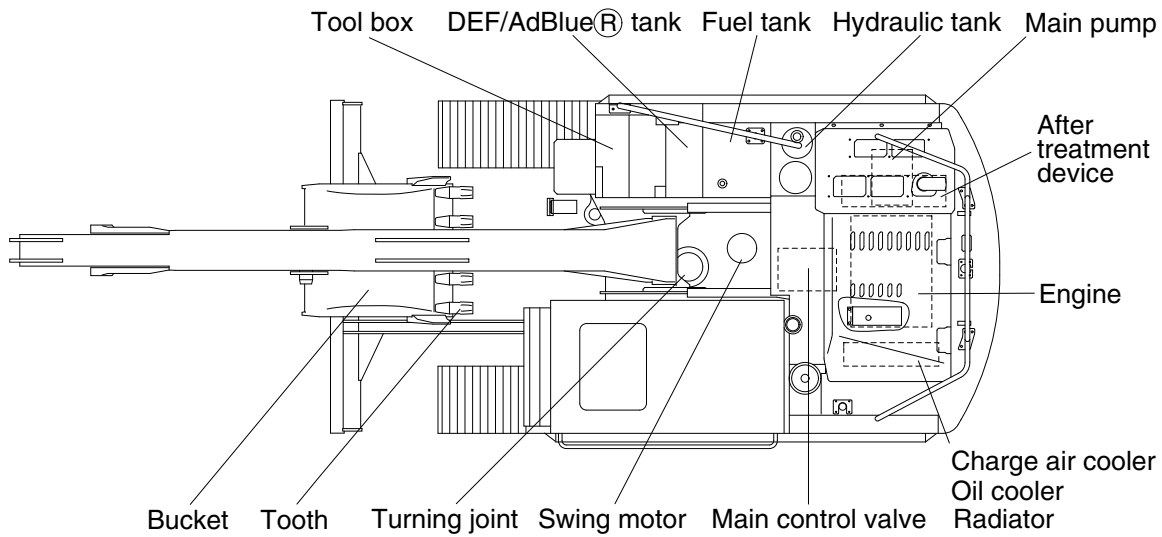

140A2SP01

2. SPECIFICATIONS


1) HX140A L, 4.6 m MONO BOOM

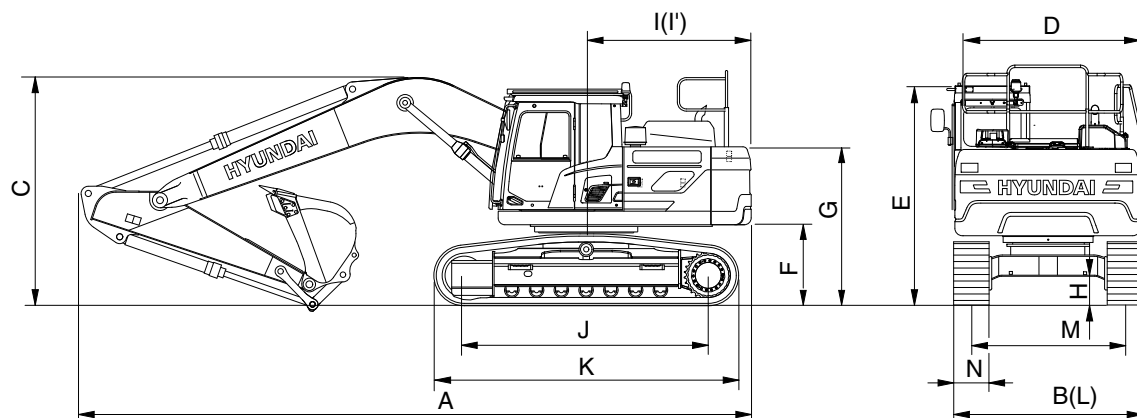

140A2SP02

Description		Unit		Specification		
		m (ft-in)	Boom	4.6 (15' 1")		
			Arm	2.5 (8' 2")	2.1 (6' 11")	3.0 (9' 10")
		mm (in)	Shoe	600 (24)		
Operating weight		kg (lb)		14405 (31760)	14350 (31640)	14470 (31900)
Overall length	A	mm (ft-in)		7810 (25' 7")	7815 (25' 8")	7775 (25' 6")
Overall width	B			2590 (8' 6")	2590 (8' 6")	2590 (8' 6")
Overall width with add footboard	B'			2590 (8' 6")	2590 (8' 6")	2590 (8' 6")
Overall height of boom	C			2730 (8' 11")	2565 (8' 5")	3160 (10' 4")
Overall width of upper structure	D			2475 (8' 1")	2475 (8' 1")	2475 (8' 1")
Overall height of cab	E			2835 (9' 4")	2835 (9' 4")	2835 (9' 4")
Ground clearance of counterweight	F			905 (3' 0")	905 (3' 0")	905 (3' 0")
Overall height of engine hood	G			2405 (7' 11")	2405 (7' 11")	2405 (7' 11")
Overall height of guardrail	G'			3085 (10' 1")	3085 (10' 1")	3085 (10' 1")
Minimum ground clearance	H			405 (1' 4")	405 (1' 4")	405 (1' 4")
Rear-end distance	I			2335 (7' 8")	2335 (7' 8")	2335 (7' 8")
Rear-end swing radius	I'			2345 (7' 8")	2345 (7' 8")	2345 (7' 8")
Distance between tumblers	J			3035 (9' 10")	3035 (9' 11")	3035 (9' 11")
Undercarriage length (without grouser)	K			3656 (12' 0")	3656 (12' 0")	3656 (12' 0")
Undercarriage length (with grouser)	K'			3706 (12' 2")	3706 (12' 2")	3706 (12' 2")
Undercarriage width	L			2590 (8' 6")	2590 (8' 6")	2590 (8' 6")
Undercarriage width with add footboard	L'			2590 (8' 6")	2590 (8' 6")	2590 (8' 6")
Track gauge	M			1990 (6' 6")	1990 (6' 6")	1990 (6' 6")
Track shoe width, standard	N			600 (2' 0")	600 (2' 0")	600 (2' 0")
Track shoe link quantity		EA		46	46	46
Travel speed (low/high)		km/hr (mph)		3.2/5.5 (2.0/3.4)	3.2/5.5 (2.0/3.4)	3.2/5.5 (2.0/3.4)
Swing speed		rpm		11.4	11.4	11.4
Gradeability		Degree (%)		35 (70)	35 (70)	35 (70)
Ground pressure		kgf/cm ² (psi)		0.37 (5.26)	0.37 (5.25)	0.37 (5.29)
Max traction force		kg (lb)		12670 (27930)	12670 (27930)	12670 (27930)


2) HX140A LD, 4.6 m MONO BOOM

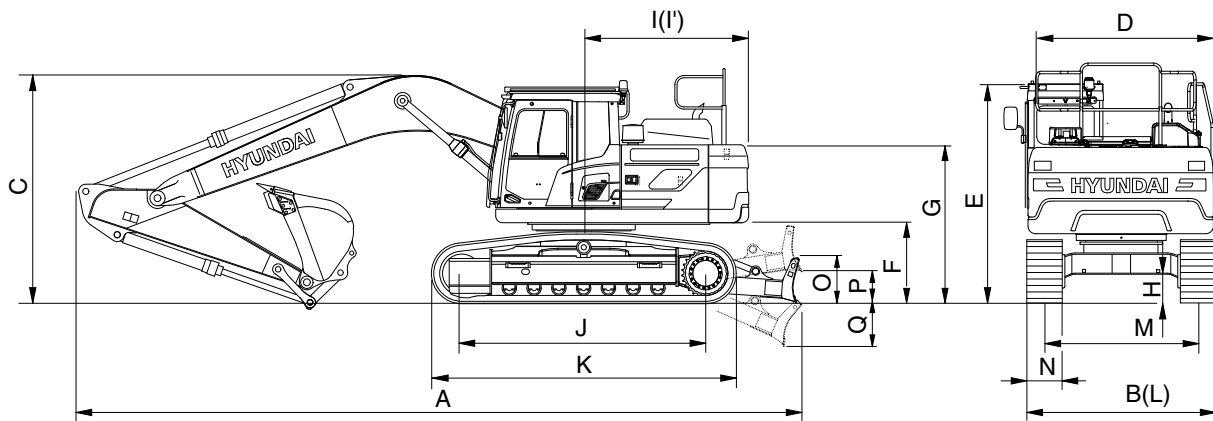

140A2SP03

Description	Unit		Specification		
	m (ft-in)	Boom	4.6 (15' 1")		
		Arm	2.5 (8' 2")	2.1 (6' 11")	3.0 (9' 10")
	mm (in)	Shoe	600 (24)		
Operating weight	kg (lb)		15235 (33590)	15175 (33460)	15295 (33720)
Overall length	A	mm (ft-in)	8135 (26' 8")	8140 (26' 8")	8100 (26' 7")
Overall width	B		2590 (8' 6")	2590 (8' 6")	2590 (8' 6")
Overall width with add footboard	B'		2590 (8' 6")	2590 (8' 6")	2590 (8' 6")
Overall height of boom	C		2730 (8' 11")	2565 (8' 5")	3160 (10' 4")
Overall width of upper structure	D		2475 (8' 1")	2475 (8' 1")	2475 (8' 1")
Overall height of cab	E		2835 (9' 4")	2835 (9' 4")	2835 (9' 4")
Ground clearance of counterweight	F		905 (3' 0")	905 (3' 0")	905 (3' 0")
Overall height of engine hood	G		2405 (7' 11")	2405 (7' 11")	2405 (7' 11")
Overall height of guardrail	G'		3085 (10' 1")	3085 (10' 1")	3085 (10' 1")
Minimum ground clearance	H		405 (1' 4")	405 (1' 4")	405 (1' 4")
Rear-end distance	I		2335 (7' 8")	2335 (7' 8")	2335 (7' 8")
Rear-end swing radius	I'		2345 (7' 8")	2345 (7' 8")	2345 (7' 8")
Distance between tumblers	J		3035 (9' 10")	3035 (9' 11")	3035 (9' 11")
Undercarriage length (without grouser)	K		3656 (12' 0")	3656 (12' 0")	3656 (12' 0")
Undercarriage length (with grouser)	K'		3706 (12' 2")	3706 (12' 2")	3706 (12' 2")
Undercarriage width	L		2590 (8' 6")	2590 (8' 6")	2590 (8' 6")
Undercarriage width with add footboard	L'		2590 (8' 6")	2590 (8' 6")	2590 (8' 6")
Track gauge	M		1990 (6' 6")	1990 (6' 6")	1990 (6' 6")
Track shoe width, standard	N		600 (2' 0")	600 (2' 0")	600 (2' 0")
Height of blade	O		590 (1' 11")	590 (1' 11")	590 (1' 11")
Ground clearance of blade up	P		500 (1' 8")	500 (1' 8")	500 (1' 8")
Depth of blade down	Q		525 (1' 9")	525 (1' 9")	525 (1' 9")
Track shoe link quantity	EA		46	46	46
Travel speed (low/high)	km/hr (mph)		3.2/5.5 (2.0/3.4)	3.2/5.5 (2.0/3.4)	3.2/5.5 (2.0/3.4)
Swing speed	rpm		11.4	11.4	11.4
Gradeability	Degree (%)		35 (70)	35 (70)	35 (70)
Ground pressure	kgf/cm ² (psi)		0.39 (5.56)	0.39 (5.55)	0.39 (5.59)
Max traction force	kg (lb)		12670 (27930)	12670 (27930)	12670 (27930)


3) HX140A L, 4.9 m 2-PIECE BOOM

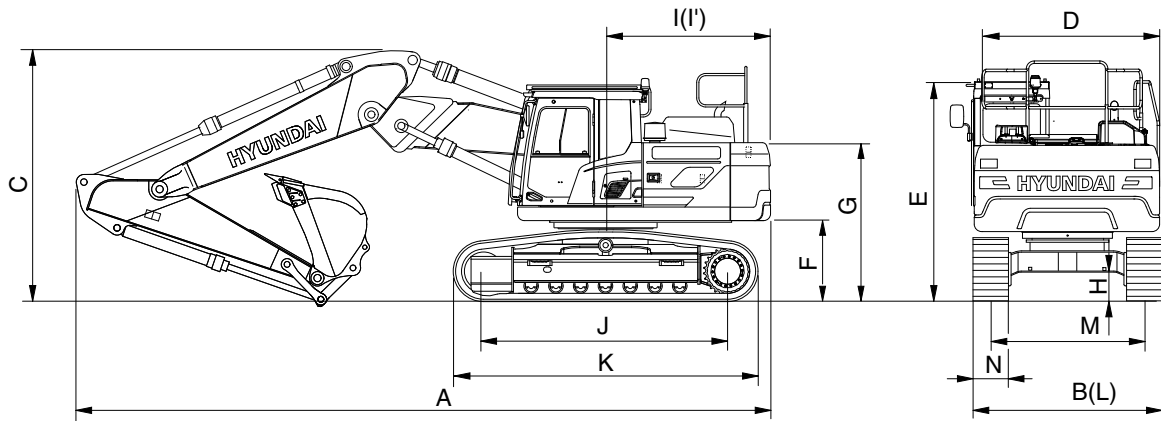

140A2SP04

Description		Unit		Specification	
		m (ft-in)	Boom	4.9 (16' 1") 2-PCS	
			Arm	2.5 (8' 2")	2.1 (6' 11")
		mm (in)	Shoe	600 (24)	
Operating weight		kg (lb)		15100 33290	15030 33140
Overall length	A	mm (ft-in)		8155 (26' 9")	8180 (26' 10")
Overall width	B			2590 (8' 6")	2590 (8' 6")
Overall width with add footboard	B'			2590 (8' 6")	2590 (8' 6")
Overall height of boom	C			2925 (9' 7")	2900 (9' 6")
Overall width of upper structure	D			2475 (8' 1")	2475 (8' 1")
Overall height of cab	E			2835 (9' 4")	2835 (9' 4")
Ground clearance of counterweight	F			905 (3' 0")	905 (3' 0")
Overall height of engine hood	G			2405 (7' 11")	2405 (7' 11")
Overall height of guardrail	G'			3085 (10' 1")	3085 (10' 1")
Minimum ground clearance	H			405 (1' 4")	405 (1' 4")
Rear-end distance	I			2335 (7' 8")	2335 (7' 8")
Rear-end swing radius	I'			2345 (7' 8")	2345 (7' 8")
Distance between tumblers	J			3035 (9' 10")	3035 (9' 11")
Undercarriage length (without grouser)	K			3656 (12' 0")	3656 (12' 0")
Undercarriage length (with grouser)	K'			3706 (12' 2")	3706 (12' 2")
Undercarriage width	L			2590 (8' 6")	2590 (8' 6")
Undercarriage width with add footboard	L'			2590 (8' 6")	2590 (8' 6")
Track gauge	M			1990 (6' 6")	1990 (6' 6")
Track shoe width, standard	N			600 (2' 0")	600 (2' 0")
Track shoe link quantity		EA		46	46
Travel speed (low/high)		km/hr (mph)		3.2 / 5.5 (2.0/3.4)	3.2 / 5.5 (2.0/3.4)
Swing speed		rpm		11.4	11.4
Gradeability		Degree (%)		35 (70)	35 (70)
Ground pressure		kgf/cm ² (psi)		0.39 (5.52)	0.39 (5.49)
Max traction force		kg (lb)		12670 (27930)	12670 (27930)


4) HX140A LD, 4.9 m 2-PIECE BOOM

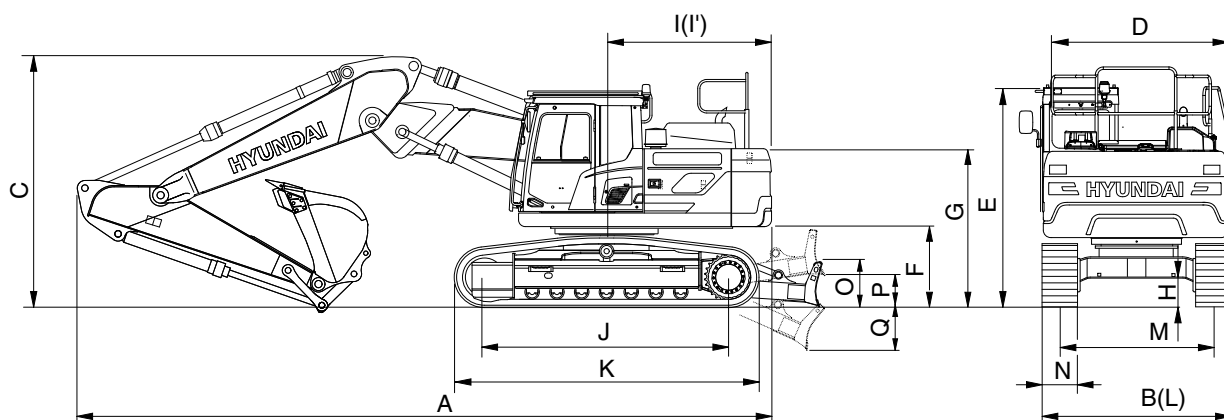

140A2SP05

Description	Unit		Specification	
	m (ft-in)	Boom	4.9 (16' 1") 2-PCS	
		Arm	2.5 (8' 2")	2.1 (6' 11")
		Shoe	600 (24)	
Operating weight	kg (lb)		15650 (34500)	15590 (34370)
Overall length	A	mm (ft-in)	8480 (27' 10")	8505 (27' 11")
Overall width	B		2590 (8' 6")	2590 (8' 6")
Overall width with add footboard	B'		2590 (8' 6")	2590 (8' 6")
Overall height of boom	C		2925 (9' 7")	2900 (9' 6")
Overall width of upper structure	D		2475 (8' 1")	2475 (8' 1")
Overall height of cab	E		2835 (9' 4")	2835 (9' 4")
Ground clearance of counterweight	F		905 (3' 0")	905 (3' 0")
Overall height of engine hood	G		2405 (7' 11")	2405 (7' 11")
Overall height of guardrail	G'		3085 (10' 1")	3085 (10' 1")
Minimum ground clearance	H		405 (1' 4")	405 (1' 4")
Rear-end distance	I		2335 (7' 8")	2335 (7' 8")
Rear-end swing radius	I'		2345 (7' 8")	2345 (7' 8")
Distance between tumblers	J		3035 (9' 10")	3035 (9' 11")
Undercarriage length (without grouser)	K		3656 (12' 0")	3656 (12' 0")
Undercarriage length (with grouser)	K'		3706 (12' 2")	3706 (12' 2")
Undercarriage width	L		2590 (8' 6")	2590 (8' 6")
Undercarriage width with add footboard	L'		2590 (8' 6")	2590 (8' 6")
Track gauge	M		1990 (6' 6")	1990 (6' 6")
Track shoe width, standard	N		600 (2' 0")	600 (2' 0")
Height of blade	O		590 (1' 11")	590 (1' 11")
Ground clearance of blade up	P		500 (1' 8")	500 (1' 8")
Depth of blade down	Q		525 (1' 9")	525 (1' 9")
Track shoe link quantity	EA		46	46
Travel speed (low/high)	km/hr (mph)		3.2 / 5.5 (2.0/3.4)	3.2 / 5.5 (2.0/3.4)
Swing speed	rpm		11.4	11.4
Gradeability	Degree (%)		35 (70)	35 (70)
Ground pressure	kgf/cm ² (psi)		0.40 (5.72)	0.40 (5.70)
Max traction force	kg (lb)		12670 (27930)	12670 (27930)


5) HX140A HW, 800 mm SHOE

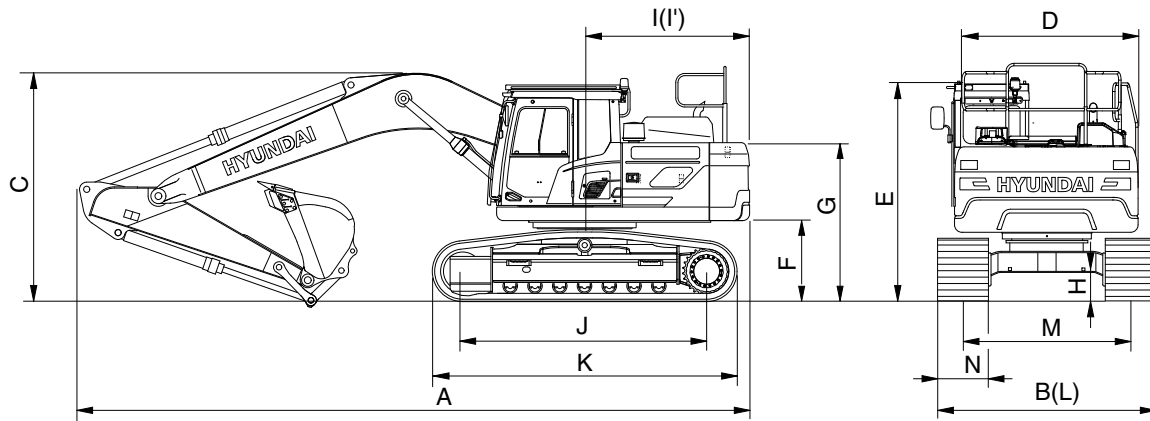

140A2SP06

Description	Unit		Specification				
	m (ft-in)	Boom	4.6 (15' 1") MONO			4.9 (16' 1") 2-PCS	
		Arm	2.5 (8' 2")	2.1 (6' 11")	3.0 (9' 10")	2.5 (8' 2")	2.1 (6' 11")
	mm (in)	Shoe	800 (32)				
Operating weight	kg (lb)		17460(38490)	17395(38350)	17525(38640)	18140(39990)	18075(39850)
Overall length	A	mm (ft-in)	7775(25' 6")	7755(25' 5")	7845(25' 9")	8155(26' 9")	8180(26' 10")
Overall width	B		2840(9' 4")	2840(9' 4")	2840(9' 4")	2840(9' 4")	2840(9' 4")
Overall width with add footboard	B'		2840(9' 4")	2840(9' 4")	2840(9' 4")	2840(9' 4")	2840(9' 4")
Overall height of boom	C		2750(9' 0")	2600(8' 6")	3120(10' 3")	2925(9' 7")	2900(9' 6")
Overall width of upper structure	D		2475(8' 1")	2475(8' 1")	2475(8' 1")	2475(8' 1")	2475(8' 1")
Overall height of cab	E		3135(10' 3")	3135(10' 3")	3135(10' 3")	3135(10' 3")	3135(10' 3")
Ground clearance of counterweight	F		1205(3' 11")	1205(3' 11")	1205(3' 11")	1205(3' 11")	1205(3' 11")
Overall height of engine hood	G		2405(7' 11")	2405(7' 11")	2405(7' 11")	2405(7' 11")	2405(7' 11")
Overall height of guardrail	G'		3385(11' 1")	3385(11' 1")	3385(11' 1")	3385(11' 1")	3385(11' 1")
Minimum ground clearance	H		600(2' 0")	600(2' 0")	600(2' 0")	600(2' 0")	600(2' 0")
Rear-end distance	I		2335(7' 8")	2335(7' 8")	2335(7' 8")	2335(7' 8")	2335(7' 8")
Rear-end swing radius	I'		2345(7' 8")	2345(7' 8")	2345(7' 8")	2345(7' 8")	2345(7' 8")
Distance between tumblers	J		3030(9' 11")	3030(9' 11")	3030(9' 11")	3030(9' 11")	3030(9' 11")
Undercarriage length (without grouser)	K		3720(12' 2")	3720(12' 2")	3720(12' 2")	3720(12' 2")	3720(12' 2")
Undercarriage length (with grouser)	K'		3770(12' 4")	3770(12' 4")	3770(12' 4")	3770(12' 4")	3770(12' 4")
Undercarriage width	L		2840(9' 4")	2840(9' 4")	2840(9' 4")	2840(9' 4")	2840(9' 4")
Undercarriage width with add footboard	L'		2840(9' 4")	2840(9' 4")	2840(9' 4")	2840(9' 4")	2840(9' 4")
Track gauge	M		2040(6' 8")	2040(6' 8")	2040(6' 8")	2040(6' 8")	2040(6' 8")
Track shoe width, standard	N		800(2' 7")	800(2' 7")	800(2' 7")	800(2' 7")	800(2' 7")
Track shoe link quantity	EA		47	47	47	47	47
Travel speed (low/high)	km/hr (mph)		2.4/4.3(1.5/2.7)	2.4/4.3(1.5/2.7)	2.4/4.3(1.5/2.7)	2.4/4.3(1.5/2.7)	2.4/4.3(1.5/2.7)
Swing speed	rpm		11.4	11.4	11.4	11.4	11.4
Gradeability	Degree (%)		35(70)	35(70)	35(70)	35(70)	35(70)
Ground pressure	kgf/cm ² (psi)		0.33(4.69)	0.33(4.69)	0.33(4.71)	0.35(4.98)	0.33(4.69)
Max traction force	kg (lb)		16660(36730)	16660(36730)	16660(36730)	16660(36730)	16660(36730)

6) HX140A HW, 900 mm SHOE

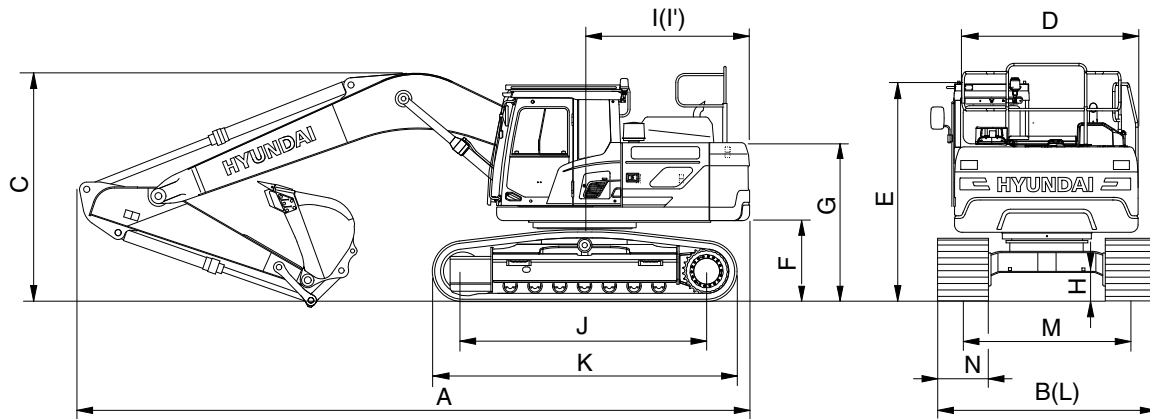


140A2SP06

Description	Unit		Specification				
	m (ft-in)	Boom	4.6 (15' 1") MONO			4.9 (16' 1") 2-PCS	
		Arm	2.5 (8' 2")	2.1 (6' 11")	3.0 (9' 10")	2.5 (8' 2")	2.1 (6' 11")
	mm (in)	Shoe	900 (36)				
Operating weight	kg (lb)		17180(37880)	17115(37730)	17245(38020)	17865(39390)	17800(39240)
Overall length	A	mm (ft-in)	7775(25' 6")	7755(25' 5")	7845(25' 9")	8155(26' 9")	8180(26' 10")
Overall width	B		2940(9' 8")	2940(9' 8")	2940(9' 8")	2940(9' 8")	2940(9' 8")
Overall width with add footboard	B'		2940(9' 8")	2940(9' 8")	2940(9' 8")	2940(9' 8")	2940(9' 8")
Overall height of boom	C		2750(9' 0")	2600(8' 6")	3120(10' 3")	2925(9' 7")	2900(9' 6")
Overall width of upper structure	D		2475(8' 1")	2475(8' 1")	2475(8' 1")	2475(8' 1")	2475(8' 1")
Overall height of cab	E		3135(10' 3")	3135(10' 3")	3135(10' 3")	3135(10' 3")	3135(10' 3")
Ground clearance of counterweight	F		1205(3' 11")	1205(3' 11")	1205(3' 11")	1205(3' 11")	1205(3' 11")
Overall height of engine hood	G		2405(7' 11")	2405(7' 11")	2405(7' 11")	2405(7' 11")	2405(7' 11")
Overall height of guardrail	G'		3385(11' 1")	3385(11' 1")	3385(11' 1")	3385(11' 1")	3385(11' 1")
Minimum ground clearance	H		600(2' 0")	600(2' 0")	600(2' 0")	600(2' 0")	600(2' 0")
Rear-end distance	I		2335(7' 8")	2335(7' 8")	2335(7' 8")	2335(7' 8")	2335(7' 8")
Rear-end swing radius	I'		2345(7' 8")	2345(7' 8")	2345(7' 8")	2345(7' 8")	2345(7' 8")
Distance between tumblers	J		3030(9' 11")	3030(9' 11")	3030(9' 11")	3030(9' 11")	3030(9' 11")
Undercarriage length (without grouser)	K		3720(12' 2")	3720(12' 2")	3720(12' 2")	3720(12' 2")	3720(12' 2")
Undercarriage length (with grouser)	K'		3770(12' 4")	3770(12' 4")	3770(12' 4")	3770(12' 4")	3770(12' 4")
Undercarriage width	L		2940(9' 8")	2940(9' 8")	2940(9' 8")	2940(9' 8")	2940(9' 8")
Undercarriage width with add footboard	L'		2940(9' 8")	2940(9' 8")	2940(9' 8")	2940(9' 8")	2940(9' 8")
Track gauge	M		2040(6' 8")	2040(6' 8")	2040(6' 8")	2040(6' 8")	2040(6' 8")
Track shoe width, standard	N		900(2' 11")	900(2' 11")	900(2' 11")	900(2' 11")	900(2' 11")
Track shoe link quantity	EA		47	47	47	47	47
Travel speed (low/high)	km/hr (mph)		2.4/4.3(1.5/2.7)	2.4/4.3(1.5/2.7)	2.4/4.3(1.5/2.7)	2.4/4.3(1.5/2.7)	2.4/4.3(1.5/2.7)
Swing speed	rpm		11.4	11.4	11.4	11.4	11.4
Gradeability	Degree (%)		35(70)	35(70)	35(70)	35(70)	35(70)
Ground pressure	kgf/cm ² (psi)		0.29(4.11)	0.29(4.11)	0.29(4.12)	0.30(4.27)	0.29(4.11)
Max traction force	kg (lb)		16660(36730)	16660(36730)	16660(36730)	16660(36730)	16660(36730)

3. WORKING RANGE AND DIGGING FORCE

1) HX140A L/LD, 4.6 m MONO BOOM

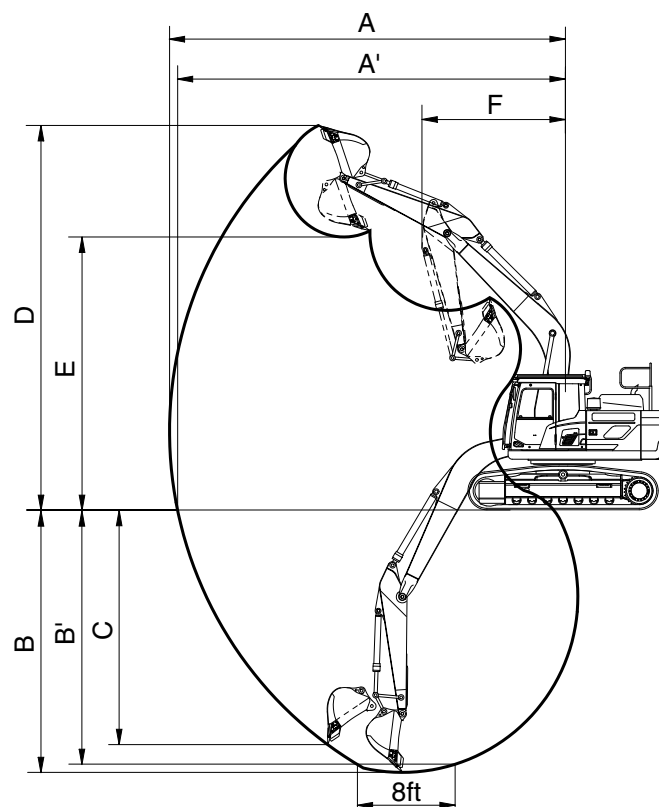


140A2SP10

Description	m (ft-in)	Boom	4.6 (15' 1")		
		Arm	2.5 (8' 2")	2.1 (6' 11")	3.0 (9' 10")
Max digging reach	mm (ft-in)	A	8290 (27' 2")	7820 (25' 8")	8670 (28' 5")
Max digging reach on ground		A'	8140 (26' 8")	7660 (25' 2")	8530 (28' 0")
Max digging depth		B	5380 (17' 8")	4980 (16' 4")	5880 (19' 3")
Max digging depth (8 ft level)		B'	5180 (17' 0")	4710 (15' 5")	5690 (18' 8")
Max vertical wall digging depth		C	4770 (15' 8")	3990 (13' 1")	4980 (16' 4")
Max digging height		D	8580 (28' 2")	8070 (26' 6")	8650 (28' 5")
Max dumping height		E	6240 (20' 6")	5790 (19' 0")	6350 (20' 10")
Min swing radius		F	2450 (8' 0")	2330 (7' 8")	2660 (8' 9")
Bucket digging force	kN	SAE	94.3 [102.4]	94.3 [102.4]	94.3 [102.4]
	kgf		9620 [10440]	9620 [10440]	9620 [10440]
	lbf		21210 [23020]	21210 [23020]	21210 [23020]
	kN	ISO	111.4 [120.9]	111.4 [120.9]	111.4 [120.9]
	kgf		11360 [12330]	11360 [12330]	11360 [12330]
	lbf		25040 [27180]	25040 [27180]	25040 [27180]
Arm digging force	kN	SAE	62.0 [67.3]	71.7 [77.9]	57.0 [61.9]
	kgf		6320 [6860]	7310 [7940]	5810 [6310]
	lbf		13930 [15120]	16120 [17500]	12810 [13910]
	kN	ISO	64.6 [70.1]	75.1 [81.6]	59.0 [64.1]
	kgf		6590 [7150]	7660 [8320]	6020 [6540]
	lbf		14530 [15760]	16890 [18340]	13270 [14420]

[] : Power boost

2) HX140A L/LD, 4.9 m 2-PIECE BOOM

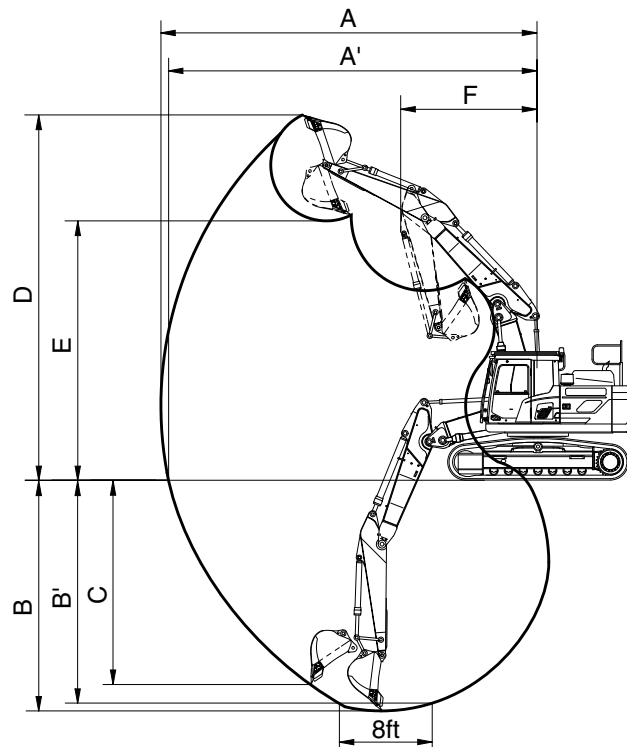


140A2SP11

Description	m (ft-in)	Boom	4.9 (16' 1") 2-PCS	
		Arm	2.5 (8' 2")	2.1 (6' 11")
Max digging reach	mm (ft-in)	A	8720 (28' 7")	8320 (27' 4")
Max digging reach on ground		A'	8580 (28' 2")	8170 (26' 10")
Max digging depth		B	5680 (18' 8")	5270 (17' 3")
Max digging depth (8 ft level)		B'	5570 (18' 3")	5160 (16' 11")
Max vertical wall digging depth		C	5080 (16' 8")	4620 (15' 2")
Max digging height		D	9310 (30' 7")	8890 (29' 2")
Max dumping height		E	6820 (22' 5")	6480 (21' 3")
Min swing radius		F	2690 (8' 10")	2820 (9' 3")
Bucket digging force	kN	SAE	95.1 [103.3]	95.1 [103.3]
	kgf		9700 [10530]	9700 [10530]
	lbf		21380 [23210]	21380 [23210]
	kN	ISO	112.4 [122.0]	112.4 [122.0]
	kgf		11460 [12440]	11460 [12440]
	lbf		25260 [27430]	25260 [27430]
Arm digging force	kN	SAE	63.5 [69.0]	74.7 [81.1]
	kgf		6480 [7040]	7620 [8270]
	lbf		14290 [15520]	16800 [18230]
	kN	ISO	66.2 [71.9]	78.3 [84.9]
	kgf		6750 [7330]	7980 [8660]
	lbf		14880 [16160]	17590 [19090]

[] : Power boost

3) HX140A HW, 4.6 m MONO BOOM

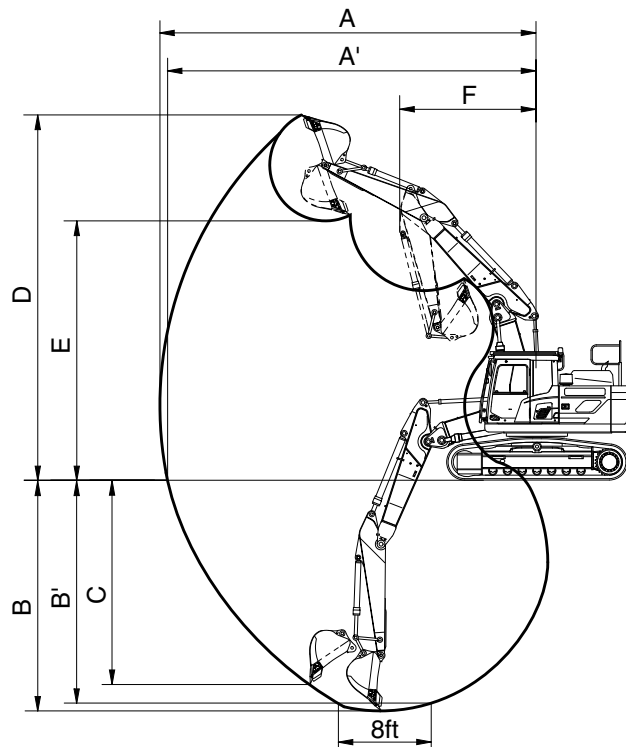


140A2SP11

Description	m (ft-in)	Boom	4.6 (15' 1")		
		Arm	2.5 (8' 2")	2.1 (6' 11")	3.0 (9' 10")
Max digging reach	mm (ft-in)	A	8290 (27' 2")	7820 (25' 8")	8670 (28' 5")
Max digging reach on ground		A'	8080 (26' 6")	7600 (24' 11")	8470 (27' 9")
Max digging depth		B	5110 (16' 9")	4710 (15' 5")	5610 (18' 5")
Max digging depth (8 ft level)		B'	4900 (16' 1")	4430 (14' 6")	5410 (17' 9")
Max vertical wall digging depth		C	4490 (14' 9")	3710 (12' 2")	4700 (15' 5")
Max digging height		D	8860 (29' 1")	8350 (27' 5")	8930 (29' 4")
Max dumping height		E	6520 (21' 5")	6070 (19' 11")	6620 (21' 9")
Min swing radius		F	2450 (8' 0")	2330 (7' 8")	2660 (8' 9")
Bucket digging force	kN	SAE	94.3 [102.4]	94.3 [102.4]	94.3 [102.4]
	kgf		9620 [10440]	9620 [10440]	9620 [10440]
	lbf		21210 [23020]	21210 [23020]	21210 [23020]
	kN	ISO	111.4 [120.9]	111.4 [120.9]	111.4 [120.9]
	kgf		11360 [12330]	11360 [12330]	11360 [12330]
	lbf		25040 [27180]	25040 [27180]	25040 [27180]
Arm digging force	kN	SAE	62.0 [67.3]	71.7 [77.9]	57.0 [61.9]
	kgf		6320 [6860]	7310 [7940]	5810 [6310]
	lbf		13930 [15120]	16120 [17500]	12810 [13910]
	kN	ISO	64.6 [70.1]	75.1 [81.6]	59.0 [64.1]
	kgf		6590 [7150]	7660 [8320]	6020 [6540]
	lbf		14530 [15760]	16890 [18340]	13270 [14420]

[] : Power boost

4) HX140A HW, 4.9 m 2-PIECE BOOM

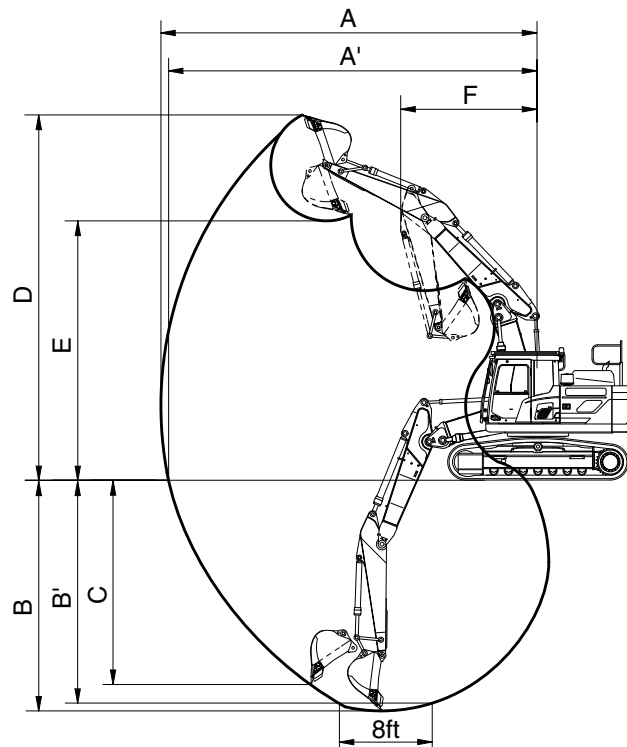

140A2SP11

Description	m (ft-in)	Boom	4.9 (16' 1") 2-PCS	
		Arm	2.5 (8' 2")	2.1 (6' 11")
Max digging reach	mm (ft-in)	A	8720 (28' 7")	8320 (27' 4")
Max digging reach on ground		A'	8580 (28' 2")	8170 (26' 10")
Max digging depth		B	5680 (18' 8")	5270 (17' 3")
Max digging depth (8 ft level)		B'	5570 (18' 3")	5160 (16' 11")
Max vertical wall digging depth		C	5080 (16' 8")	4620 (15' 2")
Max digging height		D	9310 (30' 7")	8890 (29' 2")
Max dumping height		E	6365 (20' 11")	6480 (21' 3")
Min swing radius		F	2660 (8' 9")	2820 (9' 3")
Bucket digging force	kN	SAE	95.1 [103.3]	95.1 [103.3]
	kgf		9700 [10530]	9700 [10530]
	lbf		21380 [23210]	21380 [23210]
	kN	ISO	112.4 [122.0]	112.4 [122.0]
	kgf		11460 [12440]	11460 [12440]
	lbf		25260 [27430]	25260 [27430]
Arm digging force	kN	SAE	63.5 [69.0]	74.7 [81.1]
	kgf		6480 [7040]	7620 [8270]
	lbf		14290 [15520]	16800 [18230]
	kN	ISO	66.2 [71.9]	78.3 [84.9]
	kgf		6750 [7330]	7980 [8660]
	lbf		14880 [16160]	17590 [19090]

[] : Power boost

4. WEIGHT

Item	Qty	HX140A L		HX140A LD		HX140A HW	
	EA	kg	lb	kg	lb	kg	lb
Upperstructure assembly							
· Main frame weld assembly	1	1141	2515	1141	2515	1141	2515
· Engine assembly	1	360	794	360	794	360	794
· Aftertreatment assy	1	64	141	64	141	64	141
· Main pump assembly	1	92	203	92	203	92	203
· Main control valve assembly	1	140	309	140	309	140	309
· Swing motor assembly	1	130	287	130	287	130	287
· Hydraulic oil tank WA	1	135	299	135	299	136	300
· Fuel tank WA	1	144	318	144	318	138	305
· Counterweight	1	2100	4630	2100	4630	2400	5291
· Cab assembly	1	495	1090	495	1090	495	1090
Lower chassis assembly							
· Track frame weld assembly	1	1497	3300	1667	3675	2199	4848
· Dozer blade assembly	1	-	-	503	1109	-	-
· Swing bearing	1	214	472	214	472	214	472
· Travel motor assembly	2	278	613	278	613	299	659
· Turning joint	1	56	123	63	139	117	258
· Sprocket	2	40	87	40	87	49	109
· Track recoil spring	2	93	204	93	204	132	291
· Idler	2	104	229	104	229	151	332
· Upper roller	2	19	42	19	42	40	88
· Lower roller	14	35	77	35	77	40	88
· Track Guard-General for LC	2	36	79	36	79	-	-
· Track Guard-Full for forest	-	-	-	-	-	592	1305
· Track Guard-General for MUD	-	-	-	-	-	86	190
· Track-chain assembly (500 mm, 46 link)	2	922	2033	922	2033	-	-
· Track-chain assembly (600 mm, 46 link)	2	1027	2263	1027	2263	-	-
· Track-chain assembly (700 mm, 46 link)	2	1131	2494	1131	2494	-	-
· Track-chain assembly (700 mm, HW)	2	-	-	-	-	1250	2755
· Track-chain assembly (800 mm, HW)	2	-	-	-	-	1367	3013
· Track-chain assembly (900 mm, HW)	2	-	-	-	-	1482	3267

※ This information is different with operating and transportation weight because it is not including harness, pipe, oil, fuel so on.

※ Refer to Transportation for actual weight information and Specifications for operating weight.

Item	Qty	HX140A L		HX140A LD		HX140A HW	
	EA	kg	lb	kg	lb	kg	lb
Front attachment assembly							
· 4.6 m mono boom assembly	1	815	1797	815	1797	815	1797
· 4.1 m mono boom assembly	1	760	1675	760	1675	760	1675
· 4.9 m 2-piece boom assembly	1	1024	2258	1024	2258	1024	2258
· 2.5 m arm assembly	1	450	992	450	992	450	992
· 1.9 m arm assembly	1	360	794	360	794	360	794
· 2.1 m arm assembly	1	390	860	390	860	390	860
· 3.0 m arm assembly	1	485	1069	485	1069	485	1069
· 2.5 m arm assembly (w/o reinforce)	1	436	961	436	961	436	961
· 3.0 m arm assembly (w/o reinforce)	1	471	1038	471	1038	471	1038
· 0.58 m ³ bucket assembly	1	438	966	438	966	438	966
· 0.52 m ³ bucket assembly	1	411	906	411	906	411	906
· 0.65 m ³ bucket assembly	1	459	1012	459	1012	459	1012
· 0.50 m ³ bucket assembly	1	439	968	439	968	439	968
· 0.62 m ³ bucket assembly	1	491	1082	491	1082	491	1082
· 0.66 m ³ bucket assembly	1	526	1160	526	1160	526	1160
· 0.77 m ³ bucket assembly	1	578	1274	578	1274	578	1274
· Boom cylinder assembly	2	119	262	119	262	119	262
· Arm cylinder assembly	1	145	320	145	320	145	320
· Bucket cylinder assembly	1	104	229	104	229	104	229
· 2-piece boom cylinder assembly	1	170	375	170	375	168	370
· Dozer cylinder assembly	2	54	120	54	120	51	112
· Bucket control linkage total	1	113	249	113	249	113	249

※ This information is different with operating and transportation weight because it is not including harness, pipe, oil, fuel so on.


※ Refer to Transportation for actual weight information and Specifications for operating weight.









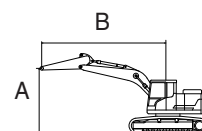

5. LIFTING CAPACITIES

1) HX140A L

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A L	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2100	600	-	-	-	-	-

 : Rating over-front
  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3860 *8510	*3860 *8510			*3020 *6660	*3020 *6660	4.79 (15.7)
4.5 m (14.8 ft)	kg lb					*4350 *9590	4120 9080			*2830 *6240	2720 6000	5.87 (19.2)
3.0 m (9.8 ft)	kg lb			*7500 *16530	7270 16030	*5200 *11460	3940 8690	3870 8530	2570 5670	*2880 *6350	2320 5110	6.42 (21.1)
1.5 m (4.9 ft)	kg lb					5840 12870	3730 8220	3780 8330	2490 5490	*3120 *6880	2180 4810	6.59 (21.6)
0.0 m (0.0 ft)	kg lb			*6970 *15370	6490 14310	5680 12520	3590 7910	3720 8200	2430 5360	3390 7470	2230 4920	6.41 (21.0)
-1.5 m (-4.9 ft)	kg lb	*6030 *13290	*6030 *13290	*9760 *21520	6520 14370	5650 12460	3560 7850			3870 8530	2520 5560	5.83 (19.1)
-3.0 m (-9.8 ft)	kg lb			*7980 *17590	6650 14660	*5380 *11860	3650 8050			*5000 *11020	3420 7540	4.72 (15.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.










 
The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A L	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2100	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3670 *8090	*3670 *8090			*2180 *4810	*2180 *4810	5.42 (17.8)
4.5 m (14.8 ft)	kg lb					*3930 *8660	*3930 *8660	*3210 *7080	2650 5840	*2020 *4450	*2020 *4450	6.39 (21.0)
3.0 m (9.8 ft)	kg lb			*6610 *14570	*6610 *14570	*4820 *10630	3970 8750	3880 8550	2580 5690	*2010 *4430	*2010 *4430	6.90 (22.6)
1.5 m (4.9 ft)	kg lb			*7930 *17480	6750 14880	5860 12920	3740 8250	3780 8330	2490 5490	*2120 *4670	1960 4320	7.06 (23.2)
0.0 m (0.0 ft)	kg lb			*6750 *14880	6470 14260	5680 12520	3580 7890	3690 8140	2410 5310	*2380 *5250	2000 4410	6.89 (22.6)
-1.5 m (-4.9 ft)	kg lb	*4910 *10820	*4910 *10820	*9970 *21980	6450 14220	5610 12370	3520 7760	3670 8090	2390 5270	*2910 *6420	2220 4890	6.36 (20.9)
-3.0 m (-9.8 ft)	kg lb	*8760 *19310	*8760 *19310	*8640 *19050	6560 14460	5660 12480	3570 7870			*4220 *9300	2830 6240	5.36 (17.6)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.






 

 


The difference between the weight of a work tool attachment must be subtracted.

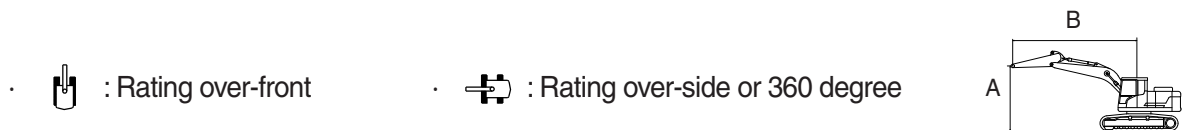Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A L	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2100	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2440 *5380	*2440 *5380	4.34 (14.2)
6.0 m (19.7 ft)	kg lb									*2070 *4560	*2070 *4560	5.91 (19.4)
4.5 m (14.8 ft)	kg lb					*3420 *7540	*3420 *7540	*3220 *7100	2690 5930	*1960 *4320	*1960 *4320	6.81 (22.4)
3.0 m (9.8 ft)	kg lb			*5510 *12150	*5510 *12150	*4340 *9570	4040 8910	*3830 *8440	2610 5750	*1980 *4370	1910 4210	7.30 (23.9)
1.5 m (4.9 ft)	kg lb			*8570 *18890	6910 15230	*5510 *12150	3790 8360	3800 8380	2500 5510	*2100 *4630	1810 3990	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*7920 *17460	6490 14310	*5690 12540	3590 7910	3690 8140	2410 5310	*2360 *5200	1830 4030	7.28 (23.9)
-1.5 m (-4.9 ft)	kg lb	*4680 *10320	*4680 *10320	*9710 *21410	6380 14070	5580 12300	3490 7690	3640 8020	2360 5200	*2870 *6330	2000 4410	6.78 (22.3)
-3.0 m (-9.8 ft)	kg lb	*7710 *17000	*7710 *17000	*9300 *20500	6450 14220	5600 12350	3510 7740			3800 8380	2460 5420	5.86 (19.2)
-4.5 m (-14.8 ft)	kg lb			*6670 *14700	6670 14700					*4510 *9940	3980 8770	4.24 (13.9)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.











Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A L	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2400	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3860 *8510	*3860 *8510			*3020 *6660	*3020 *6660	4.79 (15.7)
4.5 m (14.8 ft)	kg lb					*4350 *9590	4330 9550			*2830 *6240	*2830 *6240	5.87 (19.2)
3.0 m (9.8 ft)	kg lb			*7500 *16530	*7500 *16530	*5200 *11460	4150 9150	4050 8930	2720 6000	*2880 *6350	2450 5400	6.42 (21.1)
1.5 m (4.9 ft)	kg lb					6110 13470	3930 8660	3960 8730	2640 5820	*3120 *6880	2310 5090	6.59 (21.6)
0.0 m (0.0 ft)	kg lb			*6970 *15370	6860 15120	5950 13120	3800 8380	3900 8600	2580 5690	3550 7830	2360 5200	6.41 (21.0)
-1.5 m (-4.9 ft)	kg lb	*6030 *13290	*6030 *13290	*9760 *21520	6880 15170	5920 13050	3770 8310			4050 8930	2670 5890	5.83 (19.1)
-3.0 m (-9.8 ft)	kg lb			*7980 *17590	7020 15480	*5380 *11860	3850 8490			*5000 *11020	3620 7980	4.72 (15.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.











The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A L	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2400	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3670 *8090	*3670 *8090			*2180 *4810	*2180 *4810	5.42 (17.8)
4.5 m (14.8 ft)	kg lb					*3930 *8660	*3930 *8660	*3210 *7080	2790 6150	*2020 *4450	*2020 *4450	6.39 (21.0)
3.0 m (9.8 ft)	kg lb			*6610 *14570	*6610 *14570	*4820 *10630	4180 9220	4060 8950	2730 6020	*2010 *4430	*2010 *4430	6.90 (22.6)
1.5 m (4.9 ft)	kg lb			*7930 *17480	7120 15700	*5900 *13010	3950 8710	3960 8730	2630 5800	*2120 *4670	2080 4590	7.06 (23.2)
0.0 m (0.0 ft)	kg lb			*6750 *14880	*6750 *14880	5950 13120	3790 8360	3870 8530	2560 5640	*2380 *5250	2120 4670	6.89 (22.6)
-1.5 m (-4.9 ft)	kg lb	*4910 *10820	*4910 *10820	*9970 *21980	6820 15040	5880 12960	3730 8220	3850 8490	2530 5580	*2910 *6420	2350 5180	6.36 (20.9)
-3.0 m (-9.8 ft)	kg lb	*8760 *19310	*8760 *19310	*8640 *19050	6920 15260	*5860 *12920	3780 8330			*4220 *9300	3000 6610	5.36 (17.6)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.


 






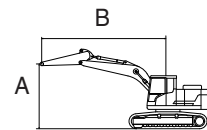

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A L	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2400	600	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2440 *5380	*2440 *5380	4.34 (14.2)
6.0 m (19.7 ft)	kg lb									*2070 *4560	*2070 *4560	5.91 (19.4)
4.5 m (14.8 ft)	kg lb					*3420 *7540	*3420 *7540	*3220 *7100	2840 6260	*1960 *4320	*1960 *4320	6.81 (22.4)
3.0 m (9.8 ft)	kg lb			*5510 *12150	*5510 *12150	*4340 *9570	4250 9370	*3830 *8440	2750 6060	*1980 *4370	*1980 *4370	7.30 (23.9)
1.5 m (4.9 ft)	kg lb			*8570 *18890	7270 16030	*5510 *12150	3990 8800	3980 8770	2640 5820	*2100 *4630	1920 4230	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*7920 *17460	6850 15100	5960 13140	3790 8360	3870 8530	2550 5620	*2360 *5200	1950 4300	7.28 (23.9)
-1.5 m (-4.9 ft)	kg lb	*4680 *10320	*4680 *10320	*9710 *21410	6750 14880	5850 12900	3700 8160	3820 8420	2500 5510	*2870 *6330	2130 4700	6.78 (22.3)
-3.0 m (-9.8 ft)	kg lb	*7710 *17000	*7710 *17000	*9300 *20500	6810 15010	5870 12940	3710 8180			3980 8770	2610 5750	5.86 (19.2)
-4.5 m (-14.8 ft)	kg lb			*6670 *14700	*6670 *14700					*4510 *9940	4200 9260	4.24 (13.9)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.


The difference between the weight of a work tool attachment must be subtracted.







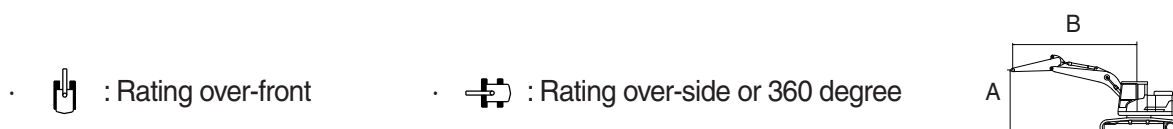

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A L	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4939	2100	2400	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4050 *8930	*4050 *8930	3.64 (12.0)
6.0 m (19.7 ft)	kg lb			*3480 *7670	*3480 *7670			*3600 *7940	3260 7190	5.43 (17.8)
4.5 m (14.8 ft)	kg lb			*3850 *8490	*3850 *8490	*3680 *8110	2780 6130	*3310 *7300	2490 5490	6.40 (21.0)
3.0 m (9.8 ft)	kg lb			*4800 *10580	4110 9060	*3990 *8800	2700 5950	3260 7190	2170 4780	6.91 (22.7)
1.5 m (4.9 ft)	kg lb			*5860 *12920	3850 8490	3950 8710	2590 5710	3100 6830	2050 4520	7.07 (23.2)
0.0 m (0.0 ft)	kg lb			5890 12990	3700 8160	3860 8510	2520 5560	3180 7010	2090 4610	6.90 (22.6)
-1.5 m (-4.9 ft)	kg lb	*7680 *16930	6740 14860	5860 12920	3670 8090	3840 8470	2500 5510	3550 7830	2320 5110	6.37 (20.9)
-3.0 m (-9.8 ft)	kg lb			*5890 *12990	3740 8250					

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.







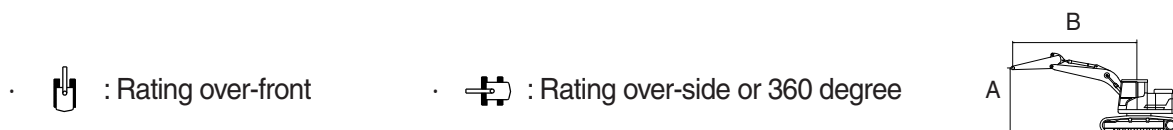

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A L	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4939	2500	2400	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*3060 *6750	*3060 *6750	4.39 (14.4)
6.0 m (19.7 ft)	kg lb			*3050 *6720	*3050 *6720			*2500 *5510	*2500 *5510	5.95 (19.5)
4.5 m (14.8 ft)	kg lb			*3460 *7630	*3460 *7630	*3360 *7410	2800 6170	*2310 *5090	2240 4940	6.85 (22.5)
3.0 m (9.8 ft)	kg lb			*4430 *9770	4150 9150	*3730 *8220	2710 5970	*2270 *5000	1970 4340	7.33 (24.0)
1.5 m (4.9 ft)	kg lb			*5550 *12240	3860 8510	3940 8690	2580 5690	*2350 *5180	1870 4120	7.48 (24.5)
0.0 m (0.0 ft)	kg lb	*3760 *8290	*3760 *8290	5870 12940	3680 8110	3840 8470	2490 5490	*2560 *5640	1900 4190	7.31 (24.0)
-1.5 m (-4.9 ft)	kg lb	*7010 *15450	6630 14620	5800 12790	3620 7980	3790 8360	2450 5400	*2980 *6570	2080 4590	6.82 (22.4)
-3.0 m (-9.8 ft)	kg lb	*9000 *19840	6740 14860	5850 12900	3660 8070			*3900 *8600	2570 5670	5.90 (19.4)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.


▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.






 


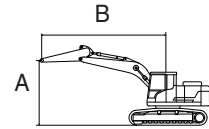

2) HX140A LD

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2100	600	-	Down	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3860 *8510	*3860 *8510			*3020 *6660	*3020 *6660	4.79 (15.7)
4.5 m (14.8 ft)	kg lb					*4350 *9590	*4350 *9590			*2830 *6240	*2830 *6240	5.87 (19.2)
3.0 m (9.8 ft)	kg lb			*7500 *16530	*7500 *16530	*5200 *11460	4510 9940	*4400 *9700	2950 6500	*2880 *6350	2660 5860	6.42 (21.1)
1.5 m (4.9 ft)	kg lb					*6190 *13650	4300 9480	*4770 *10520	2870 6330	*3120 *6880	2510 5530	6.59 (21.6)
0.0 m (0.0 ft)	kg lb			*6970 *15370	*6970 *15370	*6760 *14900	4160 9170	*4990 *11000	2810 6190	*3640 *8020	2570 5670	6.41 (21.0)
-1.5 m (-4.9 ft)	kg lb	*6030 *13290	*6030 *13290	*9760 *21520	7680 16930	*6620 *14590	4130 9110			*4770 *10520	2910 6420	5.83 (19.1)
-3.0 m (-9.8 ft)	kg lb			*7980 *17590	7820 17240	*5380 *11860	4220 9300			*5000 *11020	3950 8710	4.72 (15.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.









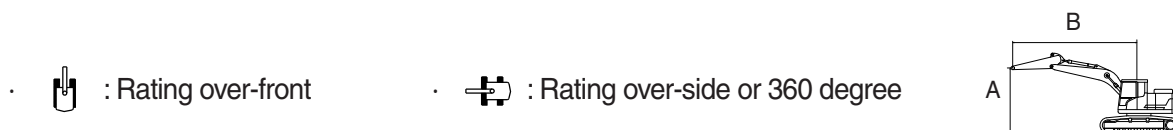

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2100	600	-	Up	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3860 *8510	*3860 *8510			*3020 *6660	*3020 *6660	4.79 (15.7)
4.5 m (14.8 ft)	kg lb					*4350 *9590	4320 9520			*2830 *6240	*2830 *6240	5.87 (19.2)
3.0 m (9.8 ft)	kg lb			*7500 *16530	*7500 *16530	*5200 *11460	4130 9110	3840 8470	2710 5970	*2880 *6350	2440 5380	6.42 (21.1)
1.5 m (4.9 ft)	kg lb					5790 12760	3920 8640	3750 8270	2630 5800	*3120 *6880	2300 5070	6.59 (21.6)
0.0 m (0.0 ft)	kg lb			*6970 *15370	6830 15060	5640 12430	3790 8360	3690 8140	2570 5670	3360 7410	2350 5180	6.41 (21.0)
-1.5 m (-4.9 ft)	kg lb	*6030 *13290	*6030 *13290	*9760 *21520	6860 15120	5610 12370	3760 8290			3840 8470	2660 5860	5.83 (19.1)
-3.0 m (-9.8 ft)	kg lb			*7980 *17590	7000 15430	*5380 *11860	3840 8470			*5000 *11020	3600 7940	4.72 (15.5)

Note 1. Lifting capacity are based on ISO 10567.

- Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
- The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).
- *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.











The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2100	600	-	Down	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3670 *8090	*3670 *8090			*2180 *4810	*2180 *4810	5.42 (17.8)
4.5 m (14.8 ft)	kg lb					*3930 *8660	*3930 *8660	*3210 *7080	3020 6660	*2020 *4450	*2020 *4450	6.39 (21.0)
3.0 m (9.8 ft)	kg lb			*6610 *14570	*6610 *14570	*4820 *10630	4550 10030	*4140 *9130	2960 6530	*2010 *4430	*2010 *4430	6.90 (22.6)
1.5 m (4.9 ft)	kg lb			*7930 *17480	7920 17460	*5900 *13010	4320 9520	*4590 *10120	2860 6310	*2120 *4670	*2120 *4670	7.06 (23.2)
0.0 m (0.0 ft)	kg lb			*6750 *14880	*6750 *14880	*6630 *14620	4150 9150	*4920 *10850	2780 6130	*2380 *5250	2300 5070	6.89 (22.6)
-1.5 m (-4.9 ft)	kg lb	*4910 *10820	*4910 *10820	*9970 *21980	7610 16780	*6700 *14770	4090 9020	*4830 *10650	2760 6080	*2910 *6420	2560 5640	6.36 (20.9)
-3.0 m (-9.8 ft)	kg lb	*8760 *19310	*8760 *19310	*8640 *19050	7720 17020	*5860 *12920	4140 9130			*4220 *9300	3270 7210	5.36 (17.6)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.







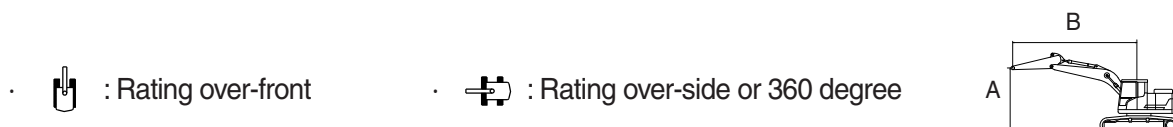


 
The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2100	600	-	Up	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3670 *8090	*3670 *8090			*2180 *4810	*2180 *4810	5.42 (17.8)
4.5 m (14.8 ft)	kg lb					*3930 *8660	*3930 *8660	*3210 *7080	2780 6130	*2020 *4450	*2020 *4450	6.39 (21.0)
3.0 m (9.8 ft)	kg lb			*6610 *14570	*6610 *14570	*4820 *10630	4170 9190	3850 8490	2720 6000	*2010 *4430	*2010 *4430	6.90 (22.6)
1.5 m (4.9 ft)	kg lb			*7930 *17480	7090 15630	5820 12830	3940 8690	3750 8270	2620 5780	*2120 *4670	2070 4560	7.06 (23.2)
0.0 m (0.0 ft)	kg lb			*6750 *14880	*6750 *14880	5630 12410	3770 8310	3670 8090	2550 5620	*2380 *5250	2110 4650	6.89 (22.6)
-1.5 m (-4.9 ft)	kg lb	*4910 *10820	*4910 *10820	*9970 *21980	6790 14970	5570 12280	3720 8200	3640 8020	2520 5560	*2910 *6420	2340 5160	6.36 (20.9)
-3.0 m (-9.8 ft)	kg lb	*8760 *19310	*8760 *19310	*8640 *19050	6900 15210	5620 12390	3760 8290			*4220 *9300	2990 6590	5.36 (17.6)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.






 

 

 
The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

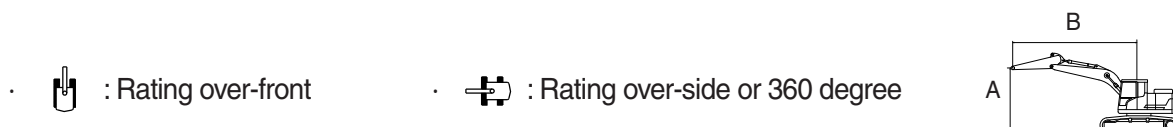▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2100	600	-	Down	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2440 *5380	*2440 *5380	4.34 (14.2)
6.0 m (19.7 ft)	kg lb									*2070 *4560	*2070 *4560	5.91 (19.4)
4.5 m (14.8 ft)	kg lb					*3420 *7540	*3420 *7540	*3220 *7100	3070 6770	*1960 *4320	*1960 *4320	6.81 (22.4)
3.0 m (9.8 ft)	kg lb			*5510 *12150	*5510 *12150	*4340 *9570	*4340 *9570	*3830 *8440	2990 6590	*1980 *4370	*1980 *4370	7.30 (23.9)
1.5 m (4.9 ft)	kg lb			*8570 *18890	8090 17840	*5510 *12150	4360 9610	*4350 *9590	2880 6350	*2100 *4630	2090 4610	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*7920 *17460	7650 16870	*6410 *14130	4160 9170	*4790 *10560	2780 6130	*2360 *5200	2120 4670	7.28 (23.9)
-1.5 m (-4.9 ft)	kg lb	*4680 *10320	*4680 *10320	*9710 *21410	7540 16620	*6710 *14790	4060 8950	*4900 *10800	2730 6020	*2870 *6330	2320 5110	6.78 (22.3)
-3.0 m (-9.8 ft)	kg lb	*7710 *17000	*7710 *17000	*9300 *20500	7610 16780	*6230 *13730	4070 8970			*4050 *8930	2850 6280	5.86 (19.2)
-4.5 m (-14.8 ft)	kg lb			*6670 *14700	*6670 *14700					*4510 *9940	*4510 *9940	4.24 (13.9)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.


The difference between the weight of a work tool attachment must be subtracted.






 

 

 
Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

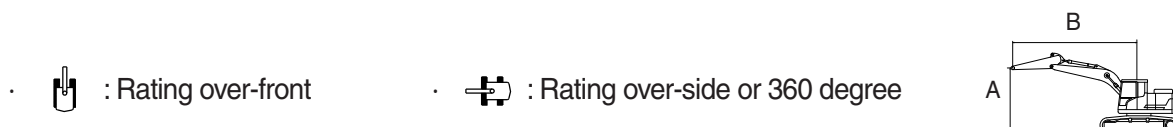Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2100	600	-	Up	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2440 *5380	*2440 *5380	4.34 (14.2)
6.0 m (19.7 ft)	kg lb									*2070 *4560	*2070 *4560	5.91 (19.4)
4.5 m (14.8 ft)	kg lb					*3420 *7540	*3420 *7540	*3220 *7100	2830 6240	*1960 *4320	*1960 *4320	6.81 (22.4)
3.0 m (9.8 ft)	kg lb			*5510 *12150	*5510 *12150	*4340 *9570	4230 9330	*3830 *8440	2750 6060	*1980 *4370	*1980 *4370	7.30 (23.9)
1.5 m (4.9 ft)	kg lb			*8570 *18890	7250 15980	*5510 *12150	3980 8770	3770 8310	2640 5820	*2100 *4630	1910 4210	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*7920 *17460	6830 15060	5650 12460	3780 8330	3660 8070	2540 5600	*2360 *5200	1940 4280	7.28 (23.9)
-1.5 m (-4.9 ft)	kg lb	*4680 *10320	*4680 *10320	*9710 *21410	6730 14840	5540 12210	3690 8140	3610 7960	2490 5490	*2870 *6330	2120 4670	6.78 (22.3)
-3.0 m (-9.8 ft)	kg lb	*7710 *17000	*7710 *17000	*9300 *20500	6790 14970	5550 12240	3700 8160			3770 8310	2600 5730	5.86 (19.2)
-4.5 m (-14.8 ft)	kg lb			*6670 *14700	*6670 *14700					*4510 *9940	4190 9240	4.24 (13.9)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.


The difference between the weight of a work tool attachment must be subtracted.









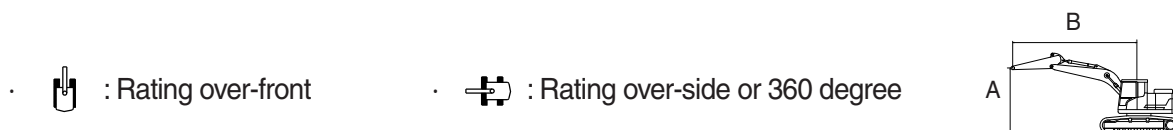

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2400	600	-	Down	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3860 *8510	*3860 *8510			*3020 *6660	*3020 *6660	4.79 (15.7)
4.5 m (14.8 ft)	kg lb					*4350 *9590	*4350 *9590			*2830 *6240	*2830 *6240	5.87 (19.2)
3.0 m (9.8 ft)	kg lb			*7500 *16530	*7500 *16530	*5200 *11460	4730 10430	*4400 *9700	3100 6830	*2880 *6350	2800 6170	6.42 (21.1)
1.5 m (4.9 ft)	kg lb					*6190 *13650	4520 9960	*4770 *10520	3020 6660	*3120 *6880	2640 5820	6.59 (21.6)
0.0 m (0.0 ft)	kg lb			*6970 *15370	*6970 *15370	*6760 *14900	4380 9660	*4990 *11000	2960 6530	*3640 *8020	2710 5970	6.41 (21.0)
-1.5 m (-4.9 ft)	kg lb	*6030 *13290	*6030 *13290	*9760 *21520	8070 17790	*6620 *14590	4350 9590			*4770 *10520	3070 6770	5.83 (19.1)
-3.0 m (-9.8 ft)	kg lb			*7980 *17590	*7980 *17590	*5380 *11860	4430 9770			*5000 *11020	4160 9170	4.72 (15.5)

Note 1. Lifting capacity are based on ISO 10567.

- Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
- The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).
- *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.









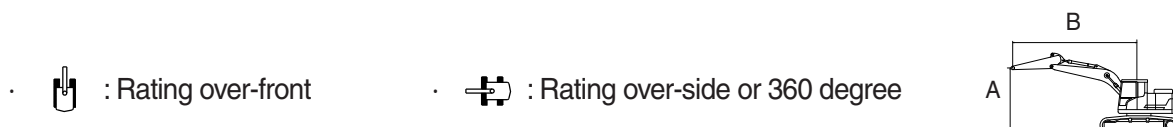

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2400	600	-	Up	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3860 *8510	*3860 *8510			*3020 *6660	*3020 *6660	4.79 (15.7)
4.5 m (14.8 ft)	kg lb					*4350 *9590	*4350 *9590			*2830 *6240	*2830 *6240	5.87 (19.2)
3.0 m (9.8 ft)	kg lb			*7500 *16530	*7500 *16530	*5200 *11460	4340 9570	4020 8860	2850 6280	*2880 *6350	2570 5670	6.42 (21.1)
1.5 m (4.9 ft)	kg lb					6060 13360	4130 9110	3930 8660	2770 6110	*3120 *6880	2430 5360	6.59 (21.6)
0.0 m (0.0 ft)	kg lb			*6970 *15370	*6970 *15370	5910 13030	3990 8800	3870 8530	2710 5970	3530 7780	2490 5490	6.41 (21.0)
-1.5 m (-4.9 ft)	kg lb	*6030 *13290	*6030 *13290	*9760 *21520	7230 15940	5880 12960	3960 8730			4020 8860	2810 6190	5.83 (19.1)
-3.0 m (-9.8 ft)	kg lb			*7980 *17590	7360 16230	*5380 *11860	4050 8930			*5000 *11020	3800 8380	4.72 (15.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.











The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2400	600	-	Down	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3670 *8090	*3670 *8090			*2180 *4810	*2180 *4810	5.42 (17.8)
4.5 m (14.8 ft)	kg lb					*3930 *8660	*3930 *8660	*3210 *7080	3170 6990	*2020 *4450	*2020 *4450	6.39 (21.0)
3.0 m (9.8 ft)	kg lb			*6610 *14570	*6610 *14570	*4820 *10630	4770 10520	*4140 *9130	3110 6860	*2010 *4430	*2010 *4430	6.90 (22.6)
1.5 m (4.9 ft)	kg lb			*7930 *17480	*7930 *17480	*5900 *13010	4530 9990	*4590 *10120	3010 6640	*2120 *4670	*2120 *4670	7.06 (23.2)
0.0 m (0.0 ft)	kg lb			*6750 *14880	*6750 *14880	*6630 *14620	4370 9630	*4920 *10850	2930 6460	*2380 *5250	*2380 *5250	6.89 (22.6)
-1.5 m (-4.9 ft)	kg lb	*4910 *10820	*4910 *10820	*9970 *21980	8000 17640	*6700 *14770	4310 9500	*4830 *10650	2910 6420	*2910 *6420	2700 5950	6.36 (20.9)
-3.0 m (-9.8 ft)	kg lb	*8760 *19310	*8760 *19310	*8640 *19050	8110 17880	*5860 *12920	4360 9610			*4220 *9300	3440 7580	5.36 (17.6)

Note 1. Lifting capacity are based on ISO 10567.

- Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
- The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).
- *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.










 
The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2400	600	-	Up	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3670 *8090	*3670 *8090			*2180 *4810	*2180 *4810	5.42 (17.8)
4.5 m (14.8 ft)	kg lb					*3930 *8660	*3930 *8660	*3210 *7080	2920 6440	*2020 *4450	*2020 *4450	6.39 (21.0)
3.0 m (9.8 ft)	kg lb			*6610 *14570	*6610 *14570	*4820 *10630	4370 9630	4030 8880	2860 6310	*2010 *4430	*2010 *4430	6.90 (22.6)
1.5 m (4.9 ft)	kg lb			*7930 *17480	7460 16450	*5900 *13010	4140 9130	3930 8660	2770 6110	*2120 *4670	*2120 *4670	7.06 (23.2)
0.0 m (0.0 ft)	kg lb			*6750 *14880	*6750 *14880	5900 13010	3980 8770	3850 8490	2690 5930	*2380 *5250	2230 4920	6.89 (22.6)
-1.5 m (-4.9 ft)	kg lb	*4910 *10820	*4910 *10820	*9970 *21980	7160 15790	5840 12870	3920 8640	3820 8420	2670 5890	*2910 *6420	2480 5470	6.36 (20.9)
-3.0 m (-9.8 ft)	kg lb	*8760 *19310	*8760 *19310	*8640 *19050	7270 16030	*5860 *12920	3970 8750			*4220 *9300	3150 6940	5.36 (17.6)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.






 

 

 
The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

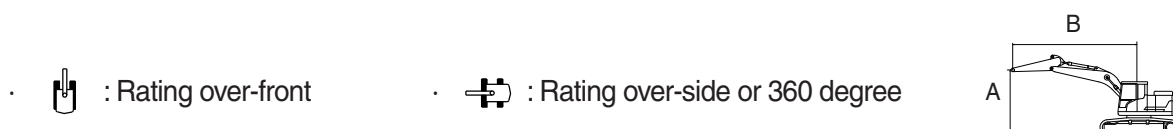▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2400	600	-	Down	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2440 *5380	*2440 *5380	4.34 (14.2)
6.0 m (19.7 ft)	kg lb									*2070 *4560	*2070 *4560	5.91 (19.4)
4.5 m (14.8 ft)	kg lb					*3420 *7540	*3420 *7540	*3220 *7100	3220 7100	*1960 *4320	*1960 *4320	6.81 (22.4)
3.0 m (9.8 ft)	kg lb			*5510 *12150	*5510 *12150	*4340 *9570	*4340 *9570	*3830 *8440	3140 6920	*1980 *4370	*1980 *4370	7.30 (23.9)
1.5 m (4.9 ft)	kg lb			*8570 *18890	8480 18700	*5510 *12150	4580 10100	*4350 *9590	3030 6680	*2100 *4630	*2100 *4630	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*7920 *17460	*7920 *17460	*6410 *14130	4370 9630	*4790 *10560	2930 6460	*2360 *5200	2240 4940	7.28 (23.9)
-1.5 m (-4.9 ft)	kg lb	*4680 *10320	*4680 *10320	*9710 *21410	7940 17500	*6710 *14790	4280 9440	*4900 *10800	2880 6350	*2870 *6330	2450 5400	6.78 (22.3)
-3.0 m (-9.8 ft)	kg lb	*7710 *17000	*7710 *17000	*9300 *20500	8000 17640	*6230 *13730	4290 9460			*4050 *8930	3000 6610	5.86 (19.2)
-4.5 m (-14.8 ft)	kg lb			*6670 *14700	*6670 *14700					*4510 *9940	*4510 *9940	4.24 (13.9)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.


The difference between the weight of a work tool attachment must be subtracted.









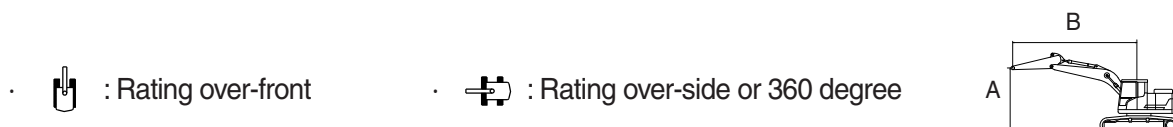

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2400	600	-	Up	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2440 *5380	*2440 *5380	4.34 (14.2)
6.0 m (19.7 ft)	kg lb									*2070 *4560	*2070 *4560	5.91 (19.4)
4.5 m (14.8 ft)	kg lb					*3420 *7540	*3420 *7540	*3220 *7100	2970 6550	*1960 *4320	*1960 *4320	6.81 (22.4)
3.0 m (9.8 ft)	kg lb			*5510 *12150	*5510 *12150	*4340 *9570	*4340 *9570	*3830 *8440	2890 6370	*1980 *4370	*1980 *4370	7.30 (23.9)
1.5 m (4.9 ft)	kg lb			*8570 *18890	7620 16800	*5510 *12150	4190 9240	3950 8710	2780 6130	*2100 *4630	2030 4480	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*7920 *17460	7200 15870	5920 13050	3990 8800	3840 8470	2680 5910	*2360 *5200	2050 4520	7.28 (23.9)
-1.5 m (-4.9 ft)	kg lb	*4680 *10320	*4680 *10320	*9710 *21410	7090 15630	5810 12810	3900 8600	3790 8360	2640 5820	*2870 *6330	2250 4960	6.78 (22.3)
-3.0 m (-9.8 ft)	kg lb	*7710 *17000	*7710 *17000	*9300 *20500	7160 15790	5820 12830	3910 8620			3950 8710	2750 6060	5.86 (19.2)
-4.5 m (-14.8 ft)	kg lb			*6670 *14700	*6670 *14700					*4510 *9940	4410 9720	4.24 (13.9)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.








 
Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4939	2100	2400	600	-	Down	-	-	-



Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4050 *8930	*4050 *8930	3.64 (12.0)
6.0 m (19.7 ft)	kg lb			*3480 *7670	*3480 *7670			*3600 *7940	*3600 *7940	5.43 (17.8)
4.5 m (14.8 ft)	kg lb			*3850 *8490	*3850 *8490	*3680 *8110	3170 6990	*3310 *7300	2840 6260	6.40 (21.0)
3.0 m (9.8 ft)	kg lb			*4800 *10580	4700 10360	*3990 *8800	3090 6810	*3280 *7230	2480 5470	6.91 (22.7)
1.5 m (4.9 ft)	kg lb			*5860 *12920	4440 9790	*4450 *9810	2980 6570	*3420 *7540	2360 5200	7.07 (23.2)
0.0 m (0.0 ft)	kg lb			*6510 *14350	4290 9460	*4800 *10580	2900 6390	*3780 *8330	2410 5310	6.90 (22.6)
-1.5 m (-4.9 ft)	kg lb	*7680 *16930	*7680 *16930	*6570 *14480	4250 9370	*4790 *10560	2880 6350	*4410 *9720	2680 5910	6.37 (20.9)
-3.0 m (-9.6 ft)	kg lb			*5890 *12990	4330 9550					

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.








 
The difference between the weight of a work tool attachment must be subtracted.

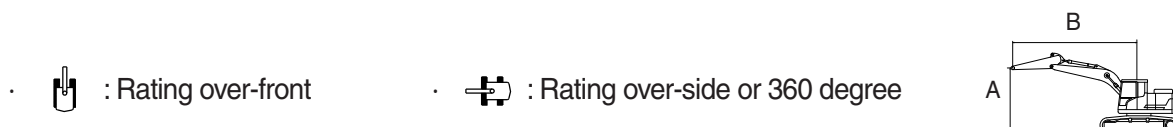Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4939	2100	2400	600	-	Up	-	-	-



Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4050 *8930	*4050 *8930	3.64 (12.0)
6.0 m (19.7 ft)	kg lb			*3480 *7670	*3480 *7670			*3600 *7940	3410 7520	5.43 (17.8)
4.5 m (14.8 ft)	kg lb			*3850 *8490	*3850 *8490	*3680 *8110	2920 6440	*3310 *7300	2620 5780	6.40 (21.0)
3.0 m (9.8 ft)	kg lb			*4800 *10580	4300 9480	*3990 *8800	2830 6240	3230 7120	2280 5030	6.91 (22.7)
1.5 m (4.9 ft)	kg lb			*5860 *12920	4050 8930	3920 8640	2730 6020	3080 6790	2160 4760	7.07 (23.2)
0.0 m (0.0 ft)	kg lb			5850 12900	3900 8600	3830 8440	2650 5840	3150 6940	2200 4850	6.90 (22.6)
-1.5 m (-4.9 ft)	kg lb	*7680 *16930	7080 15610	5810 12810	3860 8510	3820 8420	2630 5800	3520 7760	2450 5400	6.37 (20.9)
-3.0 m (-9.6 ft)	kg lb			*5890 *12990	3930 8660					

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.









The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4939	2500	2400	600	-	Down	-	-	-



Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*3060 *6750	*3060 *6750	4.39 (14.4)
6.0 m (19.7 ft)	kg lb			*3050 *6720	*3050 *6720			*2500 *5510	*2500 *5510	5.95 (19.5)
4.5 m (14.8 ft)	kg lb			*3460 *7630	*3460 *7630	*3360 *7410	3190 7030	*2310 *5090	*2310 *5090	6.85 (22.5)
3.0 m (9.8 ft)	kg lb			*4430 *9770	*4430 *9770	*3730 *8220	3090 6810	*2270 *5000	2260 4980	7.33 (24.0)
1.5 m (4.9 ft)	kg lb			*5550 *12240	4450 9810	*4250 *9370	2970 6550	*2350 *5180	2160 4760	7.48 (24.5)
0.0 m (0.0 ft)	kg lb	*3760 *8290	*3760 *8290	*6330 *13960	4270 9410	*4670 *10300	2870 6330	*2560 *5640	2190 4830	7.31 (24.0)
-1.5 m (-4.9 ft)	kg lb	*7010 *15450	*7010 *15450	*6560 *14460	4200 9260	*4800 *10580	2830 6240	*2980 *6570	2410 5310	6.82 (22.4)
-3.0 m (-9.6 ft)	kg lb	*9000 *19840	7940 17500	*6130 *13510	4250 9370			*3900 *8600	2960 6530	5.90 (19.4)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.







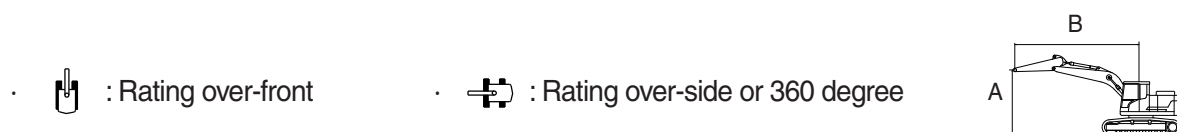

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A LD	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4939	2500	2400	600	-	Up	-	-	-



Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*3060 *6750	*3060 *6750	4.39 (14.4)
6.0 m (19.7 ft)	kg lb			*3050 *6720	*3050 *6720			*2500 *5510	*2500 *5510	5.95 (19.5)
4.5 m (14.8 ft)	kg lb			*3460 *7630	*3460 *7630	*3360 *7410	2940 6480	*2310 *5090	*2310 *5090	6.85 (22.5)
3.0 m (9.8 ft)	kg lb			*4430 *9770	4340 9570	*3730 *8220	2840 6260	*2270 *5000	2080 4590	7.33 (24.0)
1.5 m (4.9 ft)	kg lb			*5550 *12240	4060 8950	3910 8620	2720 6000	*2350 *5180	1970 4340	7.48 (24.5)
0.0 m (0.0 ft)	kg lb	*3760 *8290	*3760 *8290	5830 12850	3870 8530	3810 8400	2620 5780	*2560 *5640	2000 4410	7.31 (24.0)
-1.5 m (-4.9 ft)	kg lb	*7010 *15450	6970 15370	5760 12700	3810 8400	3770 8310	2590 5710	*2980 *6570	2200 4850	6.82 (22.4)
-3.0 m (-9.6 ft)	kg lb	*9000 *19840	7090 15630	5810 12810	3850 8490			*3900 *8600	2710 5970	5.90 (19.4)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.


▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.






 


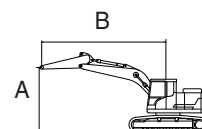

3) HX140A HW, 700 mm SHOE

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2100	700	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*4130 *9110	*4130 *9110			*2950 *6500	*2950 *6500	5.04 (16.5)
4.5 m (14.8 ft)	kg lb					*4470 *9850	*4470 *9850	*2830 *6240	*2830 *6240	*2820 *6220	*2820 *6220	6.00 (19.7)
3.0 m (9.8 ft)	kg lb			*8080 *17810	*8080 *17810	*5390 *11880	4660 10270	*4460 *9830	3080 6790	*2900 *6390	2750 6060	6.48 (21.3)
1.5 m (4.9 ft)	kg lb					*6340 *13980	4460 9830	4470 9850	3000 6610	*3190 *7030	2640 5820	6.58 (21.6)
0.0 m (0.0 ft)	kg lb			*7630 *16820	*7630 *16820	6730 14840	4340 9570	4410 9720	2950 6500	*3780 *8330	2750 6060	6.33 (20.8)
-1.5 m (-4.9 ft)	kg lb	*6850 *15100	*6850 *15100	*9530 *21010	7960 17550	*6500 *14330	4330 9550			4780 10540	3180 7010	5.67 (18.6)
-3.0 m (-9.8 ft)	kg lb			*7450 *16420	*7450 *16420					*4980 *10980	4540 10010	4.43 (14.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.






 

 


▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

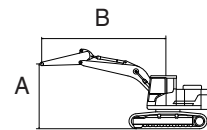Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2100	700	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2580 *5690	*2580 *5690	4.06 (13.3)
6.0 m (19.7 ft)	kg lb					*3660 *8070	*3660 *8070			*2130 *4700	*2130 *4700	5.64 (18.5)
4.5 m (14.8 ft)	kg lb					*4060 *8950	*4060 *8950	*3460 *7630	3160 6970	*2010 *4430	*2010 *4430	6.51 (21.4)
3.0 m (9.8 ft)	kg lb			*7180 *15830	*7180 *15830	*5020 *11070	4700 10360	*4220 *9300	3090 6810	*2020 *4450	*2020 *4450	6.96 (22.8)
1.5 m (4.9 ft)	kg lb			*6940 *15300	*6940 *15300	*6080 *13400	4470 9850	4460 9830	2990 6590	*2150 *4740	*2150 *4740	7.05 (23.1)
0.0 m (0.0 ft)	kg lb			*7140 *15740	*7140 *15740	*6690 *14750	4330 9550	4390 9680	2920 6440	*2450 *5400	*2450 *5400	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*5530 *12190	*5530 *12190	*9910 *21850	7890 17390	*6620 *14590	4290 9460	4380 9660	2910 6420	*3060 *6750	2790 6150	6.22 (20.4)
-3.0 m (-9.8 ft)	kg lb			*8220 *18120	8020 17680	*5530 *12190	4360 9610			*4540 *10010	3680 8110	5.11 (16.8)
-4.5 m (-14.8 ft)	kg lb			*6970 *15370	*6970 *15370					*4530 *9990	*4530 *9990	4.29 (14.1)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.


The difference between the weight of a work tool attachment must be subtracted.









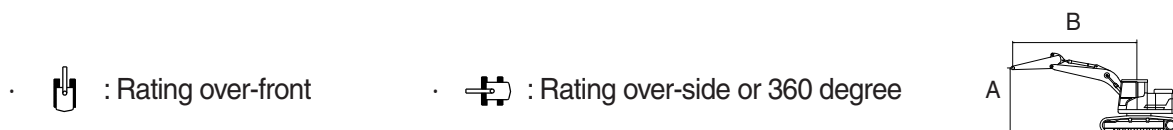

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2100	700	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb					*2690 *5930	*2690 *5930			*2330 *5140	*2330 *5140	4.70 (15.4)
6.0 m (19.7 ft)	kg lb							*2310 *5090	*2310 *5090	*2030 *4480	*2030 *4480	6.12 (20.1)
4.5 m (14.8 ft)	kg lb					*3550 *7830	*3550 *7830	*3360 *7410	3200 7050	*1950 *4300	*1950 *4300	6.93 (22.7)
3.0 m (9.8 ft)	kg lb			*6080 *13400	*6080 *13400	*4550 *10030	*4550 *10030	*3920 *8640	3110 6860	*1990 *4390	*1990 *4390	7.35 (24.1)
1.5 m (4.9 ft)	kg lb			*9020 *19890	8230 18140	*5710 *12590	4510 9940	*4440 *9790	3000 6610	*2140 *4720	*2140 *4720	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*8000 *17640	7880 17370	*6520 *14370	4320 9520	4380 9660	2910 6420	*2430 *5360	2260 4980	7.22 (23.7)
-1.5 m (-4.9 ft)	kg lb	*5170 *11400	*5170 *11400	*10210 *22510	7810 17220	6640 14640	4250 9370	4340 9570	2870 6330	*3010 *6640	2520 5560	6.65 (21.8)
-3.0 m (-9.8 ft)	kg lb	*8400 *18520	*8400 *18520	*8970 *19780	7900 17420	*6030 *13290	4280 9440			*4450 *9810	3170 6990	5.63 (18.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.











Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2400	700	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*4130 *9110	*4130 *9110			*2950 *6500	*2950 *6500	5.04 (16.5)
4.5 m (14.8 ft)	kg lb					*4470 *9850	*4470 *9850	*2830 *6240	*2830 *6240	*2820 *6220	*2820 *6220	6.00 (19.7)
3.0 m (9.8 ft)	kg lb			*8080 *17810	*8080 *17810	*5390 *11880	4880 10760	*4460 *9830	3230 7120	*2900 *6390	2880 6350	6.48 (21.3)
1.5 m (4.9 ft)	kg lb					*6340 *13980	4670 10300	4650 10250	3150 6940	*3190 *7030	2770 6110	6.58 (21.6)
0.0 m (0.0 ft)	kg lb			*7630 *16820	*7630 *16820	*6790 *14970	4550 10030	4590 10120	3090 6810	*3780 *8330	2880 6350	6.33 (20.8)
-1.5 m (-4.9 ft)	kg lb	*6850 *15100	*6850 *15100	*9530 *21010	8340 18390	*6500 *14330	4540 10010			*4900 *10800	3340 7360	5.67 (18.6)
-3.0 m (-9.8 ft)	kg lb			*7450 *16420	*7450 *16420					*4980 *10980	4760 10490	4.43 (14.5)

Note 1. Lifting capacity are based on ISO 10567.

- Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
- The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).
- *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.









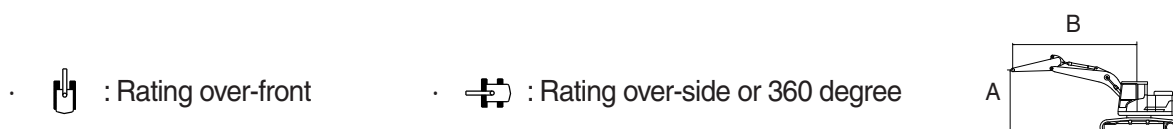

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2400	700	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2580 *5690	*2580 *5690	4.06 (13.3)
6.0 m (19.7 ft)	kg lb					*3660 *8070	*3660 *8070			*2130 *4700	*2130 *4700	5.64 (18.5)
4.5 m (14.8 ft)	kg lb					*4060 *8950	*4060 *8950	*3460 *7630	3310 7300	*2010 *4430	*2010 *4430	6.51 (21.4)
3.0 m (9.8 ft)	kg lb			*7180 *15830	*7180 *15830	*5020 *11070	4910 10820	*4220 *9300	3230 7120	*2020 *4450	*2020 *4450	6.96 (22.8)
1.5 m (4.9 ft)	kg lb			*6940 *15300	*6940 *15300	*6080 *13400	4680 10320	4640 10230	3140 6920	*2150 *4740	*2150 *4740	7.05 (23.1)
0.0 m (0.0 ft)	kg lb			*7140 *15740	*7140 *15740	*6690 *14750	4540 10010	4570 10080	3070 6770	*2450 *5400	*2450 *5400	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*5530 *12190	*5530 *12190	*9910 *21850	8270 18230	*6620 *14590	4500 9920	4560 10050	3060 6750	*3060 *6750	2930 6460	6.22 (20.4)
-3.0 m (-9.8 ft)	kg lb			*8220 *18120	*8220 *18120	*5530 *12190	4570 10080			*4540 *10010	3860 8510	5.11 (16.8)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.









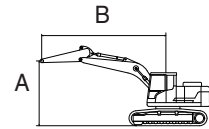

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2400	700	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb					*2690 *5930	*2690 *5930			*2330 *5140	*2330 *5140	4.70 (15.4)
6.0 m (19.7 ft)	kg lb							*2310 *5090	*2310 *5090	*2030 *4480	*2030 *4480	6.12 (20.1)
4.5 m (14.8 ft)	kg lb					*3550 *7830	*3550 *7830	*3360 *7410	3350 7390	*1950 *4300	*1950 *4300	6.93 (22.7)
3.0 m (9.8 ft)	kg lb			*6080 *13400	*6080 *13400	*4550 *10030	*4550 *10030	*3920 *8640	3260 7190	*1990 *4390	*1990 *4390	7.35 (24.1)
1.5 m (4.9 ft)	kg lb			*9020 *19890	8610 18980	*5710 *12590	4720 10410	*4440 *9790	3150 6940	*2140 *4720	*2140 *4720	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*8000 *17640	*8000 *17640	*6520 *14370	4540 10010	4560 10050	3060 6750	*2430 *5360	2380 5250	7.22 (23.7)
-1.5 m (-4.9 ft)	kg lb	*5170 *11400	*5170 *11400	*10210 *22510	8190 18060	*6690 *14750	4460 9830	4520 9960	3020 6660	*3010 *6640	2650 5840	6.65 (21.8)
-3.0 m (-9.8 ft)	kg lb	*8400 *18520	*8400 *18520	*8970 *19780	8280 18250	*6030 *13290	4490 9900			*4450 *9810	3330 7340	5.63 (18.5)
-4.5 m (-14.8 ft)	kg lb			*6970 *15370	*6970 *15370					*4530 *9990	*4530 *9990	4.29 (14.1)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.


Make adjustments to the rated load as necessary for non-standard configurations.


 






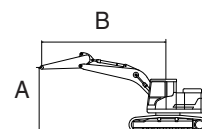

4) HX140A HW, 800 mm SHOE

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2100	800	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*4130 *9110	*4130 *9110			*2950 *6500	*2950 *6500	5.04 (16.5)
4.5 m (14.8 ft)	kg lb					*4470 *9850	*4470 *9850	*2830 *6240	*2830 *6240	*2820 *6220	*2820 *6220	6.00 (19.7)
3.0 m (9.8 ft)	kg lb			*8080 *17810	*8080 *17810	*5390 *11880	4720 10410	*4460 *9830	3120 6880	*2900 *6390	2790 6150	6.48 (21.3)
1.5 m (4.9 ft)	kg lb					*6340 *13980	4520 9960	4530 9990	3040 6700	*3190 *7030	2670 5890	6.58 (21.6)
0.0 m (0.0 ft)	kg lb			*7630 *16820	*7630 *16820	*6790 *14970	4400 9700	4470 9850	2990 6590	*3780 *8330	2780 6130	6.33 (20.8)
-1.5 m (-4.9 ft)	kg lb	*6850 *15100	*6850 *15100	*9530 *21010	8070 17790	*6500 *14330	4390 9680			4850 10690	3220 7100	5.67 (18.6)
-3.0 m (-9.8 ft)	kg lb			*7450 *16420	*7450 *16420					*4980 *10980	4610 10160	4.43 (14.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.






 

 


▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

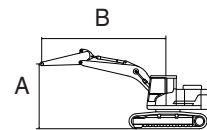Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2100	800	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2580 *5690	*2580 *5690	4.06 (13.3)
6.0 m (19.7 ft)	kg lb					*3660 *8070	*3660 *8070			*2130 *4700	*2130 *4700	5.64 (18.5)
4.5 m (14.8 ft)	kg lb					*4060 *8950	*4060 *8950	*3460 *7630	3200 7050	*2010 *4430	*2010 *4430	6.51 (21.4)
3.0 m (9.8 ft)	kg lb			*7180 *15830	*7180 *15830	*5020 *11070	4760 10490	*4220 *9300	3130 6900	*2020 *4450	*2020 *4450	6.96 (22.8)
1.5 m (4.9 ft)	kg lb			*6940 *15300	*6940 *15300	*6080 *13400	4530 9990	4520 9960	3030 6680	*2150 *4740	*2150 *4740	7.05 (23.1)
0.0 m (0.0 ft)	kg lb			*7140 *15740	*7140 *15740	*6690 *14750	4390 9680	4450 9810	2960 6530	*2450 *5400	*2450 *5400	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*5530 *12190	*5530 *12190	*9910 *21850	7990 17610	*6620 *14590	4350 9590	4440 9790	2950 6500	*3060 *6750	2830 6240	6.22 (20.4)
-3.0 m (-9.8 ft)	kg lb			*8220 *18120	8130 17920	*5530 *12190	4420 9740			*4540 *10010	3730 8220	5.11 (16.8)
-4.5 m (-14.8 ft)	kg lb			*6970 *15370	*6970 *15370					*4530 *9990	*4530 *9990	4.29 (14.1)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.


The difference between the weight of a work tool attachment must be subtracted.









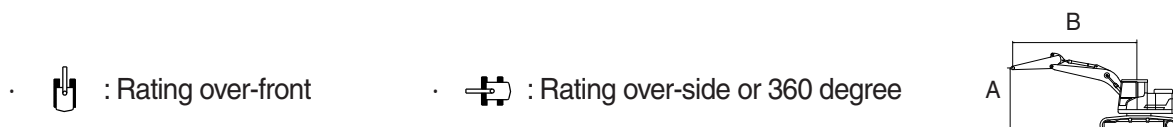

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2100	800	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb					*2690 *5930	*2690 *5930			*2330 *5140	*2330 *5140	4.70 (15.4)
6.0 m (19.7 ft)	kg lb							*2310 *5090	*2310 *5090	*2030 *4480	*2030 *4480	6.12 (20.1)
4.5 m (14.8 ft)	kg lb					*3550 *7830	*3550 *7830	*3360 *7410	3240 7140	*1950 *4300	*1950 *4300	6.93 (22.7)
3.0 m (9.8 ft)	kg lb			*6080 *13400	*6080 *13400	*4550 *10030	*4550 *10030	*3920 *8640	3150 6940	*1990 *4390	*1990 *4390	7.35 (24.1)
1.5 m (4.9 ft)	kg lb			*9020 *19890	8340 18390	*5710 *12590	4570 10080	*4440 *9790	3040 6700	*2140 *4720	*2140 *4720	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*8000 *17640	7990 17610	*6520 *14370	4380 9660	4440 9790	2950 6500	*2430 *5360	2300 5070	7.22 (23.7)
-1.5 m (-4.9 ft)	kg lb	*5170 *11400	*5170 *11400	*10210 *22510	7920 17460	*6690 *14750	4310 9500	4400 9700	2920 6440	*3010 *6640	2550 5620	6.65 (21.8)
-3.0 m (-9.8 ft)	kg lb	*8400 *18520	*8400 *18520	*8970 *19780	8010 17660	*6030 *13290	4340 9570			*4450 *9810	3220 7100	5.63 (18.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.










 
Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2400	800	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*4130 *9110	*4130 *9110			*2950 *6500	*2950 *6500	5.04 (16.5)
4.5 m (14.8 ft)	kg lb					*4470 *9850	*4470 *9850	*2830 *6240	*2830 *6240	*2820 *6220	*2820 *6220	6.00 (19.7)
3.0 m (9.8 ft)	kg lb			*8080 *17810	*8080 *17810	*5390 *11880	4940 10890	*4460 *9830	3270 7210	*2900 *6390	*2900 *6390	6.48 (21.3)
1.5 m (4.9 ft)	kg lb					*6340 *13980	4730 10430	4710 10380	3190 7030	*3190 *7030	2800 6170	6.58 (21.6)
0.0 m (0.0 ft)	kg lb			*7630 *16820	*7630 *16820	*6790 *14970	4610 10160	4650 10250	3140 6920	*3780 *8330	2920 6440	6.33 (20.8)
-1.5 m (-4.9 ft)	kg lb	*6850 *15100	*6850 *15100	*9530 *21010	8450 18630	*6500 *14330	4600 10140			*4900 *10800	3380 7450	5.67 (18.6)
-3.0 m (-9.8 ft)	kg lb			*7450 *16420	*7450 *16420					*4980 *10980	4820 10630	4.43 (14.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.









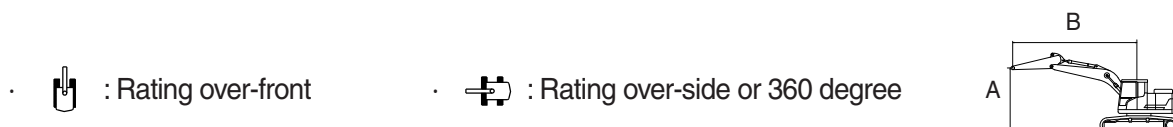

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2400	800	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2580 *5690	*2580 *5690	4.06 (13.3)
6.0 m (19.7 ft)	kg lb					*3660 *8070	*3660 *8070			*2130 *4700	*2130 *4700	5.64 (18.5)
4.5 m (14.8 ft)	kg lb					*4060 *8950	*4060 *8950	*3460 *7630	3350 7390	*2010 *4430	*2010 *4430	6.51 (21.4)
3.0 m (9.8 ft)	kg lb			*7180 *15830	*7180 *15830	*5020 *11070	4970 10960	*4220 *9300	3270 7210	*2020 *4450	*2020 *4450	6.96 (22.8)
1.5 m (4.9 ft)	kg lb			*6940 *15300	*6940 *15300	*6080 *13400	4740 10450	*4660 *10270	3180 7010	*2150 *4740	*2150 *4740	7.05 (23.1)
0.0 m (0.0 ft)	kg lb			*7140 *15740	*7140 *15740	*6690 *14750	4600 10140	*4630 10210	3110 6860	*2450 *5400	*2450 *5400	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*5530 *12190	*5530 *12190	*9910 *21850	8370 18450	*6620 *14590	4560 10050	4620 10190	3100 6830	*3060 *6750	2970 6550	6.22 (20.4)
-3.0 m (-9.8 ft)	kg lb			*8220 *18120	*8220 *18120	*5530 *12190	4630 10210			*4540 *10010	3910 8620	5.11 (16.8)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.









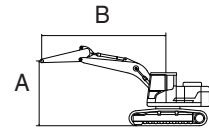

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2400	800	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb					*2690 *5930	*2690 *5930			*2330 *5140	*2330 *5140	4.70 (15.4)
6.0 m (19.7 ft)	kg lb							*2310 *5090	*2310 *5090	*2030 *4480	*2030 *4480	6.12 (20.1)
4.5 m (14.8 ft)	kg lb					*3550 *7830	*3550 *7830	*3360 *7410	*3360 *7410	*1950 *4300	*1950 *4300	6.93 (22.7)
3.0 m (9.8 ft)	kg lb			*6080 *13400	*6080 *13400	*4550 *10030	*4550 *10030	*3920 *8640	3300 7280	*1990 *4390	*1990 *4390	7.35 (24.1)
1.5 m (4.9 ft)	kg lb			*9020 *19890	8720 19220	*5710 *12590	4780 10540	*4440 *9790	3190 7030	*2140 *4720	*2140 *4720	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*8000 *17640	*8000 *17640	*6520 *14370	4600 10140	4620 10190	3100 6830	*2430 *5360	2420 5340	7.22 (23.7)
-1.5 m (-4.9 ft)	kg lb	*5170 *11400	*5170 *11400	*10210 *22510	8300 18300	*6690 *14750	4520 9960	4580 10100	3060 6750	*3010 *6640	2680 5910	6.65 (21.8)
-3.0 m (-9.8 ft)	kg lb	*8400 *18520	*8400 *18520	*8970 *19780	8390 18500	*6030 *13290	4560 10050			*4450 *9810	3380 7450	5.63 (18.5)
-4.5 m (-14.8 ft)	kg lb			*6970 *15370	*6970 *15370					*4530 *9990	*4530 *9990	4.29 (14.1)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.


Make adjustments to the rated load as necessary for non-standard configurations.


 






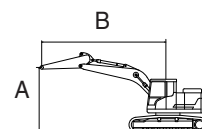

5) HX140A HW, 900 mm SHOE

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2100	900	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*4130 *9110	*4130 *9110			*2950 *6500	*2950 *6500	5.04 (16.5)
4.5 m (14.8 ft)	kg lb					*4470 *9850	*4470 *9850	*2830 *6240	*2830 *6240	*2820 *6220	*2820 *6220	6.00 (19.7)
3.0 m (9.8 ft)	kg lb			*8080 *17810	*8080 *17810	*5390 *11880	4770 10520	*4460 *9830	3160 6970	*2900 *6390	2820 6220	6.48 (21.3)
1.5 m (4.9 ft)	kg lb					*6340 *13980	4570 10080	4580 10100	3070 6770	*3190 *7030	2700 5950	6.58 (21.6)
0.0 m (0.0 ft)	kg lb			*7630 *16820	*7630 *16820	*6790 *14970	4450 9810	4520 9960	3020 6660	*3780 *8330	2820 6220	6.33 (20.8)
-1.5 m (-4.9 ft)	kg lb	*6850 *15100	*6850 *15100	*9530 *21010	8160 17990	*6500 *14330	4440 9790			4900 10800	3260 7190	5.67 (18.6)
-3.0 m (-9.8 ft)	kg lb			*7450 *16420	*7450 *16420					*4980 *10980	4650 10250	4.43 (14.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.






 

 


▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

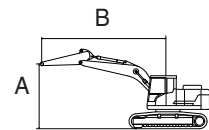Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2100	900	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2580 *5690	*2580 *5690	4.06 (13.3)
6.0 m (19.7 ft)	kg lb					*3660 *8070	*3660 *8070			*2130 *4700	*2130 *4700	5.64 (18.5)
4.5 m (14.8 ft)	kg lb					*4060 *8950	*4060 *8950	*3460 *7630	3240 7140	*2010 *4430	*2010 *4430	6.51 (21.4)
3.0 m (9.8 ft)	kg lb			*7180 *15830	*7180 *15830	*5020 *11070	4810 10600	*4220 *9300	3160 6970	*2020 *4450	*2020 *4450	6.96 (22.8)
1.5 m (4.9 ft)	kg lb			*6940 *15300	*6940 *15300	*6080 *13400	4580 10100	4570 10080	3070 6770	*2150 *4740	*2150 *4740	7.05 (23.1)
0.0 m (0.0 ft)	kg lb			*7140 *15740	*7140 *15740	*6690 *14750	4430 9770	4500 9920	3000 6610	*2450 *5400	*2450 *5400	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*5530 *12190	*5530 *12190	*9910 *21850	8080 17810	*6620 *14590	4400 9700	4490 9900	2990 6590	*3060 *6750	2860 6310	6.22 (20.4)
-3.0 m (-9.8 ft)	kg lb			*8220 *18120	8220 18120	*5530 *12190	4470 9850			*4540 *10010	3780 8330	5.11 (16.8)
-4.5 m (-14.8 ft)	kg lb			*6970 *15370	*6970 *15370					*4530 *9990	*4530 *9990	4.29 (14.1)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.


The difference between the weight of a work tool attachment must be subtracted.









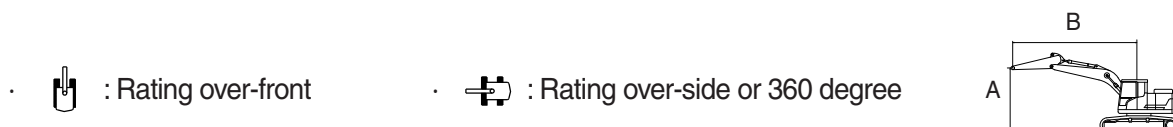

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2100	900	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb					*2690 *5930	*2690 *5930			*2330 *5140	*2330 *5140	4.70 (15.4)
6.0 m (19.7 ft)	kg lb							*2310 *5090	*2310 *5090	*2030 *4480	*2030 *4480	6.12 (20.1)
4.5 m (14.8 ft)	kg lb					*3550 *7830	*3550 *7830	*3360 *7410	3280 7230	*1950 *4300	*1950 *4300	6.93 (22.7)
3.0 m (9.8 ft)	kg lb			*6080 *13400	*6080 *13400	*4550 *10030	*4550 *10030	*3920 *8640	3190 7030	*1990 *4390	*1990 *4390	7.35 (24.1)
1.5 m (4.9 ft)	kg lb			*9020 *19890	8430 18580	*5710 *12590	4620 10190	*4440 *9790	3080 6790	*2140 *4720	*2140 *4720	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*8000 *17640	*8000 *17640	*6520 *14370	4430 9770	4490 9900	2990 6590	*2430 *5360	2320 5110	7.22 (23.7)
-1.5 m (-4.9 ft)	kg lb	*5170 *11400	*5170 *11400	*10210 *22510	8010 17660	*6690 *14750	4360 9610	4450 9810	2950 6500	*3010 *6640	2580 5690	6.65 (21.8)
-3.0 m (-9.8 ft)	kg lb	*8400 *18520	*8400 *18520	*8970 *19780	8100 17860	*6030 *13290	4390 9680			*4450 *9810	3260 7190	5.63 (18.5)

Note 1. Lifting capacity are based on ISO 10567.

- Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
- The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).
- *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.


The difference between the weight of a work tool attachment must be subtracted.









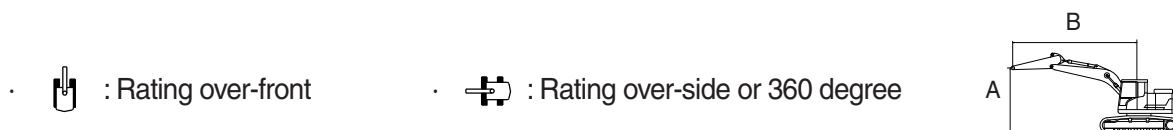

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2400	900	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3300 *7280	*3300 *7280			*2140 *4720	*2140 *4720	5.21 (17.1)
4.5 m (14.8 ft)	kg lb					*3800 *8380	*3800 *8380	*2560 *5640	*2560 *5640	*2120 *4670	*2120 *4670	6.15 (20.2)
3.0 m (9.8 ft)	kg lb			*6870 *15150	*6870 *15150	*4740 *10450	*4740 *10450	*3940 *8690	3070 6770	*2260 *4980	*2260 *4980	6.62 (21.7)
1.5 m (4.9 ft)	kg lb			*9420 *20770	8310 18320	*5760 *12700	4520 9960	*4370 *9630	2970 6550	*2590 *5710	2500 5510	6.72 (22.0)
0.0 m (0.0 ft)	kg lb			*8940 *19710	8070 17790	*6360 *14020	4360 9610	4430 9770	2890 6370	*3250 *7170	2600 5730	6.47 (21.2)
-1.5 m (-4.9 ft)	kg lb	*6730 *14840	*6730 *14840	*9510 *20970	8090 17840	*6290 *13870	4320 9520			4610 10160	3000 6610	5.83 (19.1)
-3.0 m (-9.8 ft)	kg lb			*7840 *17280	*7840 *17280	*5210 *11490	4410 9720			*5010 *11050	4240 9350	4.63 (15.2)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.









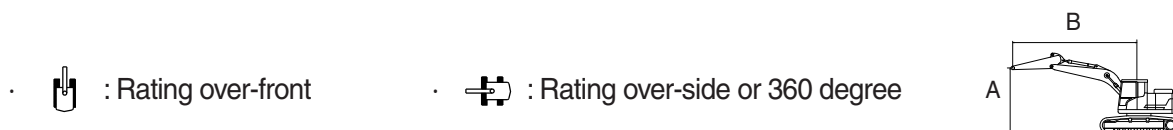

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2400	900	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*2580 *5690	*2580 *5690	4.06 (13.3)
6.0 m (19.7 ft)	kg lb					*3660 *8070	*3660 *8070			*2130 *4700	*2130 *4700	5.64 (18.5)
4.5 m (14.8 ft)	kg lb					*4060 *8950	*4060 *8950	*3460 *7630	3380 7450	*2010 *4430	*2010 *4430	6.51 (21.4)
3.0 m (9.8 ft)	kg lb			*7180 *15830	*7180 *15830	*5020 *11070	5020 11070	*4220 *9300	3310 7300	*2020 *4450	*2020 *4450	6.96 (22.8)
1.5 m (4.9 ft)	kg lb			*6940 *15300	*6940 *15300	*6080 *13400	4790 10560	*4660 *10270	3210 7080	*2150 *4740	*2150 *4740	7.05 (23.1)
0.0 m (0.0 ft)	kg lb			*7140 *15740	*7140 *15740	*6690 *14750	4650 10250	3140 6920	3140 6920	*2450 *5400	*2450 *5400	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*5530 *12190	*5530 *12190	*9910 *21850	8460 18650	*6620 *14590	4610 10160	4670 10300	3130 6900	*3060 *6750	3000 6610	6.22 (20.4)
-3.0 m (-9.8 ft)	kg lb			*8220 *18120	*8220 *18120	*5530 *12190	4680 10320			*4540 *10010	3960 8730	5.11 (16.8)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.


Lifting capacities will vary with different work tools, ground conditions and attachments.









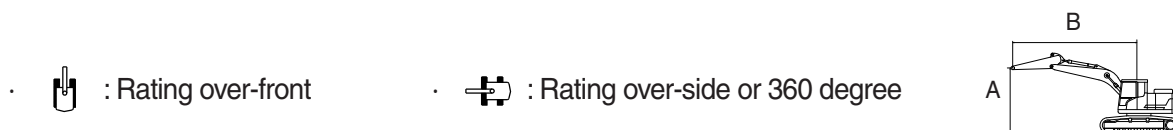

The difference between the weight of a work tool attachment must be subtracted.

Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage. Make adjustments to the rated load as necessary for non-standard configurations.

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX140A HW	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2400	900	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb					*2690 *5930	*2690 *5930			*2330 *5140	*2330 *5140	4.70 (15.4)
6.0 m (19.7 ft)	kg lb							*2310 *5090	*2310 *5090	*2030 *4480	*2030 *4480	6.12 (20.1)
4.5 m (14.8 ft)	kg lb					*3550 *7830	*3550 *7830	*3360 *7410	*3360 *7410	*1950 *4300	*1950 *4300	6.93 (22.7)
3.0 m (9.8 ft)	kg lb			*6080 *13400	*6080 *13400	*4550 *10030	*4550 *10030	*3920 *8640	3340 7360	*1990 *4390	*1990 *4390	7.35 (24.1)
1.5 m (4.9 ft)	kg lb			*9020 *19890	8810 19420	*5710 *12590	4830 10650	*4440 *9790	3220 7100	*2140 *4720	*2140 *4720	7.44 (24.4)
0.0 m (0.0 ft)	kg lb			*8000 *17640	*8000 *17640	*6520 *14370	4650 10250	4670 10300	3130 6900	*2430 *5360	*2430 *5360	7.22 (23.7)
-1.5 m (-4.9 ft)	kg lb	*5170 *11400	*5170 *11400	*10210 *22510	8390 18500	*6690 *14750	4570 10080	4630 10210	3100 6830	*3010 *6640	2710 5970	6.65 (21.8)
-3.0 m (-9.8 ft)	kg lb	*8400 *18520	*8400 *18520	*8970 *19780	8480 18700	*6030 *13290	4600 10140			*4450 *9810	3410 7520	5.63 (18.5)
-4.5 m (-14.8 ft)	kg lb			*6970 *15370	*6970 *15370					*4530 *9990	*4530 *9990	4.29 (14.1)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult with your local HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause serious injury, death, or property damage.


Make adjustments to the rated load as necessary for non-standard configurations.

6. BUCKET SELECTION GUIDE

1) HX140A L/LD/HW MONO BOOM, 2100 kg COUNTERWEIGHT

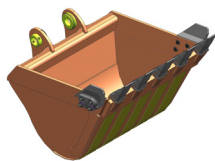

General bucket

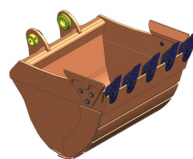

Hammerless tooth bucket

140A2SP20

Type	Counterweight						2100 kg		
	Capacity		Width		Weight	Tooth	MONO BOOM		
	SAE Heaped	CECE heaped	Without side cutter	With side cutter			4.6 m (15' 1") Boom		
	m ³ (yd ³)	m ³ (yd ³)	mm (in)	mm (in)	kg (lb)	EA	2.10 m (6' 11") Arm	2.50 m (8' 2") Arm	3.00 m (9' 10") Arm
General bucket	0.51 (0.67)	0.45 (0.59)	865 (34.1")	995 (39.2")	395 (870)	5	●	●	●
	0.59 (0.77)	0.51 (0.67)	955 (37.6")	1085 (42.7")	415 (910)	5	●	●	●
	0.64 (0.84)	0.55 (0.72)	1040 (40.9")	1170 (46.1")	440 (970)	5	●	●	■
	0.67 (0.88)	0.60 (0.78)	1110 (43.7")	1140 (44.9")	550 (1210)	5	●	■	■
	0.74 (0.97)	0.66 (0.86)	1210 (47.6")	1240 (48.8")	595 (1310)	6	■	▲	▲
Hammerless tooth bucket	0.50 (0.65)	0.45 (0.59)	760 (29.9")	800 (31.5")	440 (970)	4	●	●	●
	0.61 (0.80)	0.54 (0.71)	915 (36.0")	950 (37.4")	490 (1080)	5	●	●	■

●	Applicable for materials with density of 2100 kg/m ³ (3500 lb/yd ³) or less
●	Applicable for materials with density of 1800 kg/m ³ (3000 lb/yd ³) or less
■	Applicable for materials with density of 1500 kg/m ³ (2500 lb/yd ³) or less
▲	Applicable for materials with density of 1200 kg/m ³ (2000 lb/yd ³) or less
X	Not recommended


※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.


Select an optimum combination according to the working conditions and the type of work that is being done.

Consult with your local HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

2) HX140A L/LD/HW MONO BOOM, 2400 kg COUNTERWEIGHT

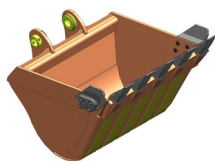

General bucket

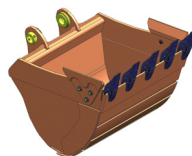

Hammerless tooth bucket

140A2SP20

Type	Counterweight						2400 kg		
	Capacity		Width		Weight	Tooth	MONO BOOM		
	SAE Heaped	CECE heaped	Without side cutter	With side cutter			4.6 m (15' 1") Boom		
	m ³ (yd ³)	m ³ (yd ³)	mm (in)	mm (in)	kg (lb)	EA	2.10 m (6' 11") Arm	2.50 m (8' 2") Arm	3.00 m (9' 10") Arm
General bucket	0.51 (0.67)	0.45 (0.59)	865 (34.1")	995 (39.2")	395 (870)	5	●	●	●
	0.59 (0.77)	0.51 (0.67)	955 (37.6")	1085 (42.7")	415 (910)	5	●	●	●
	0.64 (0.84)	0.55 (0.72)	1040 (40.9")	1170 (46.1")	440 (970)	5	●	●	●
	0.67 (0.88)	0.60 (0.78)	1110 (43.7")	1140 (44.9")	550 (1210)	5	●	●	■
	0.74 (0.97)	0.66 (0.86)	1210 (47.6")	1240 (48.8")	595 (1310)	6	●	■	▲
Hammerless tooth bucket	0.50 (0.65)	0.45 (0.59)	760 (29.9")	800 (31.5")	440 (970)	4	●	●	●
	0.61 (0.80)	0.54 (0.71)	915 (36.0")	950 (37.4")	490 (1080)	5	●	●	●

●	Applicable for materials with density of 2100 kg/m ³ (3500 lb/yd ³) or less
●	Applicable for materials with density of 1800 kg/m ³ (3000 lb/yd ³) or less
■	Applicable for materials with density of 1500 kg/m ³ (2500 lb/yd ³) or less
▲	Applicable for materials with density of 1200 kg/m ³ (2000 lb/yd ³) or less
X	Not recommended


※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.


Select an optimum combination according to the working conditions and the type of work that is being done.

Consult with your local HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

3) HX140A L/LD/HW 2-PIECE BOOM

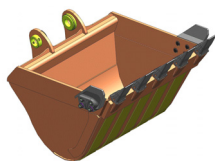

General bucket

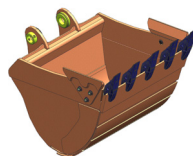

Hammerless tooth bucket

140A2SP20

Type	Counterweight						2400 kg	
	Capacity		Width		Weight	Tooth	MONO BOOM	
	SAE Heaped	CECE heaped	Without side cutter	With side cutter			4.6 m (15' 1") Boom	
	m ³ (yd ³)	m ³ (yd ³)	mm (in)	mm (in)	kg (lb)	EA	2.10 m (6' 11") Arm	2.50 m (8' 2") Arm
General bucket	0.51 (0.67)	0.45 (0.59)	865 (34.1")	995 (39.2")	395 (870)	5	●	●
	0.59 (0.77)	0.51 (0.67)	955 (37.6")	1085 (42.7")	415 (910)	5	●	●
	0.64 (0.84)	0.55 (0.72)	1040 (40.9")	1170 (46.1")	440 (970)	5	●	■
	0.67 (0.88)	0.60 (0.78)	1110 (43.7")	1140 (44.9")	550 (1210)	5	■	■
	0.74 (0.97)	0.66 (0.86)	1210 (47.6")	1240 (48.8")	595 (1310)	6	■	▲
Hammerless tooth bucket	0.50 (0.65)	0.45 (0.59)	760 (29.9")	800 (31.5")	440 (970)	4	●	●
	0.61 (0.80)	0.54 (0.71)	915 (36.0")	950 (37.4")	490 (1080)	5	●	■

●	Applicable for materials with density of 2100 kg/m ³ (3500 lb/yd ³) or less
●	Applicable for materials with density of 1800 kg/m ³ (3000 lb/yd ³) or less
■	Applicable for materials with density of 1500 kg/m ³ (2500 lb/yd ³) or less
▲	Applicable for materials with density of 1200 kg/m ³ (2000 lb/yd ³) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.

Consult with your local HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

7. UNDERCARRIAGE

1) TYPES OF SHOES

Model	Description	Unit		Triple grouser					
	width	mm	(in)	500	(20")	600	(24")	700	(28")
HX140A L	Operating weight	kg	(lb)	14200	31310	14405	31760	14625	32240
	Ground pressure	kgf/cm ²	(psi)	0.44	(6.23)	0.37	(5.26)	0.32	(4.58)
	Overall width	mm		2490	(8' 2")	2590	(8' 6")	2690	(8' 10")
	Link quantity	EA		46		46		46	
HX140A LD	Operating weight	kg	(lb)	15015	33100	15230	33580	15460	34080
	Ground pressure	kgf/cm ²	(psi)	0.46	(6.59)	0.39	(5.56)	0.34	(4.84)
	Overall width	mm		2490	(8' 2")	2590	(8' 6")	2690	(8' 10")
	Link quantity	EA		46		46		46	

Model	Description	Unit		Triple grouser for H/C				Triple grouser for MUD	
	width	mm	(in)	700	(28")	800	(32")	900	(36")
HX140A HW	Operating weight	kg	(lb)	17225	37970	17460	38490	17180	37880
	Ground pressure	kgf/cm ²	(psi)	0.37	(5.29)	0.33	(4.69)	0.29	(4.11)
	Overall width	mm		2740	(9' 0")	2840	(9' 4")	2940	(9' 8")
	Link quantity	EA		49		49		49	

2) SELECTION OF TRACK SHOE

Suitable track shoes should be selected according to operating conditions.

Method of selecting shoes

Confirm the category from the list of applications in **table 2**, then use **table 1** to select the shoe. Wide shoes (categories B and C) have limitations on applications. Before using wide shoes, check the precautions, then investigate and study the operating conditions to confirm if these shoes are suitable.

Select the narrowest shoe possible to meet the required flotation and ground pressure. Application of wider shoes than recommendations will cause unexpected problem such as bending of shoes, crack of link, breakage of pin, loosening of shoe bolts and the other various problems.

Table 1

Model	Track shoe	Specification	Category
HX140A L/LD	500 mm triple grouser	Option	A
	600 mm triple grouser	Standard	B
	700 mm triple grouser	Option	C
HX140A HW	700 mm triple grouser for H/C	Option	C
	800 mm triple grouser for H/C	Option	C
	900 mm triple grouser for MUD	Option	C

Table 2

Category	Applications	Precautions
A	Rocky ground, river beds, normal soil	<ul style="list-style-type: none">Travel at low speed on rough ground with large obstacles such as boulders or fallen trees or a wide range of general civil engineering work
B	Normal soil, soft ground	<ul style="list-style-type: none">These shoes cannot be used on rough ground with large obstacles such as boulders or fallen treesTravel at high speed only on flat groundTravel slowly at low speed if it is impossible to avoid going over obstacles
C	Extremely soft ground (swampy ground)	<ul style="list-style-type: none">Use the shoes only in the conditions that the machine sinks and it is impossible to use the shoes of category A or BThese shoes cannot be used on rough ground with large obstacles such as boulders or fallen treesTravel at high speed only on flat groundTravel slowly at low speed if it is impossible to avoid going over obstacles

8. SPECIFICATIONS FOR MAJOR COMPONENTS

1) ENGINE

Item	Specification
Maker / Model	Cummins / F3.8
Type	4-cycle, turbocharged, charge air cooled, electronic controlled diesel engine
Cooling method	Water cooled
Number of cylinders and arrangement	4 cylinders, in-line
Firing order	1-3-4-2
Combustion chamber type	Direct injection type
Cylinder bore \times stroke	102 \times 115 mm (4.02" \times 4.53")
Displacement	3.8 ℓ (229 cu in)
Compression ratio	17.2 : 1
Gross power	134 Hp (100 kW) at 2200 rpm
Net power	131 Hp (98 kW) at 2200 rpm
Max. power	134 Hp (100 kW) at 2200 rpm
Peak Torque	550 N \cdot m (406 lbf \cdot ft) at 1500 rpm
Engine oil quantity	12 ℓ (3.2 U.S. gal)
Wet weight	360 kg (794 lb)
Starter motor	24 V-4.8 kW
Alternator	24 V-70 A

2) MAIN PUMP

Item	Specification
Type	Variable displacement tandem axis piston pumps
Capacity	2 \times 65 cc/rev
Maximum pressure	350 kgf/cm ² (4980 psi)
Maximum pressure (power boost)	380 kgf/cm ² (5400 psi)
Rated oil flow	2 \times 123.5 ℓ /min (32.6 U.S. gpm / 27.2 U.K. gpm)
Rated speed	1900 rpm

3) GEAR PUMP

Item	Specification
Type	Fixed displacement gear pump single stage
Capacity	15 cc/rev
Maximum pressure	40 kgf/cm ² (570 psi)
Rated oil flow	28.5 ℓ /min (7.5 U.S. gpm/6.3 U.K. gpm)

4) MAIN CONTROL VALVE

Item		Specification
Type		11 spools
Operating method		Hydraulic pilot system
Main relief valve pressure		350 kgf/cm ² (4980 psi)
Main relief valve pressure - power boost		380 kgf/cm ² (5400 psi)
Port relief valve pressure	Boom	400 kgf/cm ² (5690 psi)
	Arm	400 kgf/cm ² (5690 psi)
	Bucket	400 kgf/cm ² (5690 psi)

5) SWING MOTOR

Item		Specification
Type		Fixed displacement axial piston motor
Capacity		72 cc/rev
Relief pressure		280 kgf/cm² (3990 psi)
Braking system		Automatic, spring applied hydraulic released
Swing brake		Multi wet disc
Braking torque		640 kgf · m (4629 lbf · ft) over
Brake release pressure	Cracking	18 kgf/cm² (256 psi)
	Full stroke	24 kgf/cm² (341 psi)
Swing bearing lubrication		Grease-bathed
Reduction gear type		2 - stage planetary

6) TRAVEL MOTOR

Item	Specification
Type	Variable displacement axial piston motor
Capacity	77/44.5 cc/rev
Relief pressure	350 kgf/cm ² (4980 psi)
Braking system	Automatic, spring applied hydraulic released
Braking torque	1779 kgf · m (12868 lbf · ft)
Brake release pressure	12.5~15.9 kgf/cm ² (202~239 psi)
Reduction gear type	2-stage planetary

7) CYLINDER

Item		Specification
Boom cylinder	Bore dia × Stroke	Ø 105 × 1080 mm
	Cushion	Extend only
Arm cylinder	Bore dia × Stroke	Ø 115 × 1108 mm
	Cushion	Extend and retract
Adjust boom cylinder (2-piece boom)	Bore dia × Stroke	Ø 105 × 975 mm
	Cushion	Extend only
Adjust cylinder (2-piece boom)	Bore dia × Stroke	Ø 145 × 613 mm
	Cushion	Extend and retract
Arm cylinder (2-piece boom)	Bore dia × Stroke	Ø 115 × 1138 mm
	Cushion	Extend and retract only
Bucket cylinder	Bore dia × Stroke	Ø 100 × 900 mm
	Cushion	Extend only
Dozer cylinder	Bore dia × Stroke	Ø 100 × 250 mm
	Cushion	Extend only

※ Discoloration of cylinder rod can occur when the friction reduction additive of lubrication oil spreads on the rod surface.

※ Discoloration does not cause any harmful effect on the cylinder performance.

9. RECOMMENDED OILS

HD Hyundai Construction Equipment genuine lubricating oils have been developed to offer the best performance and service life for your equipment. These oils have been tested according to the specifications of HD Hyundai Construction Equipment and, therefore, will meet the highest safety and quality requirements.

We recommend that you use only HD Hyundai Construction Equipment genuine lubricating oils and grease officially approved by HD Hyundai Construction Equipment.

Service point	Kind of fluid	Capacity ℓ (U.S. gal)	Ambient temperature °C (°F)									
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)	40 (104)	
Engine oil pan	Engine oil	12 (3.2)	★SAE 5W-40									
								SAE 30				
					SAE 10W							
				SAE 10W-30								
				SAE 15W-40								
DEF/ AdBlue® tank	Mixture of urea and deionized water	35 (9.2)	ISO 22241, High-purity urea + deionized water (32.5:67.5)									
Swing drive	Gear oil	3.5 (0.9)	★SAE 75W-90									
Final drive		Type 1 : 2.3 (0.6)x2 Type 2 : 5.8 (1.5)x2		SAE 80W-90								
Hydraulic tank	Hydraulic oil	Tank 120 (31.7)	★ISO VG 15									
				ISO VG 32								
		System 210 (55.5)			ISO VG 46, HBHO VG 46★ ³							
				ISO VG 68								
Fuel tank	Diesel fuel★ ¹	270 (71.3)	★ASTM D975 NO.1									
							ASTM D975 NO.2					
Fitting (grease nipple)	Grease	As required	★NLGI NO.1									
					NLGI NO.2							
Radiator (reservoir tank)	Mixture of antifreeze and soft water★ ²	21 (5.5)	Ethylene glycol base permanent type (50 : 50)									
			★Ethylene glycol base permanent type (60 : 40)									

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Material

DEF : Diesel Exhaust Fluid, DEF compatible with AdBlue®

★ : Cold region (Russia, CIS, Mongolia)

★¹ : Ultra low sulfur diesel
- sulfur content ≤ 10 ppm

★² : Soft water
City water or distilled water

★³ : HD Hyundai Construction Equipment
Bio Hydraulic Oil

※ Using any lubricating oils other than HD Hyundai Construction Equipment genuine products may lead to a deterioration of performance and cause damage to major components.

※ Do not mix HD Hyundai Construction Equipment genuine oil with any other lubricating oil as it may result in damage to the systems of major components.

※ Do not use any engine oil other than that specified above, as it may clog the diesel particulate filter(DPF).

※ For HD Hyundai Construction Equipment genuine lubricating oils and grease for use in regions with extremely low temperatures, please contact your local HD Hyundai Construction Equipment dealer.


SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device	2-1
Group 2 Main Control Valve	2-20
Group 3 Swing Device	2-51
Group 4 Travel Device	2-62
Group 5 RCV Lever	2-83
Group 6 RCV Pedal	2-90

GROUP 1 PUMP DEVICE

1. STRUCTURE


The pump device consists of main pump, regulator and gear pump.

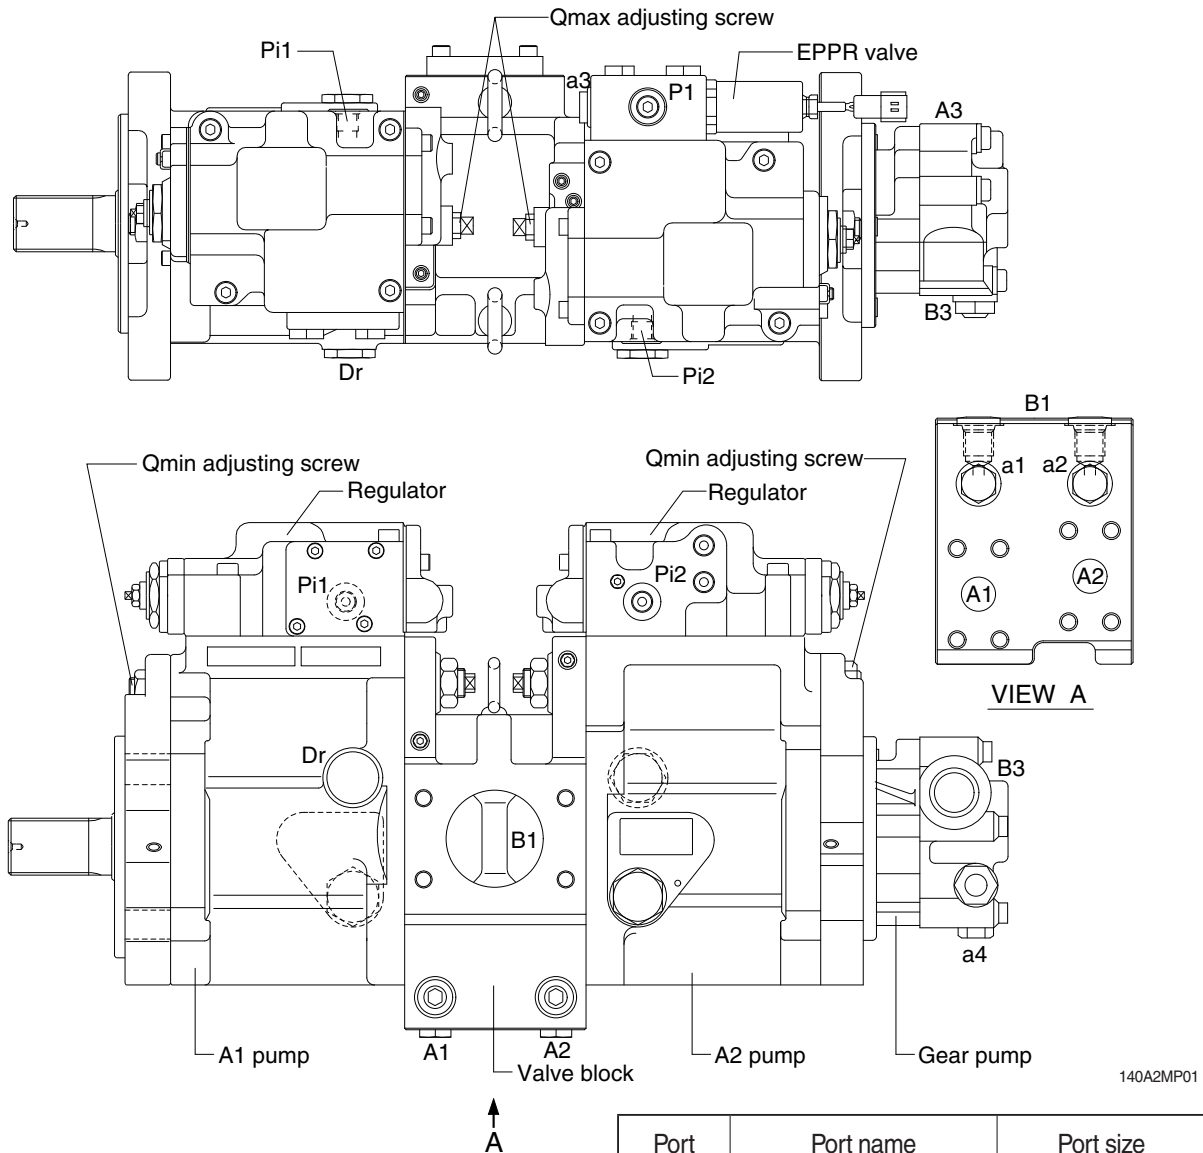

Port	Port name	Port size
A1, A2	Delivery port	SAE 6000 psi 3/4"
B1	Suction port	SAE 2500 psi 2 1/2"
Dr	Drain port	PF 1/2 - 19
Pi1, Pi2	Pilot port	PF 1/4 - 15
P1	EPPR port	PF 1/4 - 13
a1, a2	Gauge port	PF 1/4 - 15
a3	Gauge port	PF 1/4 - 13
a4	Gauge port	PF 1/4-14
A3	Gear pump delivery port	PF 1/2 - 19
B3	Gear pump suction port	PF 3/4 - 20.5

1) MAIN PUMP





The main pump consists of two piston pumps (A1 & A2) and valve block.

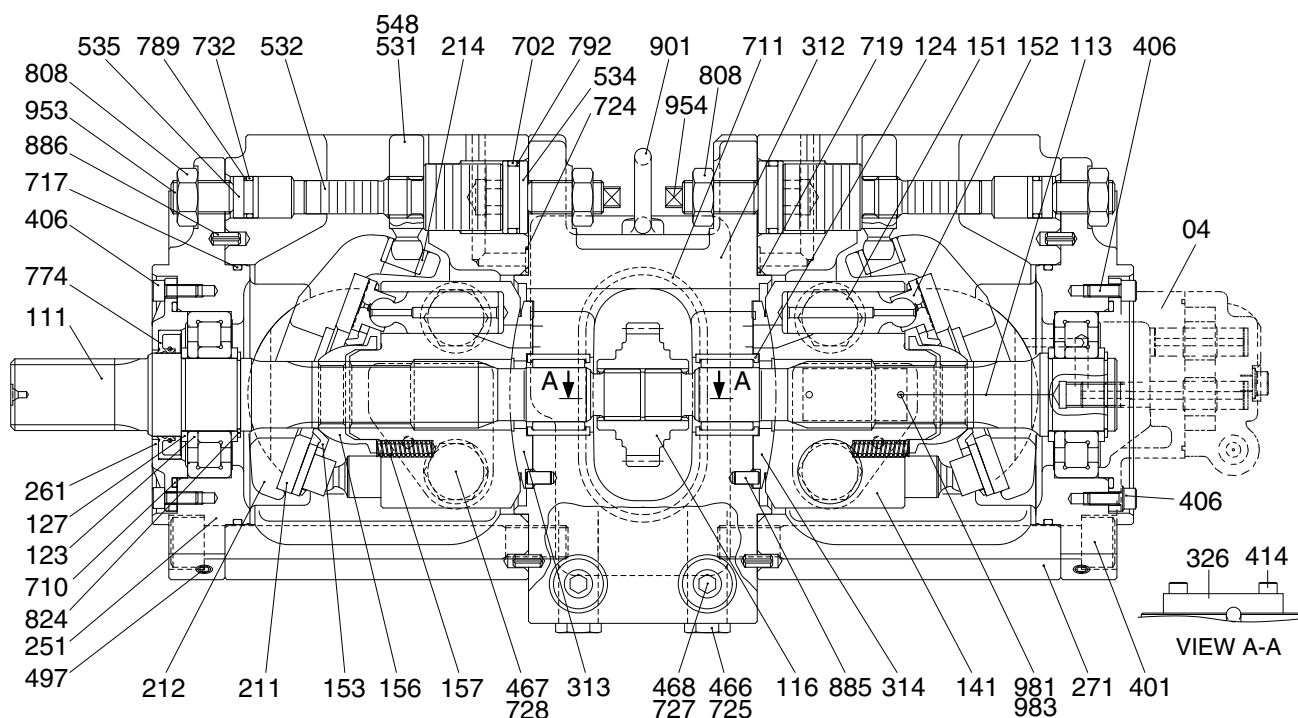

140A2MP02

04	Gear pump	312	Valve block	717	O-ring
111	Drive shaft (F)	313	Valve plate (R)	719	O-ring
113	Drive shaft (R)	314	Valve plate (L)	724	Square ring
116	1st Gear	326	Cover	725	O-ring
123	Roller bearing	401	Hexagon socket bolt	727	O-ring
124	Needle bearing	406	Hexagon socket bolt	728	O-ring
127	Bearing spacer	414	Hexagon socket bolt	732	O-ring
141	Cylinder block	466	Plug	774	Oil seal
151	Piston	467	plug	789	Back up ring
152	Shoe	468	Plug	792	Back up ring
153	Set plate	497	Plug	808	Hexagon head nut
156	Bushing	531	Tilting pin	824	Snap ring
157	Cylinder spring	532	Servo piston	885	Pin
211	Shoe plate	534	Stopper (L)	886	Spring pin
212	Swash plate	535	Stopper (S)	901	Eye bolt
214	Bushing	548	Pin	953	Set screw
251	Support	702	O-ring	954	Set screw
261	Seal cover (F)	710	O-ring	981	Name plate
271	Pump casing	711	O-ring	983	Pin



2) REGULATOR (1/2)

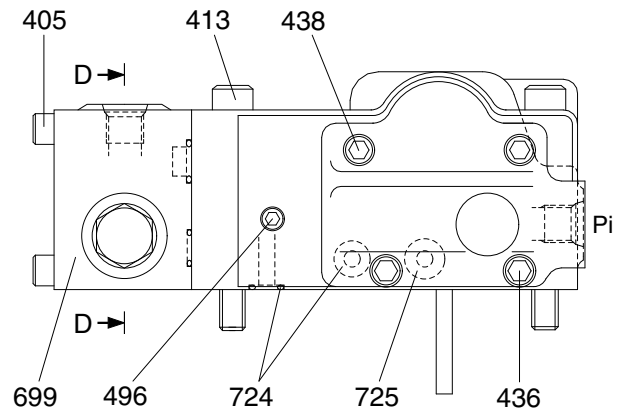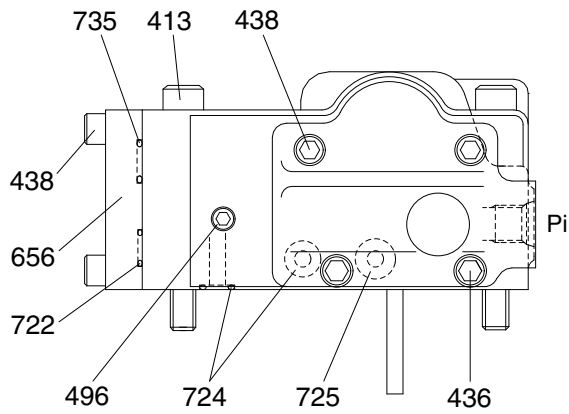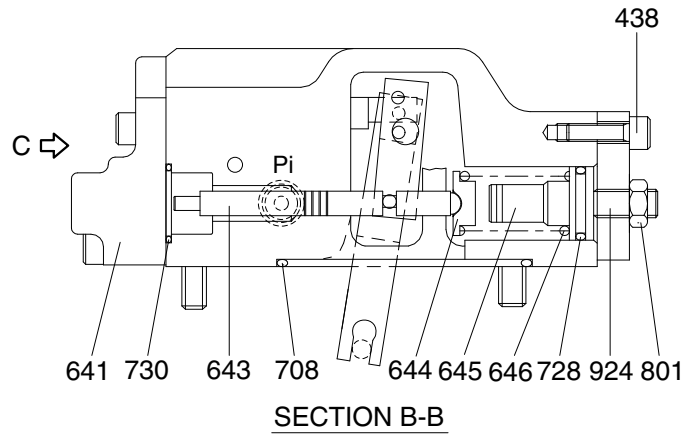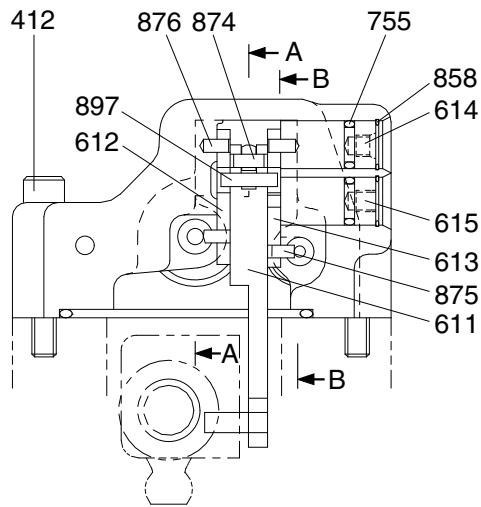

VIEW C (FRONT)


VIEW C (REAR)

140A2MP04

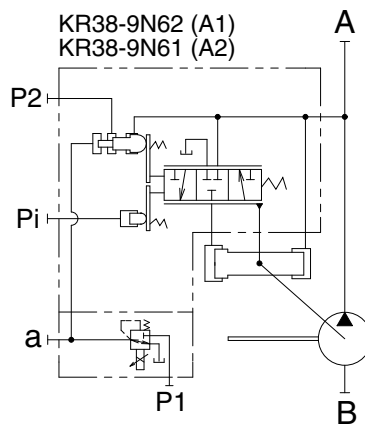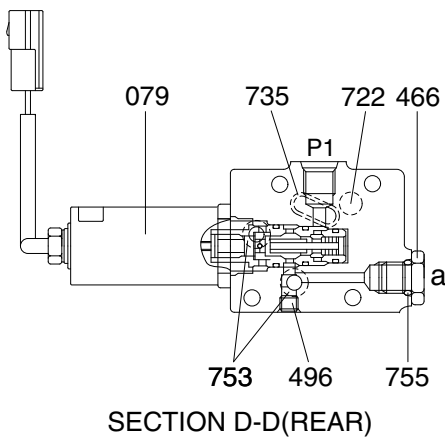

Port	Port name	Port size
A	Delivery port	SAE 6000 psi 3/4"
B	Suction port	SAE 2500 psi 2 1/2"
Pi	Pilot port	PF 1/4-15



REGULATOR (2/2)

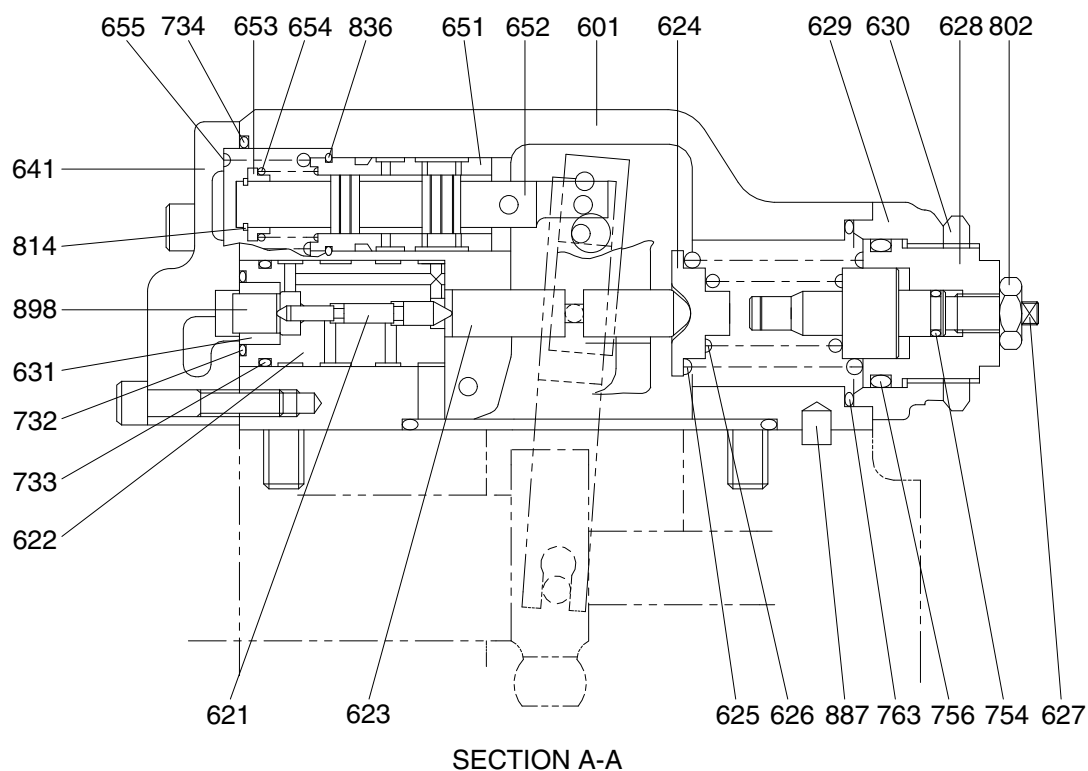

14W92MP05

079	EPPR valve assembly	629	Cover (C)	733	O-ring
405	Hexagon socket screw	630	Lock nut	734	O-ring
412	Hexagon socket screw	631	Sleeve, Pf	735	O-ring
413	Hexagon socket screw	641	Pilot cover	753	O-ring
436	Hexagon socket screw	643	Pilot piston	754	O-ring
438	Hexagon socket screw	644	Spring seat (Q)	755	O-ring
466	Plug	645	Adjust stem (Q)	756	O-ring
496	Plug	646	Pilot spring	763	O-ring
601	Casing	651	Sleeve	801	Lock nut
611	Feed back lever	652	Spool	802	Lock nut
612	Lever (1)	653	Spring seat	814	Snap ring
613	Lever (2)	654	Return spring	836	Snap ring
614	Center plug	655	Set spring	858	Snap ring
615	Adjust plug	656	Block cover	874	Pin
621	Compensator piston	699	Valve casing	875	Pin
622	Piston case	708	O-ring	876	Pin
623	Compensator rod	722	O-ring	887	Pin
624	Spring seat (C)	724	O-ring	897	Pin
625	Outer spring	725	O-ring	898	Pin
626	Inner spring	728	O-ring	924	Set screw
627	Adjust stem (C)	730	O-ring		
628	Adjust screw (C)	732	O-ring		

3) GEAR PUMP

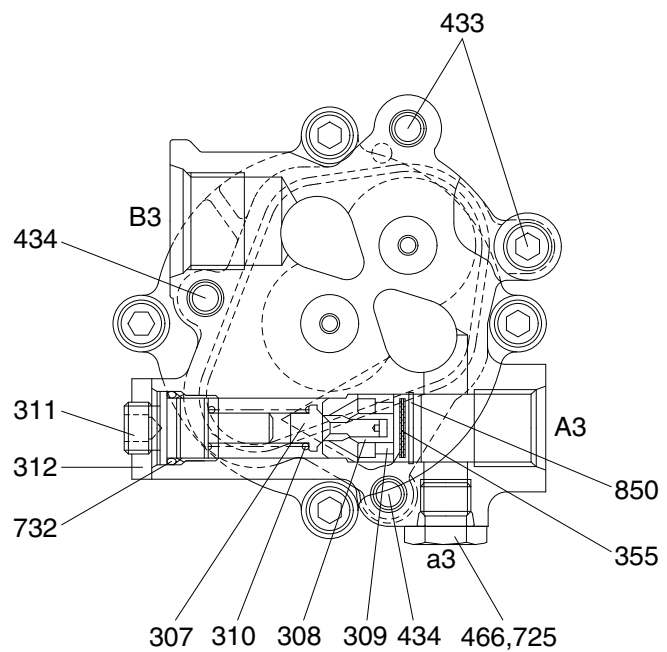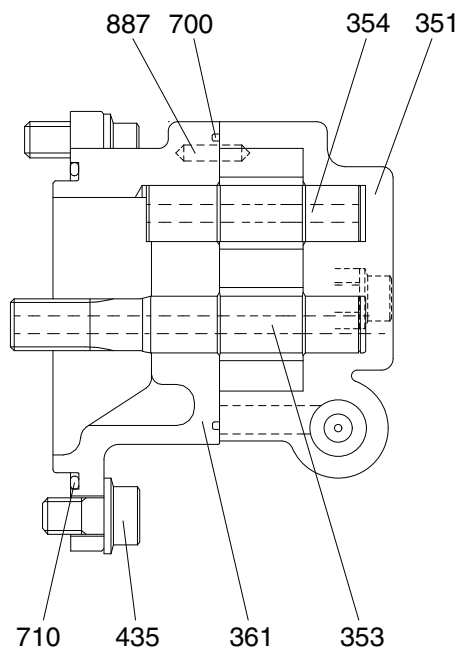


140A2MP06

307 Poppet
308 Seat
309 Ring
310 Spring
311 Adjusting screw
312 Lock nut
351 Gear case

353 Drive gear
354 Driven gear
355 Filter
361 Front case
433 Flange socket
434 Flange socket
435 Flange socket

466 Plug
700 Ring
710 O-ring
725 O-ring
732 O-ring
850 Snap ring
887 Pin

4) EPPR VALVE ASSY

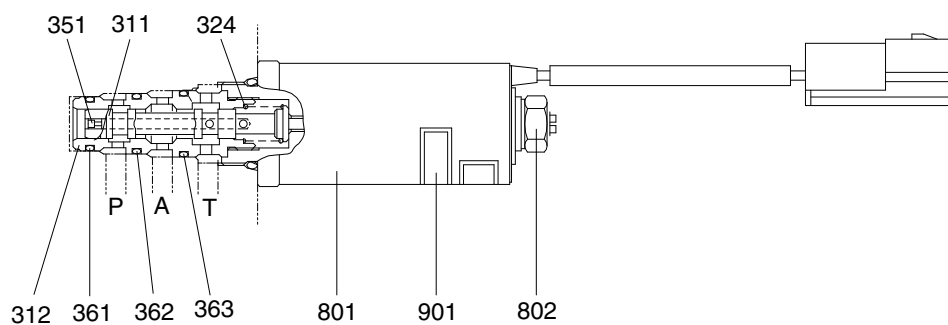

140A2MP08

311	Spool	361	O-ring	802	Hexagon nut
312	Sleeve	362	O-ring	901	Name plate
324	Spring	363	O-ring		
351	Orifice	801	Solenoid		

2. FUNCTION


1) MAIN PUMP

The pumps may be classified roughly into the rotary group performing a rotary motion and working as the major part of the whole pump function: the swash plate group that varies the delivery rates: and the valve cover group that changes over oil suction and discharge.

(1) Rotary group

The rotary group consists of drive shaft (F) (111), cylinder block (141), piston shoes (151,152), set plate (153), spherical bushing (156) and cylinder spring (157). The drive shaft is supported by bearing (123,124) at its both ends.

The shoe is caulked to the piston to form a spherical coupling. It has a pocket to relieve thrust force generated by loading pressure and to take hydraulic balance so that it slides lightly over the shoe plate (211). The sub group composed by a piston and a shoe is pressed against the shoe plate by the action of the cylinder spring via a retainer and a spherical bush. Similarly, the cylinder block is pressed against valve plate (313) by the action of the cylinder spring.

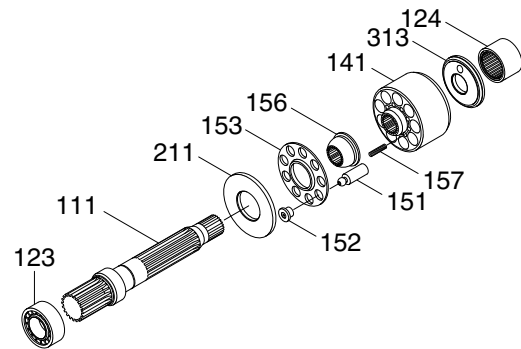


21092MP06

(2) Swash plate group

The swash plate group consists of swash plate (212), shoe plate (211), swash plate support (251), tilting bush (214), tilting pin (531) and servo piston (532).

The swash plate is a cylindrical part formed on the opposite side of the sliding surface of the shoe and is supported by the swash support.

If the servo piston moves to the right and left as hydraulic force controlled by the regulator is admitted to hydraulic chamber located on both sides of the servo piston, the swash plate slides over the swash plate support via the spherical part of the tilting pin to change the tilting angle (α)

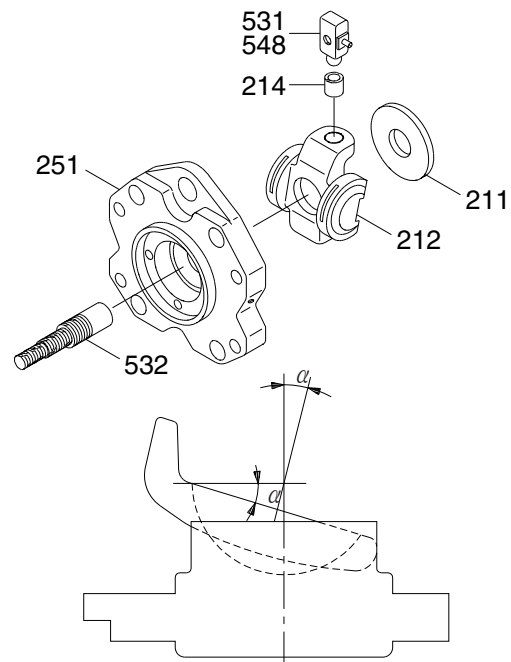

2507A2MP14

(3) Valve block group


The valve block group consists of valve block (312), valve plate (313) and valve plate pin(885).

The valve plate having two melon-shaped ports is fixed to the valve block and feeds and collects oil to and from the cylinder block.

The oil changed over by the valve plate is connected to an external pipeline by way of the valve block.

Now, if the drive shaft is driven by a prime mover (electric motor, engine, etc), it rotates the cylinder block via a spline linkage at the same time. If the swash plate is tilted as in Fig (previous page) the pistons arranged in the cylinder block make a reciprocating motion with respect to the cylinder block, while they revolve with the cylinder block.

If you pay attention to a single piston, it performs a motion away from the valve plate (oil sucking process) within 180 degrees, and makes a motion towards the valve plate (or oil discharging process) in the rest of 180 degrees. When the swash plate has a tilting angle of zero, the piston makes no stroke and discharges no oil.

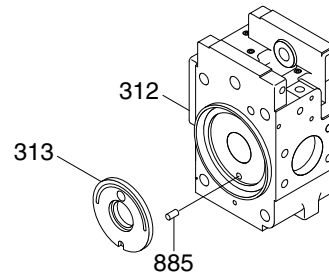

21092MP07

2) REGULATOR


Regulator consists of the negative flow control, total horse power control and power shift control function.

(1) Negative flow control


By changing the pilot pressure P_i , the pump tilting angle (delivery flow) is regulated arbitrarily, as shown in the figure.

This regulator is of the negative flow control in which the delivery flow Q decreases as the pilot pressure P_i rises.

With this mechanism, when the pilot pressure corresponding to the flow required for the work is commanded, the pump discharges the required flow only, and so it does not consume the power uselessly.

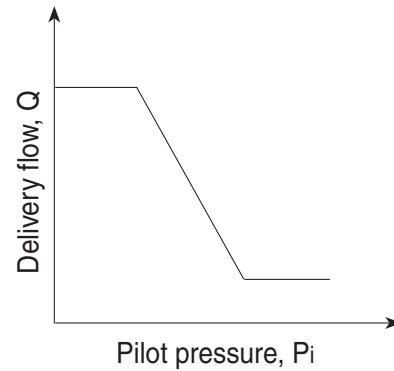

① Flow reducing function

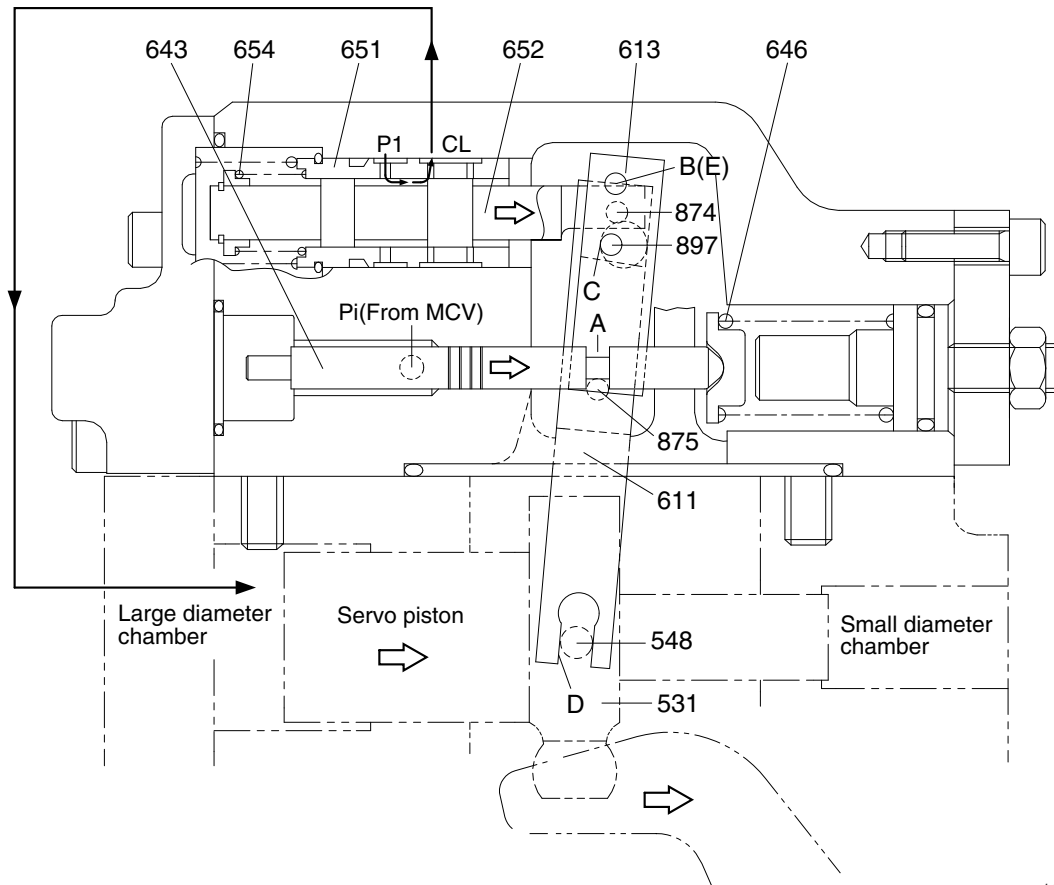

14W92MP12

As the pilot pressure P_i rises, the pilot piston (643) moves to the right to a position where the force of the pilot spring (646) balances with the hydraulic force.

The groove (A) in the pilot piston is fitted with the pin (875) that is fixed to lever 2 (613). Therefore, when the pilot piston moves, lever 2 rotates around the fulcrum of point B [fixed by the fulcrum plug (614) and pin (875)]. Since the large hole section (C) of lever 2 contains a protruding pin (897) fixed to the feedback lever (611), the pin (897) moves to the right as lever 2 rotates. Since the opposing-flat section (D) of the feedback lever is fitted with the pin (548) fixed by the tilting pin (531) that swings the swash plate, the feedback lever rotates around the fulcrum of point D, as the pin (897) moves.

Since the feedback lever is connected with the spool (652) via the pin (874), the spool moves to the right.

The movement of the spool causes the delivery pressure P_1 to connect to port CL through the spool and to be admitted to the large diameter section of the servo piston. The delivery pressure P_1 that is constantly admitted to the small diameter section of the servo piston moves the servo piston to the right due to the area difference, resulting in decrease of the tilting angle.

When the servo piston moves to the right, point D also moves to the right. The spool is fitted with the return spring (654) and is tensioned to the left at all times, and so the pin (897) is pressed against the large hole section (C) of lever 2.

Therefore, as point D moves, the feedback lever rotates around the fulcrum of point C, and the spool is shifted to the left. This causes the opening between the sleeve (651) and spool (652) to close slowly, and the servo piston comes to a complete stop when it closes completely.

[illegible]

As the pilot pressure P_i decreases, the pilot piston (643) moves to the left by the action of the pilot spring (646) and causes lever 2 (613) to rotate around the fulcrum of point B. Since the pin (897) is pressed against the large hole section (C) of lever 2 by the action of the return spring (654) via the spool (652), pin (874), and feedback lever (611), the feedback lever rotates around the fulcrum of point D as lever 2 rotates, and shifts the spool to the left. Port CL opens a way to the tank port as the spool moves. This deprives the large diameter section of the servo piston of pressure, and shifts the servo piston to the left by the discharge pressure P_1 in the small diameter section, resulting in an increase in the flow rate.


2-11

③ Adjustment of flow control characteristic

The flow control characteristic can be adjusted with the adjusting screw.


Adjust it by loosening the hexagon nut (801) and by tightening (or loosening) the hexagonal socket head screw (924).

Tightening the screw shifts the control chart to the right as shown in the figure.

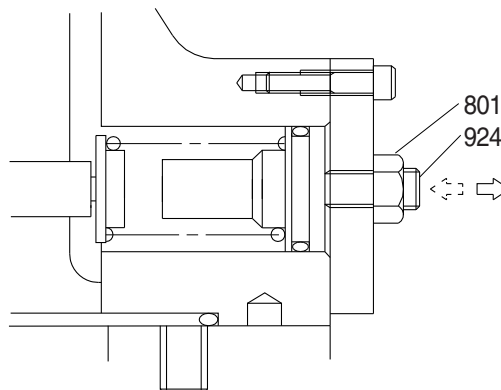

※ Adjusting value

Speed	Adjustment of flow control characteristic		
	Tightening amount of adjusting screw (924)	Flow control starting pressure change amount	Flow change amount
(min ⁻¹)	(Turn)	(kgf/cm ²)	(ℓ/min)
1900	+1/4	+1.6	+9

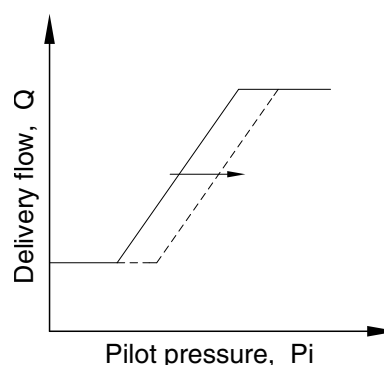

21092MP11

(2) Total horsepower control

The regulator decreases the pump tilting angle (delivery flow) automatically to limit the input torque within a certain value with a rise in the delivery pressure P_1 of the self pump and the delivery pressure P_2 of the companion pump.


(The input horsepower is constant when the speed is constant.)

Since the regulator is of the simultaneous total horsepower type that operates by the sum of load pressures of the two pumps in the tandem double-pump system, the prime mover is automatically prevented from being overloaded, irrespective of the load condition of the two pumps, when horsepower control is under way.


Since this regulator is of the simultaneous total horsepower type, it controls the tilting angles (displacement volumes) of the two pumps to the same value as represented by the following equation :

$$\begin{aligned} T_{in} &= P_1 \times q/2\pi + P_2 \times q/2\pi \\ &= (P_1 + P_2) \times q/2\pi \end{aligned}$$

The horsepower control function is the same as the flow control function and is summarized in the following. (For detailed behaviors of respective parts, refer to the section of flow control).

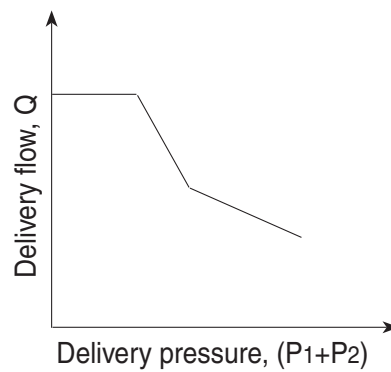

① Overload preventive function

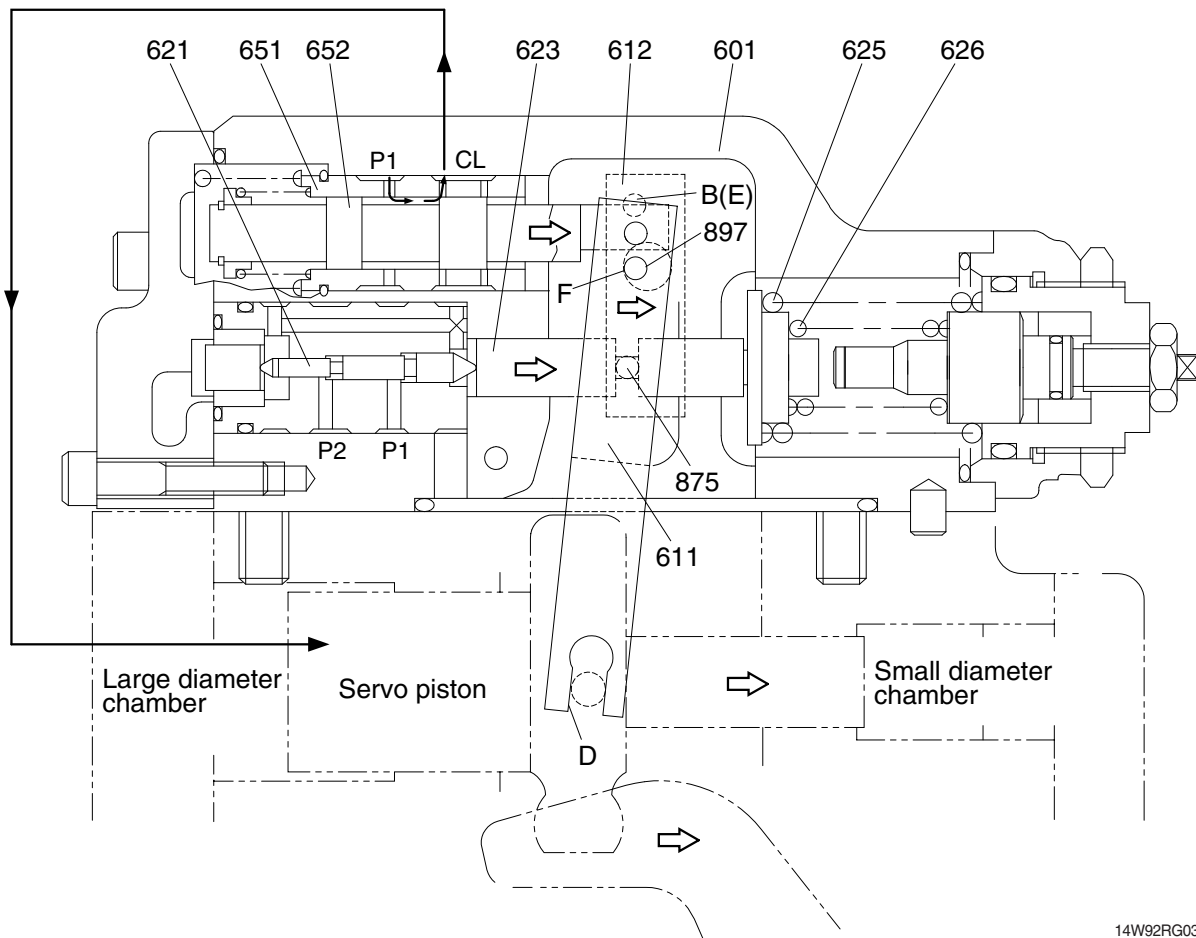


14W92RG03

When the self pump delivery pressure P1 or the companion pump delivery pressure P2 rises, it acts on the stepped part of the compensating piston (621). It presses the compensating rod (623) to the right till the force of the outer spring (625) and inner spring (626) balances with the hydraulic force. The movement of the compensating rod is transmitted to lever 1 (612) via pin (875).

Lever 1 rotates around the pin (875) (E) fixed to the casing (601).

Since the large hole section (F) of lever 1 contains a protruding pin (897) fixed to the feedback lever (611), the feedback lever rotates around the fulcrum of point D as lever 1 rotates, and then the spool (652) is shifted to the right. As the spool moves, the delivery pressure P1 is admitted to the large diameter section of the servo piston via port CL, causes the servo piston move to the right, reduces the pump delivery, flow rate, and prevents the prime mover from being overloaded. The movement of the servo piston is transmitted to the feedback lever via point D. Then the feedback lever rotates around the fulcrum of point F and the spool is shifted to the left. The spool moves till the opening between the spool (652) and sleeve (651) is closed.

② Flow reset function

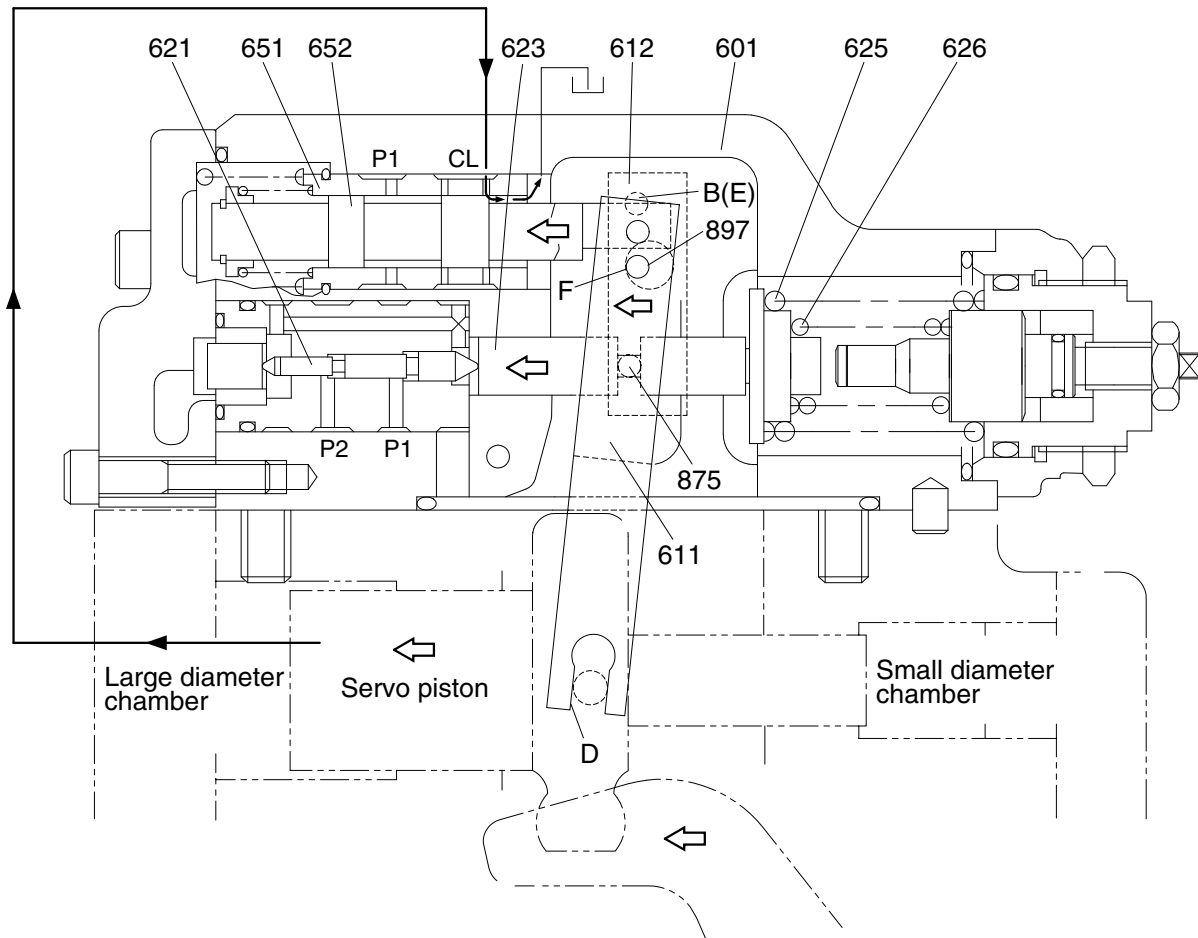

14W92RG04

As the self pump delivery pressure P1 or the companion pump delivery pressure P2 decreases, the compensating rod (623) is pushed back by the action of the springs (625 & 626) to rotate lever 1 (612) around point E. Rotating of lever 1 causes the feedback lever (611) to rotate around the fulcrum of point D and then the spool (652) to move to the left. As a result, port CL opens a way to the tank port.

This causes the servo piston to move to the left and the pump's delivery rate to increase.

The movement of the servo piston is transmitted to the spool by the action of the feedback mechanism to move it till the opening between the spool and sleeve is closed.

③ Low tilting angle (low flow) command preferential function

As mentioned above, flow control and horsepower control tilting angle commands are transmitted to the feedback lever and spool via the large-hole sections (C & F) of levers 1 and 2. However, since sections C and F have the pins ($\varnothing 4$) protruding from the large hole ($\varnothing 8$), only the lever lessening the tilting angle contacts the pin (897); the hole ($\varnothing 8$) in the lever of a larger tilting angle command is freed without contacting the pin (897). Such a mechanical selection method permits preference of the lower tilting angle command of the flow control and horsepower control.


④ Adjustment of input horsepower

Since the regulator is of total cumulative horsepower type, adjust the adjusting screws of both the front and rear pumps, when changing the horsepower set values. The pressure change values by adjustment are based on two pumps pressurized at the same time, and the values will be doubled when only one pump is loaded.

a. Adjustment of outer spring

Adjust it by loosening the hexagon nut (630) and by tightening (or loosening) the adjusting screw C (628).


Tightening the screw shifts the control chart to the right and increases the input horsepower as shown in the figure. Since turning the adjusting screw C (628) by N turns changes the setting of the inner spring (626), return the adjusting stem C (627) by $N \times A$ turns at first. ($A=1.73$)

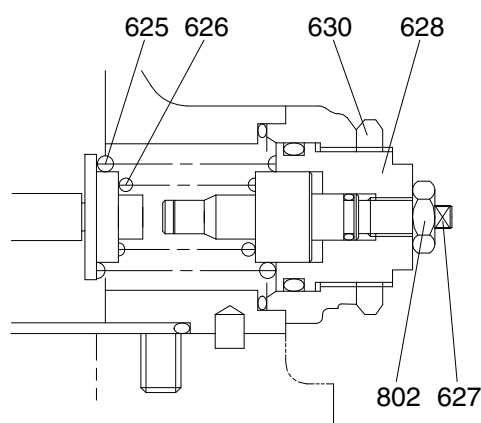

2107A2MP07A

※ Adjusting value

Speed (min ⁻¹)	Adjustment of input horsepower		
	Tightening amount of adjusting screw (C) (628) (Turn)	Compensating control starting pressure change amount (kgf/cm ²)	Input torque change amount (kgf · m)
1900	+1/4	+19.2	+3.4

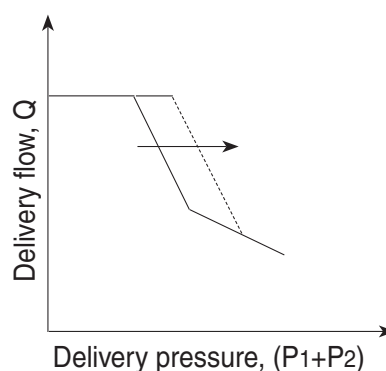


b. Adjustment of inner spring

Adjust it by loosening the hexagon nut (802) and by tightening (or loosening) the adjusting stem C (627).


Tightening the screw increases the flow and then the input horsepower as shown in the figure.

※ **Adjusting value**


Speed	Adjustment of input horsepower		
	Tightening amount of adjusting stem (C) (627)	Flow change amount	Input torque change amount
(min ⁻¹)	(Turn)	(ℓ/min)	(kgf · m)
1900	+1/4	+8.6	+4.3

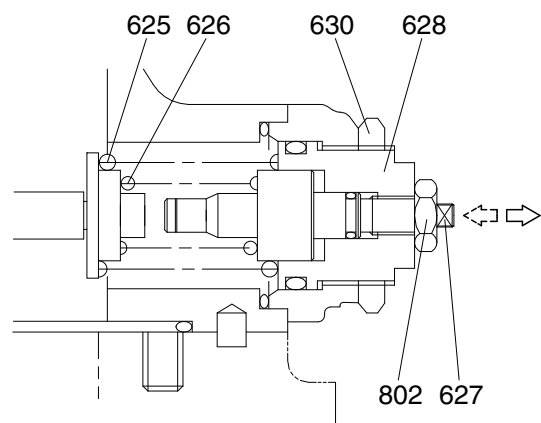

2107A2MP08

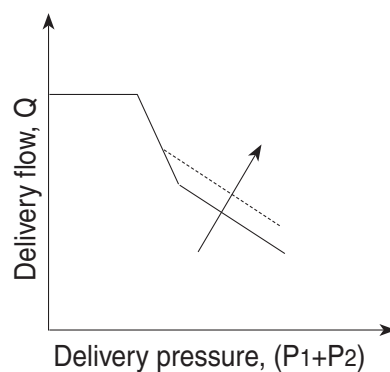

(3) Power shift control

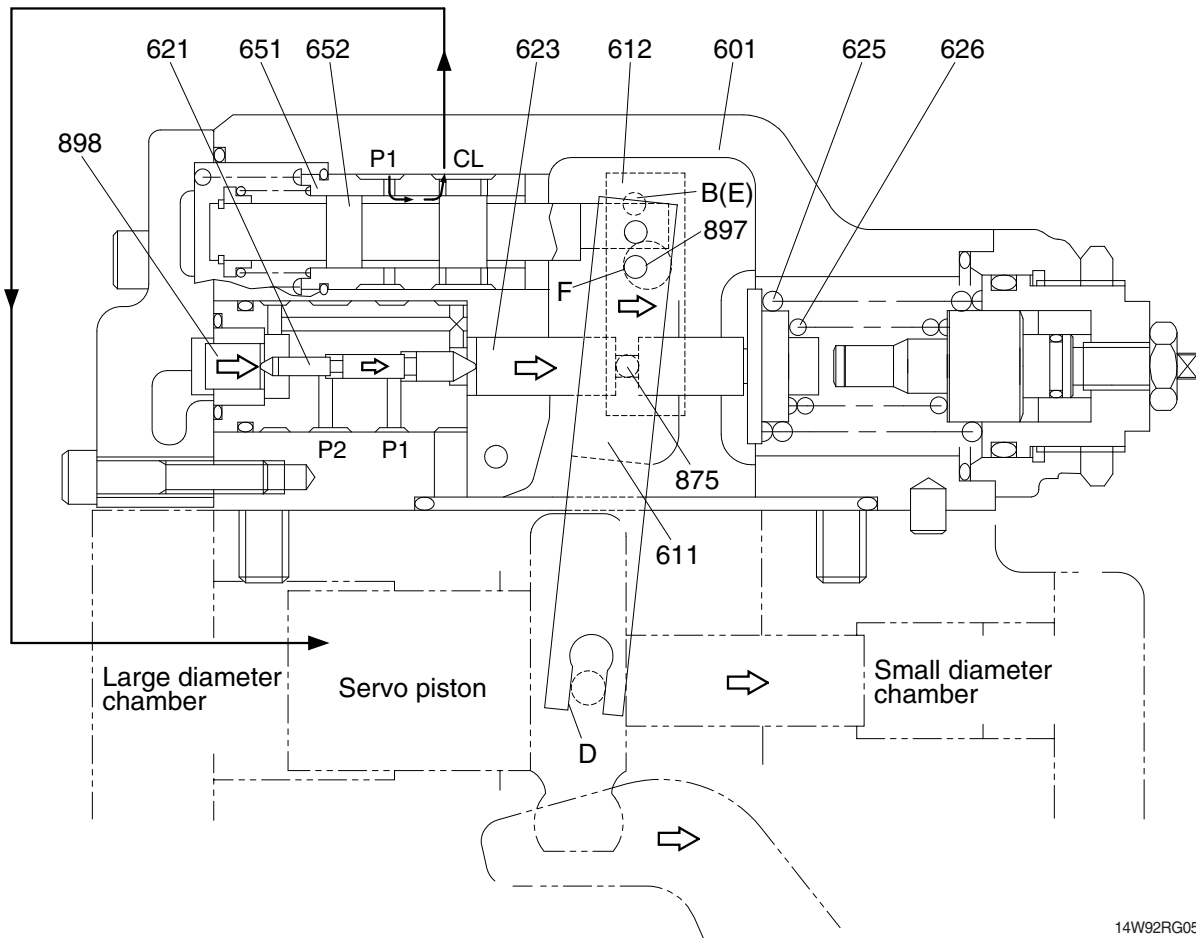

14W92RG05

The set horsepower valve is shifted by varying the command current level of the proportional pressure reducing valve attached to the pump.

Only one proportional pressure reducing valve is provided.


However, the secondary pressure P_f (power shift pressure) is admitted to the horsepower control section of each pump regulator through the pump's internal path to shift it to the same set horsepower level.

This function permits arbitrary setting of the pump output power, thereby providing the optimum power level according to the operating condition.

The power shift pressure P_f controls the set horsepower of the pump to a desired level, as shown in the figure.

As the power shift pressure P_f rises, the compensating rod (623) moves to the right via the pin (898) and compensating piston (621).

This decreases the pump tilting angle and then the set horsepower in the same way as explained in the overload preventive function of the horsepower control. On the contrary, the set horsepower rises as the power shift pressure P_f falls.

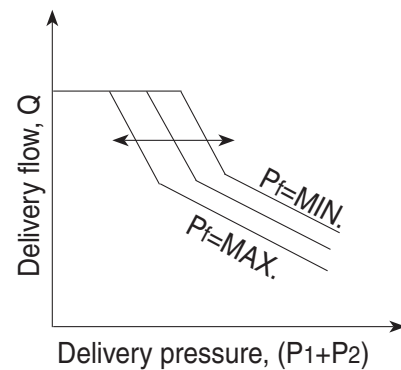


(4) Adjustment of maximum and minimum flows

① Adjustment of maximum flow


Adjust it by loosening the hexagon nut (808) and by tightening (or loosening) the set screw (954).

The maximum flow only is adjusted without changing other control characteristics.

Speed (min ⁻¹)	Adjustment of max flow	
	Tightening amount of adjusting screw (954) (Turn)	Flow change amount (ℓ/min)
1900	+1/4	-3.0

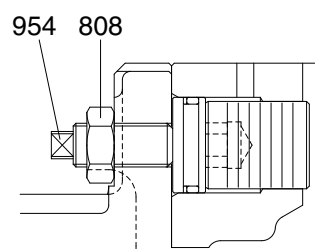

14W92MP23

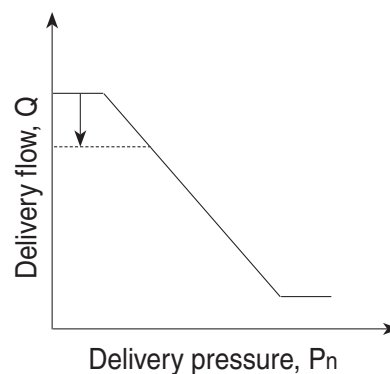


② Adjustment of minimum flow


Adjust it by loosening the hexagon nut (808) and by tightening (or loosening) the hexagonal socket head set screw (953). Similarly to the adjustment of the maximum flow, other characteristics are not changed.

However, remember that, if tightened too much, the required horsepower during the maximum delivery pressure (or during relieving) may increase.

Speed (min ⁻¹)	Adjustment of min flow	
	Tightening amount of adjusting screw (953) (Turn)	Flow change amount (ℓ/min)
1900	+1/4	+3.0

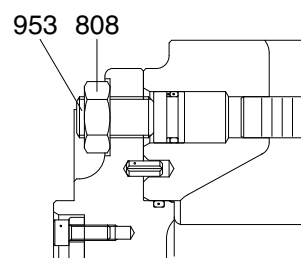


14W92MP24

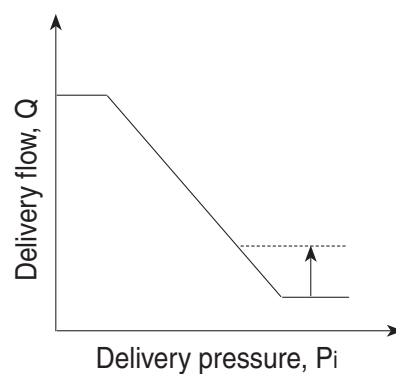

GROUP 2 MAIN CONTROL VALVE


1. STRUCTURE

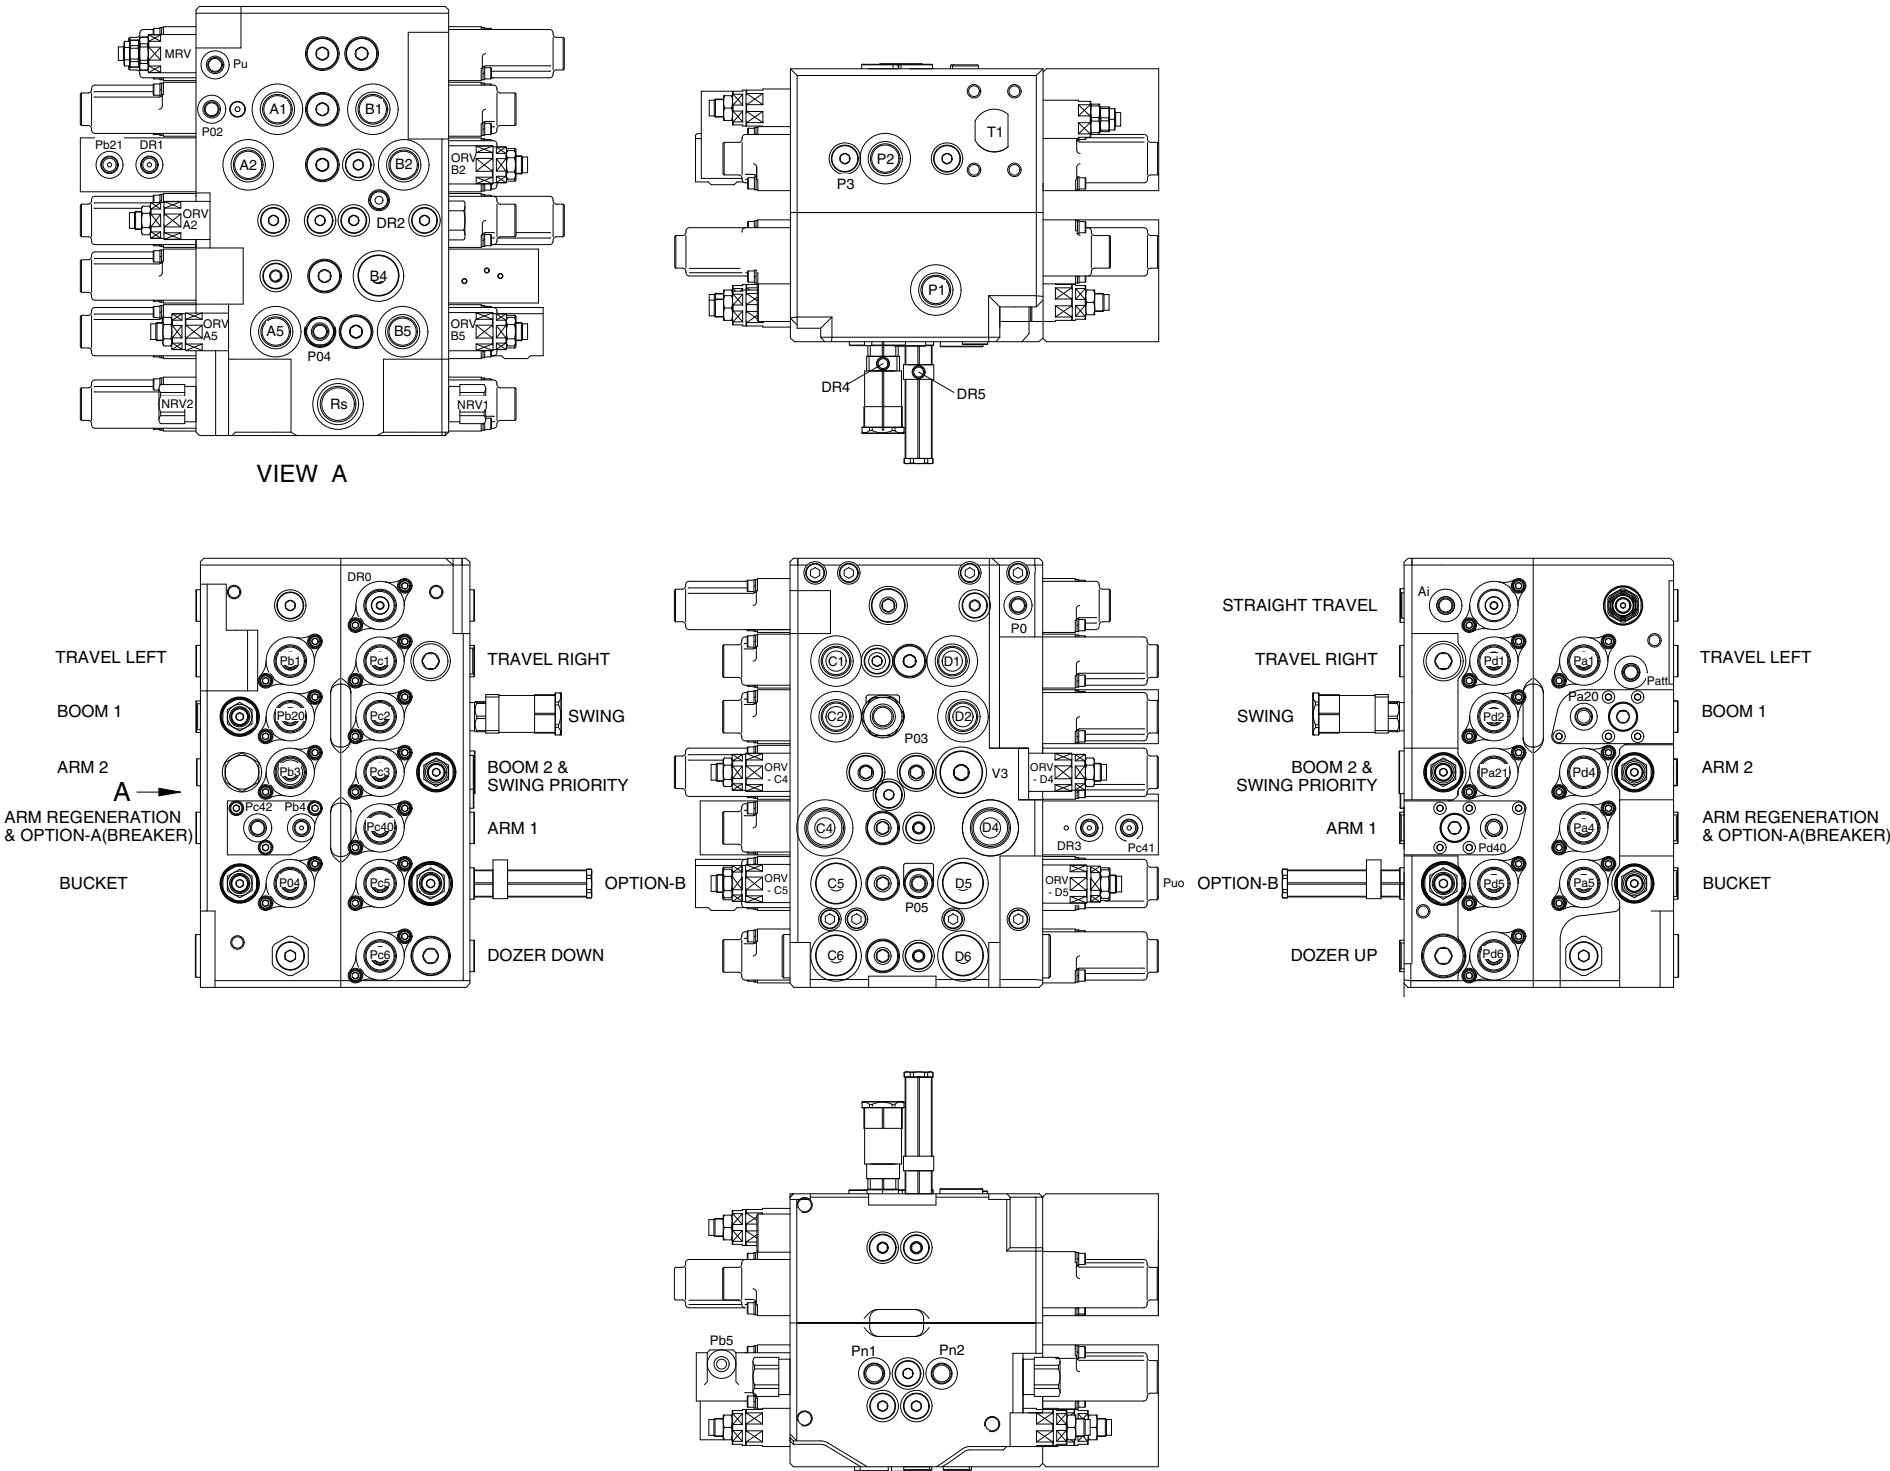

Mark	Port name	Port size	Tightening torque
(Rs)	-	UNF 1 3/16	18 kgf · m (130 lbf · ft)
Pd0	Travel straight pilot port	PF 1/4	3.5~3.9 kgf · m (25.3~28.2 lbf · ft)
Pa1	Travel left pilot port (BW)		
Pb1	Travel left pilot port (FW)		
Pc1	Travel right pilot port (FW)		
Pd1	Travel right pilot port (BW)		
Pa20	Boom up pilot port		
Pa21	Boom up confluence pilot port		
Pb20	Boom down pilot port		
Pb21	Lock valve pilot port (boom)		
Pc2	Swing pilot port (RH)		
Pd2	Swing pilot port (LH)		
Pb3	Arm in confluence pilot port		
Pc3	Swing priority pilot port		
Pa4	Option A pilot port (breaker)		
Pb4	Arm in regeneration cut port		
Pc40	Arm in pilot port		
Pc41	Lock valve pilot port (arm)		
Pc42	Arm in regen-cut signal selector port		
Pd40	Arm out pilot port		
Pd4	Arm out confluence pilot port		
Pa5	Bucket in pilot port		
Pb5	Bucket out pilot port		
Pc5	Option B pilot port		
Pd5	Option B pilot port		
Pc6	Option C pilot port (dozer blade down)		
Pd6	Option C pilot port (dozer blade up)		
(P0)	-	PF 3/8	7~8 kgf · m (50.6~57.8 lbf · ft)
Pu	Main relief pressure up pilot port		
(Ai)	-	PF 3/4	15~18 kgf · m (109~130 lbf · ft)
Patt	Auto idle signal-attachment		
P02	Pilot signal port		
P03	Boom priority pilot port		
P04	Boom parallel orifice pilot port		
P05	Breaker summation pilot port		
DR0	Drain port (travel straight)		
DR1	Drain port (boom holding valve)		
DR2	Drain port (boom 2 & swing priority)		
DR3	Drain port (arm holding valve)		
Pn1	Negative control signal port (P1 port side)		
Pn2	Negative control signal port (P2 port side)		
(P3)	-	PF 1	20~25 kgf · m (115~180 lbf · ft)
A1	Travel motor left side port (BW)		
B1	Travel motor left side port (FW)		
C1	Travel motor right side port (FW)		
D1	Travel motor right side port (BW)		
B2	Boom rod side port		
C2	Swing motor port (RH)		
D2	Swing motor port (LH)		
B4	Option A port (breaker)		
A5	Bucket head side port		
B5	Bucket rod side port		
C5	Option B port		
D5	Option B port		
C6	Option C pilot port (dozer down port)		
D6	Option C pilot port (dozer up port)		
P1	Pump port (A2 pump)	SAE 3000, 1 1/2 (M12 × 1.75)	8.5~11.5 kgf · m (61.5~83.1 lbf · ft)
P2	Pump port (A1 pump)		
A2	Boom head side port	PF 1/8	1.5~1.9 kgf · m (10.8~13.7 lbf · ft)
C4	Arm head side port		
D4	Arm rod side port	PF 1/8	1.5~1.9 kgf · m (10.8~13.7 lbf · ft)
DR4	Drain port (swing logic valve)		
DR5	Drain port (flow summation)	SAE 3000, 1 1/2 (M12 × 1.75)	8.5~11.5 kgf · m (61.5~83.1 lbf · ft)
T1	Return port		

140A2MC01


1) P1 SPOOL SECTION

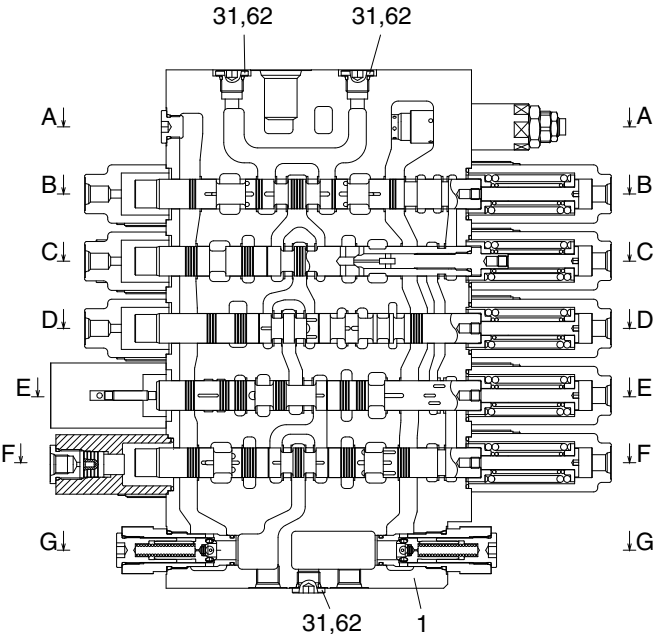

- 1 Housing P1
- 31 Plug
- 62 O-ring

140A2MC02


2) P2 SPOOL SECTION

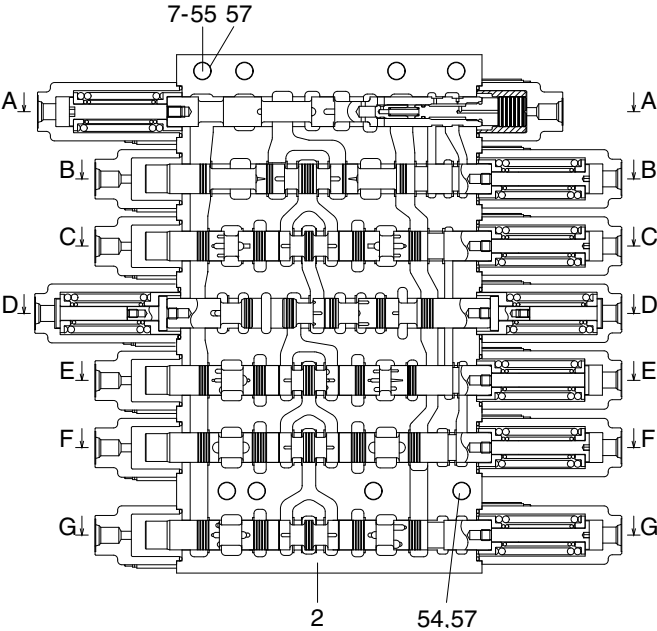

- 2 Housing P2
- 54 Socket bolt
- 55 Socket bolt
- 57 Spring washer

140A2MC03


3) STRAIGHT TRAVEL AND SUPPLY SECTION

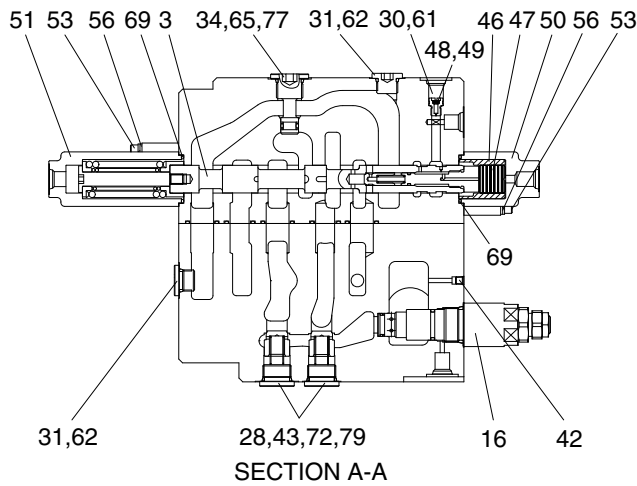

140A2MC04

- 3 Straight travel spool assy
- 16 Main relief valve
- 28 Plug
- 30 Plug
- 31 Plug
- 34 Plug
- 42 Plug
- 43 Poppet
- 46 Sleeve
- 47 Piston
- 48 Signal orifice
- 49 Coin type filter
- 50 Pilot A cap
- 51 Pilot B1 cap
- 53 Socket bolt
- 56 Washer
- 61 O-ring
- 62 O-ring
- 65 O-ring
- 69 O-ring
- 72 O-ring
- 77 Back up ring
- 79 Spring


4) TRAVEL RIGHT AND LEFT SECTION

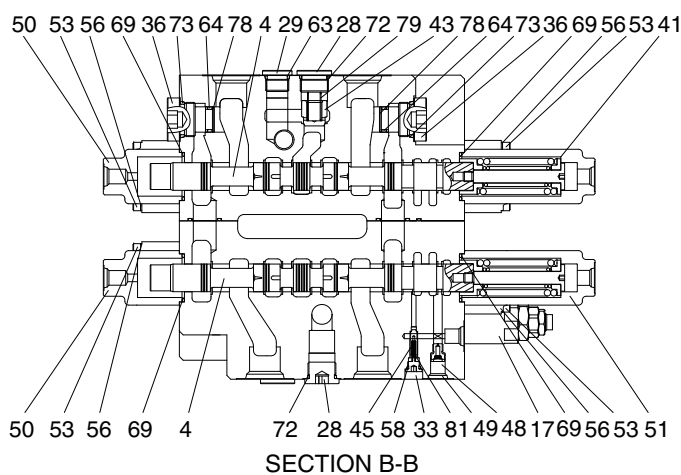

140A2MC05

- 4 Travel spool assy
- 17 Overload relief valve
- 28 Plug
- 29 Plug
- 33 Plug
- 36 Plug
- 42 Plug
- 43 Poppet
- 45 Poppet
- 48 Signal orifice
- 49 Coin type filter
- 50 Pilot A cap
- 53 Socket bolt
- 56 Washer
- 58 O-ring
- 63 O-ring
- 64 O-ring
- 69 O-ring
- 72 O-ring
- 73 O-ring
- 78 Back up ring
- 79 Spring
- 81 Spring


5) SWING AND BOOM 1 SECTION

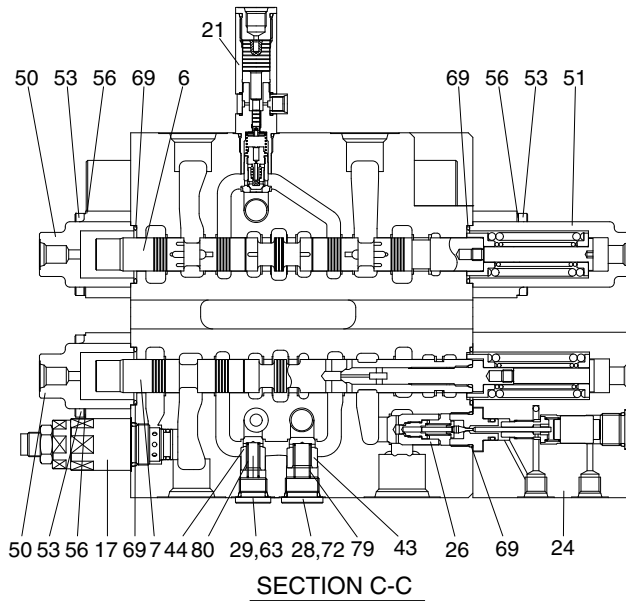

- 6 Swing spool assy
- 7 Boom 1 spool assy
- 17 Overload relief valve
- 21 Swing logic valve
- 24 Holding valve kit A1
- 26 Holding valve kit B
- 28 Plug
- 29 Plug
- 43 Poppet
- 44 Poppet
- 50 Pilot A cap
- 53 Socket bolt
- 56 Washer
- 63 O-ring
- 69 O-ring
- 72 O-ring
- 79 Spring
- 80 Spring

140A2MC06


6) SWING PRIORITY AND BOOM 2 AND ARM 2 SECTION

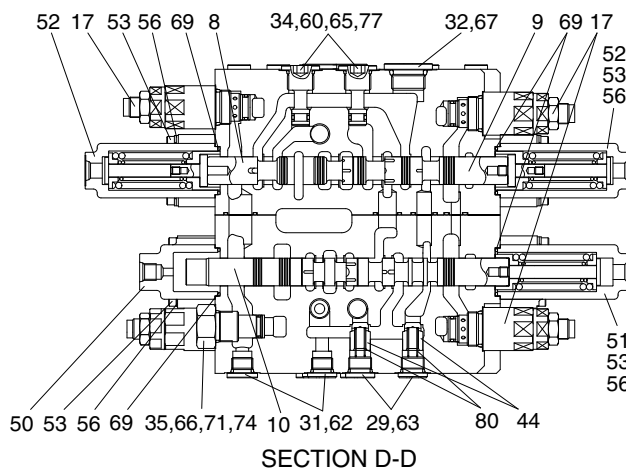

- 8 Swing priority spool assy
- 9 Boom 2 spool assy
- 10 Arm 2 spool assy
- 17 Overload relief valve
- 29 Plug
- 31 Plug
- 32 Plug
- 34 Plug
- 35 Plug
- 44 Poppet
- 50 Pilot A cap
- 51 Pilot B1 cap
- 52 Pilot B2 cap
- 53 Socket bolt
- 56 Washer
- 60 O-ring
- 61 O-ring
- 63 O-ring
- 65 O-ring
- 66 O-ring
- 69 O-ring
- 71 O-ring
- 74 Back up ring
- 77 Back up ring
- 80 Spring

140A2MC07


7) ARM 1 AND ARM REGEN/ BREAKER SECTION

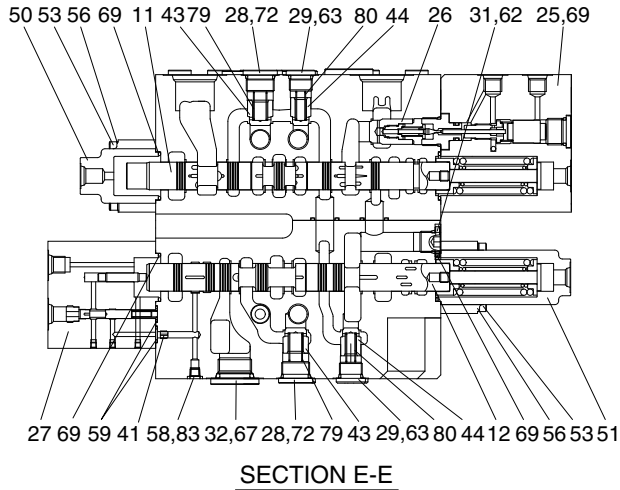

140A2MC08

- 11 Arm 1 spool assy
- 12 Arm regen spool assy
- 25 Holding valve kit A2
- 26 Holding valve kit B
- 27 Regen block assy
- 28 Plug
- 29 Plug
- 31 Plug
- 32 Plug
- 41 Plug
- 43 Poppet
- 44 Poppet
- 50 Pilot A cap
- 53 Socket bolt
- 56 Washer
- 58 O-ring
- 59 O-ring
- 62 O-ring
- 63 O-ring
- 67 O-ring
- 69 O-ring
- 72 O-ring
- 80 Spring
- 81 Spring
- 83 Plug


8) OPTION B AND BUCKET SECTION

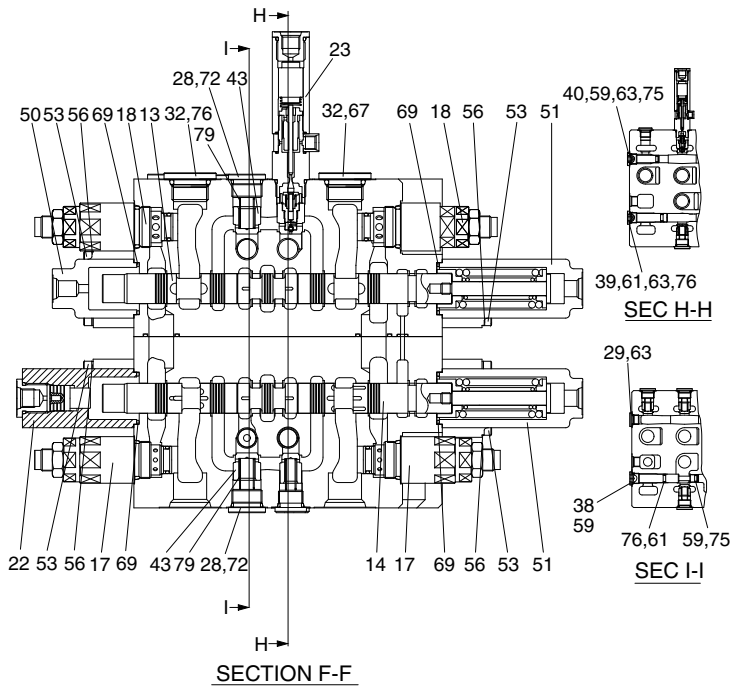

140A2MC09

- 13 Option B spool assy
- 14 Bucket spool assy
- 17 Overload relief valve
- 18 Overload relief valve
- 22 Bucket stroke limiter
- 23 Option ON/OFF valve
- 28 Plug
- 29 Plug
- 32 Plug
- 38 Plug
- 39 Plug
- 40 Plug
- 43 Poppet
- 50 Pilot A cap
- 51 Pilot B1 cap
- 53 Socket bolt
- 56 Washer
- 59 O-ring
- 61 O-ring
- 63 O-ring
- 67 O-ring
- 69 O-ring
- 72 O-ring
- 75 Back up ring
- 76 Back up ring
- 79 Spring


9) OPTION C AND NEGATIVE CONTROL SECTION

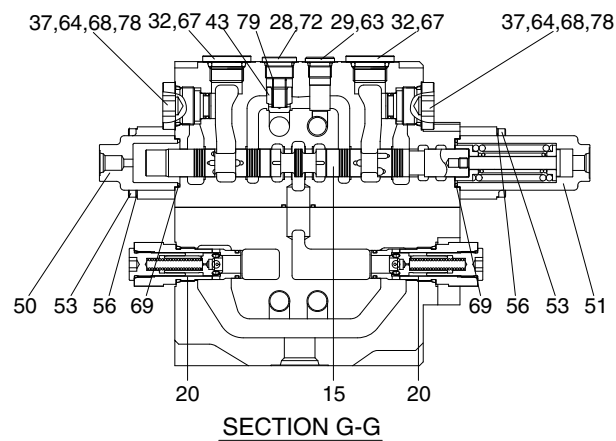

- 15 Option C1 spool assy
- 20 Negacon relief valve
- 28 Plug
- 29 Plug
- 32 Plug
- 37 Plug
- 43 Poppet
- 50 Pilot A cap
- 51 Pilot B1 cap
- 53 Socket bolt
- 56 Washer
- 63 O-ring
- 64 O-ring
- 67 O-ring
- 68 O-ring
- 69 O-ring
- 72 O-ring
- 78 Back up ring
- 79 Spring

140A2MC10

2. HYDRAULIC CIRCUIT

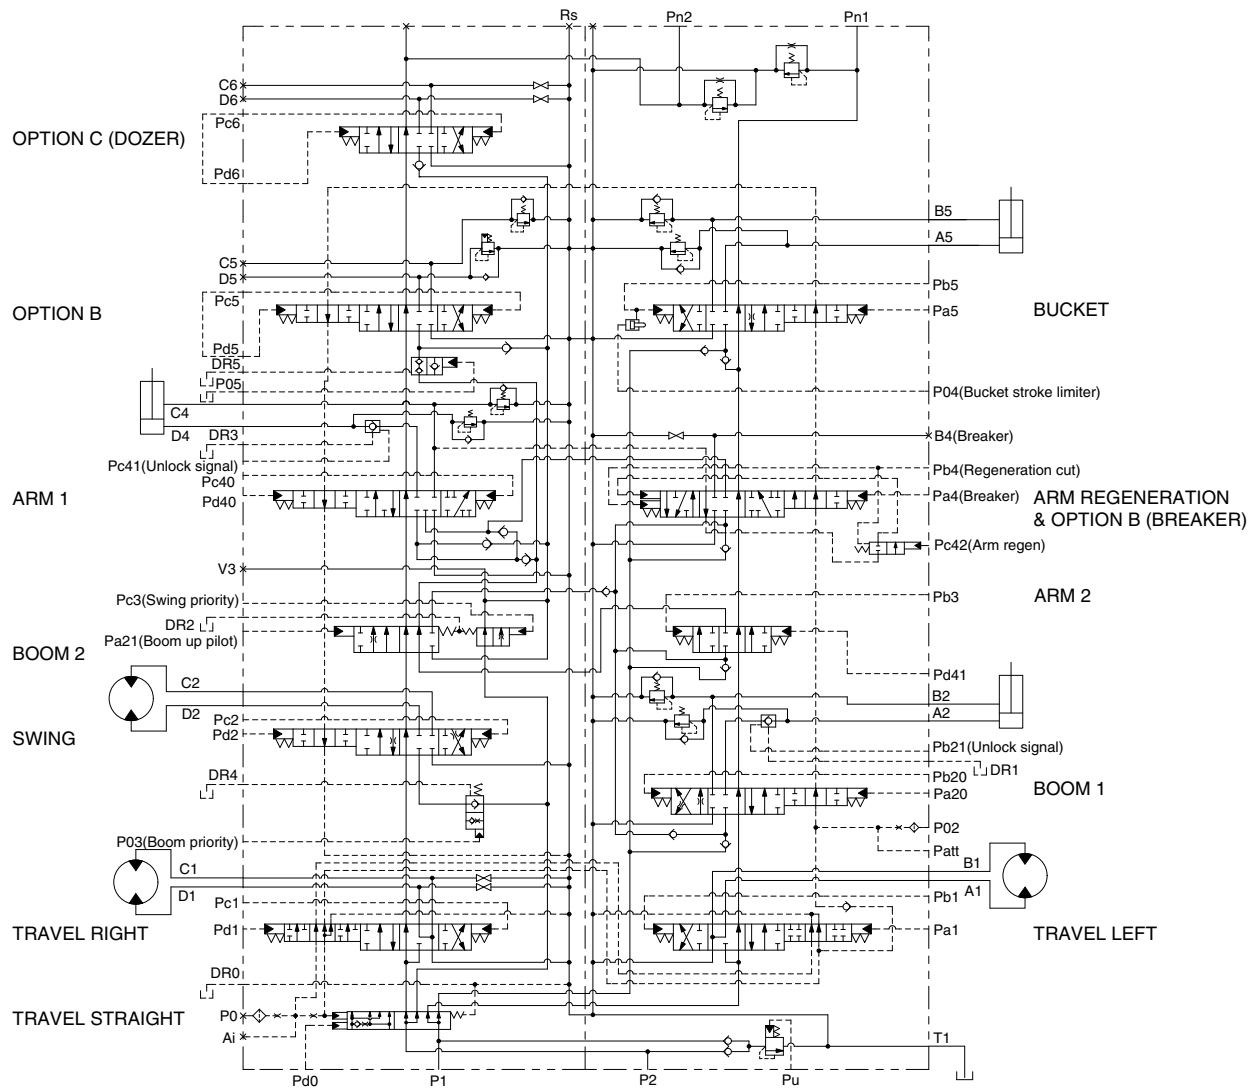

140A2MC11


3. FUNCTION

1) CONTROL IN NEUTRAL


(1) P1 SIDE

The hydraulic fluid from pump A2 flows into the main control valve through the inlet port "P1", pass the straight travel spool into the P1 bypass passage and P1 parallel passage.

The hydraulic fluid from the pump A2 is directed to the tank through the bypass passage of spools : travel left, boom 1, arm 2, arm regeneration & option A and bucket, the negative relief valve of P1, tank passage, and the tank port "T1"

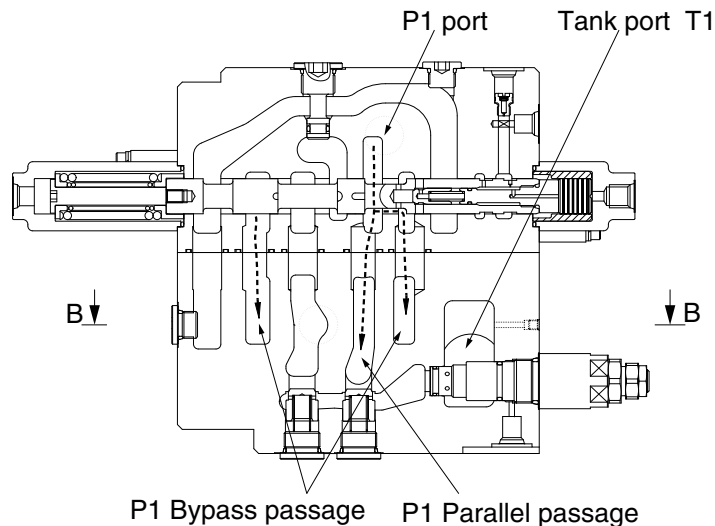

SECTION A-A

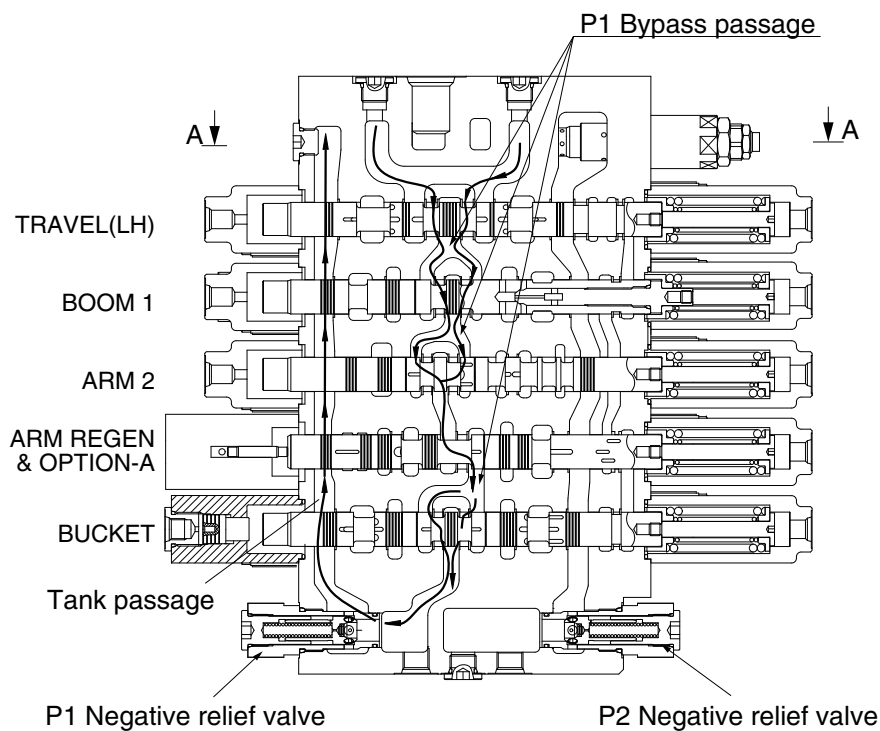


SECTION B-B

140A2MC12


(2) P2 SIDE

The hydraulic fluid from pump A1 flows into the main control valve through the inlet port "P2", into the P2 bypass passage and P2 parallel passage.

The hydraulic fluid from the pump A1 is directed to the tank through the bypass passage of spools : travel right, swing, boom 2 & swing priority, arm 1, option "B" and option "C" (dozer), the negative relief valve of P2, tank passage and the tank port "T1".

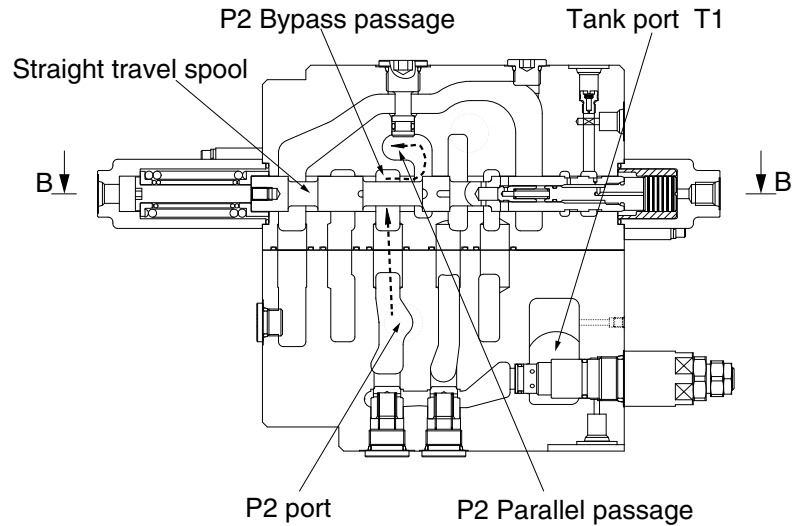

SECTION A-A

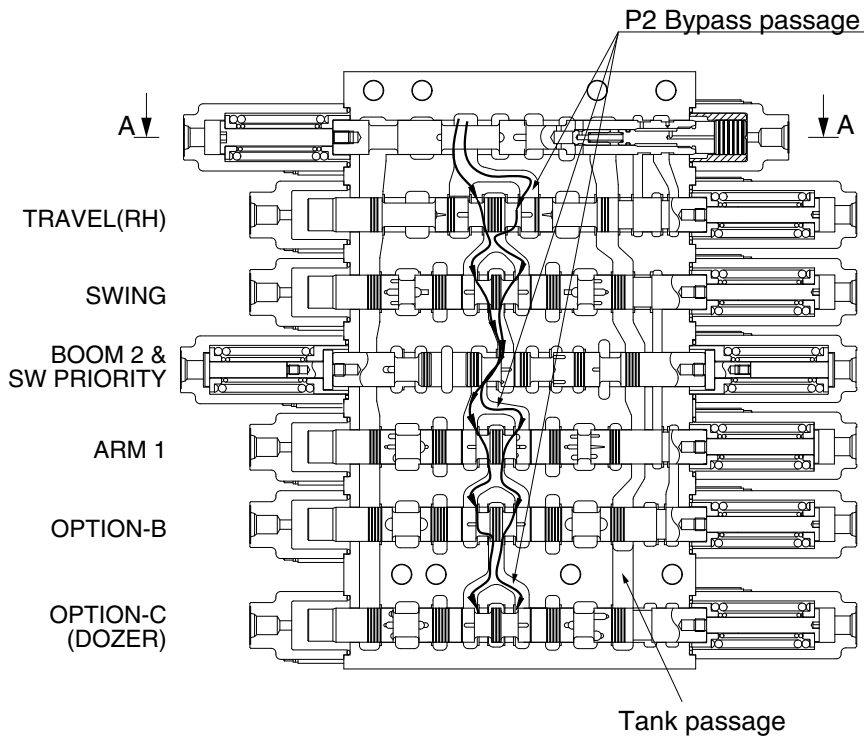


SECTION B-B

140A2MC13


2) TRAVEL OPERATION

(1) TRAVEL FORWARD OPERATION

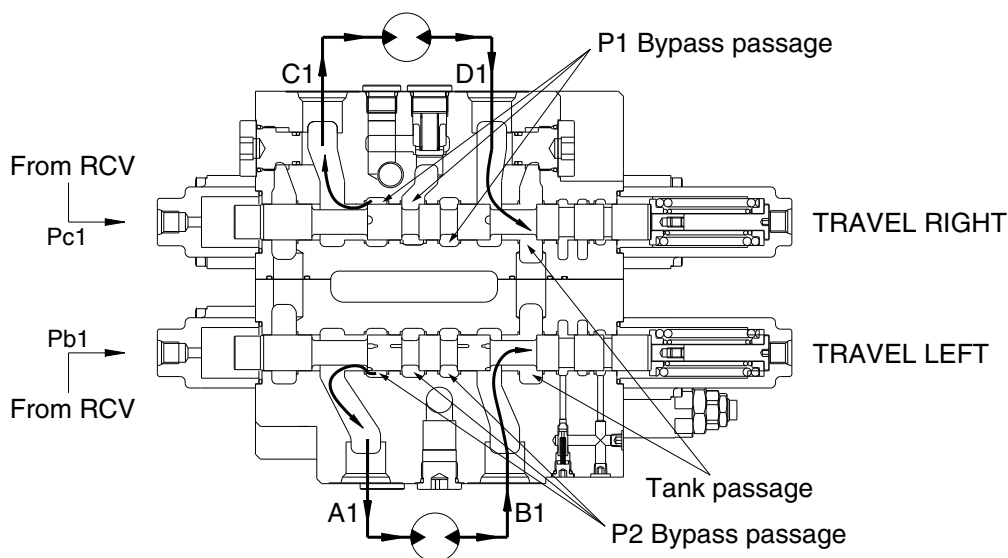

14092MC18

(2) TRAVEL BACKWARD OPERATION

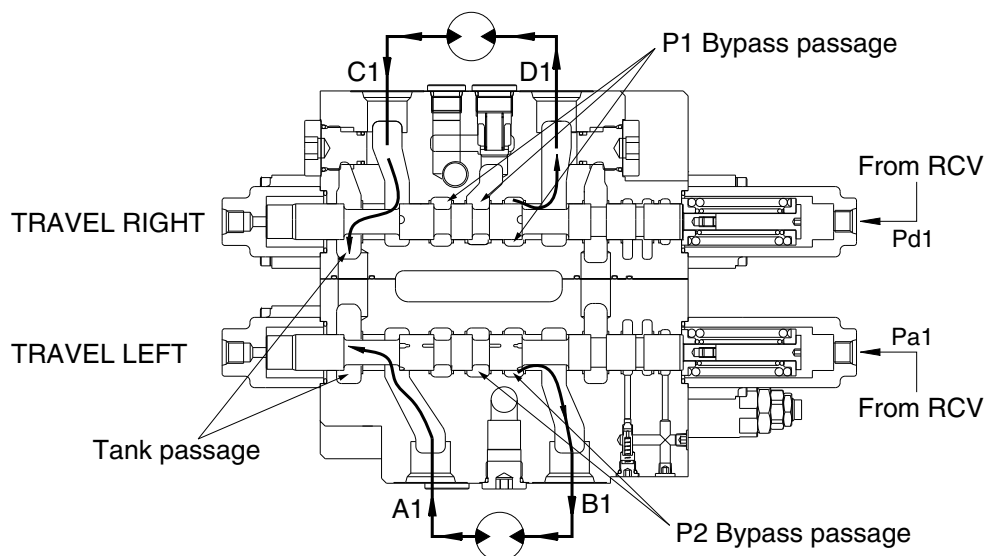

14092MC17

During the travel forward operation, the hydraulic fluid of the pump A2 is supplied to the travel left motor and the hydraulic fluid of the pump A1 is supplied to the other travel right motor.


The pilot pressure from the pilot control valve is supplied to the spring side of pilot port (pb1, pc1).

And it shifts travel right and left spools in the left direction against springs. Hydraulic fluid from the pump A1 flow into the travel right spool through the bypass passage and hydraulic fluid from the pump A2 flow into the travel left spool through the bypass passage.

Then they are directed to the each travel motor through port A1 and C1. As a result, the travel motors turn and hydraulic fluid returns to the tank passage through the travel spools.

In case of the reverse operation, the operation is similar.

(3) TRAVEL STRAIGHT FUNCTION

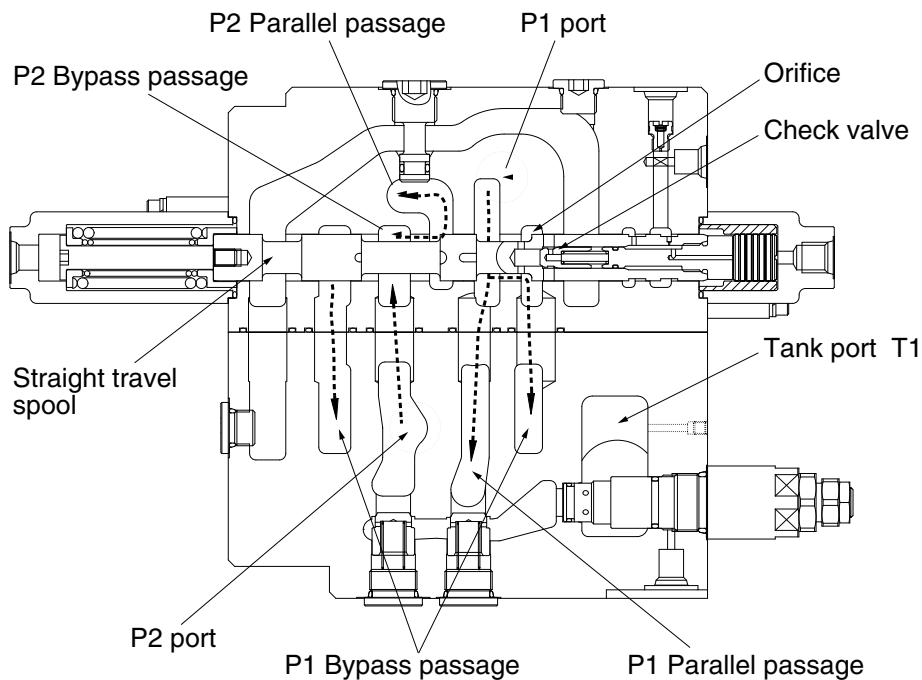

140A2MC14

This function keeps straight travel in case of simultaneous operation of other actuators (boom, arm, bucket, swing) during a straight travel.

① During travel only :

The hydraulic fluid of the pump A1 is supplied to the travel right motor and the pump A2 is supplied to the travel left motor.

Thus, the machine keep travel straight.

② The other actuator operation during straight travel operation :

When the other actuator spool (s) is selected under straight travel operation, the straight travel spool is moved.

The hydraulic fluid from pump A2 is supplied actuator through P2 and P1 parallel pass and travel motors through orifice at side of straight travel spool.

The hydraulic oil fluid from pump A1 is supplied to travel motors (left/right).

Therefore, the other actuator operation with straight travel operation, hydraulic oil fluid from pump A2 is mainly supplied to actuator, and the hydraulic oil fluid form pump A1 is mainly supplied to travel motors (left/right).

Then the machine keeps straight travel.


3) BOOM OPERATION

(1) BOOM UP OPERATION

During boom up operation, the pilot secondary pressure from RCV is supplied to the port Pa20 of the spring side and shifts the boom 1 spool in the left direction. The bypass passage is shut off by the movement of the boom 1 spool and the hydraulic oil fluid from pump A2 is entered P1 parallel passage and then passes through the load check, bridge passage and boom holding valve then flows into the port A2. Following this it flows into the head side of the boom cylinder. (In this case, the boom holding valve is free flow condition)

At the same time, the pilot pressure from RCV is supplied to the port Pa21 of the spring side of boom 2 and shifts the boom 2 spool. The bypass passage is shut off by the movement of the boom 2 spool and the hydraulic oil fluid from pump A1 entered boom summation passage via the P2 parallel passage, the land of the swing priority spool, notch of the boom 2 spool, arm 2 spool and the check. The flows combine in passage and are directed to port A2 and head side of boom cylinder.

At the same time, the flow from rod side of the boom cylinder return to the boom 1 spool through the port B2. Thereafter it is directed to the hydraulic oil tank through the tank passage.

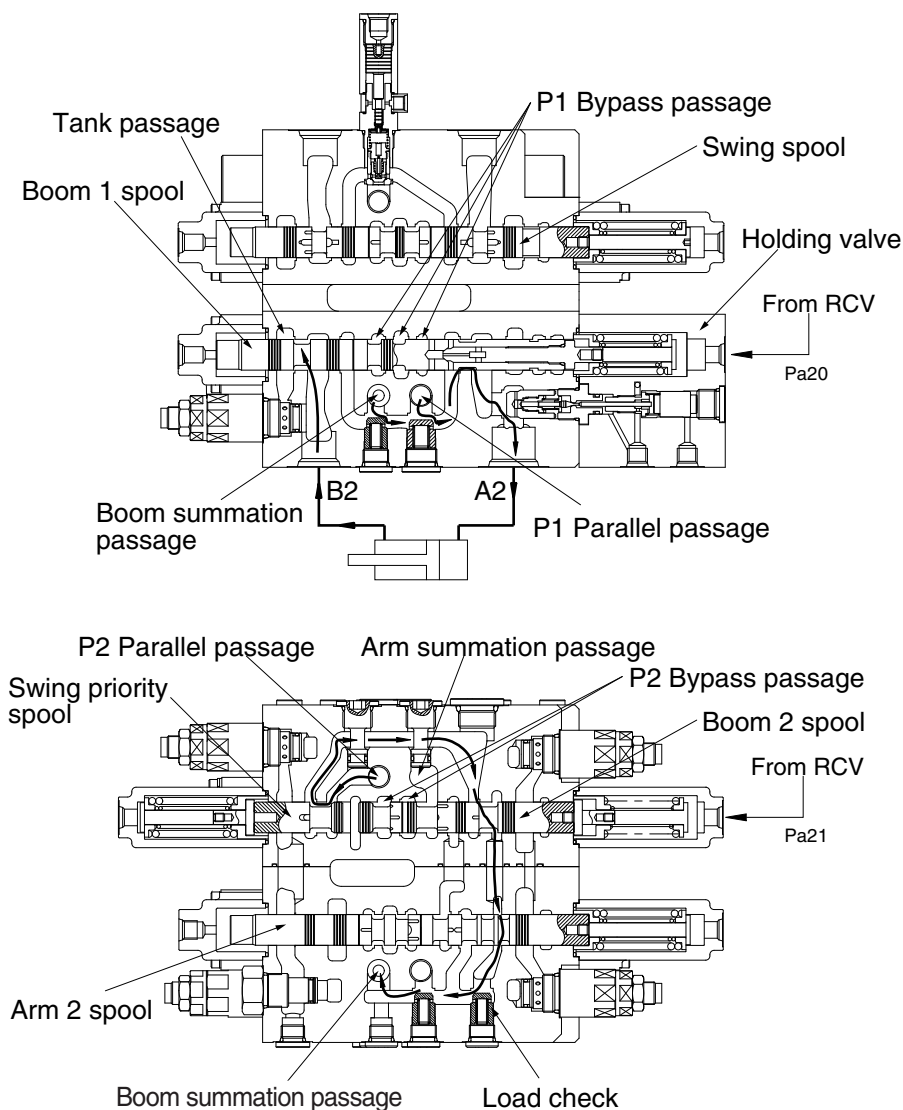

140A2MC15

(2) BOOM DOWN OPERATION

During the boom lowering operation, the pilot pressure from RCV is supplied to the port Pb20 of the spring opposite side and shifts the boom 1 spool in the right direction.

The bypass passage is shut off by the movement of the boom 1 spool and the hydraulic fluid from the pump A2 enters the parallel passage and is directed to the port B2 through the load check.


Following this, it flows into the rod side of the boom cylinder.

At the same time, the return flow from the head side of the boom cylinder returns to the port A2 and boom holding valve. And it is directed to the hydraulic oil tank through opened tank passage by movement of the boom 1 spool.

Meanwhile some of return flow is directed to P1 parallel passage through the internal passage of the boom 1 spool. (boom regeneration)

In this case, the holding valve is open condition, for details of the boom holding valve, see page following page.

During the boom lowering operation, the fluid from A1 pump is not summation.

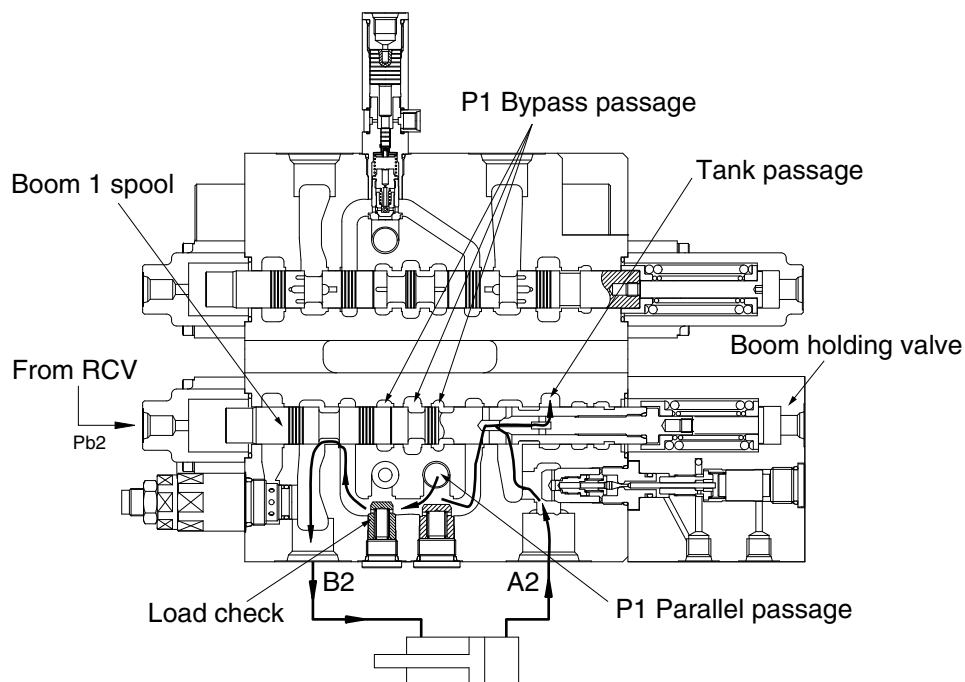

140A2MC16

4) HOLDING VALVE OPERATION

(1) HOLDING OPERATION


At neutral condition, the pilot piston chamber is connected to drain port through the pilot port.

And the piston "B" is supported with spring "B".

Also, the pressured fluid from actuator entered to inside of the holding valve through the periphery hole of check, crevice of the check and the plug and the periphery hole of plug.

Then, this pressured oil pushed the poppet to the poppet seat and the check to the seat of body.

So the hydraulic fluid from actuator is not escaped and the actuator is not moved.

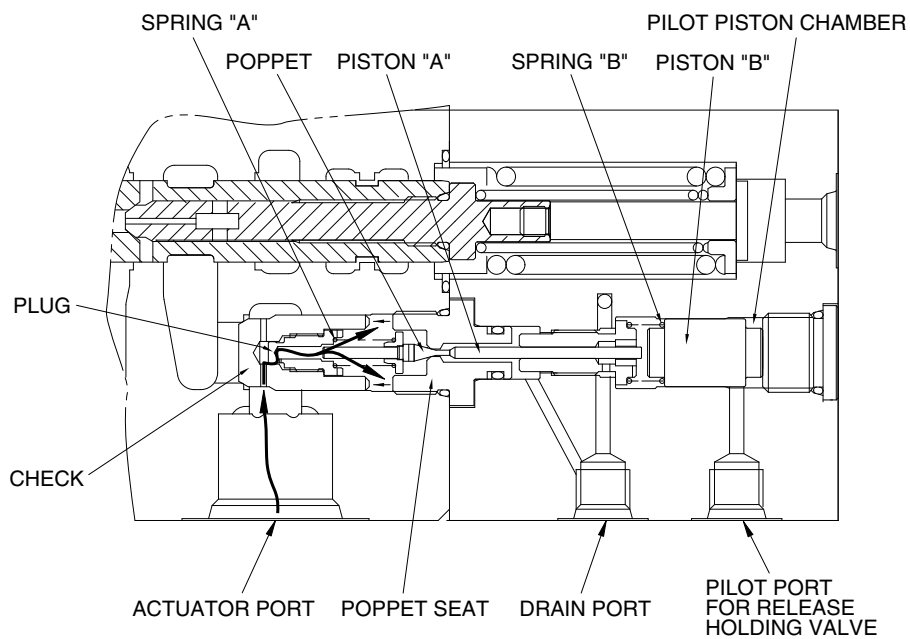


140A2MC17

(2) RELEASE HOLDING OPERATION

The pilot pressure is supplied to the pilot port for release holding valve and shifts the piston "B" in the left direction against the spring "B", and shifts the poppet in the left direction through piston "B" and piston "A" against spring "B" and shifts the spool in the left side.

At same time, the return fluid from actuator returns to the drain port through the periphery hole of check, crevice of the check and the plug, the periphery hole of the plug, in side of holding valve, crevice of the poppet and the poppet seat, the periphery hole of the poppet seat, crevice of socket and spool and internal passage of spool.

When the poppet is opened, pressure of inside of holding valve is decreased and the return fluid from actuator returns to the tank passage through the notch of spool.

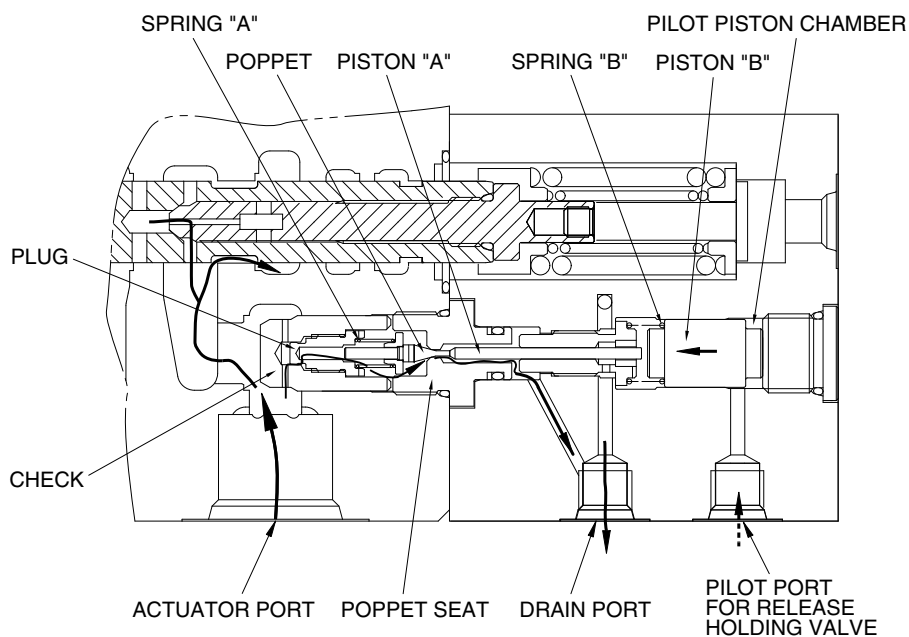

140A2MC18

5) BUCKET OPERATION

(1) BUCKET IN OPERATION


During the bucket in operation, the pilot secondary pressure from RCV is supplied to port Pa5 of the spring side and shifts the bucket spool in the left direction.

The bypass passage is shut off by the movement of the bucket spool and the hydraulic fluid from pump A2 entered P1 parallel passage and is directed to the port A5 through the check 1.

At the same time, the hydraulic fluid from P1 bypass passage is directed to the port A5 through the check 2.

Following this it flows into the head side of the bucket cylinder.

The return flow from the rod side of the bucket cylinder returns to the bucket spool through the port B5. Thereafter it is directed to the hydraulic oil tank through the tank passage.

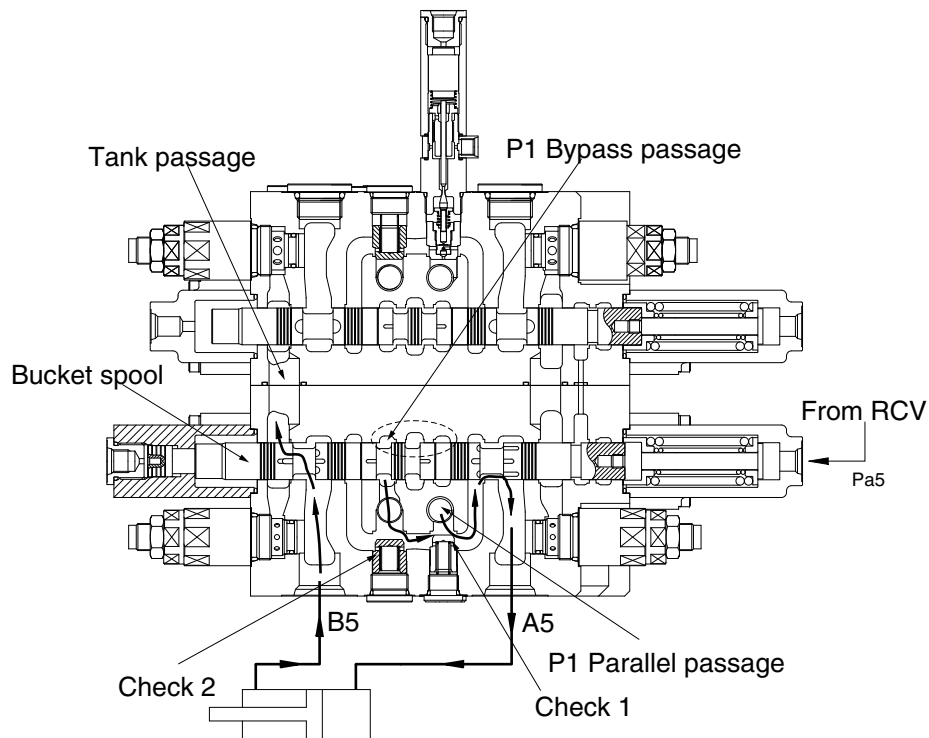

140L2MC134


(2) BUCKET OUT OPERATION

During the bucket out operation, the pilot secondary pressure from RCV is supplied to port Pb5 of the spring opposite side and shifts the bucket spool in the right direction.

The bypass passage is shut off by the movement of the bucket spool and the hydraulic fluid from pump A2 entered P1 parallel passage and is directed to the port B5 through the check 1.

At the same time, the hydraulic fluid from P1 bypass passage is directed to the port B5 through the check 2.

The return flow from the head side of the bucket cylinder returns to the hydraulic oil tank through the port A5 and the tank passage

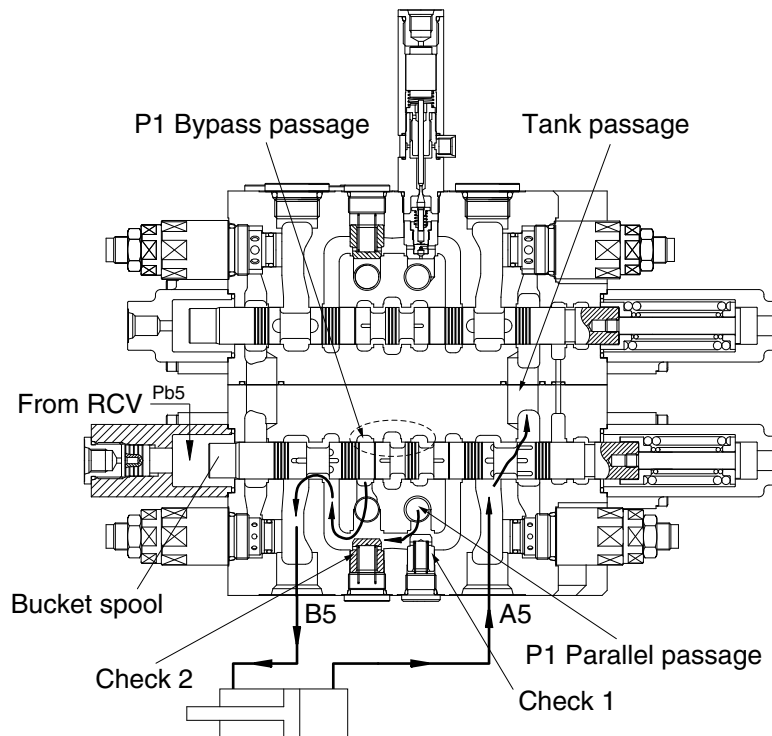


140L2MC135

(3) BUCKET IN OPERATION WITH BOOM OPERATION

When combined operation, mostly same as previous page but the fluid from P1 bypass passage is empty.

When the boom up and bucket in combined operation, the boom up pilot pressure is supplied the pilot port (P04) of bucket spool stroke limit and the piston is shifted to the right and then the bucket in spool stroke is limited and the open of the bucket in spool is reduced.

Accordingly, the oil of the bucket in spool is reduced and the boom speed up

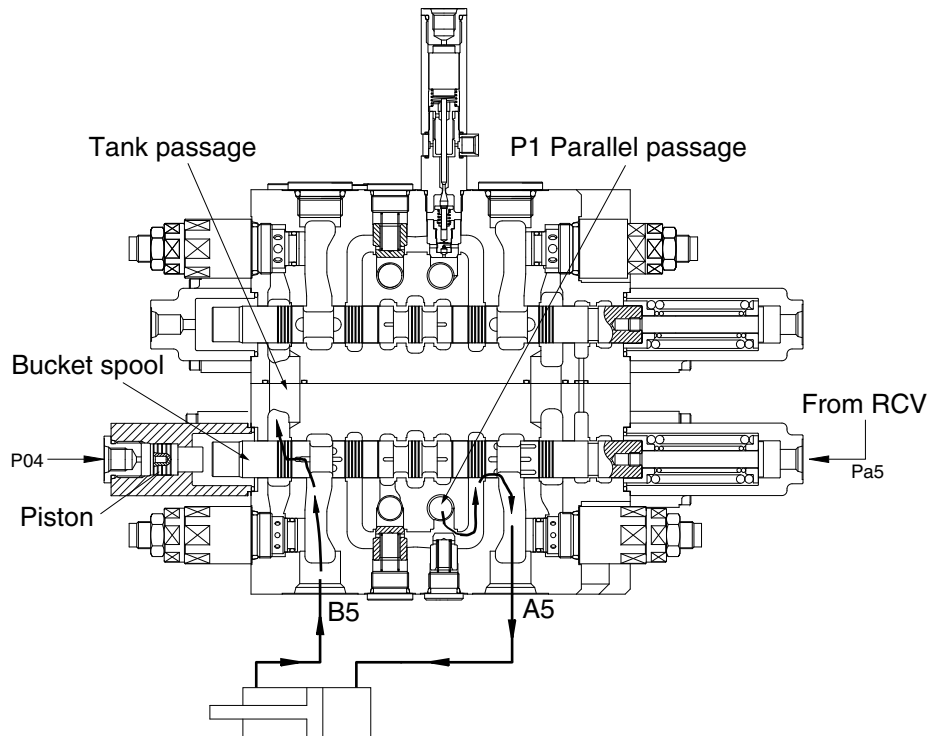

140L2MC129

6) SWING OPERATION


(1) SWING LEFT & RIGHT OPERATION

During the swing left operation, the pilot secondary pressure from the RCV is supplied to the port Pd2 of the spring side and shift the swing spool in left direction. The bypass passage is shut off by the movement of the swing spool and the hydraulic fluid from pump A1 flows into swing spool through the P2 parallel passage. Then it is directed to swing motor through the port D2.

As the result, swing motor turns and flow from the swing motor returns to the hydraulic oil tank through the port C2, swing spool and the tank passage.

In case of swing right operation, the operation is similar to swing left operation but the pilot secondary pressure from the RCV is supplied to the port Pc2 of the spring opposite side.

Accordingly, the hydraulic fluid from pump A1 flows into swing motor through the port C2 and returns to the hydraulic oil tank through the port D2 and the tank passage.

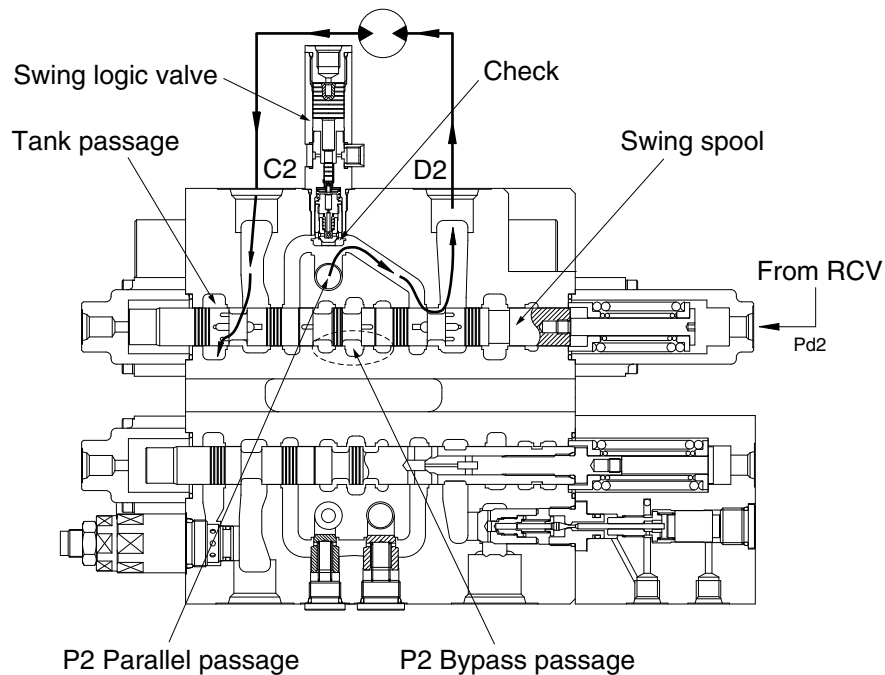


140A2MC19

(2) SWING LEFT OPERATION WITH ARM OR BOOM OPERATION

When combined operation, mostly same as previous page but the fluid from P2 bypass passage is empty.

So only the fluid from parallel passage is supplied to the swing motor. Also, parallel passage is installed the orifice of swing logic valve for supplying the fluid from pump A1 to the boom or the arm operation prior to the swing operation. In case of the swing right operation with arm or boom operation, operation is similar.

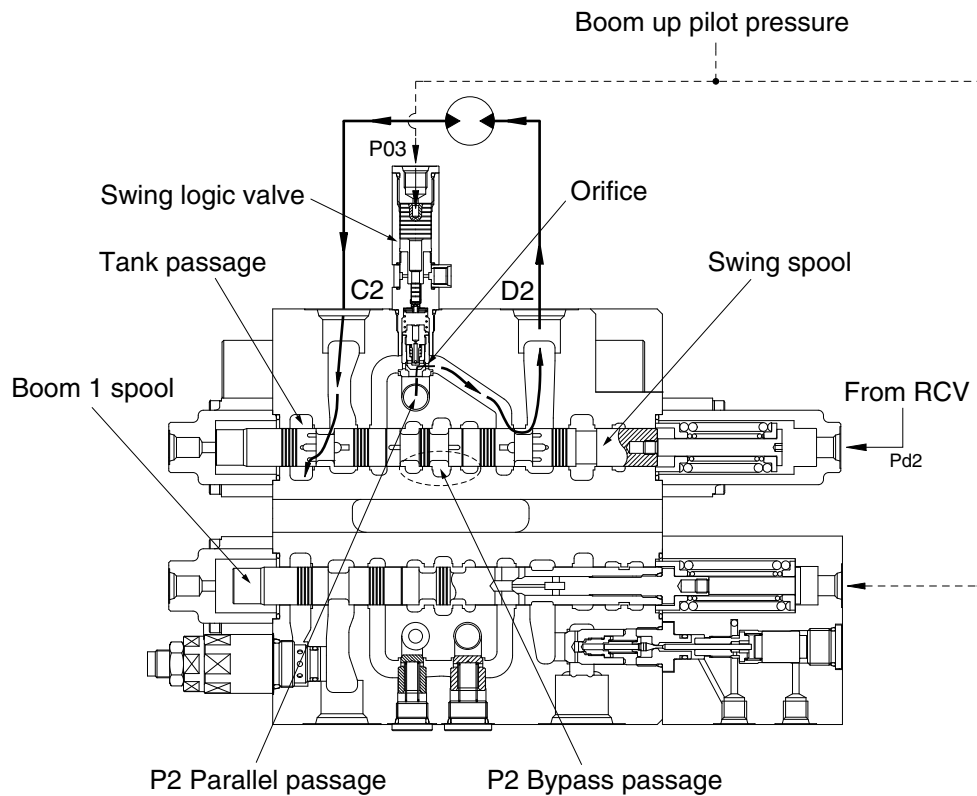

140A2MC20



7) ARM OPERATION

(1) ARM IN OPERATION

During arm in operation, the pilot secondary pressure from the RCV is supplied to the port Pc40 of spring opposite side and shifts arm 1 spool in the right direction.

The bypass passage is shut off by the movement of the arm 1 spool and the hydraulic oil from the pump A1 flows into the arm cylinder head side through P2 parallel passage, the load check valve, bridge passage and the port C4.

At same time, the pilot secondary pressure from the RCV is supplied to the port Pb3 of spring opposite side and shifts arm 2 spool in the right direction. The bypass passage is shut off by the movement of the arm 2 spool and the hydraulic fluid from the pump A2 flows into the arm summation passage through P1 parallel passage, the check valve, the arm 2 spool and the boom 2 spool. Then it entered the arm cylinder head side with hydraulic fluid from arm 1 spool.

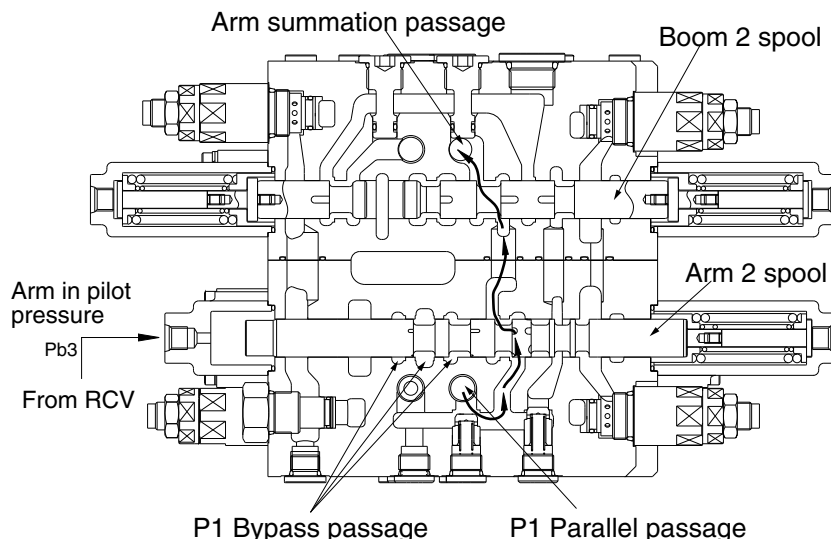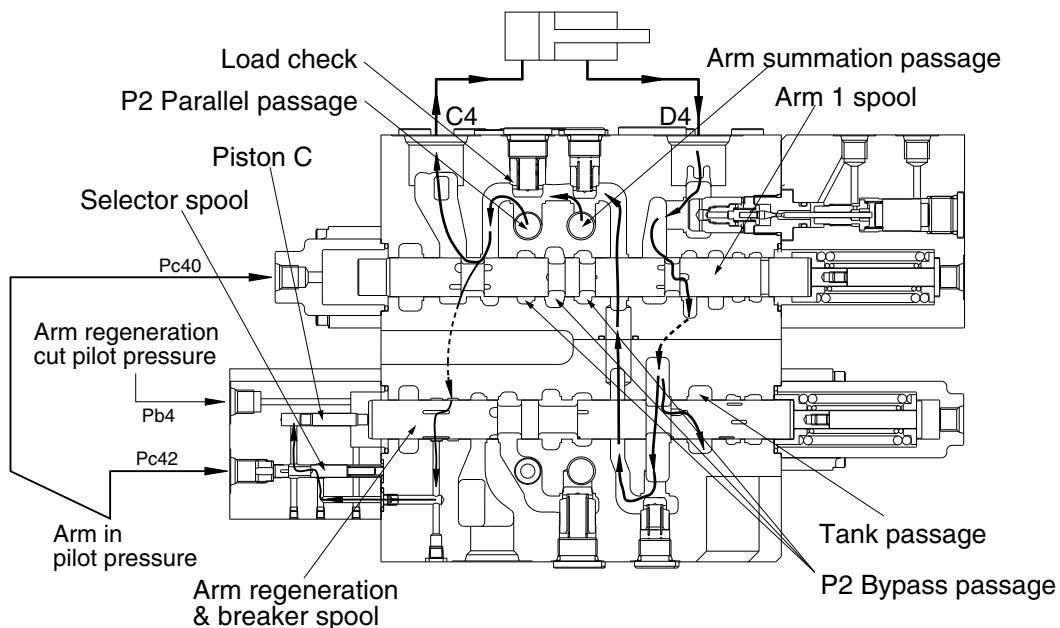

140A2MC21


ARM REGENERATION

The return flow from the arm cylinder rod side is pressurized by self weight of arm and so, returns to port D4. The pressurized oil returning to port D4 enters the arm regeneration & breaker spool through the arm holding valve and the arm 1 spool. It is supplied the arm cylinder head through internal passage. This is called the arm regeneration function.

The amount of regeneration fluid is changed by movement of the arm regeneration spool. A few fluids after P2 parallel passage is push piston "C" through the notch of arm regeneration spool and selector spool. At this time, the selector spool is opened by pilot pressure from RCV.

Then, the arm regeneration spool shifts to right side and flow to tank pass increases and regeneration flow decreases. Therefore, pressure of arm cylinder head increases, then, arm regeneration flow decreases.

Furthermore, the arm regeneration cut pressure is supplied to the port Pb4 of spring opposite side and arm regeneration spool is move into the right direction fully. The flow from the arm cylinder rod is returned to the hydraulic oil tank and regeneration function is not activated. (The return fluid is maximum condition)

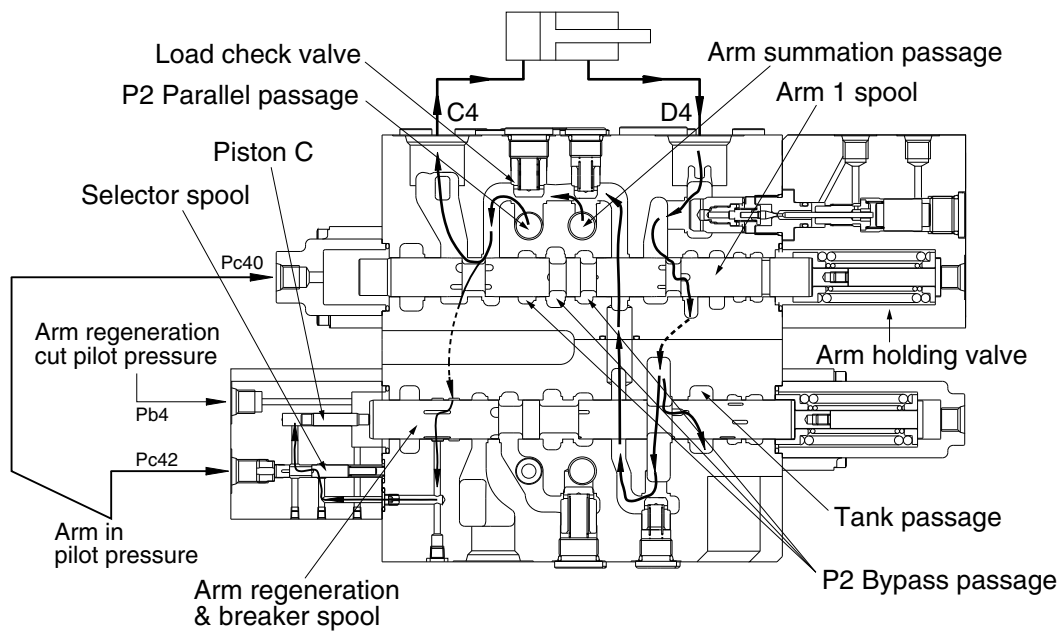

140A2MC22

(2) ARM OUT OPERATION

During arm out operation, the pilot secondary pressure from RCV is supplied to the port Pd40 of spring side and shifts arm 1 spool in the left direction.



The bypass passage is shut off by the movement of the arm 1 spool and the hydraulic fluid from pump A1 flows into arm 1 spool through the P2 parallel passage. Then it enters into the arm cylinder rod side through the load check, bridge passage, arm holding valve and the port D4.

Also, the pilot secondary pressure from RCV is supplied to the port Pd41 of spring side and shifts arm 2 spool in the left direction.

The bypass passage is shut off by the movement of the arm 2 spool and some of the hydraulic fluid from pump A2 bypassed through bypass notch. The rest of hydraulic fluid from pump A2 flows into the arm summation passage through P1 parallel passage, the check valve, arm 2 spool and boom 2 spool.

Then it enters into the arm cylinder rod side with the fluid from the arm 1 spool.

The return flow from the arm cylinder head side returns to the hydraulic tank through the port C4, the arm 1 spool and tank passage.

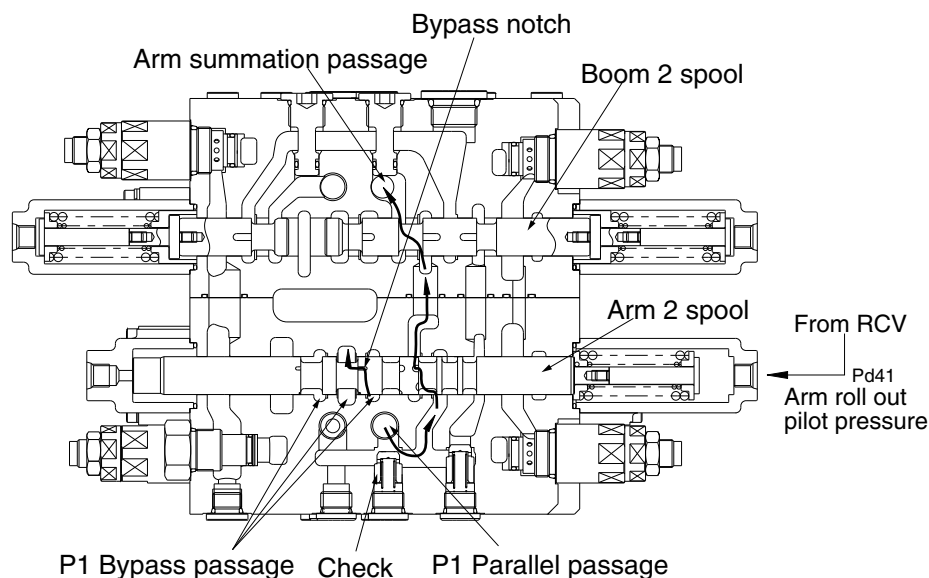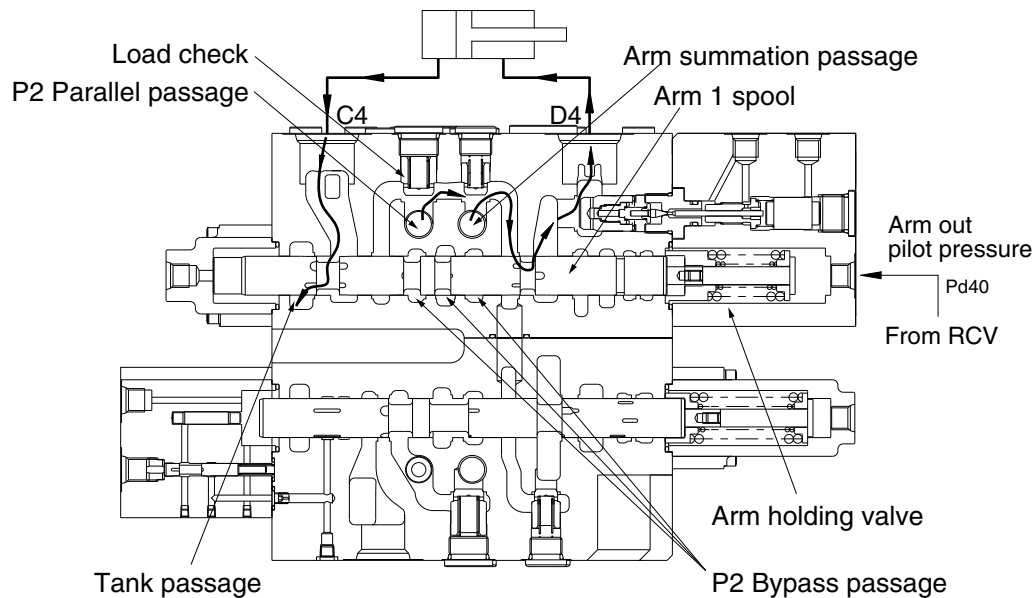


140A2MC23

8) SWING PRIORITY FUNCTION

During swing priority operation, the pilot secondary pressure is supplied to the port Pc3 of the spring side of the swing priority spool and shift swing priority spool in the right direction.

The hydraulic fluid from P2 parallel passage flows into the parallel passage of arm 1 side through swing priority spool and the path "A" and also flows into the boom 2 spool.


When the swing priority spool is neutral condition, the passage is same as normal condition. But due to shifting of the swing priority spool, the fluid from pump A1 flows to swing side more then the boom 2, arm 1, option B and dozer spools to make the swing operation most preferential.

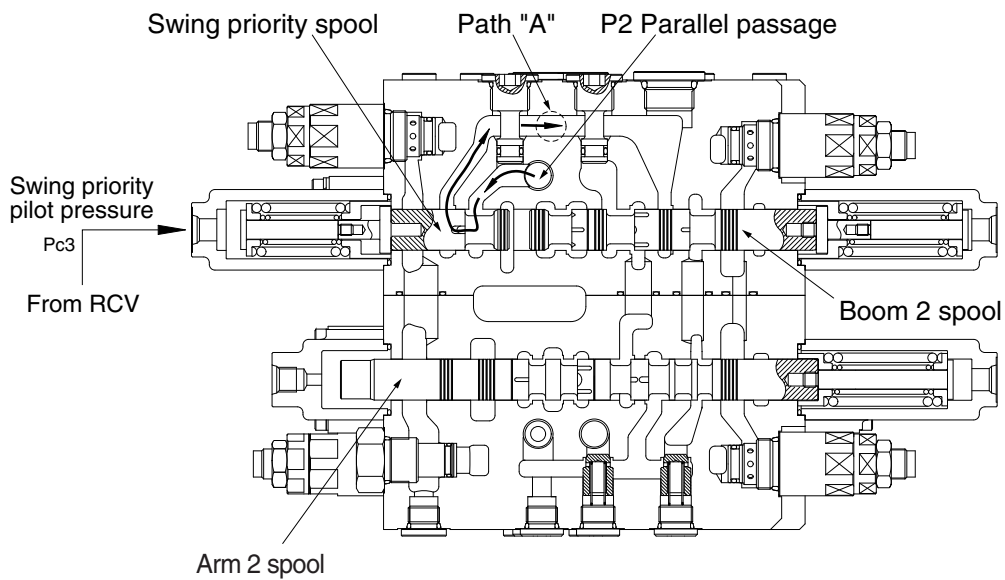

140L2MC27


9) DOZER OPERATION

(1) Dozer down operation

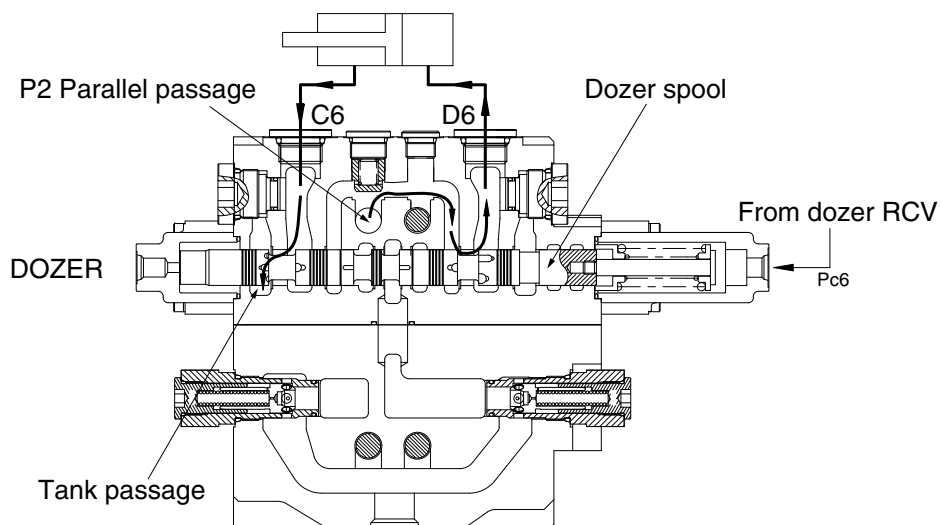

14W92MC30

(2) Dozer up operation

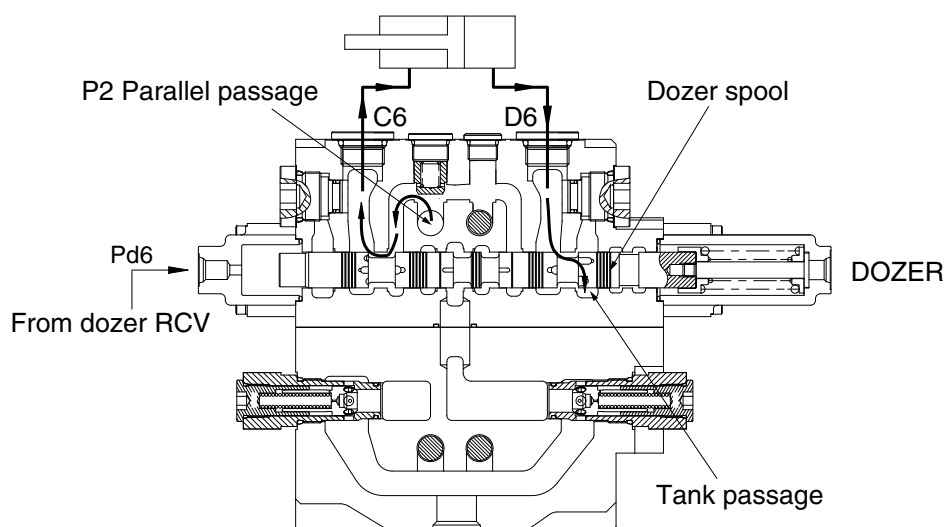

14W92MC31

During the dozer down operation, the pilot pressure from the dozer control valve is supplied into the port Pc6 of the spring side and it shifts the dozer spool in the left direction.

The hydraulic fluid from the pump A1 enters the parallel passage and is direction to the head side of the dozer cylinder through port D6.

The return flow from the rod side of the dozer cylinder returns to the dozer spool through C6 port. Thereafter it is directed to the hydraulic tank through tank passage.

In case of the dozer up operation, operation is similar.

10) NEGATIVE RELIEF VALVE OPERATION


When no function is being actuated on P1 side, the hydraulic fluid from the pump A2, flows into the tank passage through the P1 bypass passage and orifice. The restriction caused by this orifice thereby pressurizes. This pressure is transferred as the negative control signal pressure Pn1 to the pump A2 regulator.

It controls the pump regulator so as to minimize the discharge of the pump A2.

The bypass passage is shut off when the shifting of one or more spools and the flow through bypass passage became zero. The pressure of negative control signal becomes zero and the discharge of the pump A2 becomes maximum.

The negative control pressure reaches to the set level, the hydraulic fluid in the passage pushes open negative control valve and escapes into the return passage.


For the pump A1 the same negative control principle.

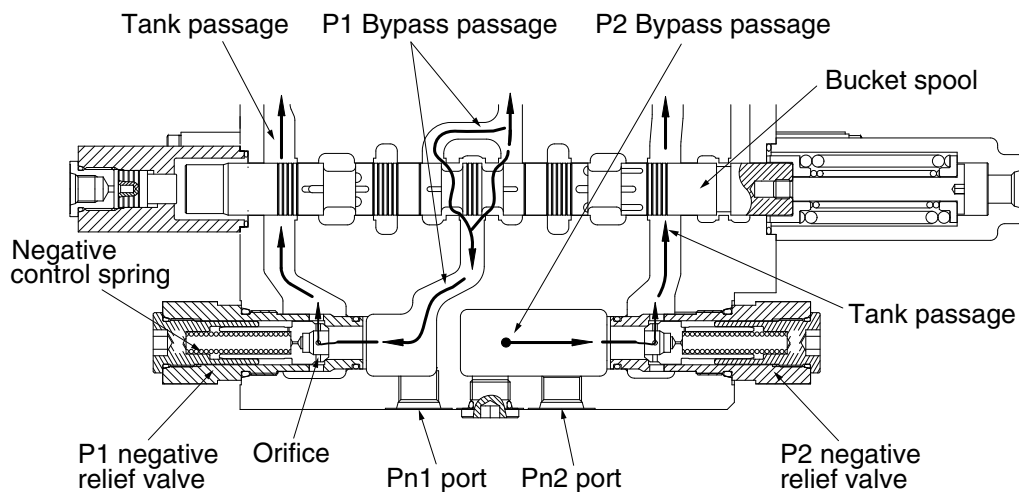

140L2MC128


11) OPERATION OF MAIN RELIEF VALVE

- (1) The pressurized oil passes through the orifice (A) of the plunger is filled up in chamber A of the inside space, and seats the plunger against the housing securely.

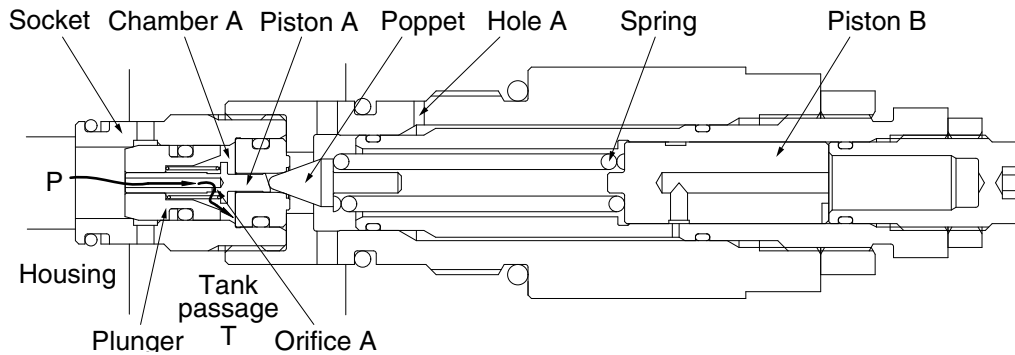


14W92MC36

- (2) When the pressure at (P) becomes equal to the set pressure of the spring the hydraulic oil passes through the piston (A) pushes open the poppet and flows to tank passage (T) through the plunger internal passage, periphery orifice A, chamber A, periphery orifice B and the hole (E).

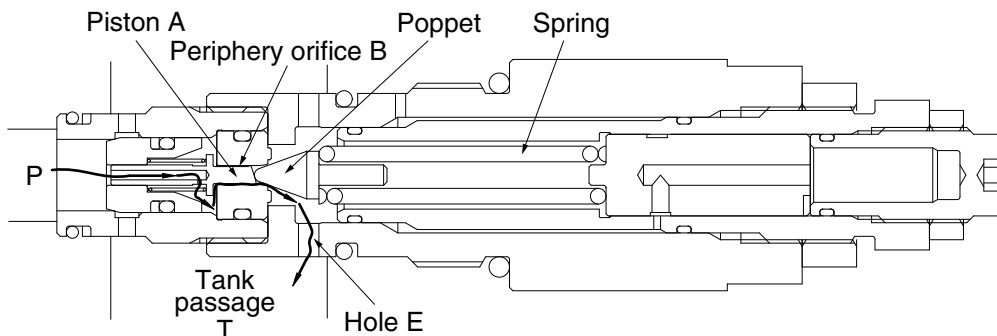


14W92MC37

- (3) Opening the poppet causes the pressure in chamber A to fall and the plunger to open. As the result the pressurized oil at port P runs into tank passage (T).

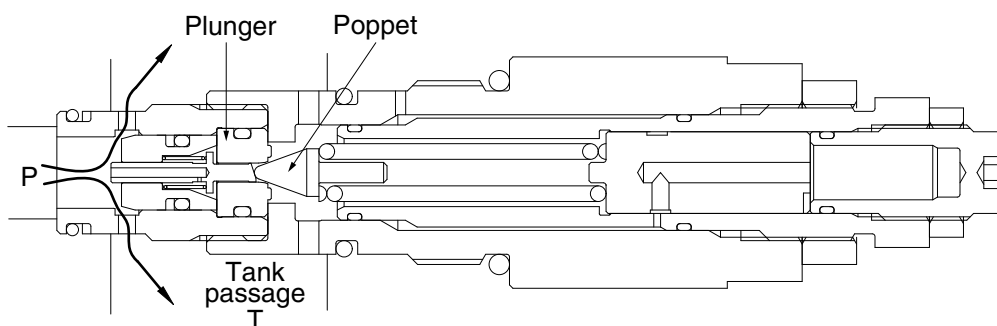


14W92MC38

- (4) The pressure at port P becomes lower than set pressure of the spring, the poppet is seated by spring force. Then the pressure at port P becomes equal to set pressure of the spring and the plunger is seated to the socket.

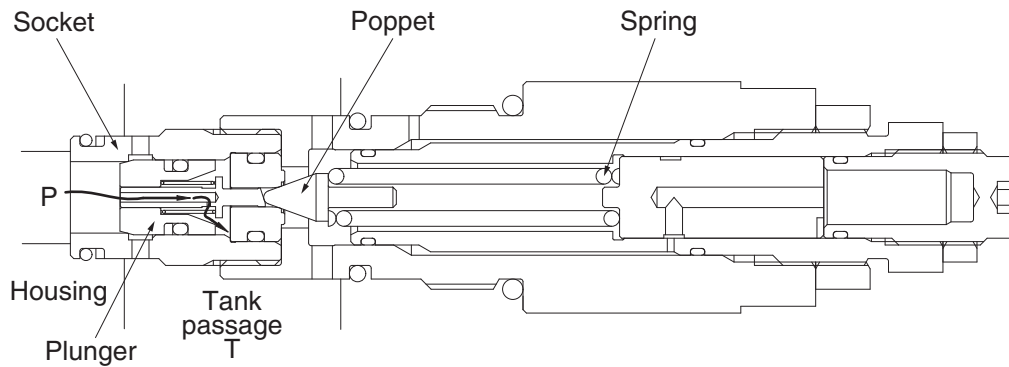

14W92MC39

- (5) When the power boost switch is ON, the pilot pressure enters through hole A. It pushes the piston (B) in the left direction to increase the force of the spring and change the relief set pressure to the high pressure.

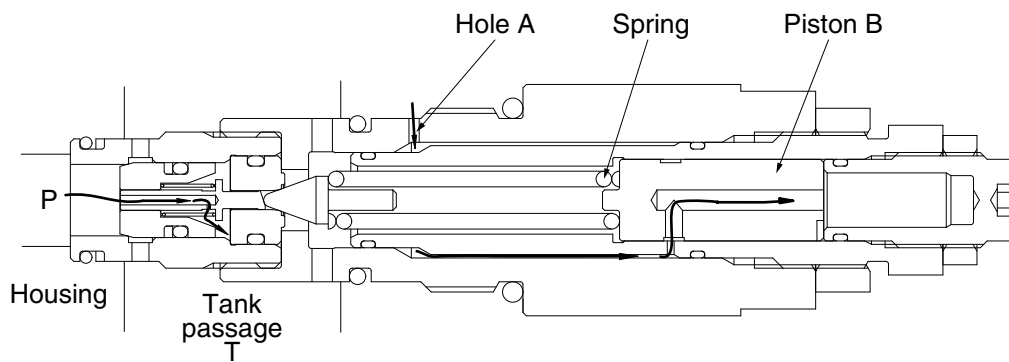


14W92MC40

12) OPERATION OF OVERLOAD RELIEF VALVE


FUNCTION AS RELIEF VALVE

- (1) The pressurized oil passes through the piston A and orifice A is filled in chamber A of the inside space and seat the plunger against the socket and the socket against the housing securely.

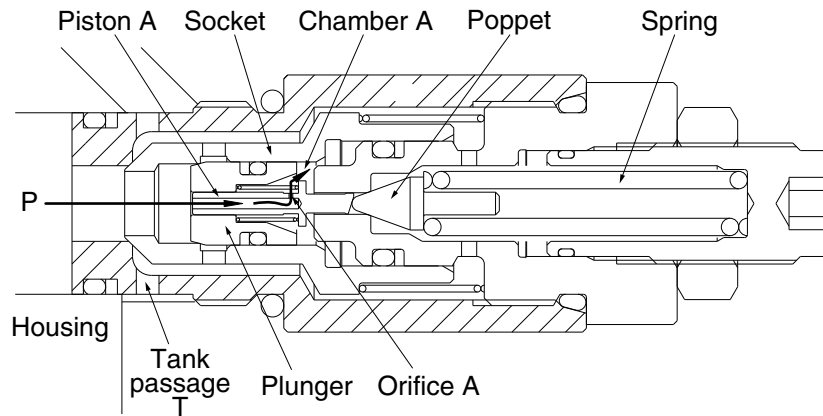


14W92MC41

- (2) When the pressure at port P becomes equal to the set pressure of the spring, the pressurized oil pushes open the poppet and flows to tank passage (T) through the plunger internal passage, orifice A, chamber A, periphery orifice B and hole E.

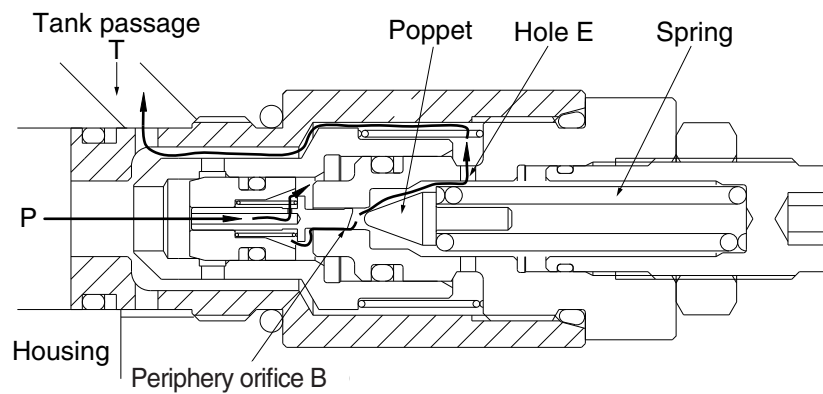


14W92MC42

- (3) Opening of the poppet causes the pressure in chamber A to fall and the plunger to open. As the result the pressurized oil at port P runs into tank passage (T).

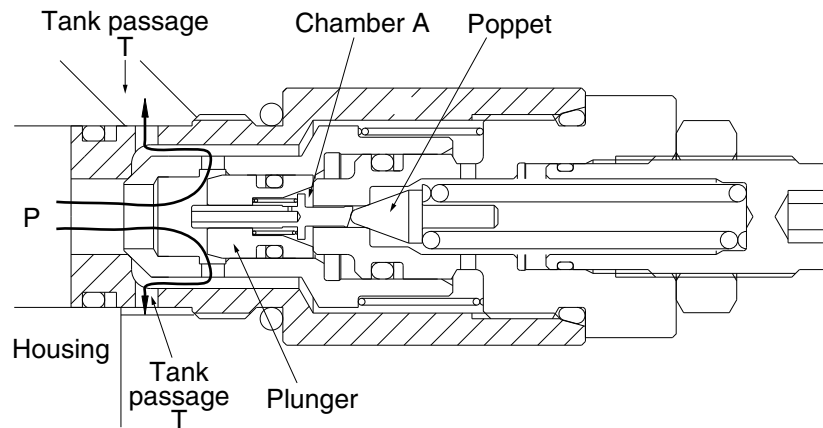

14W92MC43


- (4) The pressure at port P becomes lower than set pressure of the spring, the poppet is seated by spring force. Then the pressure at port P becomes equal to set pressure of the spring and the plunger is seated to the socket.

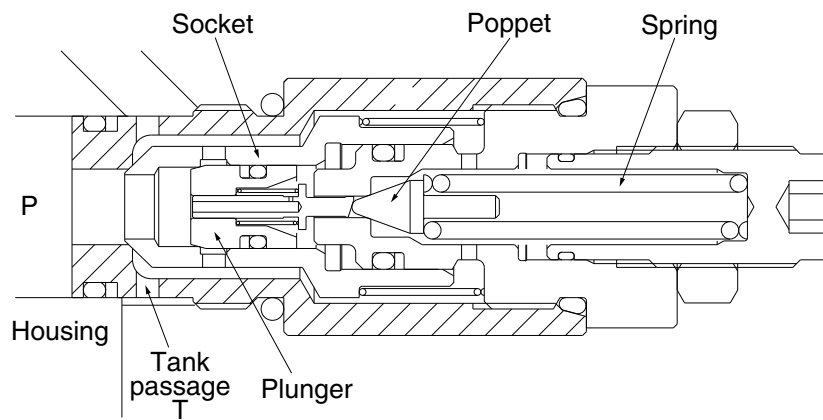

14W92MC44

MAKE-UP FUNCTION

- (5) When negative pressure exists at port P, the oil is supplied through tank passage (T). When the pressure at tank passage (T) becomes higher than that of at port P, the socket moves in the right direction. Then, sufficient oil passes around the socket from tank passage (T) to port P and fills up the space.

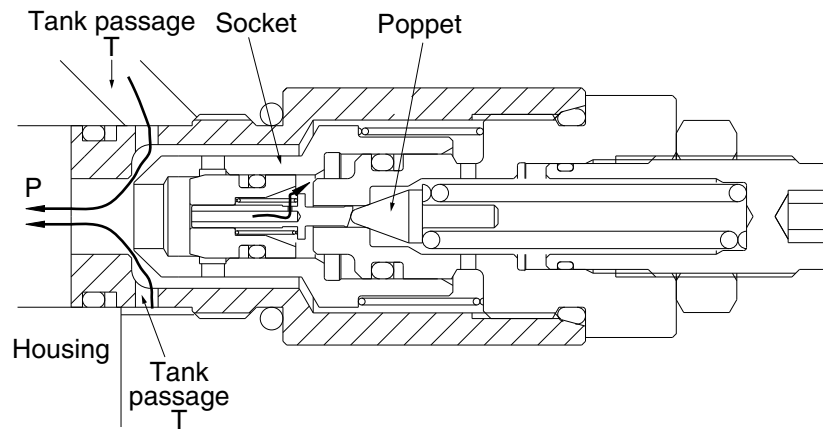



14W92MC45

GROUP 3 SWING DEVICE

1. STRUCTURE

Swing device consists swing motor, and swing reduction gear.

Swing motor include mechanical parking valve, relief valve, make up valve and port block assy.

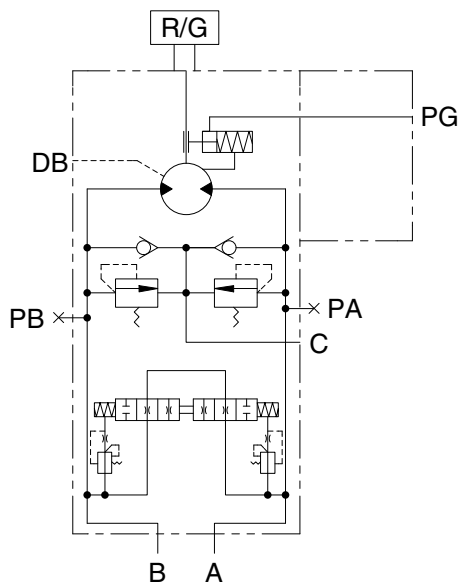
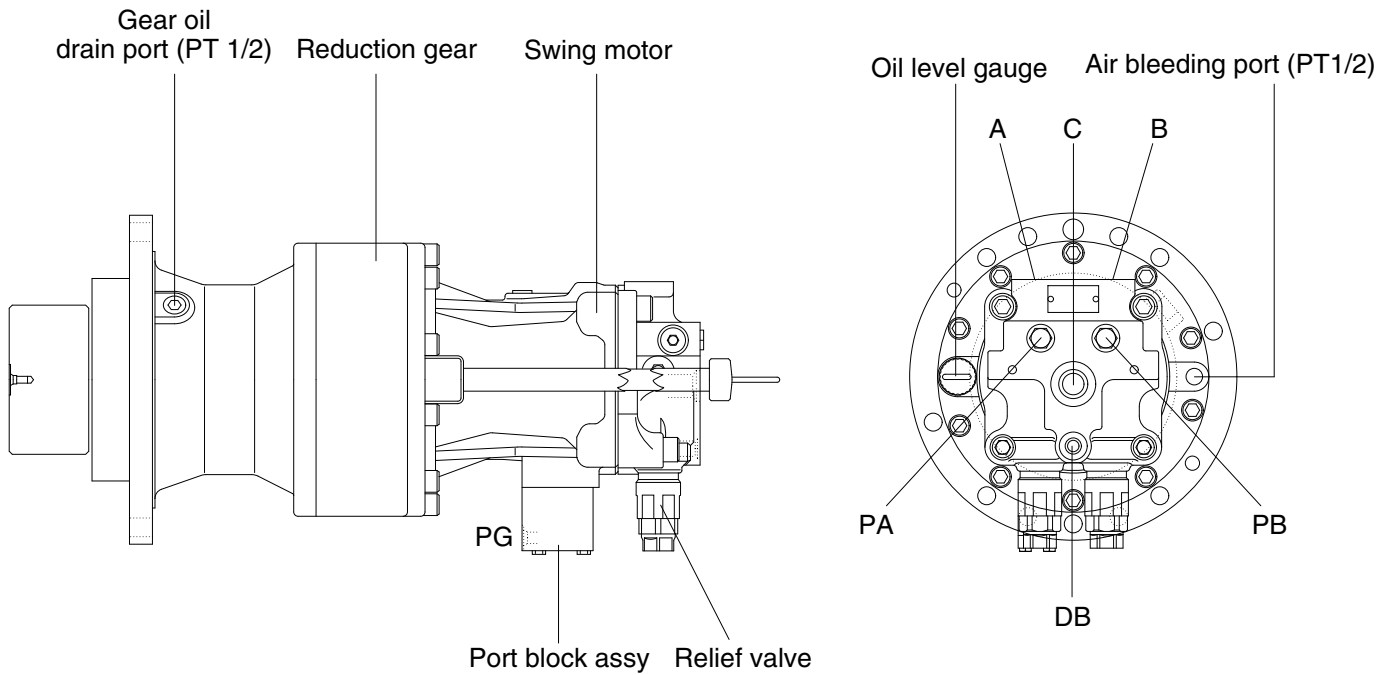


Hydraulic circuit

Port	Port name	Port size
A	Main port	Ø 13
B	Main port	Ø 13
DB	Drain port	PF 3/8
C	Make up port	PF 3/4
PG	Brake release port	PF 1/4
PA, PB	Gauge port	PF 1/4

140A2SM01


1) SWING MOTOR

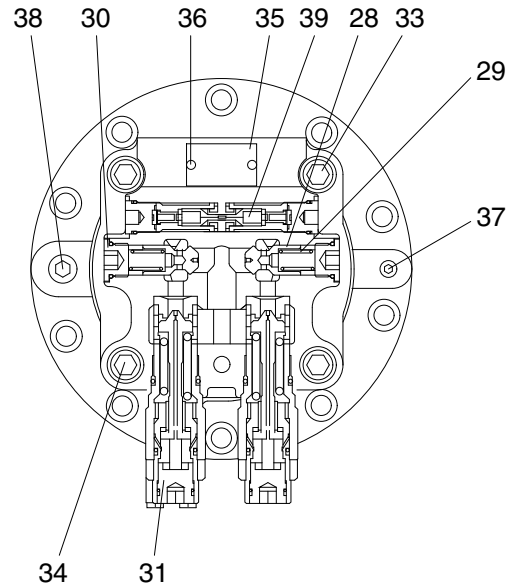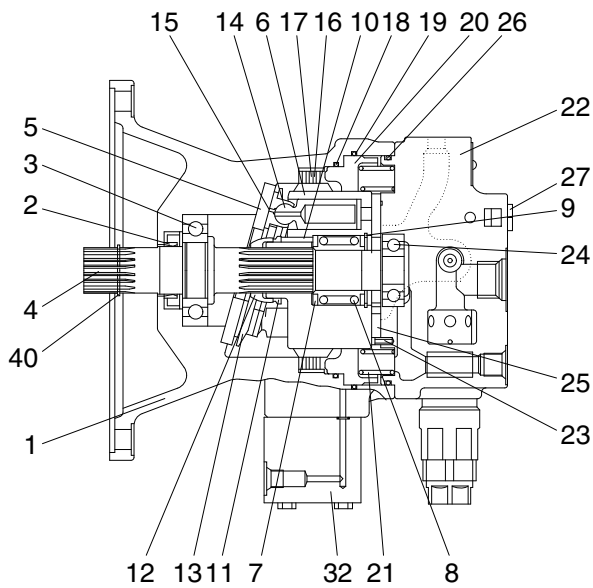

140A2SM02

1	Casing	15	Shoe	29	Spring
2	Oil seal	16	Separate plate	30	Plug assy
3	Ball bearing	17	Friction plate	31	Relief valve assy
4	Drive shaft	18	O-ring	32	Port block assy
5	Shoe plate	19	O-ring	33	Socket bolt
6	Rotary block	20	Brake piston	34	Socket bolt
7	Washer	21	Spring	35	Name plate
8	Spring	22	Valve casing	36	Screw
9	Snap ring	23	Spring pin	37	Plug
10	Roller	24	Ball bearing	38	Plug
11	Collar washer	25	Valve plate	39	Reactionless valve assy
12	Thrust ball	26	O-ring	40	Snap ring
13	Retainer plate	27	Plug assy	41	Socket bolt
14	Piston	28	Plunger		

2) REDUCTION GEAR

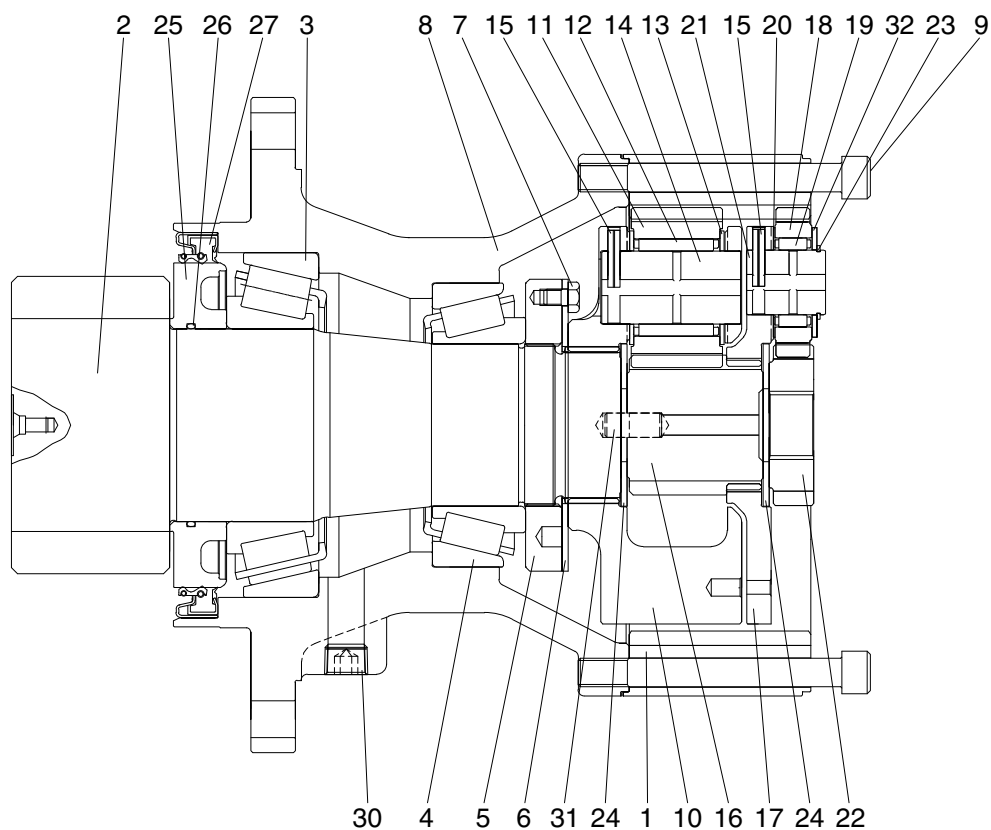

125LCR2SM23

1	Ring gear	11	Planetary gear No. 2	21	Carrier pin No. 1
2	Drive shaft	12	Needle bearing	22	Sun gear No. 1
3	Taper roller bearing	13	Thrust washer	23	Snap ring
4	Taper roller bearing	14	Carrier pin No. 2	24	Thrust plate
5	Ring nut	15	Spring pin	25	Sleeve
6	Lock plate	16	Sun gear No. 2	26	O-ring
7	Hexagon bolt	17	Carrier No. 1	27	Oil seal
8	Casing	18	Planetary gear No. 1	30	Socket plug
9	Socket bolt	19	Needle bearing	31	Parallel pin
10	Carrier No. 2	20	Thrust washer	32	Thrust washer

2. PRINCIPLE OF DRIVING

1) GENERATING THE TURNING FORCE

The high hydraulic supplied from a hydraulic pump flows into a rotary block (6) through valve casing (22) of motor, and valve plate (25).

The high hydraulic is built as flowing on one side of Y-Y line connected by the upper and lower sides of piston (14).



The high hydraulic can generate the force, $F1 = P \times A$ (P : supplied pressure, A : water pressure area), like following pictures, working on a piston.

This force, $F1$, is divided as $N1$ thrust partial pressure and $W1$ radial partial pressure, in case of the plate of a tilt angle, α .

$W1$ generates torque, $T = W1 \times R1$, for Y-Y line connected by the upper and lower sides of the piston as following pictures.

The sum of torque ($\sum W1 \times R1$), generated from each piston (4~5 pieces) on the side of a high hydraulic, generates the turning force.

This torque transfers the turning force to a rotary (6) through a piston; because a rotary is combined with a turning axis and spline, a turning axis rotates and a turning force is sent.

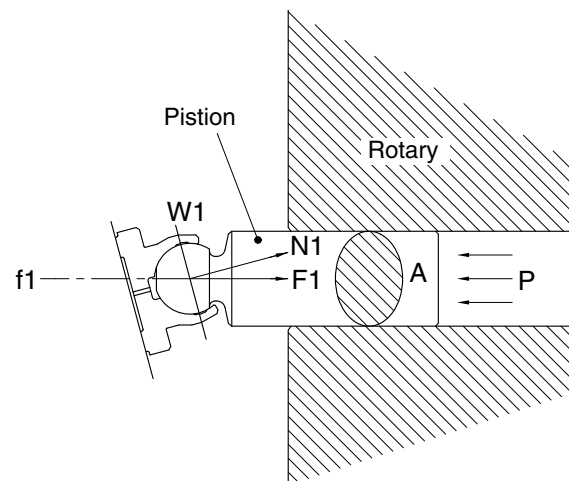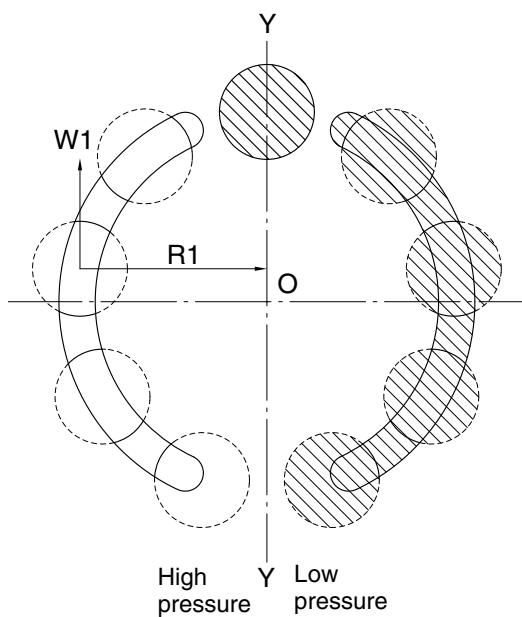

210WA8SM05


2) MAKE UP VALVE

In the system using this type of motor, there is no counterbalance functioning valve and there happens the case of revolution exceeding hydraulic supply of motor. To prevent the cavitation caused by insufficient oil flow there is a make up valve to fill up the oil insufficiency.

A make up valve is provided immediately before the port leading to the hydraulic oil tank to secure feed pressure required when the hydraulic motor makes a pumping action. The boost pressure acts on the hydraulic motor's feed port via the make up valve.


Pressurized oil into the port B, the motor rotate counterclockwise.

If the swing motion is stopped, the oil in the motor is drain via left relief valve, the drain oil run into motor via right make up valve, which prevent the cavitation of motor.

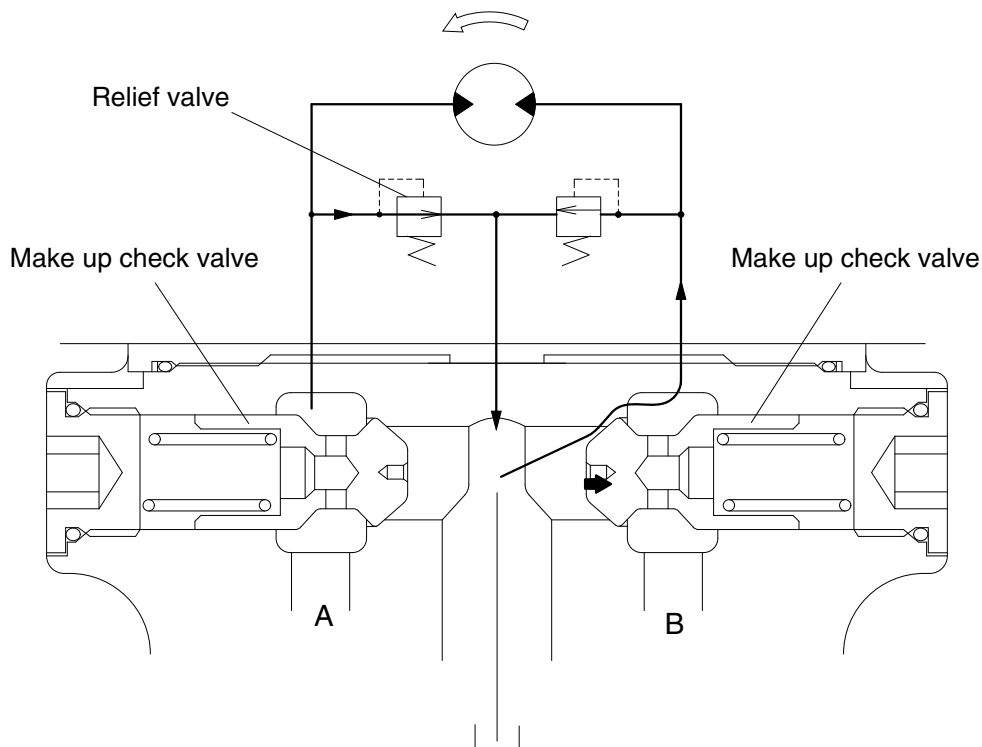

140A2SM04

3) RELIEF VALVE

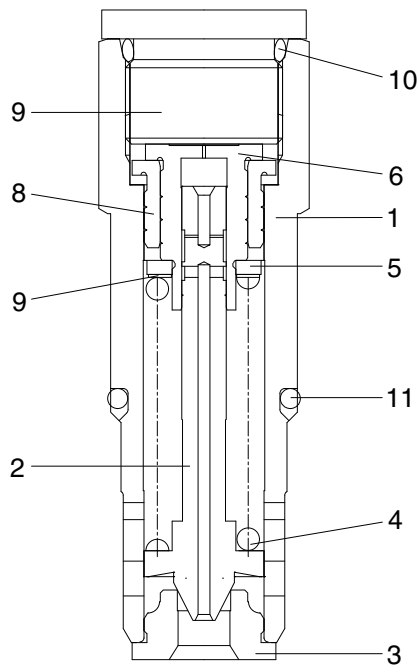

- | | |
|----|-------------|
| 1 | Sleeve |
| 2 | Poppet |
| 3 | Poppet seat |
| 4 | Spring |
| 5 | Spring seat |
| 6 | Shim |
| 7 | Piston |
| 8 | Stopper |
| 9 | Plug |
| 10 | O-ring |
| 11 | O-ring |


145WF2SM25

(1) Construction of relief valve


The valve casing contains two cartridge type relief valves that stop the regular and reverse rotations of the hydraulic motor. The relief valves relieve high pressure at start or at stop of swing motion and can control the relief pressure in two steps, high and low, in order to insure smooth operation.

(2) Function of relief valve

Figure illustrates how the pressure acting on the relief valve is related to its rising process. Here is given the function, referring to the figure following page.

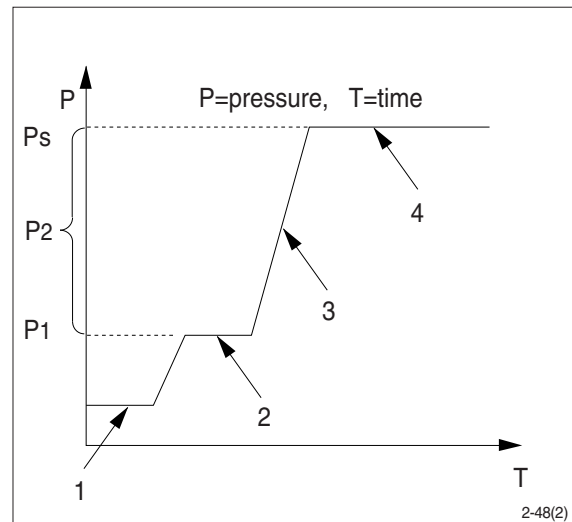

- ① Ports (P,R) at tank pressure.

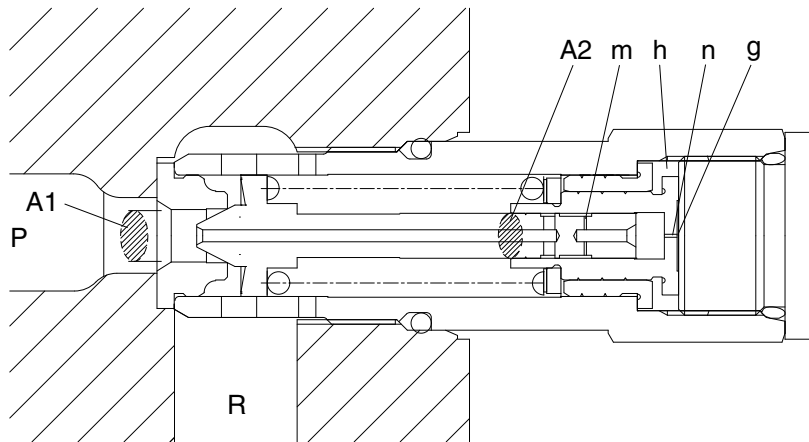


145WF2SM26

- ② When hydraulic oil pressure ($P \times A_1$) reaches the preset force (F_{sp}) of spring (4), the poppet (2) moves to the right as shown.


$$P_1 \times A_1 = F_{sp} + P_g \times A_2$$

$$P_1 = \frac{F_{sp} + P_g \times A_2}{A_1}$$

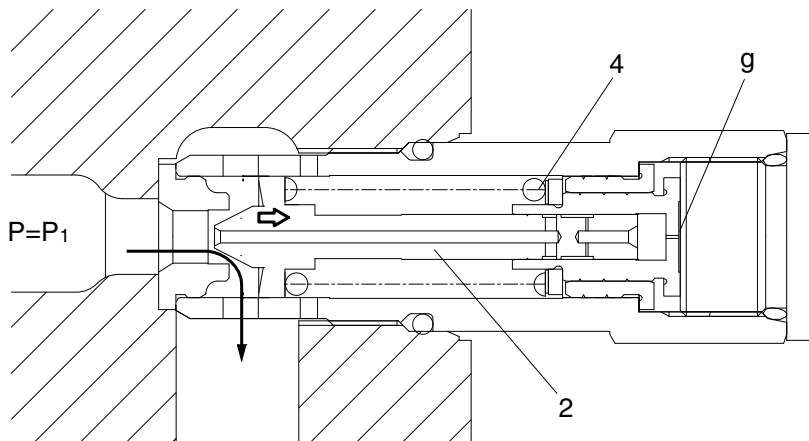

145WF2SM27

- ③ The oil flows into chamber (g) via orifice (m) and (n). When the pressure of chamber (g) reaches the preset force (FSP) of spring (4), the piston (7) moves left and stop the piston (7) hits the bottom of stopper (8).

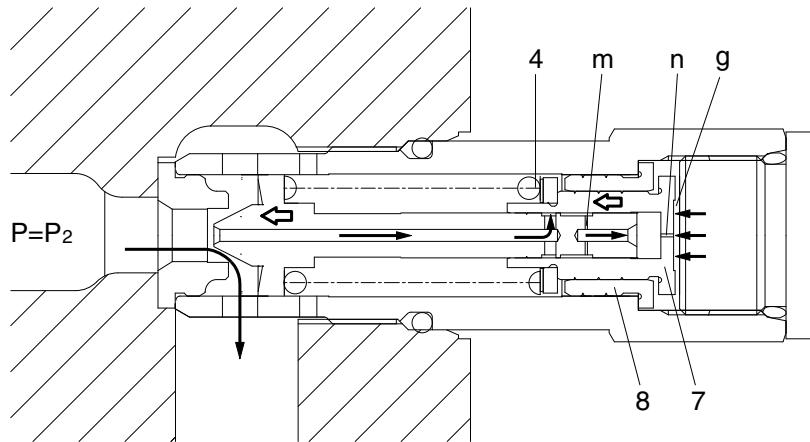


145WF2SM28

- ④ When piston (7) hits the bottom of stopper (8), it stops moving to the left any further. As the result, the pressure in chamber (g) equals (Ps).

$$P_s \times A_1 = F_{sp} + P_s \times A_2$$

$$P_s = \frac{F_{sp}}{A_1 - A_2}$$

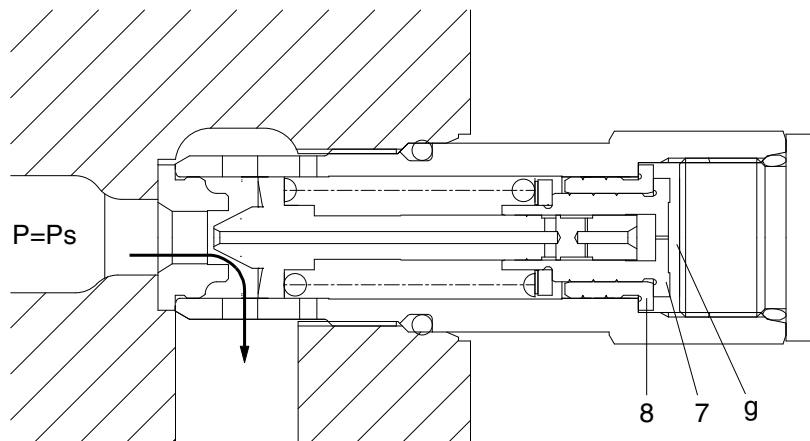


145WF2SM29

4) BRAKE SYSTEM

(1) Control valve swing brake system

This is the brake system to stop the swing motion of the excavator during operation.

In this system, the hydraulic circuit is throttled by the swing control valve, and the resistance created by this throttling works as a brake force to slow down the swing motion.

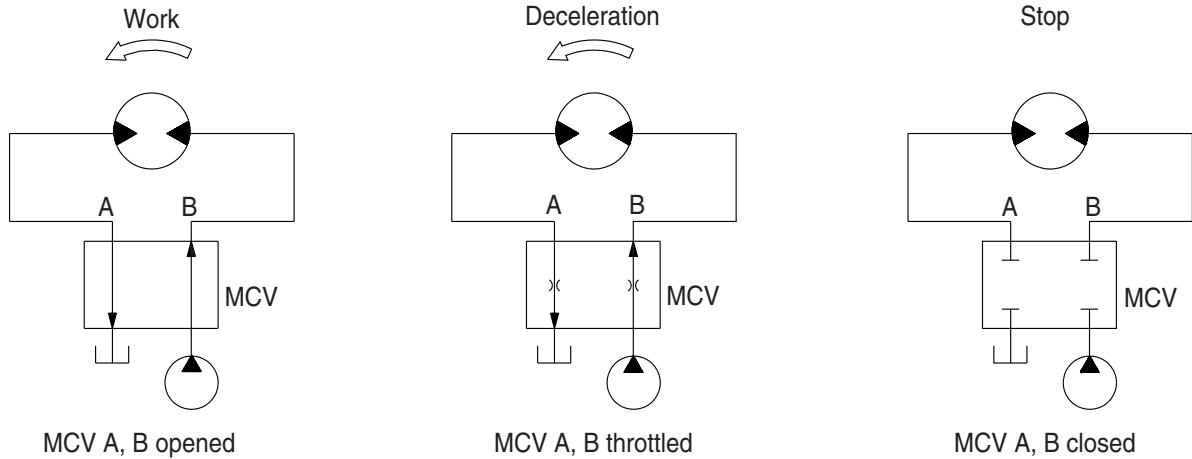

2-48(1)


(2) Mechanical swing parking brake system

This is function as a parking brake only when any of the swing, arm in, travel and boom up function is not operated.

① Brake assembly

Circumferential rotation of separate plate (16) is constrained by the groove located at casing (1). When housing is pressed down by brake spring (21) through friction plate (17), separate plate (16) and brake piston (20), friction force occurs between friction plate and separate plate.

Friction force constrains motion of rotary block (6). When hydraulic force exceeds spring force, brake is released.

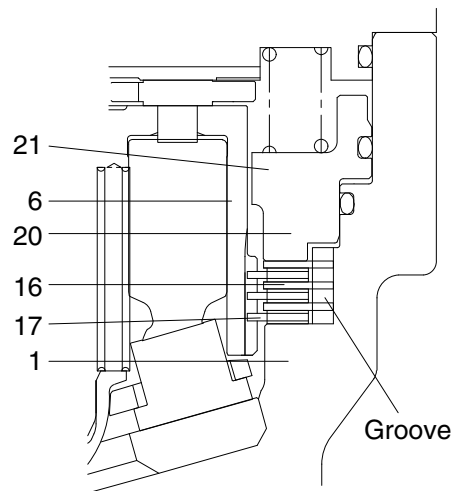

140A2SM07


1	Casing	17	Friction plate
6	Rotary block	20	Brake piston
16	Separate plate	21	Brake spring

② Operating principle

- a. When any of the swing, arm in, travel and boom up function is operated, the swing parking solenoid valve (5) is shifted to the swing position, so pilot pump charged oil (P3) goes to the chamber G through port PG.

This pressure is applied to move the brake piston (20) to the upward against the force of the brake spring (21). Thus, it releases the brake force.

- b. Stop operation and a few second has been elapsed, the swing parking solenoid valve (5) is shifted to the swing parking position and swing brake works.

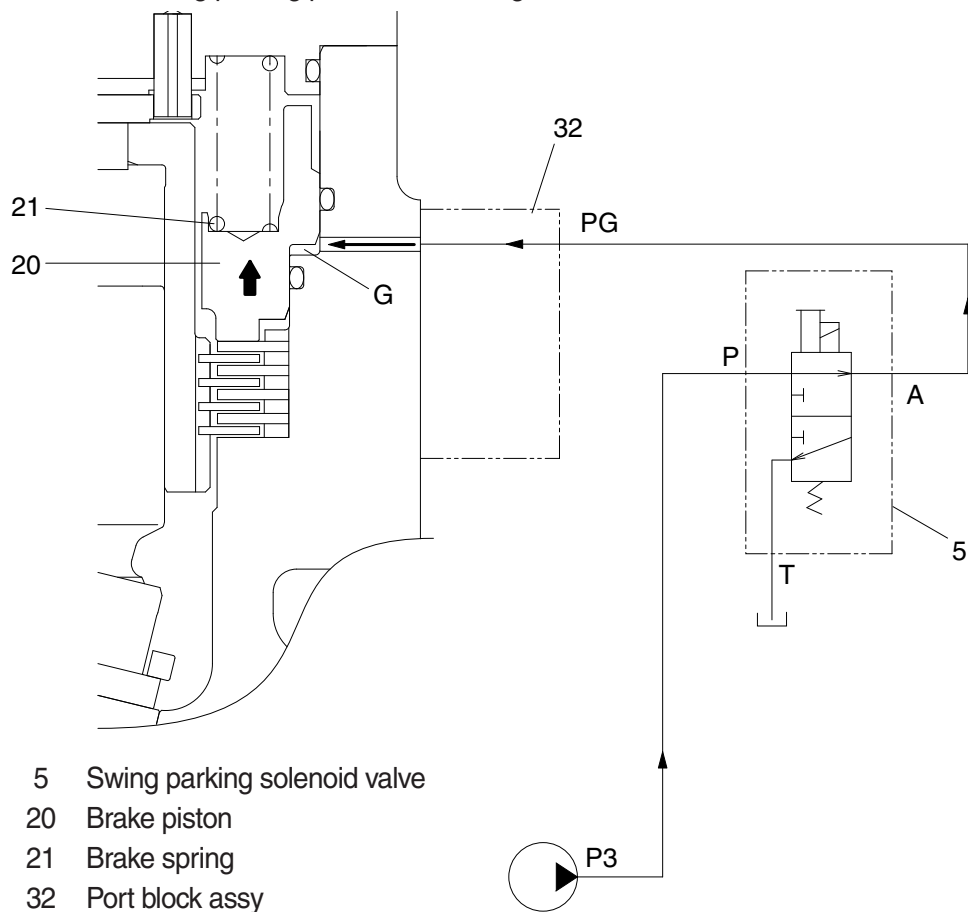

140A2SM10

Electric control swing parking system

- ③ A safety is ensured by recognizing the swing operation and canceling the swing parking only
a. under specific conditions by releasing parking electronically.

After receiving the RCV pressure, the MCU applies the parking release signal.

- b. Depending on each RCV operation, there is a time difference between re-entry into swing
c. parking.

Mode	Fine swing switch	RCV operation	Parking delay time
Work mode	ON or OFF (No condition)	Swing	5 sec
		Arm in	1 sec
	ON	Boom up	2 sec
		Travel	3 sec
	OFF	Boom up / Travel	Not applied

④ Manual override function

When the swing parking solenoid valve or related electric system is malfunction, the swing parking brake is not released even if the swing lever is operated.

To release the swing parking brake, the manual override function is needed.

※ Manual override solenoid valve

- a. Use hand only to turn the control knob (do not use a tool).

b. Parking brake release


Turn the control knob to counterclockwise fully (about 2.5 mm)

c. Parking brake work

Turn the control knob to clockwise fully.

- ※ Be careful not damage the control knob by using a tool or tightening forcibly.

It can cause malfunction of the solenoid valve.

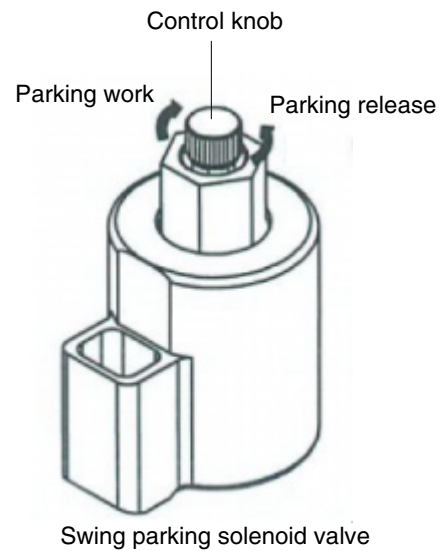


160A2SM11

GROUP 4 TRAVEL DEVICE (TYPE 1, STD)

1. CONSTRUCTION

Travel device consists travel motor and gear box.



Travel motor includes brake valve, parking brake and high/low speed changeover mechanism.

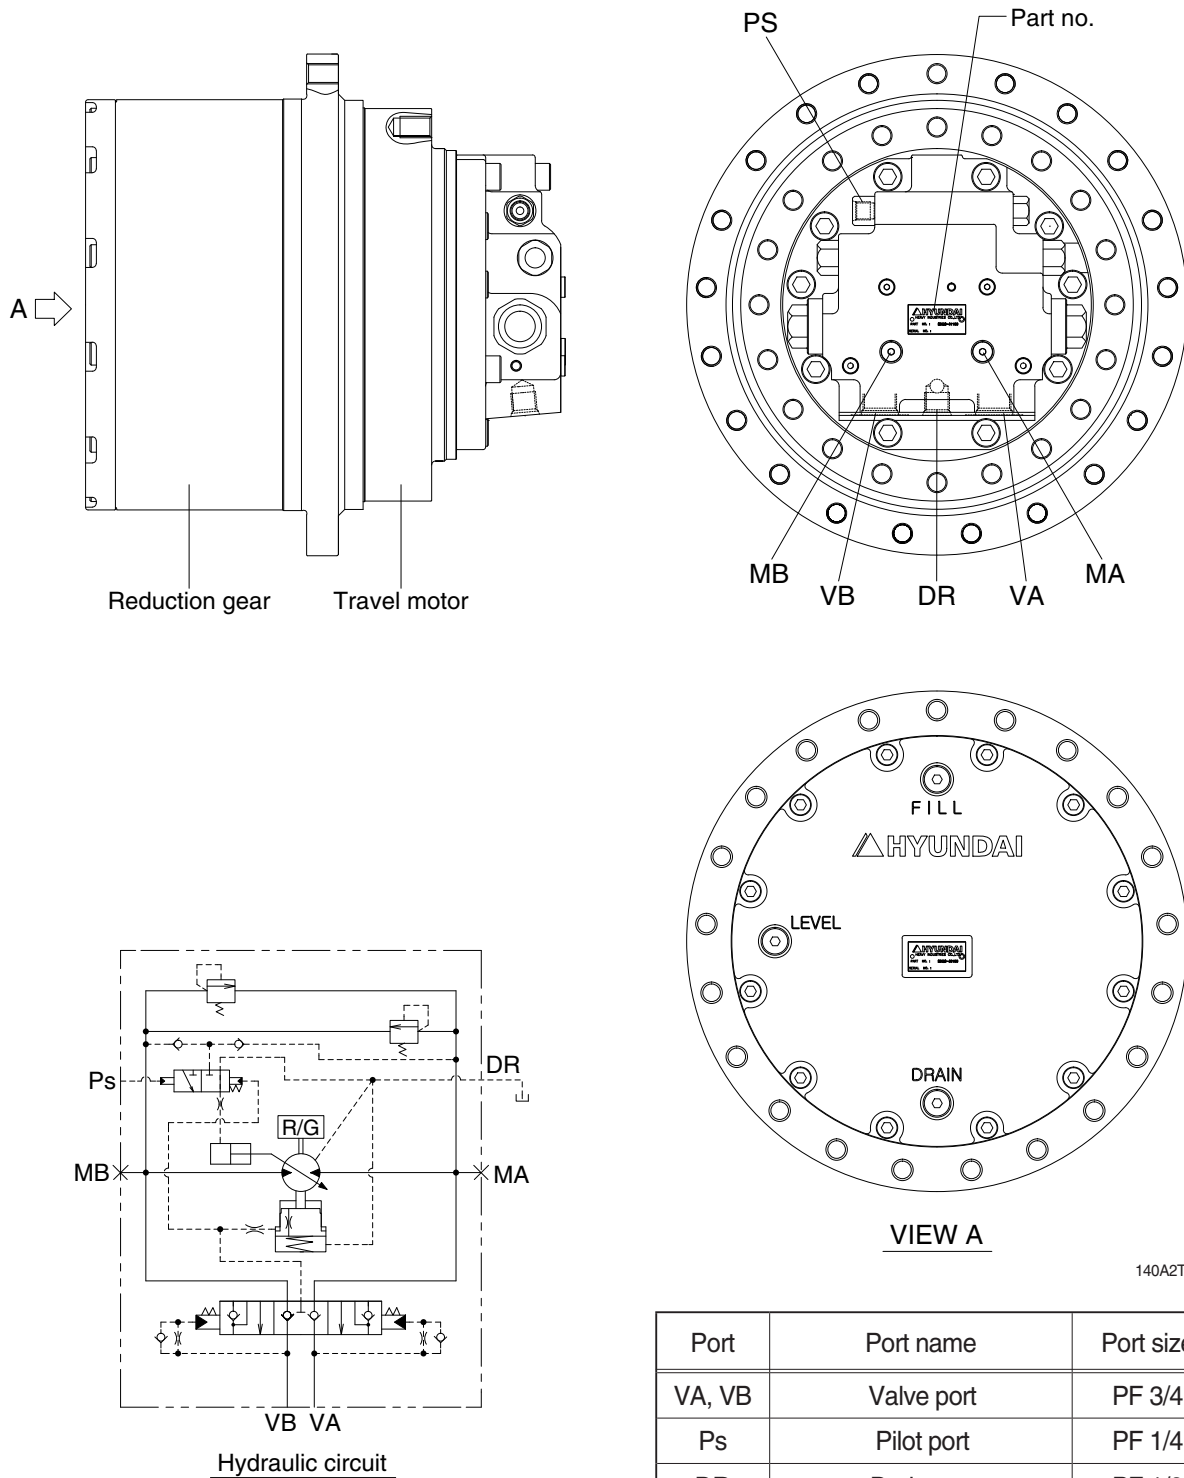

140A2TM01

Port	Port name	Port size
VA, VB	Valve port	PF 3/4
Ps	Pilot port	PF 1/4
DR	Drain port	PF 1/2
MA, MB	Gauge port	PF 1/4

2. STRUCTURE

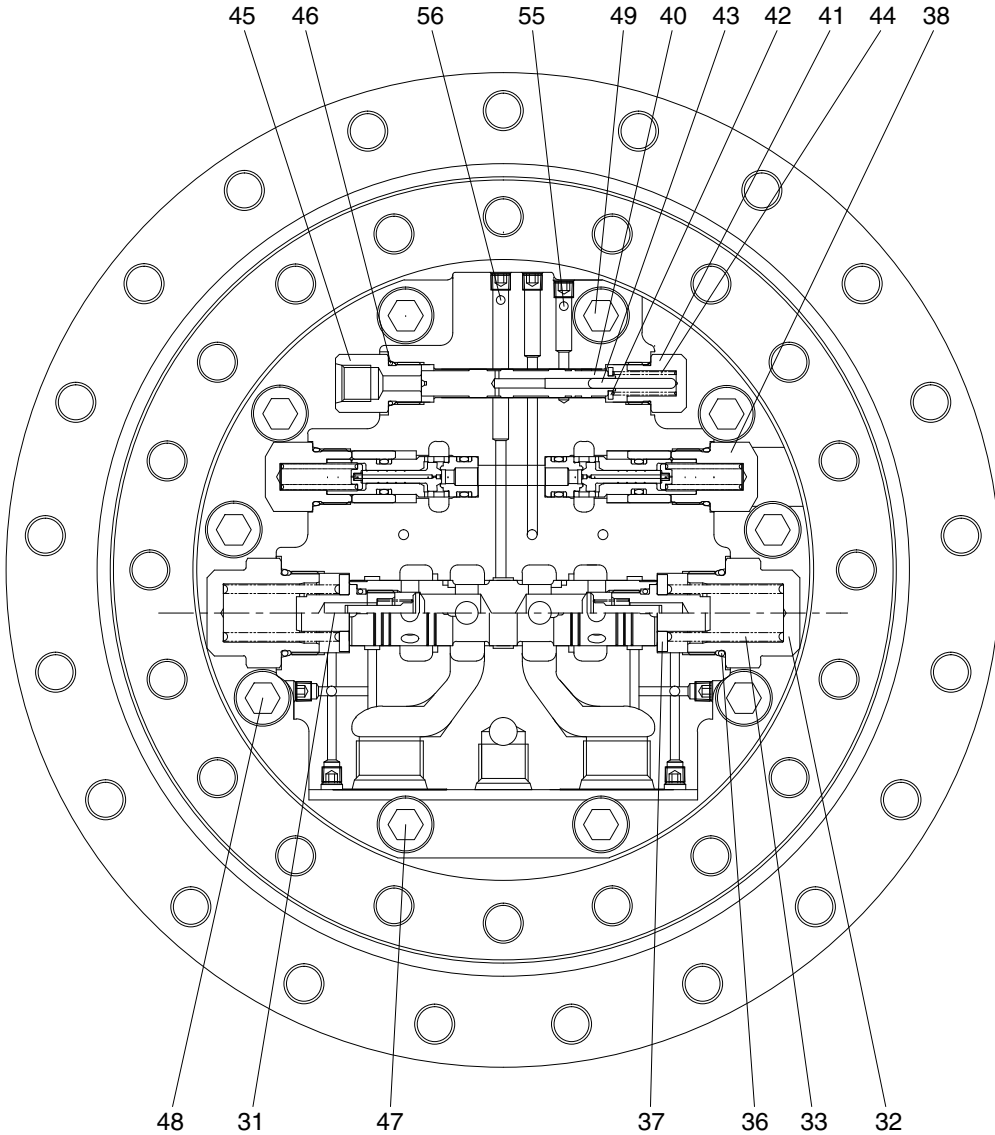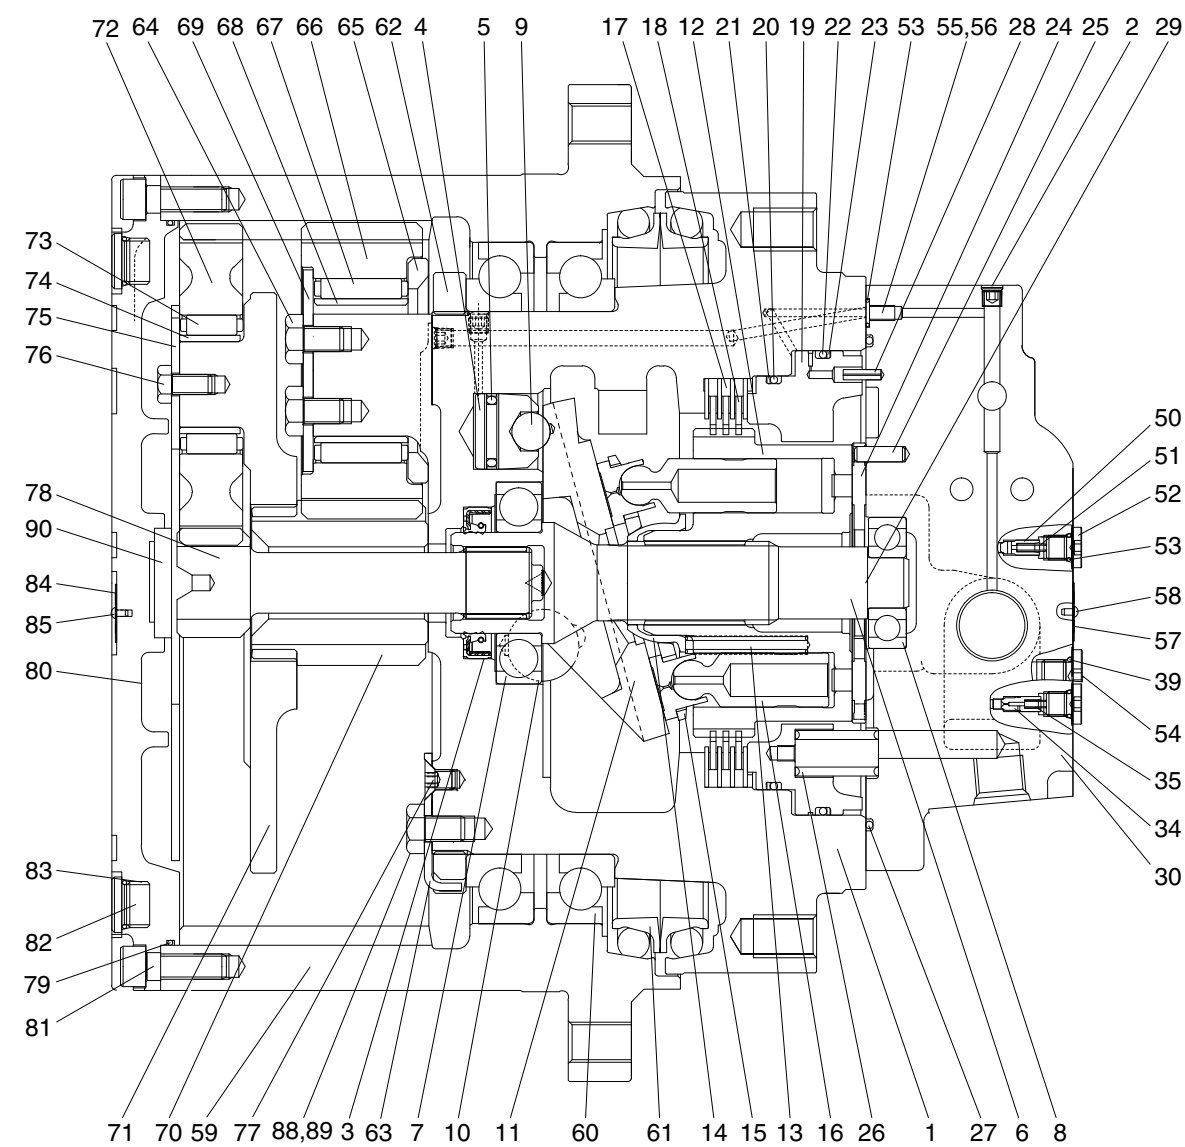


- | | | | | |
|----------------------|--------------------|-----------------------------|------------------------|---------------------------|
| 1 Casing | 19 Parking piston | 37 Spring seat | 55 Restrictor | 73 Needle bearing |
| 2 Plug | 20 O-ring | 38 Relief valve assy | 56 Restrictor | 74 Inner race No. 1 |
| 3 Oil seal | 21 Back up ring | 39 O-ring | 57 Name plate | 75 Thrust plate |
| 4 Piston | 22 O-ring | 40 Spool | 58 Rivet | 76 Hexagon head bolt |
| 5 Piston seal | 23 Back up ring | 41 Plug | 59 Ring gear | 77 Countersunk head screw |
| 6 Shaft | 24 Valve plate | 42 Spring seat | 60 Ball bearing | 78 Sun gear No.1 |
| 7 Front ball bearing | 25 Spring pin | 43 Parallel pin | 61 Floating seal assy | 79 O-ring |
| 8 Rear ball bearing | 26 Spring | 44 Spring | 62 Nut ring | 80 Cover |
| 9 Steel ball | 27 O-ring | 45 Connector | 63 Lock plate | 81 Hex socket head bolt |
| 10 Pivot | 28 Spring pin | 46 O-ring | 64 Hexagon head bolt | 82 Plug |
| 11 Swash plate | 29 Parallel pin | 47 Hexagon socket head bolt | 65 Thrust plate | 83 O-ring |
| 12 Cylinder block | 30 Rear cover | 48 Hexagon socket head bolt | 66 Planetary gear No.2 | 84 Name plate |
| 13 Spring | 31 Main spool assy | 49 Hexagon socket head bolt | 67 Needle bearing | 85 Rivet |
| 14 Ball guide | 32 Cover | 50 Check valve | 68 Inner race No. 2 | 88 Plain washer |
| 15 Retainer plate | 33 Spring | 51 Spring | 69 Thrust washer | 89 Hexagon head bolt |
| 16 Piston assy | 34 Restrictor | 52 Plug | 70 Sun gear No.2 | 90 Thrust plate |
| 17 Friction plate | 35 Spring | 53 O-ring | 71 Carrier No.1 | |
| 18 Separated plate | 36 O-ring | 54 Plug | 72 Planetary gear No.1 | |

3. OPERATION

1) MOTOR

High pressure oil delivered from hydraulic pump is led to inlet port that is provided in the brake valve portion and, through the rear cover (30) and valve plate (24), led to cylinder block (12).

The oil flow and direction of shaft rotation are indicated in table.

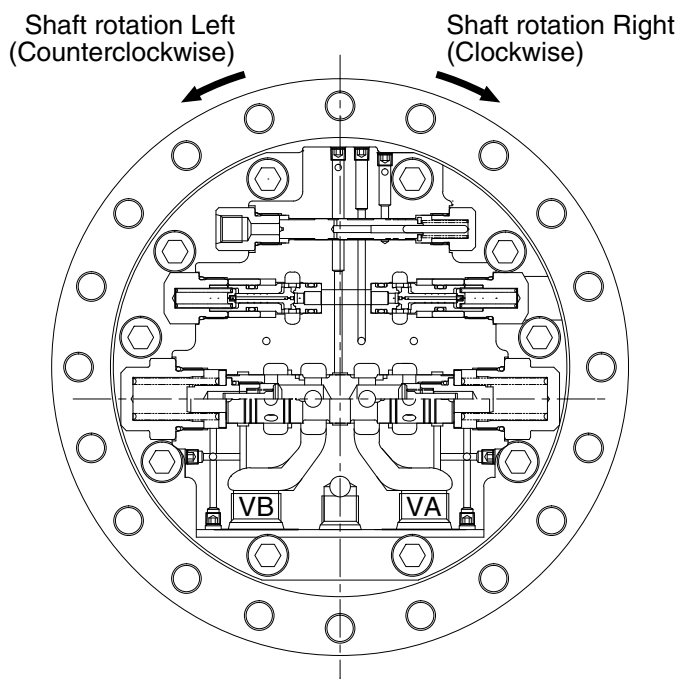

Inlet port	Outlet port	Direction of shaft rotation (viewing from rear cover)
VB	VA	Right (clockwise)
VA	VB	Left (counterclock wise)

125LCR2TM23

As shown in below figure, high pressure oil is supplied to the pistons which are on one side of the line Y-Y that connects upper and lower dead points and produces force F1.


$F1 = P \times A$ (P : pressure, A : area of piston section)

The swash plate (11) with inclined angle of α divides this force F1 into thrust force F2 and radial force F31-34.

This radial force is applied to axis Y-Y as turning force and generate drive torque of T.

$$T = r_1 \cdot F31 + r_2 \cdot F32 + r_3 \cdot F33 + r_4 \cdot F34$$

This drive torque is transmitted via cylinder block (12) to driving shaft (6).

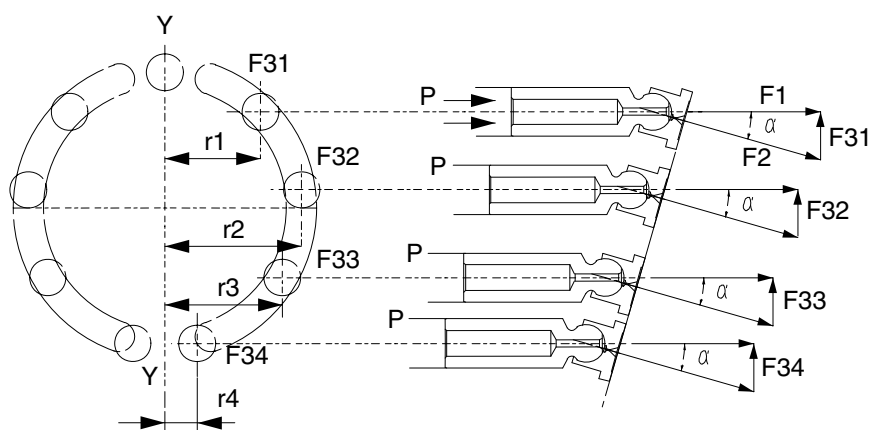

29092TM07


2) PARKING BRAKE

Parking brake is released when high pressure oil selected by the brake valve portion that is connected directly to the rear cover (30), is applied to the parking piston (19).

Otherwise the braking torque is always applied.

This braking torque is generated by the friction between the separated plates (18), inserted into the casing (1), and friction plates (17), coupled to cylinder block (12) by the outer splines.

When no pressure is activated on the parking piston (19), it is pushed by the brake springs (26) and it pushes friction plates (17) and separated plates (18) towards casing (1) and generates the friction force which brakes the rotation of cylinder block (12) and hence the shaft (6).

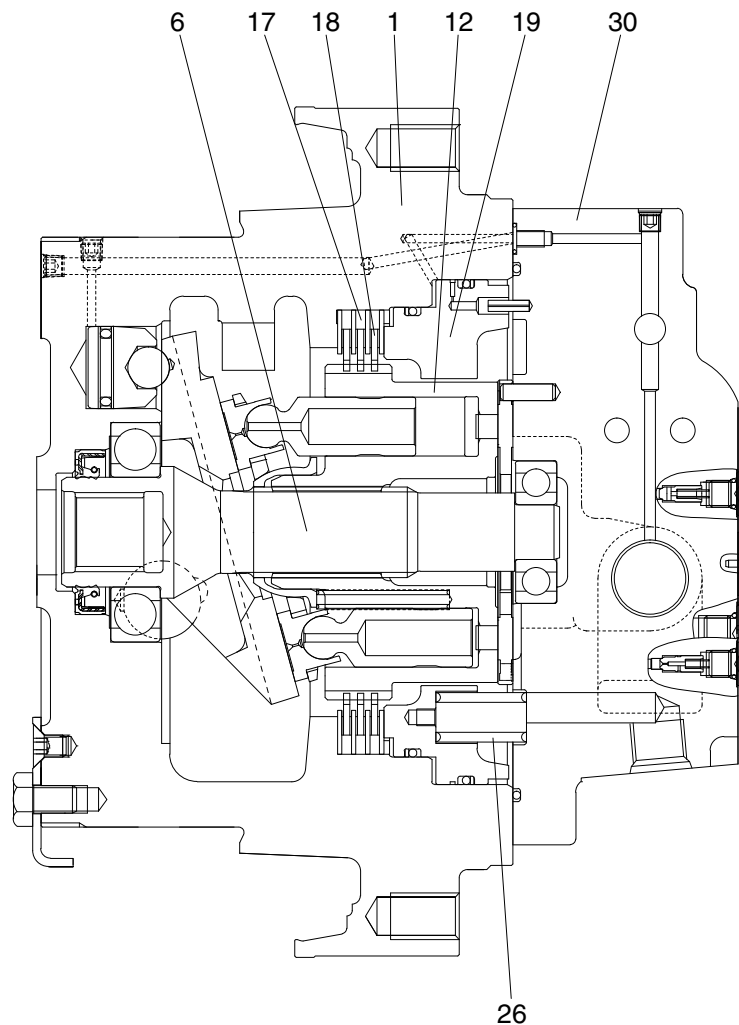

125LCR2TM24

3) CAPACITY CONTROL MECHANISM

Figure typically shows the capacity control mechanism.

When high speed pilot line is charged with the pressure P_A that overcome the spring (44), the spring (44) is compressed and spool (40) shifts to the right to connect the port P and port C.

Then, the highest pressure is selected by the check valve (50) from inlet and outlet pressure of the motor and high speed pilot line pressure and pushes shifter piston (4). As a result, swash plate (11) turns around the line L which connect the two steel balls (10) as shown by dotted lines. The turn stops at the stopper (1-1) of casing and swash plate (11) keeps the position.


In this case, the piston stroke become shorter and motor capacity become smaller and motor rotates faster, around 1.60 times, by the same volume of oil.

When no pressure is in the high speed pilot line P_A , spool (40) is pushed back by the spring (44) and pressure that pressed the shifter piston (4) is released to the hydraulic tank through restrictor (55).

Here, nine pistons are there and they equally spaced on the swash plate (11). The force that summed up those of pistons comes to almost the center of the swash plate (11) as shown. Since the steel balls (10) are off-set by S from the center, the rotating force of product S and the force moves swash plate (11) to the former position and the speed returns to low.

When the power demand exceeds the engine power, such as in steep slope climbing or turning at high speed mode, the system step down to the low speed automatically. The mechanism is that: pump pressure is led to the port P_B and this pressure activate on pin (43). When the pressure at P_B exceeds predetermined value, spool (40) returns to the left by the counter-pressure against pin (43) and the pressure on the shifter piston (4) through port C is released to the tank and the motor comes to low speed.

When P_B goes down, the spool (40) moves to the right and the speed become high.

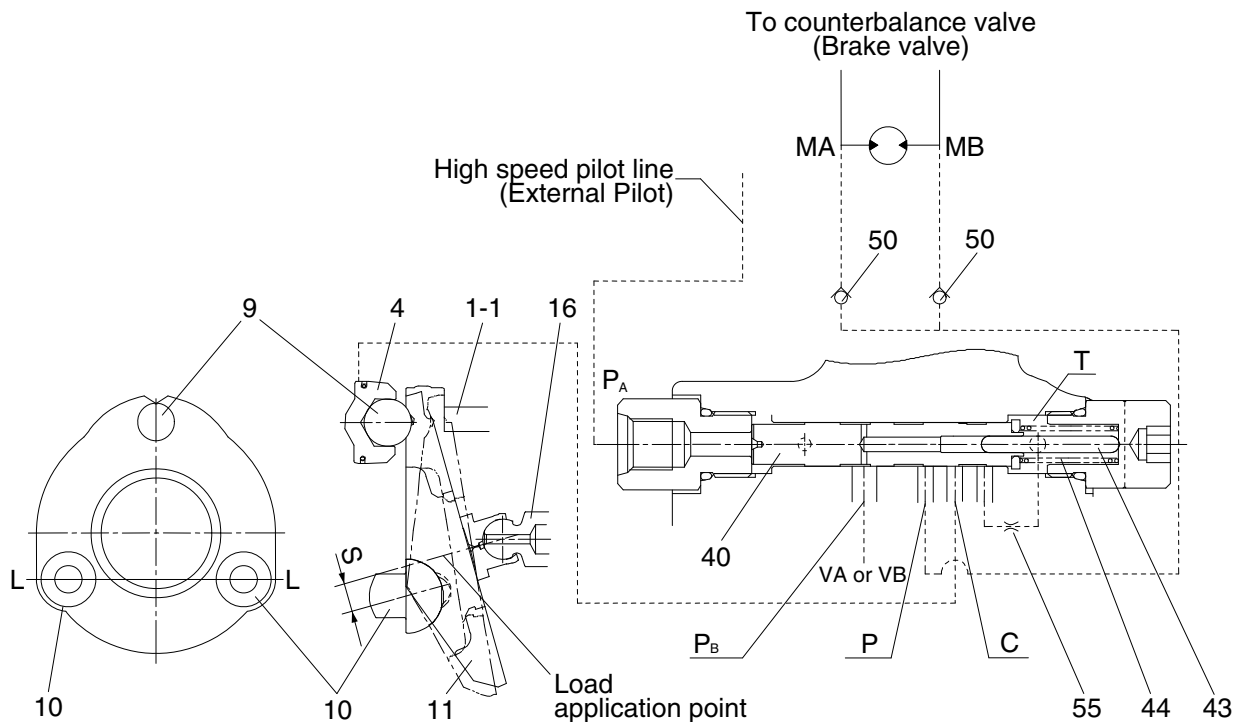


125LCR2TM19

4) OVERLOAD RELIEF VALVE

(1) Structure

This valve is screwed in the motor rear cover (30) and consists of : plug (38-1) that is screwed and fixed in the rear cover (30), poppet (38-8) and supports the poppet seat (38-9), spring (38-2) that is operating relief valve setting pressure and supports the spring seat (38-3), that is inserted in the sleeve (38-4), piston (38-5) that reduce the shock.

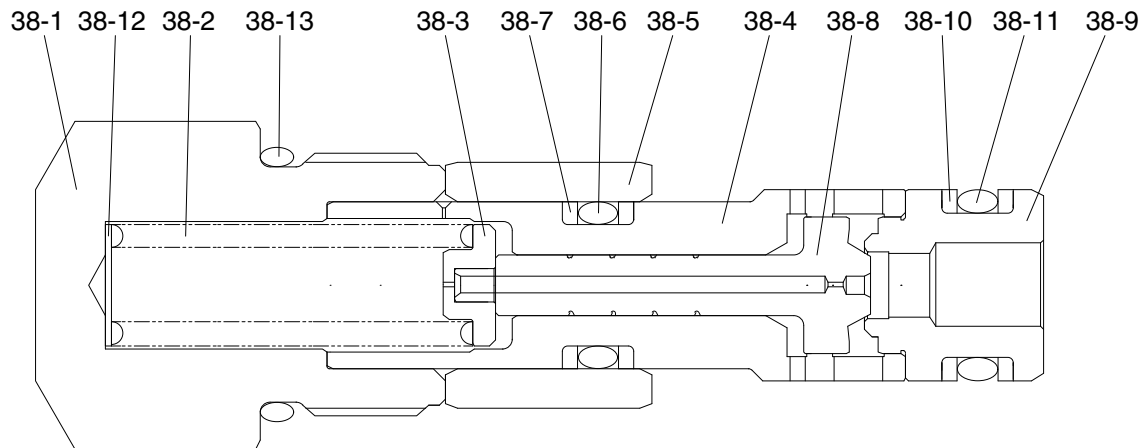

125LCR2TM25

38-1 Plug	38-6 O-ring	38-11 O-ring
38-2 Spring	38-7 Back-up ring	38-12 Ring
38-3 Spring seat	38-8 Poppet	38-13 O-ring
38-4 Sleeve	38-9 Poppet seat	
38-5 Piston	38-10 Back-up ring	


(2) Operation

Two pieces of overload valves are located at cross-over position in the counterbalance circuit of brake valve and have the following functions :

- ① When hydraulic motor starts, keep the driving pressure below predetermined value and while accelerating, bypasses surplus oil to return line.
- ② When stopping the motor, keep the brake pressure, that develops on the outlet side of motor, under the predetermined value to stop the inertial force.
- ③ To accelerate sharply while starting, and to mitigate the braking shock while stopping. For these purposes, the developed pressure is kept comparatively low for a short period, then keep the line pressure as normal value. While the pressure is low, meshing of reduction gears, crawler and sprocket etc. can be smoothly done and the shock are absorbed.

When starting, "A" port pressure of overload valve increases, this pressure is applied to the effective diameter of poppet (38-8) which seats on the poppet seat (38-9) and, at the same time, is delivered, via small hole, to the spring seat (38-3) located inside the sleeve (38-4) and the seat bore pressure increases up to "A" port pressure. The poppet (38-8) opposes to spring (38-2) by the force of the pressure exerted on the area difference between poppet seat's effective diameter and spring seat bore and keep the predetermined pressure.

When hydraulically braking, the piston (38-5) is at the left position by the driving pressure, and when "A" port pressure increases, the pressure is applied also to the piston (38-5) through the small hole in the poppet (38-8), sleeve (38-4) and piston (38-5) moves rightward until it touches the stopper in rear cover. In this while, the poppet (38-8) maintains "A" port pressure at comparatively low against the spring (38-2) force and exhaust oil to "B" port side. After the piston reached to the plug, the valve acts the same as at starting.

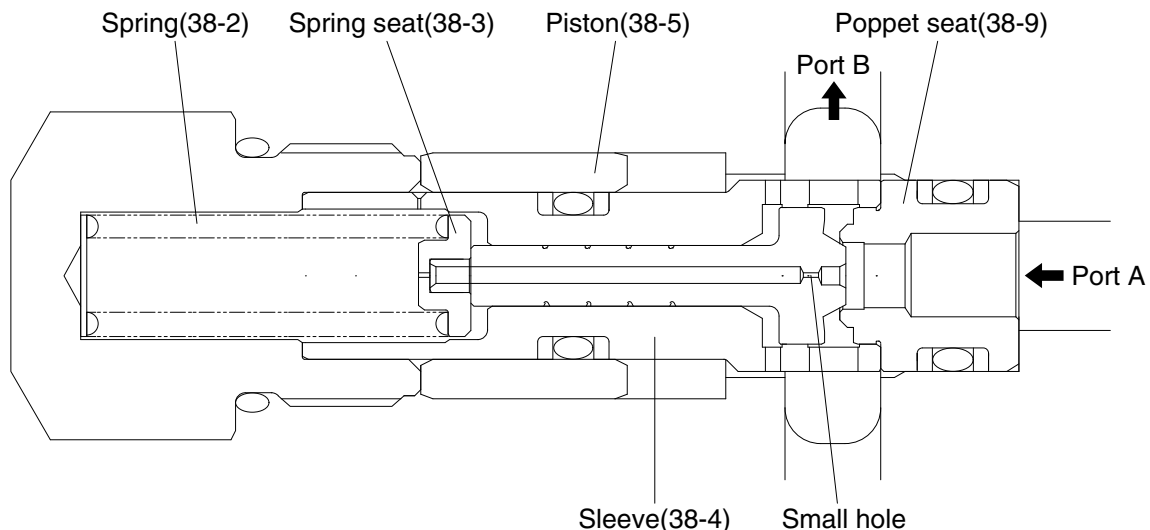

125LCR2TM27

5) BRAKE VALVE

(1) Structure

The brake valve portion mainly consists of the following parts:


① Spool

By shifting the spool (31), the discharged oil from hydraulic motor is automatically shut off or restricted according to the condition and give the effect of holding, accelerating, stopping and counterbalance operations.

(See page 2-70, (2) Operation)

② Check valve (built in the spool)

This valve is located in the oil supplying passage to hydraulic motor, and at the same time functions to lock oil displacement. Therefore, this valve serves as not only a suction valve but also a holding valve for hydraulic motor.

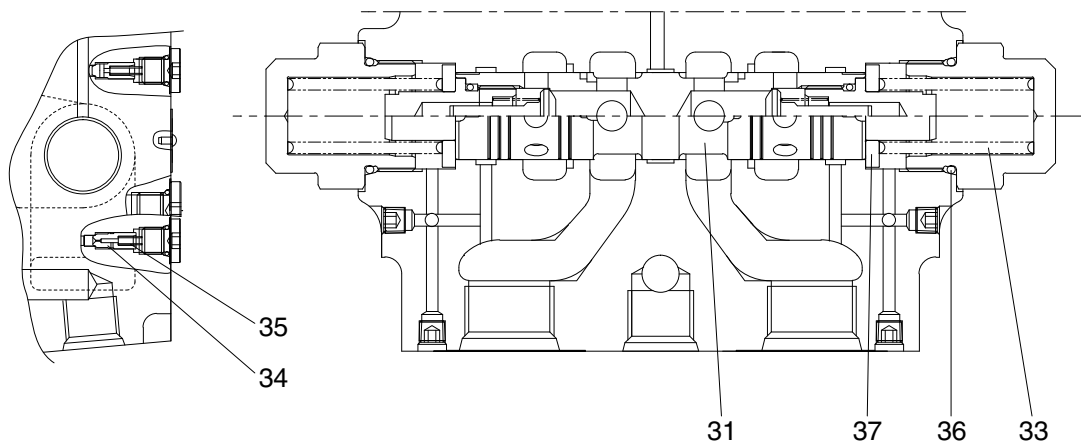

125LCR2TM28

31 Main spool

33 Spring

34 Restrictor

35 Restrictor spring

36 O-ring

37 Spring seat

(2) Operation

① Holding operation


When the control valve is at neutral position, VA and VB ports are connected to the tank, and the spring (33) located on both spool ends holds the spool (31) at central position.

Therefore, the passages from VA to MA and VB to MB are closed, which result in closing MA and MB ports connected to hydraulic motor.

Since the passage to parking brake is connected to the tank line, the brake cylinder pressure is equal to the tank pressure and the brake is applied by the springs. Thus, the rotation of the motor is mechanically prevented.

If external torque is exerted on the motor shaft, the motor would not rotate as usual by this negative parking brake.

In case the brake should be released for some reason, pressure is built on MA or MB port. But, due to oil leakage inside hydraulic motor or so, high-pressure oil escapes from the closed circuit and motor rotates a bit. So, the cavitation tends to occur in the lower pressure side of the closed circuit. Then, the check valve, built in the spool (31), operates to avoid the cavitation and opens the passage from VA to MA or from VB to MB. Then the oil equivalent to the leakage is sucked from the tank line to the closed circuit.

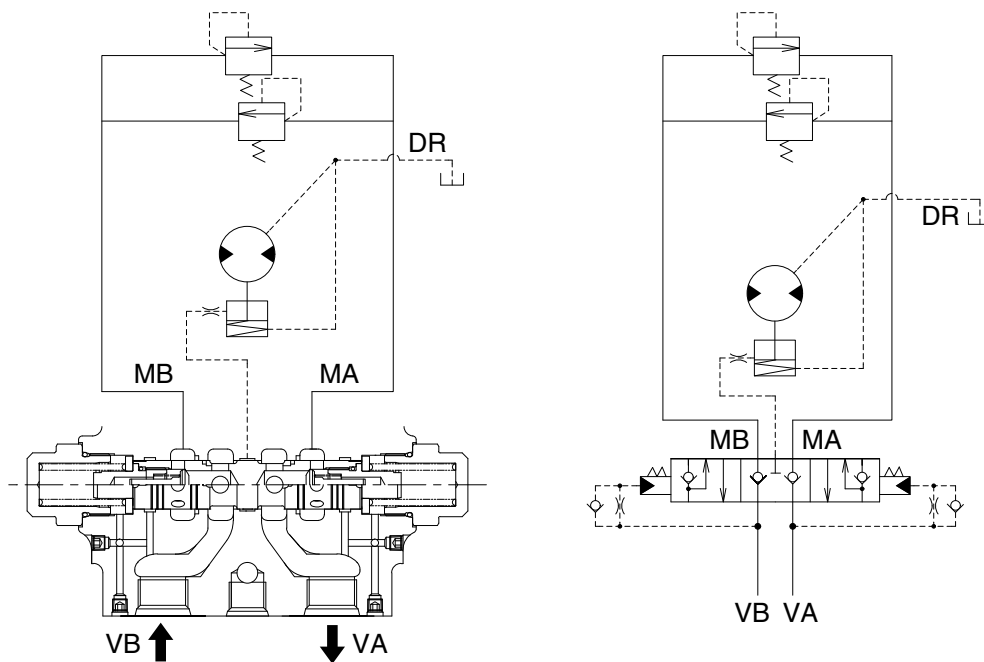

125LCR2TM29


② Accelerating operation

When VA and VB ports are connected respectively to pump and tank by operating the control valve, hydraulic oil from pump is forwarded through VA port to push open the check valve provided inside spool (31), and oil flows to motor via MA port to rotate the motor.

Therefore, the pressure increases and negative brake is released by the pressure supplied from pump. At the same time, the pressure of pilot chamber increases to push and move the spool (31) leftwards, overcoming the spring (33) force. Thus, the return line from MB to VB opens to rotate the motor.

In case inertia load is too big to start rotation, accelerating pressure reaches the set pressure of relief valve and high pressure oil is being relieved while the motor gains the rotational speed.

As the rotational speed goes up, the relieved volume decreases, and finally the motor rotates at a fixed speed.

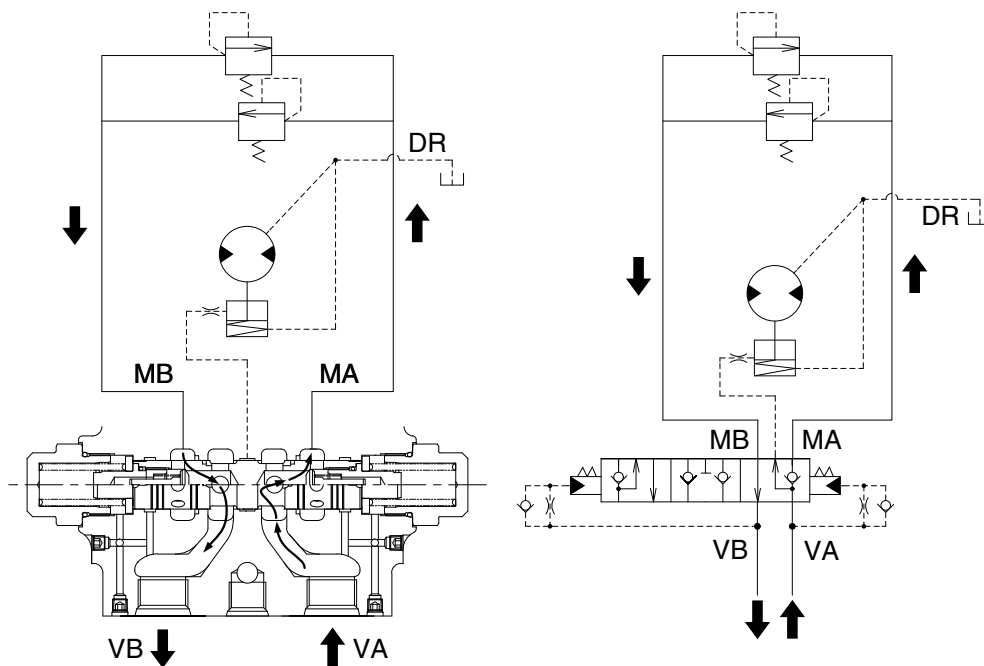


125LCR2TM30

③ Stopping operation

Returning the control valve to neutral position while running the motor, the oil supply is cut off and VA and VB ports are connected to the tank line. Then the pressure of the pilot chamber located on both spool ends become equal, and the spool (31) returns to the neutral position by spring (33) force. Thus, the passage from MA to VA is closed.

Owing to the inertia force of the load, the hydraulic motor tends to continue the rotation. Here, the motor functions as a pump and forwards the oil to MB port but the passage is blocked and MB port pressure increases. Then the relief valve opens to relieve the pressure and rotational speed decelerates and at last the motor stops.

Negative brake release pressure is gradually lowered due to the restrictor and finally the brake works and the motor is mechanically stopped.

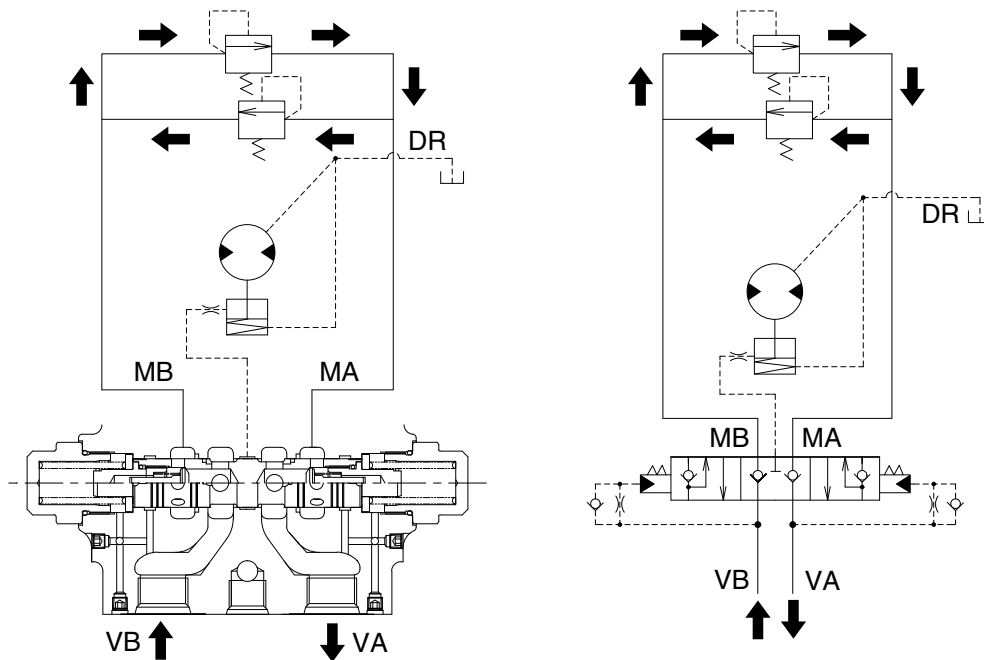

125LCR2TM31

④ Counterbalance operation

Counterbalance operation is required to decelerate slowly the hydraulic motor while absorbing inertia force.

In case the hydraulic oil is gradually decreased from pump to VB port, the drive shaft of hydraulic motor tends to rotate faster than that matched to the volume of oil supply.


Consequently, the pilot chamber pressure on MB to VB side decreases and the spring (33) force moves the spool (31) leftwards towards neutral position.

Therefore, the area of passage from MA to VA becomes smaller and the pressure on MA side rises due to increased resistance in the passage and the motor receives hydraulic braking effect.

If the motor rotates slower than that matched to the volume of supplied oil, the pilot chamber pressure on VB port increases, and spool (31) moves rightwards to enlarge the area of passage from MA to VA. Therefore the braking effect becomes smaller and the rotational speed of motor is controlled to correspond to the volume of supplied oil.

In order to give stable counterbalance operation, the restrictors (34) are set in the pilot chamber to damp the spool (31) movement.

The parking brake is released during pressure adjusting action of the spool (31).

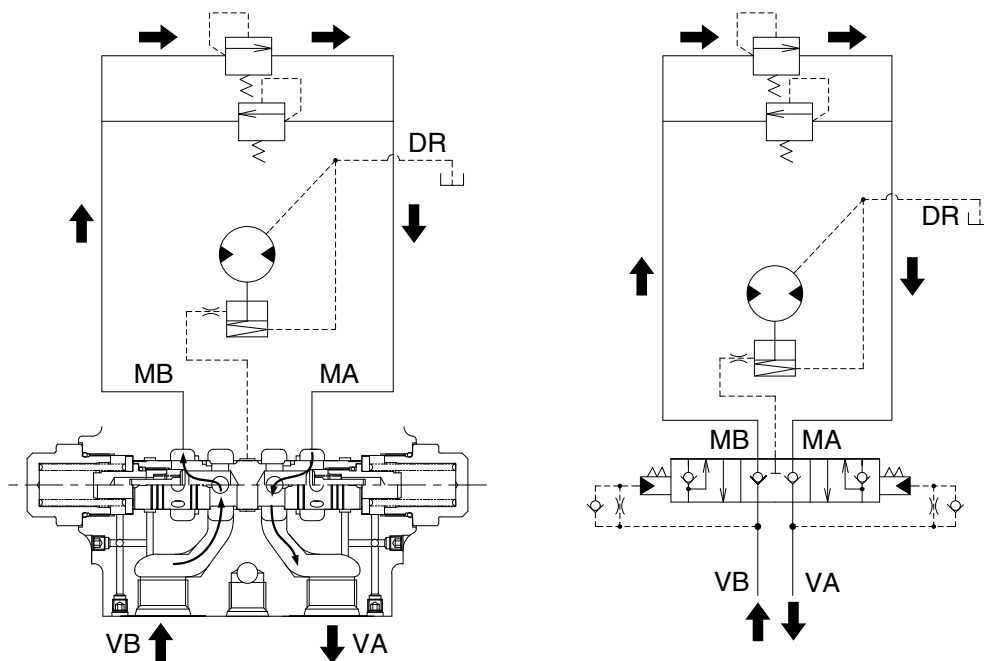

125LCR2TM32

6) REDUCTION GEAR

Reduction unit slows down the rotating speed of motor and converts motor torque to strong rotating force.


This reduction unit utilizes two stages, planetary reduction system.

Planetary reduction system consists of sun gear, planetary gears, (planetary) carriers, and ring gear.

When the sun gear (s) is driven through input shaft, planetary pinions (b), rotating on their center, also move, meshing with fixed ring gear (a), around sun gear (s).

This movement is transferred to carrier (k) and deliver the torque.

This mechanism is called planetary gear mechanism.

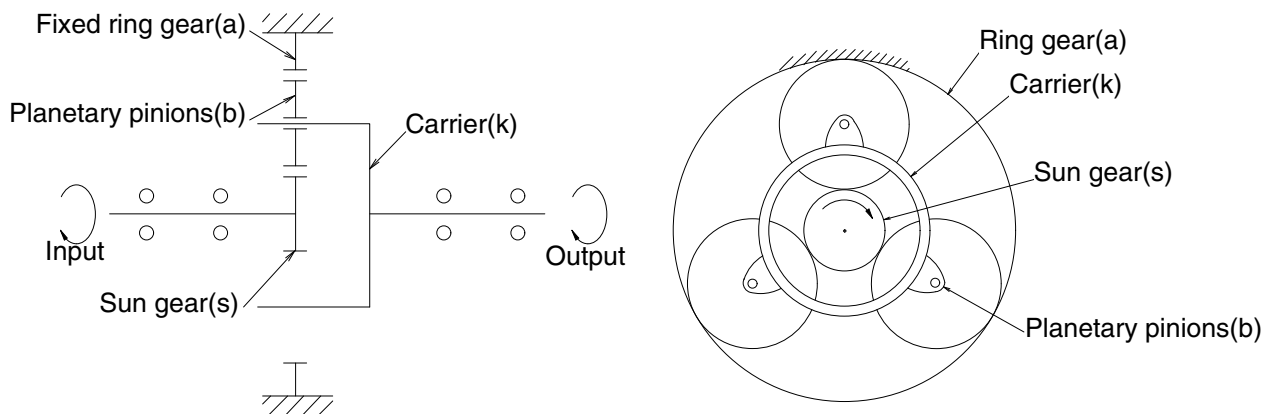


29072TM10

29072TM11

When the sun gear **S1** is driven by input shaft, planetary action occurs among gears **S1**, **a** and **b** and revolution of gear **b** transfers the rotation of carrier **K1** to second sun gear **S2**, and also evokes planetary action between gear **S2**, **a** and **d**.

This time, because carrier **K2** is fixed to frame, gear **d** drives ring gear **a** and then ring gear **a** rotates to drive sprocket.

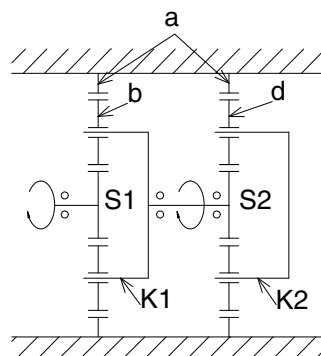





29072TM12

TRAVEL DEVICE (TYPE 2, HIGH WALKER)

1. CONSTRUCTION

A Hydraulic motor includes followings.

- Part of rotary generating turning force
- Part of a valve of relief
- Part of Brake
- Part of a valve of counterbalance
- Part of flowing changeover
- Part of auto changeover

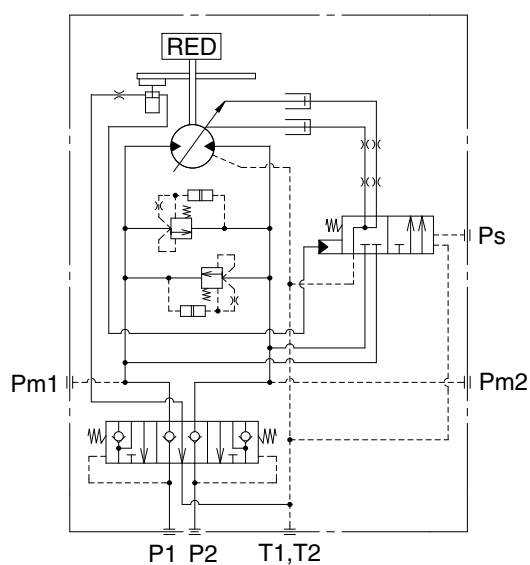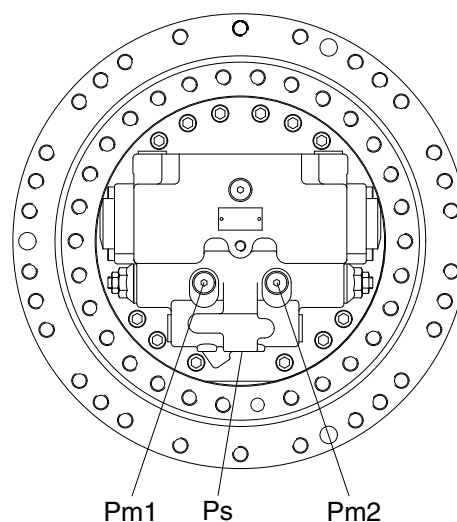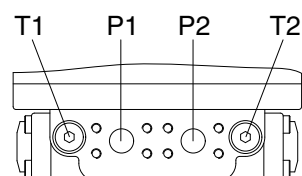
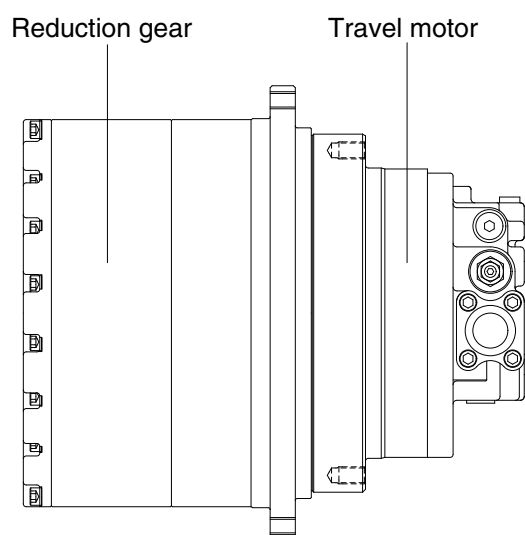


Hydraulic circuit

Port	Port name	Port size
P1, P2	Main port	SAE 4694psi 1"
Pm1, Pm2	Gauge port	PF 1/4
T1, T2	Drain port	PF 1/2
Ps	2 speed control port	PF 1/4

16092TM01

2. STRUCTURE

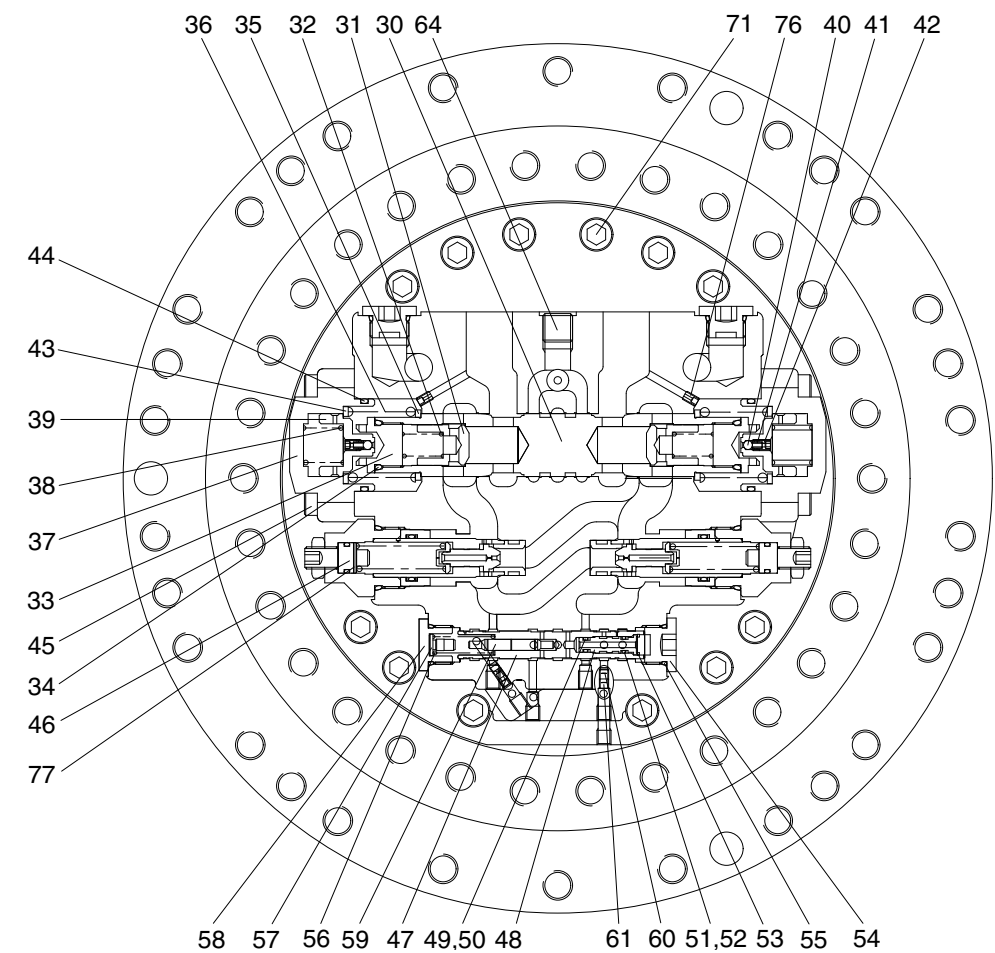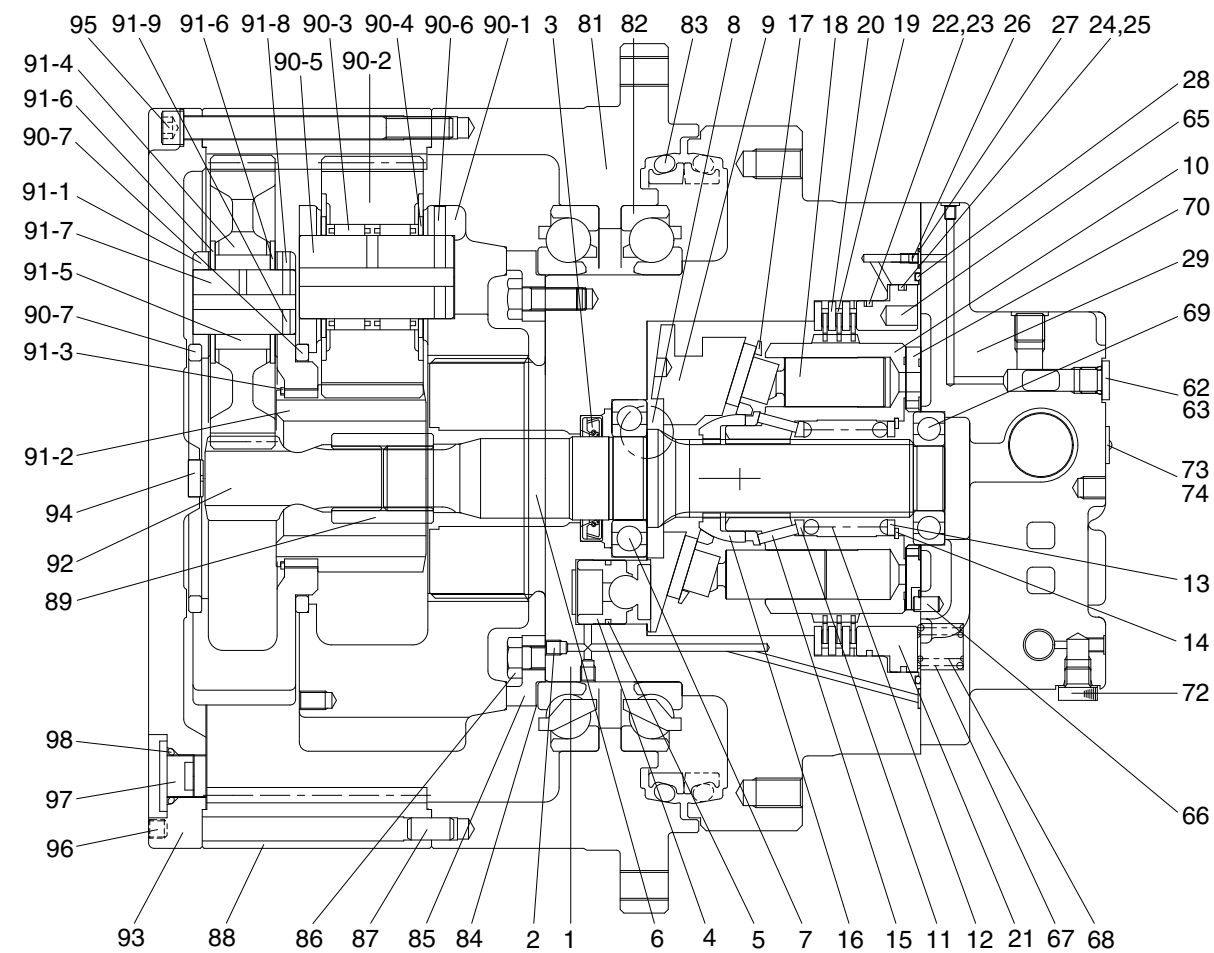

16092TM02

1	Shaft casing	20	Separate plate	39	Spool	58	Plug	77	Shim	91-1	Carrier No.1
2	Plug	21	Parking piston	40	Steel ball	59	Spool	81	Housing	91-2	Sun-gear No.2
3	Oil seal	22	O-ring	41	Spring	60	Orifice	82	Main bearing	91-3	Retaining ring
4	Swash piston	23	Back up ring	42	Plug	61	Orifice	83	Floating seal	91-4	Planetary gear No.1
5	Piston ring	24	O-ring	43	Spring seat	62	Plug	84	Shim	91-5	Needle bearing No.1
6	Shaft	25	Back up ring	44	O-ring	63	O-ring	85	Retainer	91-6	Thrust washer
7	Bearing	26	Orifice	45	Wrench bolt	64	Plug	86	Hex head bolt	91-7	Pin No.1
8	Steel ball	27	O-ring	46	Relief valve assy	65	Pin	87	Parallel pin	91-8	Spring pin
9	Swash plate	28	O-ring	47	Spool	66	Pin	88	Ring gear	91-9	Spring pin
10	Cylinder block	29	Rear cover	48	Guide	67	Spring	89	Coupling	92	Sun gear No.1
11	Spring seat	30	Spool	49	O-ring	68	Spring	90	Carrier assy No.2	93	Cover
12	Spring	31	Check	50	Back up ring	69	Bearing	90-1	Carrier No.2	94	Pad
13	End plate	32	Spring	51	O-ring	70	Valve plate	90-2	Planetary gear No.2	95	Hex socket head bolt
14	Snap ring	33	Plug	52	Back up ring	71	Wrench bolt	90-3	Needle bearing No.2	96	Hex socket Screw
15	Pin	34	O-ring	53	Snap ring	72	Plug	90-4	Thrust washer	97	Hydraulic plug
16	Ball guide	35	Spring seat	54	plug	73	Name plate	90-5	Pin No.2	98	O-ring
17	Set plate	36	Spring	55	O-ring	74	Rivet	90-6	Spring pin	99	Name plate
18	Piston assy	37	Cover	56	Spring	75	Seal kit	90-7	Thrust ring		
19	Friction plate	38	Spring	57	Spring seat	76	Orifice	91	Carrier assy No.1		

3. OPERATION

1) Generating the turning force

The high hydraulic supplied from a hydraulic pump flows into a cylinder block (10) through rear cover (29) of motor, and valve plate (70).

The high hydraulic is built as flowing on one side of Y-Y line connected by the upper and lower sides of piston assy (18).



The high hydraulic can generate the force, $F1 = P \times A$ (P : supplied pressure, A : water pressure area), like following pictures, working on a piston.

This force, $F1$, is divided as $N1$ thrust partial pressure and $W1$ radial partial pressure, in case of the plate (09) of a tilt angle, α .

$W1$ generates torque, $T = W1 \times R1$, for Y-Y line connected by the upper and lower sides of piston as following pictures.

The sum of torque ($\sum W1 \times R1$), generated from each piston (4~5 pieces) on the side of a high hydraulic, generates the turning force.

This torque transfers the turning force to a cylinder block (10) through a piston; because a cylinder block is combined with a turning axis and spline, a turning axis rotates and a turning force is sent.

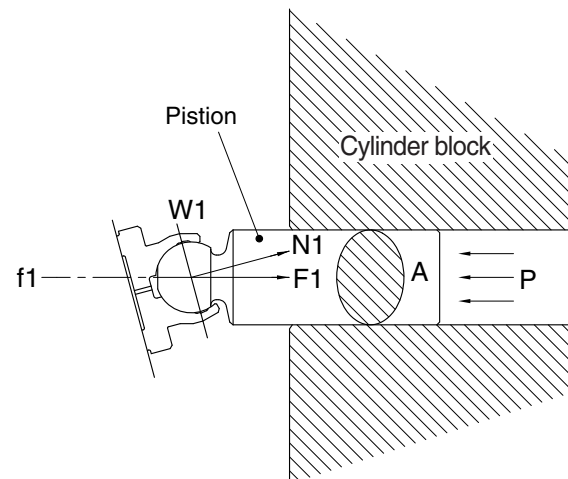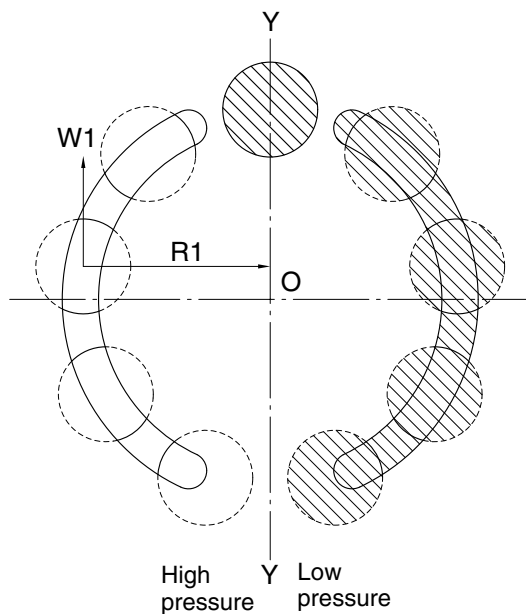


21078TM05

2) Working of relief valve

Relief valve carries on two functions of followings.

- (1) It standardizes a pressure in case of driving a hydraulic motor ; bypasses and extra oil in a motor inlet related to acceleration of an inertia to an outlet.
- (2) In case of an inertia stopped, it forces an equipment stopped, according to generating the pressure of a brake on the projected side.

Room A is always connected with port A of a motor. If the pressure of port is increased, press poppet A. And if it is higher than the setting pressure of a spring, the oil of an hydraulic flows from room A to port B, because poppet A is detached from the contact surface of seat A.

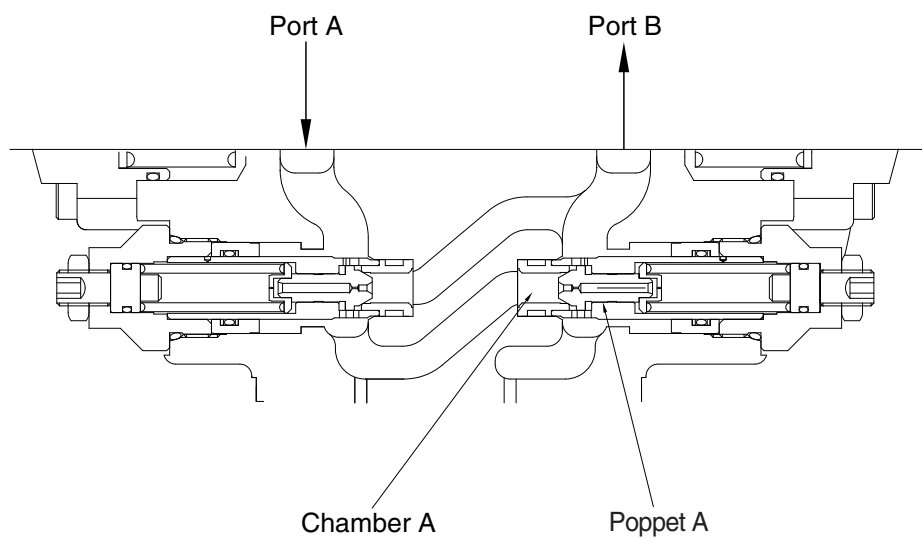

21078TM06A

3) Working of negative brake


When the operating pressure is supplied to the brake piston (21) through the spool (simultaneous peripheral operation online) built in the shaft casing (1), the negative brake is released.

When the pressure does not work, the brake always runs.

The force of a brake is generated by the frictional force among a separate plate (20) fixed by shaft casing, parking piston (21) and a frictional plate (19) connected through spline outside a cylinder block (10).

When a pressure does not work on the part of piston, brake spring presses brake piston; oil in a brake room flows into the drain of a motor through an orifice; in that time, brake piston compresses a frictional plate and a detached plate in the middle of shaft casing (1) and brake piston (21) according to the force that presses 10 pieces of brake springs (67, 68); finally, it makes a frictional force.

This frictional force helps the brake fixing a turning shaft (6) connected by a cylinder and spline operated.

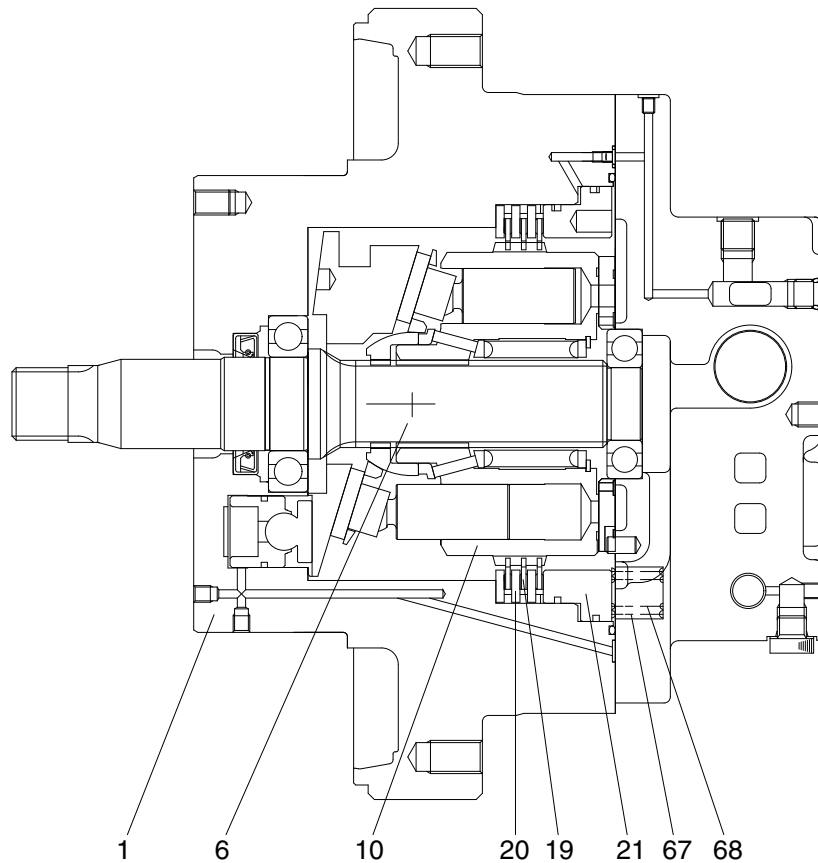


21092TM07

4) Counterbalance valve

Av port is connected to a hydraulic pump; Bv port is connected to a tank.

An oil supplied from a hydraulic pump presses check valve and flows into L port. It makes a hydraulic motor circulated. The oil pressure out of a pump is increased and transferred to spring room M through the path G because negative brake is working on. When the pressure of room M exceeds the force of spring that keeps spool at its neutral position, the spool begins to move the right side.


An oil in room N is sent to room M by orifice I and discharged from G line to a tank. Then the spool moves to the right and the oil flows from K to Bv.

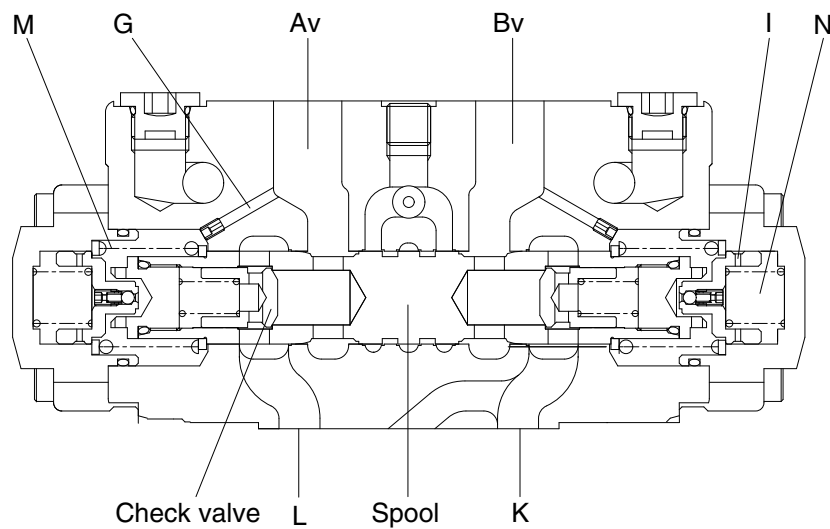

21078TM08

5) Working description of automatic switch (at normal speed)

Due to no pressure on pilot now, spool (47) is not working.

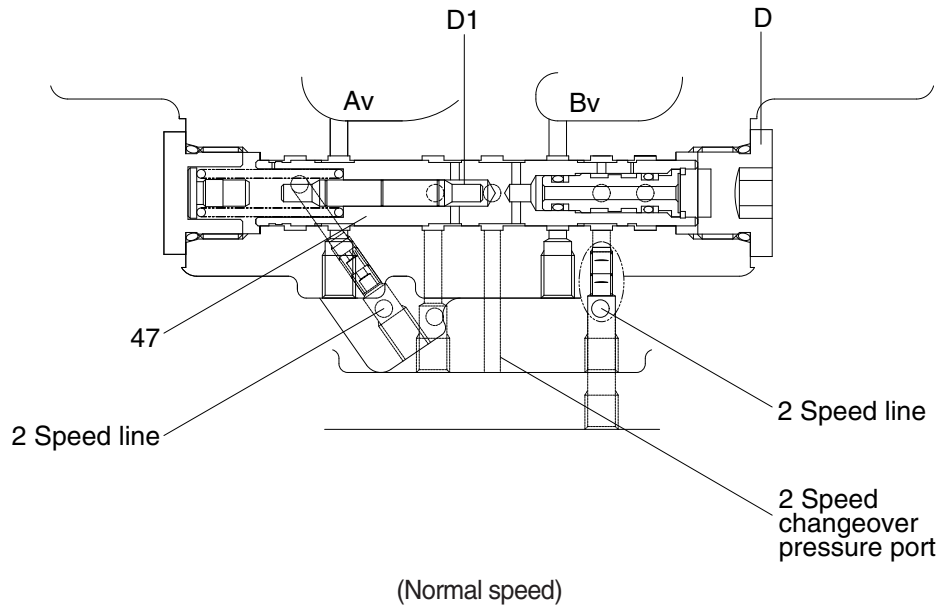


21078TM09

6) Working description of automatic switch (at high speed)

At normal speed, once the hydraulic oil which is through the inner path of spool (47) flows into high speed switching pressure port (the pressure of external pilot : $P_i = 35 \text{ kgf/cm}^2$) spool (47) moves from right to left.

At high speed, turning pressure of motor (D1) is over 250 kgf/cm^2 , when the power forcing to spool (59) (pressure, P_1) is stronger than spool (47) and spool (59) is pushed out, after then spool (47) moves from left to right. So it is switched.

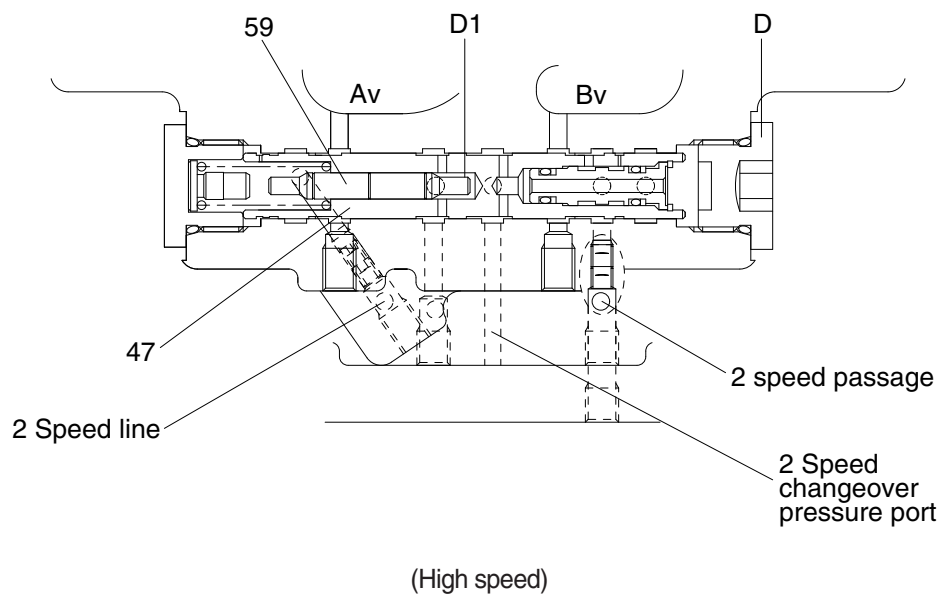

21078TM10



GROUP 5 RCV LEVER

1. STRUCTURE

The casing has the oil inlet port P (primary pressure) and the oil outlet port T (tank). In addition the secondary pressure is taken out through ports 1, 2, 3 and 4 provided at the bottom face.

※ Refer to the parts manual for the types of the RCV lever.

1) TYPE M1, M10

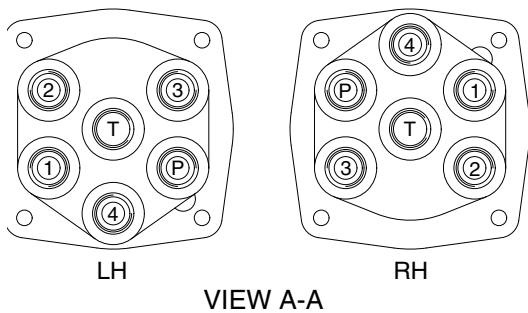
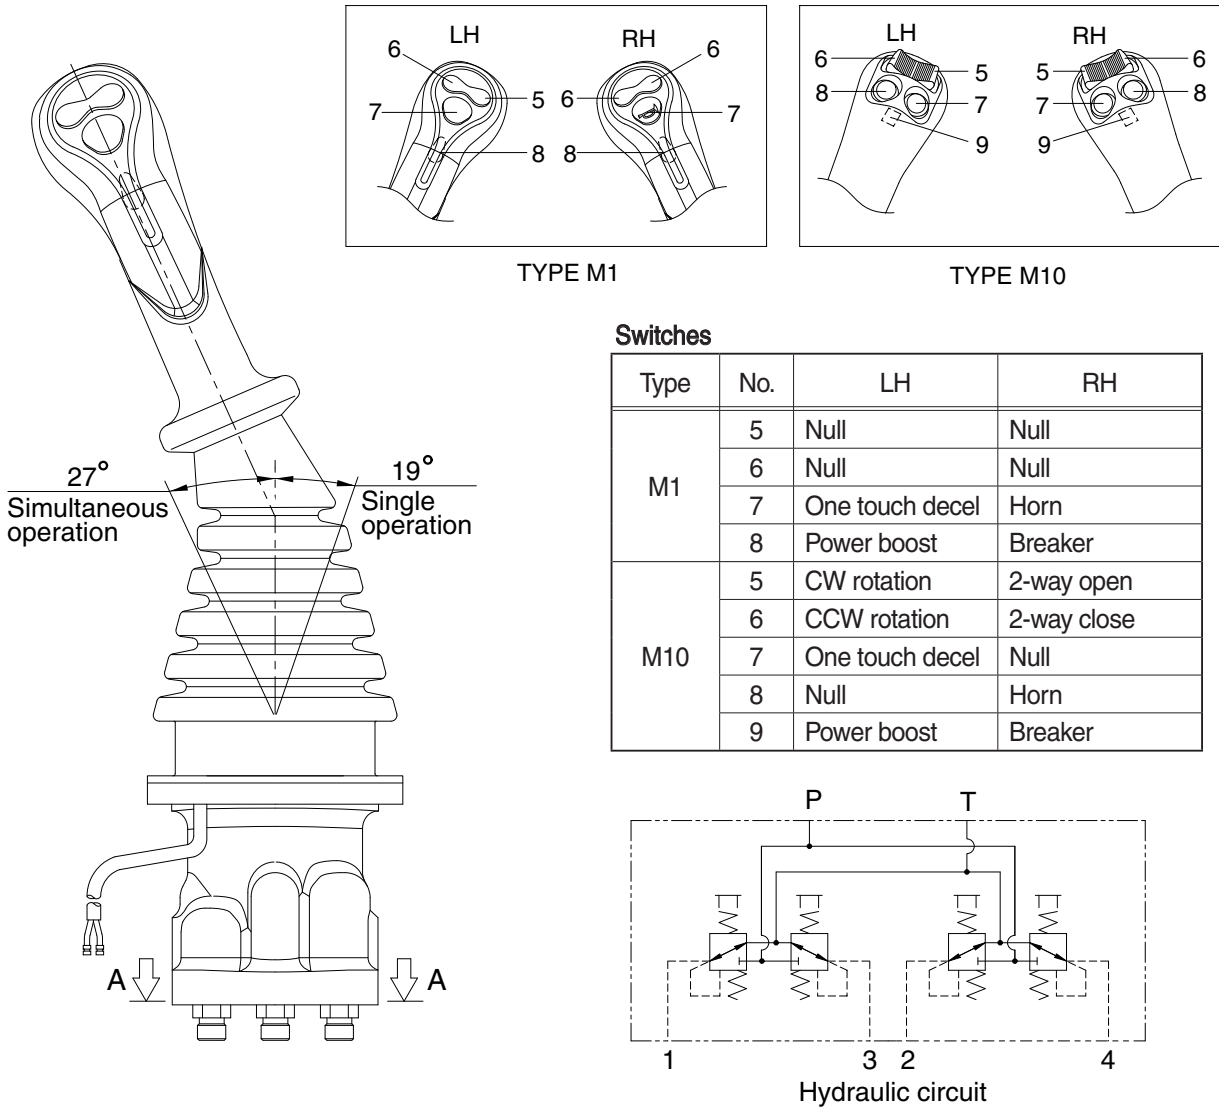


Pilot ports


Port	LH	RH	Port size
P	Pilot oil inlet port	Pilot oil inlet port	PF 3/8
T	Pilot oil return port	Pilot oil return port	
1	Left swing port	Bucket out port	
2	Arm out port	Boom up port	
3	Right swing port	Bucket in port	
4	Arm in port	Boom down port	

160A2RL01

2) TYPE M11, M12

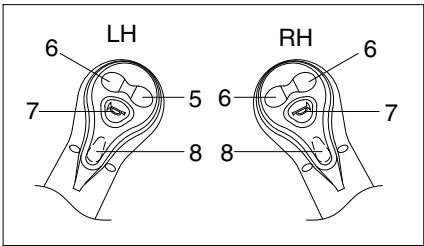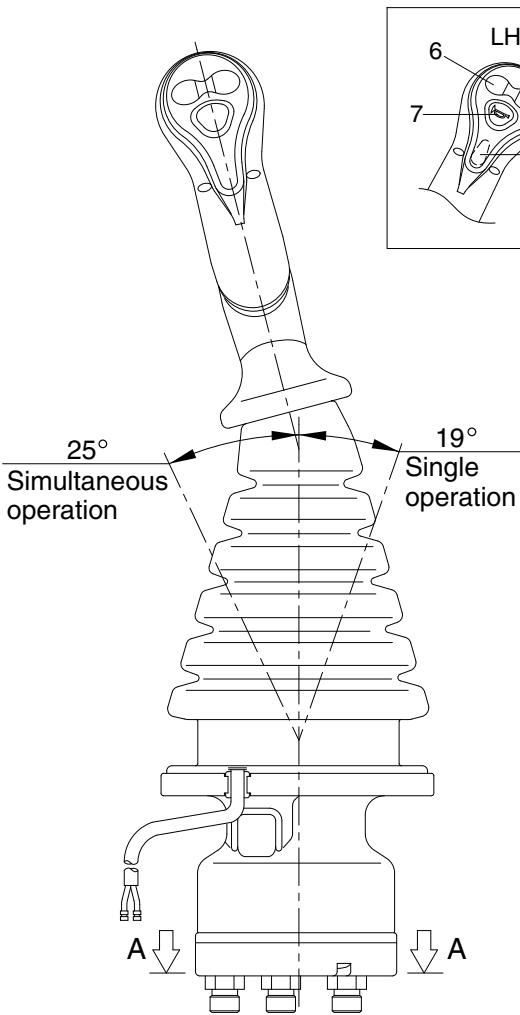


TYPE M12

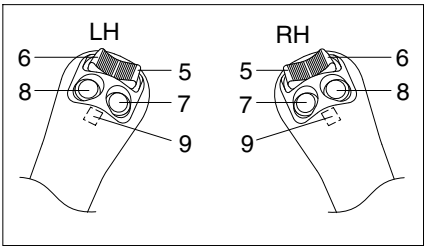


TYPE M11

Switches

Type	No.	LH	RH
M12	5	Null	Null
	6	Null	Null
	7	One touch decel	Horn
	8	Power boost	Breaker
M11	5	CW rotation	2-way open
	6	CCW rotation	2-way close
	7	One touch decel	Null
	8	Null	Horn
	9	Power boost	Breaker

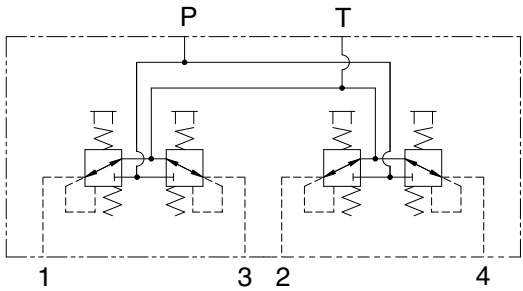

Hydraulic circuit

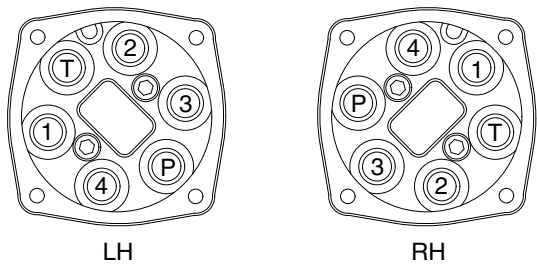


VIEW A-A

Pilot ports

Port	LH	RH	Port size
P	Pilot oil inlet port	Pilot oil inlet port	PF 3/8
T	Pilot oil return port	Pilot oil return port	
1	Left swing port	Bucket out port	
2	Arm out port	Boom up port	
3	Right swing port	Bucket in port	
4	Arm in port	Boom down port	

160A2RL05

3) CROSS SECTION

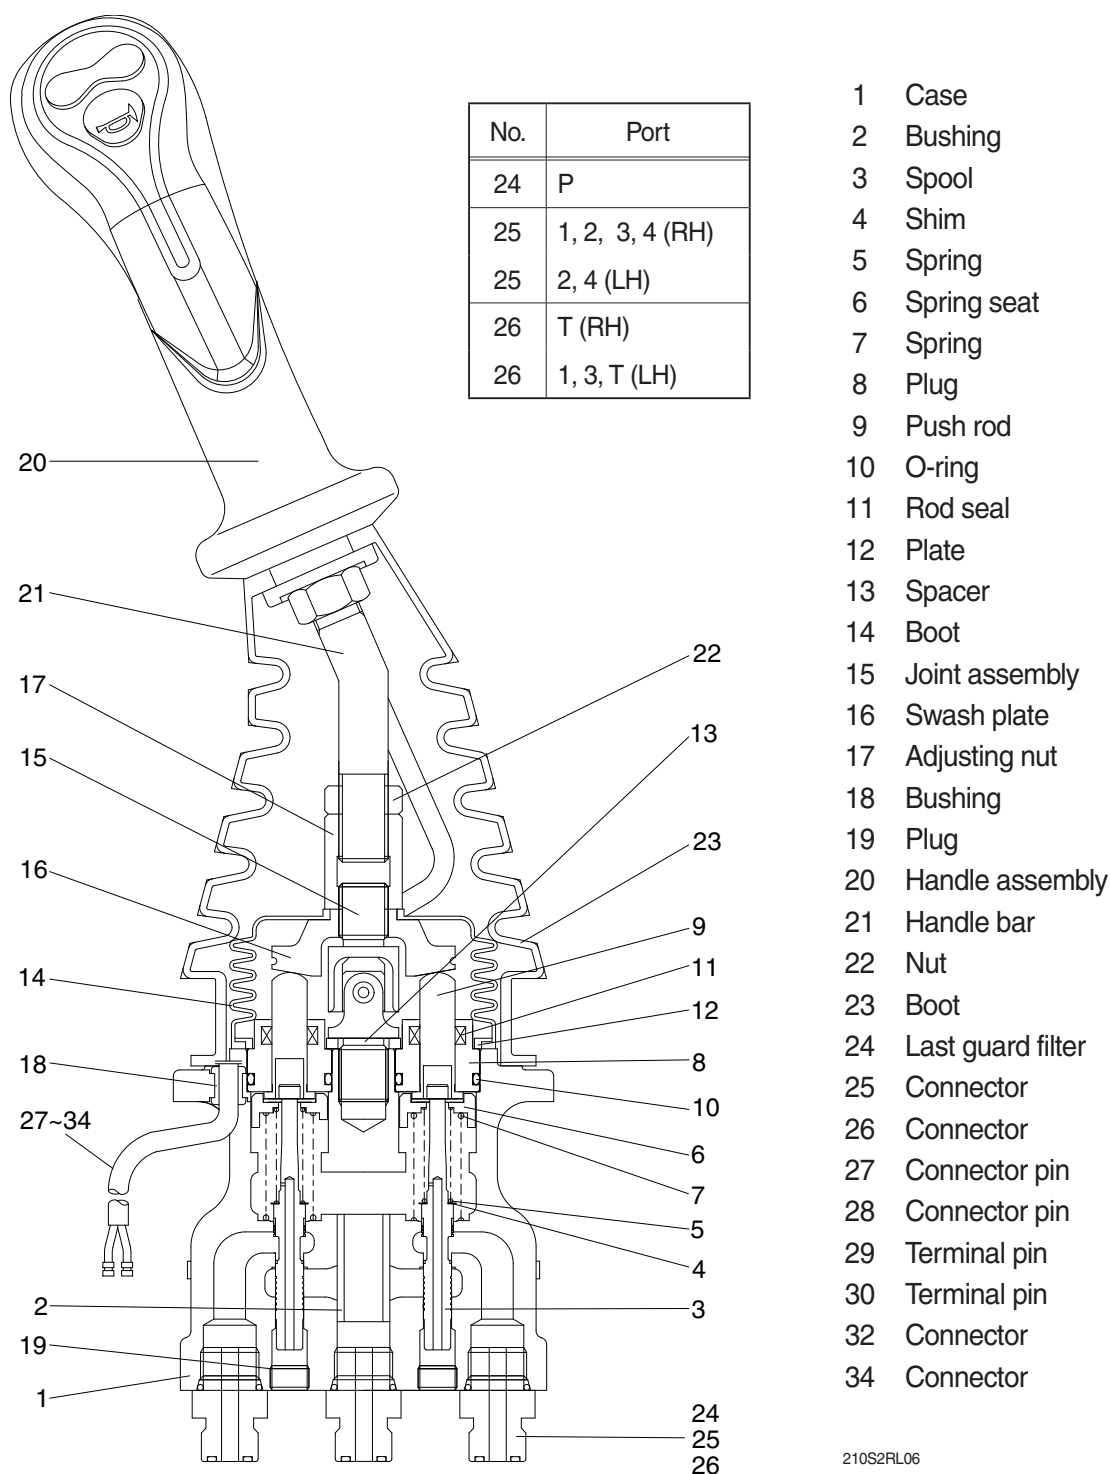

210S2RL06

Item numbers are based on the type M1.

The construction of the pilot valve is shown in the attached cross section drawing. The casing has vertical holes in which reducing valves are assembled.

The pressure reducing section is composed of the spool (3), spring (5) for setting secondary pressure, return spring (7), spring seat (6) and shim (4). The spring for setting the secondary pressure has been generally so preset that the secondary pressure is 5 to 20.5 kgf/cm² (depending on the type). The spool is pushed against the push rod (9) by the return spring.

When the push rod is pushed down by tilting the handle, the spring seat comes down simultaneously and changes setting of the secondary pressure spring.

2. FUNCTIONS

1) FUNDAMENTAL FUNCTIONS

The pilot valve is a valve that controls the spool stroke, direction, etc of a main control valve. This function is carried out by providing the spring at one end of the main control valve spool and applying the output pressure (secondary pressure) of the pilot valve to the other end.

For this function to be carried out satisfactorily, the pilot valve is composed of the following elements.

- (1) Inlet port (P) where oil is supplied from hydraulic pump.
- (2) Output ports (1, 2, 3 & 4) to apply pressure supplied from inlet port to ends of control valve spools.
- (3) Tank port (T) necessary to control the above output pressure.
- (4) Spool to connect output port to inlet port or tank port.
- (5) Mechanical means to control output pressure, including springs that work on the above spools.

2) FUNCTIONS OF MAJOR SECTIONS

Item numbers are based on the type M1.

The functions of the spool (3) are to receive the supply oil pressure from the hydraulic pump at its port P, and to change over oil paths to determine whether the pressure oil of port P is led to output ports 1, 2, 3 & 4 or the output port pressure oil to tank port T.

The spring (5) works on this spool to determine the output pressure.

The change the deflection of this spring, the push rod (9) is inserted and can slide in the plug (8).

For the purpose of changing the displacement of the push rod through the swash plate (16) and adjusting nut (17) are provided the handle assy (20) that can be tilted in any direction around the fulcrum of the universal joint (15) center.


The spring (7) works on the case (1) and spring seat (6) and tries to return the push rod (9) to the zero-displacement position irrespective of the output pressure, securing its resetting to the center position.

This also has the effect of a reaction spring to give appropriate control feeling to the operator.

3) OPERATION

The operation of the pilot valve will be described on the basis of the hydraulic circuit diagram shown below and the attached operation explanation drawing.

The diagram shown below is the typical application example of the pilot valve.

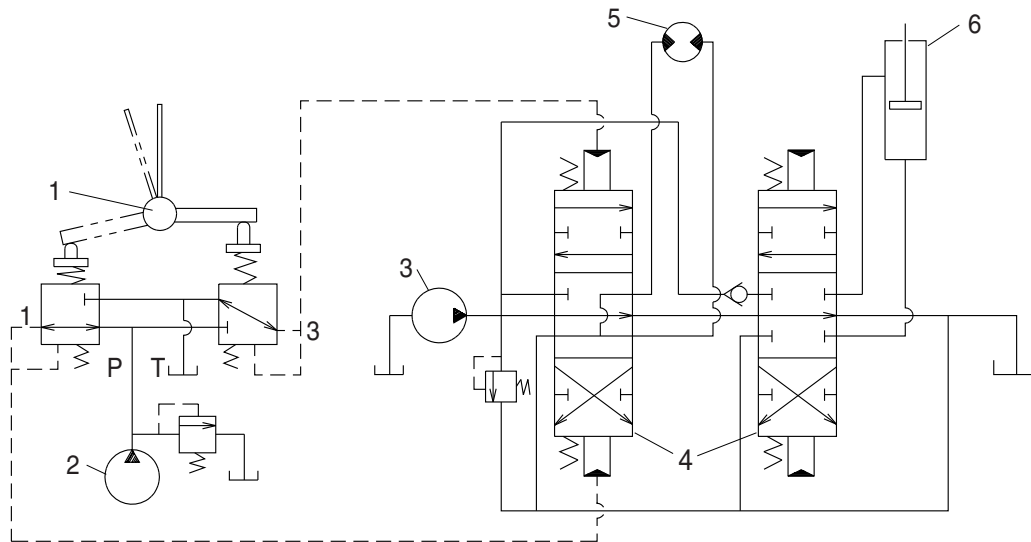


2-70

- 1 Pilot valve
- 2 Pilot pump

- 3 Main pump
- 4 Main control valve

- 5 Hydraulic motor
- 6 Hydraulic cylinder


(1) Case where handle is in neutral position

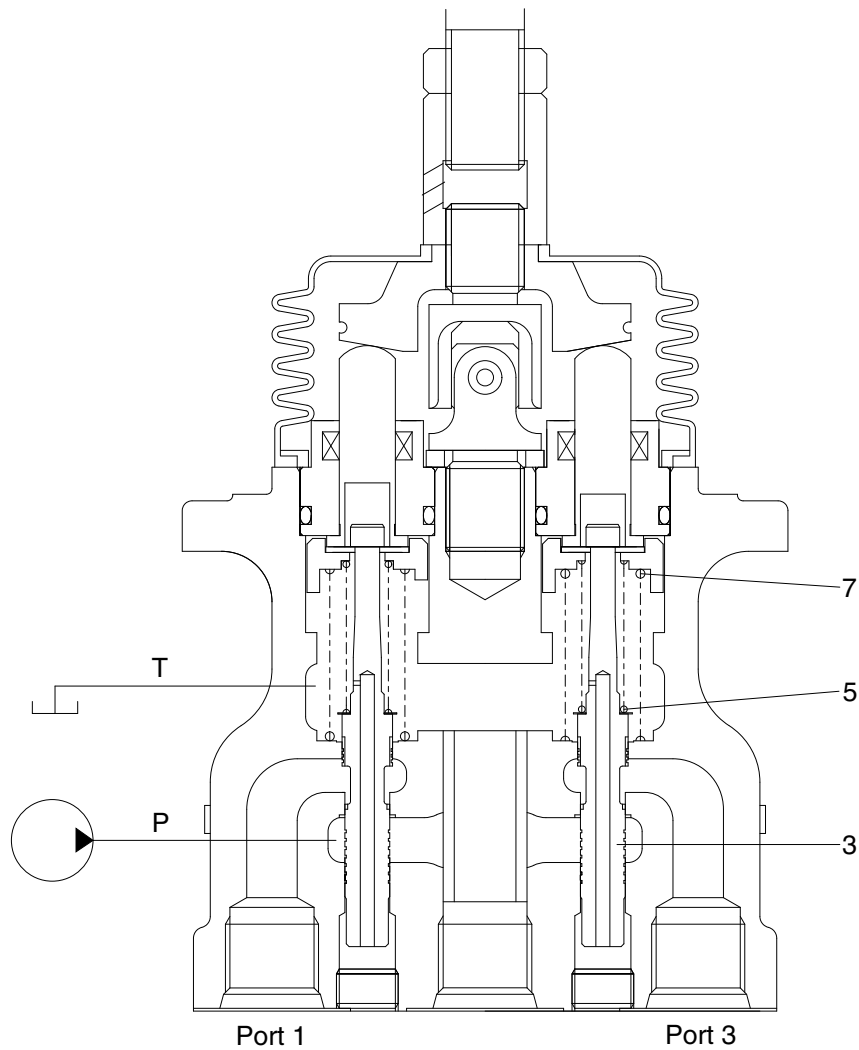

300L2RL03

The force of the spring (5) that determines the output pressure of the pilot valve is not applied to the spool (3). Therefore, the spool is pushed up by the spring (7) to the position of port (1, 3) in the operation explanation drawing. Then, since the output port is connected to tank port T only, the output port pressure becomes equal to tank pressure.

(2) Case where handle is tilted

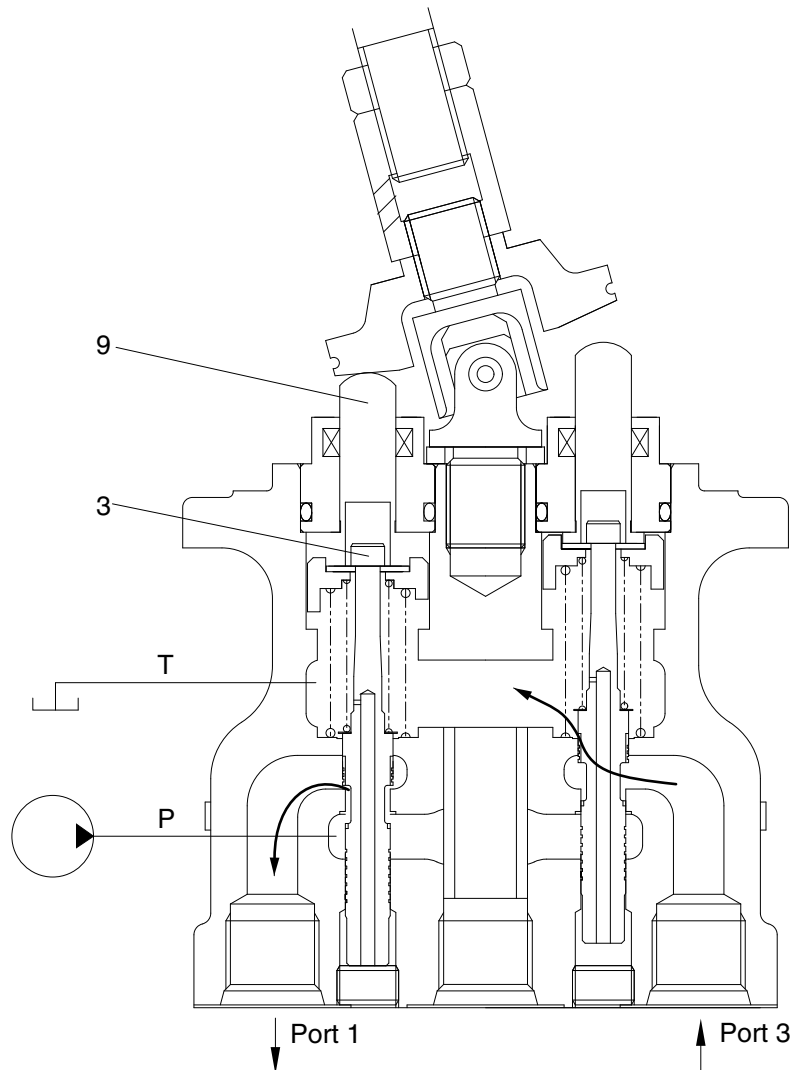

300L2RL04

When the push rod (9) is stroked, the spool (3) moves downwards.

Then port P is connected with port (1) and the oil supplied from the pilot pump flows through port (1) to generate the pressure.

When the pressure at port (1) increases to the value corresponding to the spring force set by tilting the handle, the hydraulic pressure force balances with the spring force. If the pressure at port (1) increases higher than the set pressure, port P is disconnected from port (1) and port T is connected with port (1). If it decreases lower than the set pressure, port P is connected with port (1) and port T is disconnected from port 1.


In this manner the secondary pressure is kept at the constant value.

Besides, in some type, when the handle is tilted more than a certain angle, the upper end of the spool contacts with the inside bottom of the push rod and the output pressure is left to be connected with port P.

GROUP 6 RCV PEDAL

1. STRUCTURE

The casing (spacer) has the oil inlet port P (primary pressure), and the oil outlet port T (tank). In addition the secondary pressure is taken out through ports 1, 2, 3 and 4 provided at the bottom face.

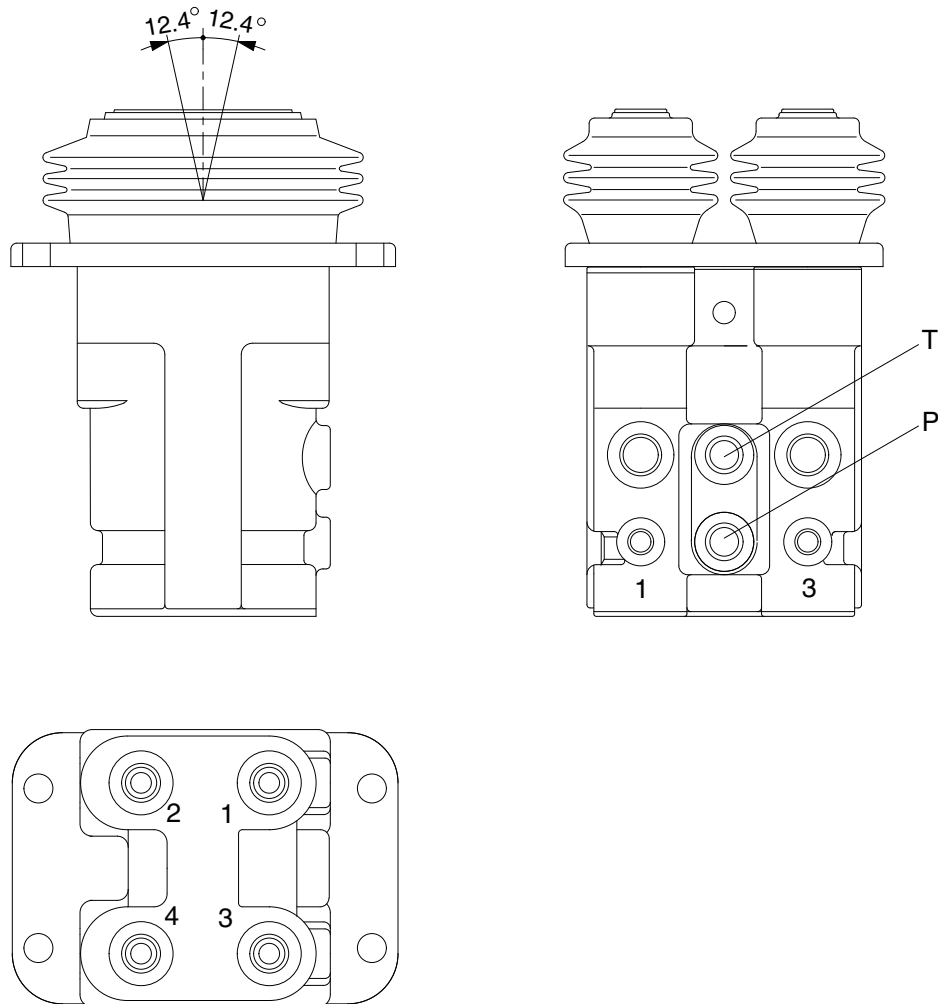

Hydraulic circuit

Port	Port	Port size
P	Pilot oil inlet port	PF 1/4
T	Pilot oil return port	
1	Travel (LH, Forward)	
2	Travel (LH, Backward)	
3	Travel (RH, Forward)	
4	Travel (RH, Backward)	


480A2RP01

CROSS SECTION

The construction of the RCV pedal is shown in the below drawing. The casing has vertical holes in which reducing valves are assembled.

The pressure reducing section is composed of the spool kit (7), spring (5) for setting secondary pressure, return spring (9), stopper (8), and spring seat (6). The spring for setting the secondary pressure has been generally so preset that the secondary pressure is 6.3 ± 1 to 24.9 ± 1.5 kgf/cm² (depending on the type). The spool is pushed against the push rod (13) by the return spring.

When the push rod is pushed down by tilting pedal, the spring seat comes down simultaneously and changes setting of the secondary pressure spring.

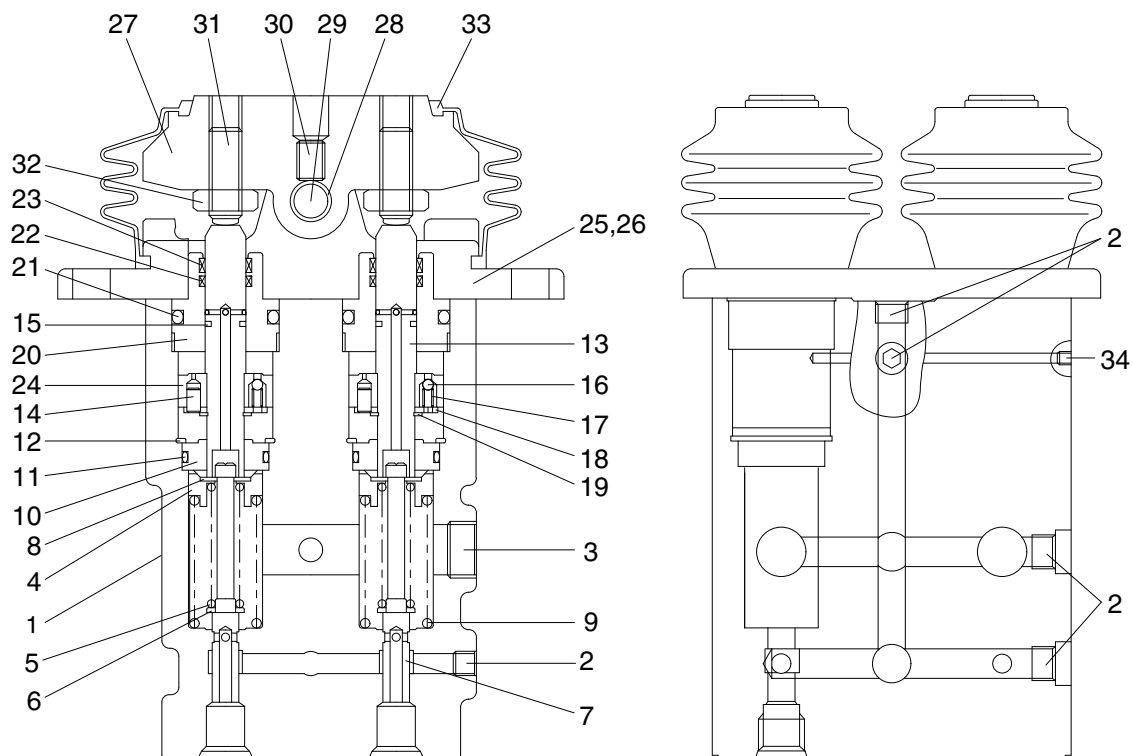

480A2RP02

1 Body	13 Push rod	25 Cover
2 Plug	14 Spring pin	26 Socket bolt
3 Plug	15 Seal	27 Cam
4 Spring seat	16 Steel ball	28 Bushing
5 Spring	17 Spring	29 Cam shaft
6 Spring seat	18 Plate	30 Set screw
7 Spool kit	19 Snap ring	31 Set screw
8 Stopper	20 Plug	32 Hex nut
9 Spring	21 O-ring	33 Bellows
10 Rod guide	22 Oil seal	34 Expand
11 O-ring	23 Dust seal	36 Cap
12 Snap ring	24 Piston	

2. FUNCTION

1) FUNDAMENTAL FUNCTIONS

The pilot valve is a valve controls the spool stroke, direction, etc of a main control valve. This function is carried out by providing the spring at one end of the main control valve spool and applying the output pressure (secondary pressure) of the pilot valve to the other end.

For this function to be carried out satisfactorily, the pilot valve is composed of the following elements.

- (1) Inlet port (P) where oil is supplied from hydraulic pump.
- (2) Output port (1, 2, 3 & 4) to apply pressure supplied from inlet port to ends of control valve spools.
- (3) Tank port (T) necessary to control the above output pressure.
- (4) Spool to connect output port to inlet port tank port.
- (5) Mechanical means to control output pressure, including springs that work on the above spools.

2) FUNCTIONS OF MAJOR SECTIONS

The functions of the spool (7) are to receive the supply oil pressure from the hydraulic pump at its port P, and to change over oil paths to determine whether the pressure oil of port P is led to output ports 1, 2, 3 & 4 or the output spool to determine the output pressure.

The spring (5) works on this spool to determine the output pressure.

The change the deflection of this spring, the push rod (13) is inserted and can slide in the plug (20). For the purpose of changing th displacement of the push rod through the cam (27) and adjusting nut (32) are provided the pedal that can be tilted in any direction around the fulcrum of the cam (27) center.


The spring (9) works on the body (1) and spring seat (6) and tries to return the push rod (13) to the zero-displacement position irrespective of the output pressure, securing its resetting to the center position.

This also has the effect of a reaction spring to give appropriate control feeling to the operator.

3) OPERATION

The operation of the pilot valve will be described on the basis of the hydraulic circuit diagram shown below and the attached operation explanation drawing.

The diagram shown below is the typical application example of the pilot valve.

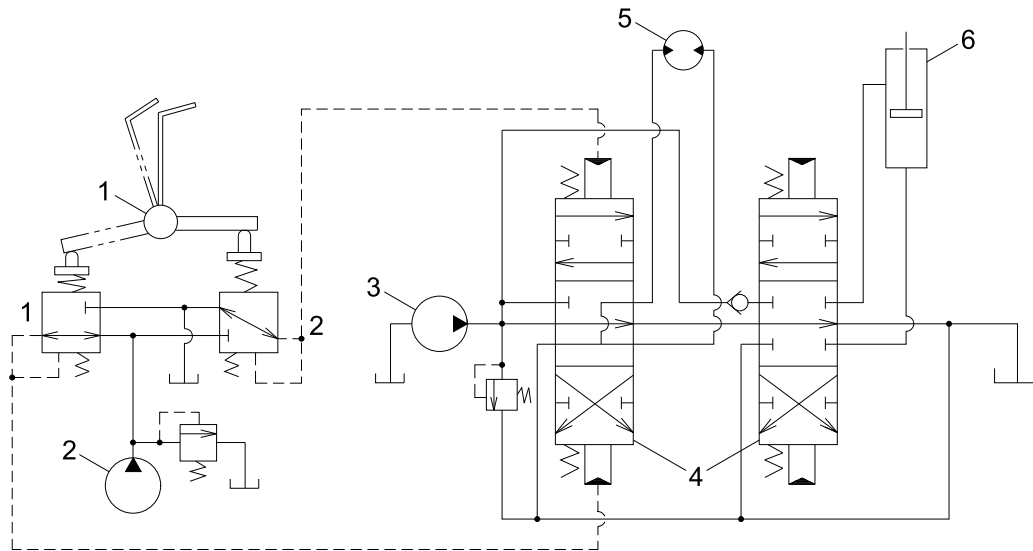


36072SF01

1 Pilot valve
2 Pilot pump

3 Main pump
4 Main control valve

5 Hydraulic motor
6 Hydraulic cylinder


(1) Case where pedal is in neutral position

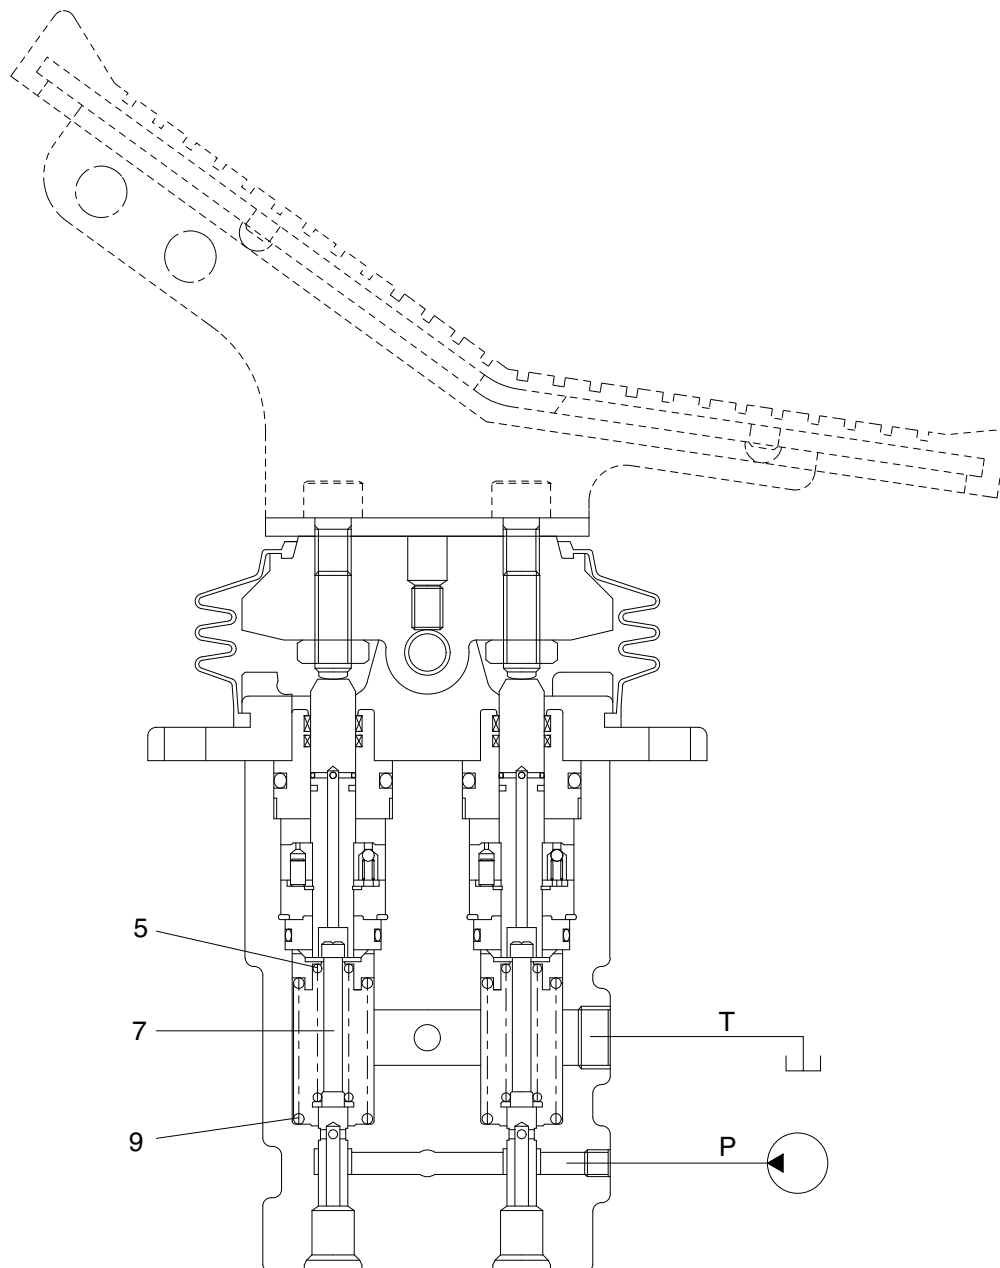

130ZF2RP03

The force of the spring (5) that determines the output pressure of the pilot valve is not applied to the spool kit (7). Therefore, the spool is pushed up by the spring (9) to the position of 1 and port 2. Then, since the output port is connected to tank port T only, the output port pressure becomes equal to tank pressure.

(2) Case where pedal is tilted

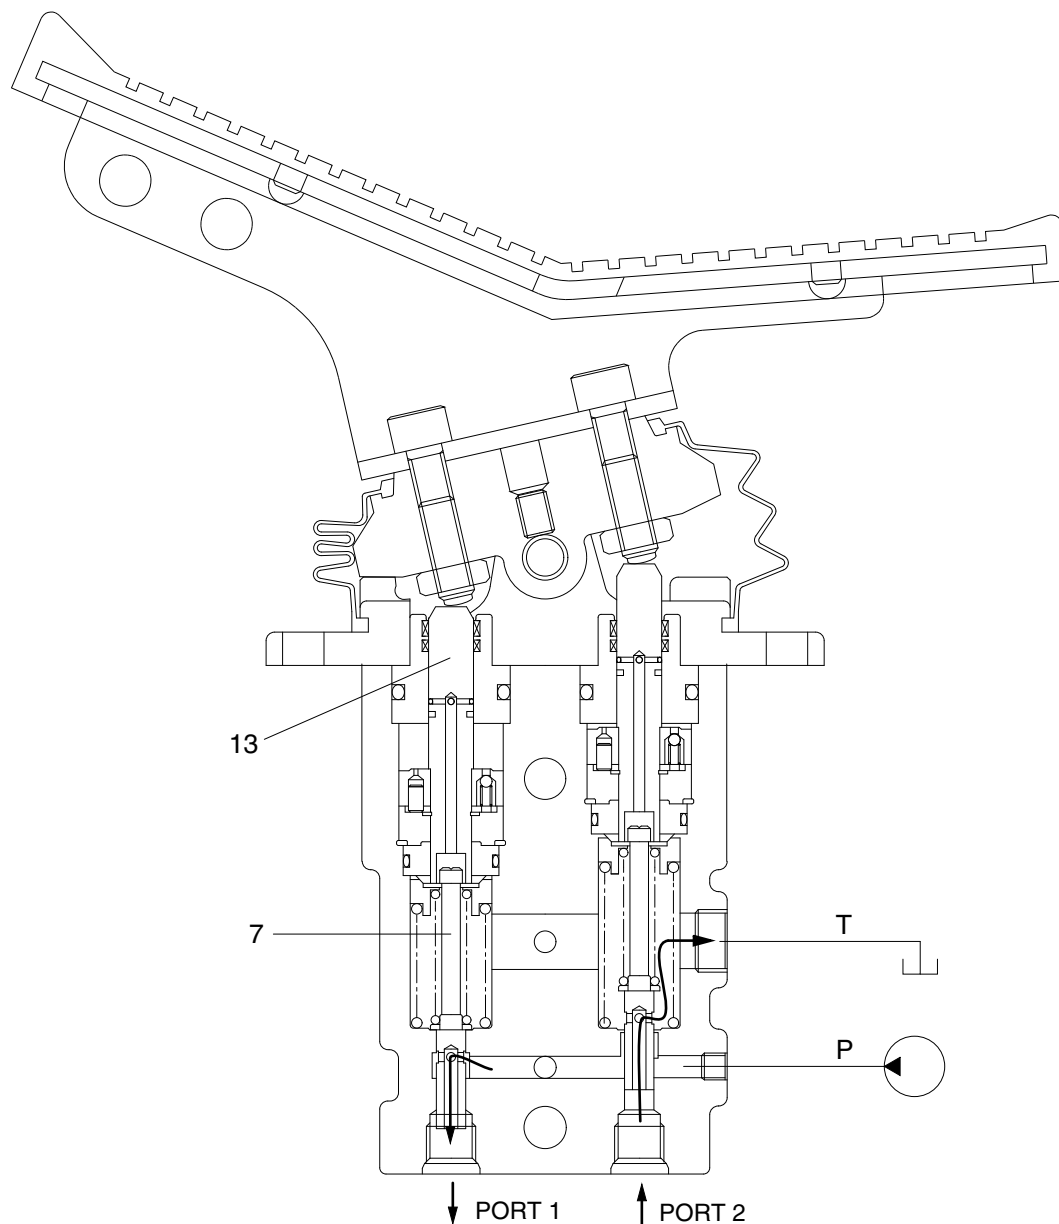

220F2RP04

When the push rod (13) is stroked, the spool kit (7) moves downwards.

Then port P is connected with port 1, and the oil supplied from the pilot pump flows through port 1 to generate the pressure.

When the pressure at port 1 increases to the value corresponding to the spring force set by tilting the handle, the hydraulic pressure force balances with the spring force. If the pressure at port 1 increases higher than the set pressure, port P is disconnected from port 1 and port T is connected with port 1. If it decreases lower than the set pressure, port P is connected with port 1 and port T is disconnected from port 1.

In this manner the secondary pressure is kept at the constant value.


Besides, in some type, when the handle is tilted more than a certain angle, the upper end of the spool contacts with inside bottom of the push rod and the output pressure is left to be connected with port P.

SECTION 3 HYDRAULIC SYSTEM



















Group 1	Hydraulic Circuit	3-1
Group 2	Main Circuit	3-3
Group 3	Pilot Circuit	3-6
Group 4	Single Operation	3-16
Group 5	Combined Operation	3-28

GROUP 1 HYDRAULIC CIRCUIT

1. HYDRAULIC CIRCUIT (1/2)

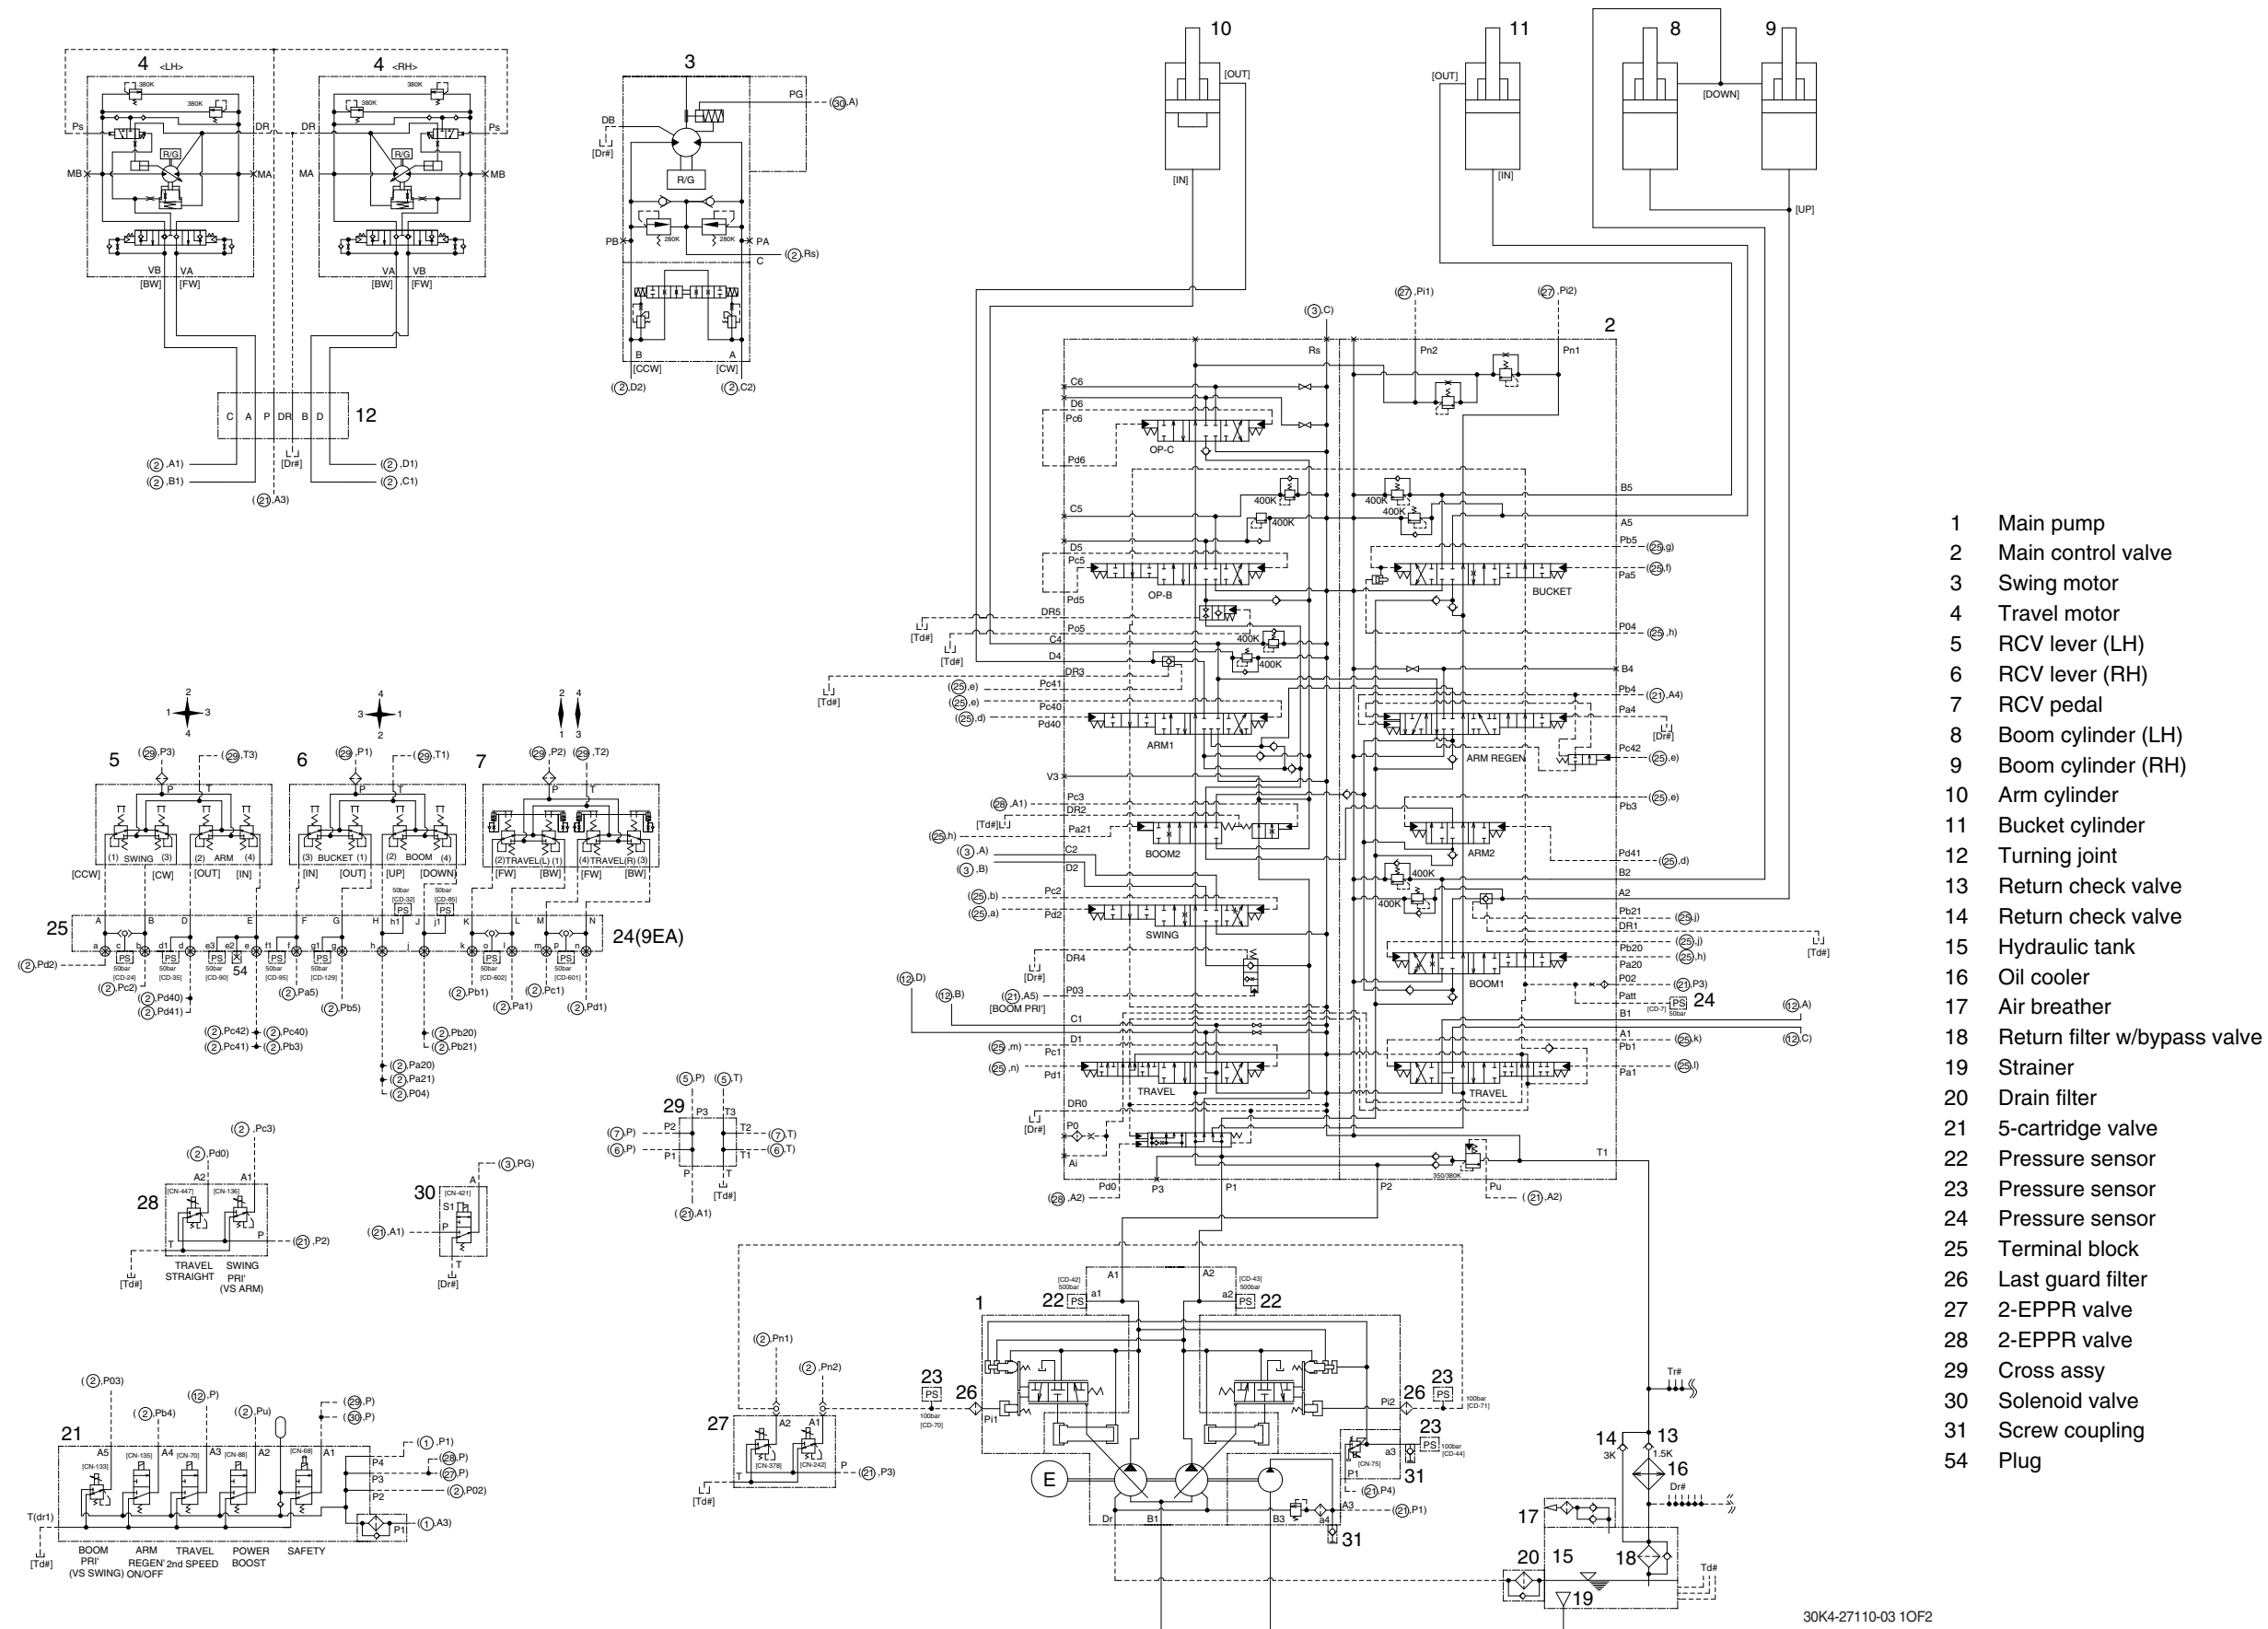

2. HYDRAULIC CIRCUIT (2/2)

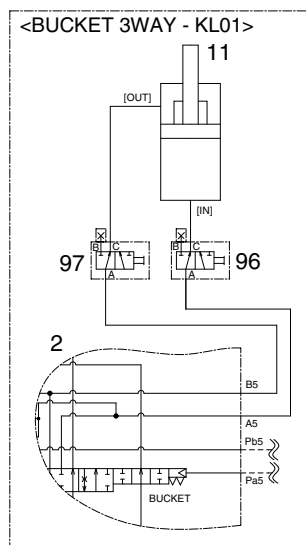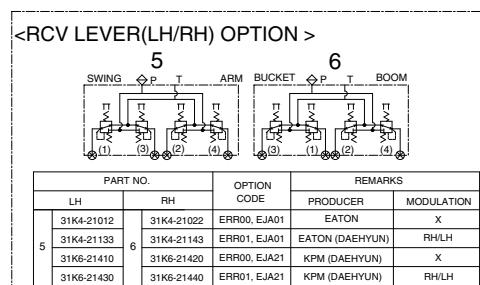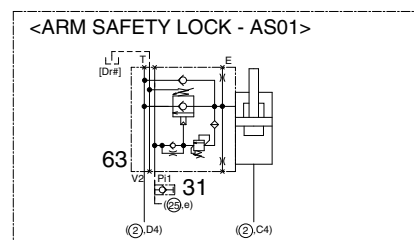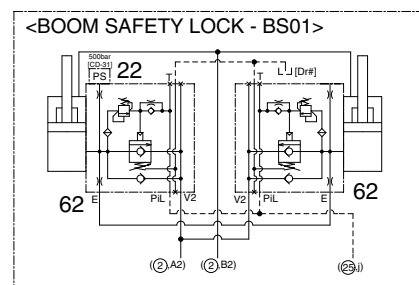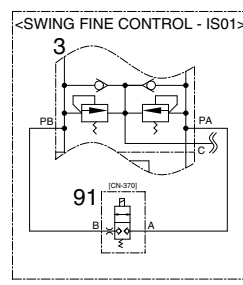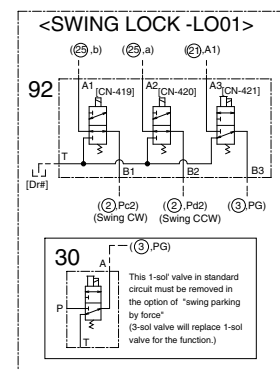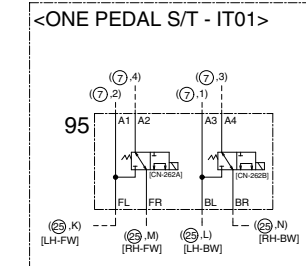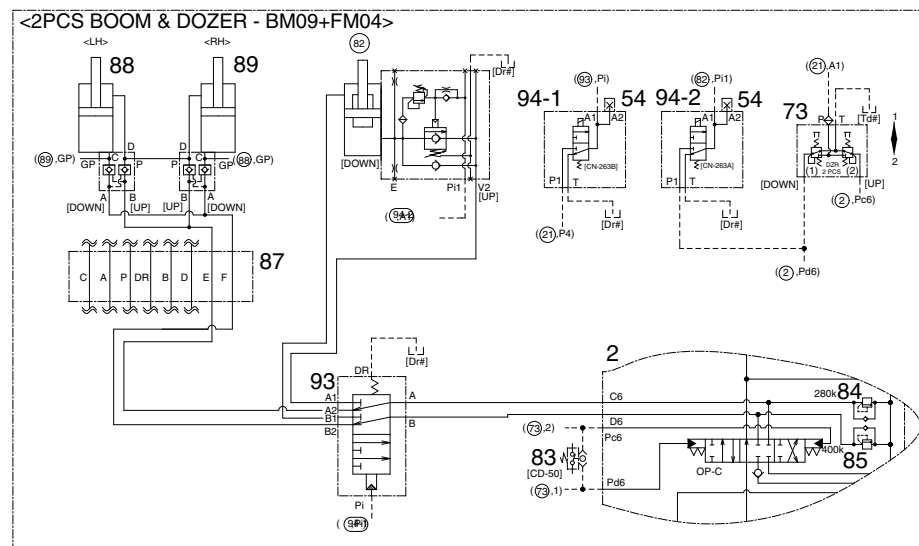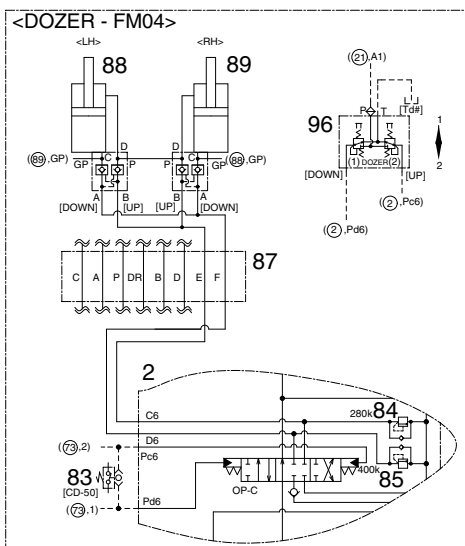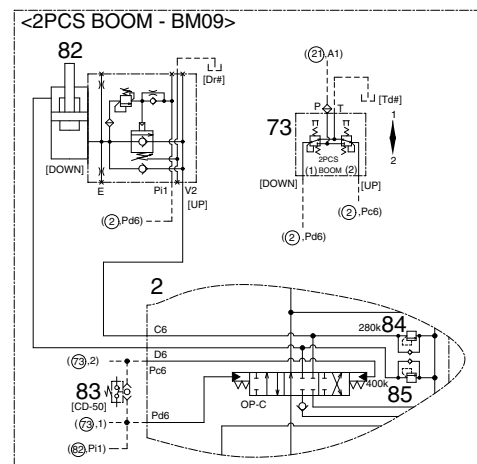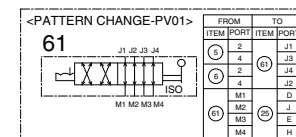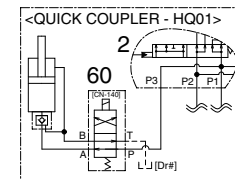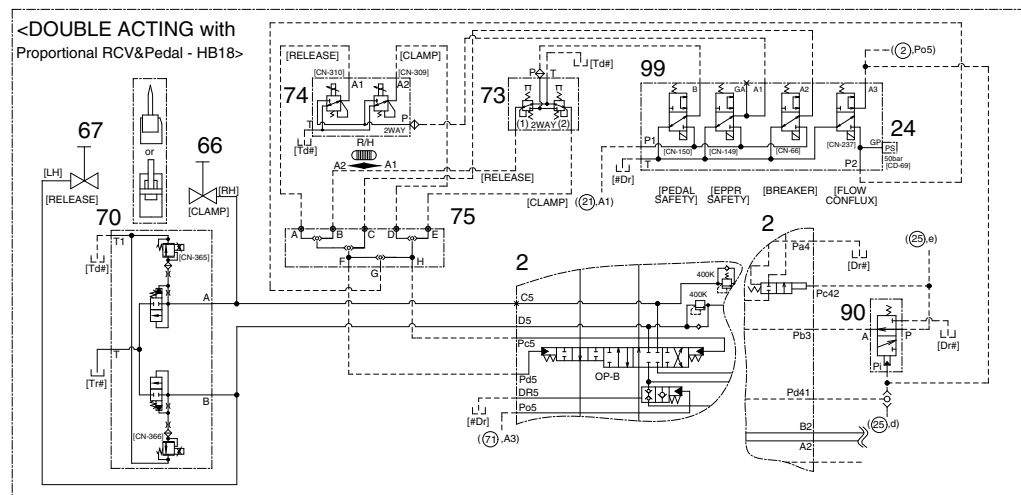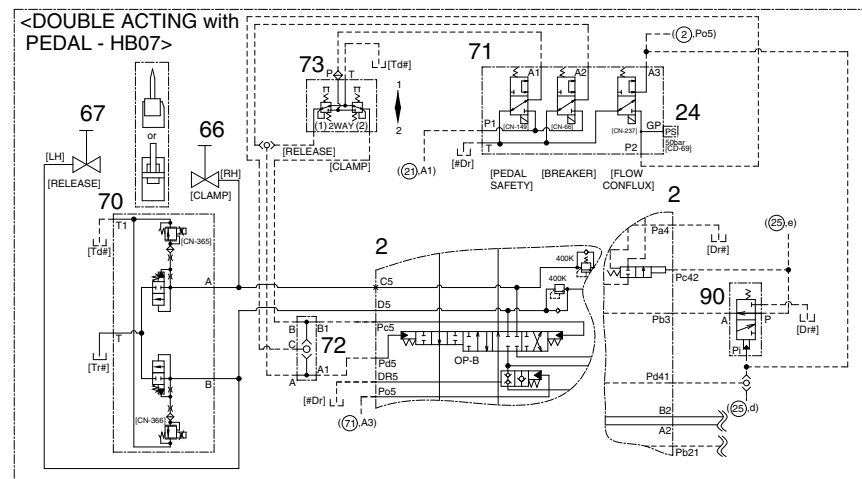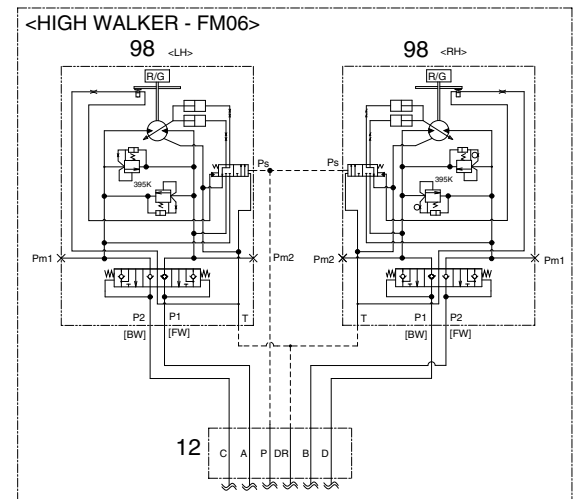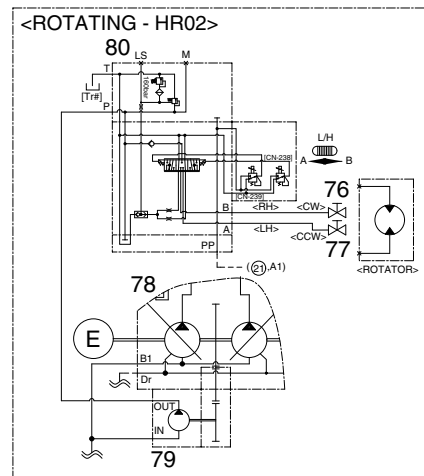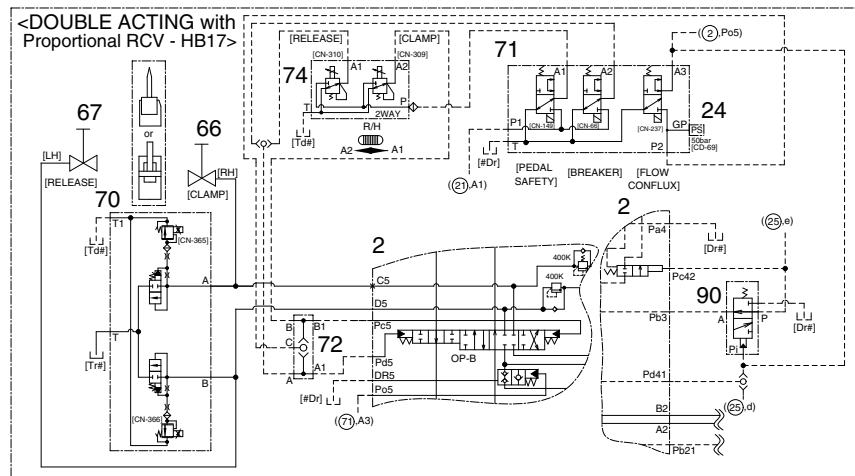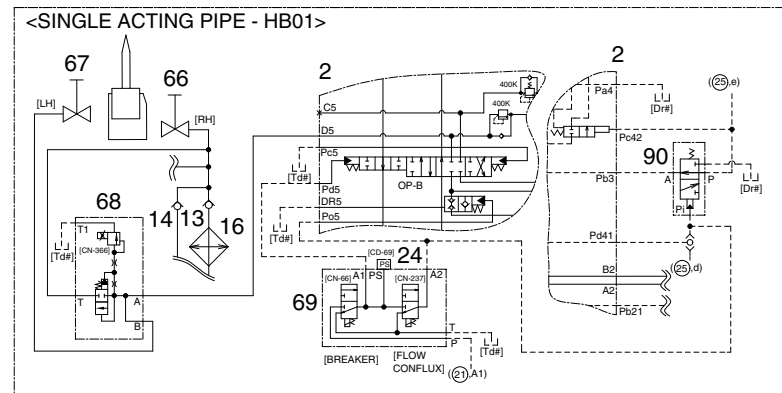

- 2 Main control valve
- 3 Swing motor
- 5 RCV lever-LH
- 6 RCV lever-RH
- 11 Bucket cylinder
- 12 Turning joint
- 13 Check valve
- 14 Check valve
- 16 Oil cooler
- 22 Pressure sensor
- 24 Pressure sensor
- 26 Last guard filter
- 31 Screw coupling
- 60 Solenoid valve (option)
- 61 Pattern change valve (option)
- 62 Boom cylinder-safety, LH (option)
- 63 Boom cylinder-safety, RH (option)
- 66 Stop valve (option)
- 67 Stop valve (option)
- 68 Proportional relief valve (option)
- 69 Solenoid valve (option)
- 71 Solenoid valve (option)
- 72 Shuttle valve (option)
- 73 2-way pedal (option)
- 74 EPPR valve (option)
- 75 Terminal block (option)
- 78 Main pump (option)
- 79 Gear pump (option)
- 80 Proportional valve (option)
- 82 Adjust cylinder (option)
- 83 Pressure switch (option)
- 84 Port relief valve (option)
- 85 Port relief valve (option)
- 87 Turning joint (option)
- 88 Dozer cylinder-LH (option)
- 89 Dozer cylinder-RH (option)
- 90 Pilot selector valve (option)
- 91 Solenoid valve (option)
- 92 3-solenoid valve (option)
- 93 Selector valve (option)
- 94 Solenoid valve (option)
- 95 Solenoid valve (option)
- 96 3-way valve (option)
- 97 3-way valve (option)
- 98 Dozer valve (option)
- 99 Solenoid valve (option)


GROUP 2 MAIN CIRCUIT

The main hydraulic circuit consists of suction circuit, delivery circuit, return circuit and drain circuit.

The hydraulic system consists of one main pump, one control valve, one swing motor, four cylinders and two travel motors.

The swash plate type variable displacement axial piston pump is used as the main pump and is driven by the engine at ratio 1.0 of engine speed.

1. SUCTION AND DELIVERY CIRCUIT

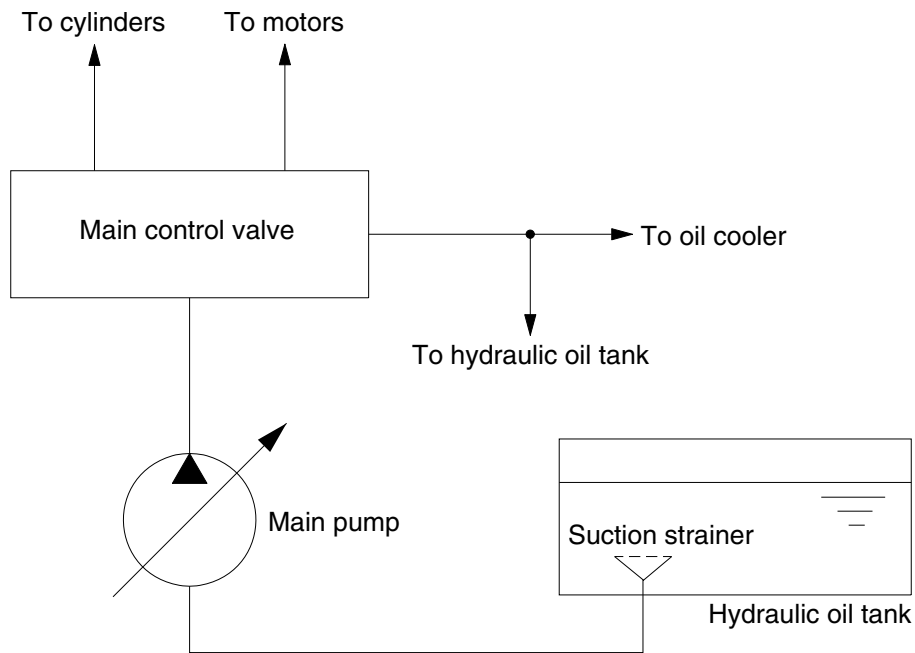

140L3C101

The pumps receive oil from the hydraulic tank through a suction strainer. The discharged oil from the pump flows into the control valve and goes out the tank ports.


The oil discharged from the main pump flows to the actuators through the main control valve.

The main control valve controls the hydraulic functions.

The return oil from the actuators flows to the hydraulic tank through the main control valve and the oil cooler.

※ The circuit diagram may differ from the equipment, so please check before a repair.

2. RETURN CIRCUIT

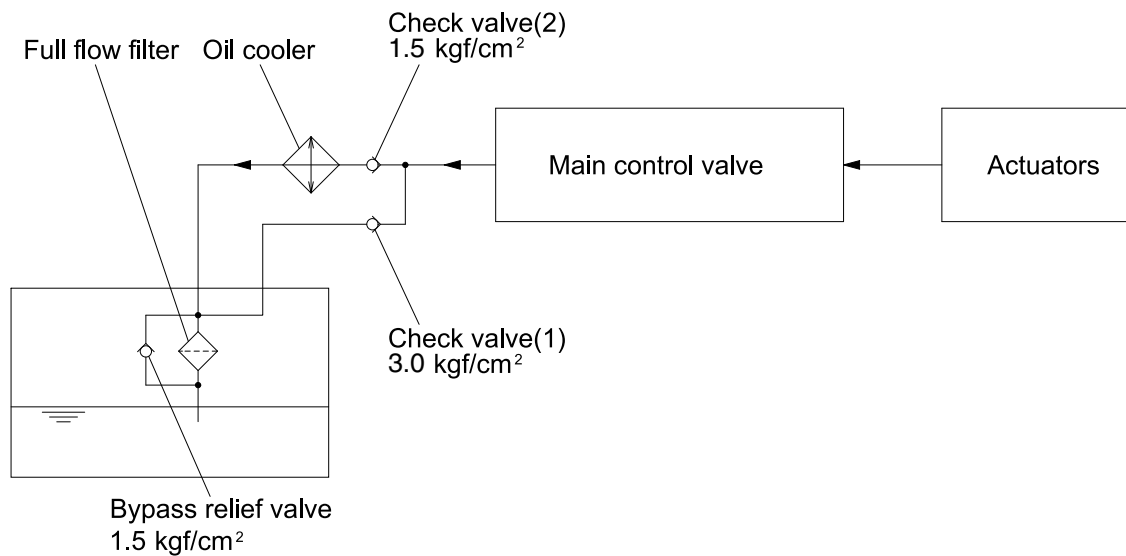

140A3CI02

All oil returned from each actuator returns to the hydraulic tank through the main control valve.

The bypass check valves are provided in the return circuit.

The setting pressure of bypass check valves are 1.5 kgf/cm^2 (21 psi) and 3.0 kgf/cm^2 (43 psi). Usually, oil returns to the hydraulic tank from the left side of control valve through oil cooler.

When oil temperature is low, viscosity becomes higher and flow resistance increases when passing through the oil cooler. When the oil pressure exceeds 3.0 kgf/cm^2 (43 psi), the oil returns directly to the hydraulic tank, resulting in the oil temperature being raised quickly at an appropriate level.

When the oil cooler is clogged, the oil returns directly to the hydraulic tank through bypass check valve (1).


The full-flow filter and bypass relief valve are provided in the hydraulic tank.

The oil returned from right and left side of control valve is combined and filtered by the full-flow filter. A bypass relief valve is provided in the full-flow filter.

When the filter element is clogged, the bypass relief valve opens at 1.5 kgf/cm^2 (21 psi) differential pressure.

※ The circuit diagram may differ from the equipment, so please check before a repair.

3. DRAIN CIRCUIT

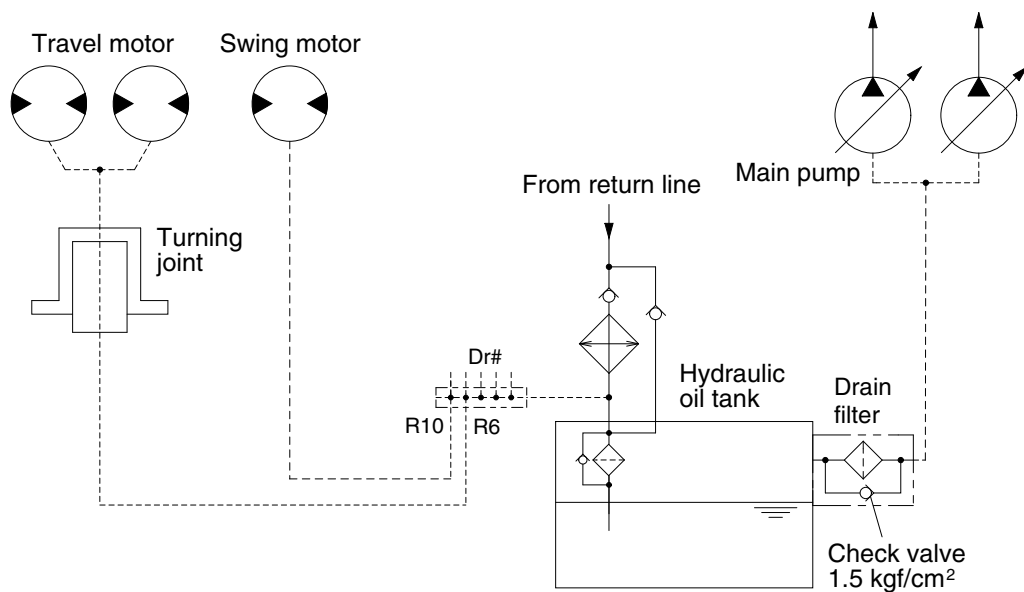

140A3CI03

Besides internal leaks from the motors and main pump, the oil for lubrication circulates. These oil have to be fed to the hydraulic tank passing through drain filter or return filter.

When the drain oil pressure exceed 1.5 kgf/cm² (21 psi), the oil returns to the hydraulic tank directly.

1) TRAVEL MOTOR DRAIN CIRCUIT

Oil leaked from the right and left travel motors comes out of the drain ports provided in the respective motor casing and join with each other. These oils pass through the turning joint and return to the hydraulic tank after being filtered by the return filter.

2) SWING MOTOR DRAIN CIRCUIT


Oil leaked from the swing motor returns to the hydraulic tank passing through the return filter.

3) MAIN PUMP DRAIN CIRCUIT

Oil leaked from main pump returns to the hydraulic tank passing through the drain filter.

※ The circuit diagram may differ from the equipment, so please check before a repair.

GROUP 3 PILOT CIRCUIT

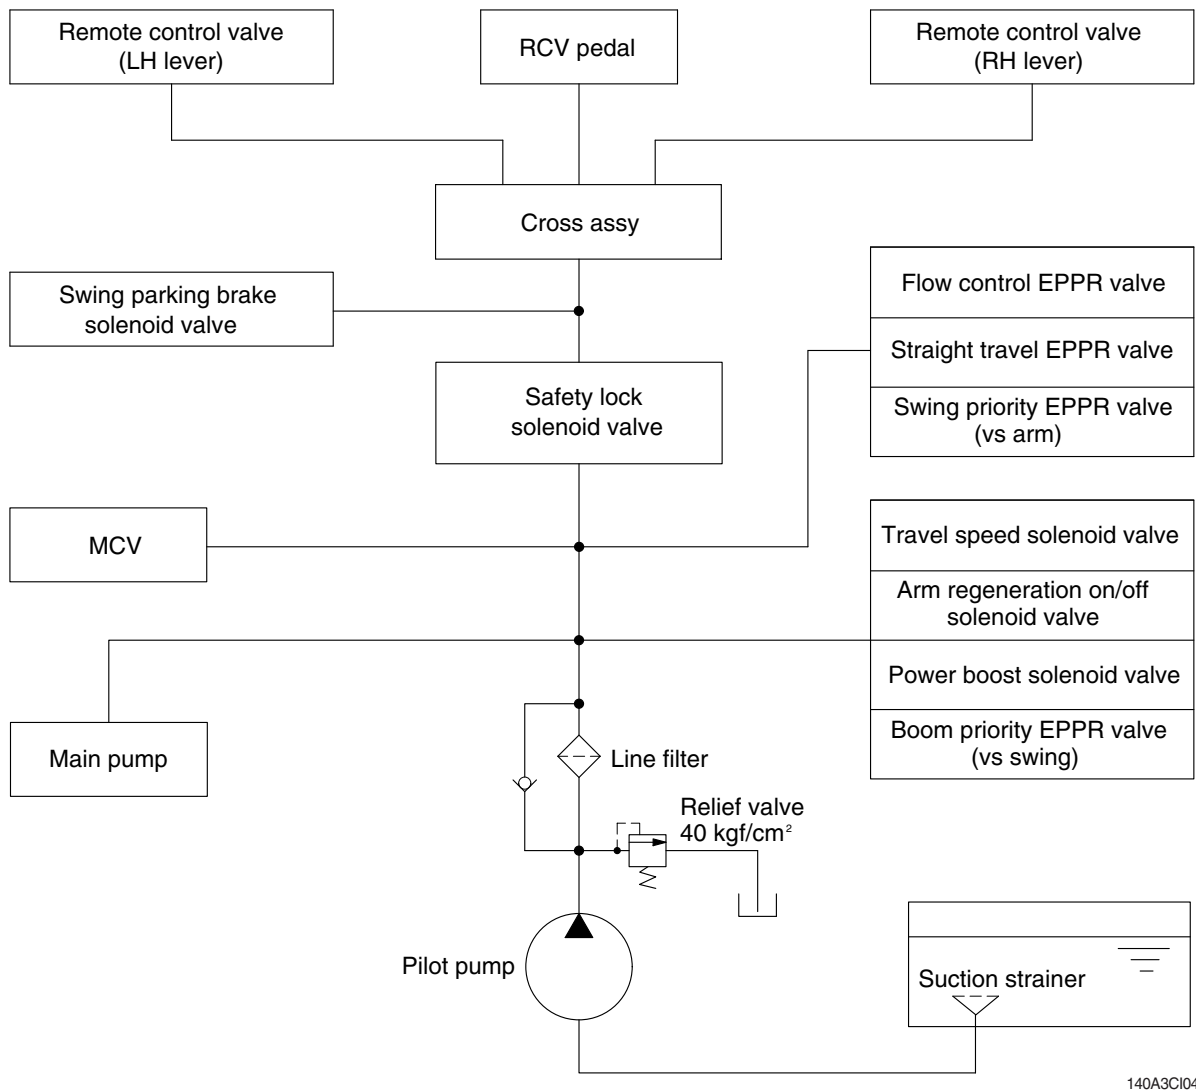

The pilot circuit consists of suction circuit, delivery circuit and return circuit.


The pilot pump is provided with relief valve, receives the oil from the hydraulic tank through the suction strainer.

The discharged oil from the pilot pump flows to the remote control valve through the cross assy, safety lock solenoid valve and line filter and swing parking solenoid valve through the safety lock solenoid valve and line filter.

Also, it flows to the EPPR valves, solenoid valves, main control valve and main pump through the line filter.

※ The circuit diagram may differ from the equipment, so please check before a repair.

1. SUCTION, DELIVERY AND RETURN CIRCUIT

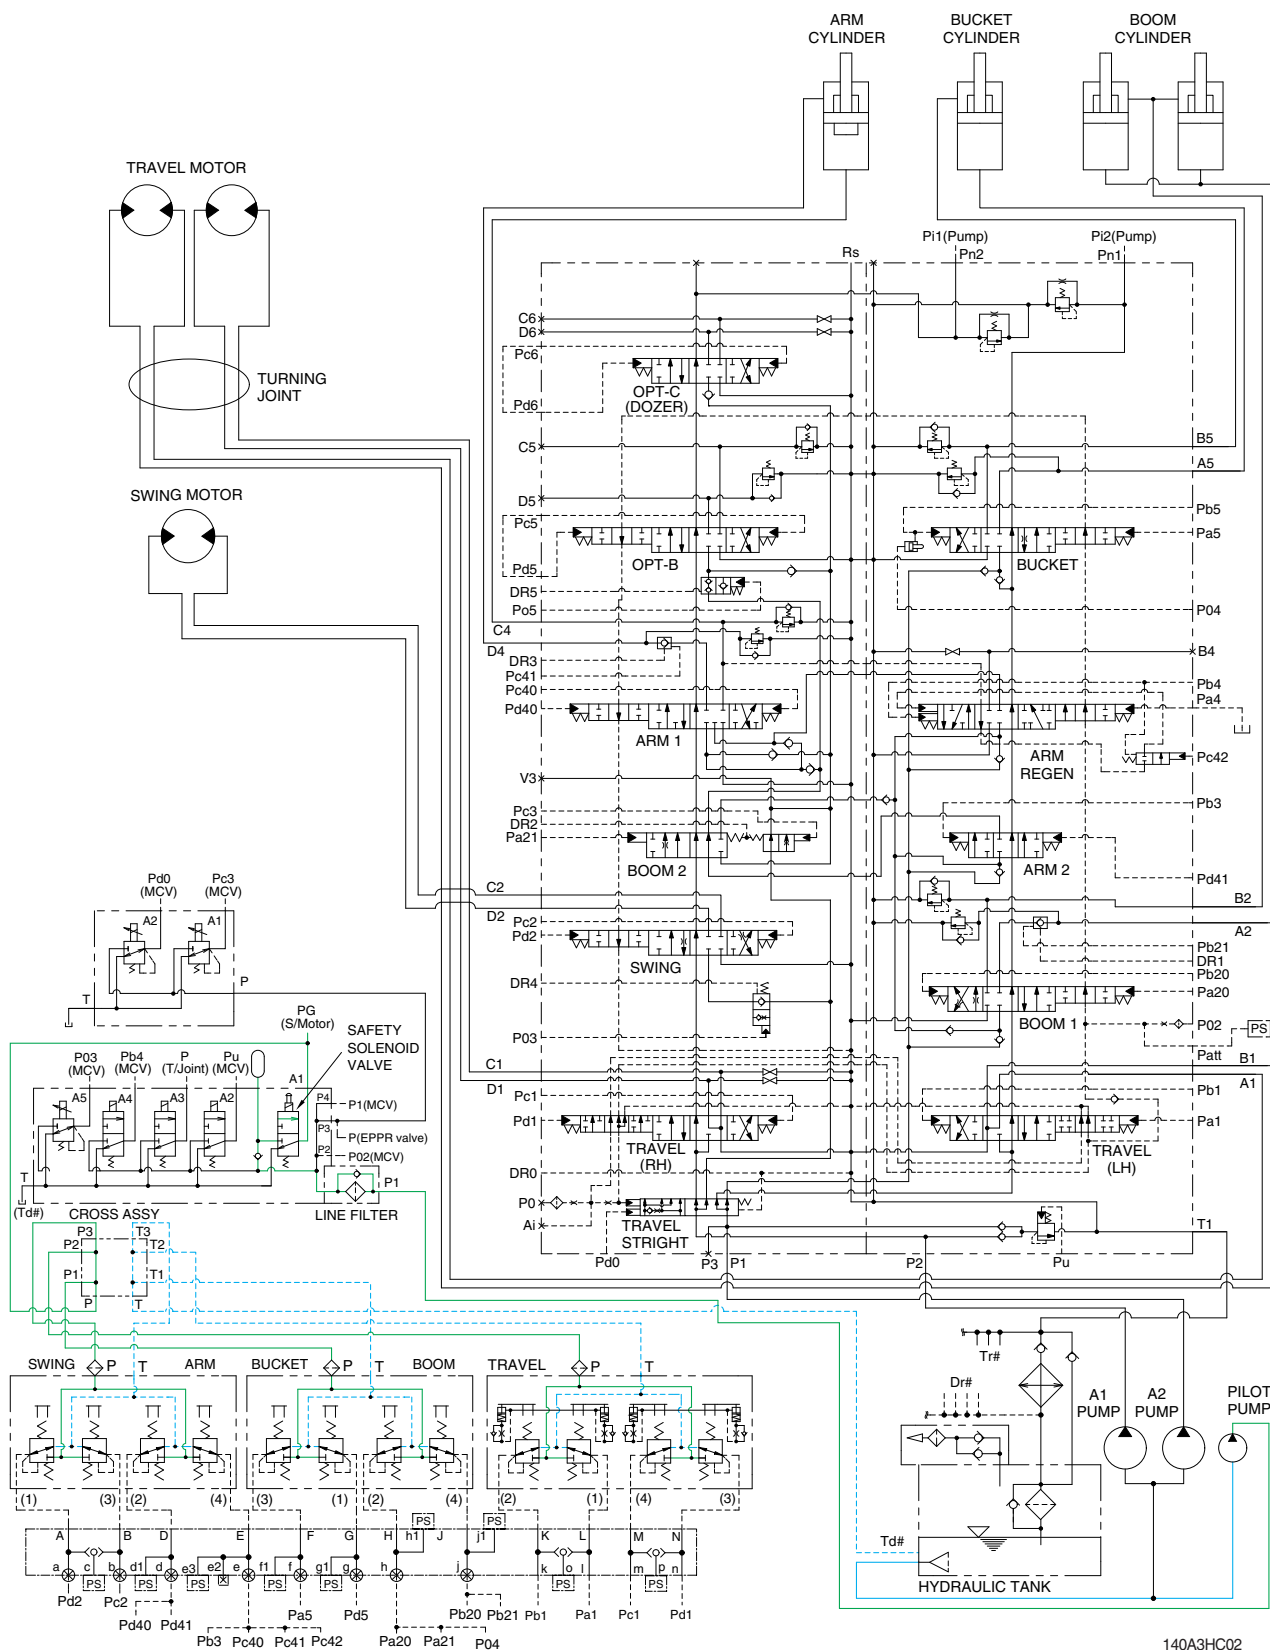

140A3HC02


The pilot pump receive oil from the hydraulic tank. The discharged oil from the pilot pump flows to the safety solenoid valve through the line filter. The oil is filtered by the line filter. The pilot relief valve is provided in the pilot pump for limiting the pilot circuit pressure.

The oil filtered by line filter flows remote control valve through safety solenoid valve and cross assy.

The return oil flow into the hydraulic tank through the cross assy.

※ The circuit diagram may differ from the equipment, so please check before a repair.

2. SAFETY VALVE (SAFETY LEVER)

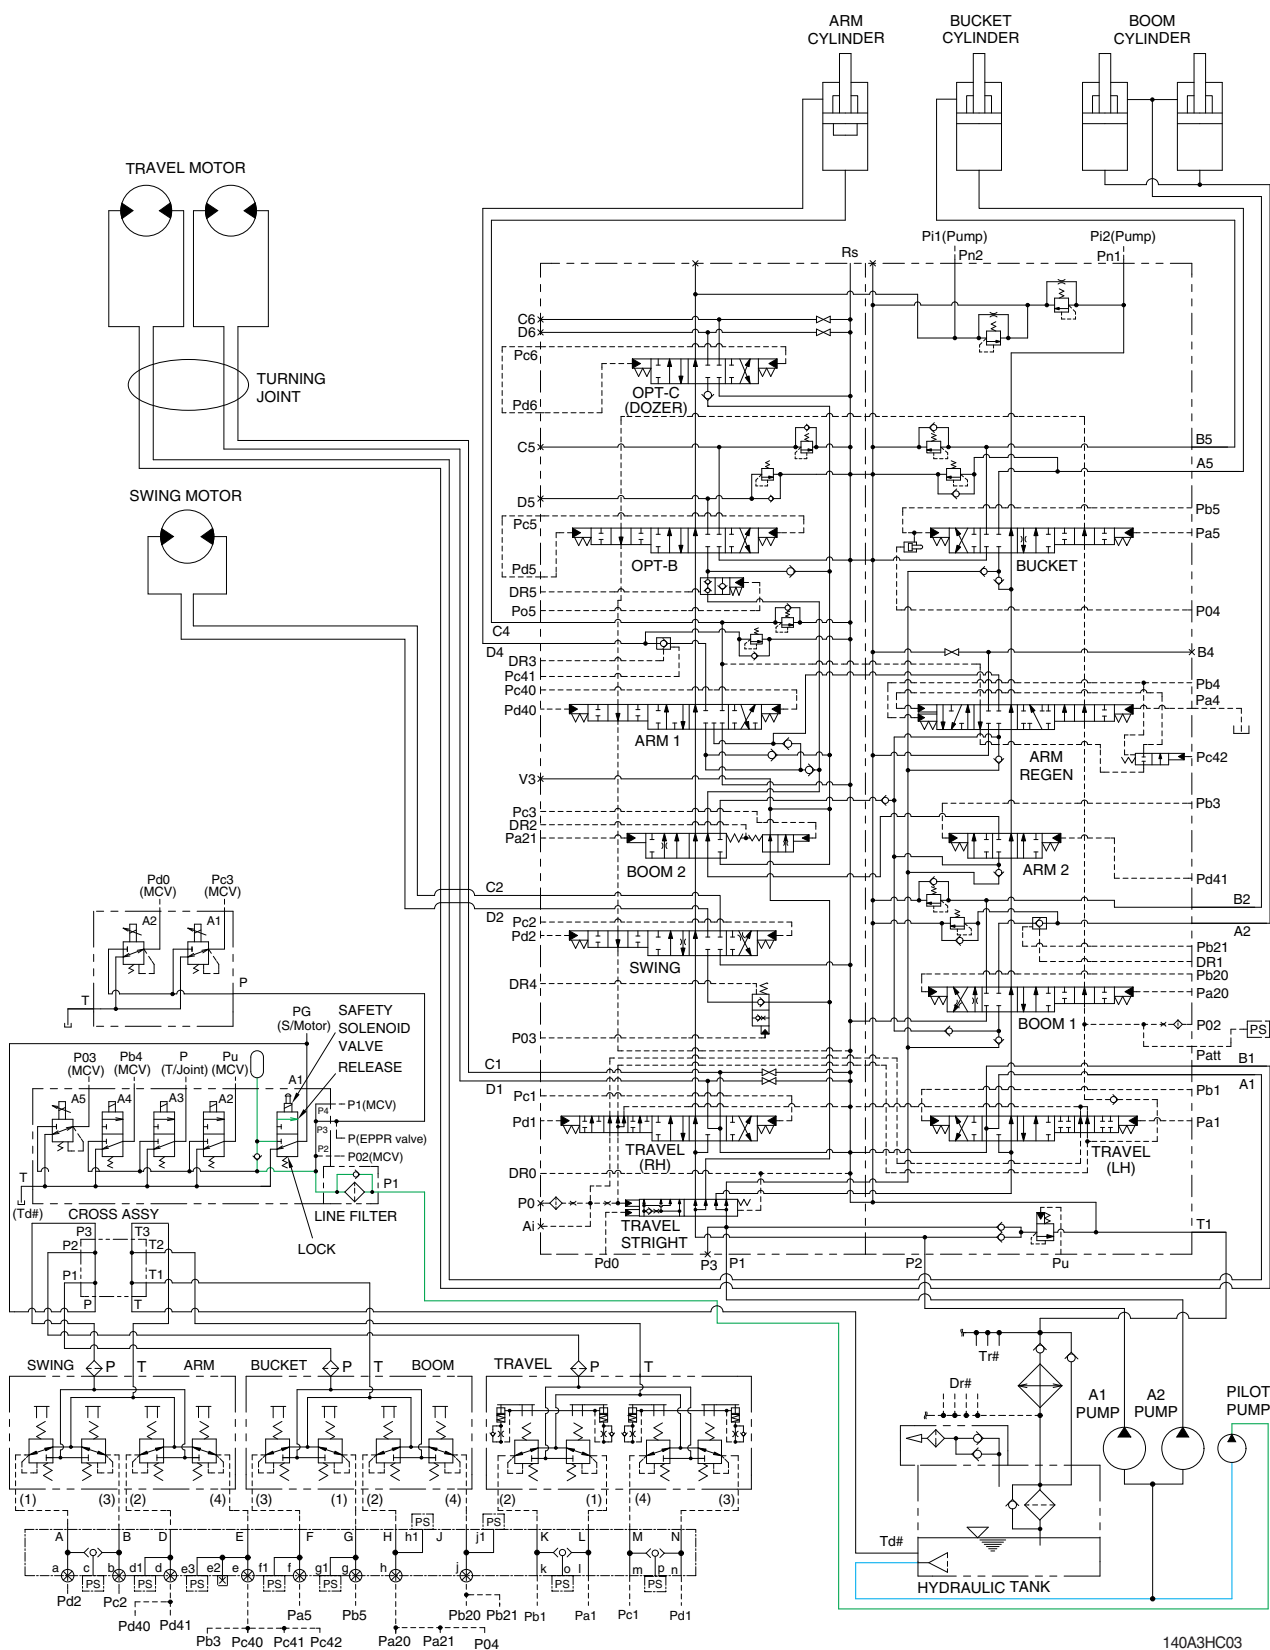


When the knob of the safety solenoid valve is in the release position, oil flows into the remote control valve through the line filter, safety solenoid valve and cross assy.

When the knob of the safety solenoid valve is in the lock position, oil does not flow into the remote control valve, because of the blocked port.

※ The circuit diagram may differ from the equipment, so please check before a repair.

3. BOOM PRIORITY SYSTEM (VS SWING)

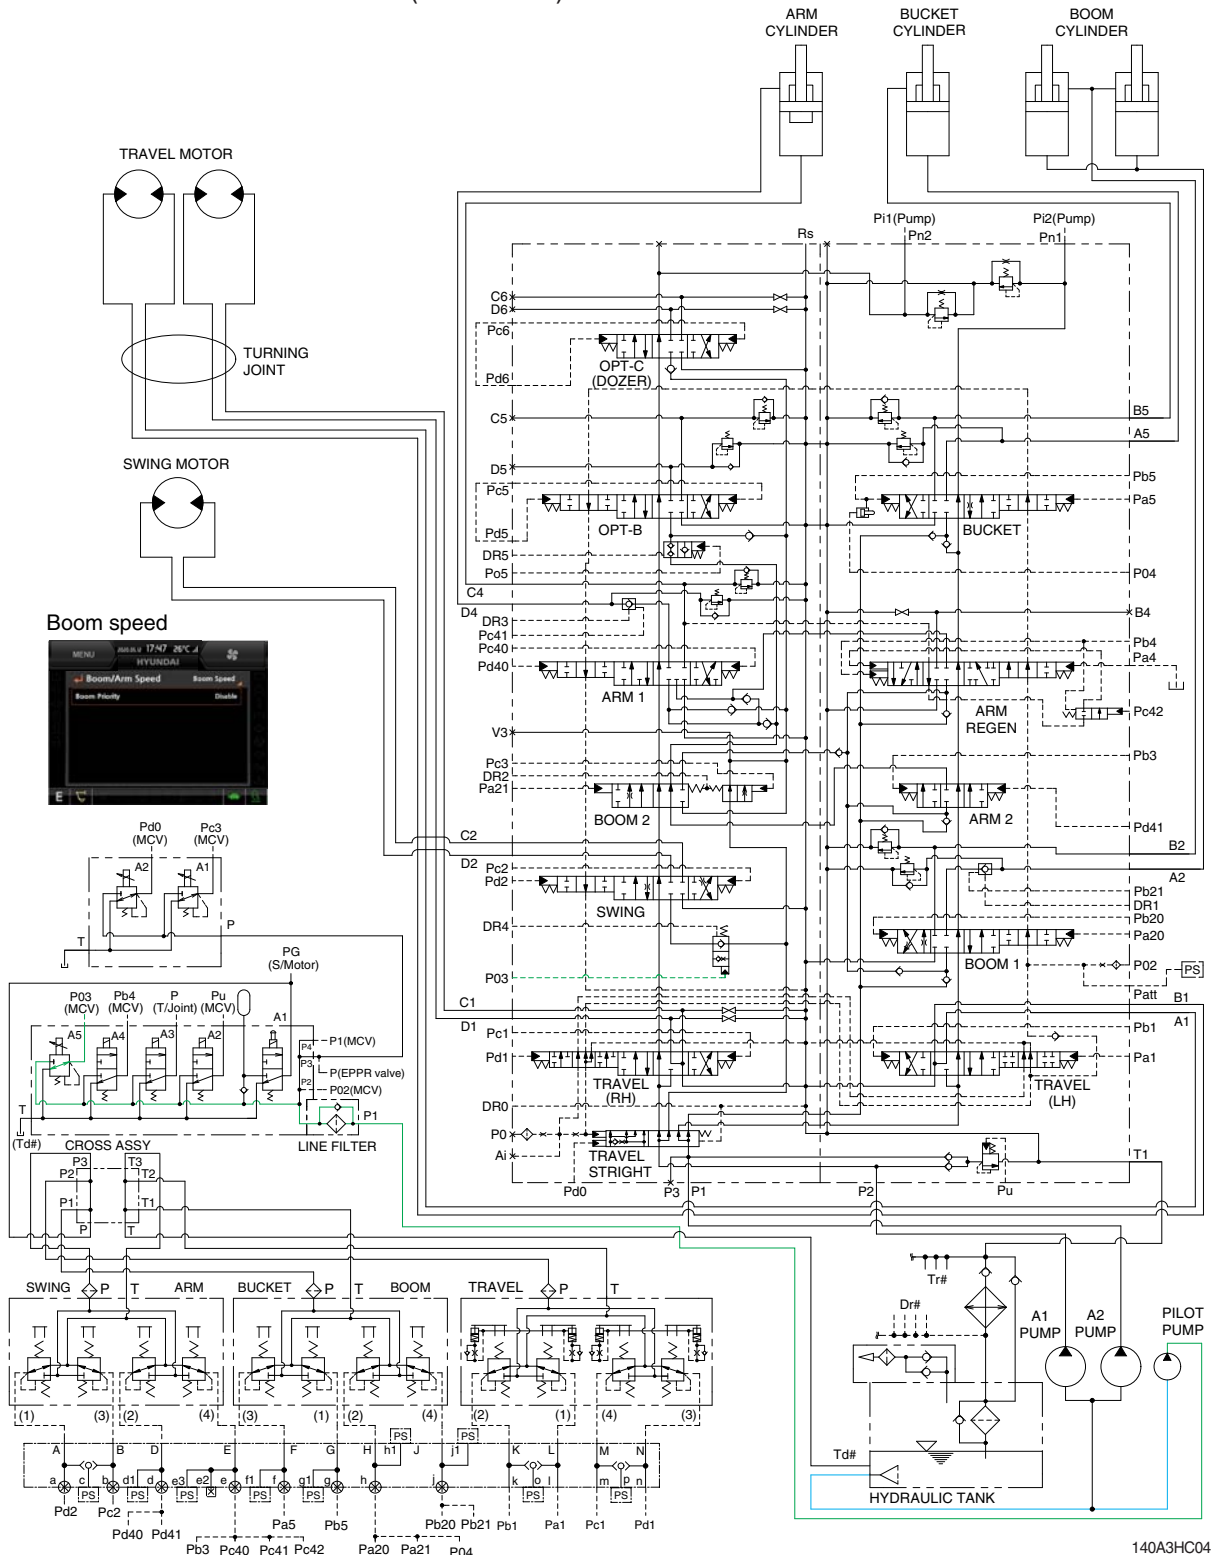

When carrying out the combined operation of swing and boom up, the boom up operating speed is lowered then normal operation.

To increase working efficiency, swing speed reducing system is used.


The pilot oil from pilot pump flow into **P03** port in main control valve through boom priority EPPR valve. **P03** oil pressure moves swing reducing spool to lower position and oil flow rate to the swing motor decreased.

Then, the boom up speed is increased. This is called the boom priority system.

The boom up speed can be adjusted by the cluster. Refer to page 3-23 of the operator's manual.

※ The circuit diagram may differ from the equipment, so please check before a repair.

4. TRAVEL SPEED CONTROL SYSTEM

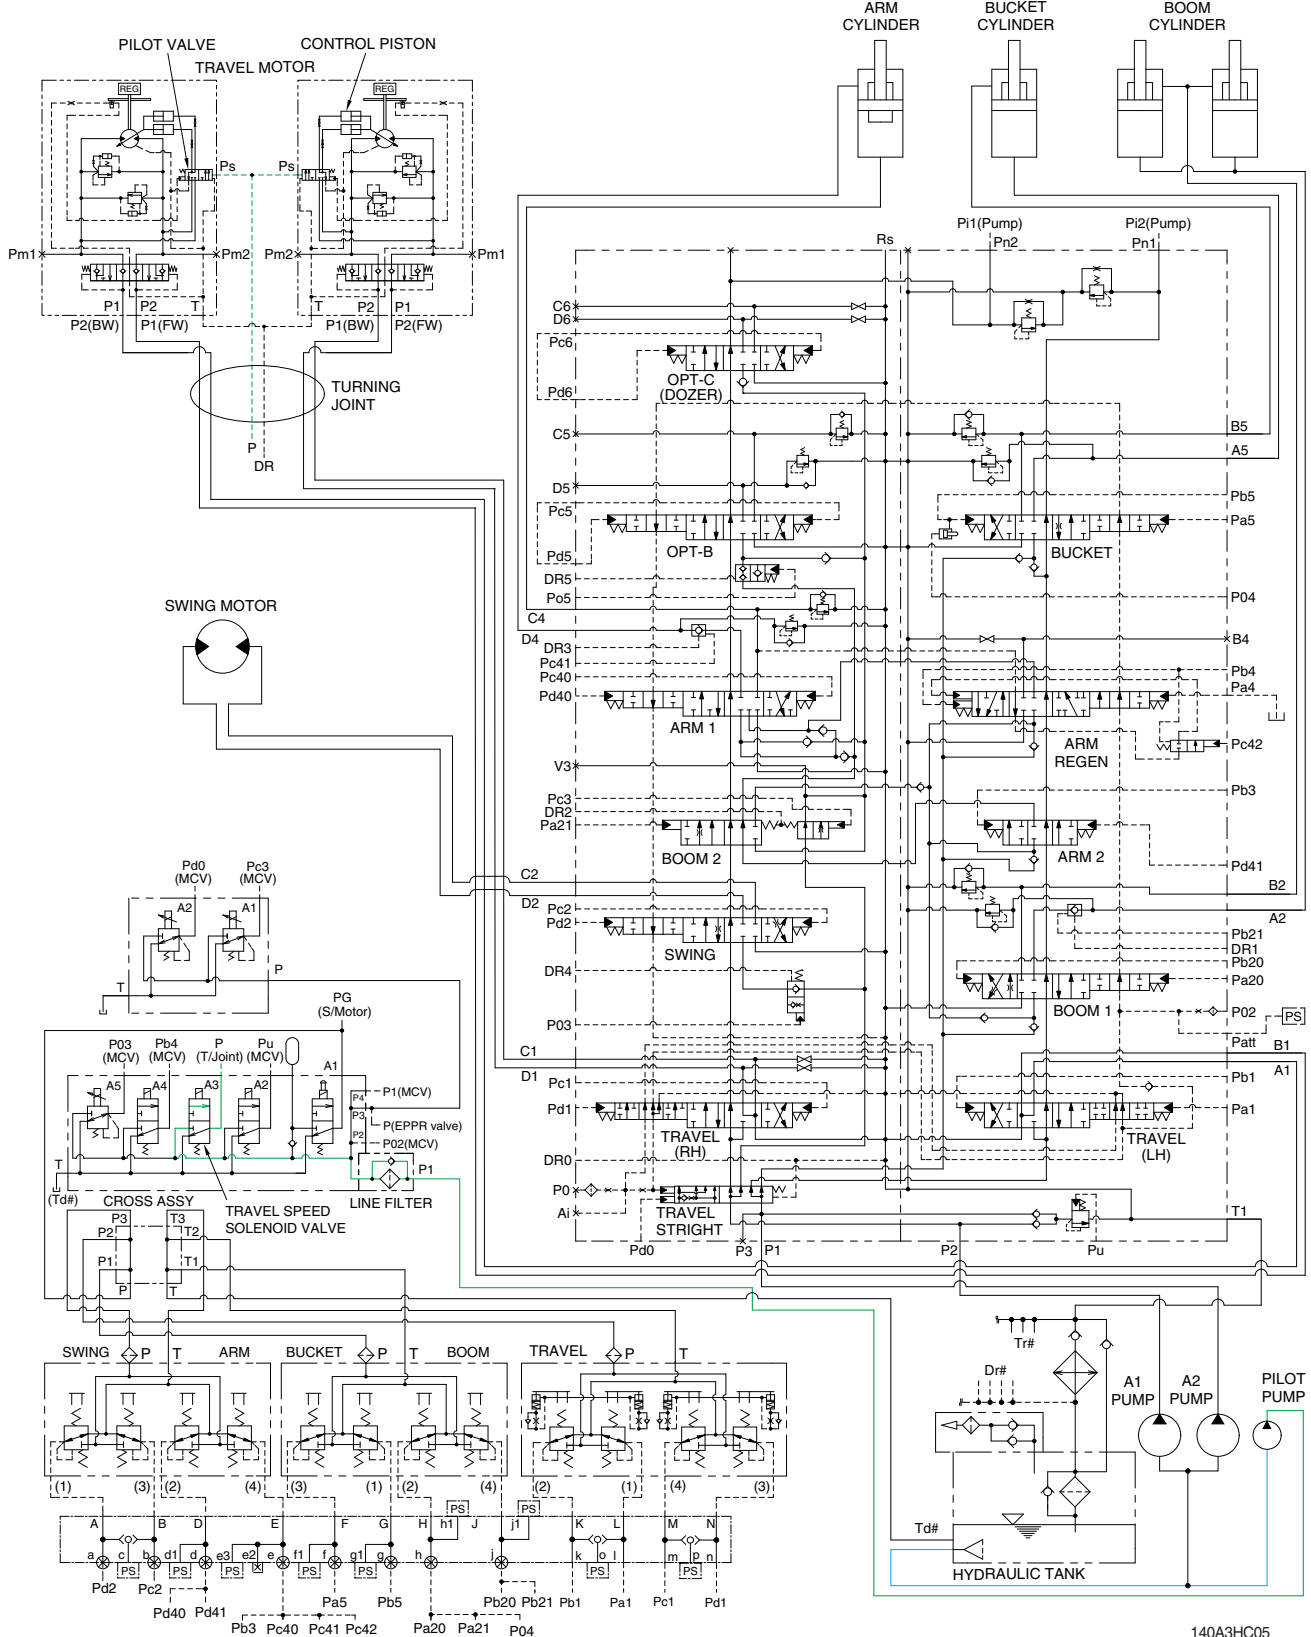


When the travel speed solenoid valve was placed in the Hi position, the pressure oil from pilot pump through line filter flows to port **Ps** of travel speed change over valve, and the control piston is pushed up, thus minimizing the displacement.

When the travel speed solenoid valve was placed in the Lo position, the oil of **Ps** port return to the tank and the control piston is returned, thus maximizing the displacement.

※ The circuit diagram may differ from the equipment, so please check before a repair.

5. MAIN RELIEF PRESSURE CHANGE SYSTEM

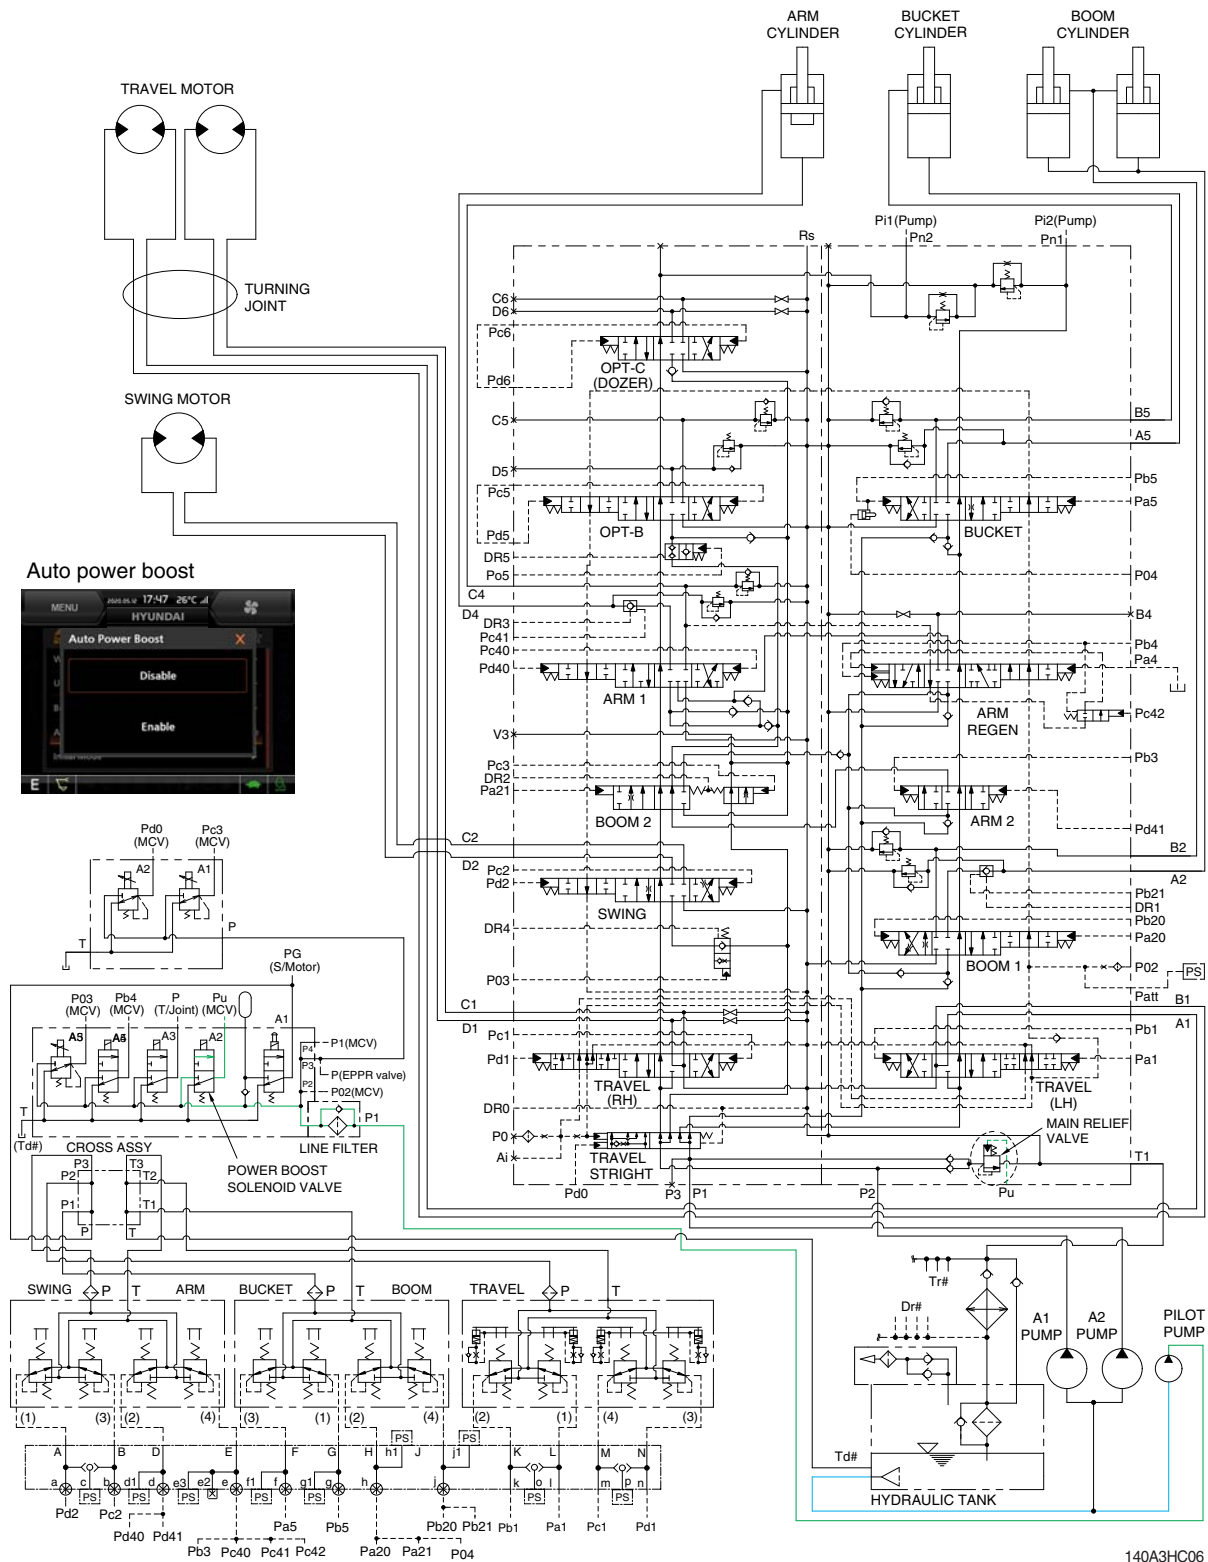


When the power boost switch on the left control lever is pushed ON, the power boost solenoid valve is actuated, the discharged oil from the pilot pump flows into **Pu** port of the main relief valve of main control valve; then the setting pressure of the main relief valve is raised from 350 kgf/cm² to 380 kgf/cm² for increasing the digging power.

And even when pressed continuously, it is canceled after 8 seconds.

When the auto power boost function is selected to enable on the cluster, the pressure of the main relief pressure is automatically increased to 380 kgf/cm² as working condition by the MCU. It is operated max 8 seconds.

※ The circuit diagram may differ from the equipment, so please check before a repair.

6. ARM REGENERATION ON/OFF SYSTEM

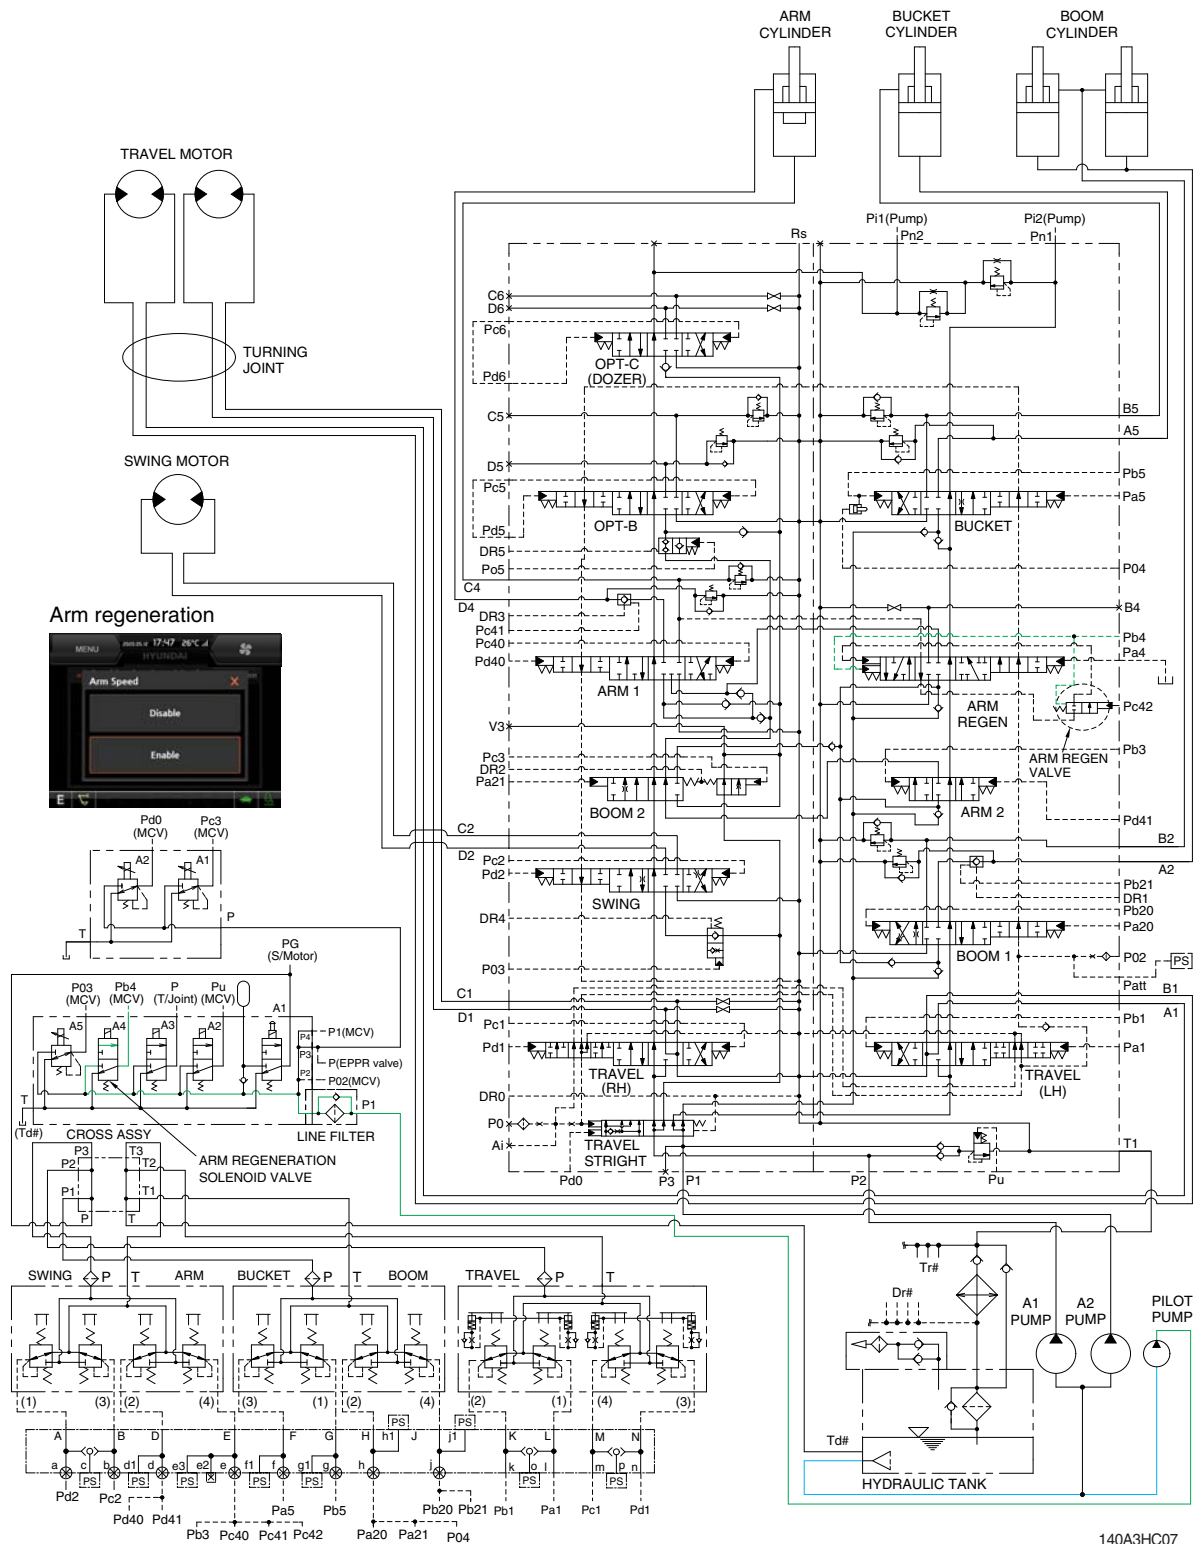

140A3HC07

When the arm regeneration is selected to disable on the cluster, the arm regeneration solenoid valve is activated. The pilot oil from pilot pump flow into **Pb4** port in main control valve through solenoid valve and the arm regeneration spool is shifted to left.


Then, the oil from arm regeneration passage returns to tank and the arm regeneration function is deactivated.

When the arm regeneration is selected to enable on the cluster, the arm regeneration function is activated and arm in operation speed is increased.

Refer to page 2-41 for the arm regeneration function.

※ The circuit diagram may differ from the equipment, so please check before a repair.

7. SWING PARKING BRAKE RELEASE

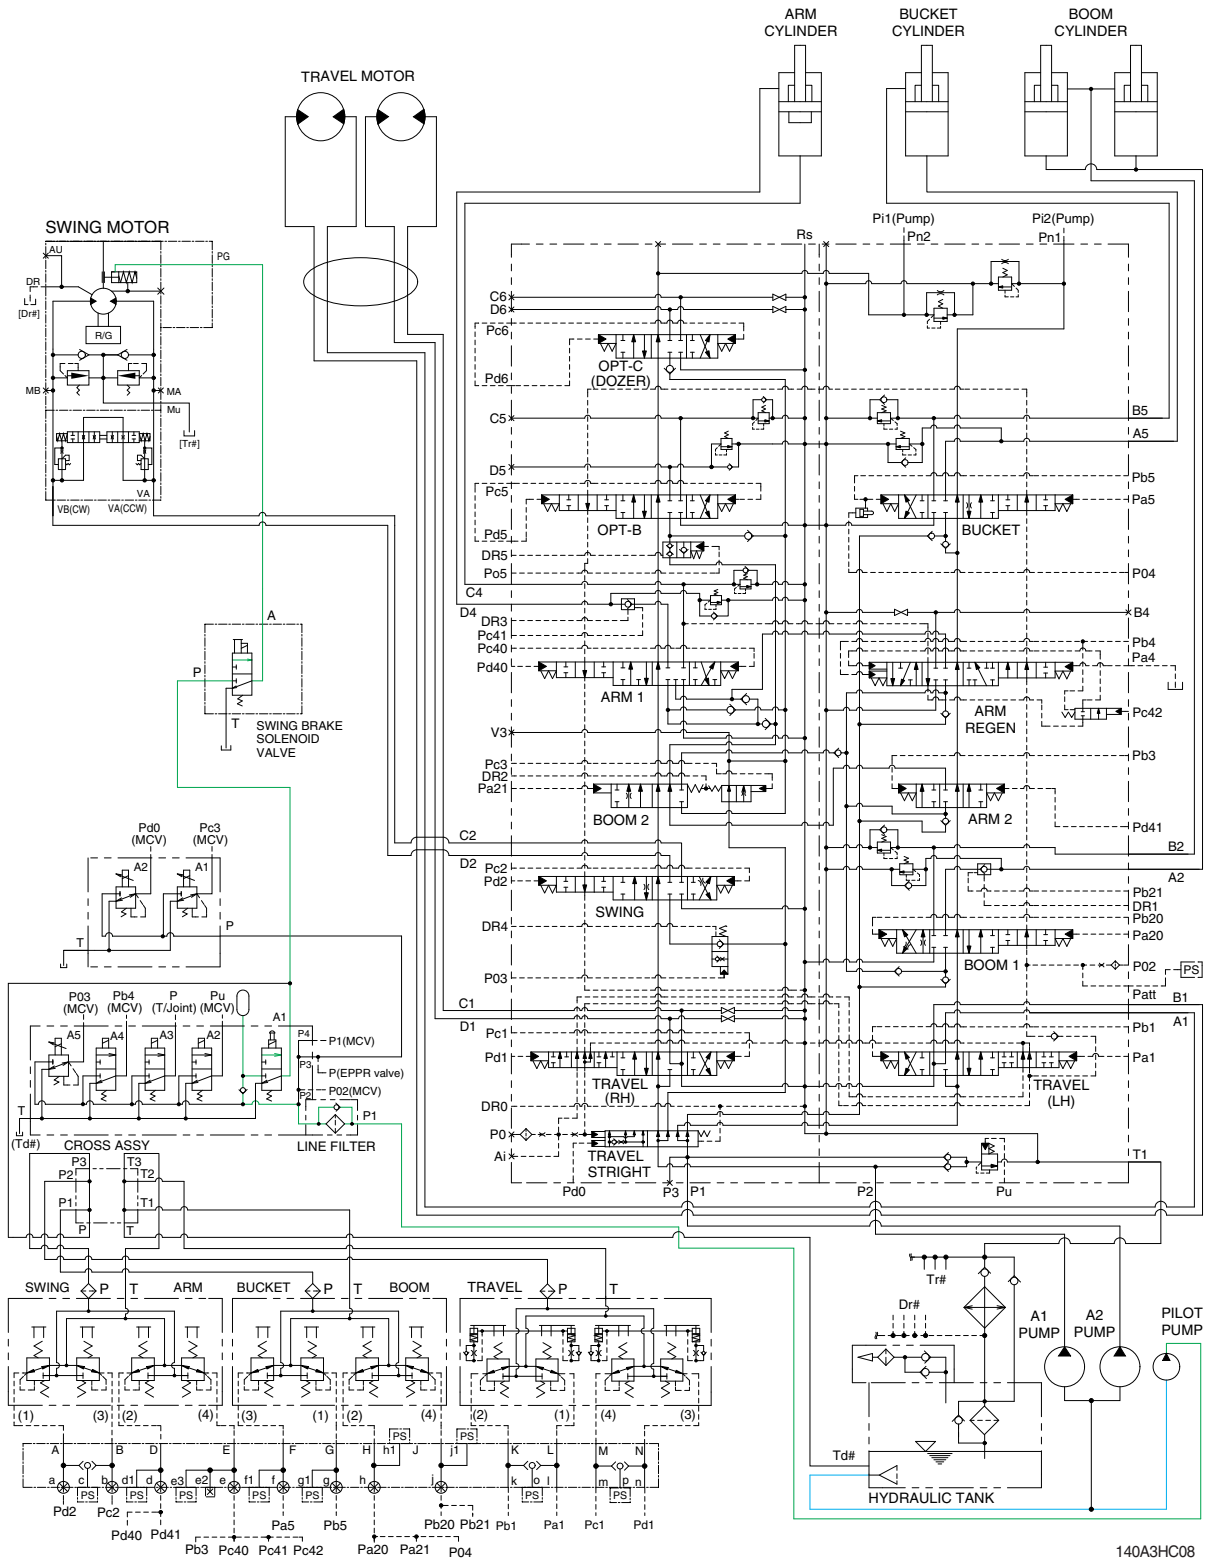


When any lever of the swing, arm in, boom up or travel is tilted, the swing brake solenoid valve is shifted to the downward by the MCU that senses the pilot pressure of the RCV control lever.

The discharged oil from pilot pump flows to swing motor PG port through the swing brake solenoid valve. This pressure is applied to swing motor disc, thus the brake is released.

When the RCV control lever is set in the neutral position, the swing brake solenoid valve is shifted to the upward, oil in the swing motor disc cylinder is drained through the the swing brake solenoid valve, thus the brake is applied. For details, refer to page 2-60.

※ The circuit diagram may differ from the equipment, so please check before a repair.

8. SWING PRIORITY SYSTEM (VS ARM)

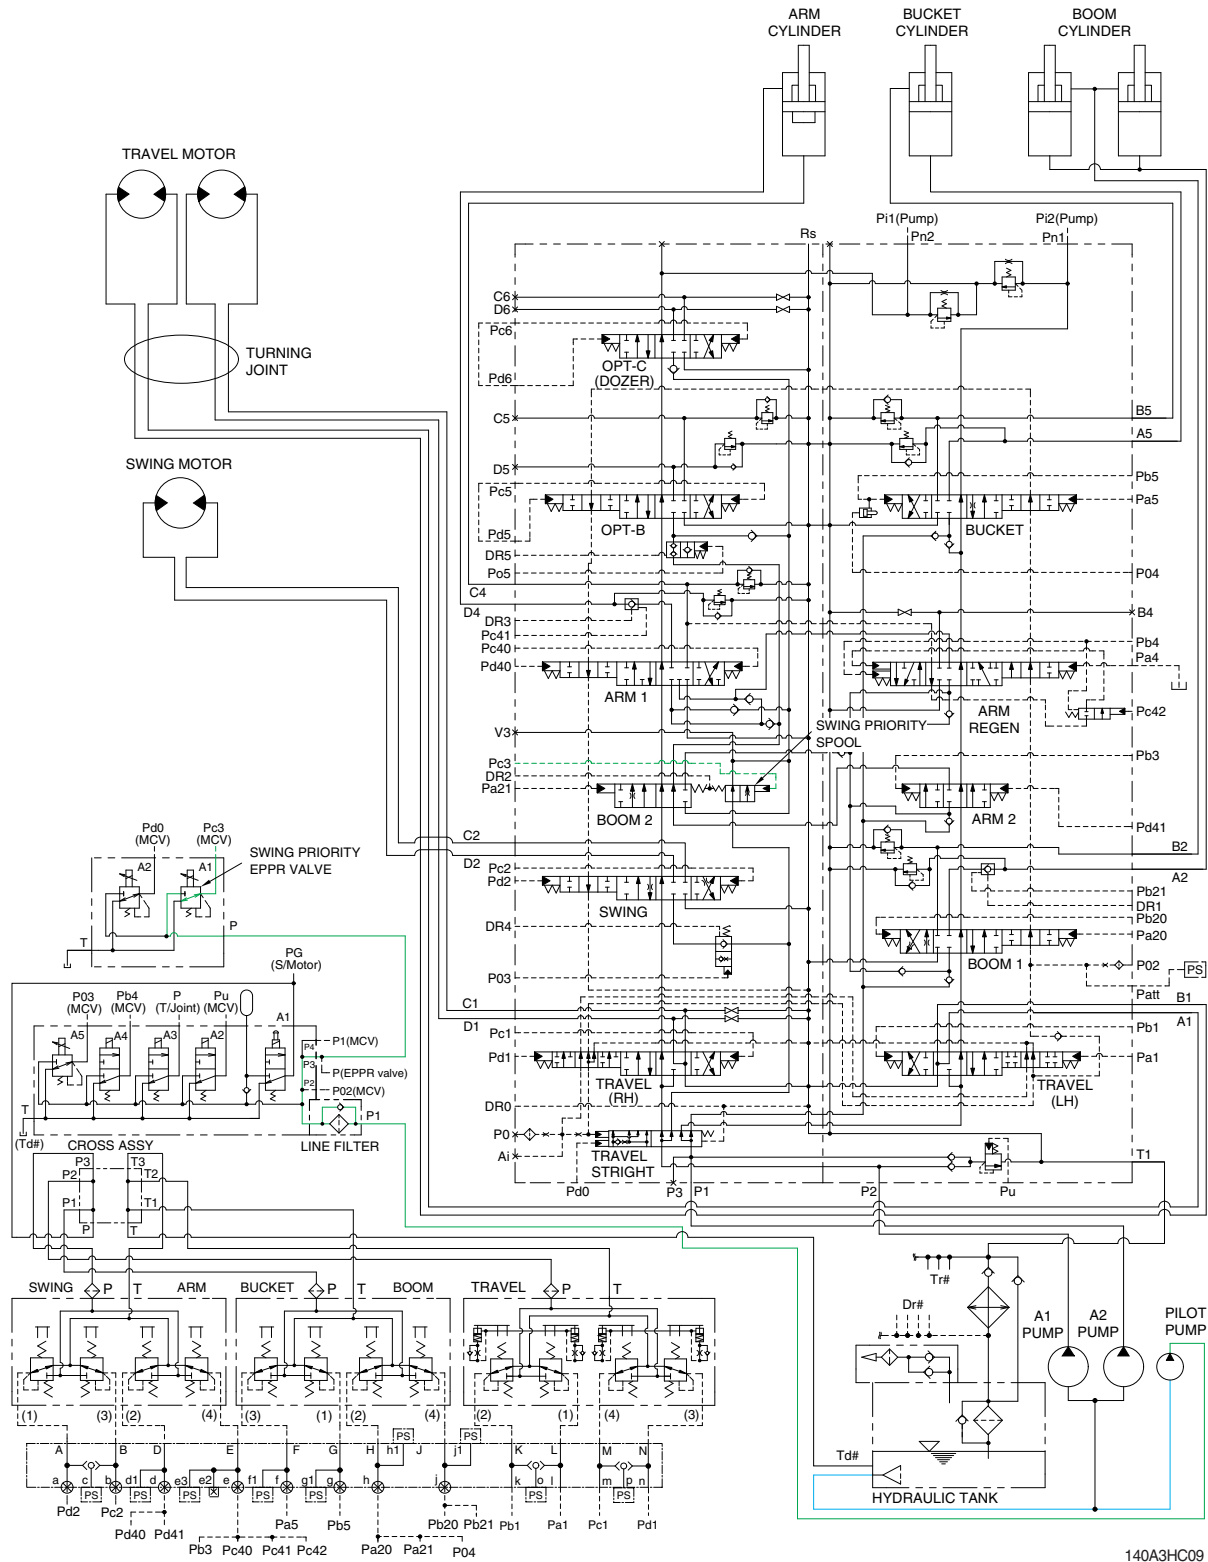

140A3HC09


When carrying out the combined operation of swing and arm of the left control valve, the swing speed can be lowered than operating speed of arm.

When the swing and arm in control levers are tilted simultaneously, the swing priority EPPR valve is energized by the MCU that senses the swing pilot pressure and Pc3 pressure from the swing priority EPPR valve change the swing priority spool and decreases the oil flow rate to the next section to make the swing operation most preferential.

This is called the swing priority system. For details, refer to page 2-43.

※ The circuit diagram may differ from the equipment, so please check before a repair.

9. TRAVEL STRAIGHT SYSTEM

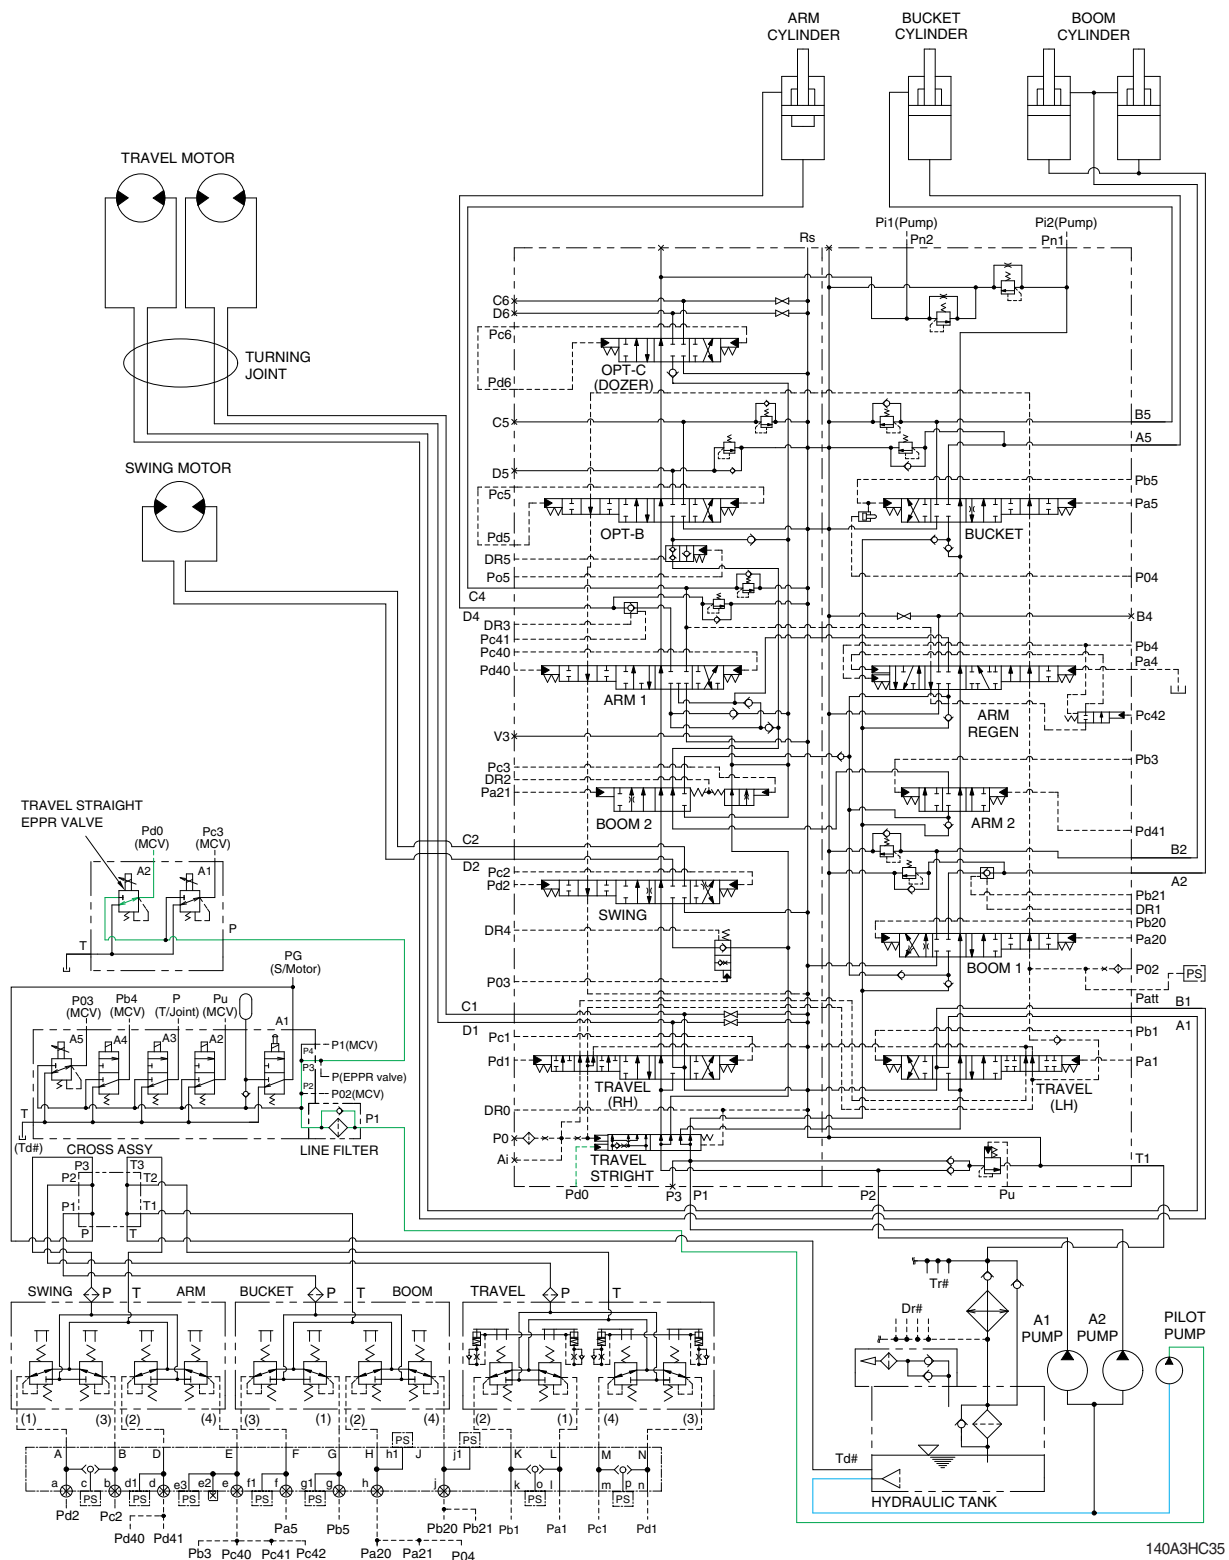


When the travel and other functions (boom, arm, bucket, swing, option) are tilted, the travel straight EPPR valve is energized by the MCU that senses the pilot pressure of the travel and other functions and Pd0 pressure from the travel straight EPPR valve changes the travel straight spool.

Consequently, the left and right travel oil supply passage are connected, and equivalent amount of oil flows into the left and right travel motors. This keeps the straight travel. For details, refer to page 2-30.

※ The circuit diagram may differ from the equipment, so please check before a repair.

GROUP 4 SINGLE OPERATION

1. BOOM UP OPERATION

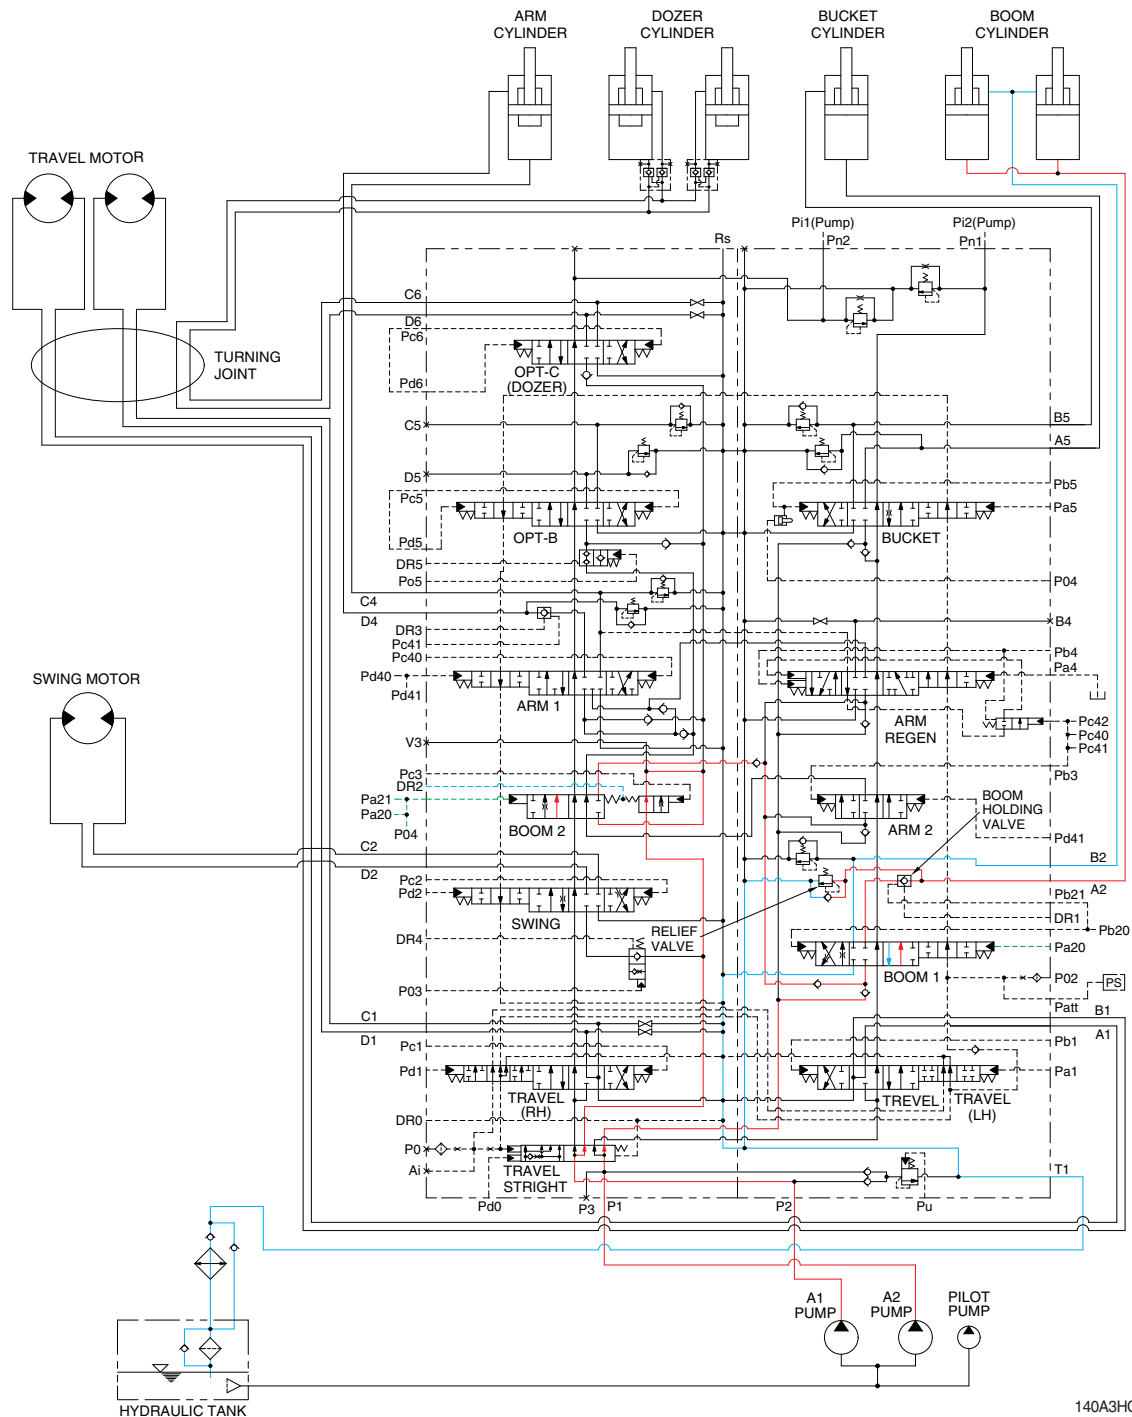


140A3HC10

When the right control lever is pulled back, the boom spools in the main control valve are moved to the up position by the pilot oil pressure (Pa20, Pa21) from the remote control valve.

The oil from the A1 and A2 pump flows into the main control valve and then goes to the large chamber of boom cylinders. At the same time, the oil from the small chamber of boom cylinders returns to the hydraulic oil tank through the boom 1 spool in the main control valve. When this happens, the boom goes up. The excessive pressure in the boom cylinder head side is prevented by relief valve. When the boom is up and the control lever is returned to neutral position, the circuit for the holding pressure at the head side of the boom cylinder is closed by the boom holding valve. This prevents the hydraulic drift of boom cylinders.

※ The circuit diagram may differ from the equipment, so please check before a repair.

2. BOOM DOWN OPERATION

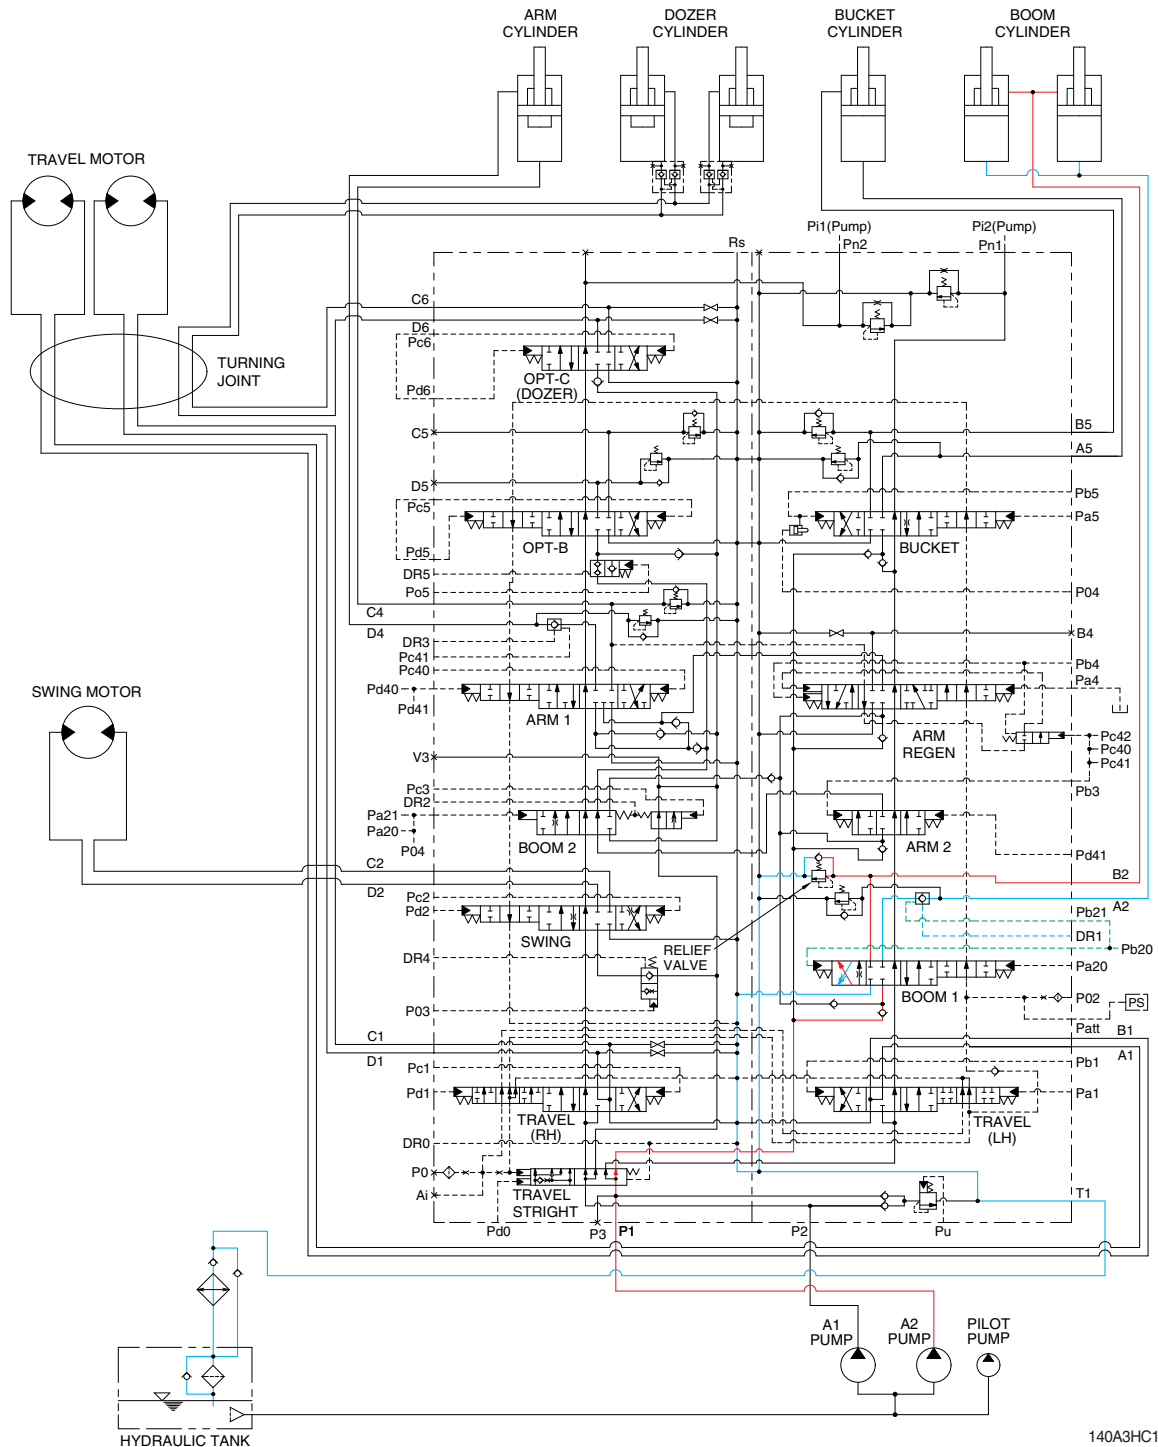

When the right control lever is pushed forward, the boom 1 spool in the main control valve is moved to the down position by the pilot oil pressure (Pb20) from the remote control valve.


The oil from the A2 pump flows into the main control valve and then goes to the small chamber of boom cylinders. At the same time, the oil from the large chamber of boom cylinders returns to the hydraulic tank through the boom 1 spool in the main control valve.

When the down speed of boom is faster, the oil returned from the large chamber of boom cylinder combines with the oil from the A2 pump, and flows into the small chamber of the cylinder.

This prevents cylinder cavitation by the negative pressure when the A2 pump flow can not match the boom down speed. And the excessive pressure in the boom cylinder rod side is prevented by the relief valve.

※ The circuit diagram may differ from the equipment, so please check before a repair.

3. ARM IN OPERATION

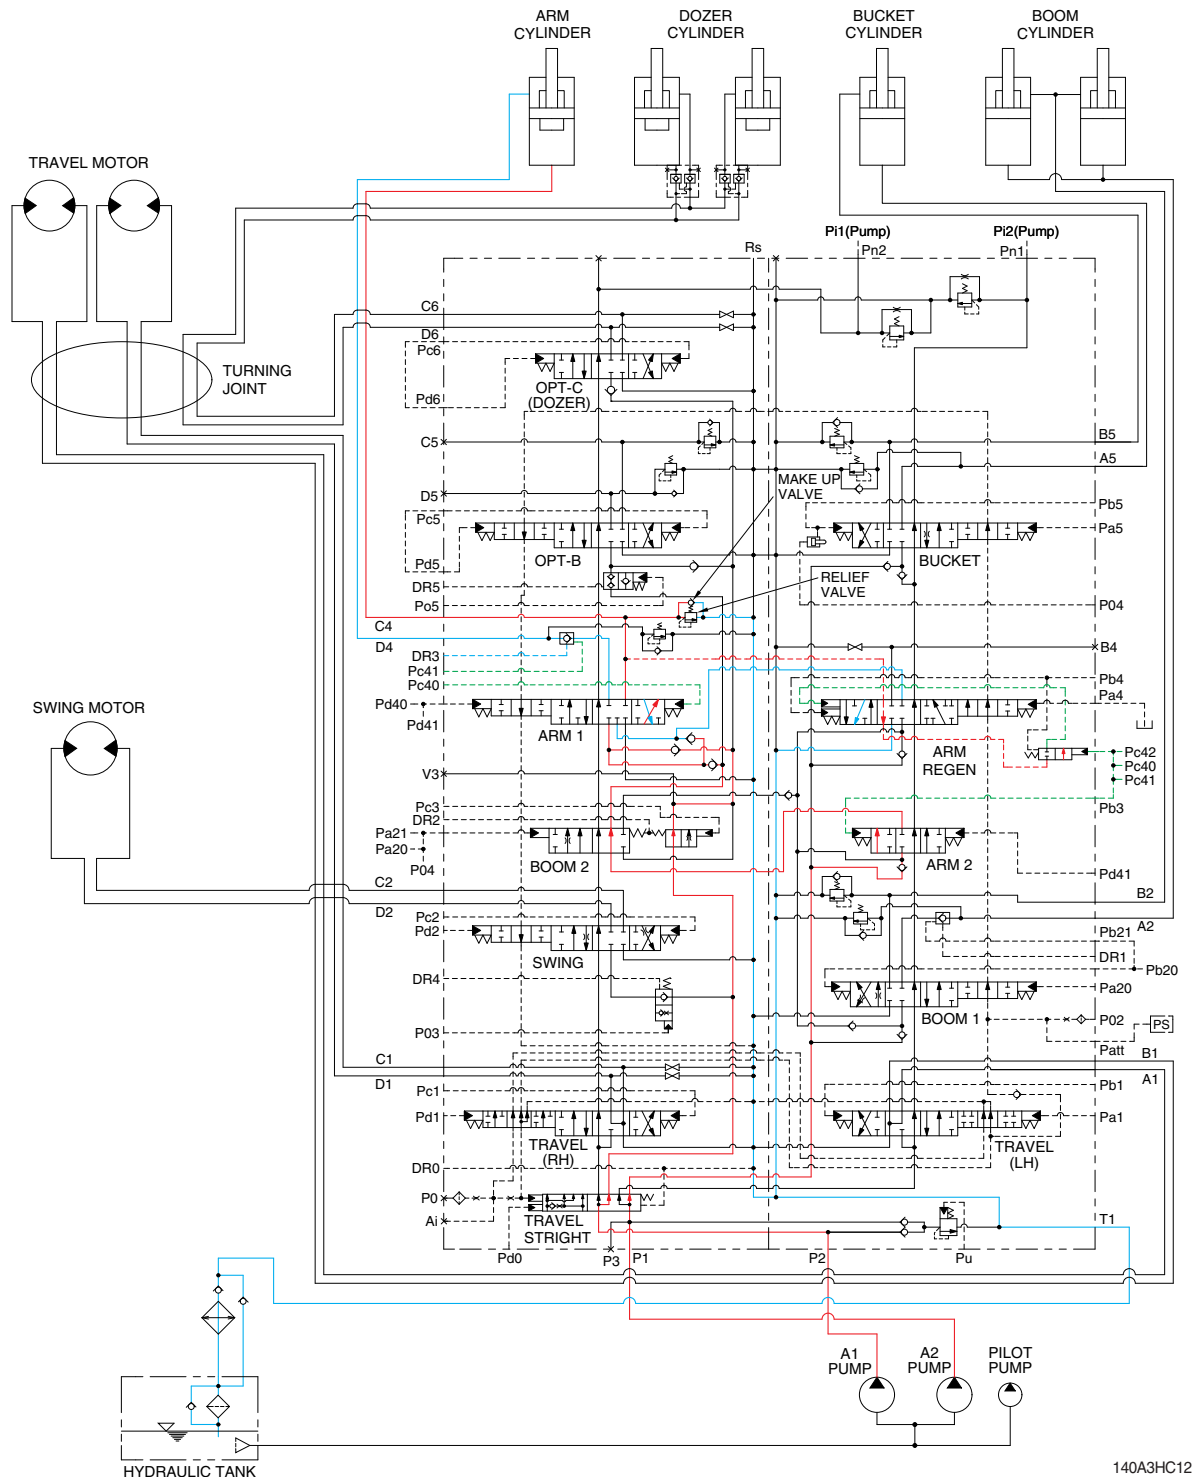

When the left control lever is pulled back, the arm spools in the main control valve are moved to the arm in position by the pilot oil pressure (Pc40, Pb3) from the remote control valve.

The oil from the A1 and A2 pump flows into the main control valve and then goes to the large chamber of arm cylinder.


At the same time, the oil from small chamber of arm cylinder returns to the hydraulic oil tank through the arm 1 spool in the main control valve. When this happens, the arm rolls in.

The excessive pressure in the arm cylinder head side is prevented by relief valve.

The cavitation which will happen to the head side of the arm cylinder is also prevented by the make-up valve in the main control valve.

※ The circuit diagram may differ from the equipment, so please check before a repair.

4. ARM OUT OPERATION

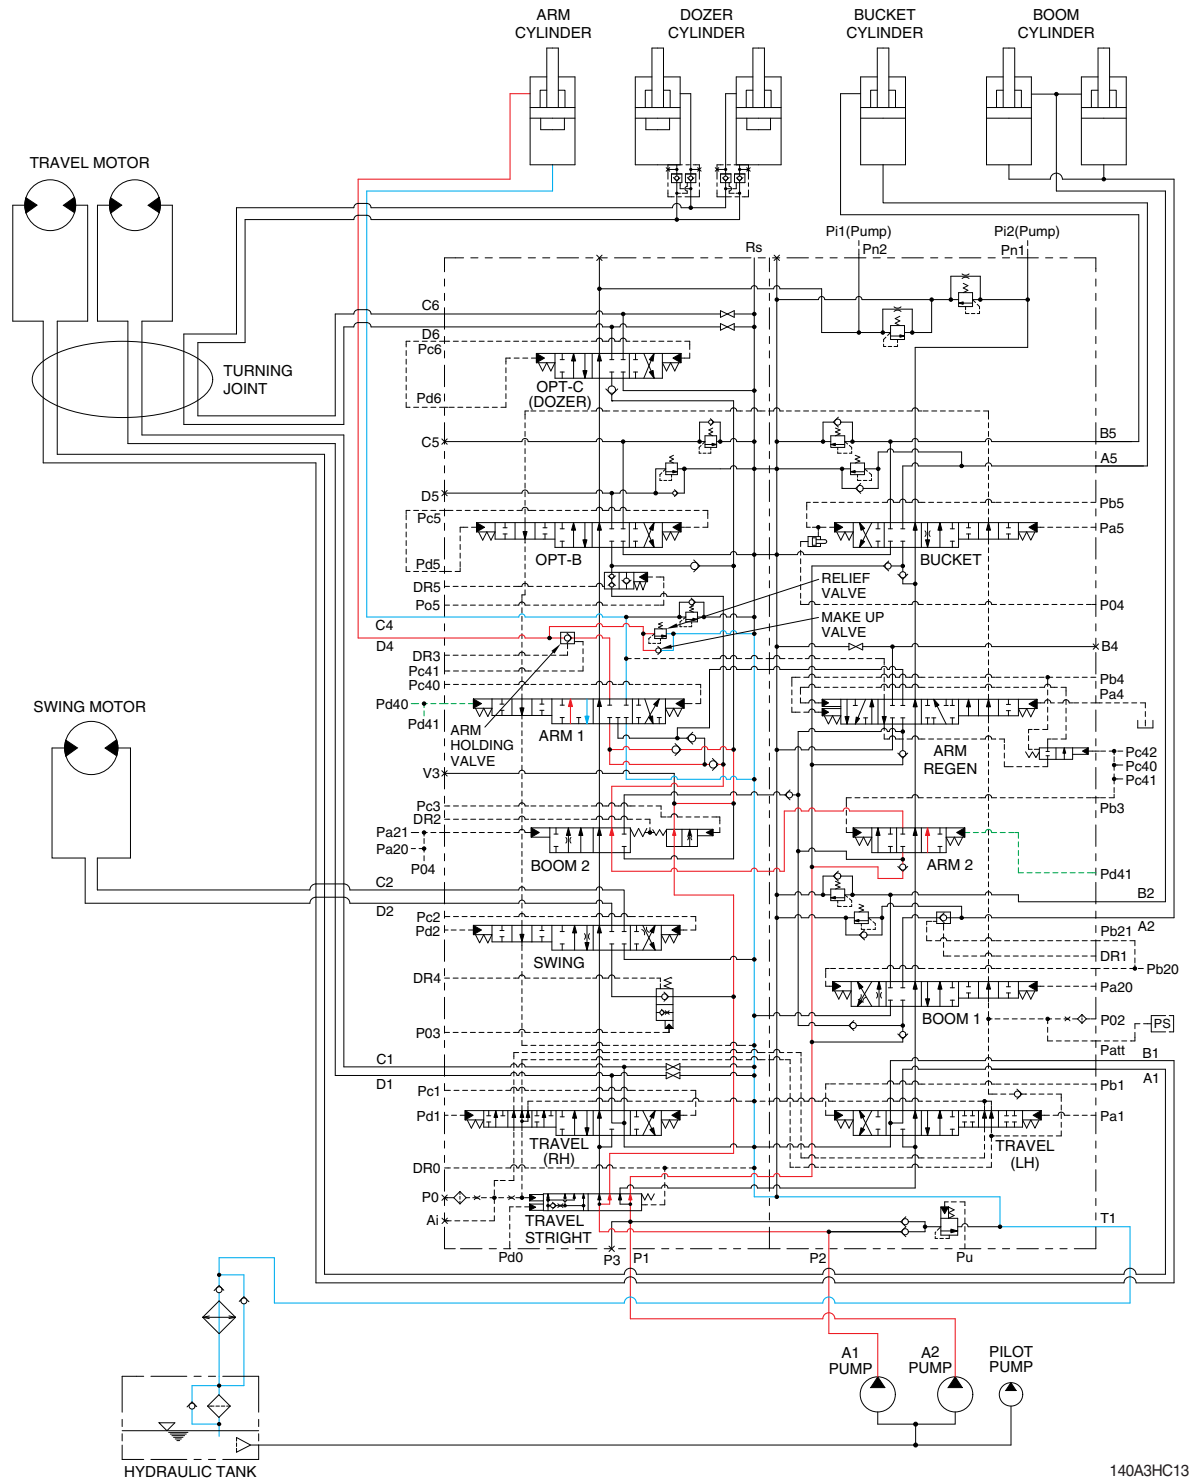


When the left control lever is pushed forward, the arm spools in the main control valve are moved to the arm out position by the pilot oil pressure (Pd40, Pd41) from the remote control valve.

The oil from the A1 and A2 pump flows into the main control valve and then goes to the small chamber of arm cylinder. At the same time, the oil from the large chamber of arm cylinder returns to the hydraulic oil tank through the arm 1 spool in the main control valve. When this happens, the arm rolls out. The cavitation which will happen to the rod side of the arm cylinder is also prevented by the make-up valve in the main control valve. When the arm is roll out and the control lever is returned to neutral position, the circuit for the holding pressure at the rod side of the arm cylinder is closed by the arm holding valve. This prevent the hydraulic drift of arm cylinder.

※ The circuit diagram may differ from the equipment, so please check before a repair.

5. BUCKET IN OPERATION

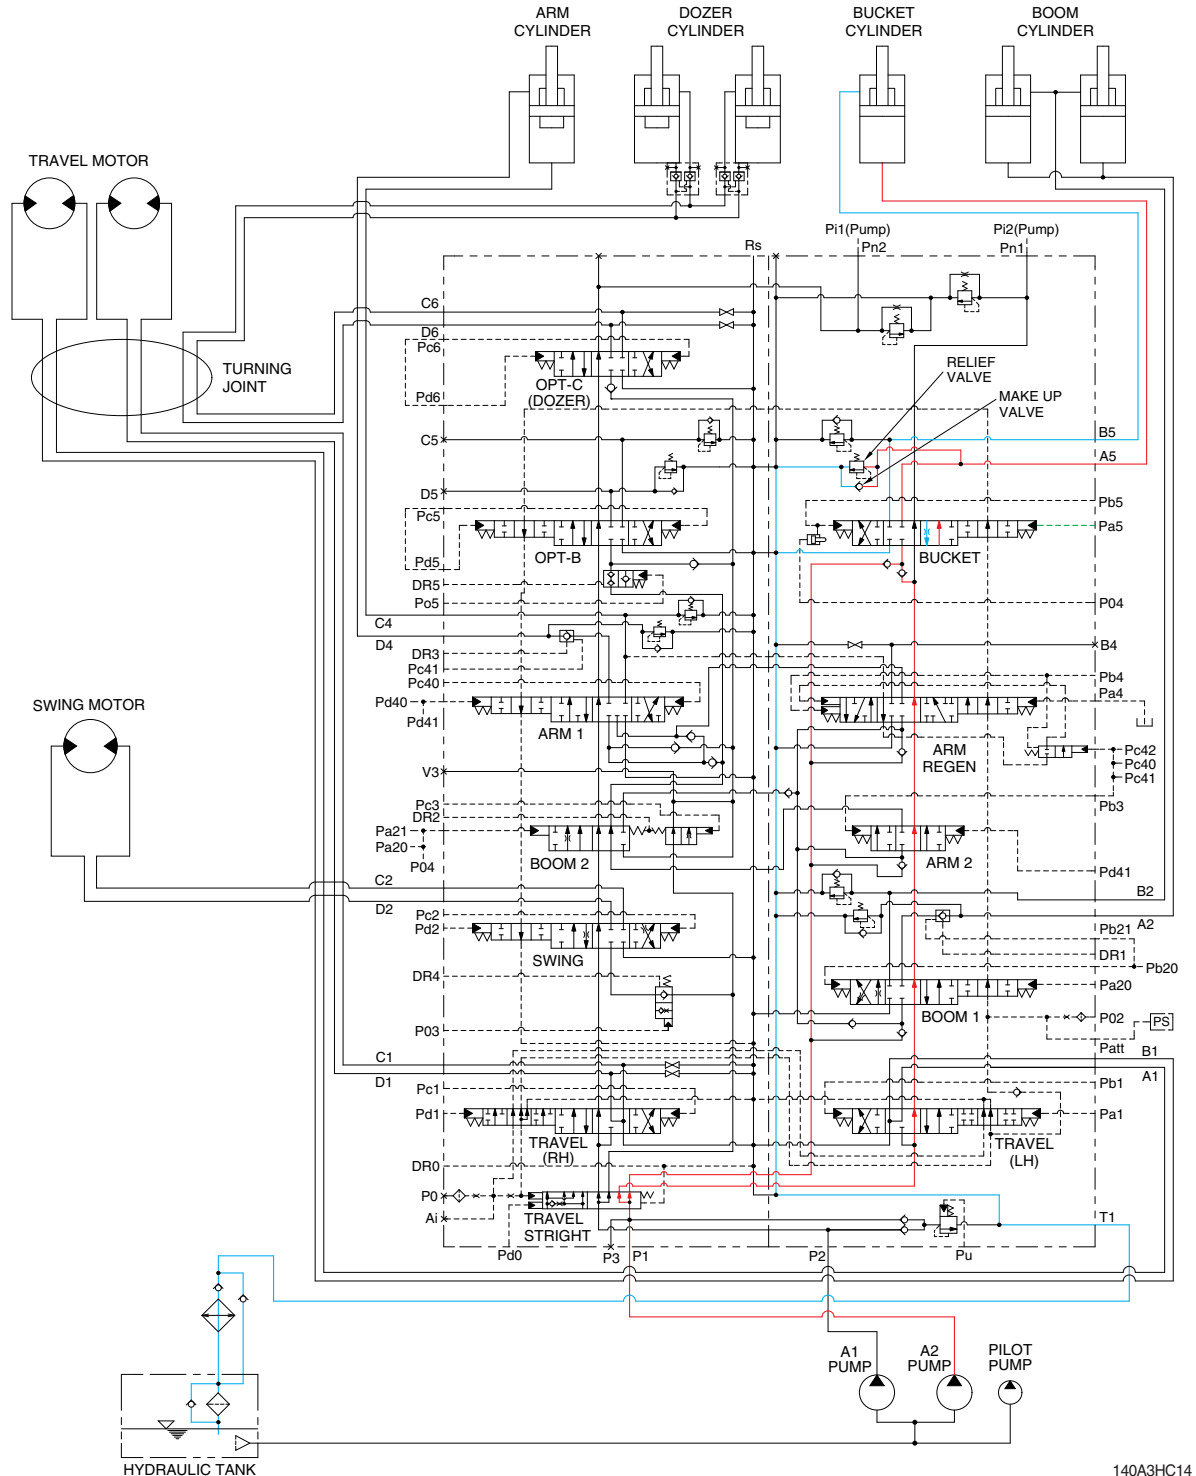

140A3HC14

When the right control lever is pulled left, the bucket spool in the main control valve is moved to the roll in position by the pilot oil pressure (Pa5) from the remote control valve.

The oil from the A2 pump flows into the main control valve and then goes to the large chamber of bucket cylinder.


At the same time, the oil from the small chamber of bucket cylinder returns to the hydraulic oil tank through the bucket spool in the main control valve. When this happens, the bucket rolls in.

The excessive pressure in the bucket cylinder head side is prevented by relief valve.

The cavitation which will happen to the head side of the bucket cylinder is also prevented by the make-up valve in the main control valve.

※ The circuit diagram may differ from the equipment, so please check before a repair.

6. BUCKET OUT OPERATION

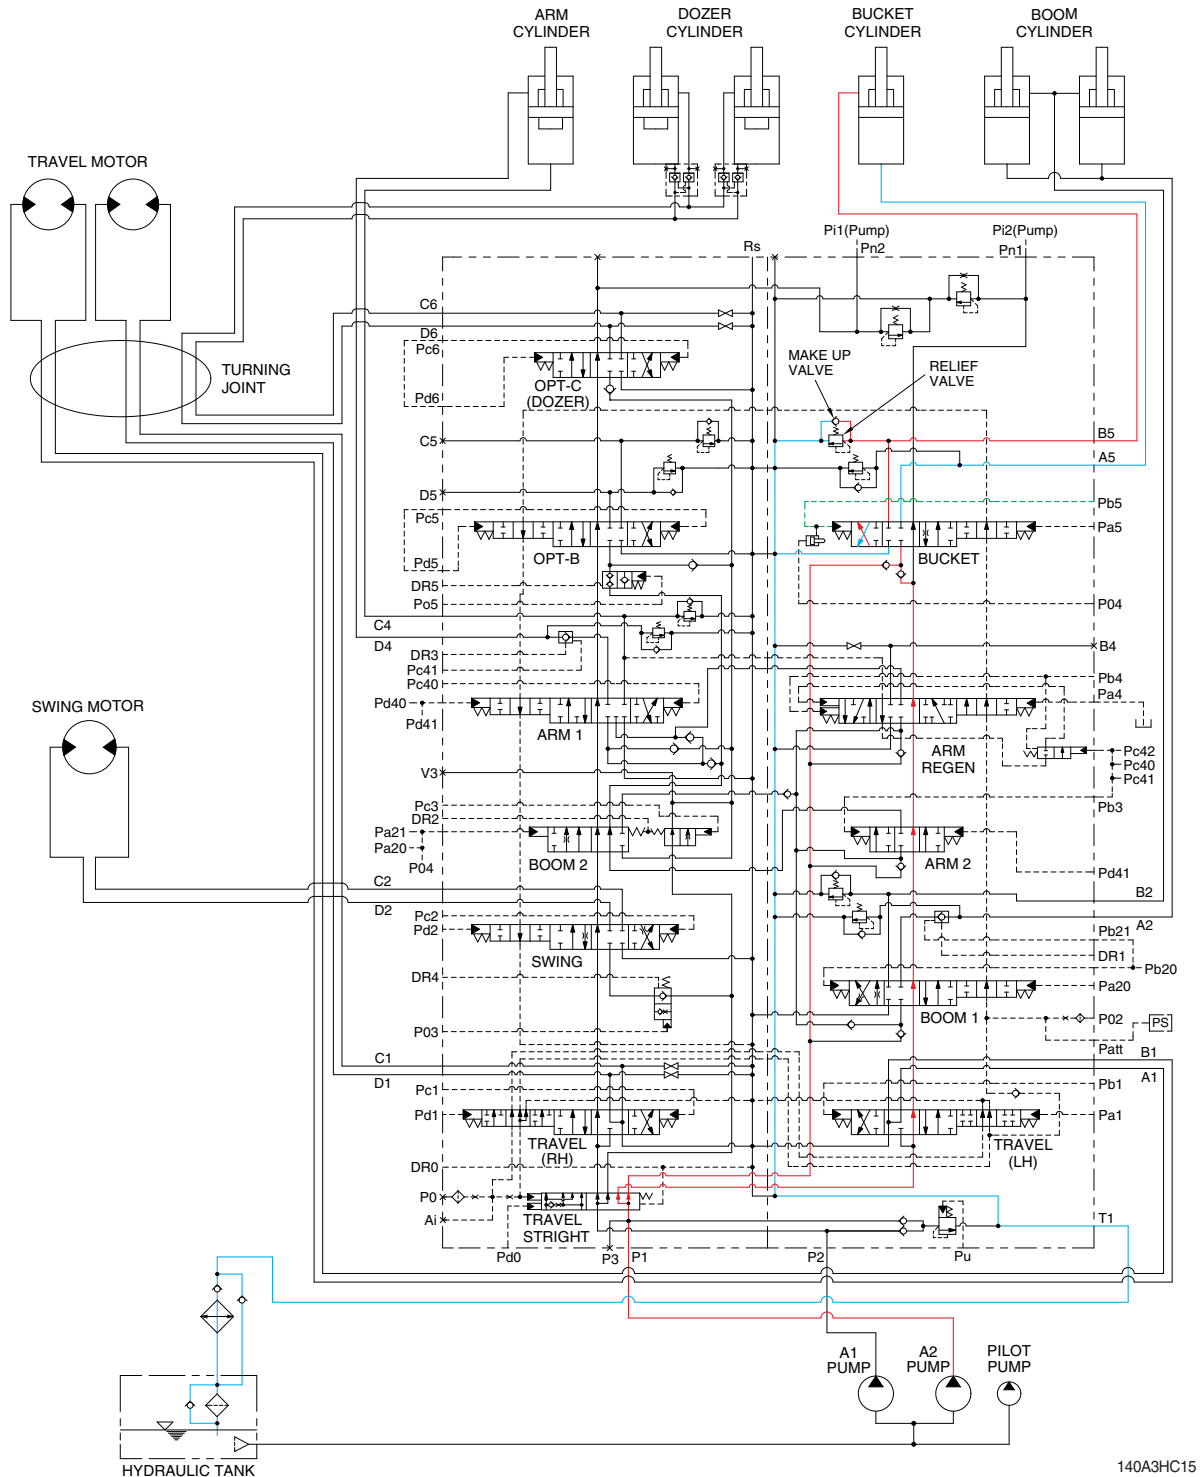

140A3HC15

When the right control lever is pushed right, the bucket spool in the main control valve is moved to the bucket out position by the pilot oil pressure (Pb5) from the remote control valve.

The oil from the A2 pump flows into the main control valve and then goes to the small chamber of bucket cylinder.


At the same time, the oil from the large chamber of bucket cylinder returns to the hydraulic oil tank through the bucket spool in the main control valve. When this happens, the bucket rolls out.

The excessive pressure in the bucket cylinder rod side is prevented by relief valve.

The cavitation which will happen to the rod side of the bucket cylinder is also prevented by the make-up valve in the main control valve.

※ The circuit diagram may differ from the equipment, so please check before a repair.

7. DOZER UP OPERATION

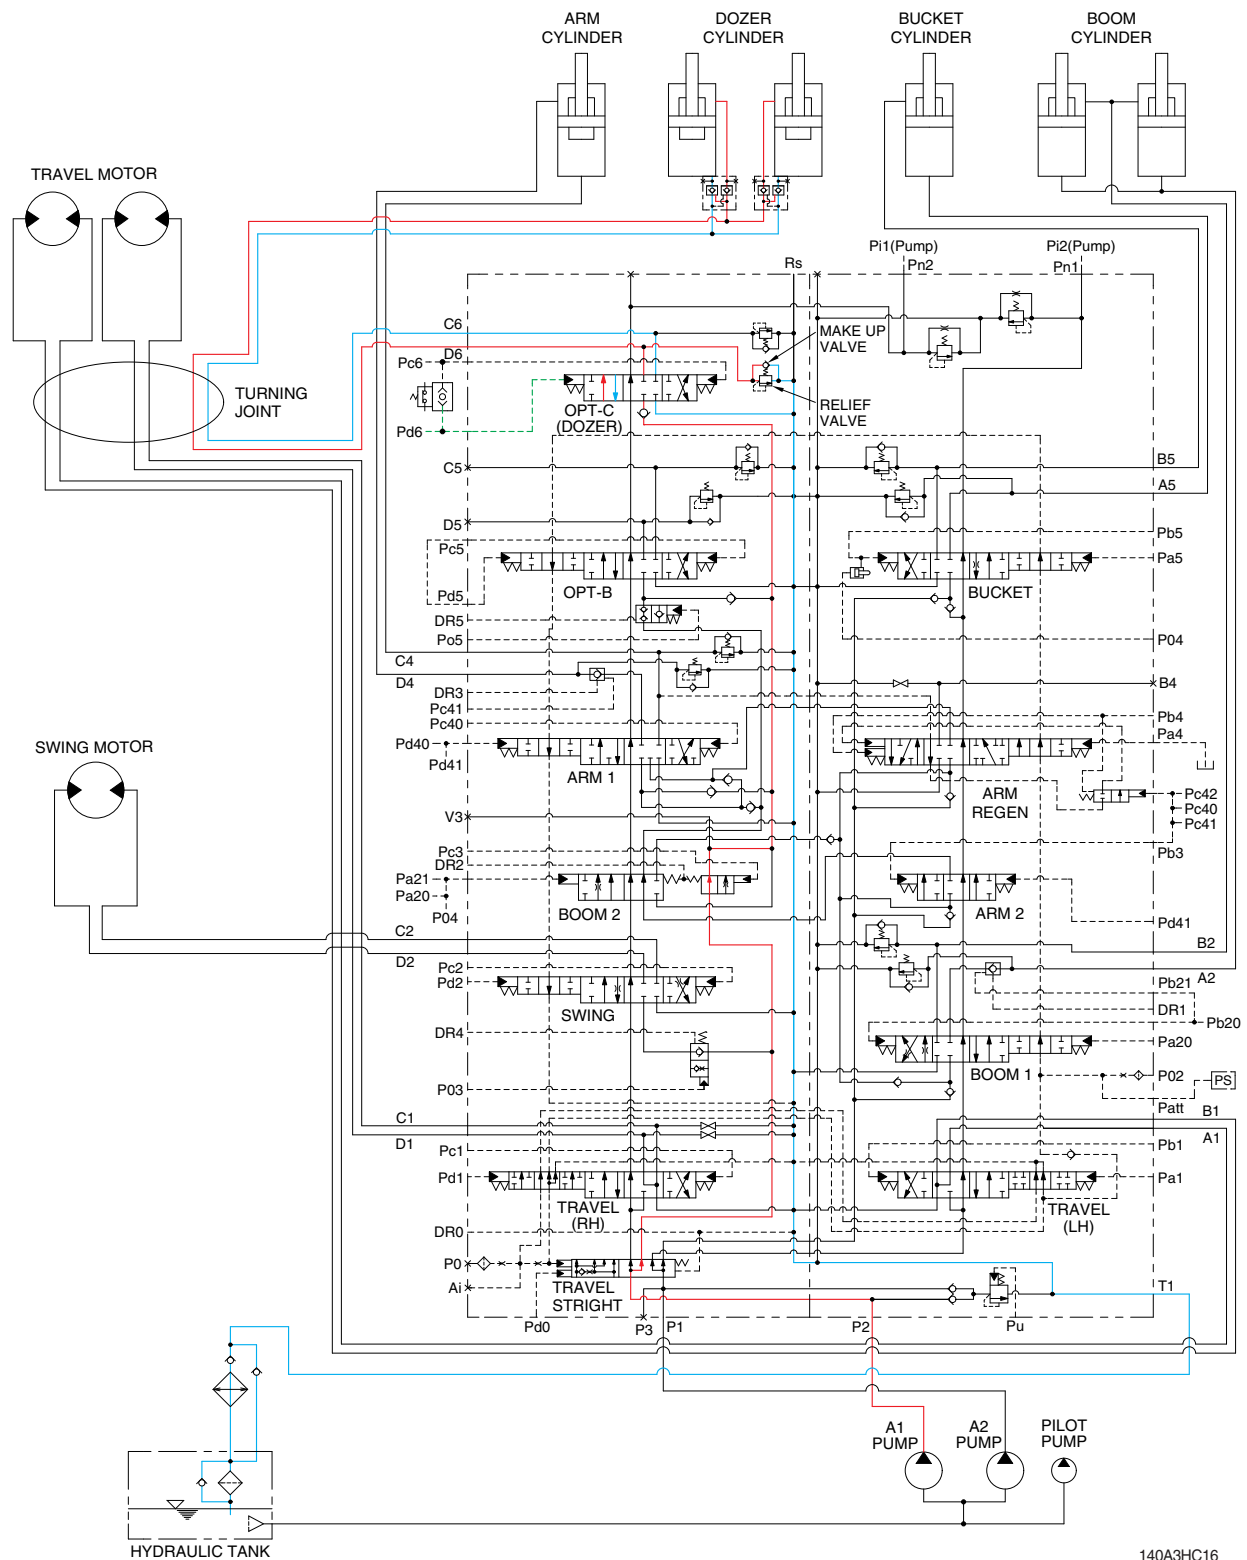


When the dozer control lever is pulled back, the dozer spool in the main control valve is moved to the dozer up position by the pilot oil pressure (Pd6) from the remote control valve.

The oil from the A1 pump flows into the main control valve and then goes to the small chamber of dozer cylinder.

At the same time, the oil from the large chamber of dozer cylinders returns to the hydraulic oil tank through the dozer spool in the main control valve. When this happens, the dozer goes up.

※ The circuit diagram may differ from the equipment, so please check before a repair.

8. DOZER DOWN OPERATION

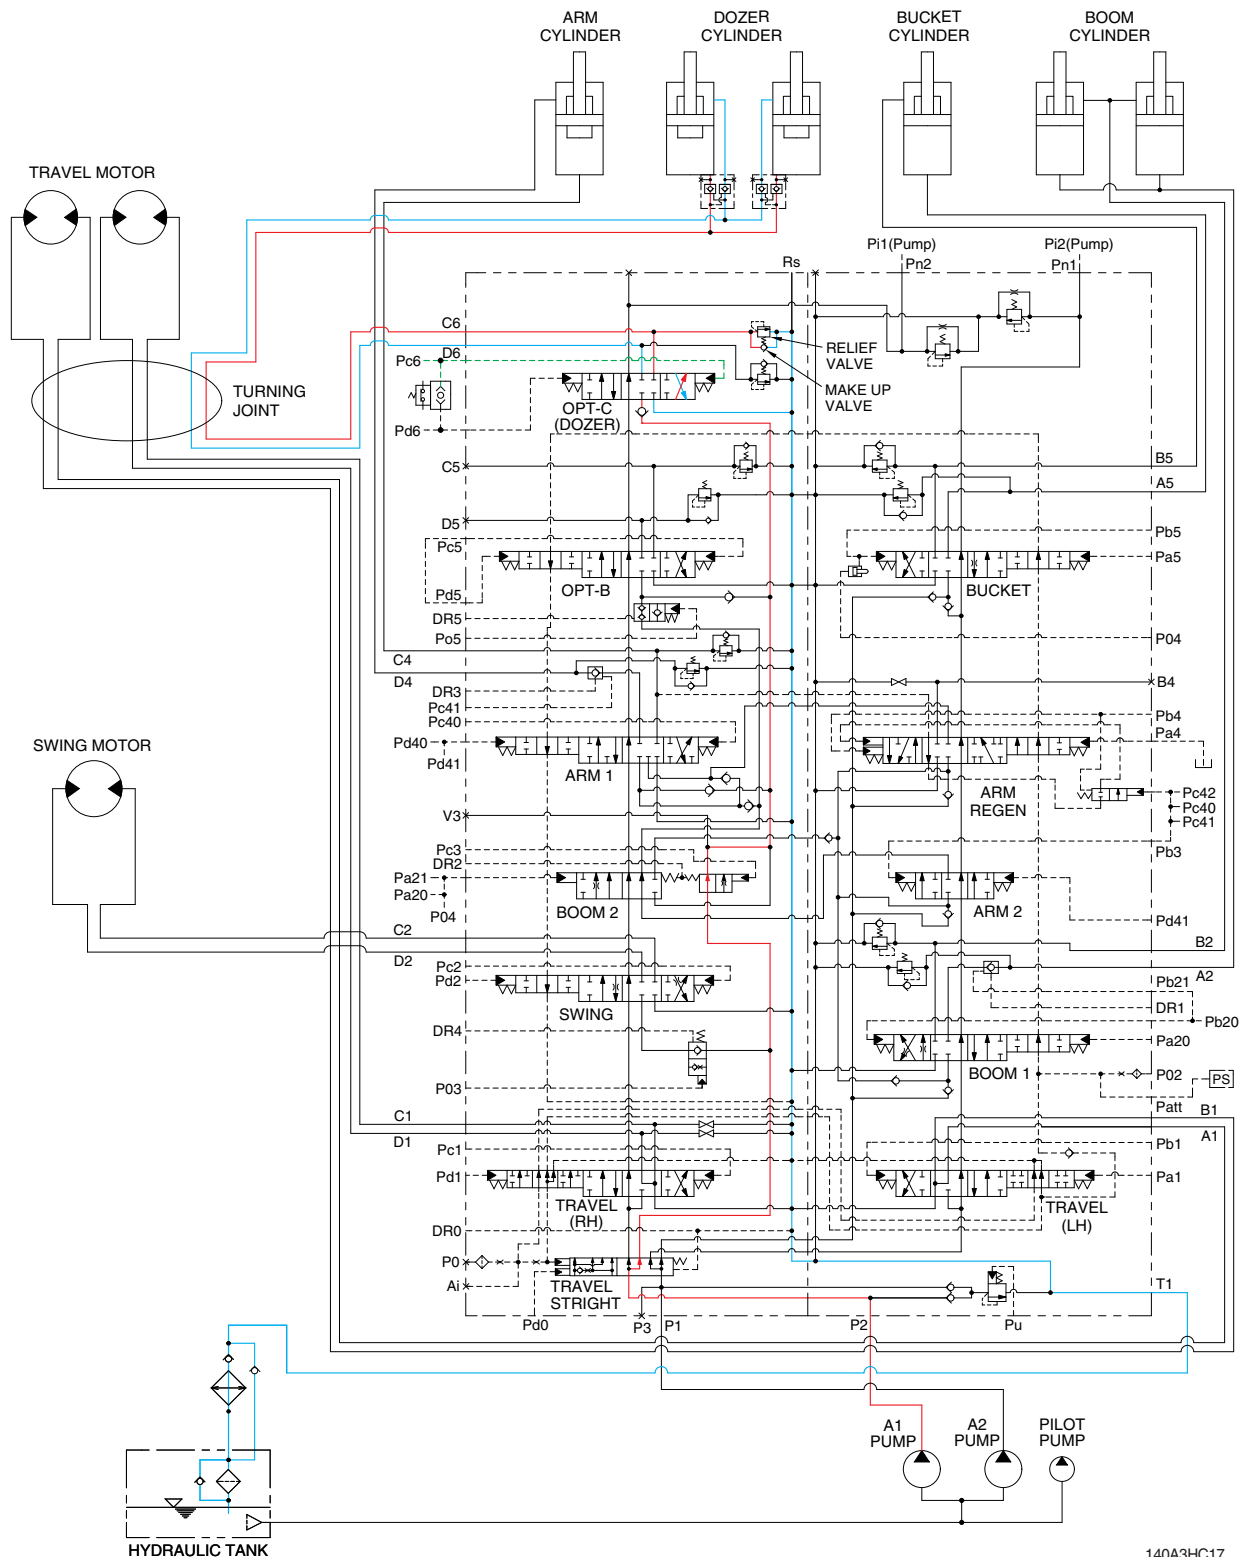

140A3HC17


When the dozer control lever is pushed forward, the dozer spool in the main control valve is moved to the dozer down position by the pilot oil pressure (Pc6) from the remote control valve.

The oil from the A1 pump flows into the main control valve and then goes to the large chamber of dozer cylinder.

At the same time, the oil from the small chamber of dozer cylinders returns to the hydraulic oil tank through the dozer spool in the main control valve. When this happens, the dozer goes down.

※ The circuit diagram may differ from the equipment, so please check before a repair.

9. SWING OPERATION

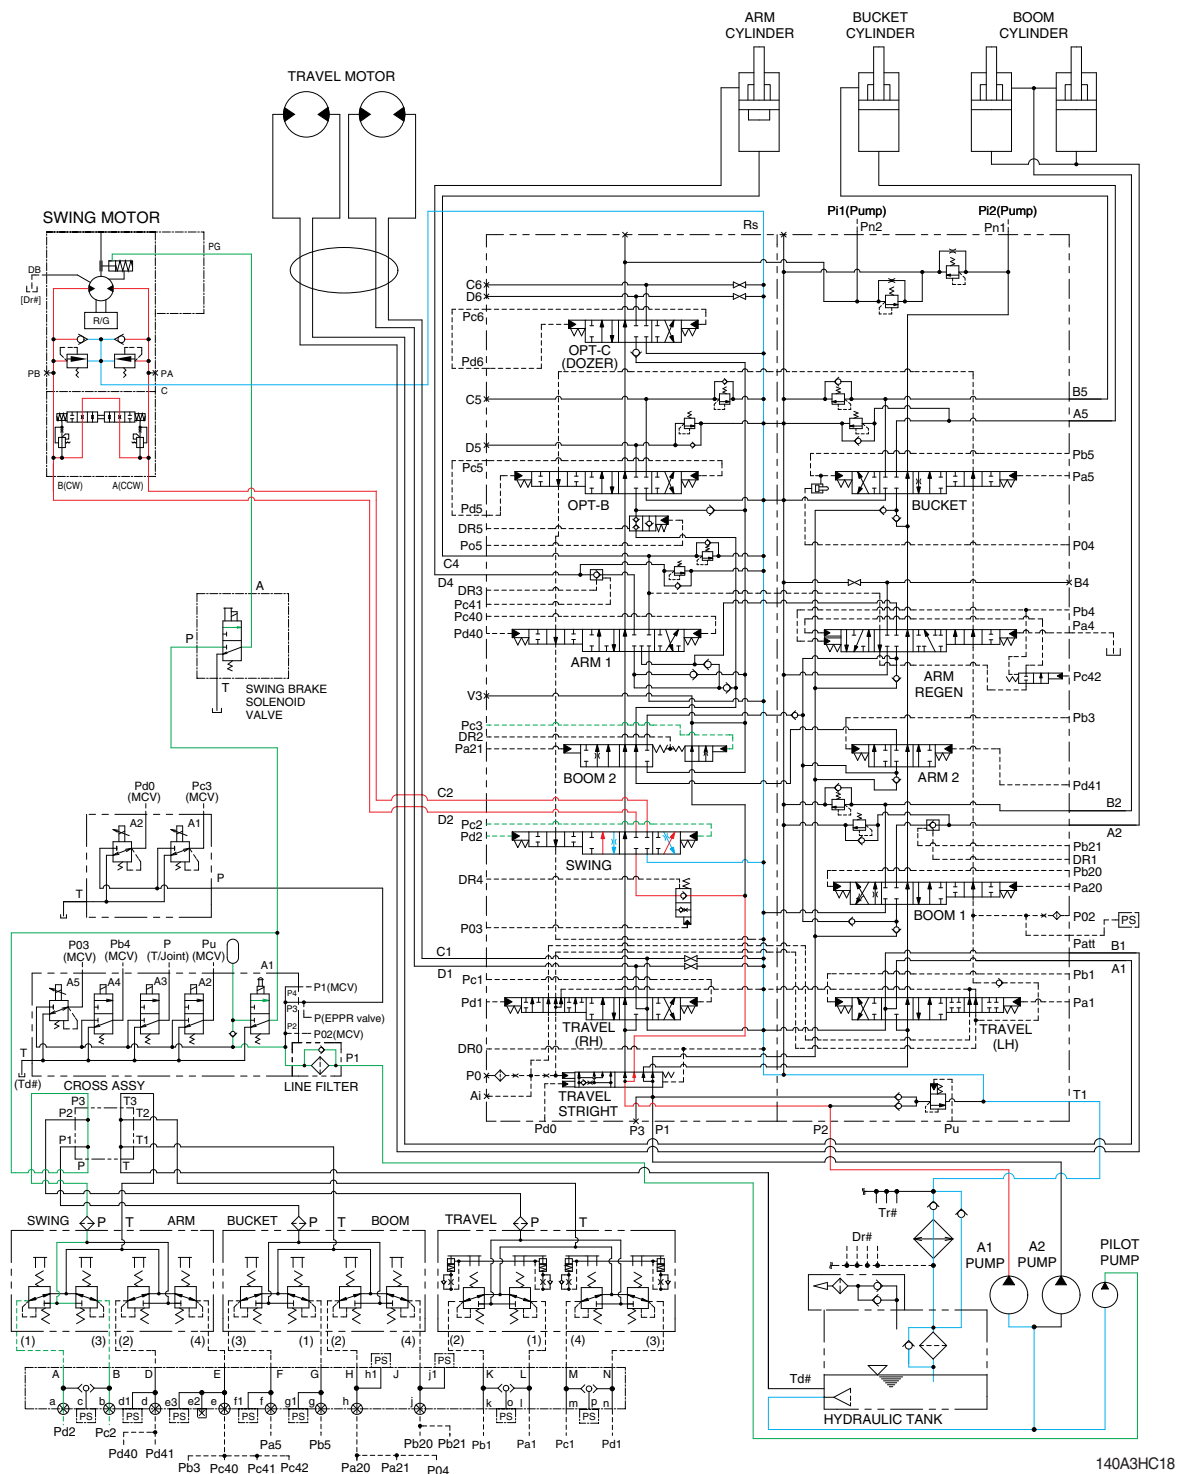

When the left control lever is pushed left or right, the swing spool in the main control valve is moved to the left or right swing position by the pilot oil pressure (Pc2, Pd2) from the remote control valve. Also the swing operation preference function is operated by the pilot pressure Pc3 (refer to page 3-14).


The oil from the A1 pump flows into the main control valve and then goes to the swing motor. At the same time, the return oil from the swing motor returns to the hydraulic oil tank through the swing spool in the main control valve.

When this happens, the upper structure swings to the left or right.

The swing parking brake, make up valve and the motor brake valve are provided in the swing motor. The cavitation which will happen to the swing motor is also prevented by the make up valve in the swing motor itself.

※ The circuit diagram may differ from the equipment, so please check before a repair.

SWING CIRCUIT OPERATION

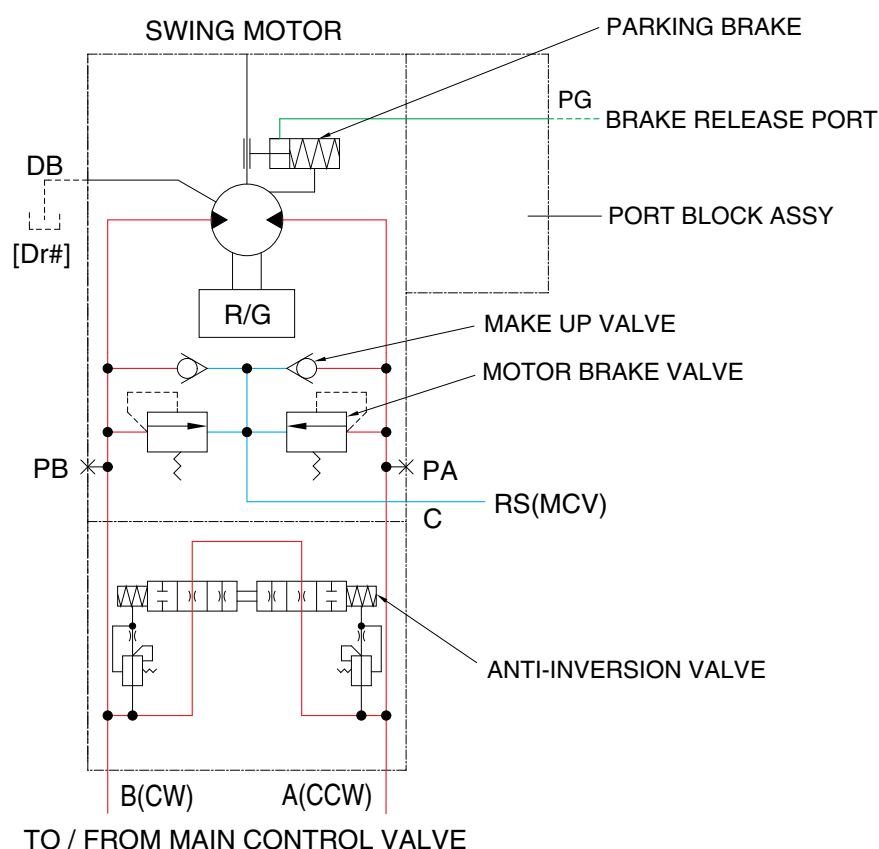

140A3HC18A

1) MOTOR BRAKE VALVE

Motor brake valve for the swing motor limits to cushion the starting and stopping pressure of swing operation and controls the swing motor operating pressure to 280 kgf/cm² (3990 psi).

2) MAKE UP VALVE

The make up valves prevent cavitation by supplying return oil to the vacuum side of the motor.

3) PARKING BRAKE

This is function as a parking brake only when any of the swing, arm in, boom up or travel control lever is not operated.

PARKING BRAKE "OFF" OPERATION

When any of the swing, arm in, travel or boom up control lever is tilted, the swing brake solenoid valve is energized by the MCU that senses the swing pilot oil pressure.

The discharged oil from pilot pump flows to swing motor PG port through the swing brake solenoid valve. This pressure is applied to swing parking brake piston, thus the brake is released.

PARKING BRAKE "ON" OPERATION


When all of the RCV levers are set in the neutral position, the swing brake solenoid valve is de-energized, oil in the swing parking brake chamber is drained through the the swing brake solenoid valve, thus the brake is applied by spring force.

4) ANTI-INVERSION VALVE

This anti-inversion valve absorbs shocks produced as swing motion stops and reduced oscillation cause by swing motion.

※ The circuit diagram may differ from the equipment, so please check before a repair.

10. TRAVEL FORWARD AND REVERSE OPERATION

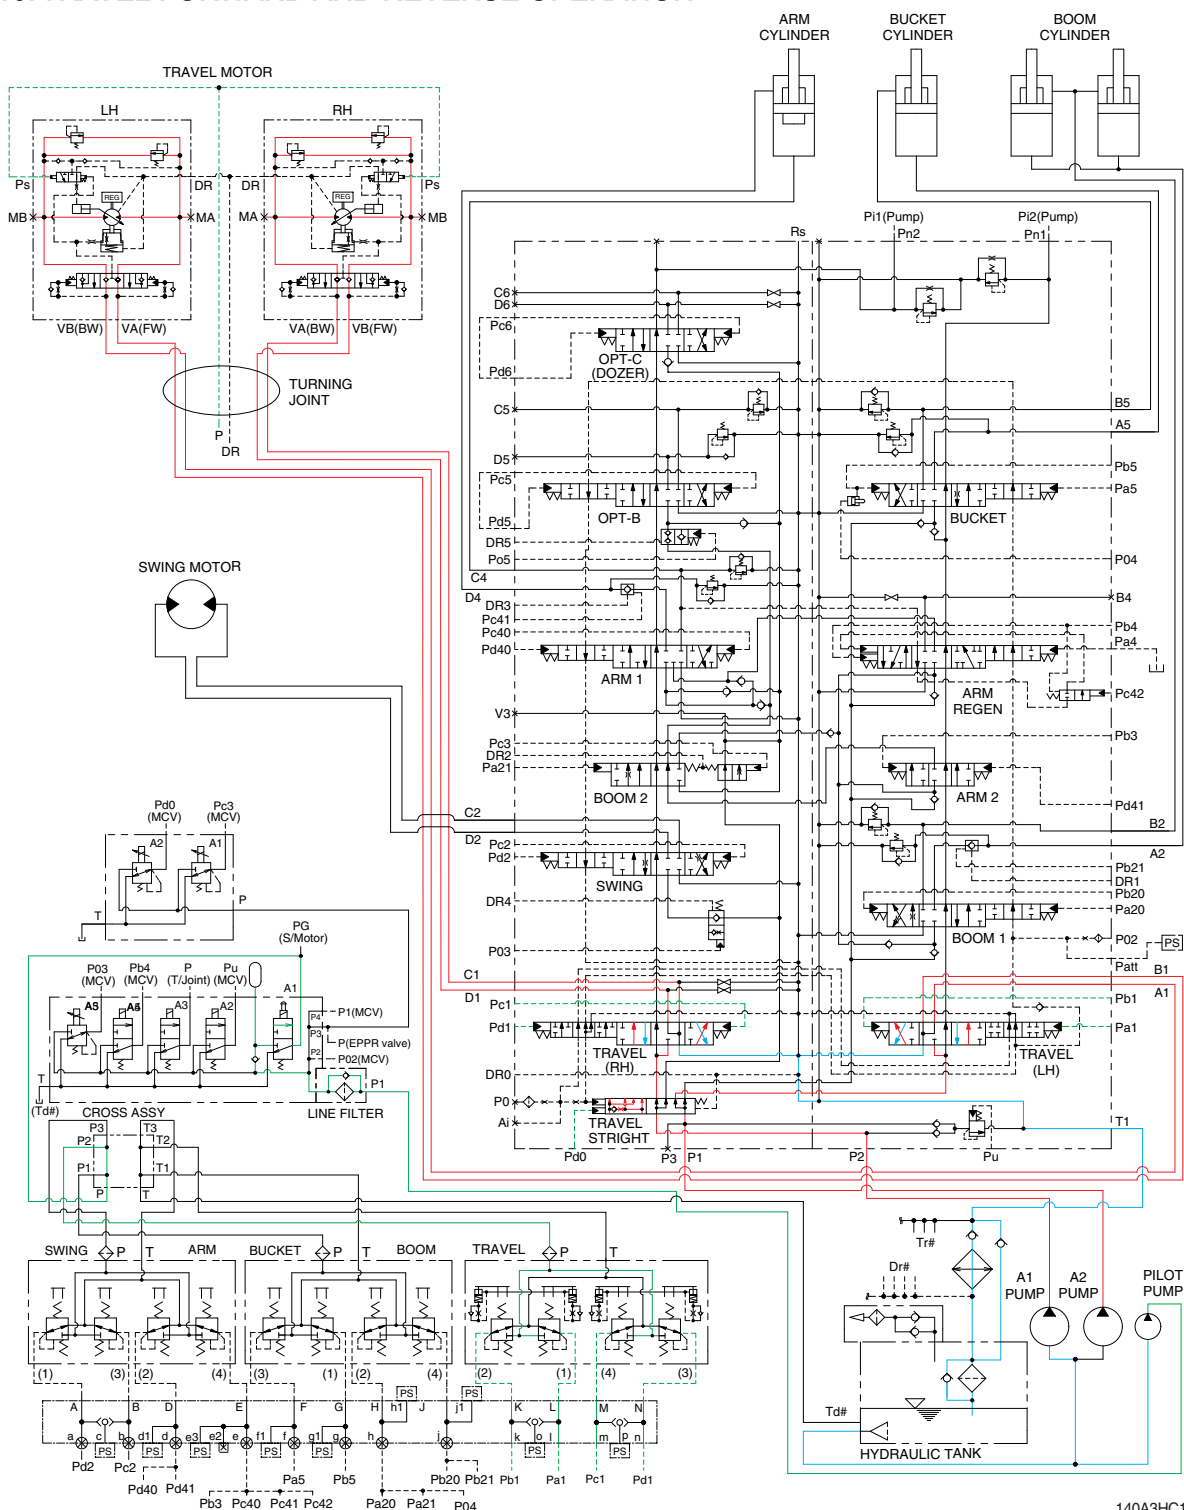

140A3HC19

When the travel levers are pushed forward or reverse position, the travel spools in the main control valve are moved to the forward or reverse travel position by the pilot oil pressure (Pa1, Pb1, Pc1, Pd1) from the remote control valve.


The travel straight spool is shifted to the right and the left and right travel oil supply passage are connected, and equivalent amount of oil flows into the left and right travel motors through the turning joint. This keeps the straight travel. Refer to the page 3-15.

The return oil from both travel motors returns to the hydraulic oil tank through the turning joint and the travel spools in the main control valve.

When this happens, the machine moves to the forward or reverse.

※ The circuit diagram may differ from the equipment, so please check before a repair.

TRAVEL CIRCUIT OPERATION

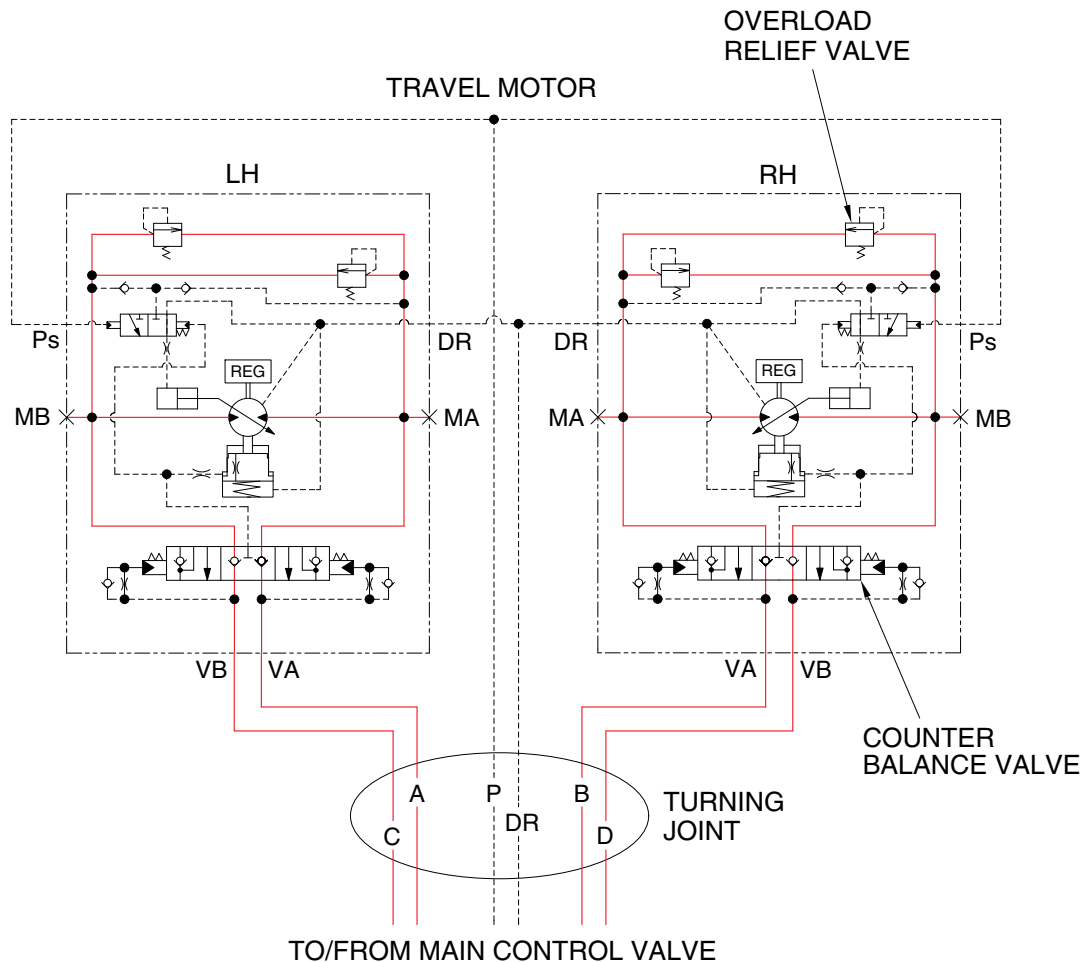

140A3HC19A

Valves are provided on travel motors to offer the following functions.

1) COUNTER BALANCE VALVE

When stopping the motor of slope descending, this valve to prevent the motor over run.


2) OVERLOAD RELIEF VALVE

Relief valve limit the circuit pressure below 380 kgf/cm² (5400 psi) to prevent high pressure generated at a time of stopping the machine. Stopping the motor, this valve sucks the oil from lower pressure passage for preventing the negative pressure and the cavitation of the motor.

※ The circuit diagram may differ from the equipment, so please check before a repair.

GROUP 5 COMBINED OPERATION

1. OUTLINE

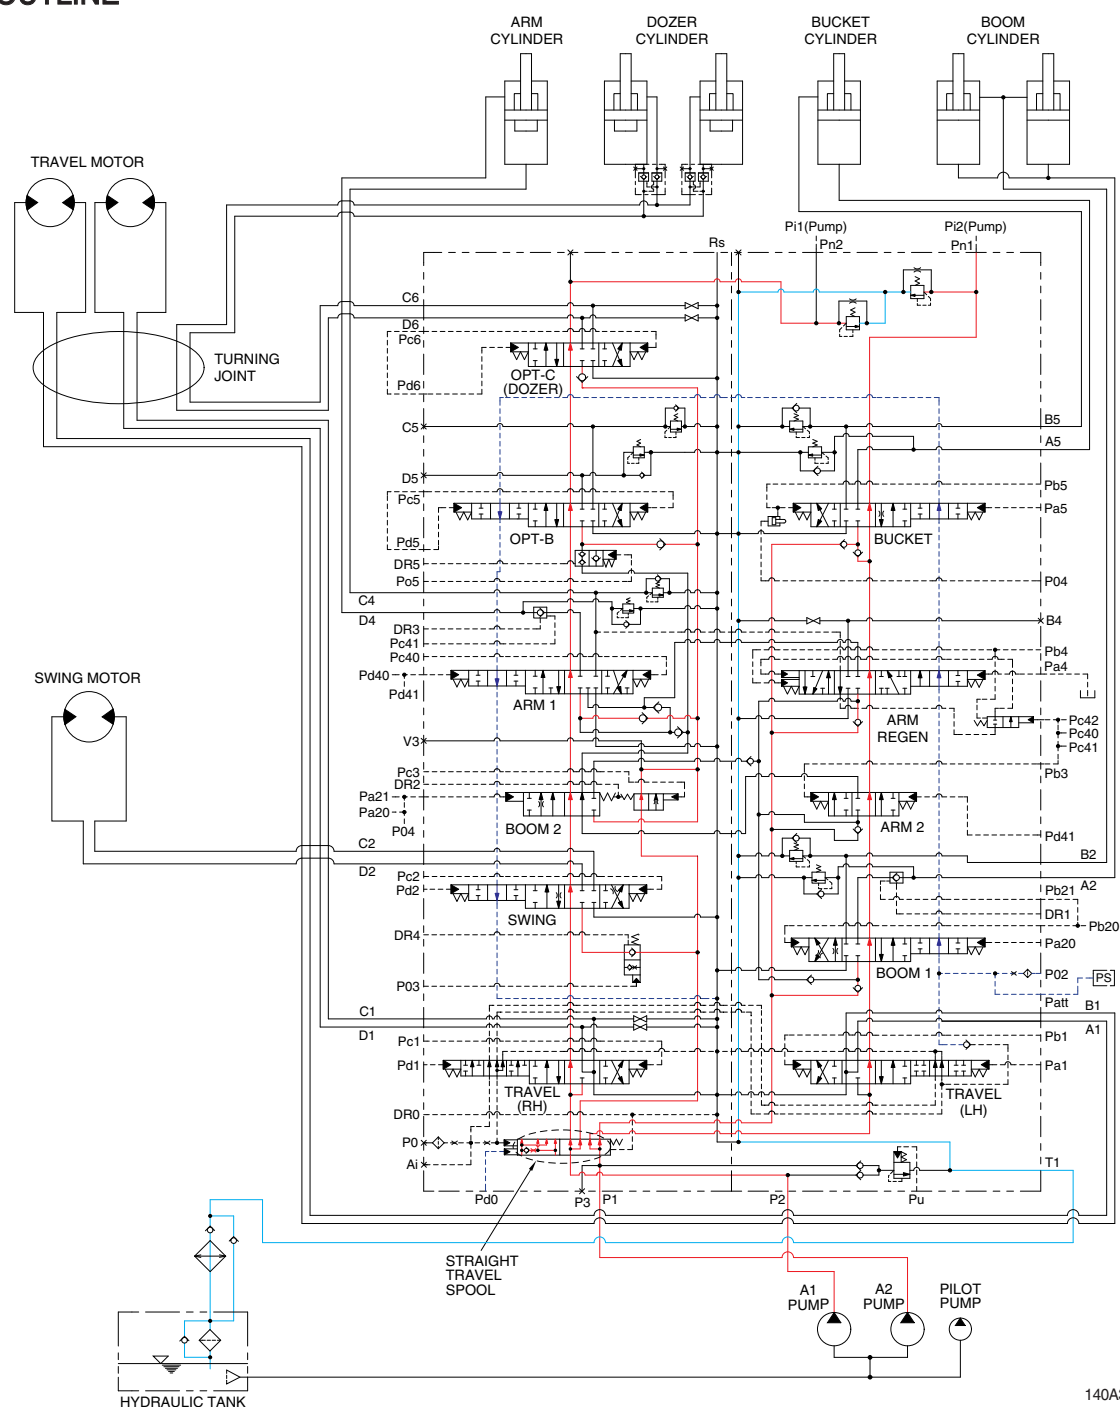


The oil from the A1 and A2 pump flows through the neutral oil passage, bypass oil passage and confluence oil passage in the main control valve. Then the oil goes to each actuator and operates them. Check valves and orifices are located on these oil passage in the main control valve. These control the oil from the main pumps so as to correspond to the operation of each actuator and smooth the combined operation.

STRAIGHT TRAVEL SPOOL

This straight travel spool for straight travel is provided in the main control valve. Refer to the page 3-15 for details.

※ The circuit diagram may differ from the equipment, so please check before a repair.

2. COMBINED SWING AND BOOM UP OPERATION

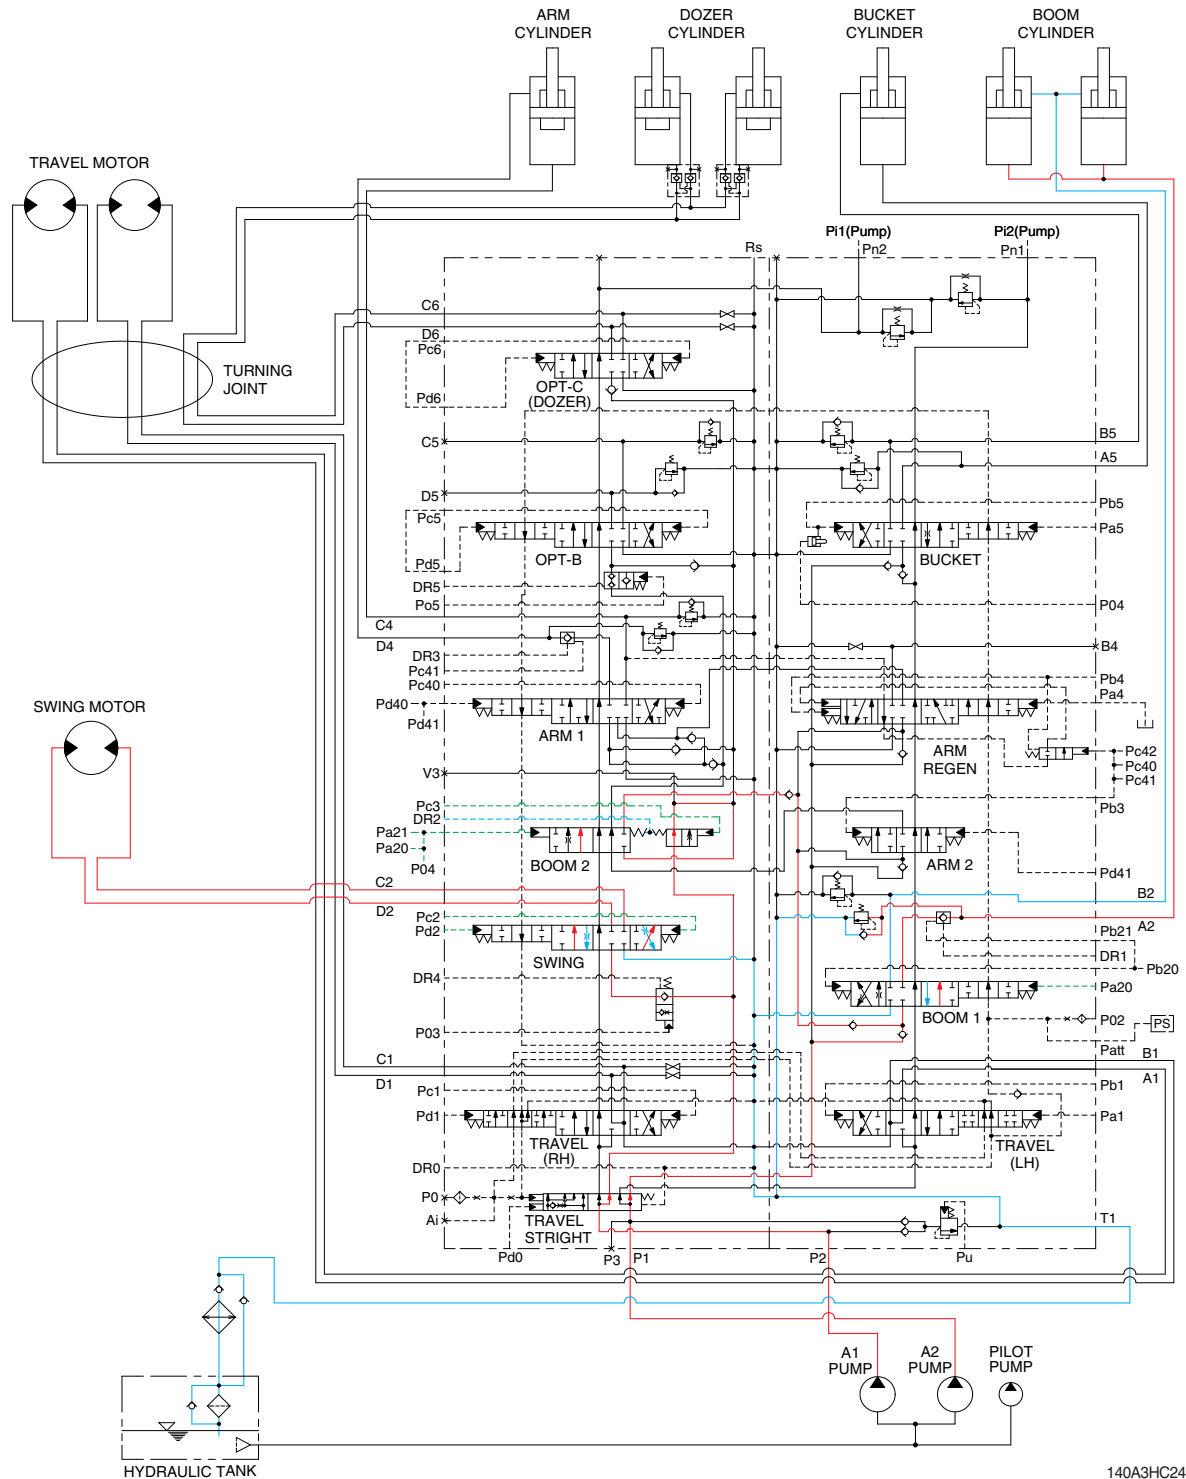

140A3HC24

When the swing and boom up functions are operated simultaneously, the swing spool and boom spools in the main control valve are moved to the functional position by the pilot oil pressure (Pc2, Pd2, Pa20, Pa21) from the remote control valve.

The oil from the A1 pump flows into the swing motor through swing spool and the boom cylinders through boom 2 spool.


The oil from the A2 pump flows into the boom cylinders through the boom 1 spool in the right control valve.

The super structure swings and the boom is operated.

Refer to page 3-9 for the boom priority system.

※ The circuit diagram may differ from the equipment, so please check before a repair.

3. COMBINED SWING AND ARM OPERATION

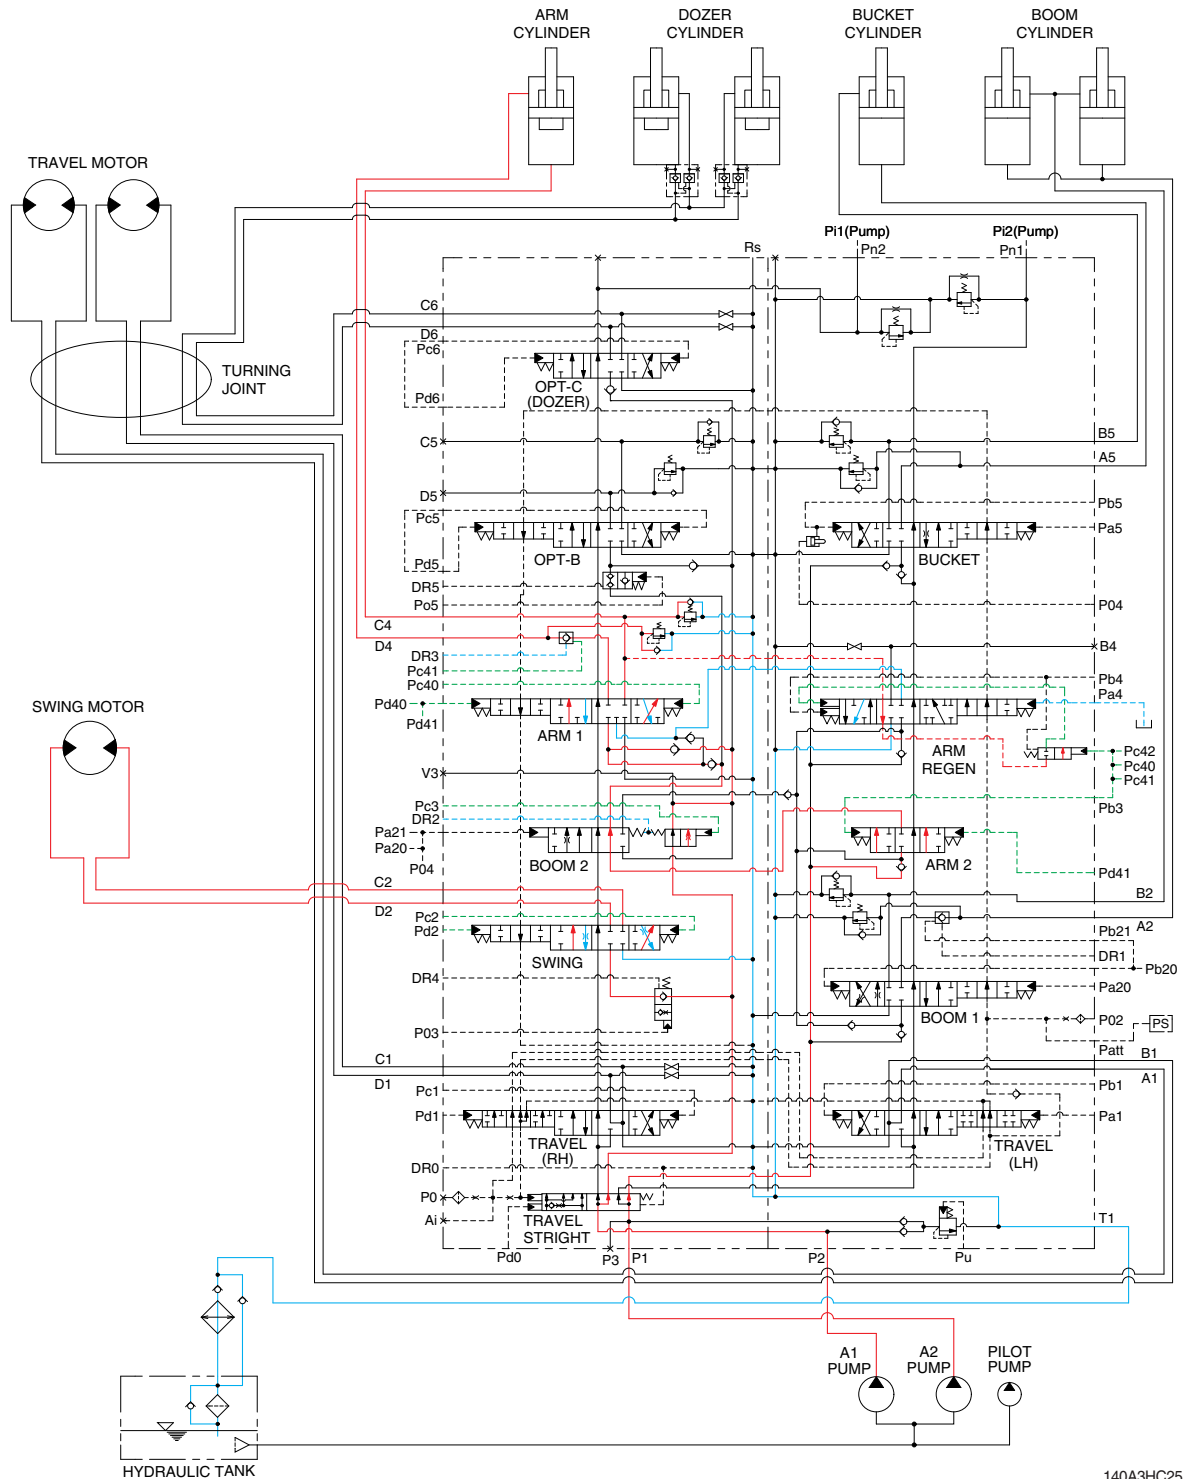

140A3HC25

When the swing and arm functions are operated simultaneously, the swing spool and arm spools in the main control valve are moved to the functional position by the pilot oil pressure (Pc2, Pd2, Pc40, Pb3, Pd40, Pd41) from the remote control valve.

The oil from the A1 pump flows into the swing motor through swing spool and the arm cylinder through arm 1 spool.


The oil from the A2 pump flows into the arm cylinder through the arm 2 spool of the right control valve.

The super structure swings and the arm is operated.

Refer to page 3-14 for the swing operation preference function.

※ The circuit diagram may differ from the equipment, so please check before a repair.

4. COMBINED SWING AND BUCKET OPERATION

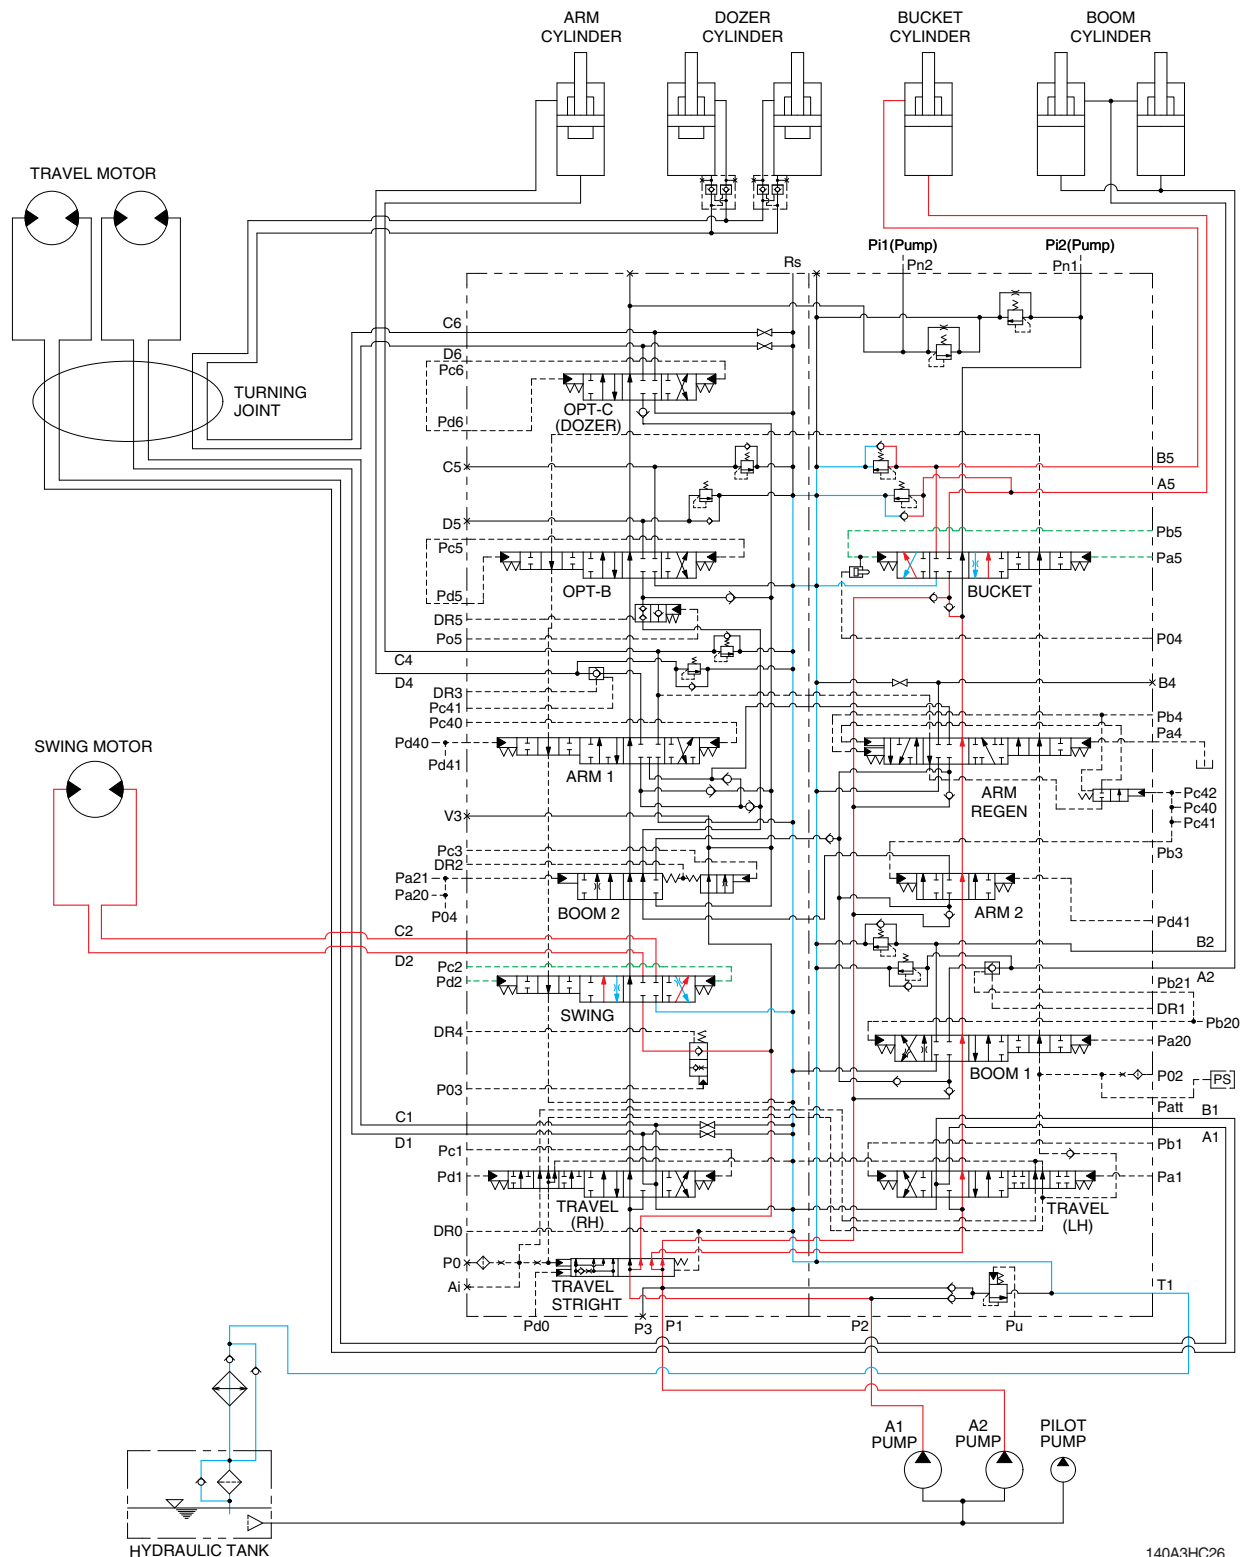

140A3HC26


When the swing and bucket functions are operated simultaneously, the swing spool and bucket spool in the main control valve are moved to the functional position by the pilot oil pressure (Pc2, Pd2, Pa5, Pb5) from the remote control valve.

The oil from the A1 pump flows into the swing motor through the swing spool in the left control valve. The oil from the A2 pump flows into the bucket cylinder through the bucket spool in the right control valve.

The super structure swings and the bucket is operated.

※ The circuit diagram may differ from the equipment, so please check before a repair.

5. COMBINED SWING AND TRAVEL OPERATION

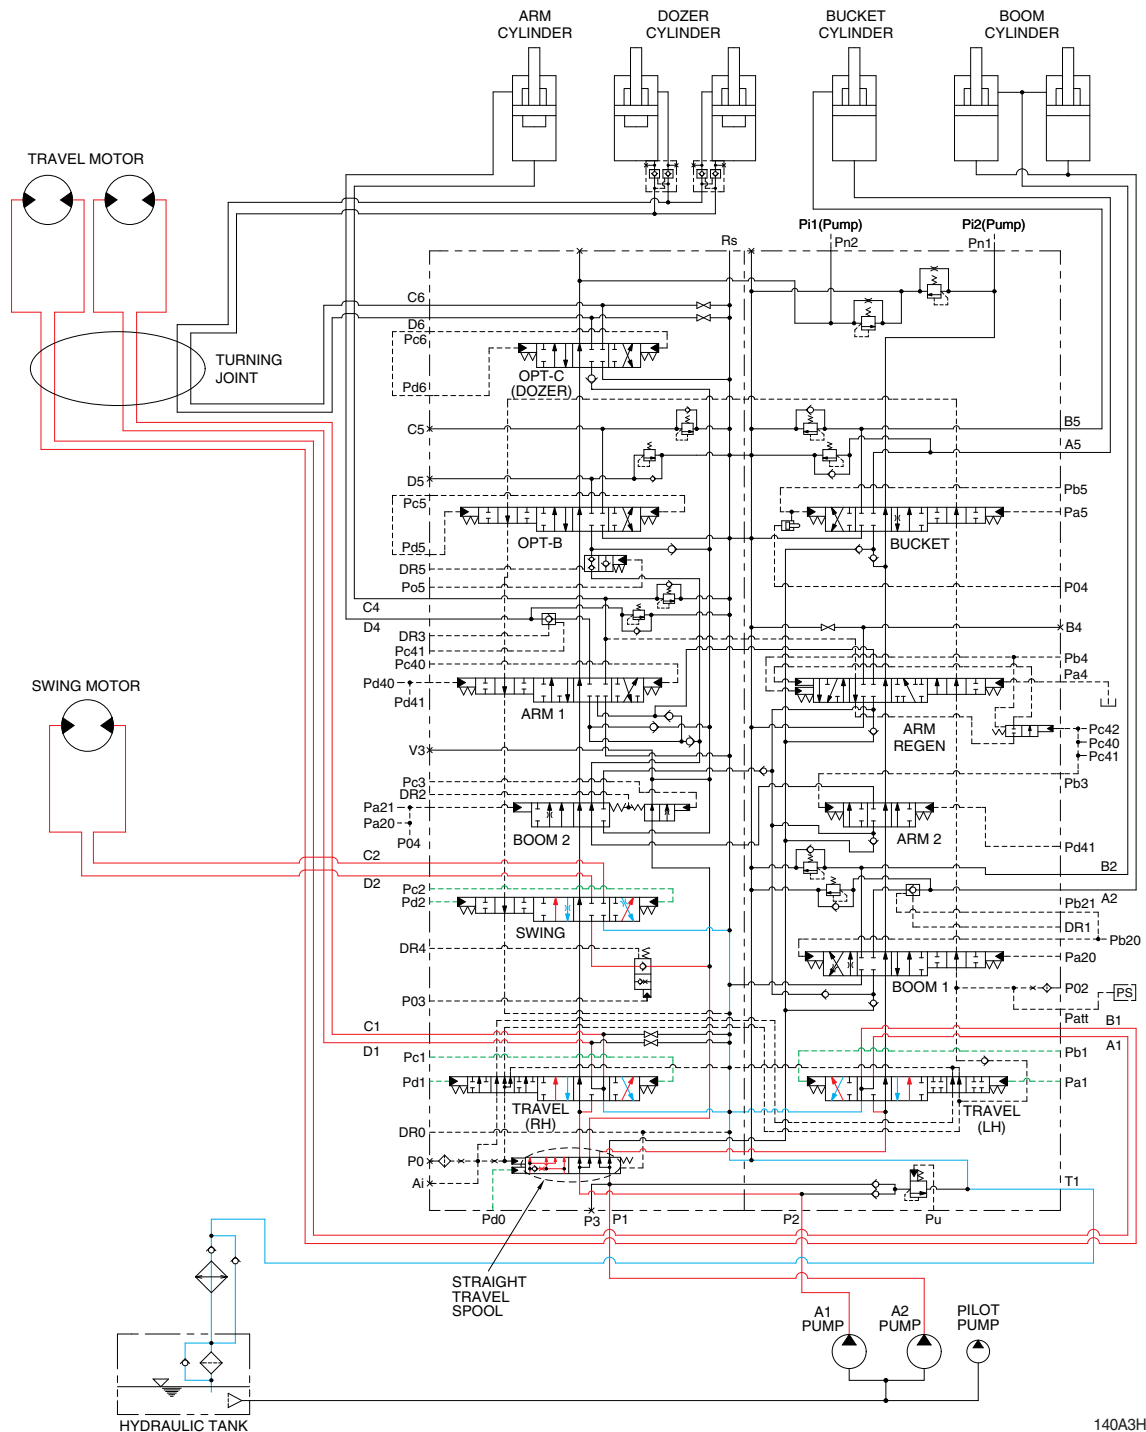

140A3HC27

When the swing and travel functions are operated simultaneously, the swing spool and travel spools in the main control valve are moved to the functional position by the pilot oil pressure (Pc2, Pd2, Pa1, Pb1, Pc1, Pd1) from the remote control valve and straight travel spool is pushed to the right by the pilot oil pressure of the travel straight EPPR valve.

The oil from the A1 pump flows into the travel motors through the RH travel spool of the left control valve and the LH travel spool of the right control valve via the straight travel spool.


The oil from the A2 pump flows into the swing motor through in the straight travel spool.

When the pressure of the travel motors is lower than the pressure of the swing motor, some oil from the A2 pump flows into the travel motors through the check valve and orifice in the straight travel spool. This prevents the rapid slowdown of the travel.

The upper structure swings and the machine travels straight.

※ The circuit diagram may differ from the equipment, so please check before a repair.

6. COMBINED BOOM AND TRAVEL OPERATION

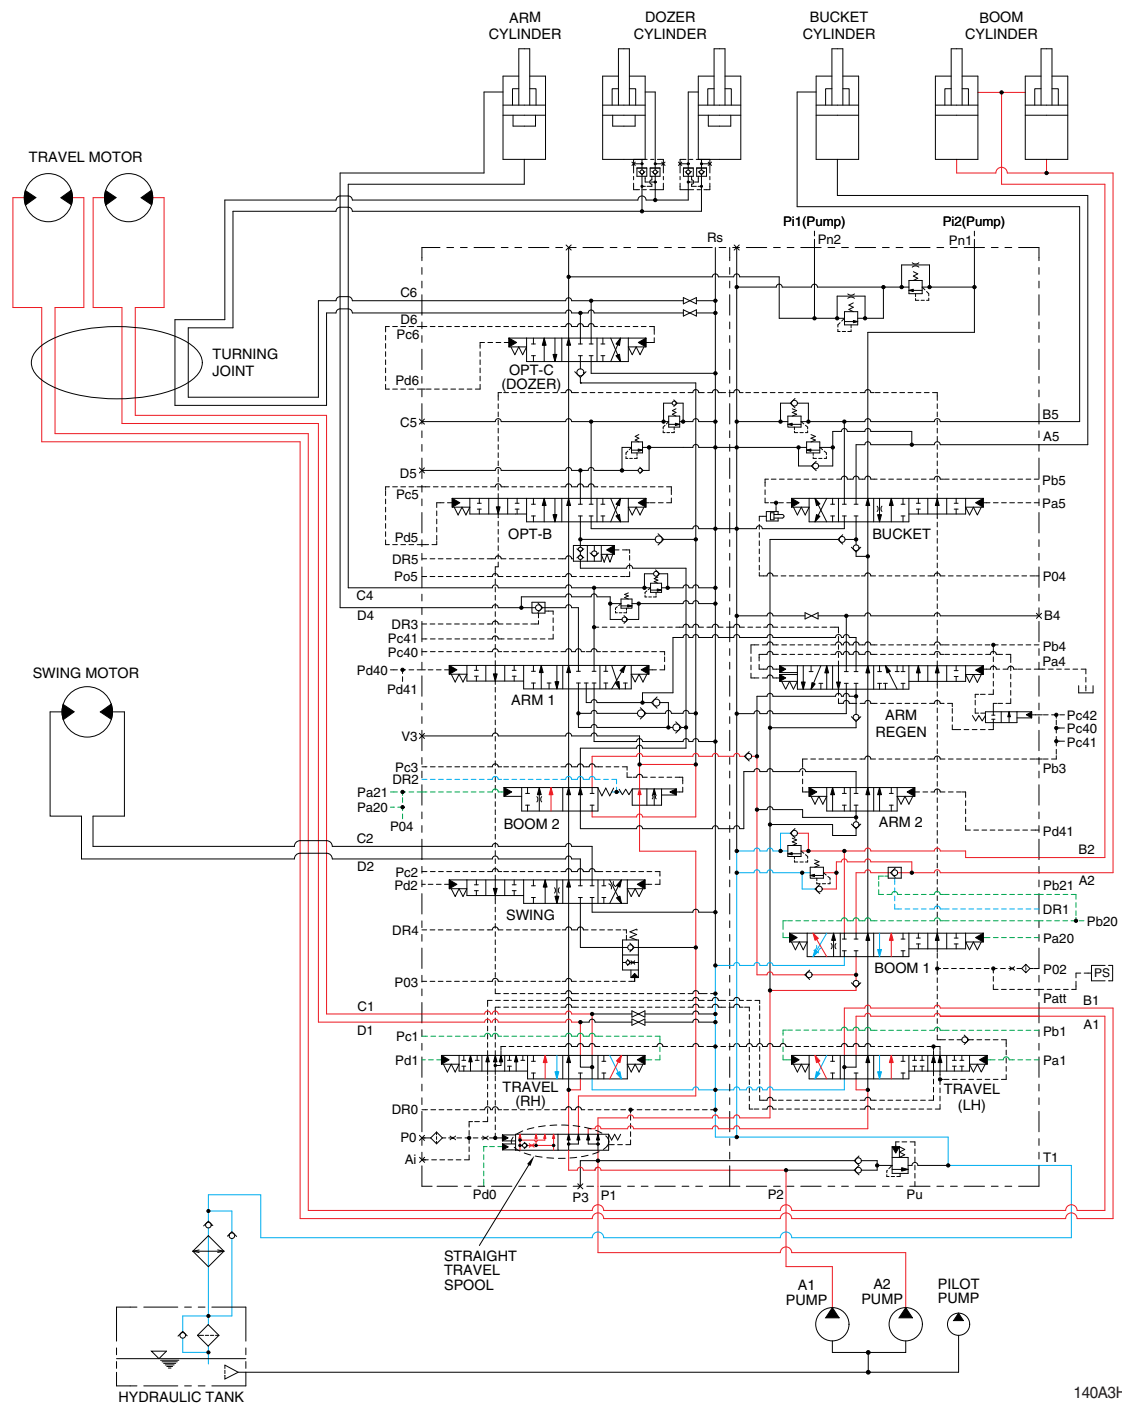

140A3HC28

When the boom and travel functions are operated simultaneously, the boom spools and travel spools in the main control valve are moved to the functional position by the pilot oil pressure (Pa20, Pa21, Pb20, Pc2, Pd2, Pa1, Pb1, Pc1, Pd1) from the remote control valve and the straight travel spool is pushed to the right by the oil pressure of the travel straight EPPR valve.

The oil from the A1 pump flows into the travel motors through the RH travel spool of the left control valve and the LH travel spool of the right control valve via the straight travel spool.


The oil from the A2 pump flows into the boom cylinders through the boom 2 spool and boom 1 spool via the parallel and confluence oil passage in case boom up operation.

When the pressure of the travel motors is lower than the pressure of the boom cylinders, some oil from the A2 pump flows into the travel motors through the check valve and orifice in the straight travel spool. This prevents the rapid slowdown of the travel.

The boom is operated and the machine travels straight.

※ The circuit diagram may differ from the equipment, so please check before a repair.

7. COMBINED ARM AND TRAVEL OPERATION

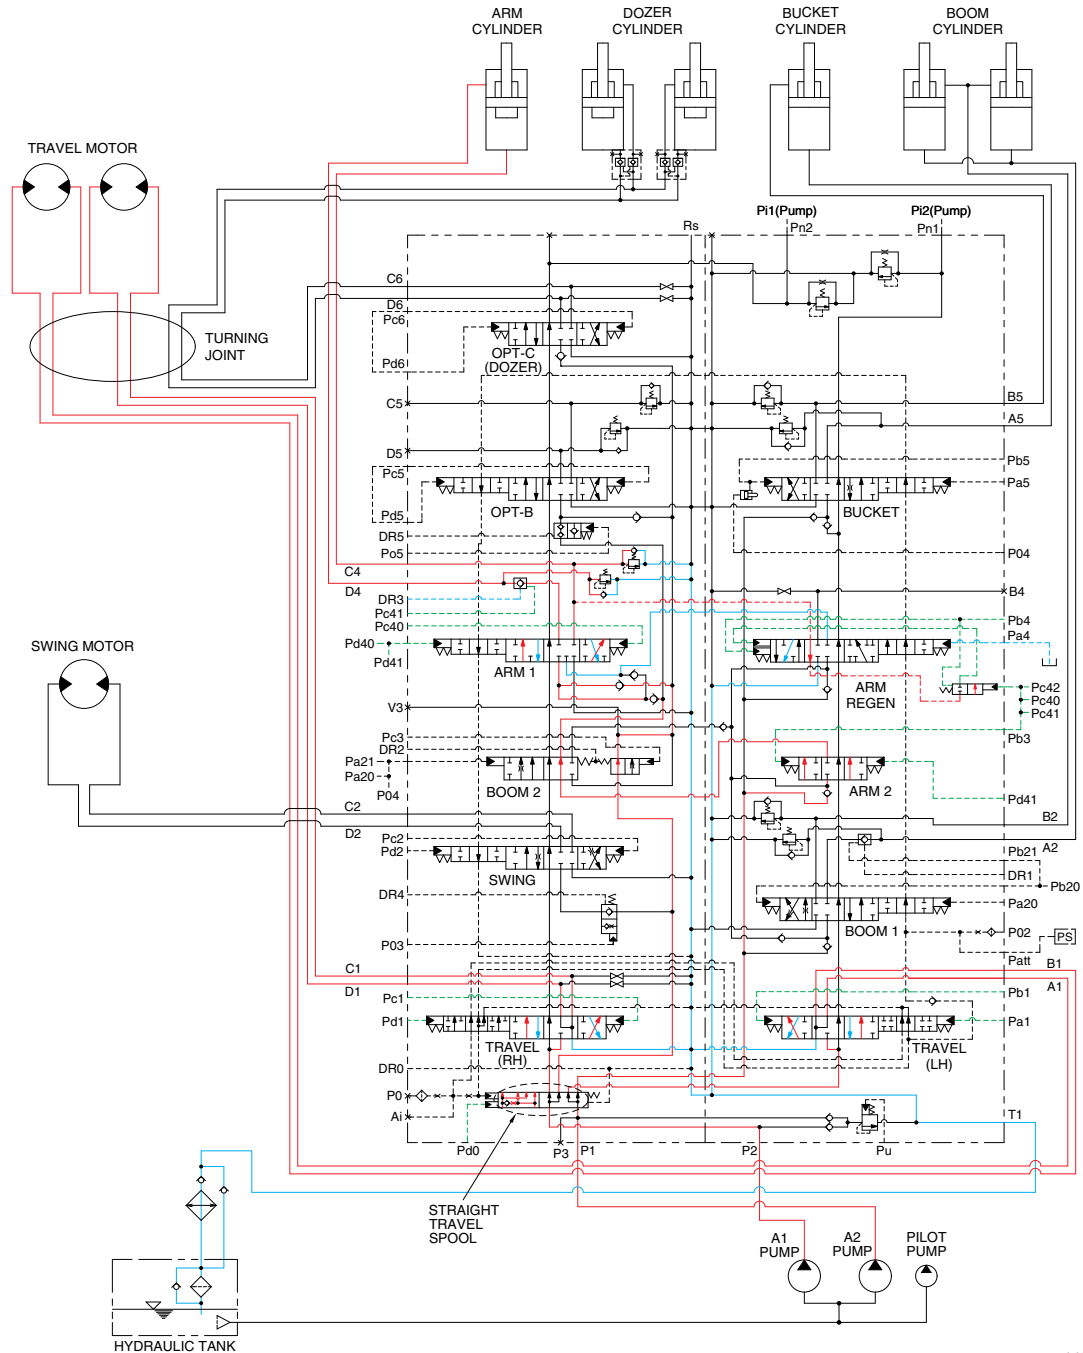

140A3HC29

When the arm and travel functions are operated simultaneously, the arm spools and travel spools in the main control valve are moved to the functional position by the pilot oil pressure (Pc40, Pb3, Pd40, Pd41, Pa1, Pb1, Pc1, Pd1) from the remote control valve and the straight travel spool is pushed to the right by the oil pressure of the travel straight EPPR valve.

The oil from the A1 pump flows into the travel motors through the RH travel spool of the left control valve and the LH travel spool of the right control valve via the straight travel spool.


The oil from the A2 pump flows into the arm cylinders through the arm 1 spool and arm 2 spool via the parallel and confluence oil passage.

When the pressure of the travel motors is lower than the pressure of the arm cylinder, some oil from the A2 pump flows into the travel motors through the check valve and orifice in the straight travel spool. This prevents the rapid slowdown of the travel.

The arm is operated and the machine travels straight.

※ The circuit diagram may differ from the equipment, so please check before a repair.

8. COMBINED BUCKET AND TRAVEL OPERATION

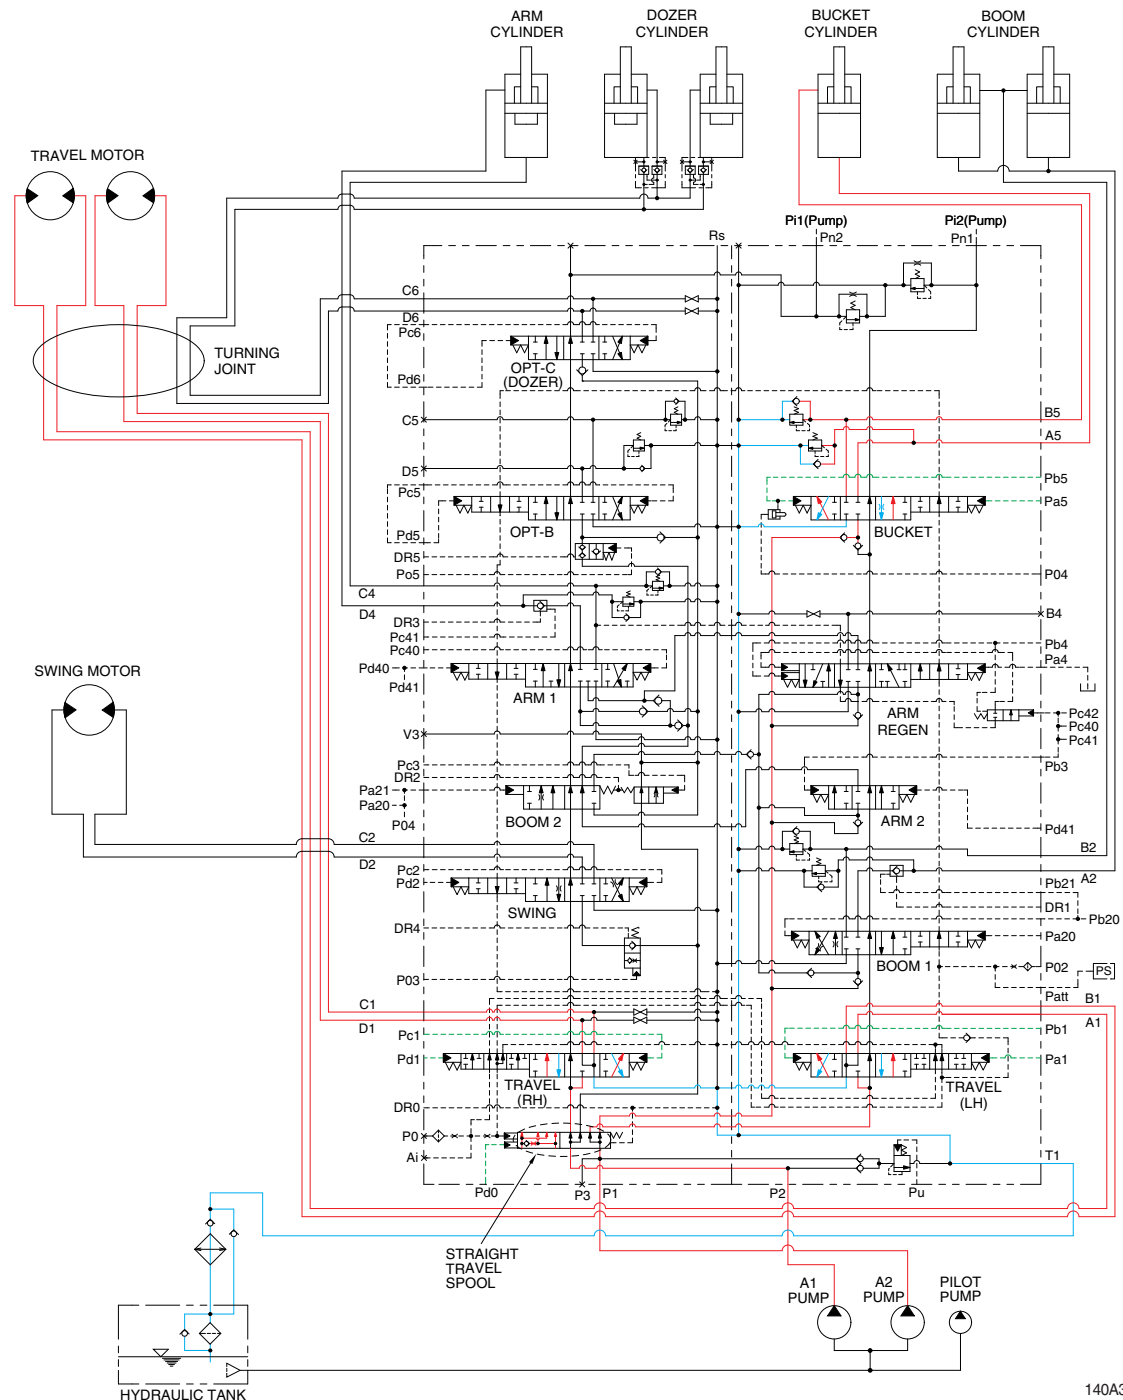

When the bucket and travel functions are operated simultaneously, the bucket spool and travel spools in the main control valve are moved to the functional position by the pilot oil pressure (Pa5, Pb5, Pa1, Pb1, Pc1, Pd1) from the remote control valve, and the straight travel spool is pushed to the right by the oil pressure of the travel straight EPPR valve. The oil from the A1 pump flows into the travel motors through the RH travel spool of the left control valve and the LH travel spool of the right control valve via the straight travel spool of the control valve.


The oil from the A2 pump flows into the bucket cylinder through the bucket spool via the confluence oil passage.

When the pressure of the travel motors is lower than the pressure of the bucket cylinder, some oil from the A2 pump flows into the travel motors through the check valve and orifice in the straight travel spool. This prevents the rapid slowdown of the travel.

The bucket is operated and the machine travels straight.

※ The circuit diagram may differ from the equipment, so please check before a repair.

9. COMBINED BOOM UP AND BUCKET OPERATION

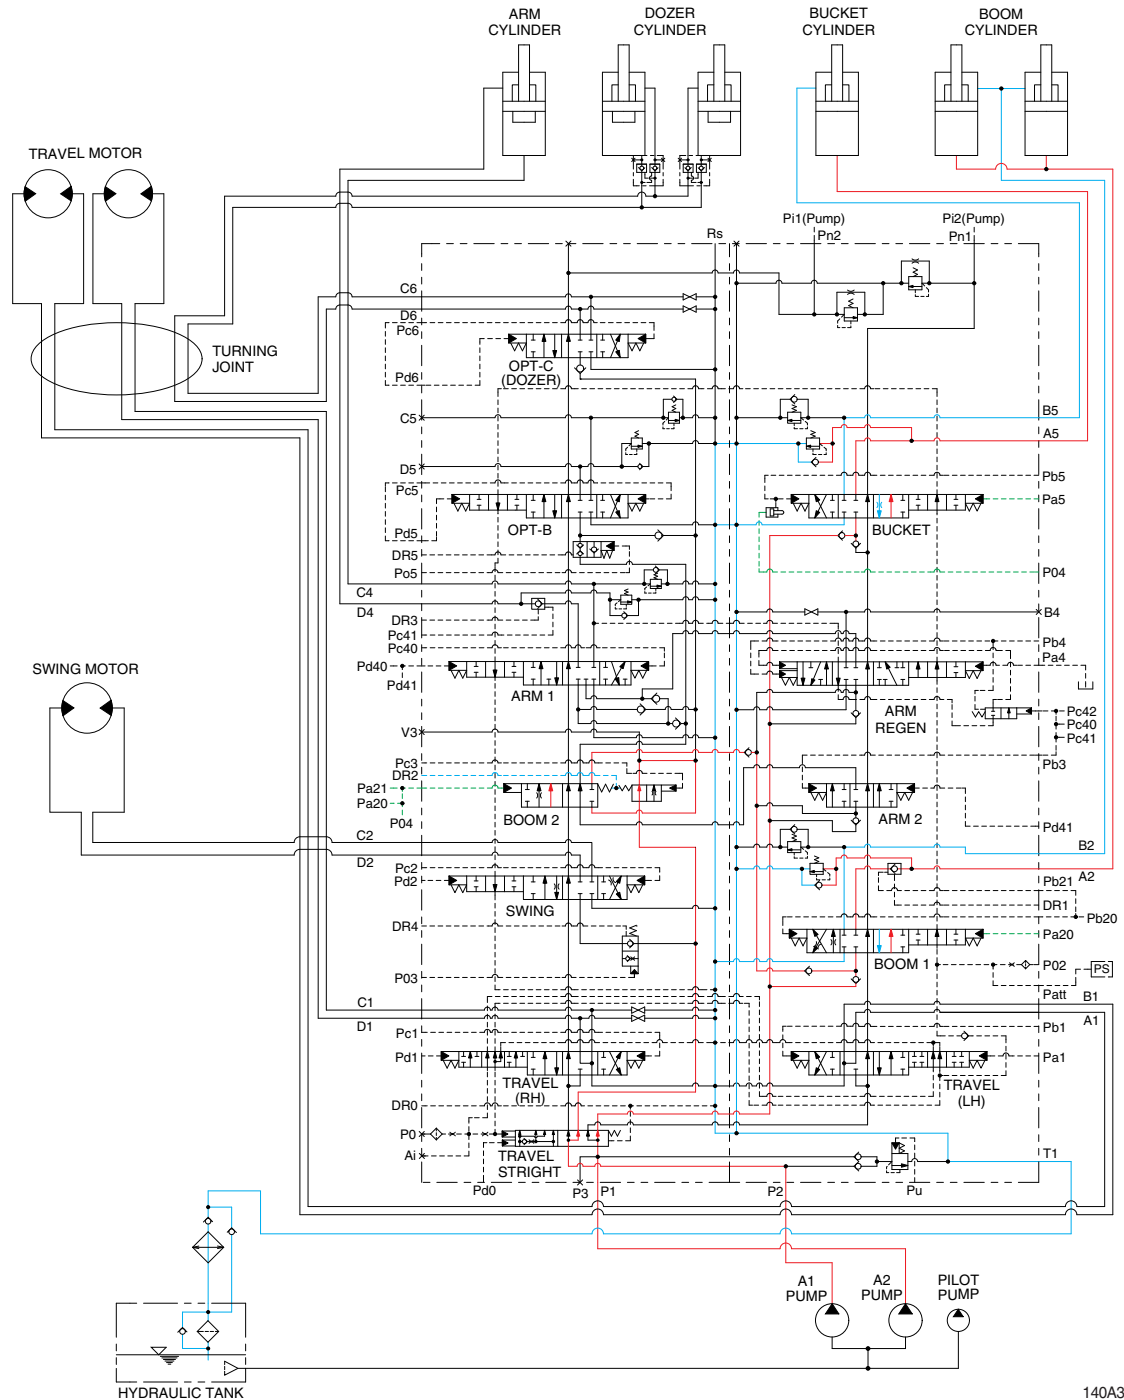

When the boom up and bucket functions are operated simultaneously, each spool in the main control valve is moved to the functional position by the pilot oil pressure (Pa20, Pa21, Pa5) from the remote control valve.

The oil from the A1 pump flows into the boom cylinders through the boom 2 spool in the left control valve. The oil from the A2 pump flows into the boom cylinders and bucket cylinder through the boom 1 spool, bucket spool and the parallel and confluence oil passage in the right control valve.

Also, when the boom up and bucket in functions are operated simultaneously, the boom up operation preference function is operated by the pilot pressure P04 and then the bucket spool transfers in the half stroke not full stroke (refer to page 2-37). Therefore, the most of pressurized oil flows into boom 1 spool than the bucket spool to make the boom up operation more preferential.

The boom and bucket are operated.


※ The circuit diagram may differ from the equipment, so please check before a repair.

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Electrical Circuit	4-3
Group 3 Electrical Component Specification	4-23
Group 4 Connectors	4-36

GROUP 1 COMPONENT LOCATION


1. LOCATION 1

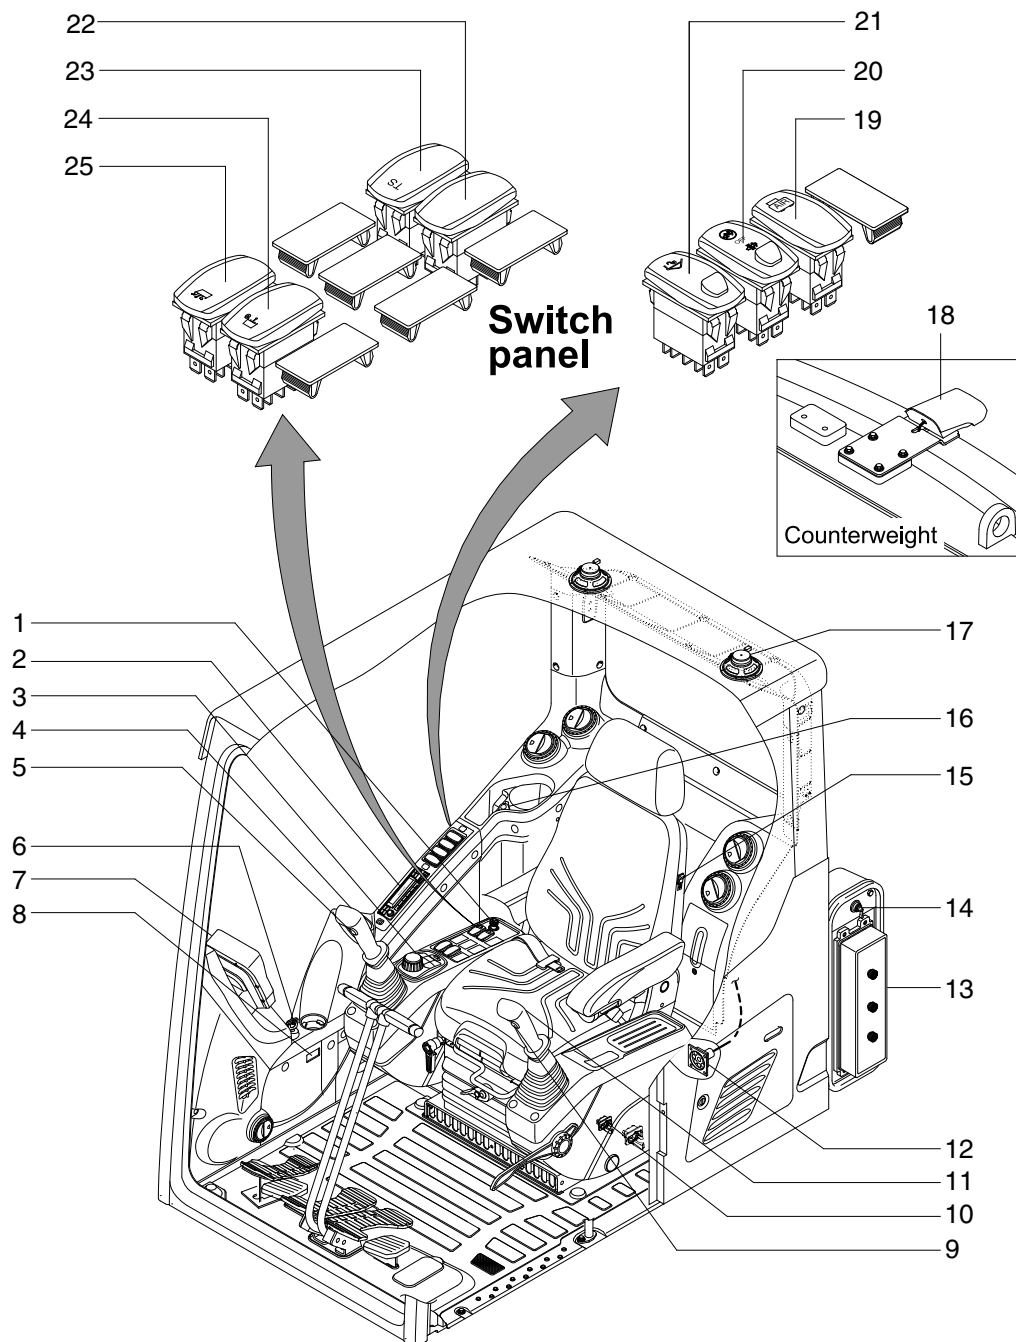


140A4EL01

- | | | |
|----------------------------|---------------------------------|-----------------------------------|
| 1 Cigar lighter | 10 Emergency engine stop switch | 19 Air compressor switch (opt) |
| 2 Radio & USB player | 11 One touch decel switch | 20 Exhaust system cleaning switch |
| 3 Haptic controller | 12 RS232 & J1939 service socket | 21 Quick clamp switch (opt) |
| 4 Horn switch | 13 Fuse & relay box | 22 Option attachment switch (opt) |
| 5 Breaker operation switch | 14 Master switch | 23 Travel straight switch (opt) |
| 6 Starting switch | 15 Seat heater switch | 24 Swing lock switch (opt) |
| 7 Cluster | 16 Power socket | 25 Free/fine swing switch (opt) |
| 8 Service meter | 17 Speaker | |
| 9 Power max switch | 18 Camera | |


2. LOCATION 2

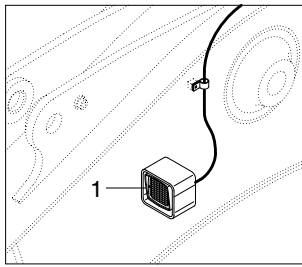


BOOM

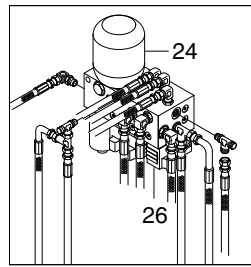


SOLENOID VALVE

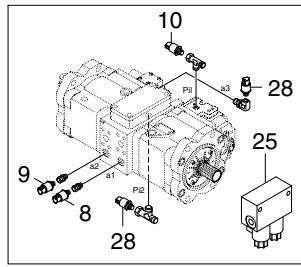



MAIN PUMP

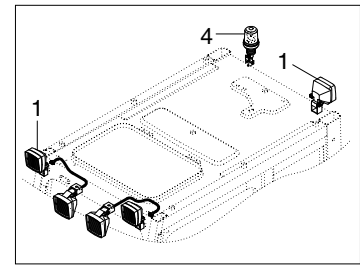


CAB

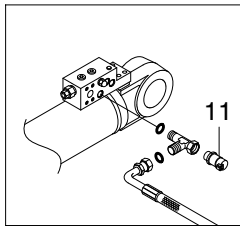


BOOM SAFETY VALVE

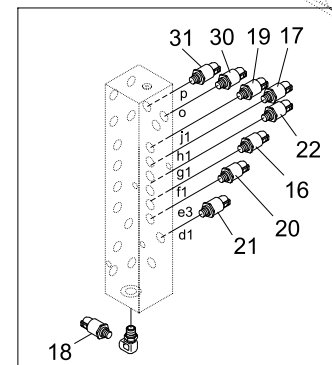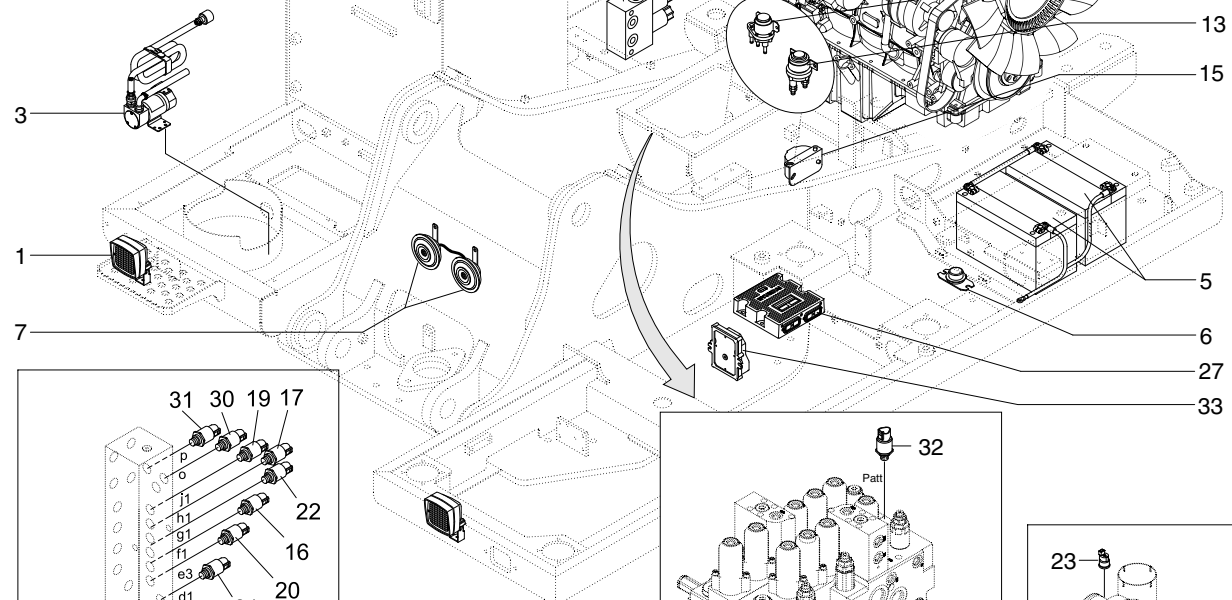

TERMINAL BLOCK

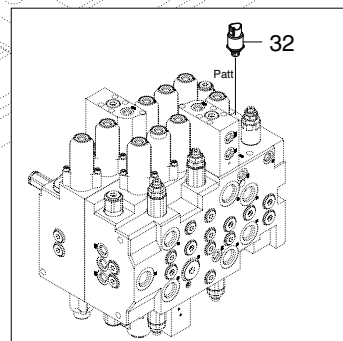

MAIN CONTROL VALVE

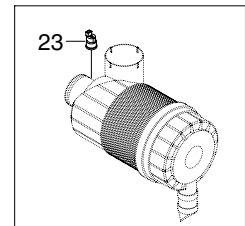


AIR CLEANER

140A4EL02


- | | | |
|-----------------------------|-------------------------------|--|
| 1 Lamp | 13 Heater relay | 25 Pump flow control EPPR valve |
| 2 Fuel sender | 14 Alternator | 26 Boom priority EPPR valve |
| 3 Fuel filler pump | 15 Travel alarm buzzer | 27 MCU |
| 4 Beacon lamp | 16 Bucket in pressure sensor | 28 Nega-control pressure sensor |
| 5 Battery | 17 Boom up pressure sensor | 29 EPPR valve (travel straight & swing priority) |
| 6 Battery relay | 18 Swing pressure sensor | 30 LH Travel pressure sensor |
| 7 Horn | 19 Boom down pressure sensor | 31 RH Travel pressure sensor |
| 8 A1 pump pressure sensor | 20 Arm in pressure sensor | 32 Attach pressure sensor |
| 9 A2 pump pressure sensor | 21 Arm out pressure sensor | 33 RDU assy |
| 10 EPPR pressure sensor | 22 Bucket out pressure sensor | |
| 11 Overload pressure sensor | 23 Air cleaner sensor | |
| 12 Start relay | 24 Solenoid valve | |

GROUP 2 ELECTRICAL CIRCUIT


- ELECTRICAL CIRCUIT (1/3)
- MACHINE SERIAL NO. : -#0003

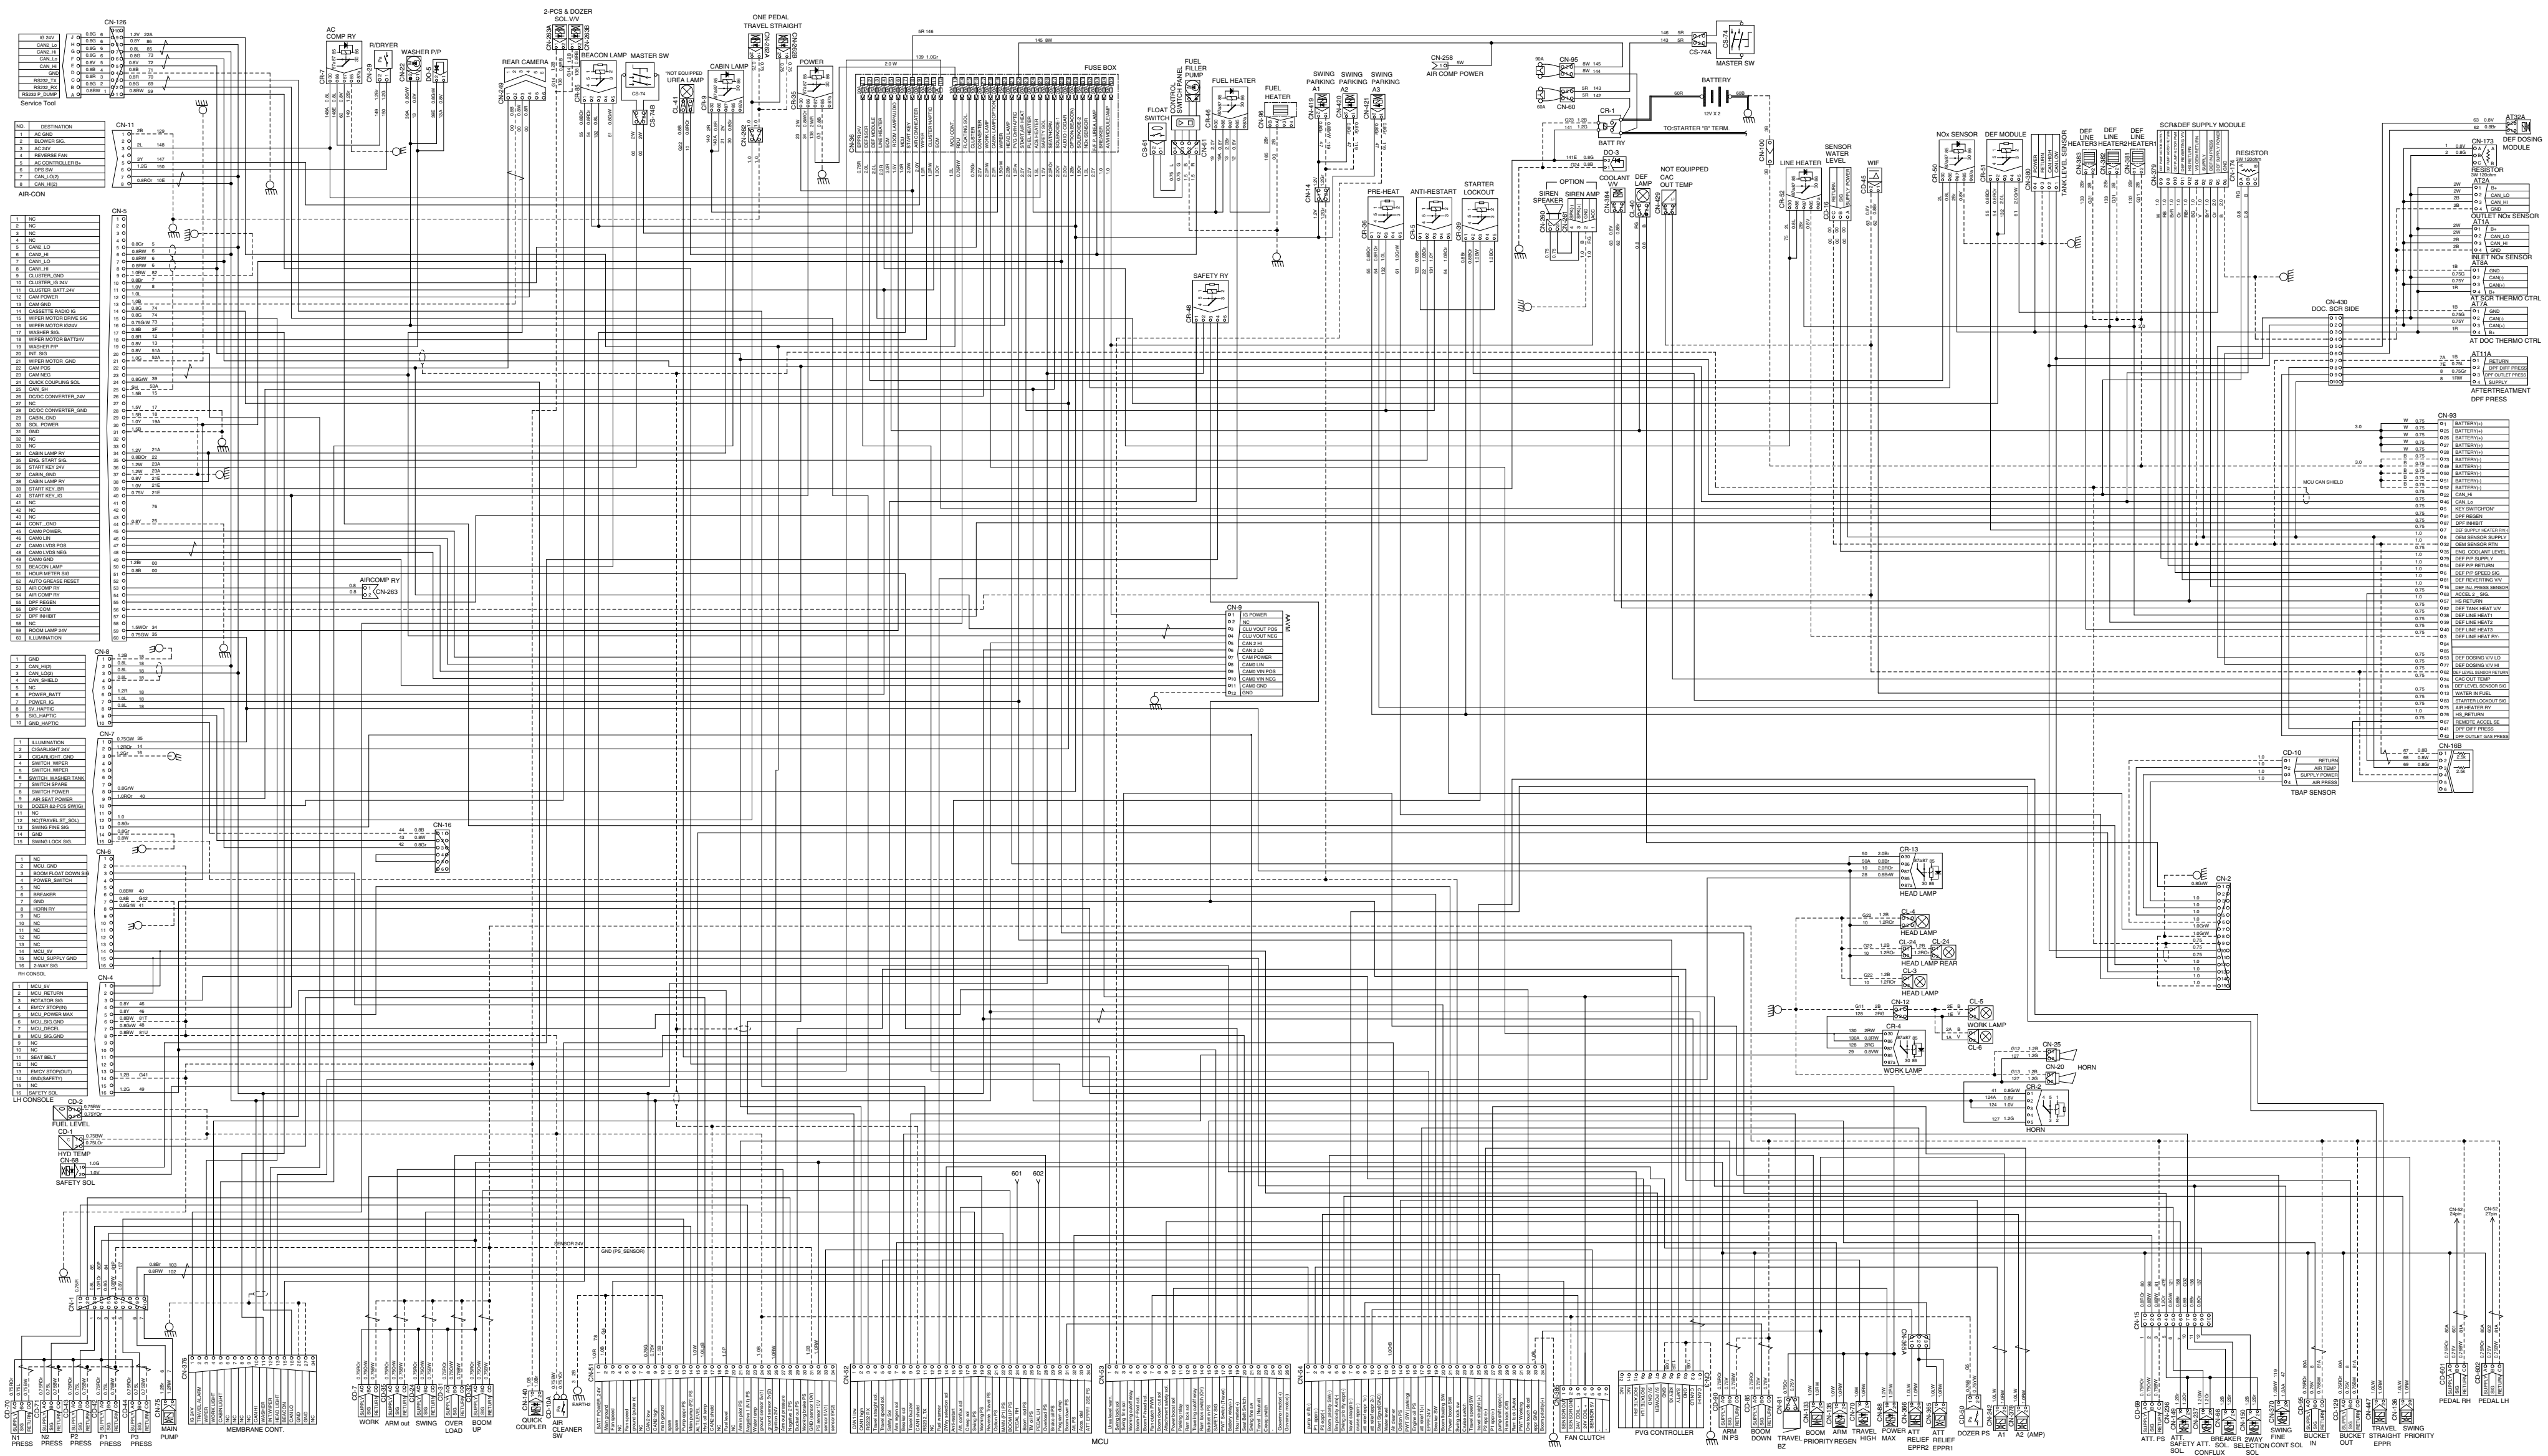


- MACHINE SERIAL NO. : #0004-#0127




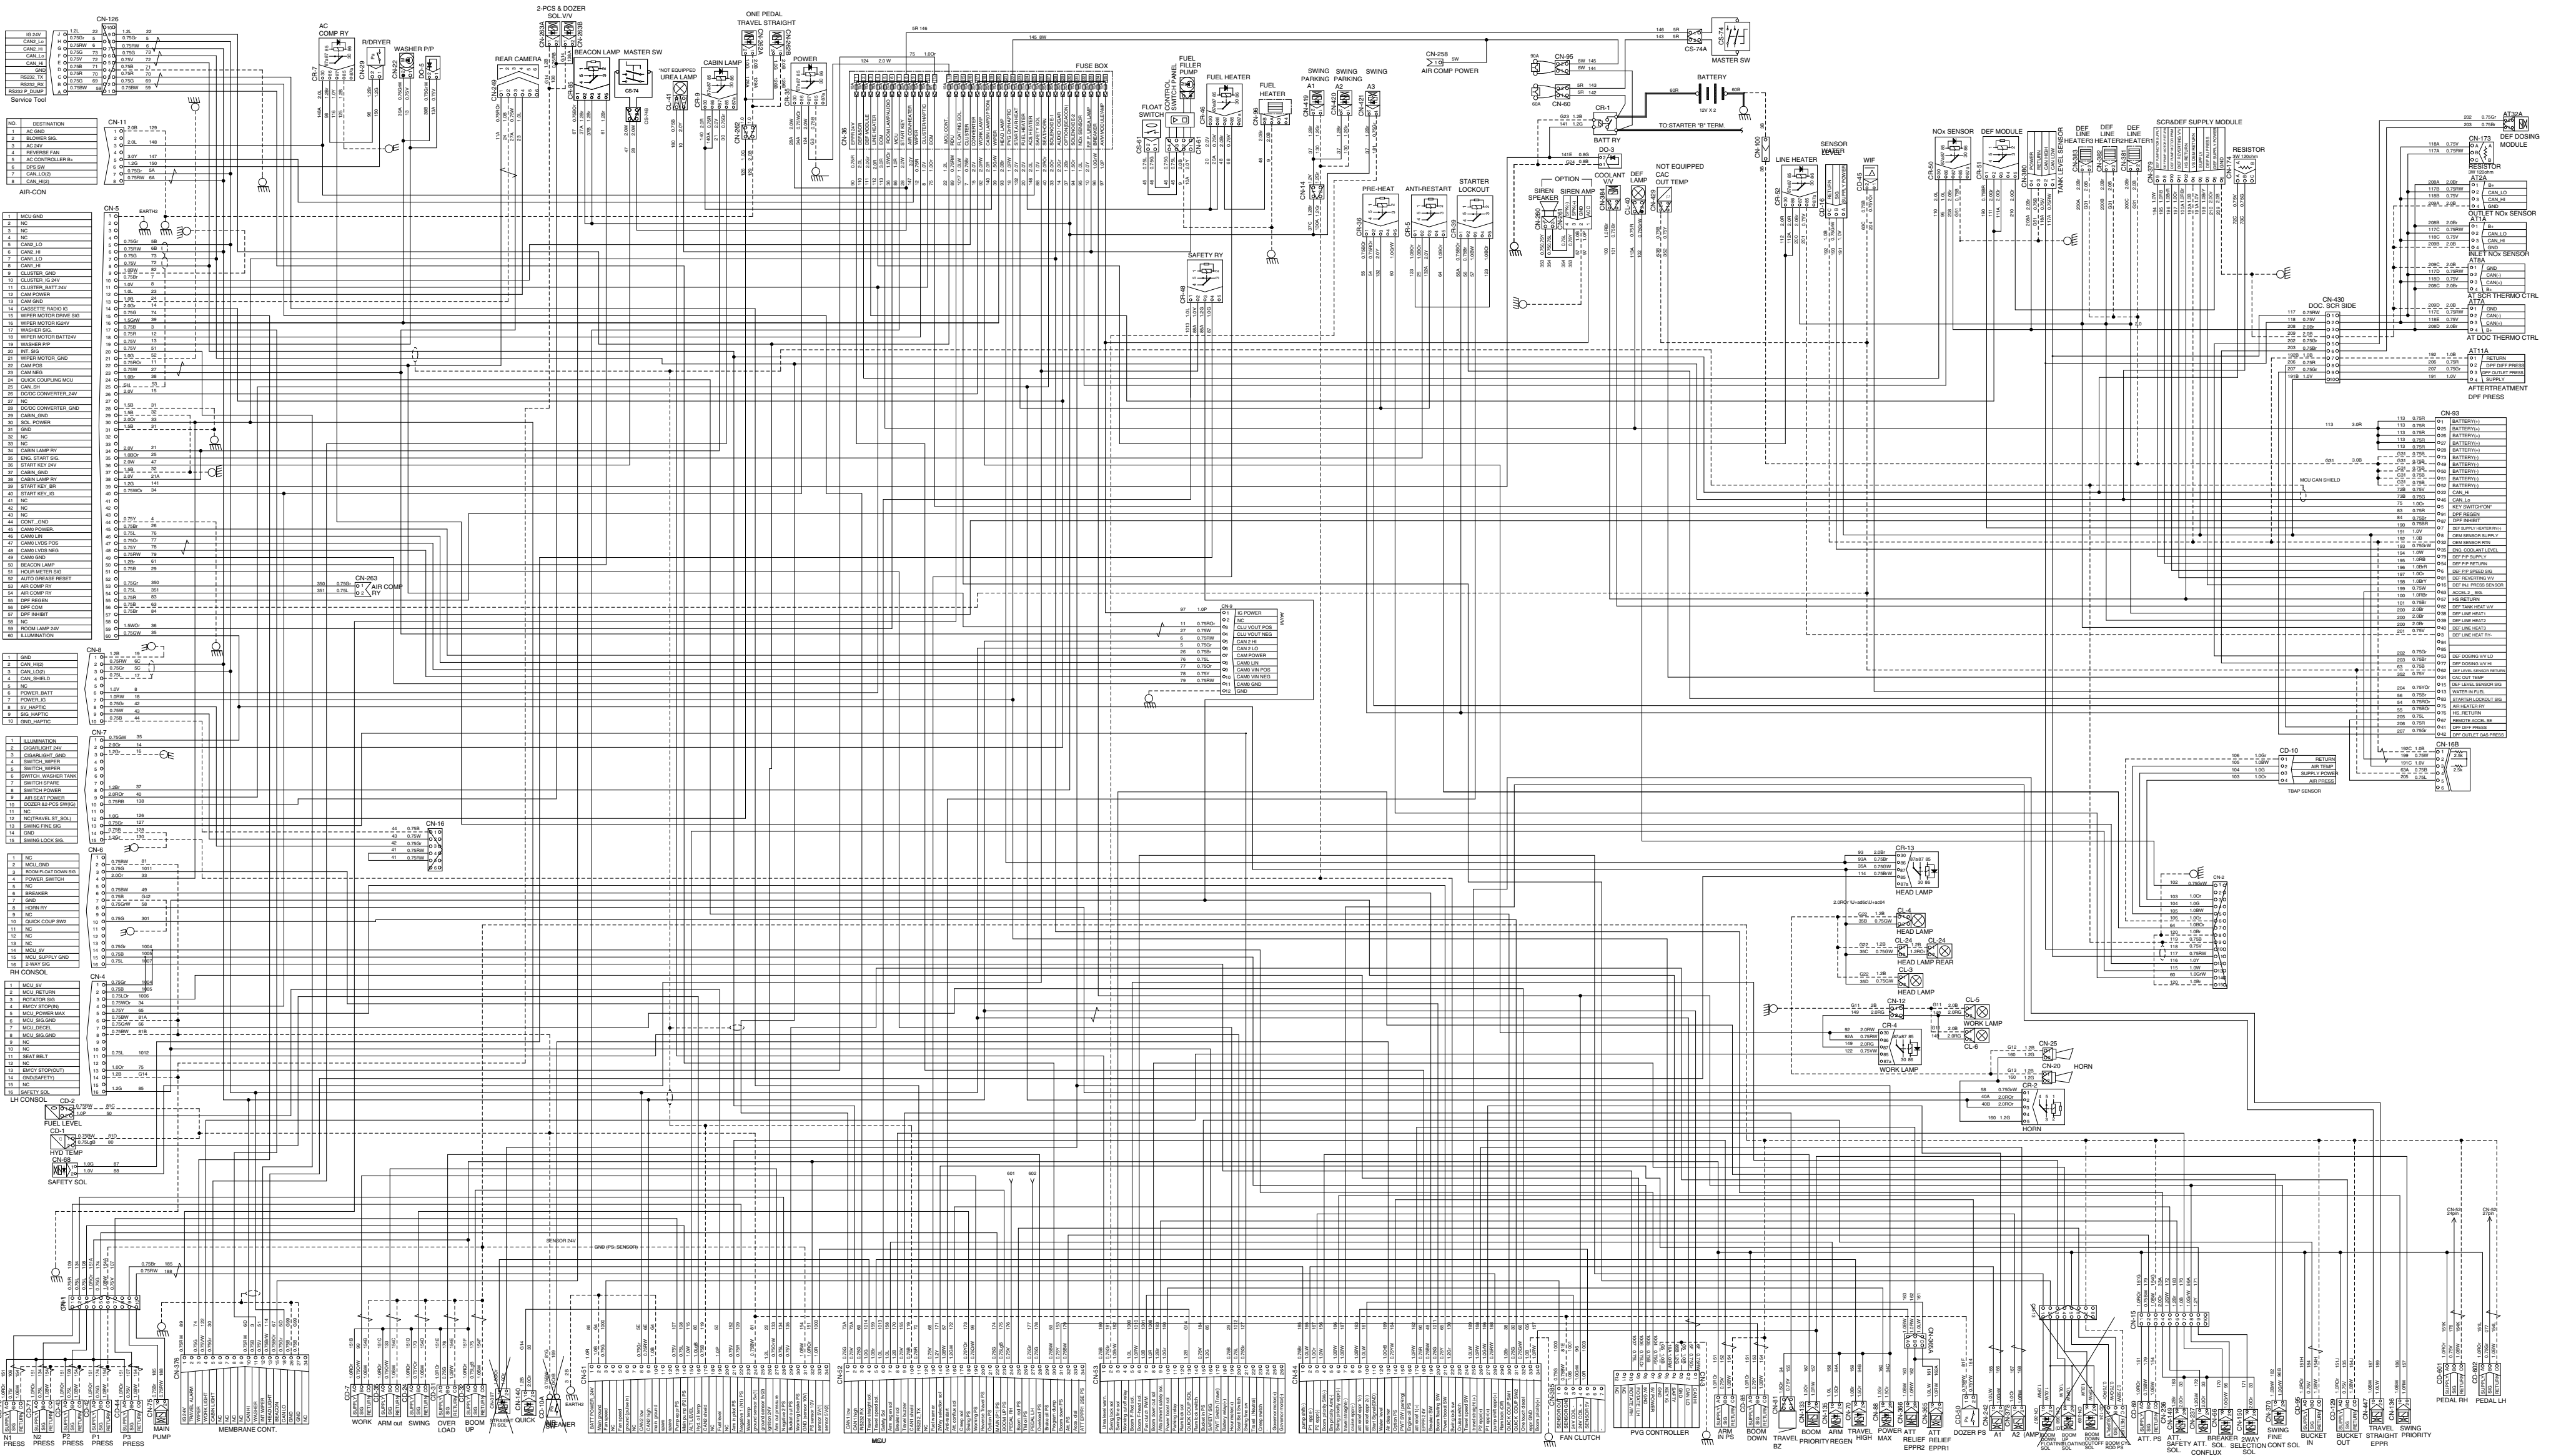


- MACHINE SERIAL NO. : #0128-#0587

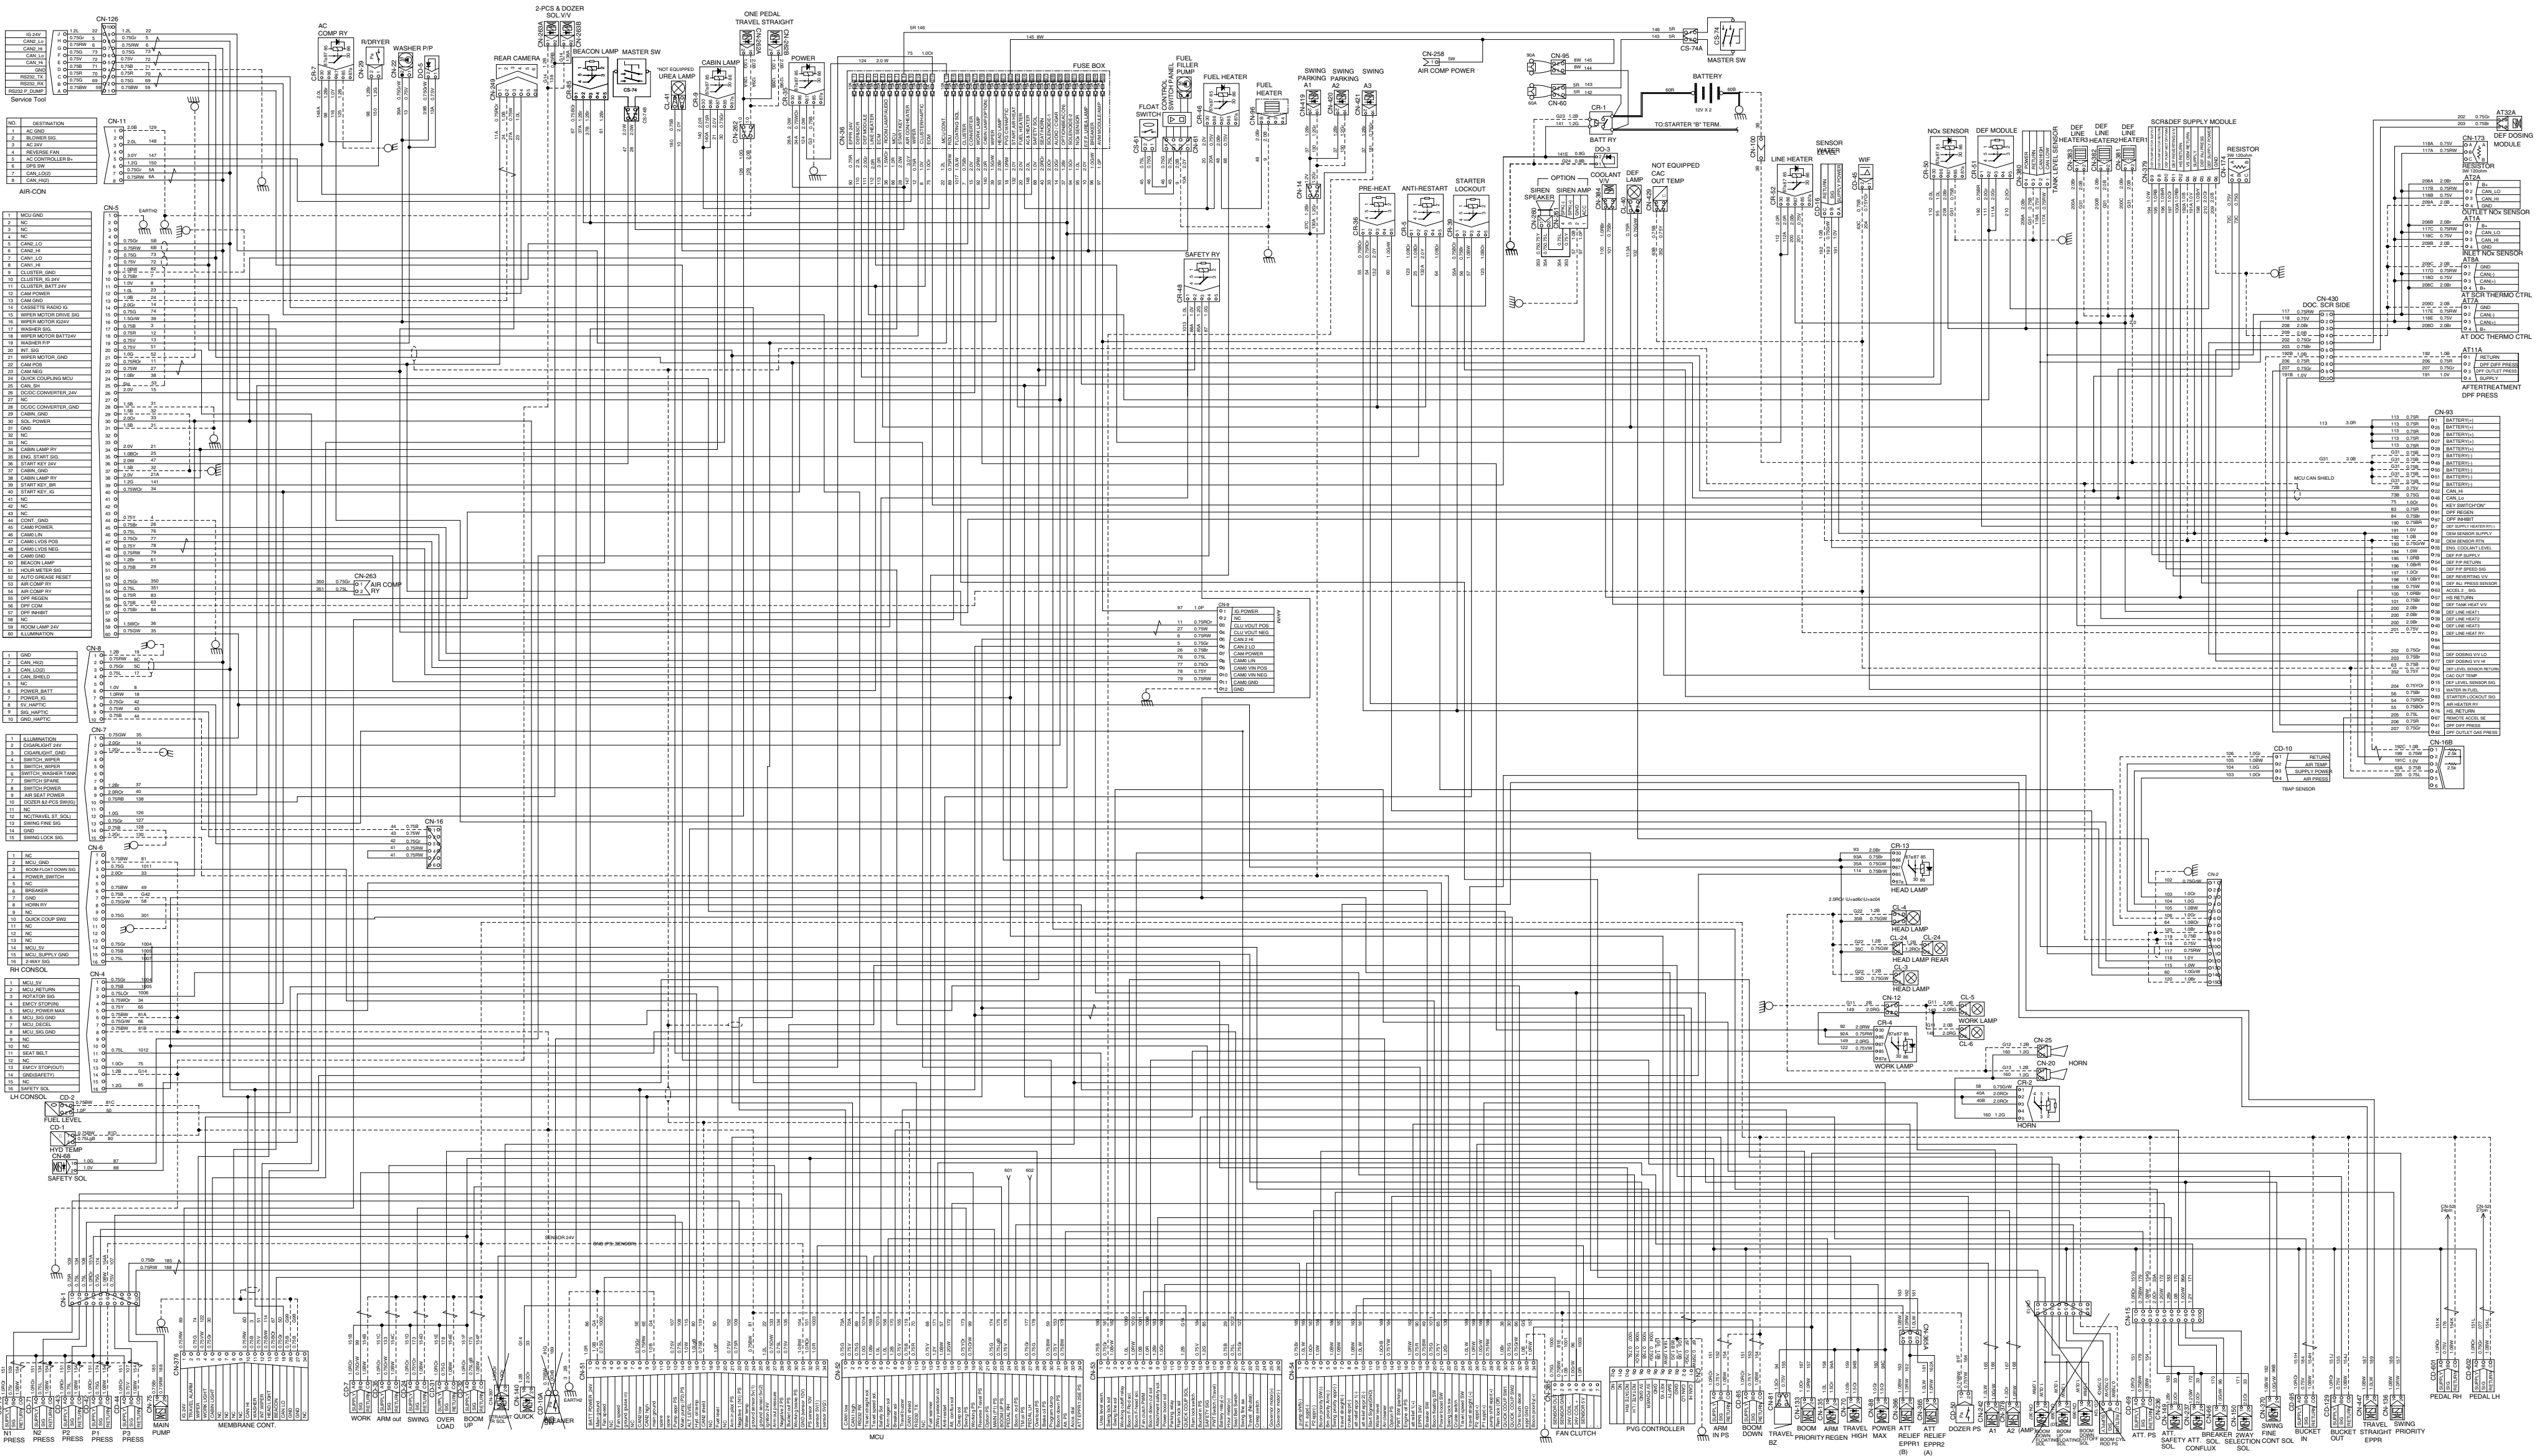


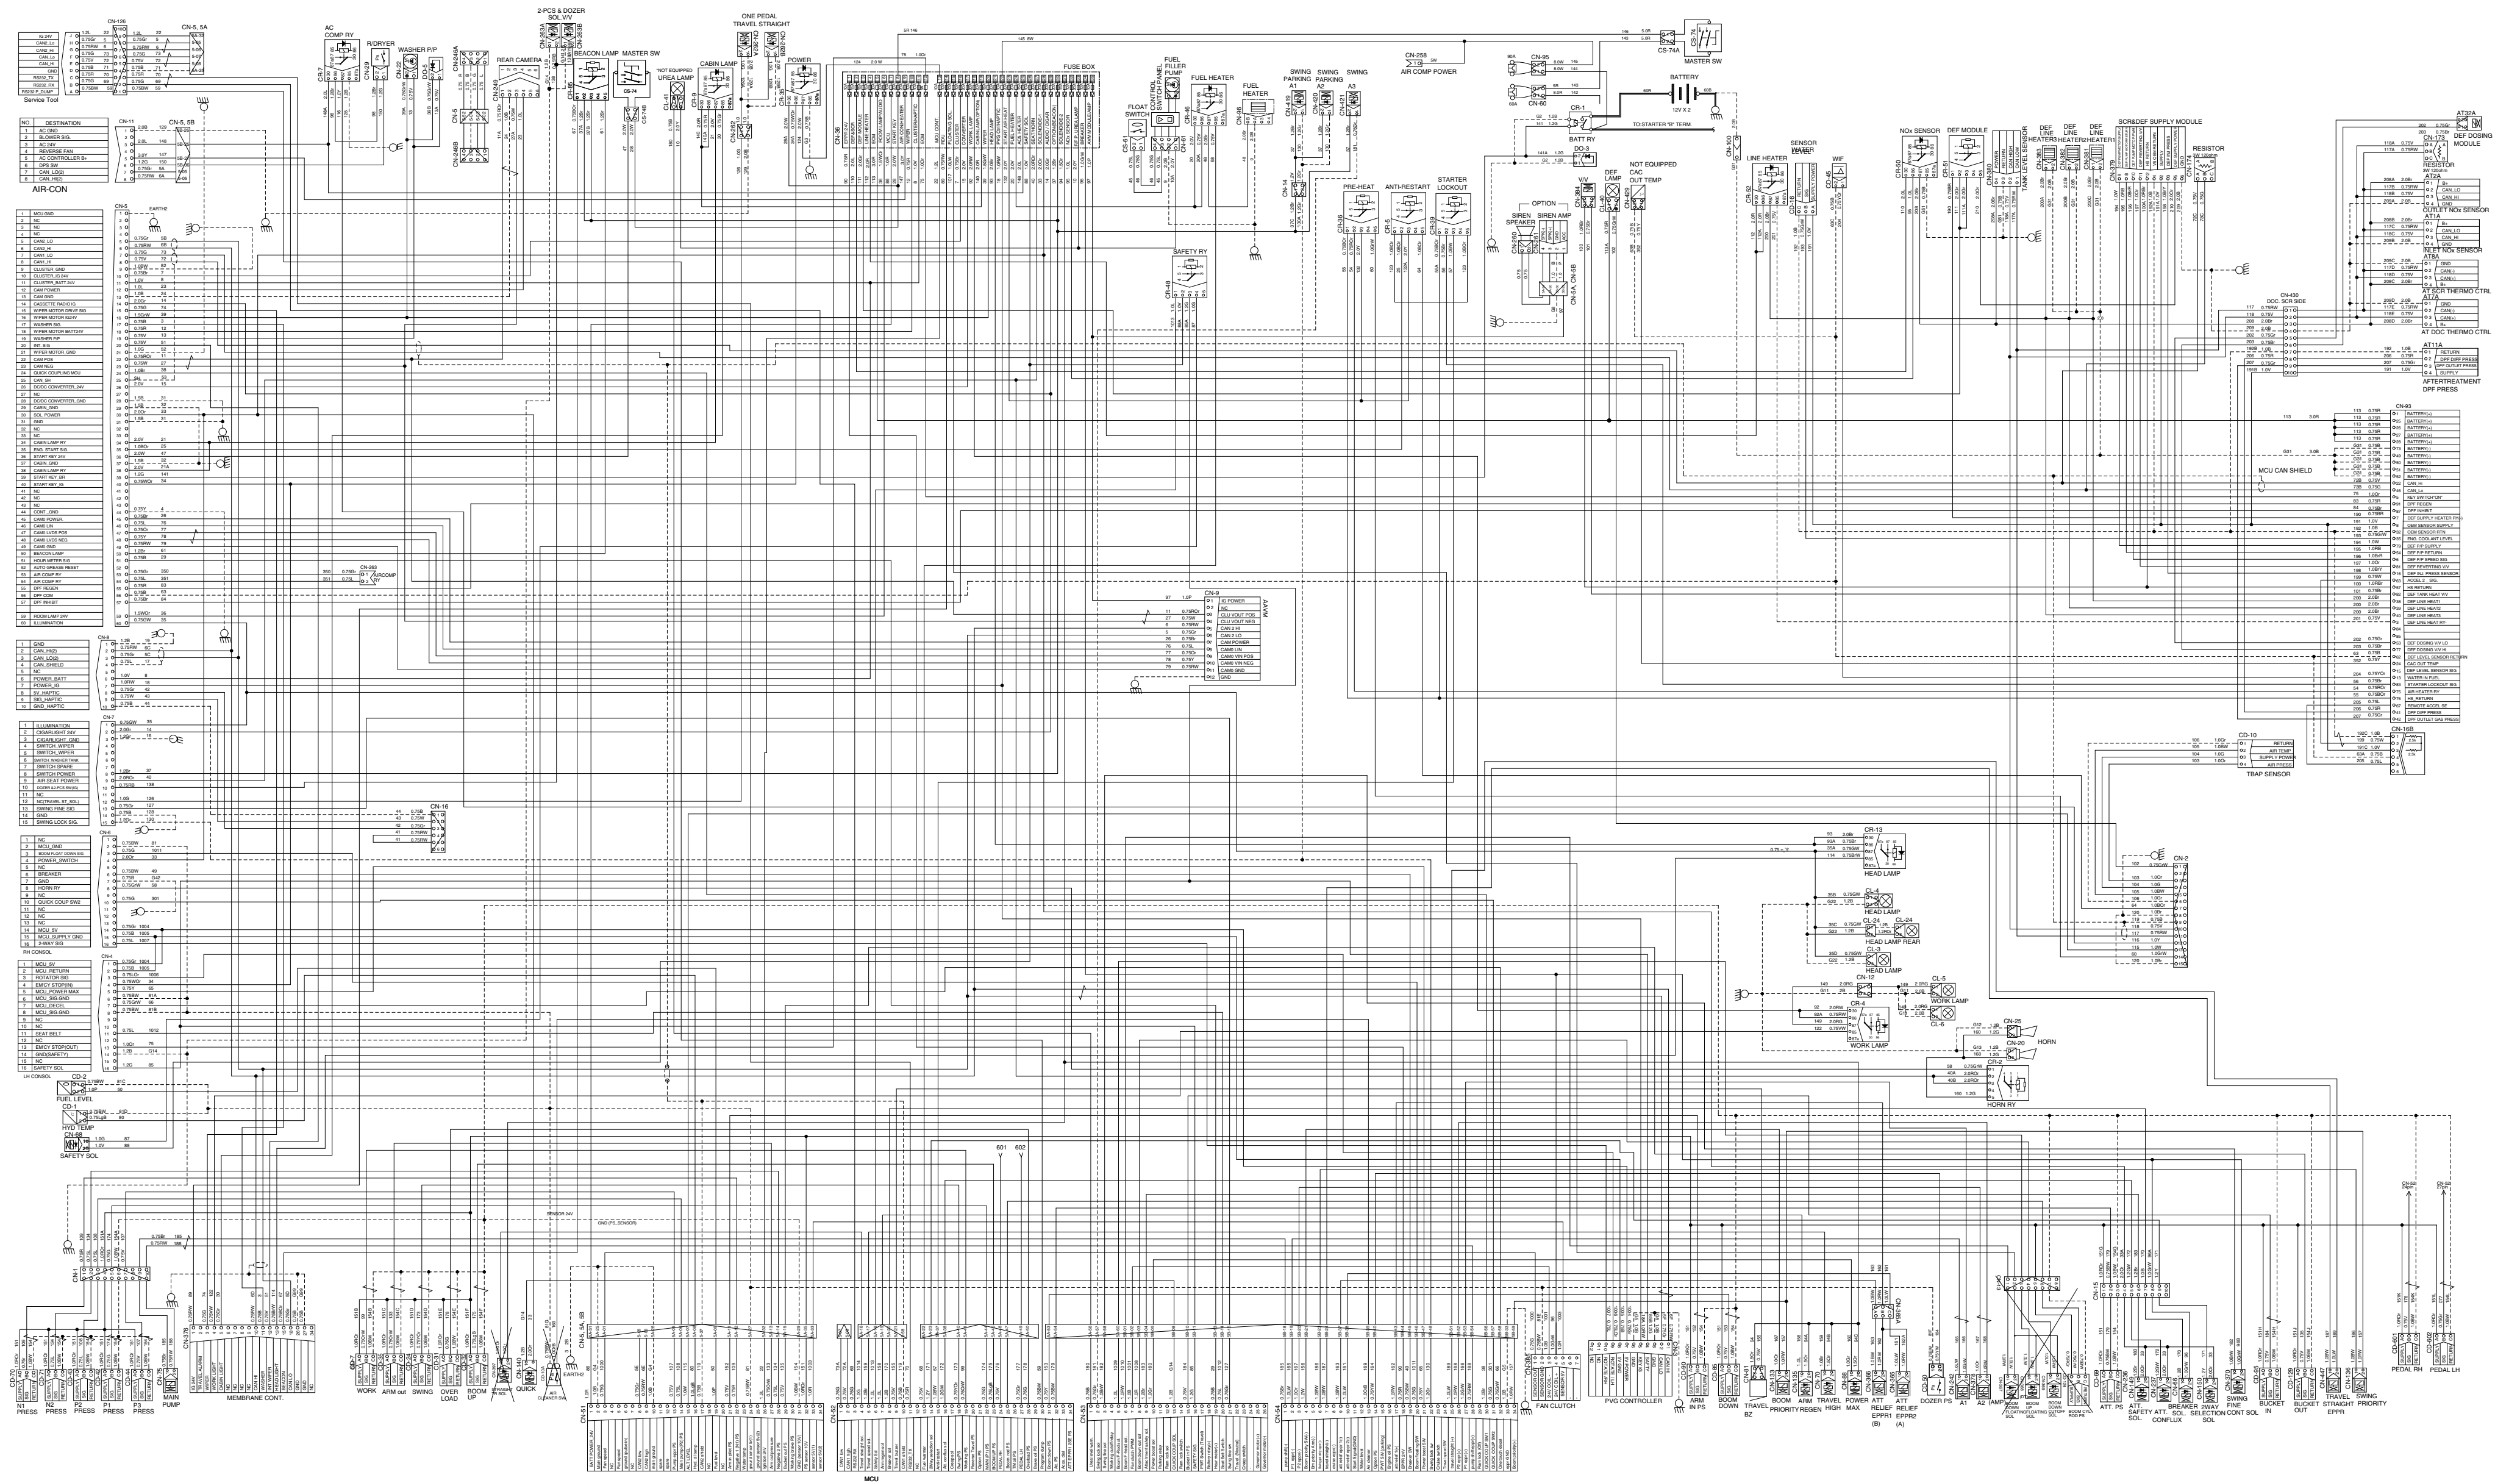



- MACHINE SERIAL NO. : -#0003

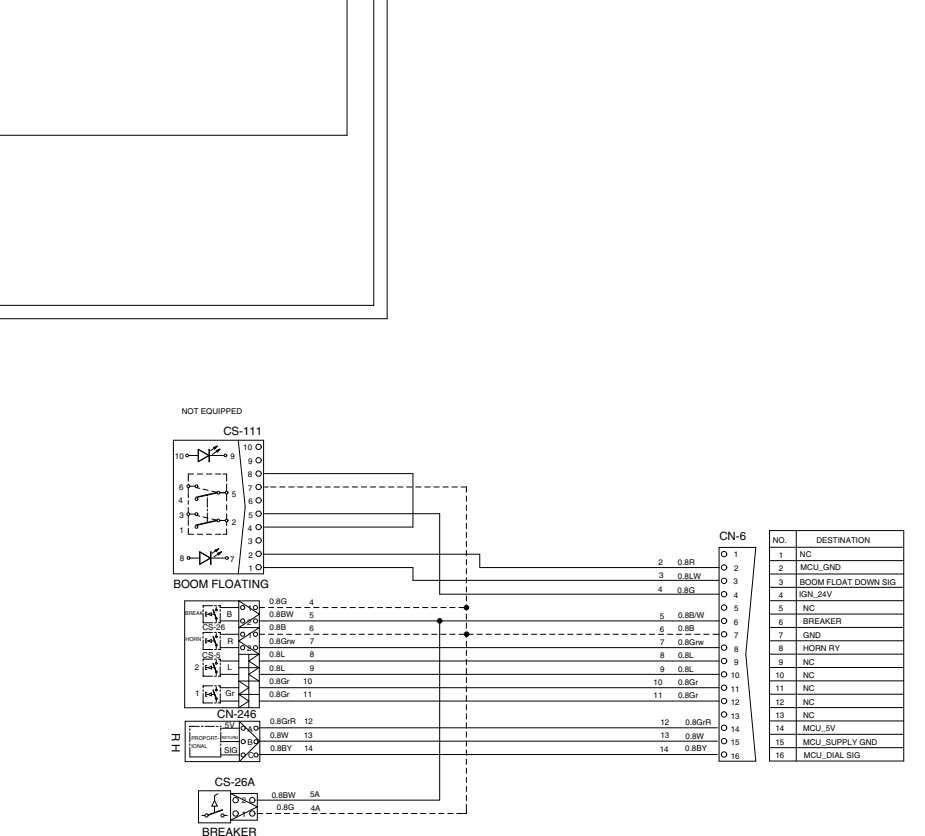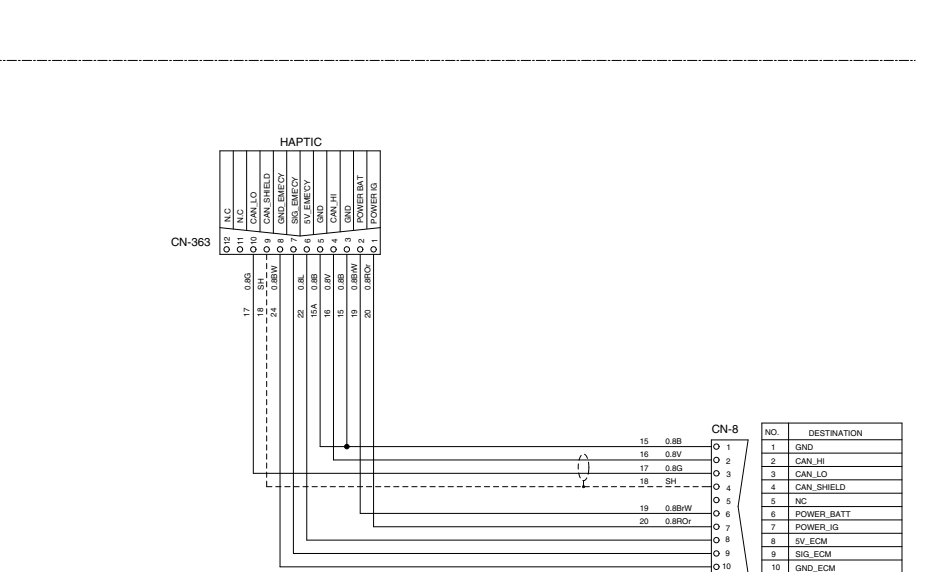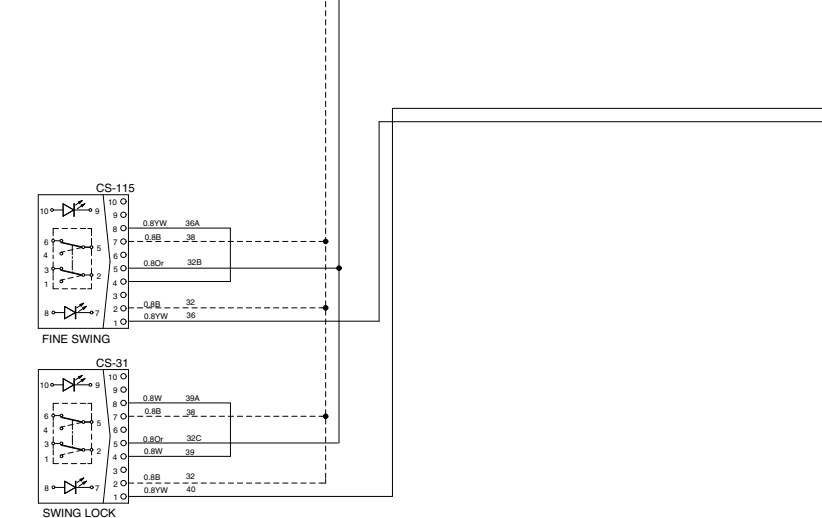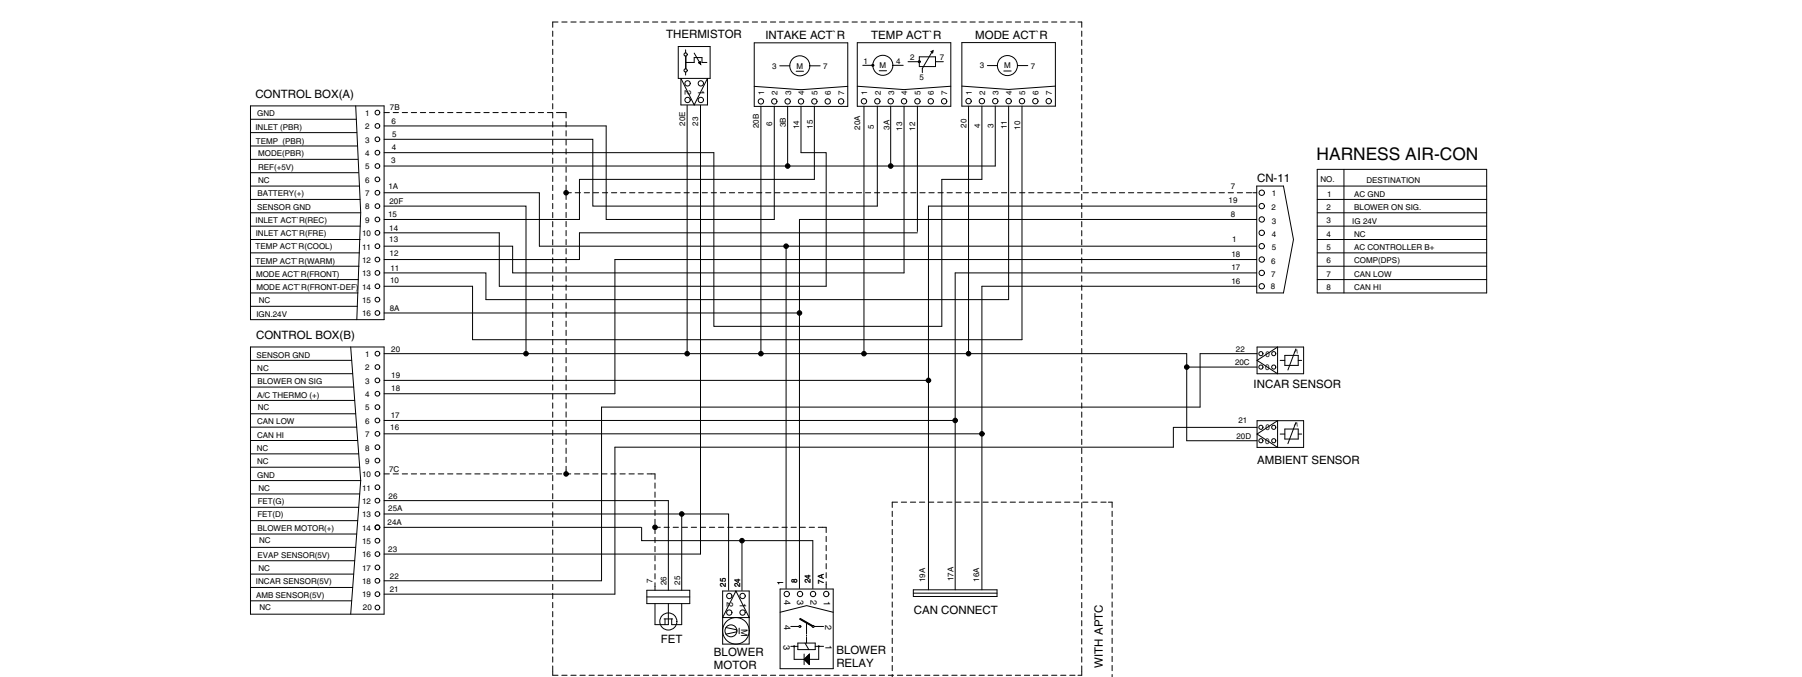


- MACHINE SERIAL NO. : #0004

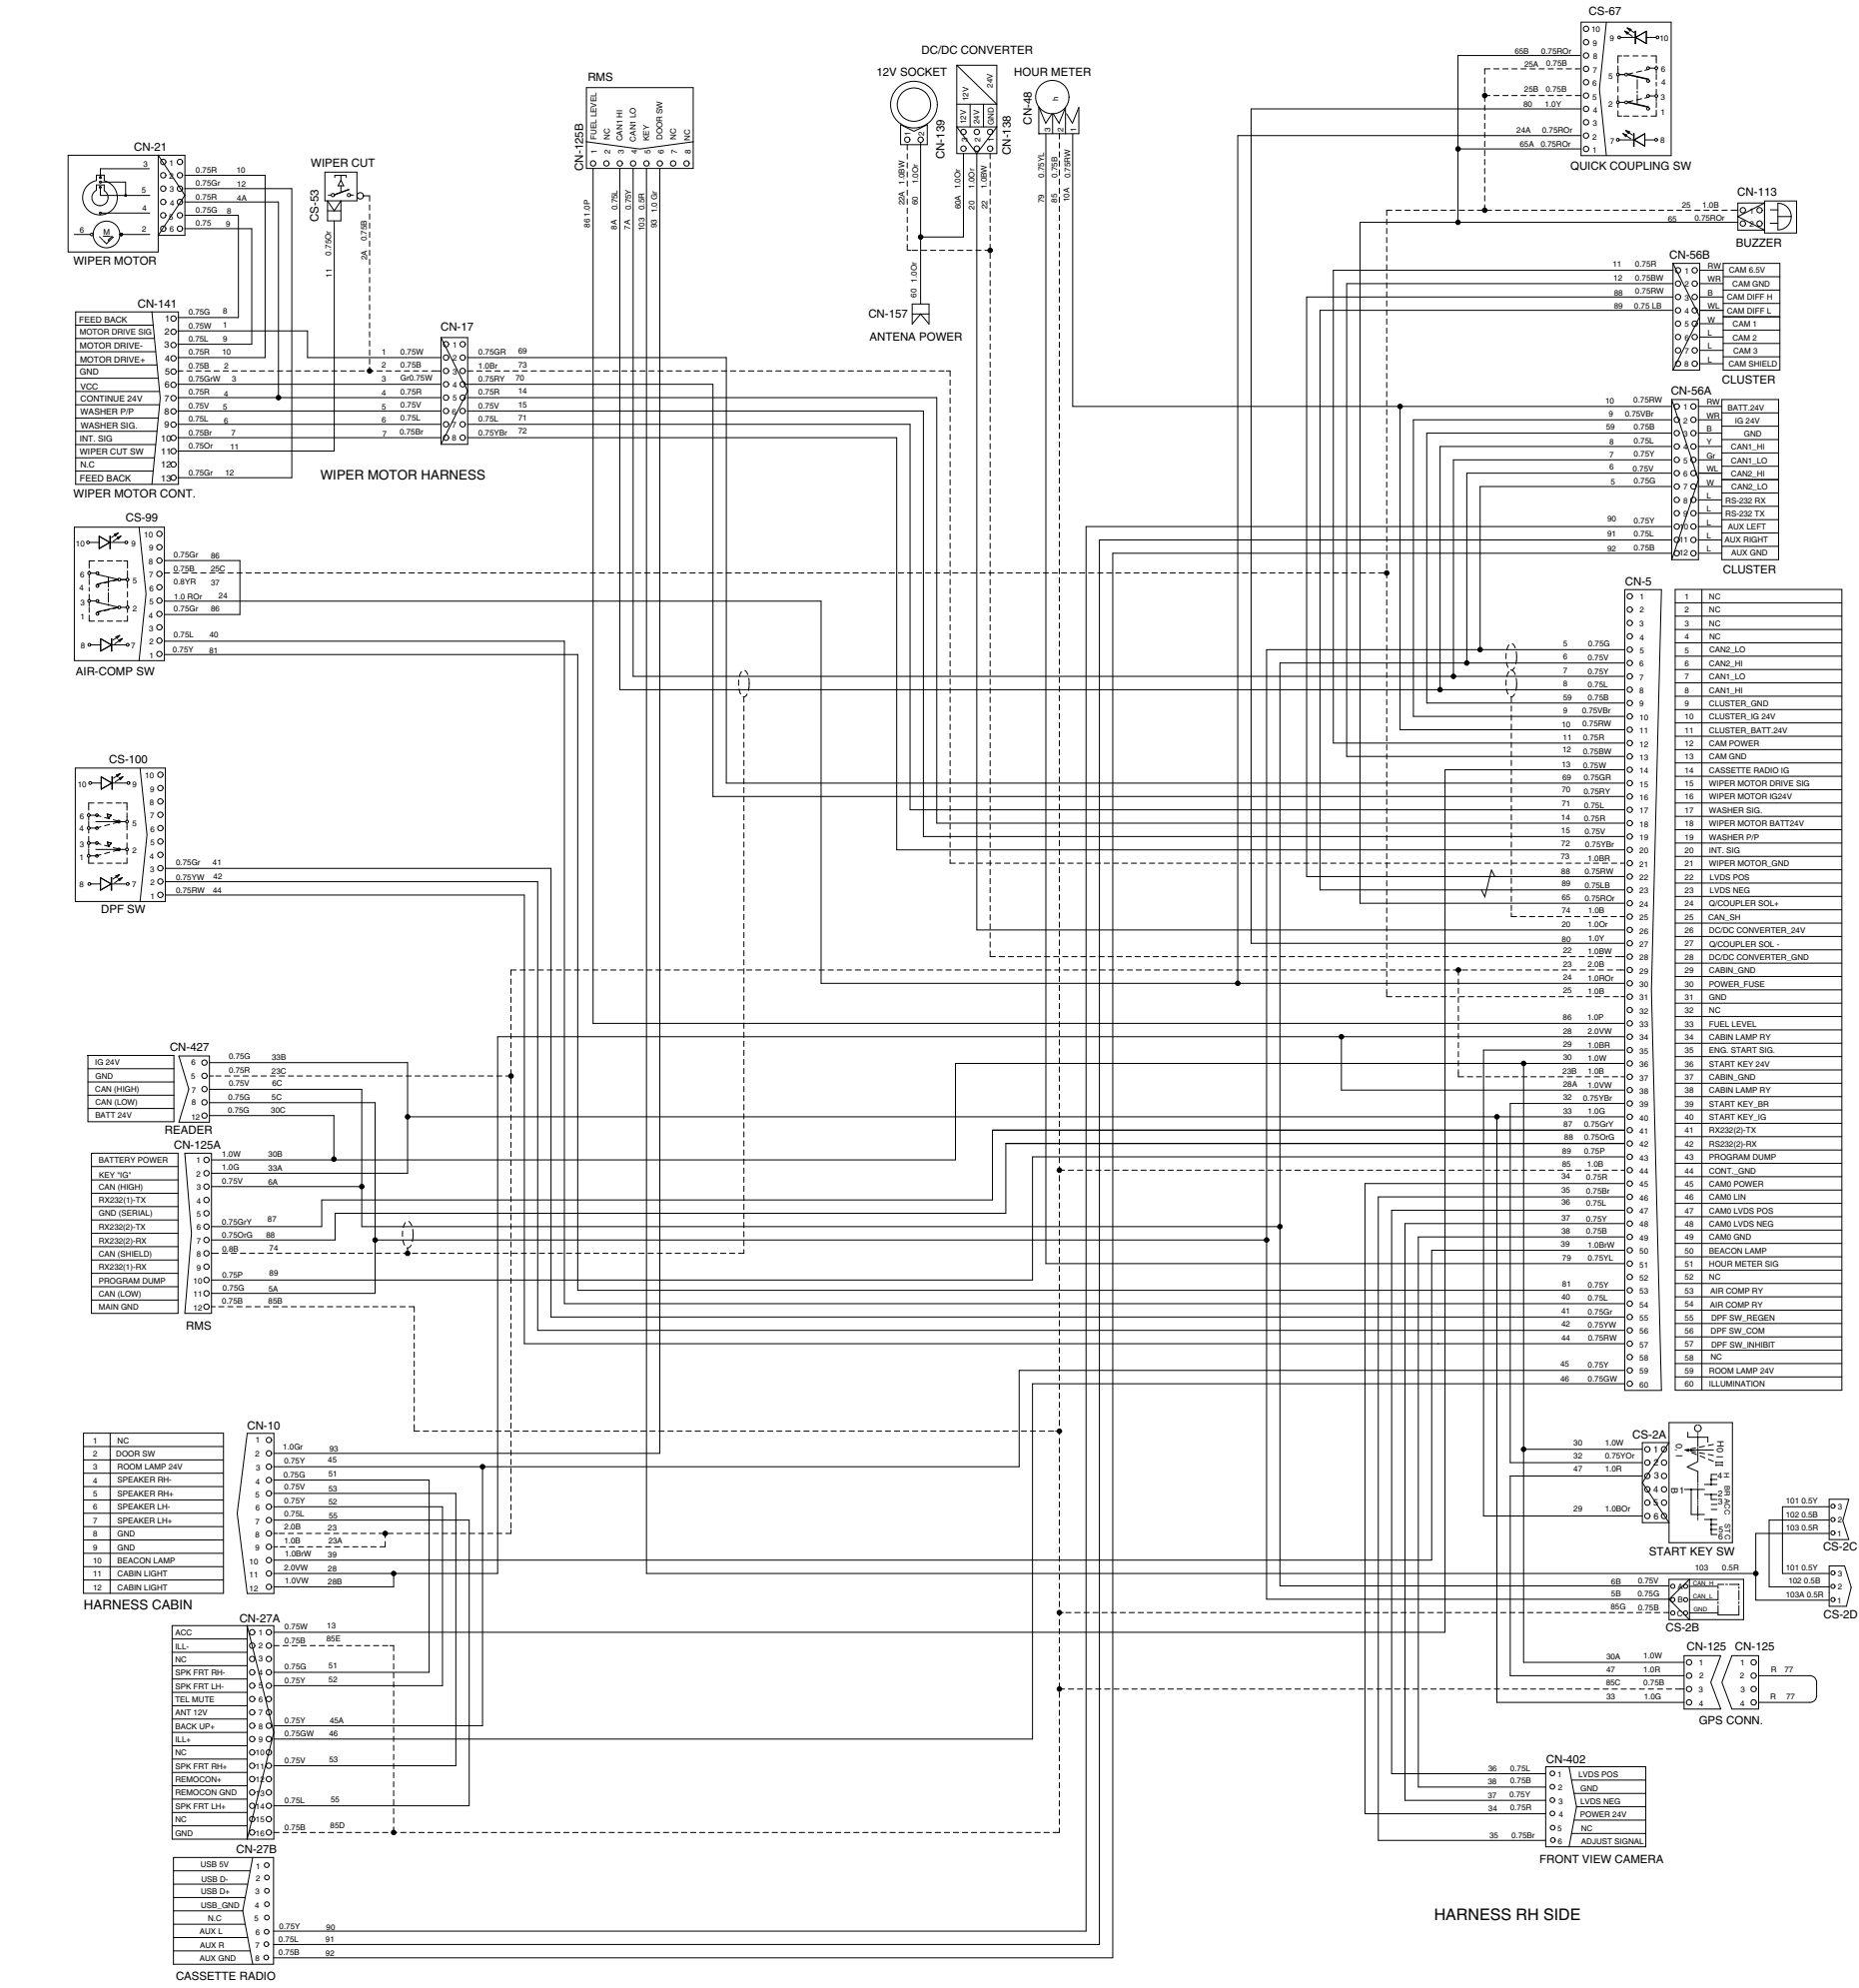


- MACHINE SERIAL NO. : -#0003

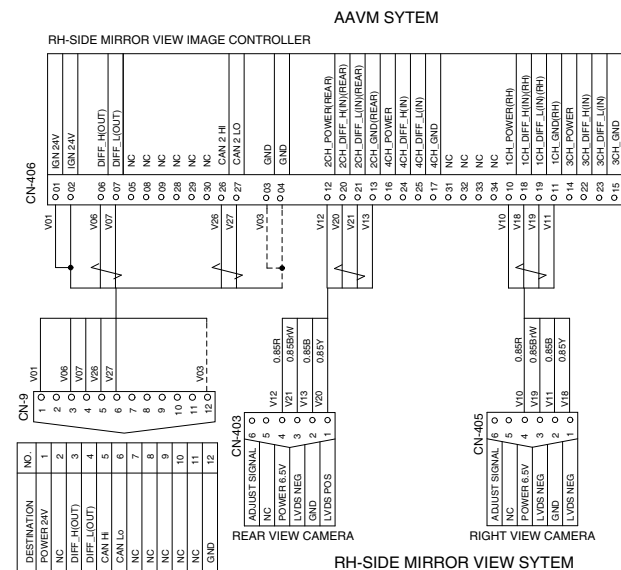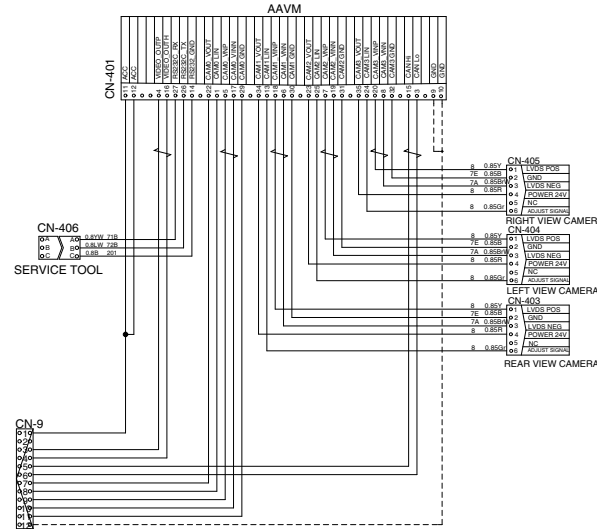



- MACHINE SERIAL NO. : #0004-

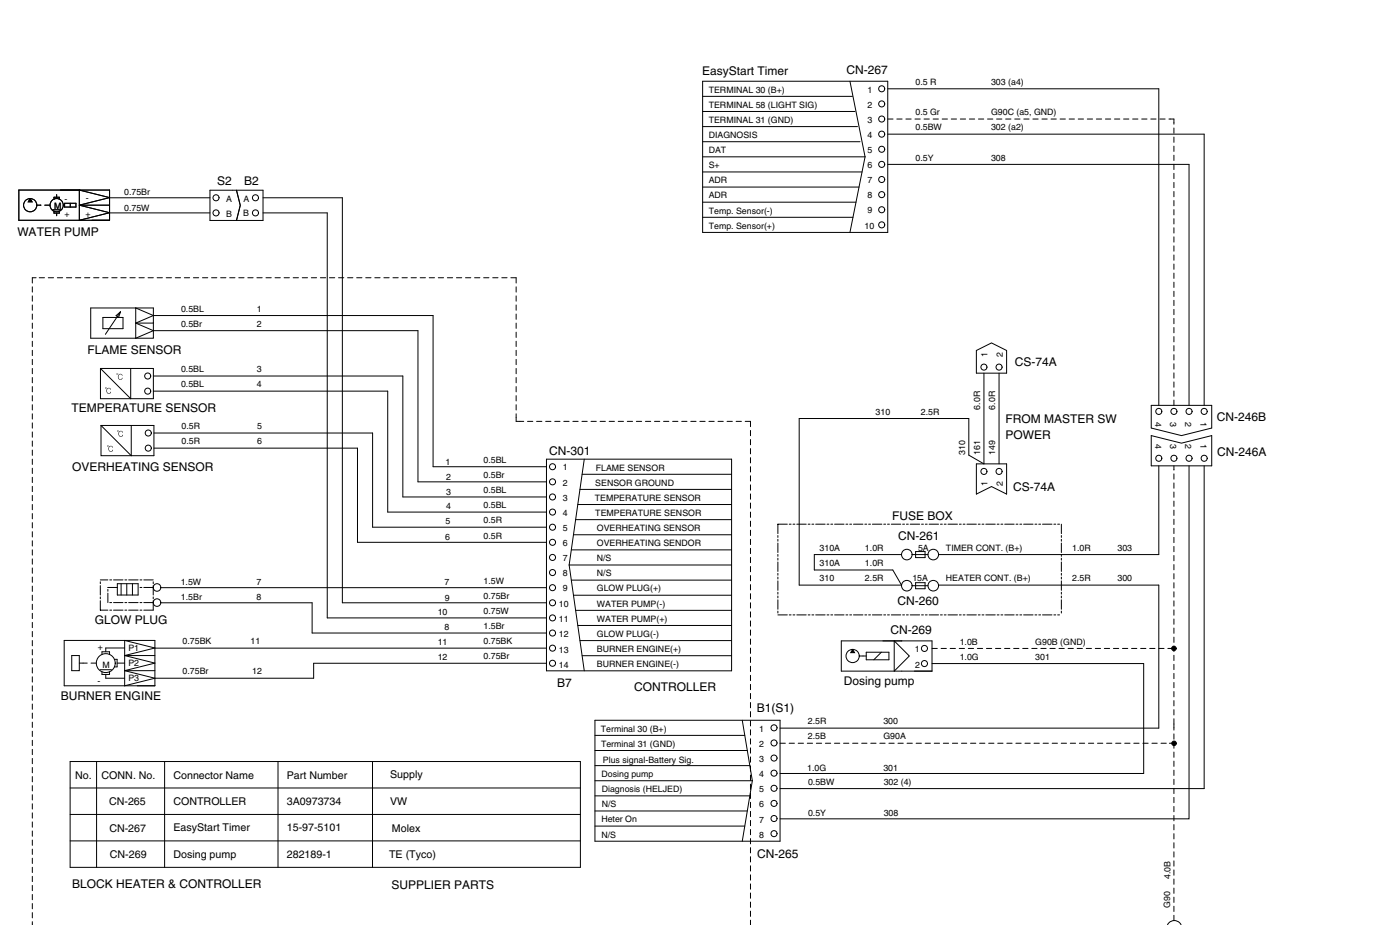


Engine Block Heater

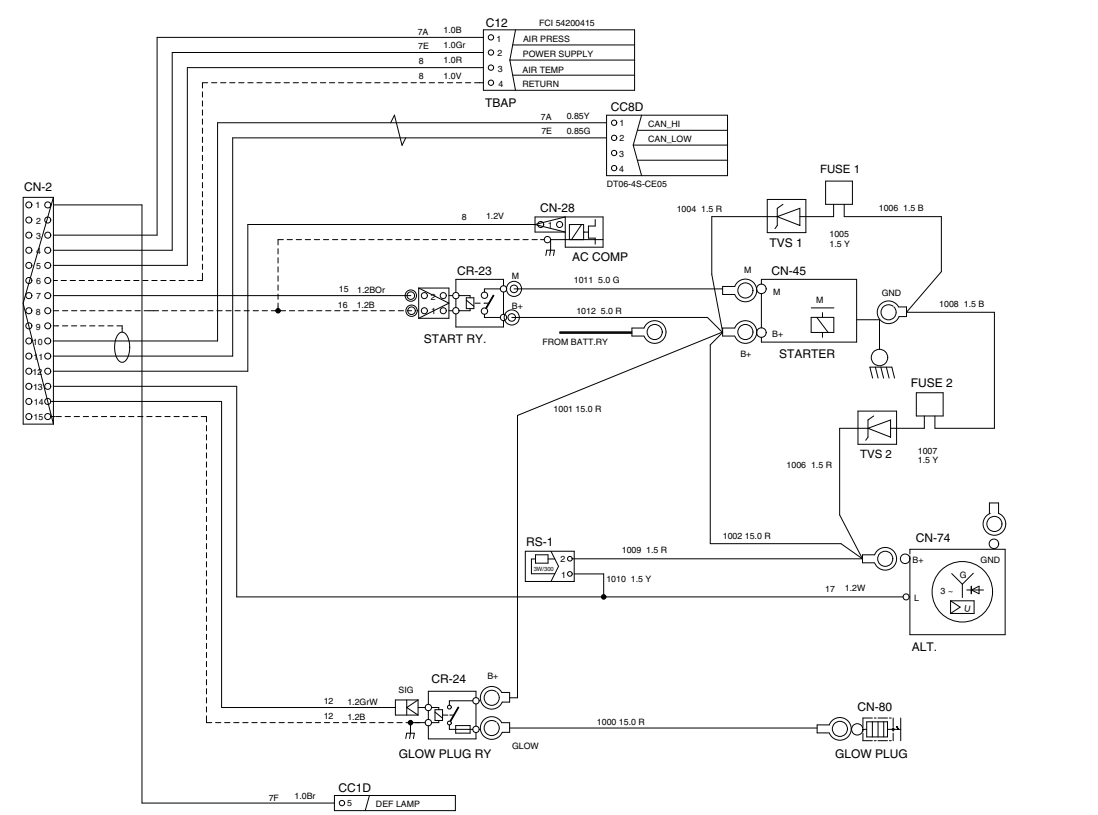

AAVM HARNESS

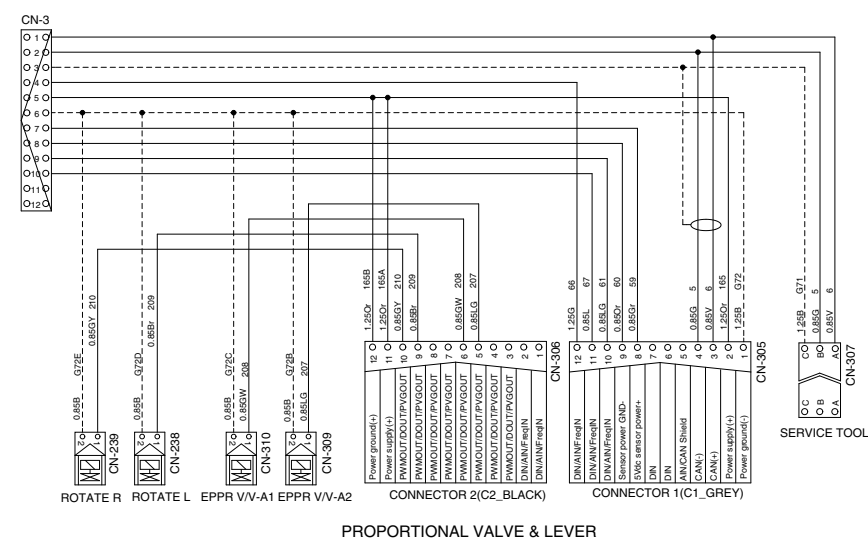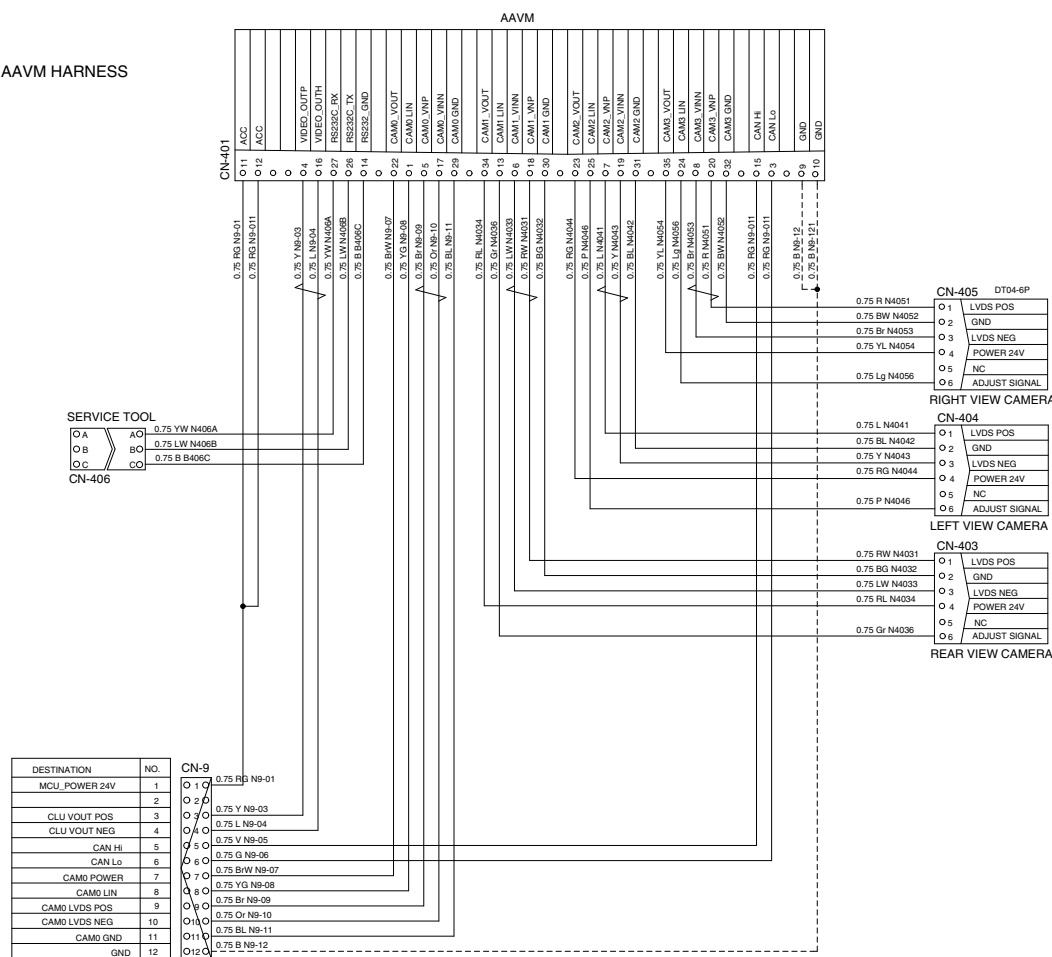

PROPORTIONAL VALVE & LEVER

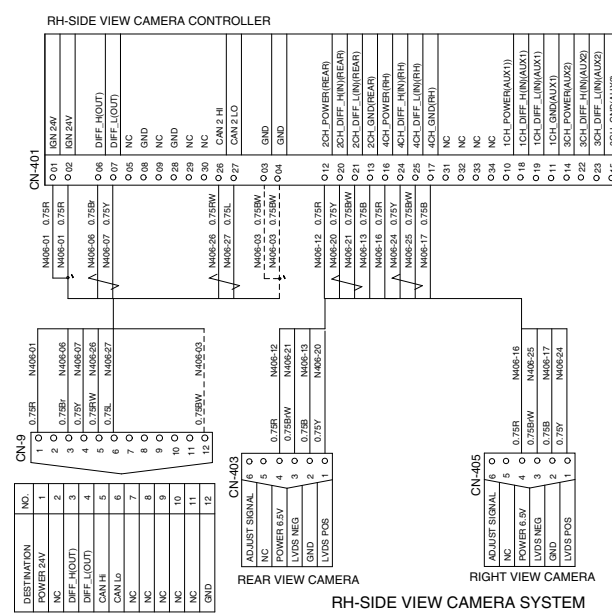

RH-SIDE VIEW CAMERA SYSTEM

DESTINATION	NO.	CN-9	
MCU_POWER 24V	1	O 7	0.75 IN N9-01
	2	O 8	
CLU_VOUT_POS	3	O 9	0.75 V N9-03
CLU_VOUT_NEG	4	O 10	0.75 L N9-04
CAN_Hi	5	O 11	0.75 V N9-05
CAN Lo	6	O 12	0.75 G N9-06
CAMP_POWER	7	O 13	0.75 B/W N9-07
CAMP_LIN	8	O 14	0.75 YG N9-08
CAMP_LVDS_POS	9	O 15	0.75 Br N9-09
CAMP_LVDS_NEG	10	O 16	0.75 Or N9-10
CAMP_GND	11	O 17	0.75 BL N9-11
GND	12	O 18	0.75 B N9-12


MEMORANDUM

1. POWER CIRCUIT

The negative terminal of battery is grounded to the machine chassis directly.

When the start switch is in the OFF position, the current flows from the positive battery terminal as shown below.

1) OPERATING FLOW

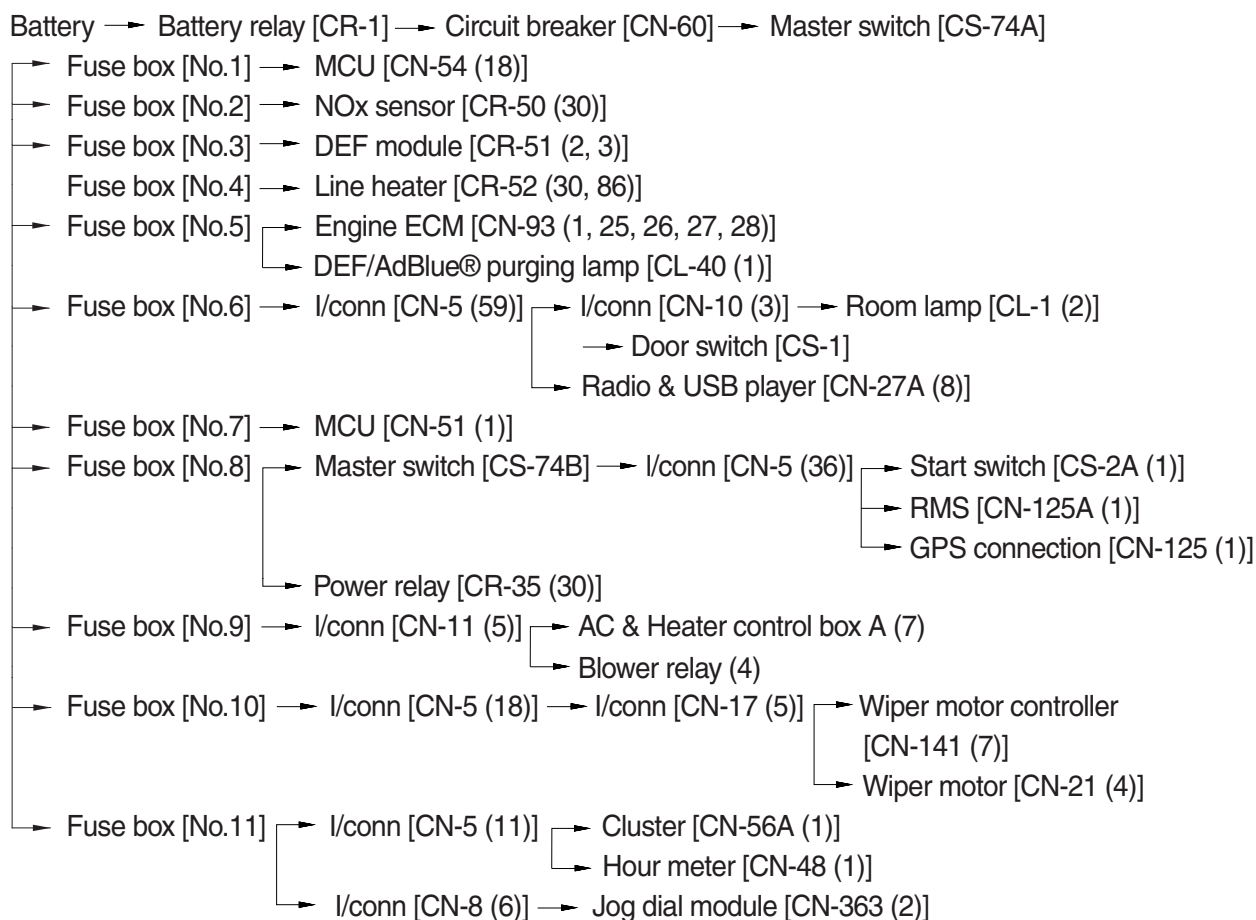

※ I/conn : Intermediate connector


2) CHECK POINT

Engine	Start switch	Check point	Voltage
STOP	OFF	① - GND (battery 1EA)	10~12.5V
		② - GND (battery 2EA)	20~25V
		③ - GND (battery relay)	20~25V
		④ - GND (circuit breaker)	20~25V

※ GND : Ground

※ The circuit diagram may differ from the equipment, so please check before a repair.

POWER CIRCUIT

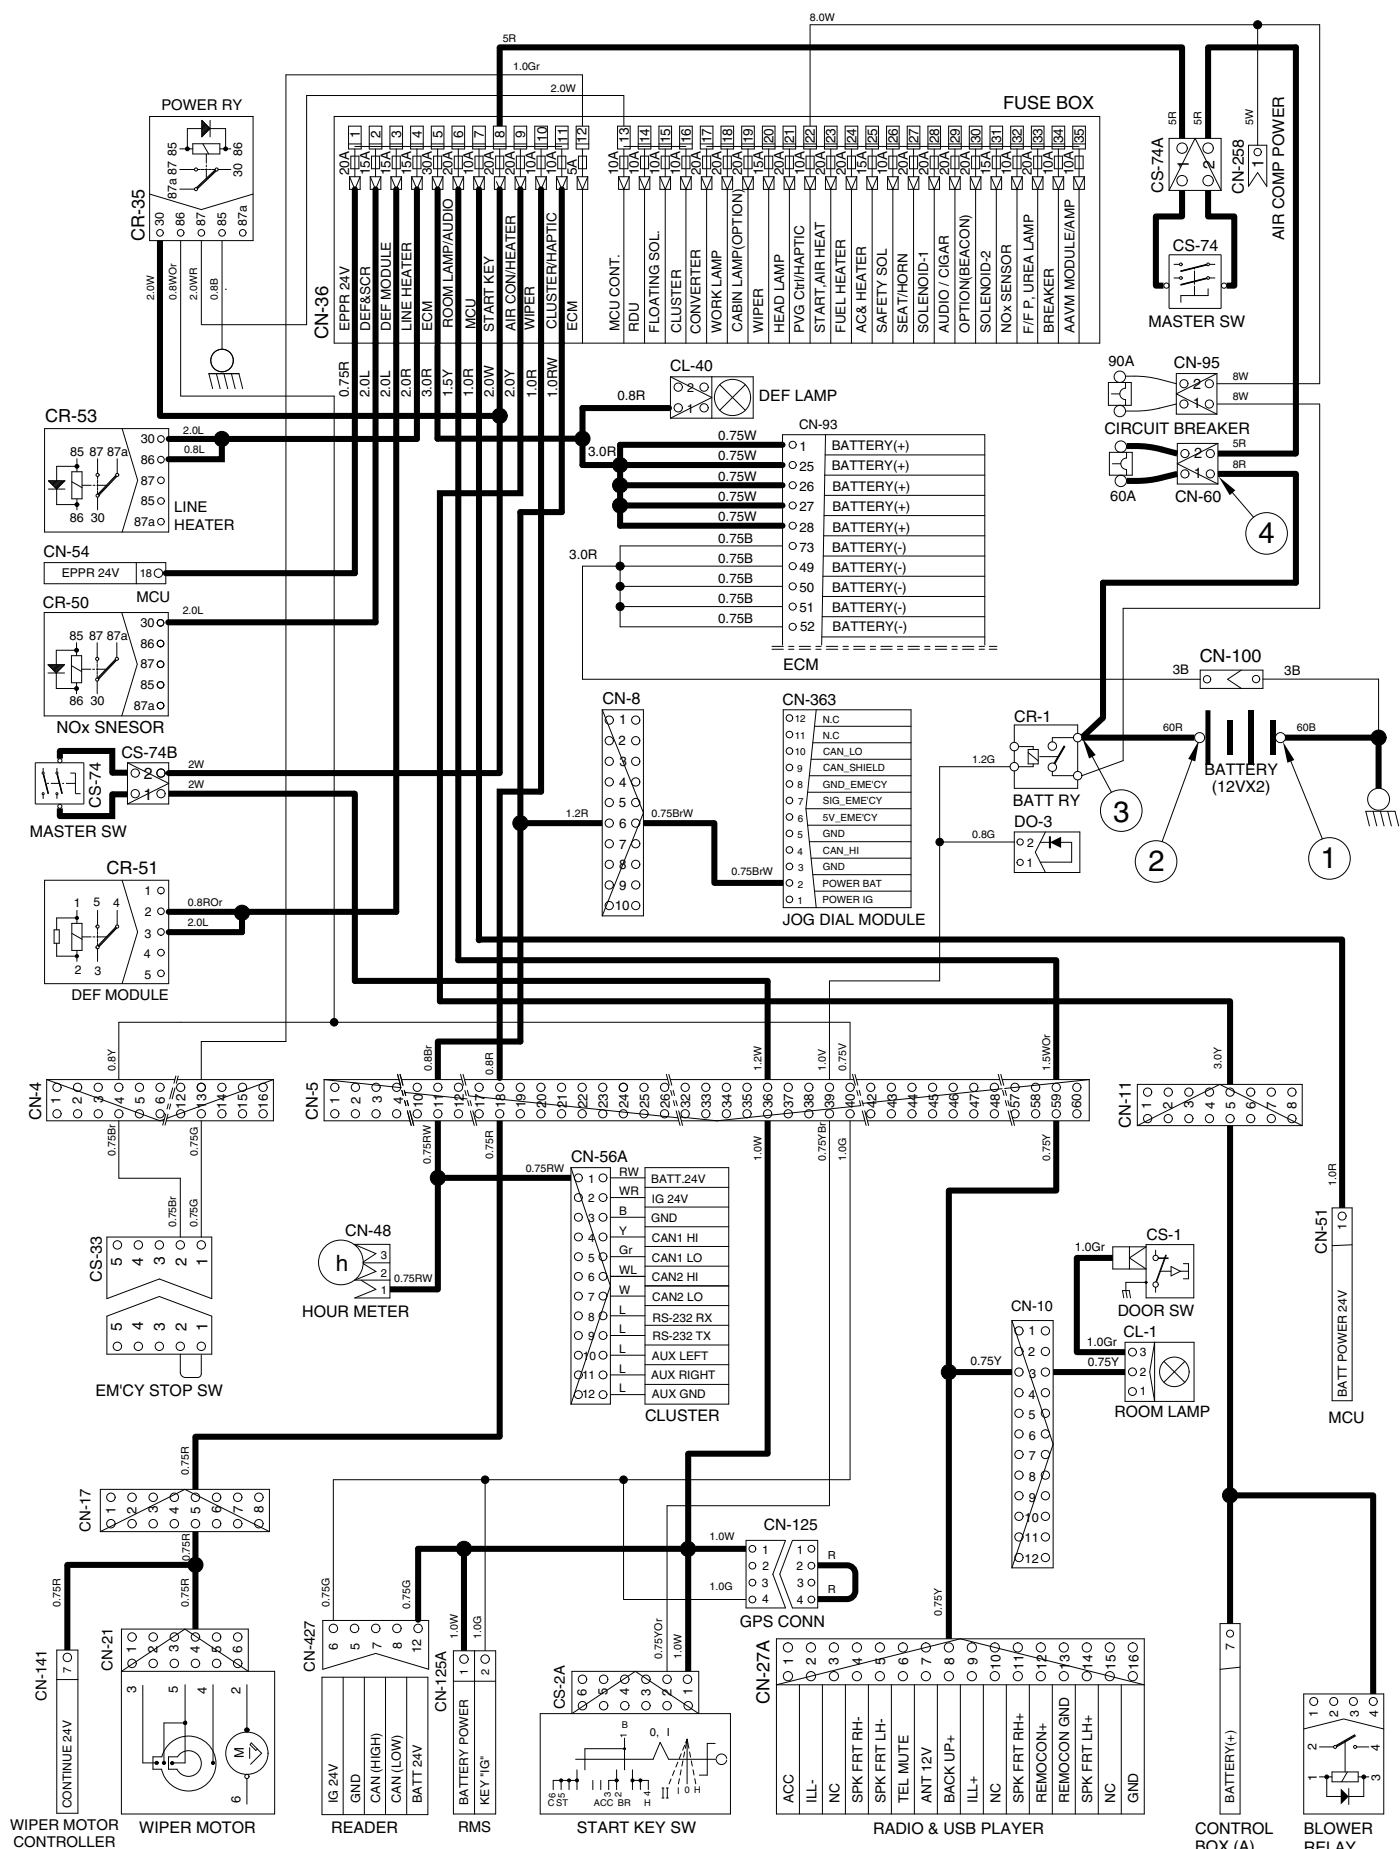


※ The circuit diagram may differ from the equipment, so please check before a repair.

2. STARTING CIRCUIT

1) OPERATING FLOW

Battery (+) terminal → Battery relay [CR-1] → Circuit breaker [CN-60] → Master switch [CS-74A]
 → Fuse box [No.8] → Master switch [CS-74B] → I/conn [CN-5 (36)] → Start switch [CS-2A (1)]

(1) When start key switch is in ON position

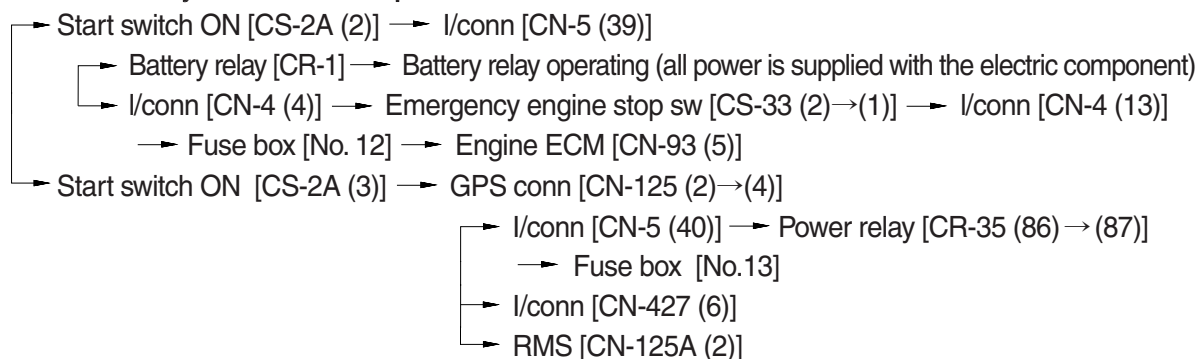

(2) When start key switch is in START position


Start switch START [CS-2A (6)] → I/conn [CN-5 (35)] → Anti-restart relay [CR-5 (2) → (5)]
 → I/conn [CN-2 (7)] → Start relay [CR-23 (S)] → Starter motor operating

2) CHECK POINT

Engine	Start switch	Check point	Voltage
OPERATING	START	① - GND (battery) ② - GND (start key) ③ - GND (battery relay M4) ④ - GND (starter B ⁺) ⑤ - GND (starter M) ⑥ - GND (start relay) ⑦ - GND (battery relay M8)	20~25V

※ The circuit diagram may differ from the equipment, so please check before a repair.

STARTING CIRCUIT

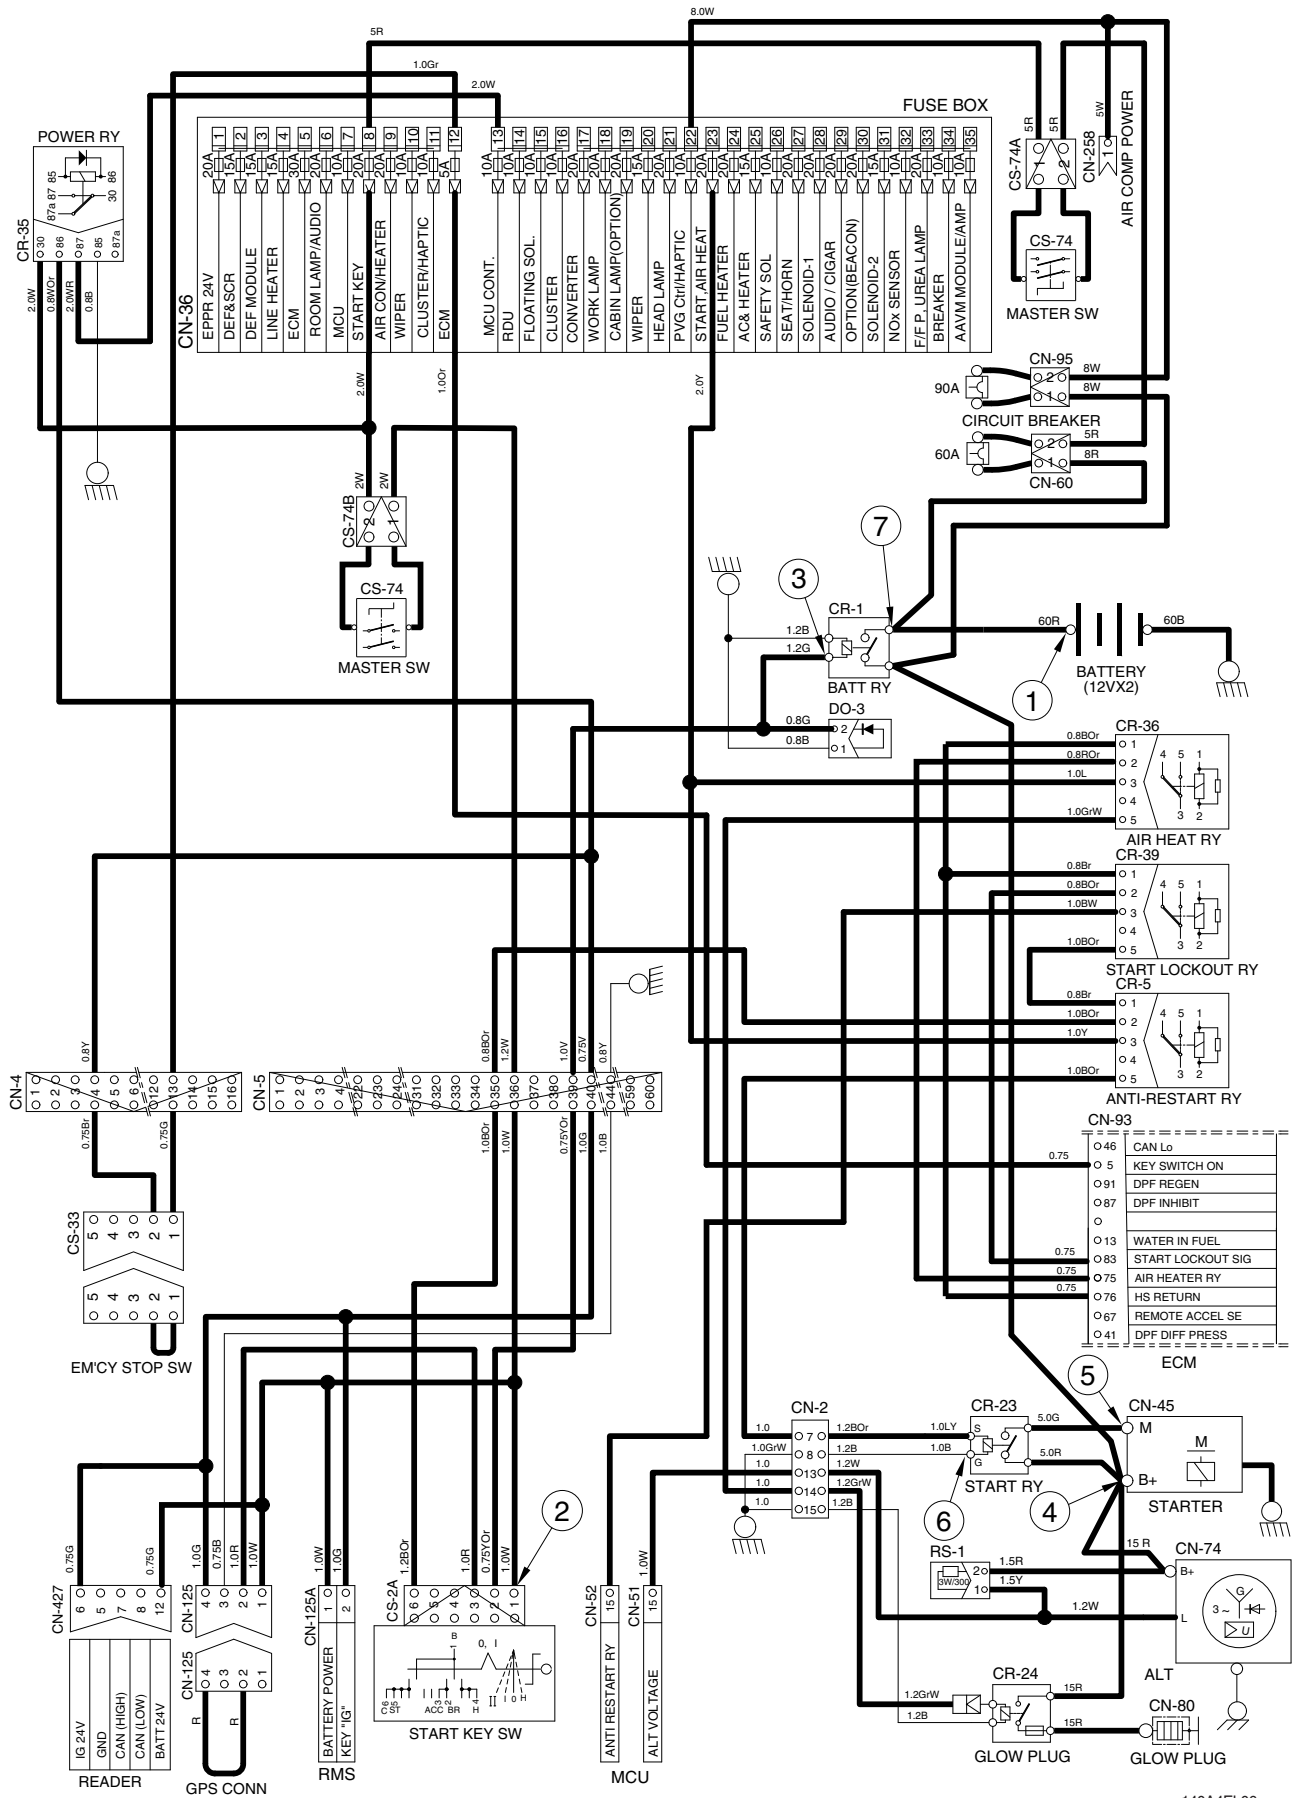

※ The circuit diagram may differ from the equipment, so please check before a repair.

3. CHARGING CIRCUIT

When the starter is activated and the engine is started, the operator releases the start switch to the ON position.

Charging current generated by operating the alternator flows into the battery through the battery relay [CR-1].

The current also flows from the alternator to each electrical component and controller through the fuse box.

1) OPERATING FLOW

(1) Warning flow

Alternator [CN-74 (L)] → I/conn [CN-2 (13)] → MCU alternator level [CN-51 (15)]
→ Cluster charging warning lamp (Via CAN interface)

(2) Charging flow

Alternator "B+" terminal → Starter motor [CN-45 (B+)]
→ Battery relay (M8) → Battery (+) terminal
→ Circuit breaker [CN-60] → Master switch [CS-74A]
→ Fuse box [No.1~11]
→ Circuit breaker [CN-95] → Fuse box [No.17~35]
→ Air comp power [CN-258]


2) CHECK POINT

Engine	Start switch	Check point	Voltage
Run	ON	① - GND (battery voltage) ② - GND (battery relay) ③ - GND (alternator B ⁺ terminal) ④ - GND (alternator L terminal) ⑤ - GND (MCU)	20~25V

※ GND : Ground

※ The circuit diagram may differ from the equipment, so please check before a repair.

CHARGING CIRCUIT

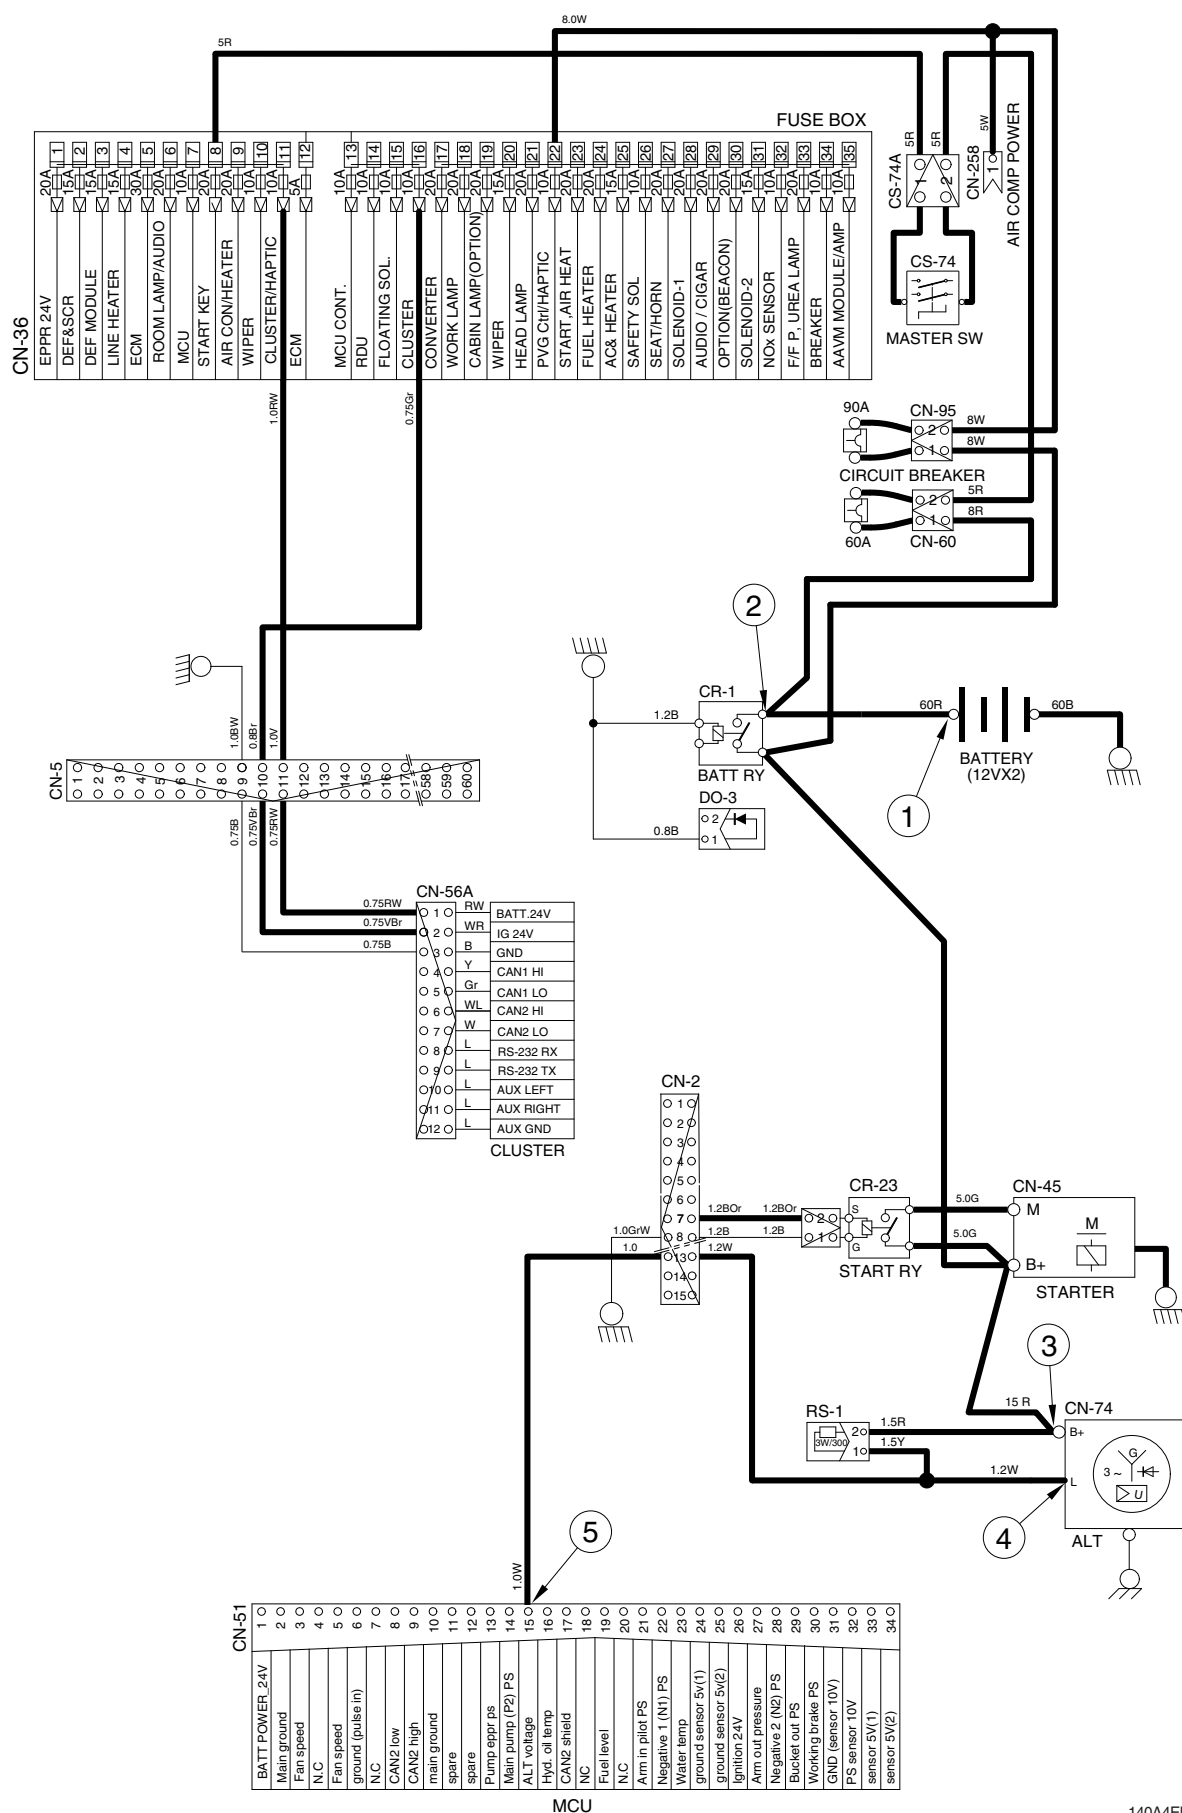

※ The circuit diagram may differ from the equipment, so please check before a repair.

4. HEAD AND WORK LIGHT CIRCUIT

1) OPERATING FLOW

Fuse box (No.21) → Head light relay [CR-13 (30, 86)]

Fuse box (No.18) → Work light relay [CR-4 (30, 86)]

Fuse box (No.14) → RDU membrane controller [CN-376 (1)]

(1) Head light switch ON

Head light switch ON [CN-376 (13)] → Head light relay [CR-13 (85) → (87)]

→ Head light ON [CL-3 (2), CL-4 (2), CL-24 (2)]

→ I/conn [CN-7 (1)] → Cigar lighter [CL-2]

→ I/conn [CN-5 (60)] → Radio & USB player illumination ON [CN-27A (9)]

(2) Work light switch ON

Work light switch ON [CN-376 (4)] → Work light relay [CR-4 (85) → (87)]

→ I/conn [CN-12 (2)] → Work light ON [CL-5 (2), CL-6 (2)]


2) CHECK POINT

Engine	Start switch	Check point	Voltage
STOP	ON	① - GND (fuse box) ② - GND (head light switch power output) ③ - GND (head light relay) ④ - GND (head light) ⑤ - GND (fuse box) ⑥ - GND (work light switch power output) ⑦ - GND (work light relay) ⑧ - GND (work light) ⑨ - GND (switch power input)	20~25V

※ GND : Ground

※ The circuit diagram may differ from the equipment, so please check before a repair.

HEAD AND WORK LIGHT CIRCUIT

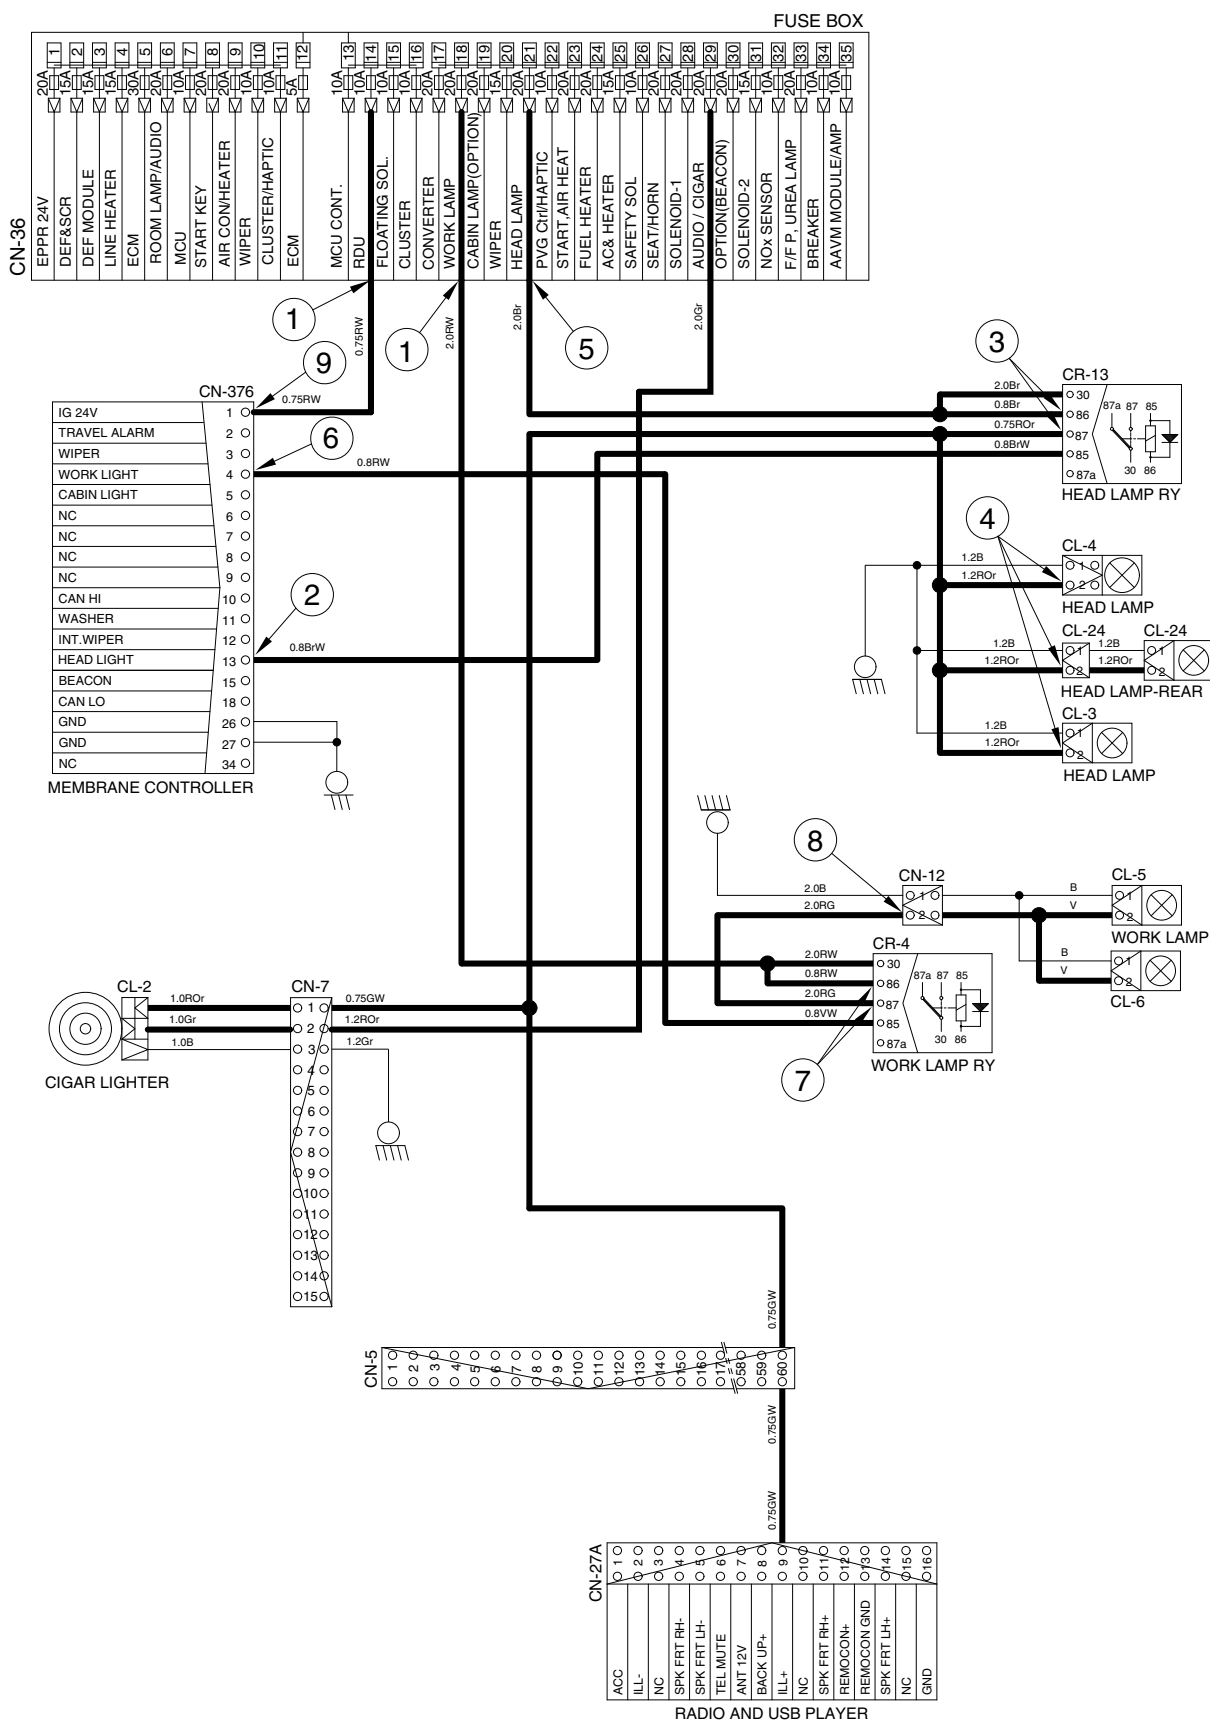

140A4EL08

※ The circuit diagram may differ from the equipment, so please check before a repair.

5. BEACON LAMP AND CAB LIGHT CIRCUIT

1) OPERATING FLOW

Fuse box (No.30) → Beacon lamp relay [CR-85 (2, 3)]

Fuse box (No.19) → Cab light relay [CR-9 (30, 86)]

Fuse box (No.14) → RDU membrane controller [CN-376 (1)]

(1) Beacon lamp switch ON

Beacon lamp switch ON [CN-376 (15)] → Beacon lamp relay [CR-85 (1)→ (5)]

→ I/conn [CN-5 (50)] → I/conn [CN-10 (10)] → Beacon lamp ON [CL-7]

(2) Cab light switch ON

Cab light switch ON [CN-376 (5)] → Cab lamp relay [CR-9 (85)→ (87)]

→ I/conn [CN-5 (34, 38)] → I/conn [CN-10 (11)] → Cab light ON [CL-8 (2)]

→ I/conn [CN-10 (12)] → Cab light ON [CL-9 (2), CL-10 (2)]


2) CHECK POINT

Engine	Start switch	Check point	Voltage
STOP	ON	① - GND (fuse box) ② - GND (beacon lamp relay) ③ - GND (beacon lamp switch power output) ④ - GND (beacon lamp) ⑤ - GND (fuse box) ⑥ - GND (cabin light relay) ⑦ - GND (cab light switch power output) ⑧ - GND (cab light) ⑨ - GND (switch power input)	20~25V

※ GND : Ground

※ The circuit diagram may differ from the equipment, so please check before a repair.

BEACON LAMP AND CAB LIGHT CIRCUIT

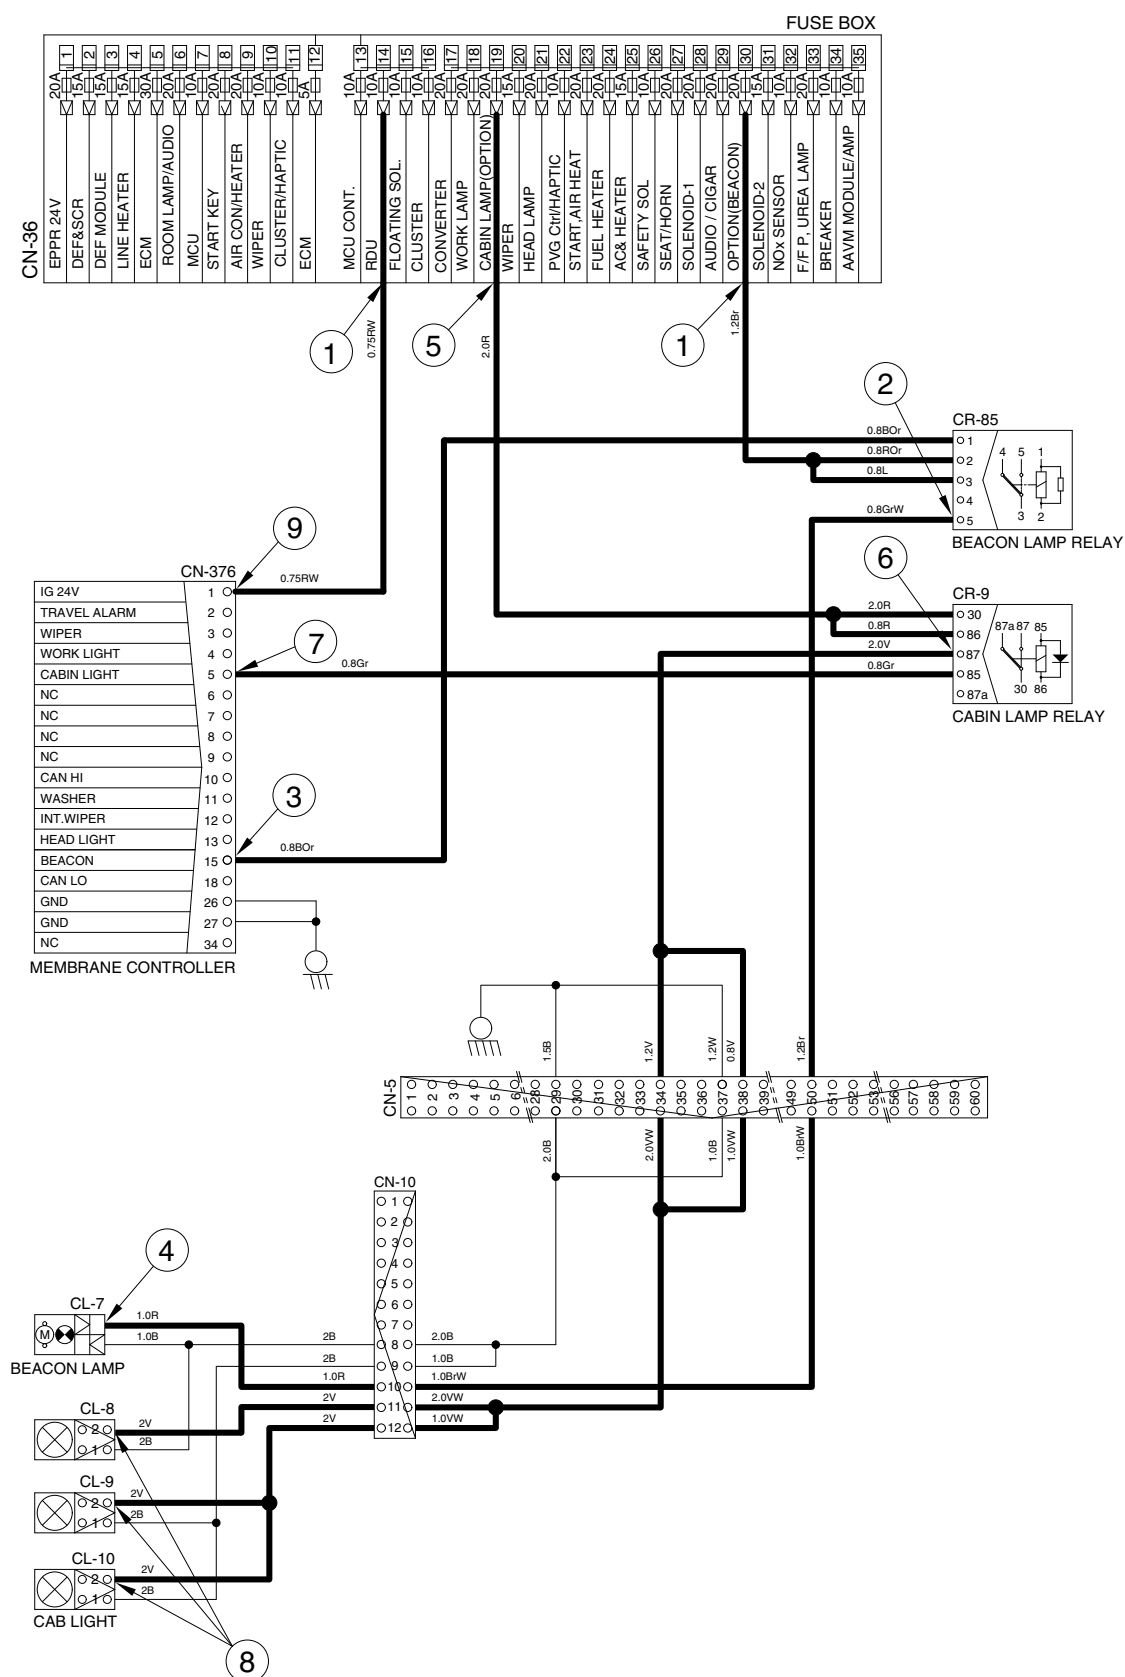

140A4EL09

※ The circuit diagram may differ from the equipment, so please check before a repair.

6. WIPER AND WASHER CIRCUIT

1) OPERATING FLOW

(1) Key switch ON

Fuse box (No.14) → RDU membrane controller [CN-376 (1)]

Fuse box (No.10) → I/conn [CN-5 (18)] → I/conn [CN-17 (5)] → Wiper motor controller [CN-141 (7)]
 → Wiper motor [CN-21 (4)]

Fuse box (No.20) → I/conn [CN-5 (16)] → I/conn [CN-17 (4)] → Wiper motor controller [CN-141 (6)]
 → Washer pump [CN-22 (2)]

(2) Wiper switch ON (Intermittent)

Wiper switch ON [CN-376 (12)] → I/conn [CN-5 (20)] → I/conn [CN-17 (8)]

→ Wiper motor controller [CN-141 (10) → (3)] → Wiper motor [CN-21 (6)] → Intermittently operating

(3) Wiper switch ON (continual)

Wiper switch ON [CN-376 (3)] → I/conn [CN-5 (15)] → I/conn [CN-17 (2)]

→ Wiper motor controller [CN-141 (2) → (4)] → Wiper motor [CN-21 (2)] → Continual operating

(4) Washer switch ON

Washer switch ON [CN-376 (11)] → I/conn [CN-5 (17)] → I/conn [CN-17 (7)]

→ Wiper motor controller [CN-141 (9) → (8)] → I/conn [CN-17 (6)] → I/conn [CN-5 (19)]

→ Washer pump [CN-22 (1)] → Washer operating

Wiper switch ON [CN-376 (3)] → I/conn [CN-5 (15)] → I/conn [CN-17 (2)]

→ Wiper motor controller [CN-141 (2) → (4)] → Wiper motor [CN-21 (2)] → Continual operating

(5) Auto parking (when switch OFF)

Switch OFF [CN-376 (3, 12)] → Wiper motor parking position by wiper motor controller


2) CHECK POINT

Engine	Start switch	Check point	Voltage
STOP	ON	① - GND (fuse box)	20~25V
		② - GND (switch power input)	
		③ - GND (wiper power input)	
		⑤ - GND (switch power output)	0 ~ 5V
		⑥ - GND (wiper power input)	
		⑦ - GND (wiper power output)	24V
		⑧ - GND (wiper motor)	

※ GND : Ground


※ The circuit diagram may differ from the equipment, so please check before a repair.

WIPER AND WASHER CIRCUIT

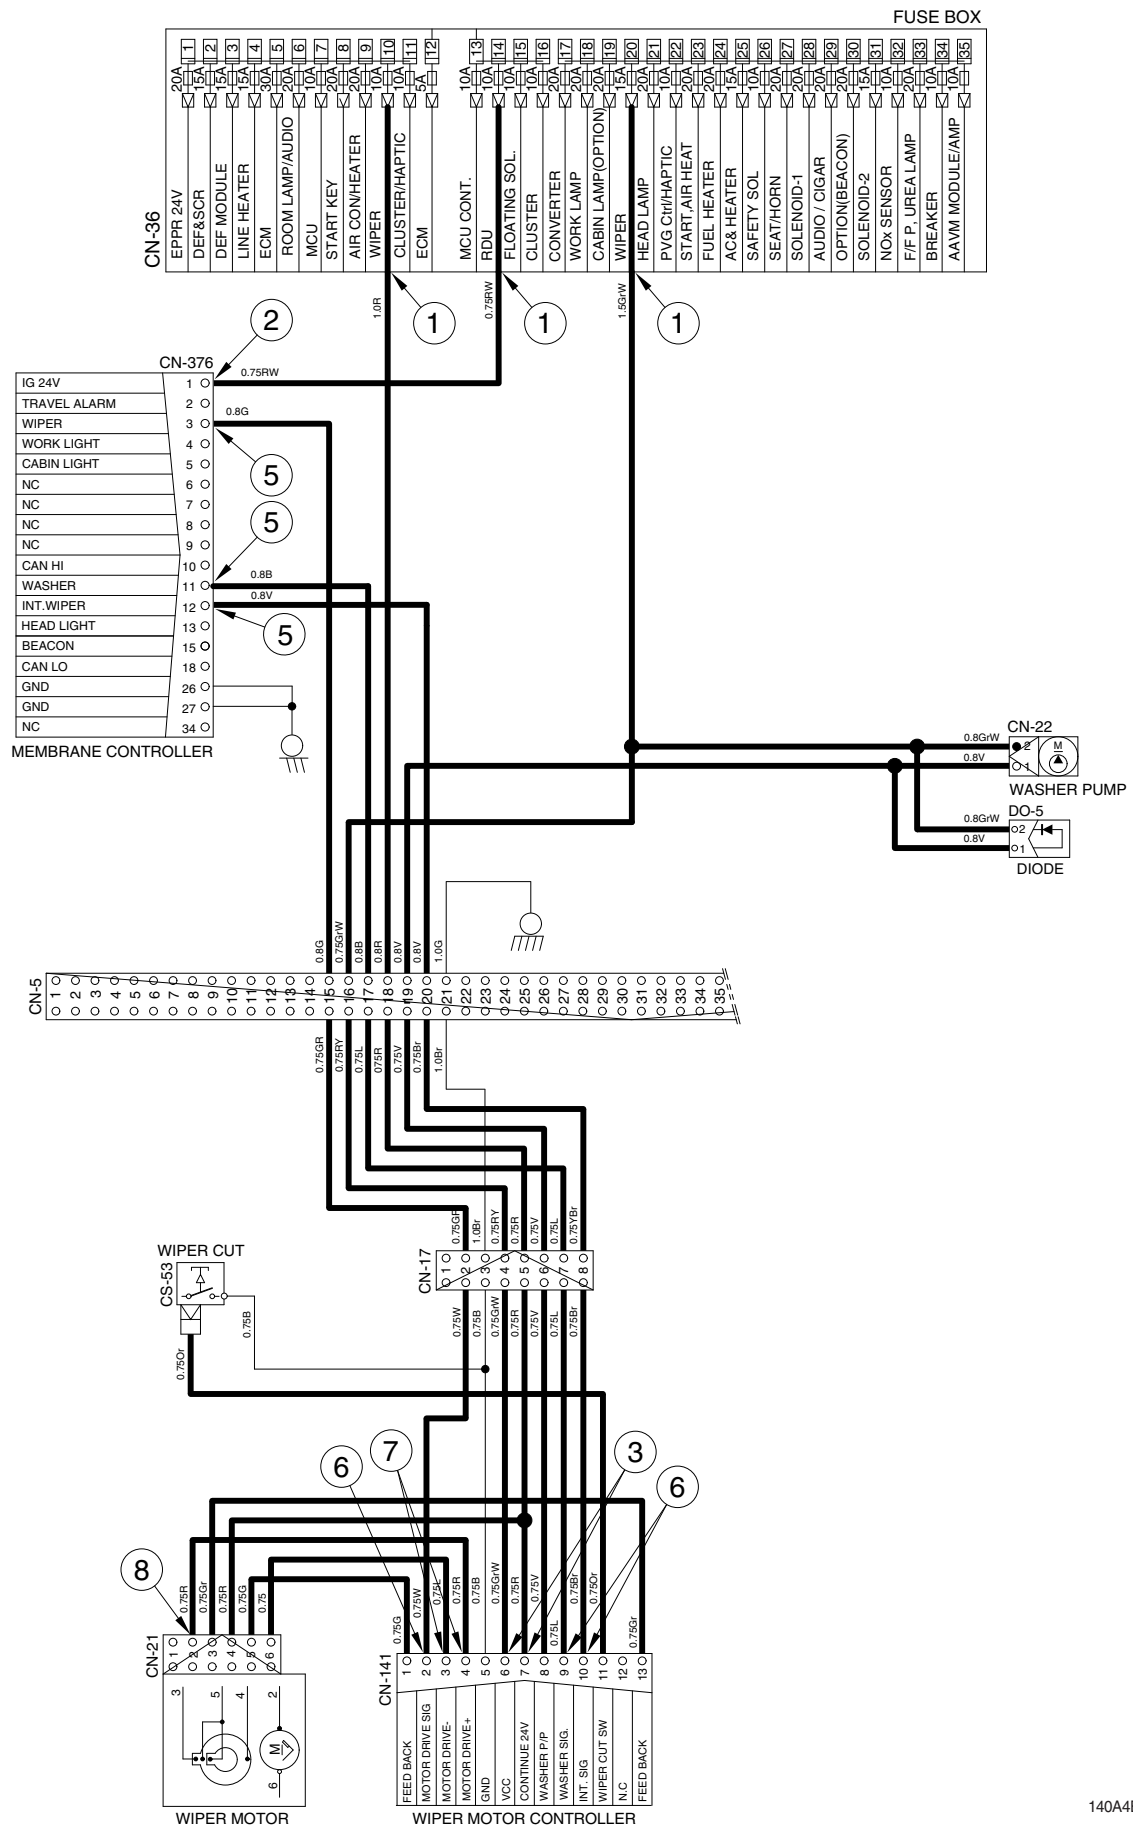


※ The circuit diagram may differ from the equipment, so please check before a repair.

CONTROLLER CIRCUIT

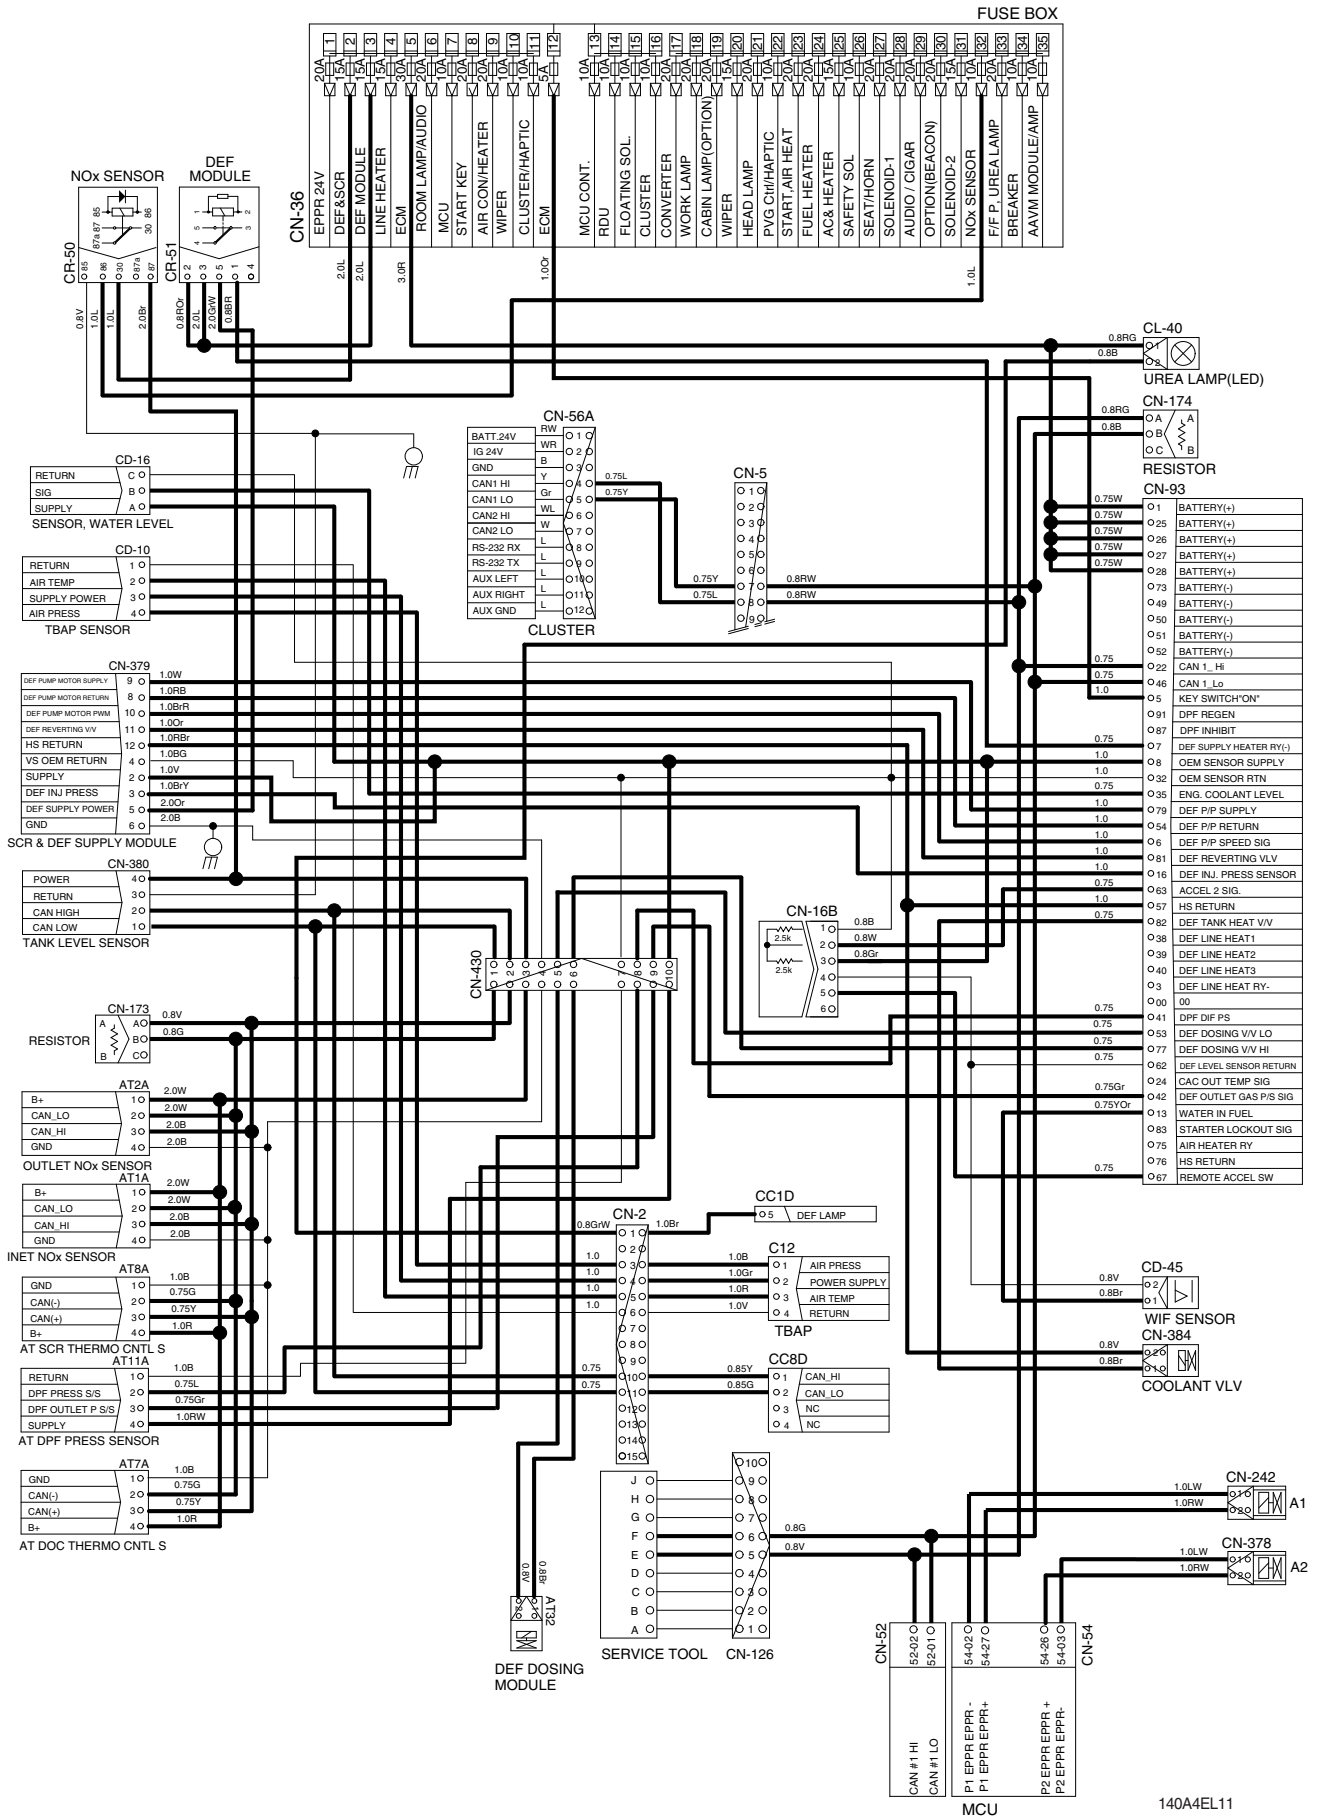


※ The circuit diagram may differ from the equipment, so please check before a repair.

MONITORING CIRCUIT

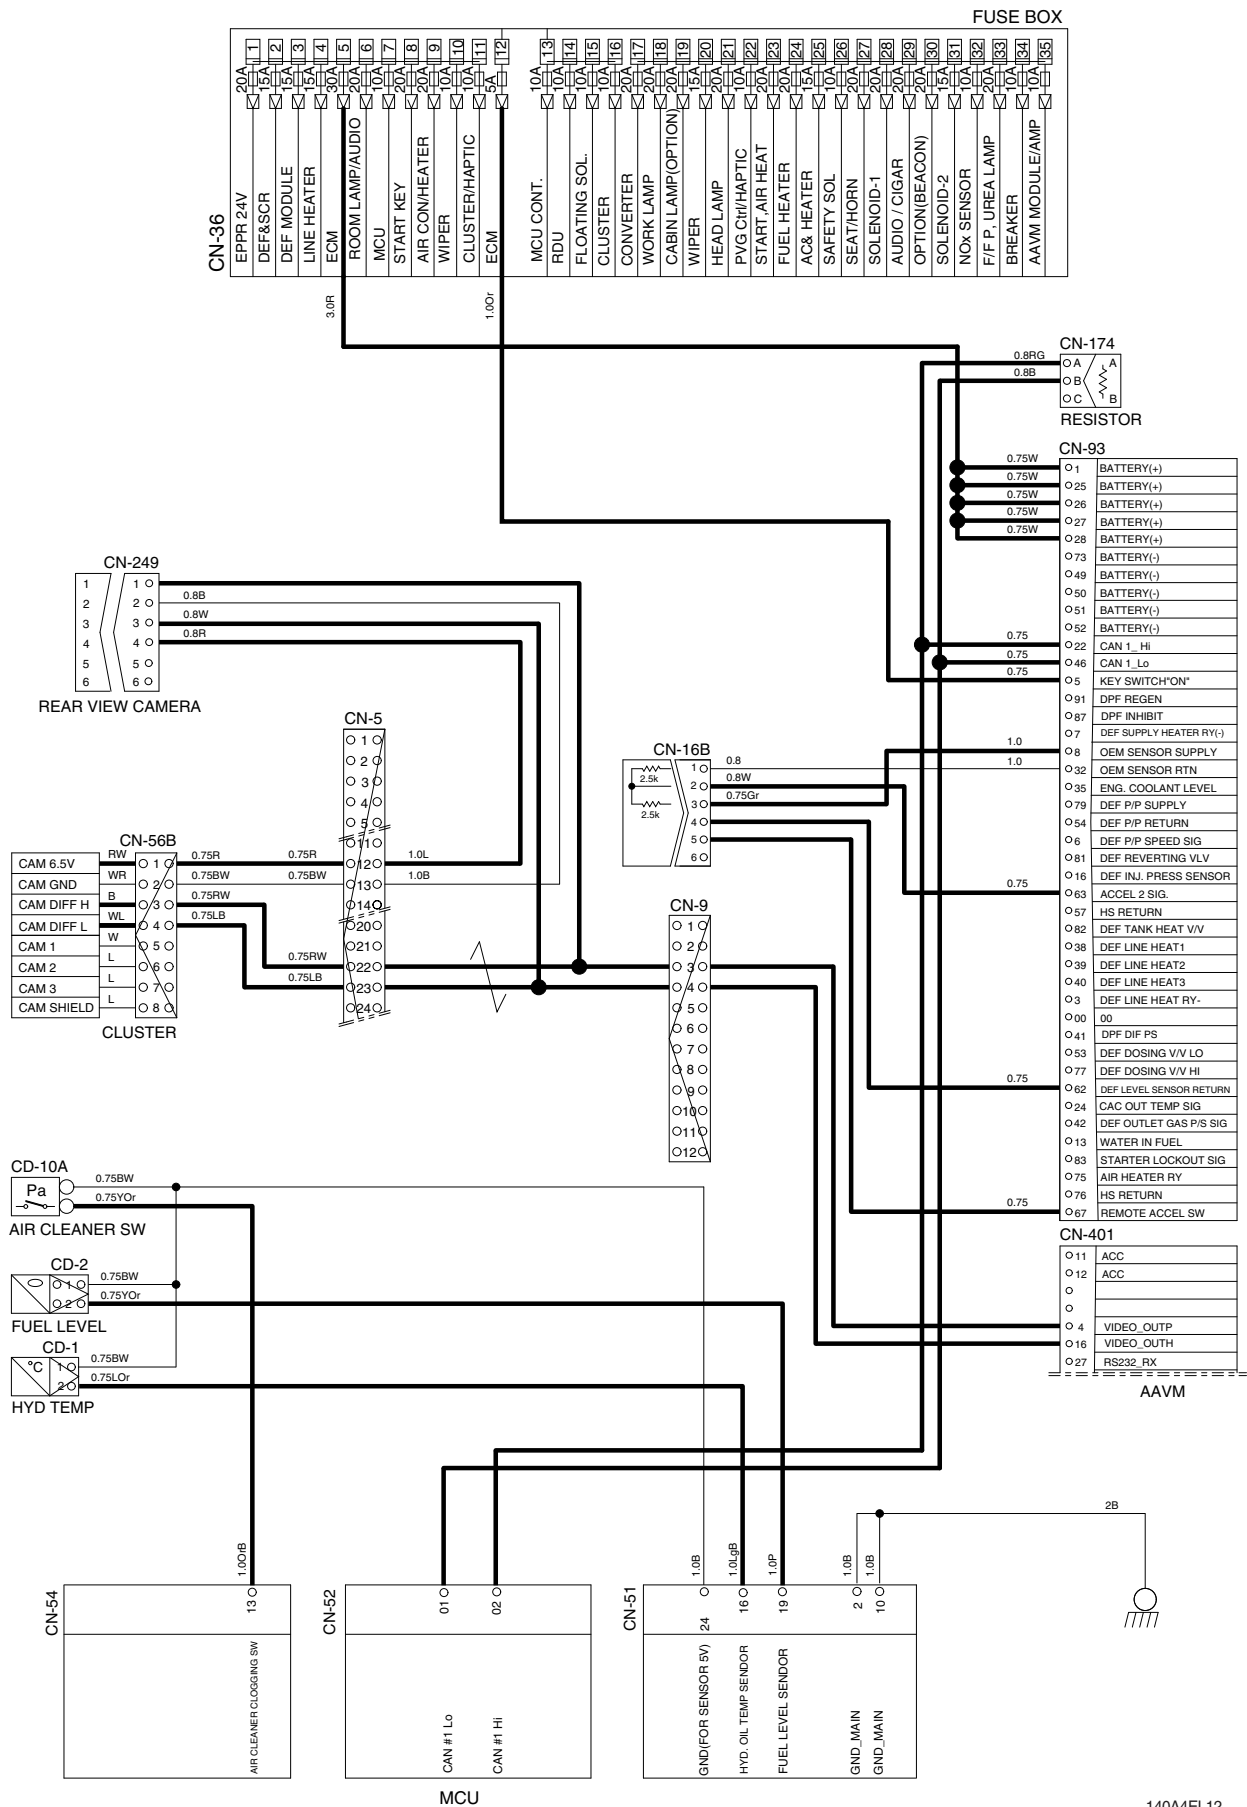


※ The circuit diagram may differ from the equipment, so please check before a repair.

ELECTRIC CIRCUIT FOR HYDRAULIC (1/2)

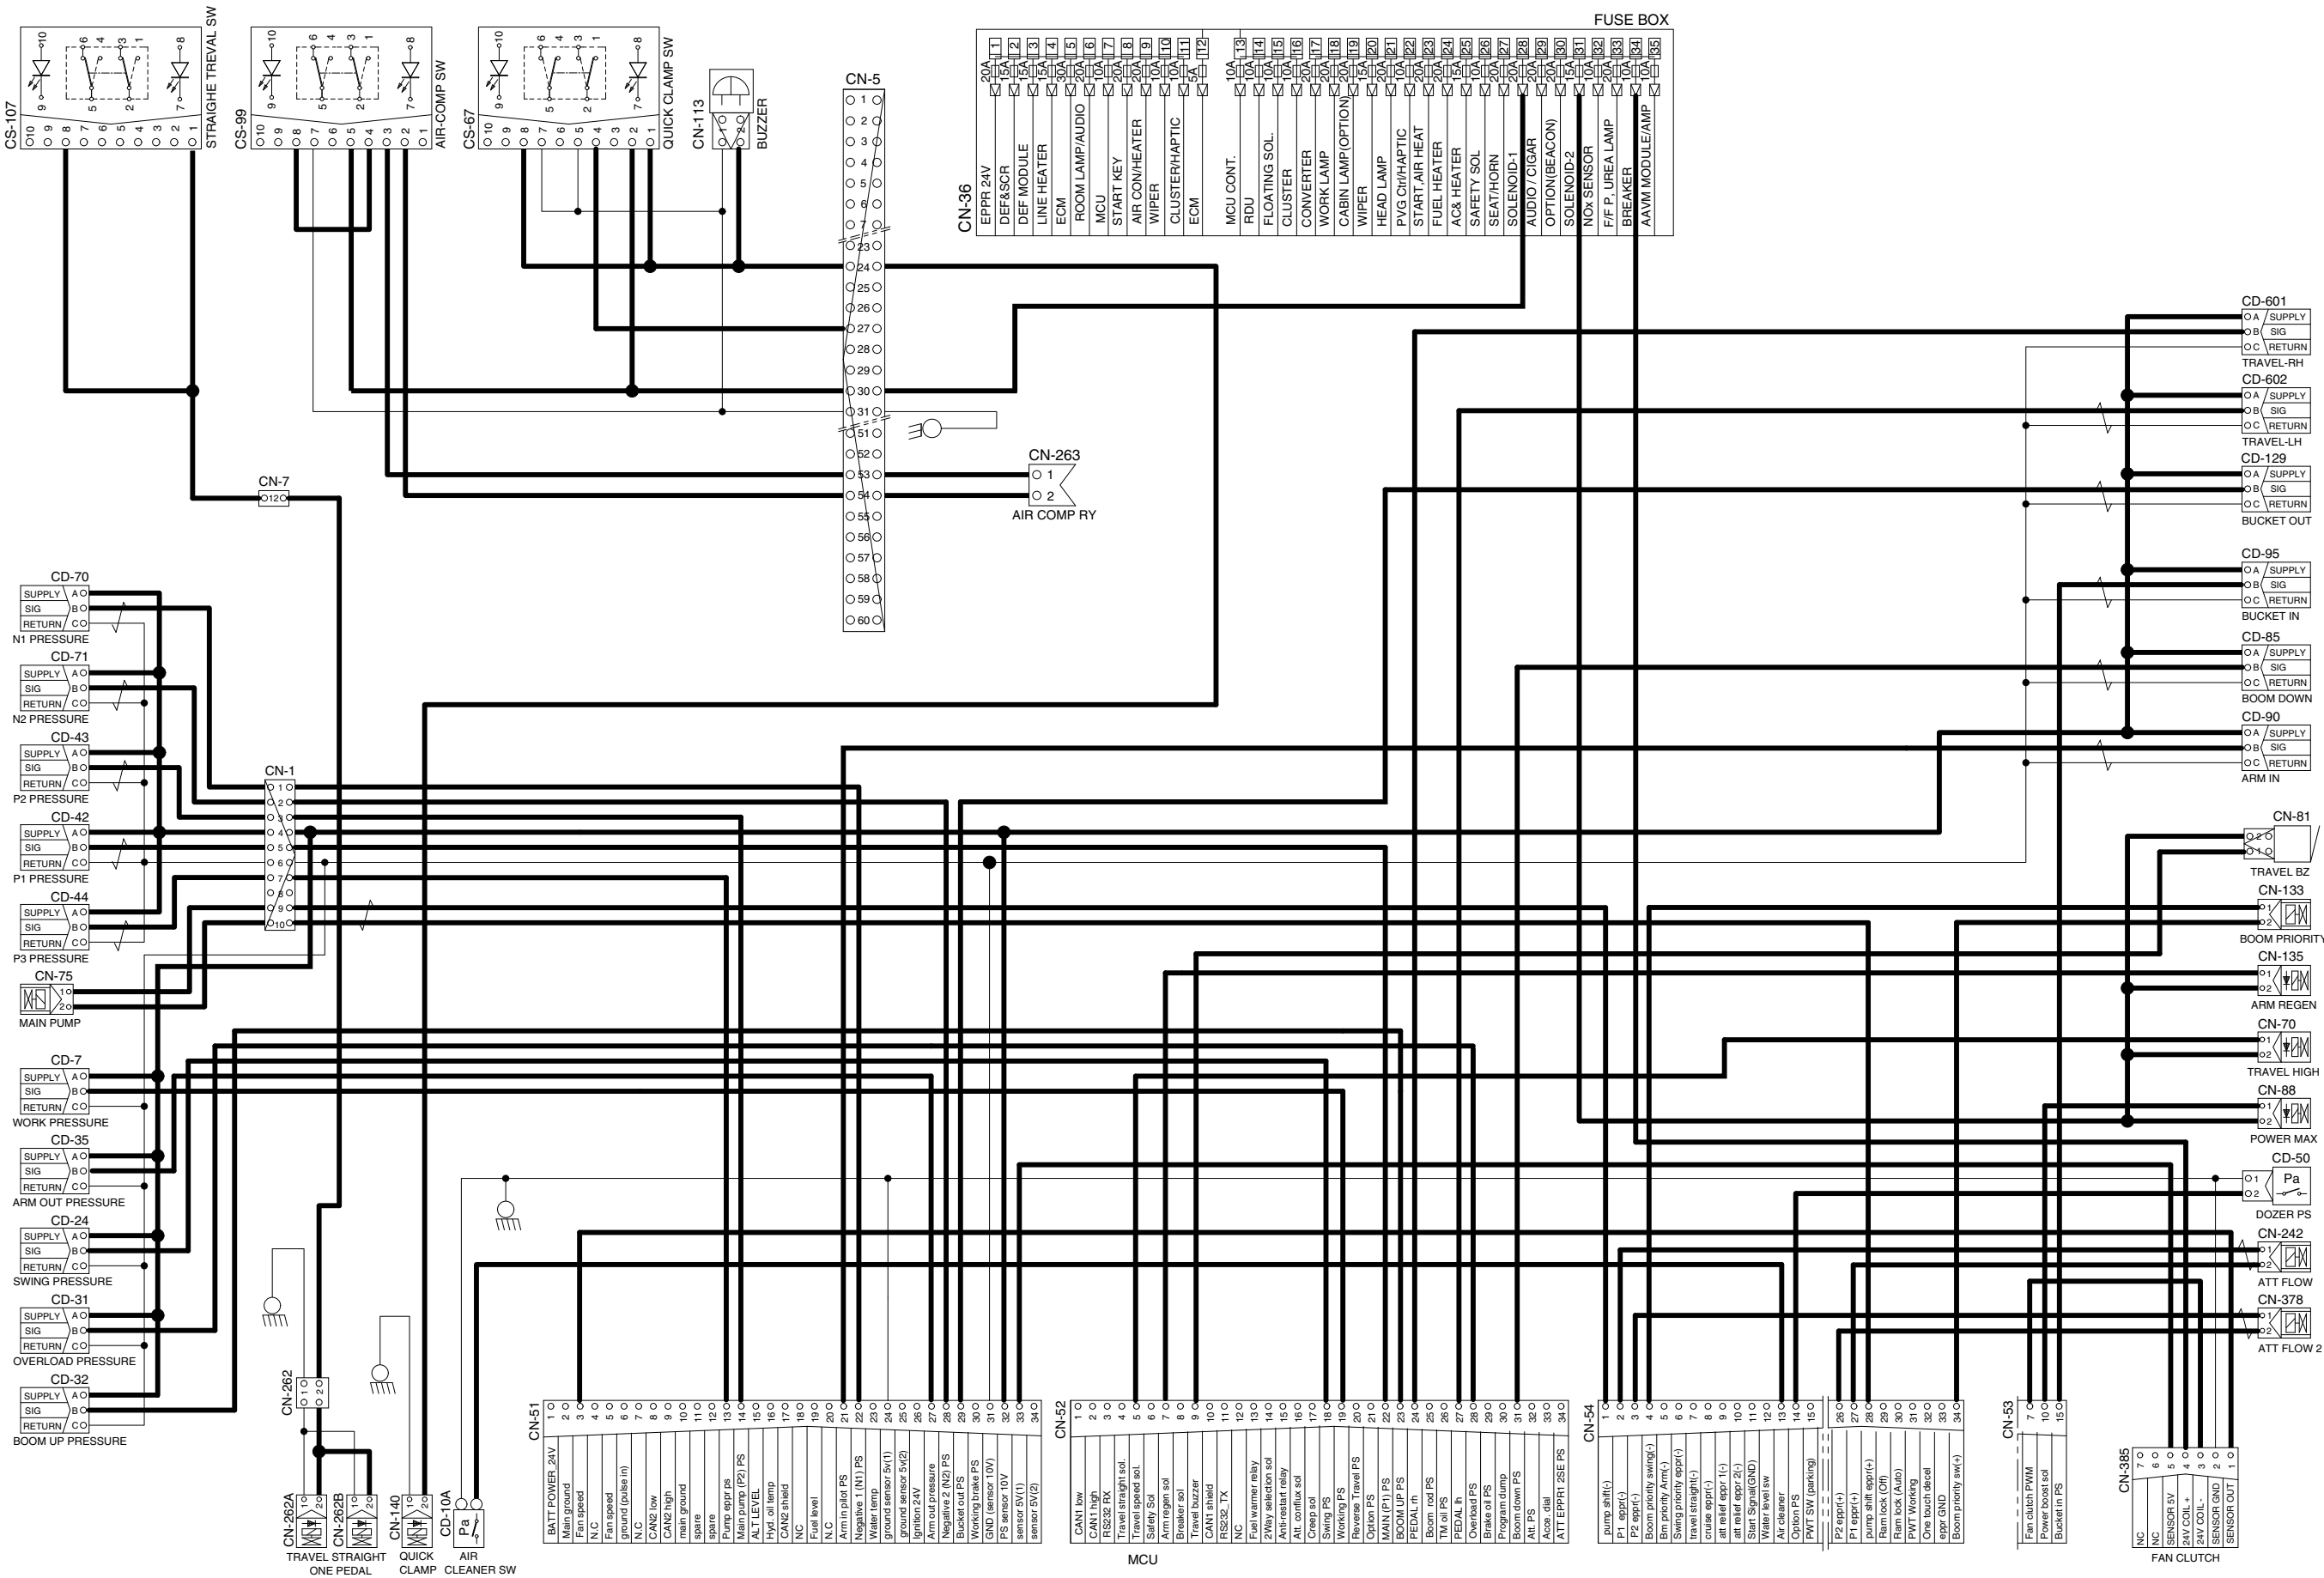






※ The circuit diagram may differ from the equipment, so please check before a repair.



 



ELECTRIC CIRCUIT FOR HYDRAULIC (2/2)


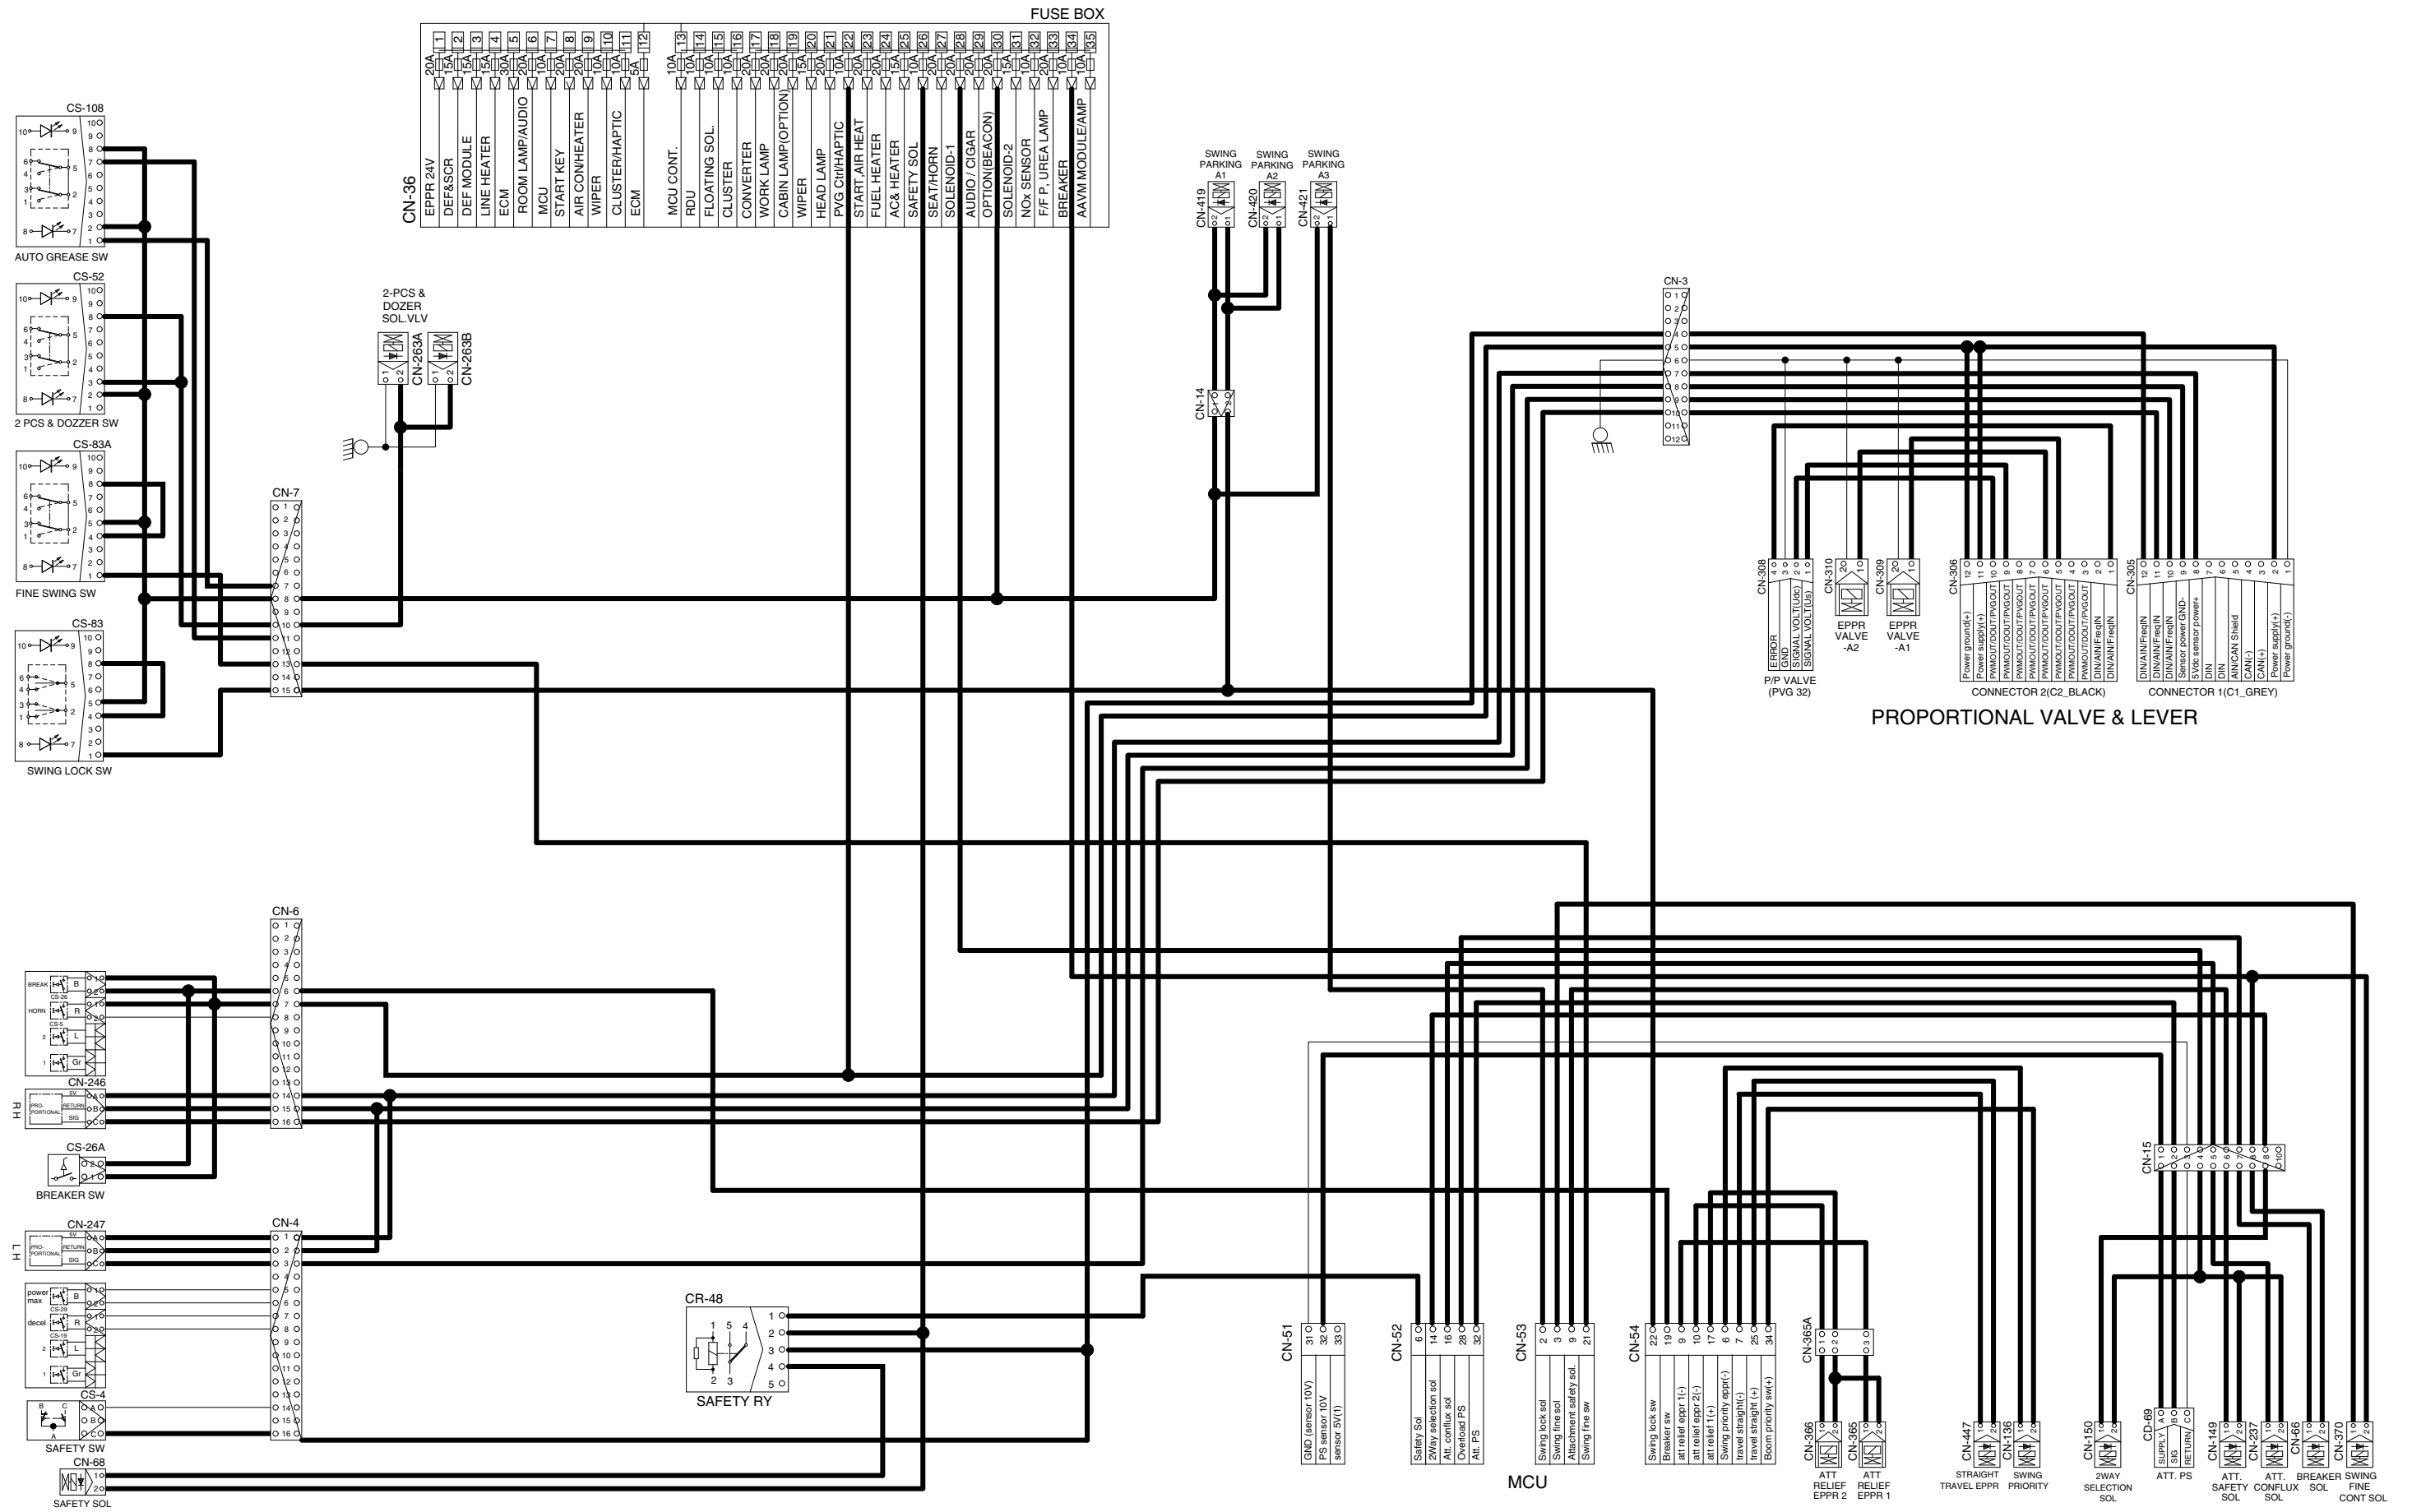

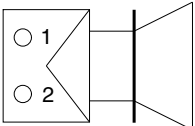
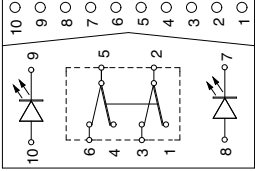
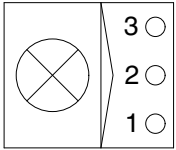








※ The circuit diagram may differ from the equipment, so please check before a repair.







GROUP 3 ELECTRICAL COMPONENT SPECIFICATION


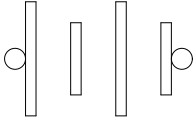
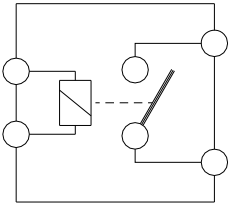
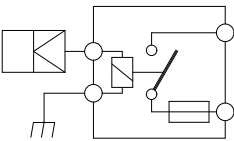
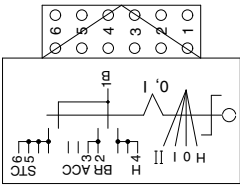
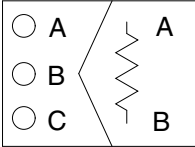
Part name	Symbol	Specifications	Check
Battery		12V×100Ah (2EA)	※ Check specific gravity 1.280 over : Over charged 1.280 ~ 1.250 : Normal 1.250 below : Recharging
Battery relay	 CR-1	Rated load : 24V 100A (continuity) 1000A (30seconds)	※ Check coil resistance(M4 to M4) Normal : About 50Ω ※ Check contact Normal : ∞Ω
Hearter relay	 CR-24	24V 200A	※ Check contact Normal : 0.942Ω (for terminal 1-GND)
Start key	 CS-2A	B-BR : 24V 1A B-ACC : 24V 10A B-ST : 24V 40A	※ Check contact OFF : ∞Ω (for each terminal) ON : 0Ω (for terminal 1-3 and 1-2) START : 0Ω (for terminal 1-6)
Pressure sensor	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;"> <div style="display: flex; justify-content: space-between;"> <div>○ A</div> <div>SUPPLY</div> </div> <div style="display: flex; justify-content: space-between;"> <div>○ B</div> <div>SIG</div> </div> <div style="display: flex; justify-content: space-between;"> <div>○ C</div> <div>RETURN</div> </div> </div> <div style="margin-left: 10px;"> <div style="display: flex; justify-content: space-between;"> <div>CD-7</div> <div>CD-24</div> <div>CD-31</div> <div>CD-32</div> </div> <div style="display: flex; justify-content: space-between;"> <div>CD-35</div> <div>CD-42</div> <div>CD-43</div> <div>CD-44</div> </div> <div style="display: flex; justify-content: space-between;"> <div>CD-69</div> <div>CD-70</div> <div>CD-71</div> <div>CD-85</div> </div> <div style="display: flex; justify-content: space-between;"> <div>CD-90</div> <div>CD-95</div> <div>CD-129</div> <div>CD-601</div> </div> <div>CD-602</div> </div> </div>	8~30V	※ Check contact Normal : 0.1Ω
Resistor	 CN-173 CN-174	3W	※ Check resistance A-B : 120Ω

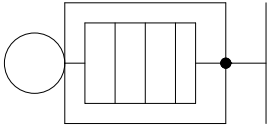
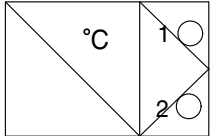

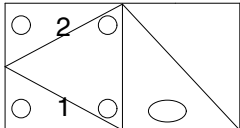
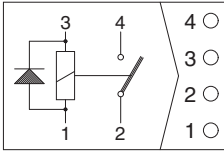
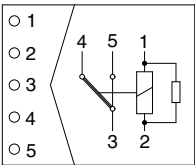
Part name	Symbol	Specifications	Check
Glow plug	 CN-80	24V 200A	※ Check resistance 0.25~0.12Ω
Temperature sensor (hydraulic)	 CD-1	-	※ Check resistance 50°C : 804Ω 80°C : 310Ω 100°C : 180Ω
Air cleaner pressure switch	 CD-10A	N.O TYPE	※ Check contact High level : ∞Ω Low level : 0Ω
Fuel level sender	 CD-2	-	※ Check resistance Full : 50Ω 6/12 : 350Ω 11/12 : 100Ω 5/12 : 400Ω 10/12 : 150Ω 4/12 : 450Ω 9/12 : 200Ω 3/12 : 500Ω 8/12 : 250Ω 2/12 : 550Ω 7/12 : 300Ω 1/12 : 600Ω Empty warning : 700Ω
Relay (air con blower)		24V 20A	※ Check resistance Normal : About 200Ω (for terminal 1-3) ∞Ω (for terminal 2-4)
Relay	 CR-2 CR-5 CR-36 CR-39 CR-48 CR-51 CR-85	24V 16A	※ Check resistance Normal : About 160 Ω (for terminal 1-2) 0Ω (for terminal 3-4) ∞Ω (for terminal 3-5)





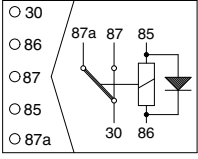
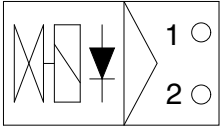
Part name	Symbol	Specifications	Check
Relay	 <p>CR-4 CR-7 CR-9 CR-13 CR-35 CR-46 CR-50 CR-52</p>	24V 16A	※ Check resistance Normal : About 160 Ω (for terminal 85-86) 0 Ω (for terminal 30-87a) ∞ Ω (for terminal 30-87)
Solenoid valve	 <p>CN-66 CN-68 CN-70 CN-88 CN-135 CN-140 CN-149 CN-150 CN-237 CN-262A CN-262B CN-263A CN-263B CN-370 CN-419 CN-420 CN-421</p>	24V 1A	※ Check resistance Normal : 15~25 Ω (for terminal 1-2)
EPPR valve	 <p>CN-75 CN-133 CN-136 CN-242 CN-309 CN-310 CN-365 CN-366 CN-378 CN-447</p>	700mA	※ Check resistance Normal : 15~25 Ω (for terminal 1-2)
Speaker	 <p>CN-23(LH) CN-24(RH)</p>	20W	※ Check resistance Normal : A few Ω
Switch (locking type)	 <p>CS-52 CS-67 CS-83 CS-83A CS-99 CS-107 CS-108 CS-111</p>	24V 1.5A	※ Check contact Normal OFF : ∞ Ω (for terminal 2-3, 5-6) 0 Ω (for terminal 2-1, 5-4)
Room lamp	 <p>CL-1</p>	24V 10W	※ Check disconnection Normal : 1.0 Ω OFF : ∞ Ω (For terminal 1-2) 0 Ω (For terminal 1-3)

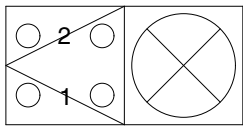
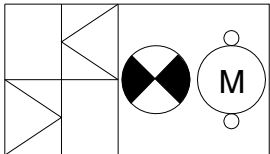
 
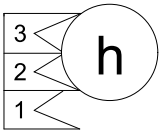
 
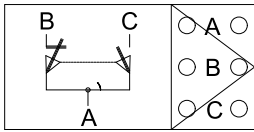
Part name	Symbol	Specifications	Check
Head lamp, Work lamp, Cab lamp	 CL-3 CL-4 CL-5 CL-6 CL-8 CL-9 CL-10 CL-24	24V 65W (H3 Type)	※ Check disconnection Normal : 1.2Ω
Beacon lamp	 CL-7	21V 70W (H1 Type)	※ Check disconnection Normal : A few Ω
Fuel filler pump	 CN-61	24V 10A 35 ℓ /min	※ Check resistance Normal : 1.0Ω
Hour meter	 CN-48	16~32V	※ Check operation Supply power (24V) to terminal No.1 and connect terminal No.2 and ground
Horn	 CN-20 CN-25	DC22~28V 2A	※ Check operation Supply power (24V) to each terminal and connect ground.
Safety switch	 CS-4	24V 15A (N.C TYPE)	※ Check contact Normal : 0Ω (for terminal A-B) ∞Ω (for terminal A-C) Operating : ∞Ω (for terminal A-B) 0Ω (for terminal A-C)

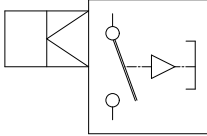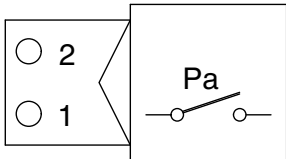
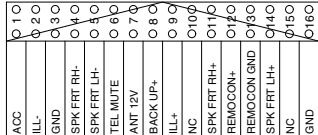
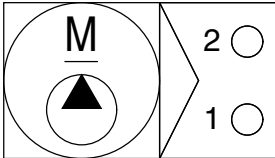
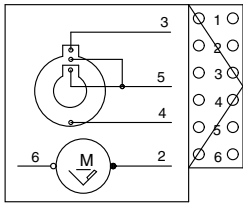
 

Part name	Symbol	Specifications	Check
Wiper cut switch	 CS-53	24V (N.O TYPE)	※ Check contact Normal : 0Ω (one pin to ground)
Receiver dryer	 CN-29	24V 2.5A	※ Check contact Normal : ∞Ω
Radio & USB player	 CN-27A	24V 2A	※ Check voltage 20~25V (for terminal 1-3, 3-8)
Washer pump	 CN-22	24V 3.8A	※ Check contact Normal : 10.7Ω (for terminal 1-2)
Wiper motor	 CN-21	24V 2A	※ Check disconnection Normal : 7Ω (for terminal 2-6)
DC/DC Converter	 CN-138	12V 3A	※ Check voltage 24V (for terminal 1-2) 12V (for terminal 1-3)

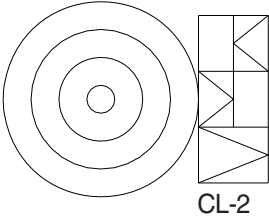
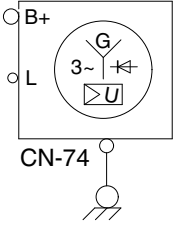
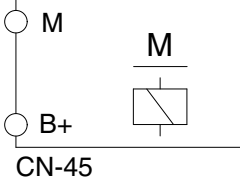
 
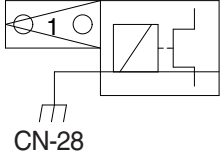
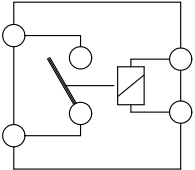
Part name	Symbol	Specifications	Check
Cigar lighter	 CL-2	24V 5A 1.4W	※ Check coil resistance Normal : About 1M Ω ※ Check contact Normal : $\infty \Omega$ Operating time : 5~15sec
Alternator	 CN-74	24V 70A	※ Check contact Normal : 0 Ω (for terminal B ⁺ -L) Normal : 24~27.5V
Starter	 CN-45	24V 4.8kW	※ Check contact Normal : 0.1 Ω
Travel alarm	 CN-81	24V 0.5A	※ Check contact Normal : 5.2 Ω
Air conditioner compressor	 CN-28	24V 79W	※ Check contact Normal : 13.4 Ω
Start relay	 CR-23	24V 300A	※ Check contact Normal : 0.94 Ω (for terminal 1-2)

 
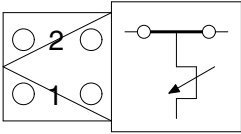
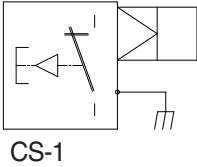
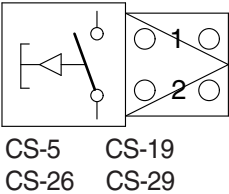
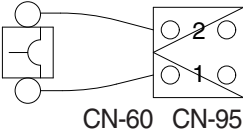
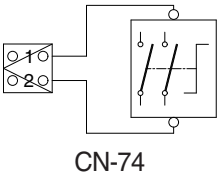
Part name	Symbol	Specifications	Check
Blower motor		24V 9.5A	※ Check resistance Normal : 2.5Ω (for terminal 1-2)
Thermistor (switch)		1°C OFF 4°C ON	※ Check resistance Normal : 0Ω (for terminal 1-2), the atmosphere temp : Over 4°C
Door switch		24V 2W	※ Check resistance Normal : About 5MΩ
Switch (power max, one touch decel, horn, breaker)		24V 6A	※ Check resistance Normal : ∞Ω
Circuit breaker		CN-60 : 60A CN-95 : 90A	※ Check disconnection Normal : 0Ω (connect ring terminal and check resist between terminal 1 and 2)
Master switch		6-36V	※ Check disconnection Normal : 0.1Ω

 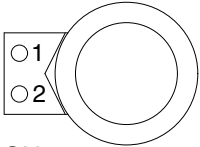
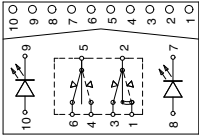
 
 
 
Part name	Symbol	Specifications	Check
Quick clamp buzzer	 CN-113	24V 200mA 107 ± 4dB	-
Socket	 CN-139	12V 10A	-
Switch	 CS-79	24V 8A	※ Check contact Normal OFF : ∞Ω (for terminal 2-3, 5-6) 0Ω (for terminal 2-1, 5-4)
Fuel heater	 CN-96	-	-
DEF/AdBlue® line heater	 CN-381 CN-382 CN-383	-	-
WIF sensor	 CD-45	-	-

  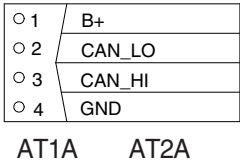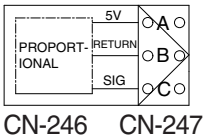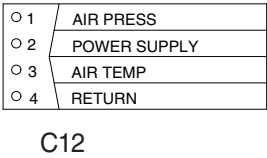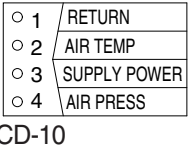Part name	Symbol	Specifications	Check
NOx sensor		-	-
Temperature sensor (A/C)		-	-
DEF/AdBlue® lamp (LED)		-	-
Proportional valve sensor		-	-
TBAP		-	-
TBAP sensor		-	-

  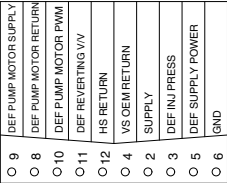  Part name	Symbol	Specifications	Check
Coolant valve	 CN-384 AT32A	-	
DPF pressure sensor	 AT11A	-	
SCR and DEF supply module	 CN-379	-	
Tank level sensor	 CN-380	-	
Resistor	 RS-1	3W	※ Check resistance Normal : 300Ω
DEF lamp connector	 CC1D	-	

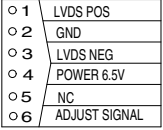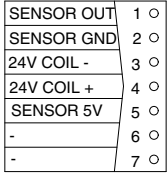    Part name	Symbol	Specifications	Check
Camera (rear, side)	 <p>CN-402 CN-403 CN-404 CN-405</p>	-	
Fan clutch	 <p>CN-385</p>	-	
Seat belt sw	 <p>CS-250</p>	-	
RMS service tool	 <p>CN-126A</p>	-	
Breaker switch	 <p>CS-26A</p>	-	
Start button	 <p>CS-2B</p>	-	

    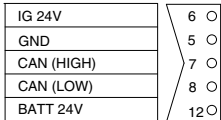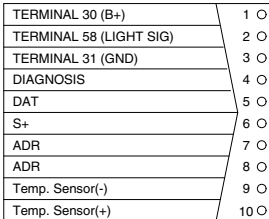Part name	Symbol	Specifications	Check
GPS connector	 CN-125	-	
Reader	 CN-427	-	
Proportional valve	 CN-308	-	
Dosing pump	 CN-269	-	
Engine side cross over connector	 CC8D	-	
Easystart timer	 CN-267	-	

  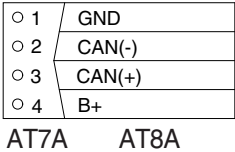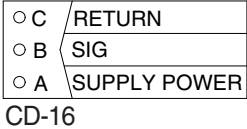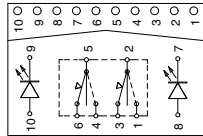Part name	Symbol	Specifications	Check
Exhaust gas temp sensor	 <p>AT7A AT8A</p>	-	
Float switch	 <p>CS-61</p>	-	
Water pump		-	
Water level sensor	 <p>CD-16</p>	-	
Switch	 <p>CS-100</p>	24V 8A	<p>※ Check contact</p> <p>Normal</p> <p>OFF : $\infty \Omega$ (for terminal 2-3, 5-6)</p> <p>0 Ω (for terminal 2-1, 5-4)</p>

GROUP 4 CONNECTORS

1. CONNECTOR DESTINATION

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-1	TYCO	10	I/conn (Frame harness-Engine harness)	174655-2	174657-2
CN-2	AMP	15	I/conn (Frame harness-Engine harness)	2-85262-1	368301-1
CN-3A	TYCO	12	I/conn (Frame harness-Pro vlv harness)	174661-2	368537-1
CN-4	AMP	16	I/conn (Console harness LH-Frame harness)	368047-1	368050-1
CN-5	DEUTSCH	60	I/conn (Side harness RH-Frame harness)	DRB16-60SAE-L018	DRB14-60PAE-L018
CN-6	AMP	16	I/conn (Console harness RH-Frame harness)	368047-1	368050-1
CN-7	AMP	15	I/conn (Console harness RH-Frame harness)	2-85262-1	368301-1
CN-8	AMP	10	I/conn (Console harness RH-Frame harness)	S816-010002	174657-2
CN-9	DEUTSCH	12	I/conn (Frame harness- AAVM harness)	DT06-12SA-EP06	DT04-12PA-P021
CN-10	DEUTSCH	12	I/conn (Cab harness-Side harness RH)	DT06-12S-EP06	DT04-12PA-P021
CN-11	DEUTSCH	8	I/conn (Frame harness-Aircon harness)	DT06-8S-EP06	-
CN-12	DEUTSCH	2	I/conn (Frame harness-Boom wire harness)	DT06-2S-EP06	DT04-2P-E005
CN-14	DEUTSCH	2	I/conn (Frame harness-Swing parking harness)	DT06-2S-EP06	DT04-2S-E005
CN-15	AMP	10	I/conn (Frame harness-Breaker sol)	174655-2	174657-2
CN-16	AMP	6	Emergency engine start & speed control	S816-006002	S816-106002
CN-16B	AMP	6	Emergency engine start & speed control	S816-006002	-
CN-17	AMP	8	I/conn (Side harness RH-Wiper harness)	S816-008002	S816-108202
CN-20	DEUTSCH	2	Horn	DT06-2S-EP06	-
CN-21	AMP	6	Wiper motor	S810-006202	-
CN-22	KET	2	Washer tank	MG640605	-
CN-23	KET	2	Speaker-LH	MG610032	-
CN-24	KET	2	Speaker-RH	MG610070	-
CN-25	DEUTSCH	2	Horn	DT06-2S-EP06	-
CN-27A	KUM	16	Radio & USB player	PK145-16017	-
CN-27B	AMP	8	Radio & USB player	-	174984-2
CN-28	-	1	Aircon compressor	NMWP01F-B	-
CN-29	KET	2	Receiver dryer	MG640795	-
CN-36	-	-	Fuse & relay box	21Q7-10910	-
CN-45B+	RING-TERM	-	Starter motor B+	S820-410001	-
CN-45M	RING-TERM	-	Starter motor M	ST710246-2	-
CN-48	KET	1	Hour meter	2-520193-2	-
CN-51	TE	34	MCU	2-1473285-3	-
CN-52	TE	34	MCU	4-1437290-1	-
CN-53	TE	26	MCU	1473416-1	-
CN-54	TE	34	MCU	4-1437290-0	-
CN-56A	AMP	12	Cluster	-	174663-2
CN-56B	AMP	8	Cluster	-	174984-2

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-60	KET	2	Circuit breaker	-	MG620558
CN-61	DEUTSCH	4	Fuel filler pump	DT06-4S-EP06	DT04-4P
CN-66	DEUTSCH	2	Breaker (A2)	DT06-2S-EP06	-
CN-68	DEUTSCH	2	Safety solenoid (A1)	DT06-2S-EP06	-
CN-70	DEUTSCH	2	Travel high solenoid (A3)	DT06-2S-EP06	-
CN-74B+	RING-TERM	1	Alternator "B+" terminal	S820-108001	-
CN-74L	RING-TERM	1	Alternator "L" terminal	S820-105000	-
CN-75	AMP	1	Pump EPPR solenoid	S816-002002	-
CN-80	RING-TERM	-	Glow plug	S820-406001	-
CN-81	DEUTSCH	2	Travel buzzer solenoid	DT06-2S-EP06	DT04-2P-E005
CN-88	DEUTSCH	2	Power max solenoid (A2)	DT06-2S-EP06	-
CN-93	DELPHI	-	ECM	13964572	-
CN-95	KET	2	Circuit breaker	-	MG620558
CN-96	DELPHI	4	l/conn (Frame harness - Fuel warmer harness)	15300027	2-967402-2
CN-100	KET	1	ECM ground	MG640944-5	-
CN-113	KET	2	Buzzer	MG651205-5	-
CN-125	Econoseal J	4	RMS connector	S816-004002	S816-104002
CN-125A	DEUTSCH	12	RMS	DT06-12S-P021	DT04-12PA-P021
CN-125B	DEUTSCH	8	RMS	DT06-8S	DT04-8P
CN-126	TE/AMP	10	Service tool	174655-2	S816-110002
CN-126A	DEUTSCH	4	RMS Service tool	DT06-4S	DT06-4P
CN-133	DEUTSCH	2	Boom priority solenoid (A5)	DT06-2S-EP06	-
CN-135	DEUTSCH	2	Arm regeneration solenoid (A4)	DT06-2S-EP06	-
CN-136	DEUTSCH	2	Swing priority solenoid (A1)	DT06-2S-EP06	-
CN-138	FASTEN	3	DC/DC Converter	S810-003202	-
CN-139	FASTEN	2	12V socket	172434-2	-
CN-140	DEUTSCH	2	Quick clamp solenoid	DT06-2S-EP06	DT04-2P-E005
CN-141	AMP	13	Wiper motor controller	172498-1	-
CN-149	DEUTSCH	2	Attach safety sol	DT06-2S-EP06	-
CN-150	DEUTSCH	2	2 way selection sol	DT06-2S-EP06	-
CN-156	DEUTSCH	2	Air seat	DT06-2S	DT04-2P
CN-157	AMP	1	Antena power	S822-014002	-
CN-173	DEUTSCH	3	Resistor	DT06-3S-EP06	DT04-3P-EP10
CN-174	DEUTSCH	3	Resistor	DT06-3S-EP06	DT04-3P-EP10
CN-237	DEUTSCH	2	Attachment conflux (A3)	DT06-2S-EP06	-
CN-242	DEUTSCH	2	P1 EPPR solenoid (A1)	DT06-2S-EP06	-
CN-246	DEUTSCH	3	Proportional valve-RH	DT06-3S	DT04-3P
CN-246A	DEUTSCH	4	Preheater harness-timer	DT06-4S-EP06	-
CN-246B	DEUTSCH	4	Preheater harness-timer	-	DT04-4P-EP05

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-247	DEUTSCH	3	Proportional valve-LH	DT06-3S	DT04-3P
CN-249	DEUTSCH	6	Rear view camera	DT06-6S-EP06	DT04-6P-E005
CN-258	KET	1	Air compressor (power)	MG640944-5	-
CN-260	MTA	2	Preheater harness-fuse 15A	03 01305	-
CN-260	AMP	2	Siren speaker	174352-4	S816-102002
CN-261	MTA	2	Preheater harness-fuse 5A	03 01305	-
CN-261	KET	4	Siren amp	MG610047	-
CN-262	DEUTSCH	2	I/conn (Frame harness - S/travel harness)	DT06-2S-EP06	DT04-2P-E005
CN-262A	DEUTSCH	2	Straight travel solenoid 1	DT06-2S-EP06	-
CN-262B	DEUTSCH	2	Straight travel solenoid 2	DT06-2S-EP06	-
CN-263	DEUTSCH	2	Air compressor (relay)	DT06-2S-EP06	DT04-2P-E005
CN-263A	DEUTSCH	2	2 PCS & dozer solenoid	DT06-2S-EP06	DT04-2P-E005
CN-263B	DEUTSCH	2	2 PCS & dozer solenoid	DT06-2S-EP06	DT04-2P-E005
CN-265	FCI	8	Controller	22.1000.30.10	-
CN-267	MOLEX	10	Easy start timer	15-97-5101	-
CN-269	TE	2	Dosing pump	963040-3	-
CN-305	DEUTSCH	12	Proportional-connector 1	DTM06-12SA	-
CN-306	DEUTSCH	12	Proportional-connector 2	DTM06-12SB	-
CN-307	DEUTSCH	3	Proportional-service tool	DT06-3S-EP06	DT06-3P-E005
CN-308	DEUTSCH	2	Proportional-rotate L (A)	DT06-2S-EP06	DT04-2P
CN-308A	DEUTSCH	2	Proportional-rotate R (B)	DT06-2S-EP06	DT04-2P
CN-309	DEUTSCH	2	Proportional-EPPR valve-A2	DT06-2S-EP06	-
CN-310	DEUTSCH	2	Proportional-EPPR valve-A1	DT06-2S-EP06	-
CN-363	AMP	12	Jog dial module	174045-2	-
CN-365	DEUTSCH	2	Attach EPPR valve-1	DT06-2S-EP06	-
CN-365A	DEUTSCH	3	Attach relief EPPR	DT06-3S-EP06	DT04-3P
CN-366	DEUTSCH	2	Attach EPPR valve-2	DT06-2S-EP06	-
CN-370	DEUTSCH	2	Swing fine control solenoid	DT06-2S-EP06	DT04-2P-E005
CN-376	AMP	34	Membrane controller	4-1437290-1	-
CN-378	DEUTSCH	2	P2 EPPR solenoid (A2)	DT06-2S-EP06	-
CN-379	-	12	SCR Supply module	2-1703639-1	-
CN-380	DEUTSCH	4	DEF tank level sensor	DT06-4S-EP06	-
CN-381	DEUTSCH	2	DEF line heater 1	DT06-2S-EP06	-
CN-382	DEUTSCH	2	DEF line heater 2	DT06-2S-EP06	-
CN-383	DEUTSCH	2	DEF line heater 3	DT06-2S-EP06	-
CN-384	-	2	Coolant valve	1-967325-3	-
CN-385	-	7	Fan clutch	965570	-
CN-401	TYCO	34	AAVM controller	4-1437290-0	-
CN-402	DEUTSCH	6	Front view camera	DT06-6S-P021	DT04-6P-P021









Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-403	DEUTSCH	6	Rear view camera	DT06-6S-EP06	DT04-6P-E005
CN-404	DEUTSCH	6	LH view camera	DT06-6S-EP06	DT04-6P-E005
CN-405	DEUTSCH	6	RH view camera	DT06-6S-EP06	DT04-6P-E005
CN-406	DEUTSCH	4	Service tool	DT06-4S-EP05	DT04-4P-E005
CN-419	DEUTSCH	2	Swing parking-A1	DT06-2S-EP06	-
CN-420	DEUTSCH	2	Swing parking-A2	DT06-2S-EP06	-
CN-421	DEUTSCH	2	Swing parking-A3	DT06-2S-EP06	-
CN-427	MOLEX	12	Reader-RMS	5557-12R	5559-12P
CN-430	AMP	10	I/conn (Frame harness - DEF harness)	174655-2	174657-2
CN-447	DEUTSCH	2	Travel straight (A2)	DT06-2S-EP06	-
AT1A	TYCO	4	DOC NOx sensor (inlet)	2-1418390-1	-
AT2A	TYCO	4	SCR NOx sensor (outlet)	1-1418390-1	-
AT7A	TYCO	4	DOC thermister	1-1418390-1	-
AT8A	TYCO	4	SCR thermister	2-1418390-1	-
AT11A	FRAMATOME	4	DEF dif pressure sensor	F715600	-
AT32A	BOSCH	2	DEF dosing valve	1-928405-522	-
CC1D	FCI	14	Cross over connector	54201412	-
CC8D	DEUTSCH	4	Engine sensor	DT06-4S-EP06	-
C12	FCI	4	TBAP	-	54200415
· Relay					
CR-1	RING-TERM	-	Battery relay	ST710289-2	-
CR-2	-	5	Horn relay	-	-
CR-4	-	5	Working lamp relay	-	-
CR-5	-	5	Anti restart relay	-	-
CR-7	-	5	Aircon compressor relay	-	-
CR-9	-	5	Cabin lamp relay	-	-
CR-13	-	5	Head lamp relay	-	-
CR-23B+	RING TERM	-	Start relay B+	ST710384-2	-
CR-23-1	RING TERM	-	Start relay G	ST712089-2	-
CR-23M	RING TERM	-	Start relay M	ST710384-2	-
CR-23-2	RING TERM	-	Start relay S	ST712089-2	-
CR-24B+	RING TERM	-	Preheat relay B+	S820-406001	-
CR-24G	RING TERM	-	Preheat glow	S820-406001	-
CR-24S	-	1	Preheat relay	S822-014001	-
CR-35	-	5	Power relay	-	-
CR-36	-	5	Preheat relay	-	-
CR-39	-	5	Starter lock out relay	-	-
CR-46	-	5	Fuel warmer relay	-	-
CR-48	-	5	Safety relay	-	-







Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CR-50	-	5	NOx sensor relay	-	-
CR-51	-	5	DEF module relay	-	-
CR-52	-	5	Line heater relay	-	-
CR-85	-	5	Beacon lamp relay	-	-
· Switch					
CS-1	SHUR	1	Door switch	S822-014002	S822-114002
CS-2A	WP	6	Start switch	S814-006100	-
CS-2B	DEUTSCH	3	Start button	DT06-3S-EP06	DT04-3P-E005
CS-2C	KET	3	BKCU	MG651032	-
CS-2D	KET	3	Button key	-	MG641035
CS-4	DEUTSCH	3	Safety switch	DT06-3S	-
CS-5	DEUTSCH	2	Horn switch	-	DT04-2P
CS-19	DEUTSCH	2	One touch decel switch	-	DT04-2P
CS-26	DEUTSCH	2	Breaker switch	DT06-2S	-
CS-26A	AMP	2	Breaker pedal switch	S816-002002	S816-102002
CS-29	DEUTSCH	2	Power max switch	DT06-2S	-
CS-33	AMP	6	Emergency engine stop switch	S816-006002	S816-106002
CS-52	CARLING	10	Adjust & dozer switch	VC2-01	-
CS-53	AMP	1	Wiper cut switch	S822-014002	-
CS-61	AMP	2	Floating switch	174352-2	-
CS-67	CARLING	10	Quick clamp switch	VC2-01	-
CS-73	CARLING	10	Swing lock switch	VC2-01	-
CS-73A	CARLING	10	Fine swing switch	VC2-01	-
CS-74	DEUTSCH	2	Master switch	DT06-2S-EP06	-
CS-74A	AMP	2	Master switch	S813-030201	S813-130201
CS-74A	KET	2	From master SW power	MG610557-5	MG620558-5
CS-74B	DEUTSCH	2	Master switch	DT06-2S-EP06	-
CS-79	CARLING	10	Lower wiper switch	VC2-01	-
CS-99	CARLING	10	Air compressor switch	VC2-01	-
CS-100	CARLING	10	Exhaust system cleaning switch	VC2-01	-
CS-107	CARLING	10	Travel straight switch	VC2-01	-
CS-108	CARLING	10	Auto grease switch	VC2-01	-
CS-111	CARLING	10	Boom floating switch	VC2-01	-
CS-250	DEUTSCH	2	Seat switch	DT06-2S	-
· Light					
CL-1	KET	3	Room lamp	MG651032	-
CL-2	AMP	1	Cigar lighter	S822-014002	S822-114002
CL-3	DEUTSCH	2	Head lamp-LH	DT06-2S-EP06	-
CL-4	DEUTSCH	2	Head lamp-RH	DT06-2S-EP06	-

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CL-5	DEUTSCH	2	Work lamp-LH	DT06-2S-EP06	-
CL-6	DEUTSCH	2	Work lamp-RH	DT06-2S-EP06	-
CL-7	DEUTSCH	2	Beacon lamp	DT06-2S-EP06	DT04-2P
CL-8	DEUTSCH	2	Cab lighter-LH	DT06-2S-EP06	DT04-2P
CL-9	DEUTSCH	2	Cab lighter-RH	DT06-2S-EP06	DT04-2P
CL-10	DEUTSCH	2	Cab lighter-RH	DT06-2S-EP06	DT04-2P
CL-24	DEUTSCH	2	Head lamp - rear	DT06-2S-EP06	DT04-2P-E005
CL-40	DEUTSCH	2	DEF/AdBlue® purging lamp	DT06-2S-EP06	DT04-2P
· Sensor, sendor					
CD-1	AMP	2	Hydraulic oil temp sender	85202-1	-
CD-2	DEUTSCH	2	Fuel sender	DT06-2S-EP06	-
CD-7	DEUTSCH	3	Work pilot pressure sw	DT06-3S-EP06	-
CD-10	SUMITOMO	4	TBAP sensor	6908-0144	-
CD-10A	AMP	2	Air cleaner switch	85202-1	-
CD-16	DELPHI	3	Water level sensor	1211 0293	-
CD-24	DEUTSCH	3	Swing pilot pressure sw	DT06-3S-EP06	-
CD-31	DEUTSCH	3	Overload pressure sensor	DT06-3S-EP06	DT04-3P-E005
CD-32	DEUTSCH	3	Boom up pilot pressure sw	DT06-3S-EP06	-
CD-42	DEUTSCH	3	A1 pump delivery pressure sw	DT06-3S-EP06	-
CD-43	DEUTSCH	3	A2 pump delivery pressure sw	DT06-3S-EP06	-
CD-44	DEUTSCH	3	A3 pump delivery pressure sw	DT06-3S-EP06	-
CD-45	DEUTSCH	2	WIF sensor	DT06-2S-EP06	-
CD-50	KET	3	Dozer pilot pressure sw	MG640795	-
CD-69	DEUTSCH	3	Attach pressure sensor	DT06-3S-EP06	-
CD-70	DEUTSCH	3	N1 pressure sensor	DT06-3S-EP06	-
CD-71	DEUTSCH	3	N2 pressure sensor	DT06-3S-EP06	-
CD-85	DEUTSCH	3	Boom down pilot pressure sw	DT06-3S-EP06	-
CD-86	DEUTSCH	3	Arm out pilot pressure sw	DT06-3S-EP06	-
CD-90	DEUTSCH	3	Arm in pilot pressure sw	DT06-3S-EP06	-
CD-91	DEUTSCH	3	Bucket in pilot pressure sw	DT06-3S-EP06	-
CD-104	DEUTSCH	3	RH travel pilot pressure sw	DT06-3S-EP06	-
CD-105	DEUTSCH	3	LH travel pilot pressure sw	DT06-3S-EP06	-
CD-129	DEUTSCH	3	Bucket out pilot pressure sw	DT06-3S-EP06	-









2. CONNECTION TABLE FOR CONNECTORS

1) PA TYPE CONNECTOR

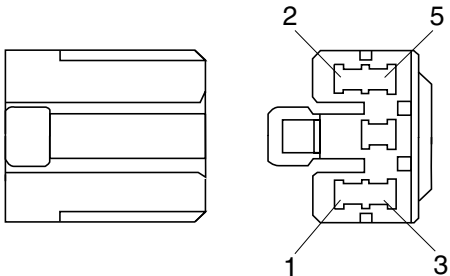
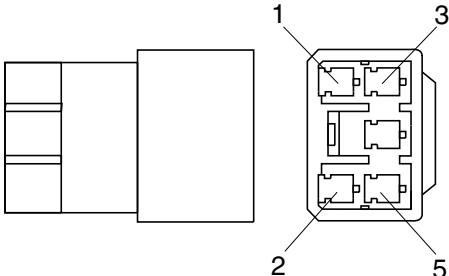
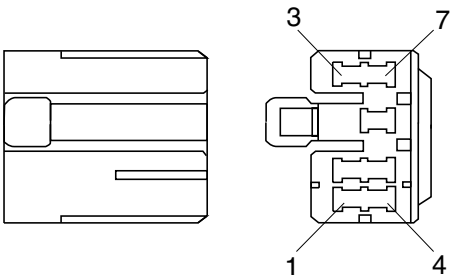
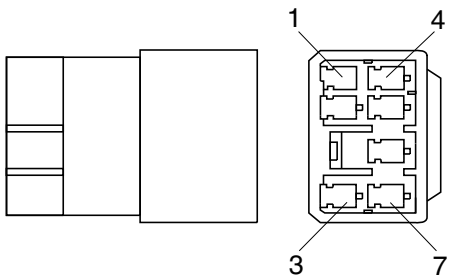
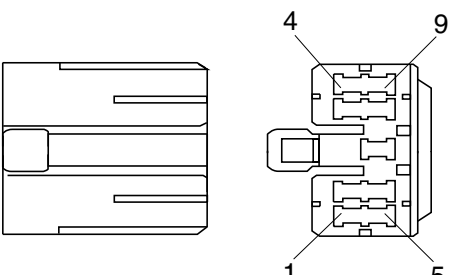
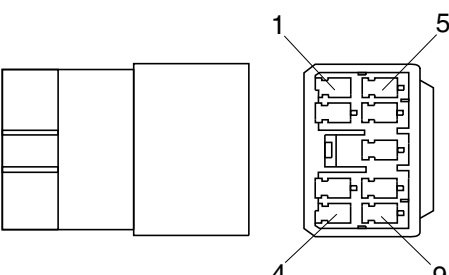
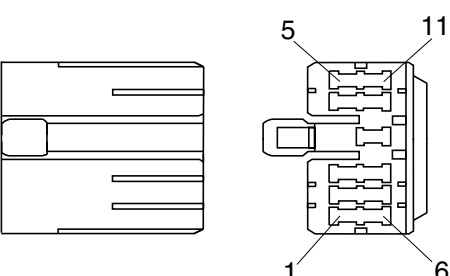
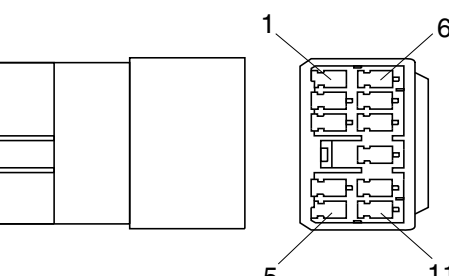
No. of pin	Receptacle connector (female)	Plug connector (male)
5	 <p>S811-005002</p>	 <p>S811-105002</p>
7	 <p>S811-007002</p>	 <p>S811-107002</p>
9	 <p>S811-009002</p>	 <p>3S811-109002</p>
11	 <p>S811-011002</p>	 <p>S811-111002</p>



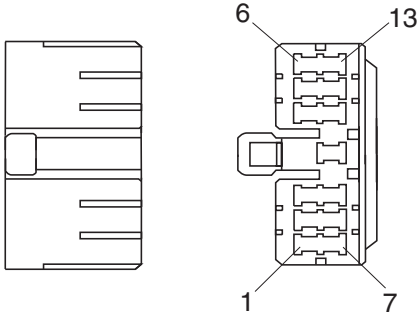
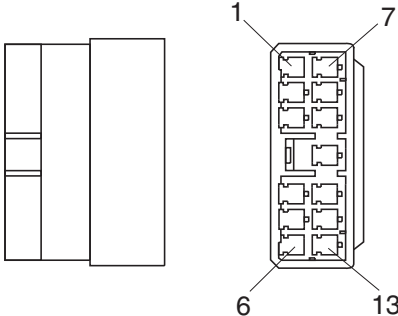
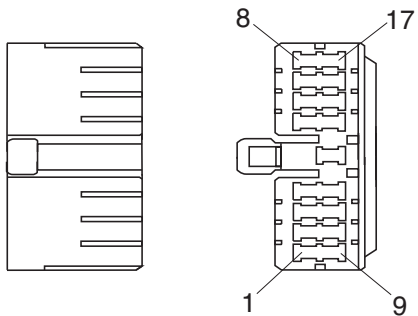
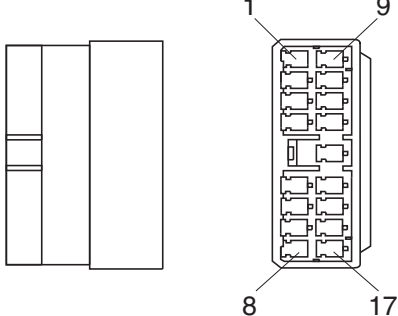
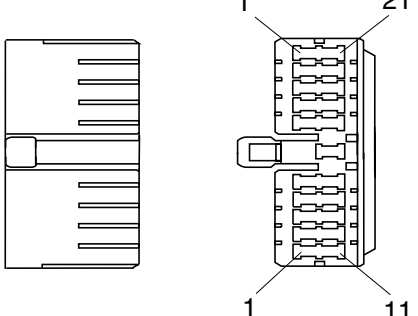
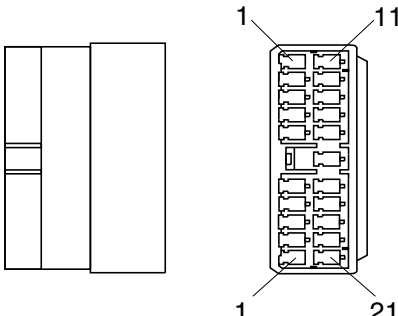
No. of pin	Receptacle connector (female)	Plug connector (male)
13	 <p>S811-013002</p>	 <p>S811-113002</p>
17	 <p>S811-017002</p>	 <p>S811-117002</p>
21	 <p>S811-021002</p>	 <p>S811-121002</p>

2) J TYPE CONNECTOR

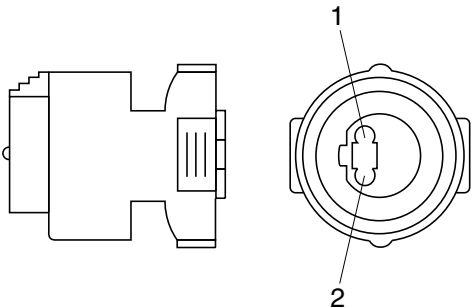
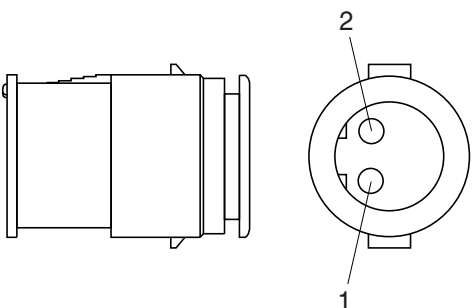
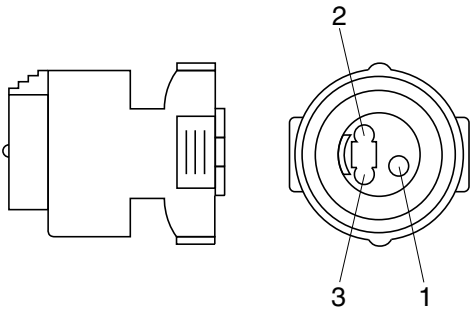
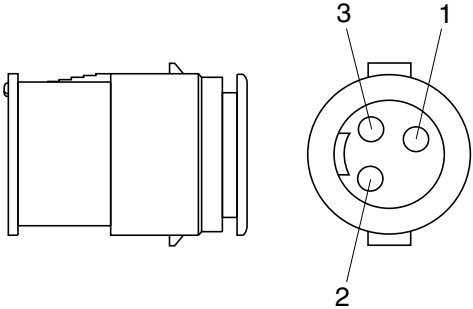
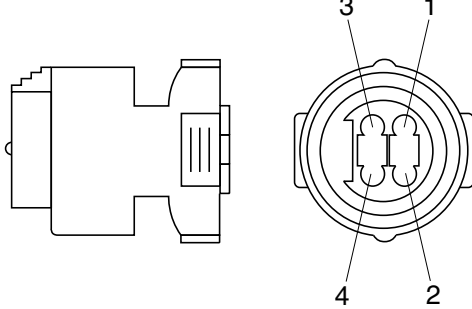
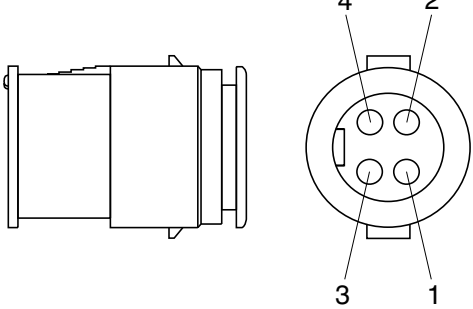
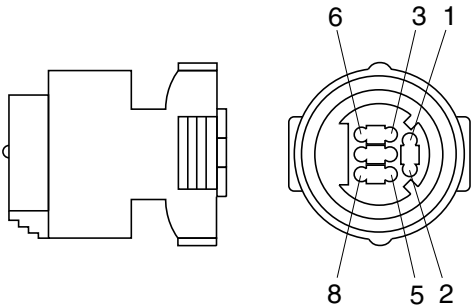
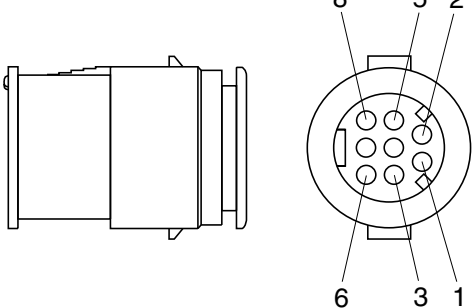
No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p>S816-002001</p>	 <p>S816-102001</p>
3	 <p>S816-003001</p>	 <p>S816-103001</p>
4	 <p>S816-004001</p>	 <p>S816-104001</p>
8	 <p>S816-008001</p>	 <p>S816-108001</p>





3) SWP TYPE CONNECTOR

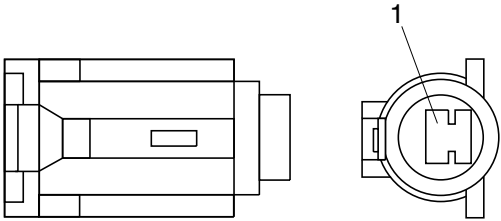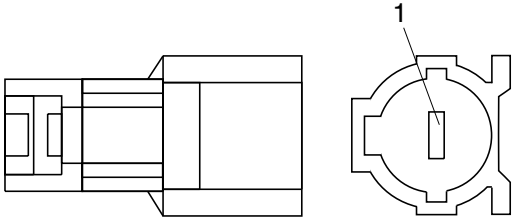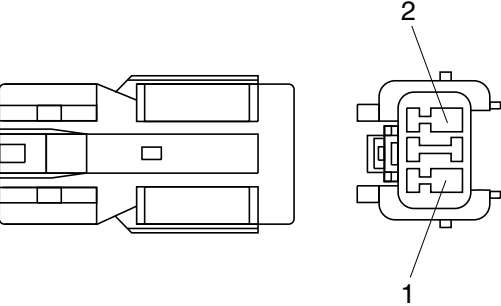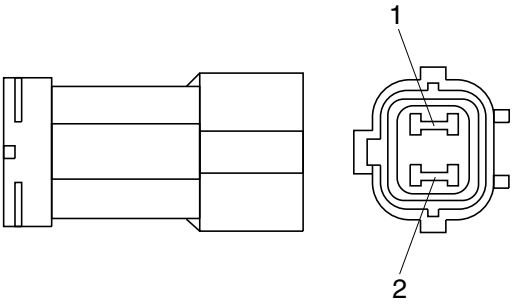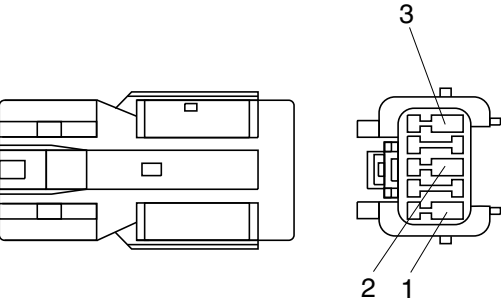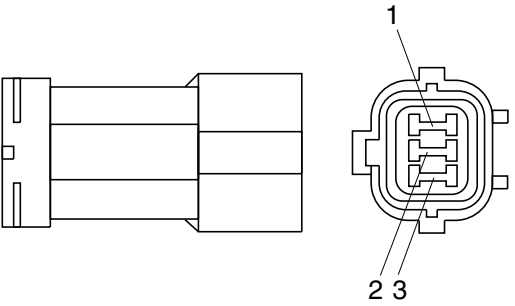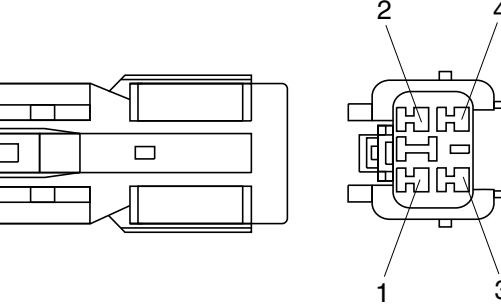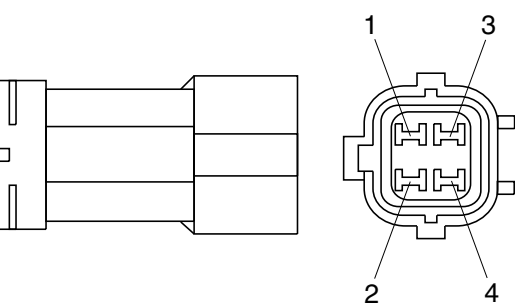No. of pin	Receptacle connector (female)	Plug connector (male)
1	 <p>S814-001000</p>	 <p>S814-101000</p>
2	 <p>S814-002000</p>	 <p>S814-102000</p>
3	 <p>S814-003000</p>	 <p>S814-103000</p>
4	 <p>S814-004000</p>	 <p>S814-104000</p>

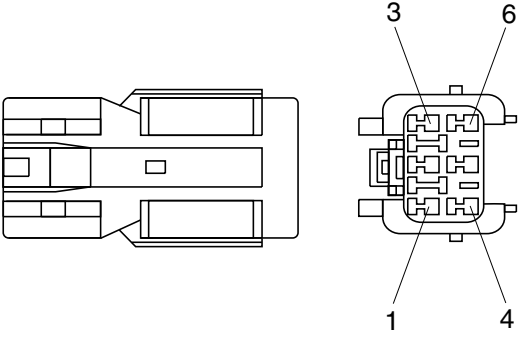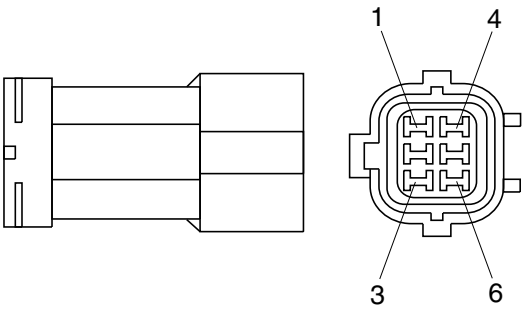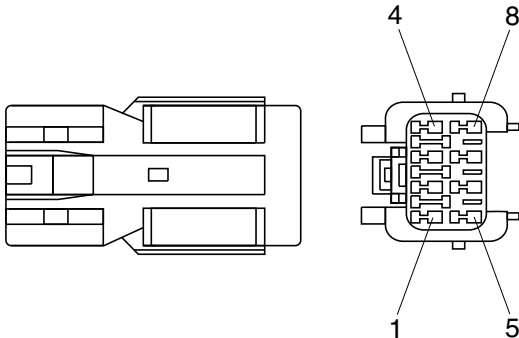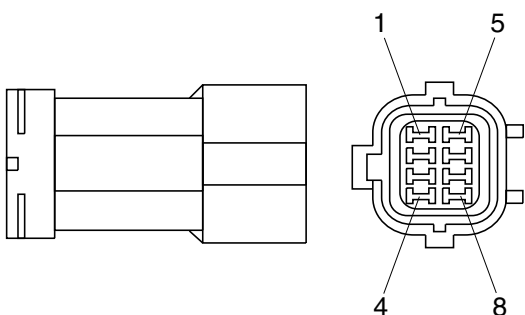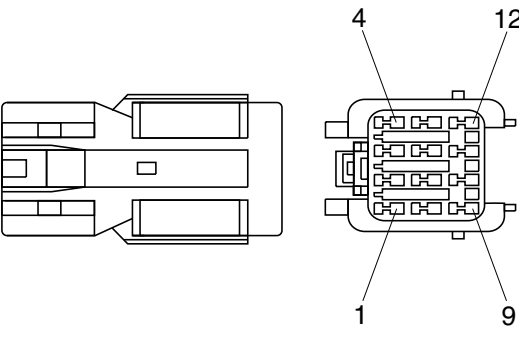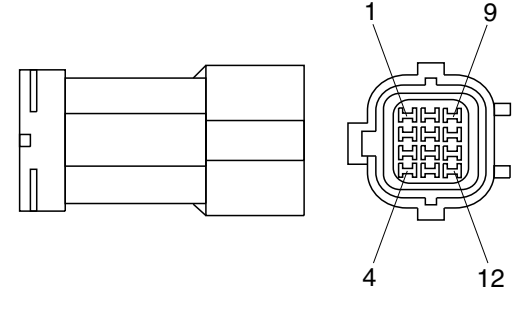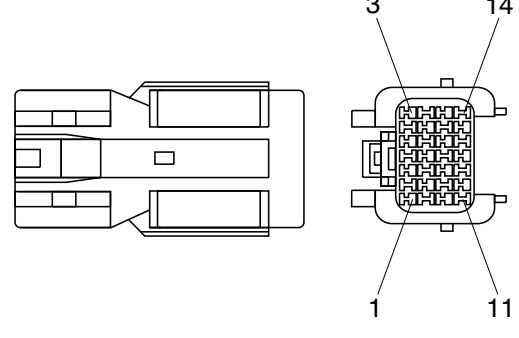
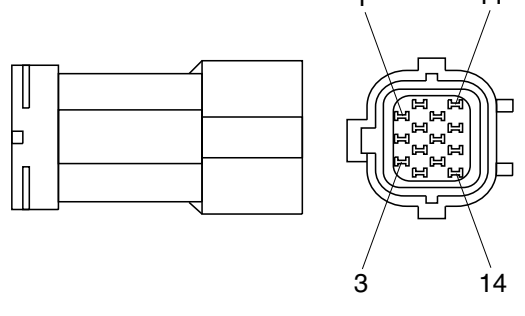
No. of pin	Receptacle connector (female)	Plug connector (male)
6	 <p>S814-006000</p>	 <p>S814-106000</p>
8	 <p>S814-008000</p>	 <p>S814-108000</p>
12	 <p>S814-012000</p>	 <p>S814-112000</p>
14	 <p>S814-014000</p>	 <p>S814-114000</p>

4) CN TYPE CONNECTOR

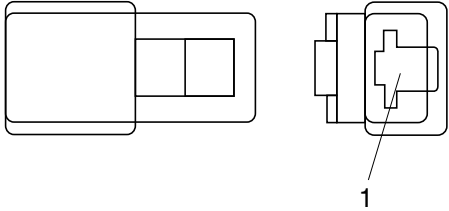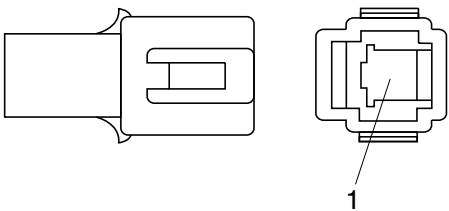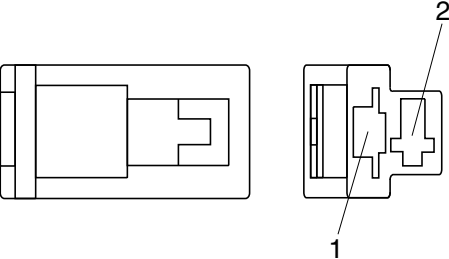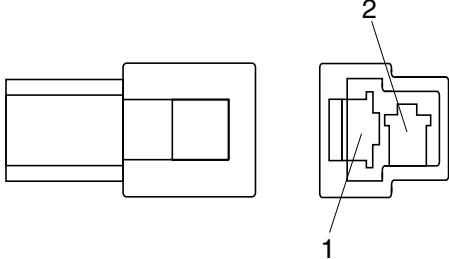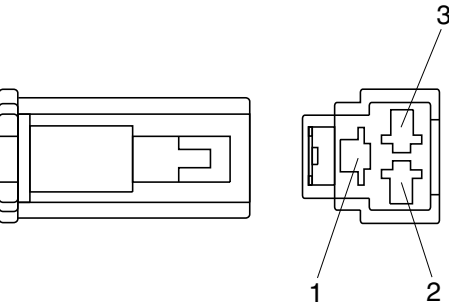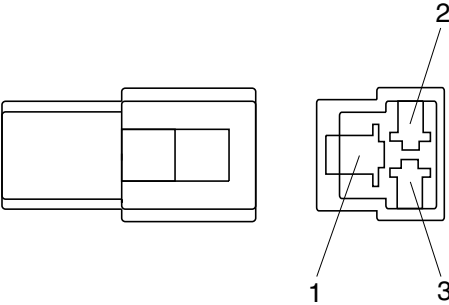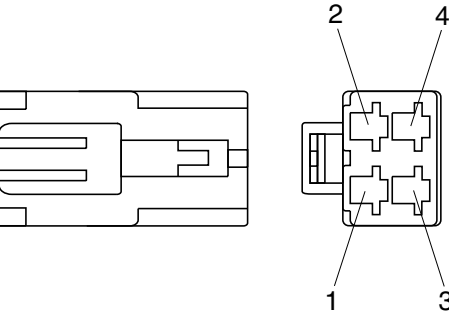
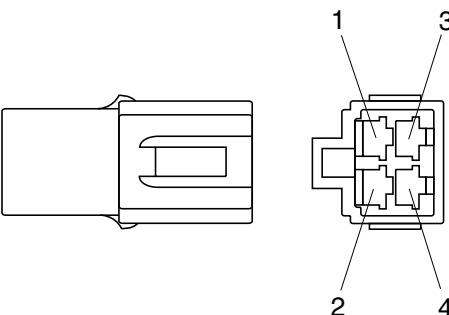
No. of pin	Receptacle connector (female)	Plug connector (male)
1	 <p>S810-001202</p>	 <p>S810-101202</p>
2	 <p>S810-002202</p>	 <p>S810-102202</p>
3	 <p>S810-003202</p>	 <p>S810-103202</p>
4	 <p>S810-004202</p>	 <p>S810-104202</p>

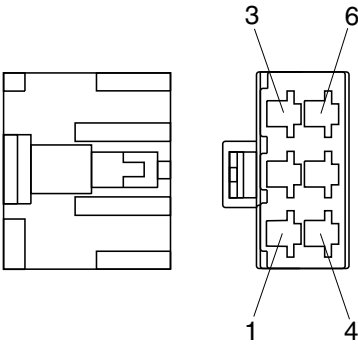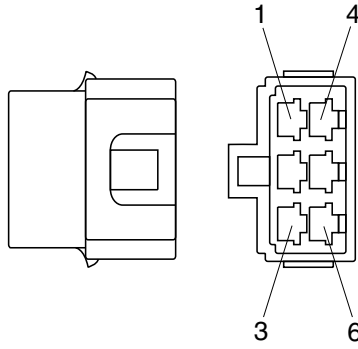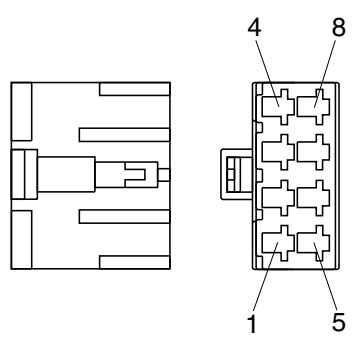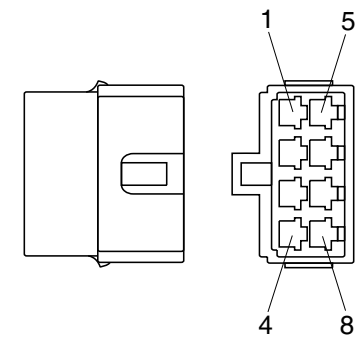No. of pin	Receptacle connector (female)	Plug connector (male)
6	 <p data-bbox="686 638 837 672">S810-006202</p>	 <p data-bbox="1244 638 1396 672">S810-106202</p>
8	 <p data-bbox="686 1041 837 1075">S810-008202</p>	 <p data-bbox="1244 1041 1396 1075">S810-108202</p>


5) 375 FASTEN TYPE CONNECTOR

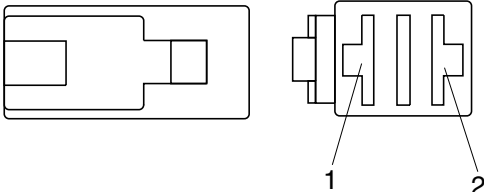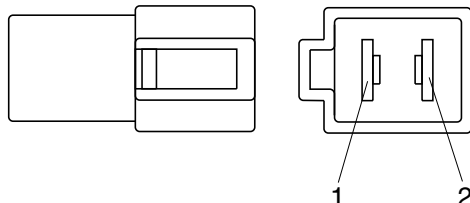No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p>S810-002402</p>	 <p>S810-102402</p>


6) AMP ECONOSEAL CONNECTOR

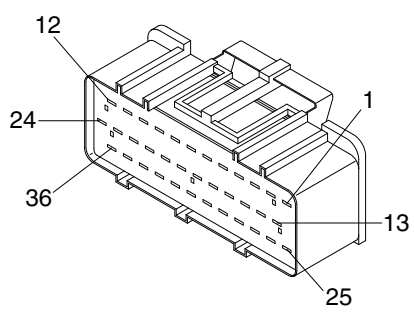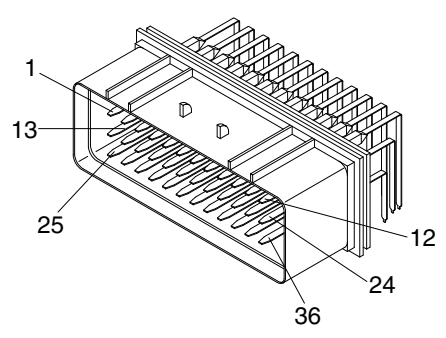No. of pin	Receptacle connector (female)	Plug connector (male)
36	 <p>344111-1</p>	 <p>344108-1</p>


7) AMP TIMER CONNECTOR

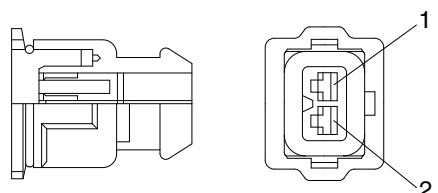No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p>85202-1</p>	



8) AMP 040 MULTILOCK CONNECTOR

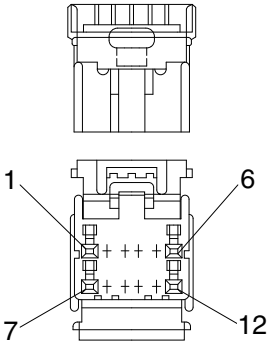No. of pin	Receptacle connector (female)	Plug connector (male)
12	 <p>174045-2</p>	


9) AMP 070 MULTILOCK CONNECTOR

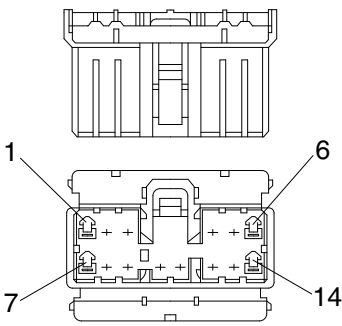No. of pin	Receptacle connector (female)	Plug connector (male)
14	 <p>173852</p>	



10) AMP FASTIN - FASTON CONNECTOR

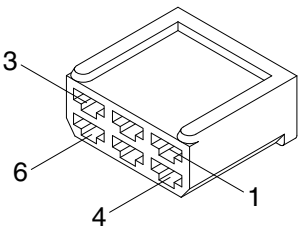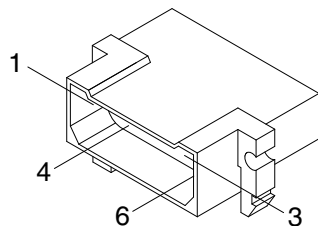No. of pin	Receptacle connector (female)	Plug connector (male)
6	 <p>925276-0</p>	 <p>480003-9</p>


11) KET 090 CONNECTOR

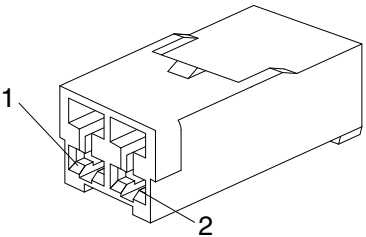No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p>MG610070</p>	

12) KET 090 WP CONNECTORS

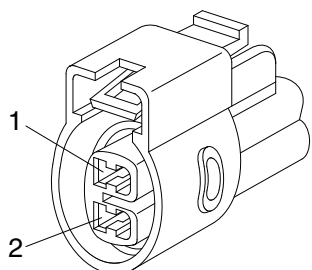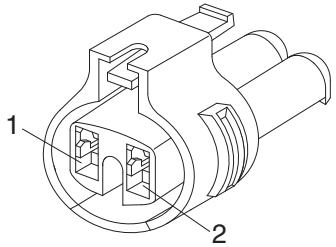
No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p>MG640605</p>	
2	 <p>MG640795</p>	

13) KET SDL CONNECTOR

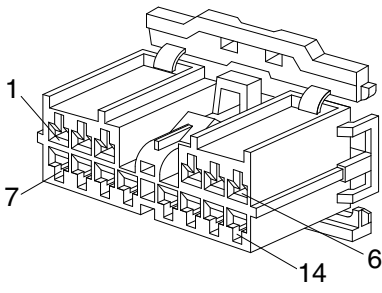No. of pin	Receptacle connector (female)	Plug connector (male)
14	 <p>MG610406</p>	

14) DEUTSCH DT CONNECTORS

DT 06 - 3S - ★★☆☆

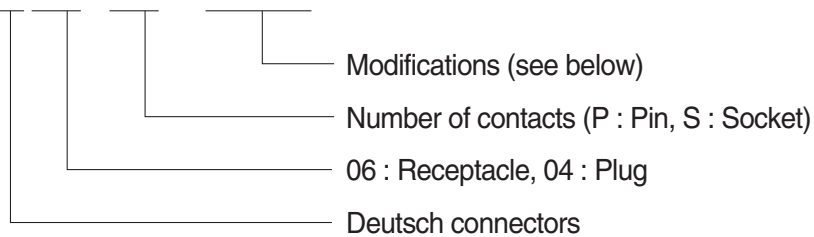

※ Modification

E003 : Standard end cap - gray

E004 : Color of connector to be black







E005 : Combination - E004 & E003

EP04 : End cap


EP06 : Combination P012 & EP04

P012 : Front seal enhancement - connectors color to black for 2, 3, 4 & 6pin


No. of pin	Receptacle connector (female)	Plug connector (male)
2	<p>DT06-2S</p>	<p>DT04-2P</p>
3	<p>DT06-3S</p>	<p>DT04-3P</p>
4	<p>DT06-4S</p>	<p>DT04-4P</p>

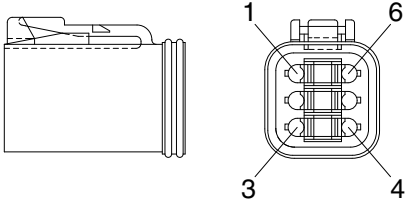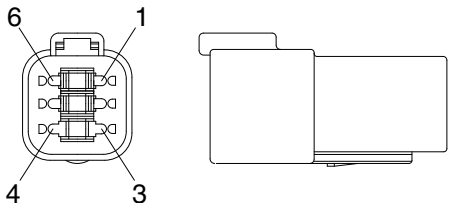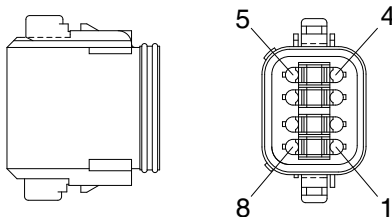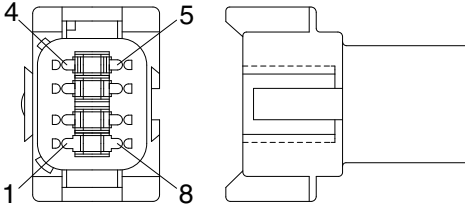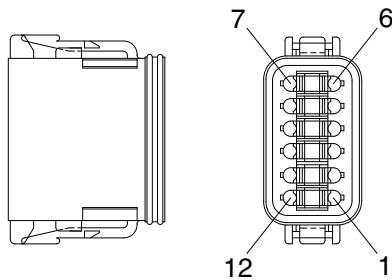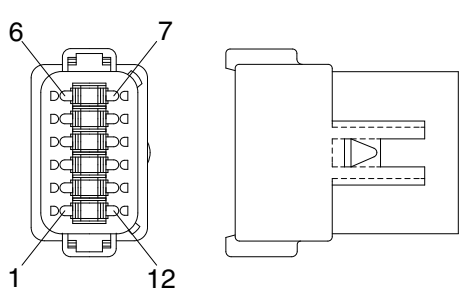No. of pin	Receptacle connector (female)	Plug connector (male)
6	 <p>DT06-6S</p>	 <p>DT04-6P</p>
8	 <p>DT06-8S</p>	 <p>DT04-8P</p>
12	 <p>DT06-12S</p>	 <p>DT04-12P</p>


15) MOLEX 2CKTS CONNECTOR

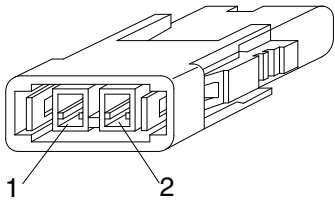No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p>35215-0200</p>	









16) ITT SWF CONNECTOR








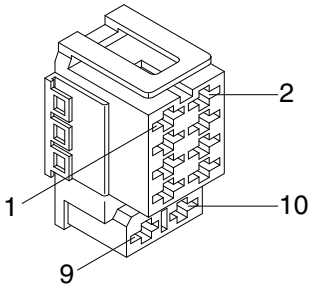
No. of pin	Receptacle connector (female)	Plug connector (male)
10	 <p>SWF593757</p>	



17) MWP NMWP CONNECTOR

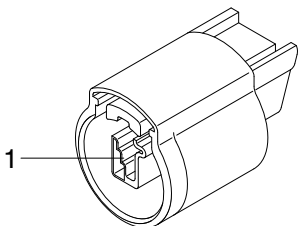No. of pin	Receptacle connector (female)	Plug connector (male)
1	 <p>NMWP01F-B</p>	


18) ECONOSEAL J TYPE CONNECTORS

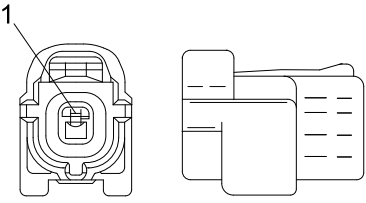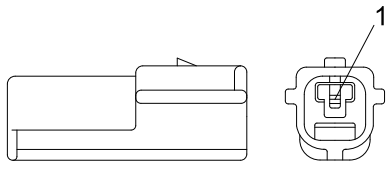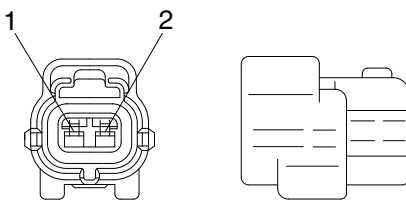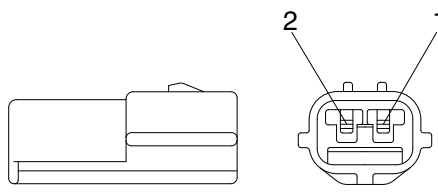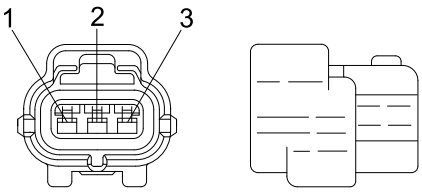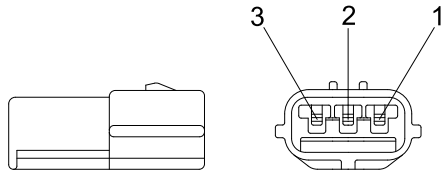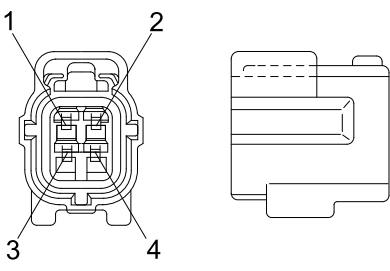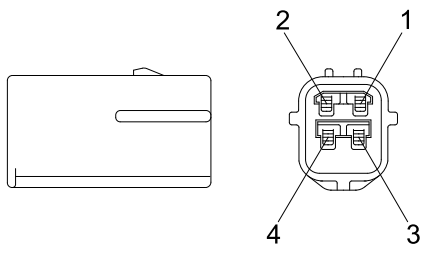No. of pin	Receptacle connector (female)	Plug connector (male)
1	 <p>S816-001002</p>	 <p>S816-101002</p>
2	 <p>S816-002002</p>	 <p>S816-102002</p>
3	 <p>S816-003002</p>	 <p>S816-103002</p>
4	 <p>S816-004002</p>	 <p>S816-104002</p>

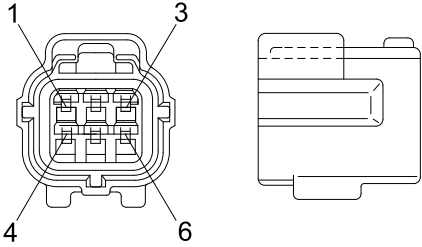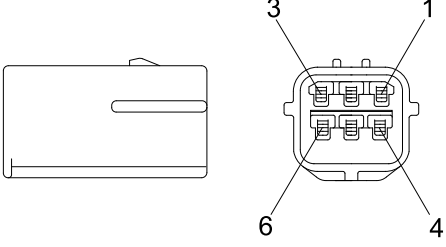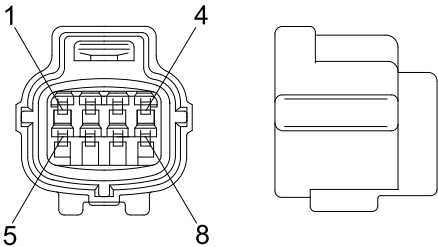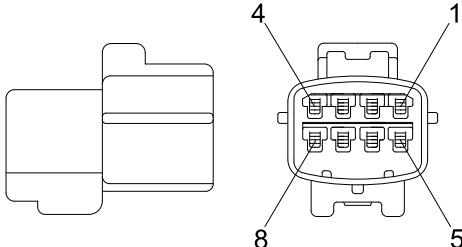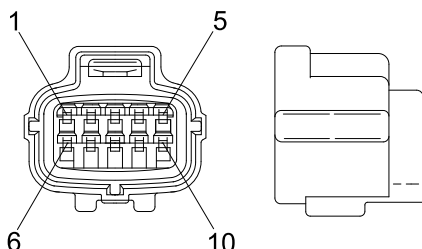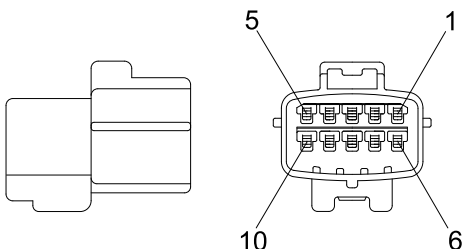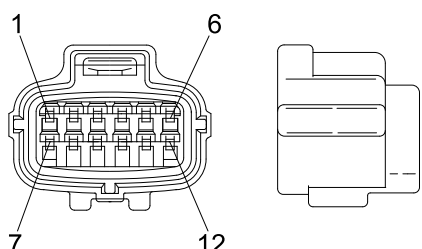
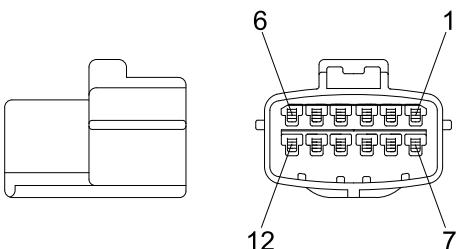
No. of pin	Receptacle connector (female)	Plug connector (male)
6	 <p>S816-006002</p>	 <p>S816-106002</p>
8	 <p>S816-008002</p>	 <p>S816-108002</p>
10	 <p>S816-010002</p>	 <p>S816-110002</p>
12	 <p>S816-012002</p>	 <p>S816-112002</p>

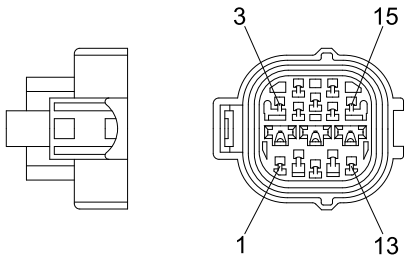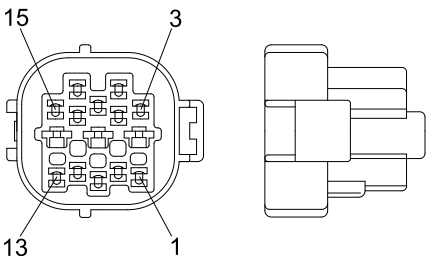No. of pin	Receptacle connector (female)	Plug connector (male)
15	 <p>368301-1</p>	 <p>2-85262-1</p>


19) METRI-PACK TYPE CONNECTOR

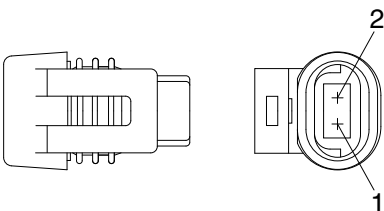No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p>12040753</p>	


20) DEUTSCH HD30 CONNECTOR

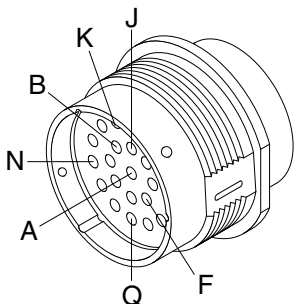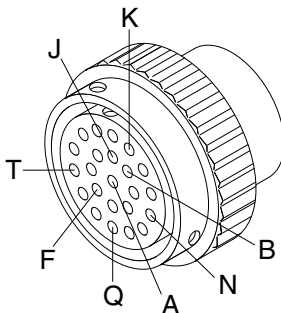No. of pin	Receptacle connector (female)	Plug connector (male)
23	 <p>HD36-24-23SN</p>	 <p>HD34-24-23PN</p>


21) DEUTSCH SERVICE TOOL CONNECTOR

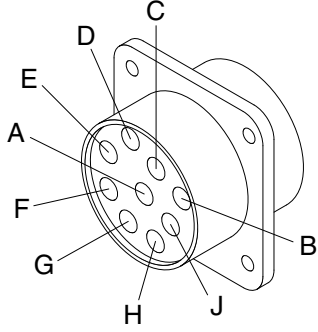No. of pin	Receptacle connector (Female)	Plug connector (Male)
9	 <p>HD10-9-96P</p>	


22) AMP FUEL WARMER CONNECTOR

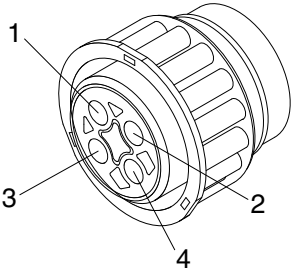No. of pin	Receptacle connector (Female)	Plug connector (Male)
4	 <p>2-967325-3</p>	

23) DEUTSCH ENGINE ECM CONNECTOR

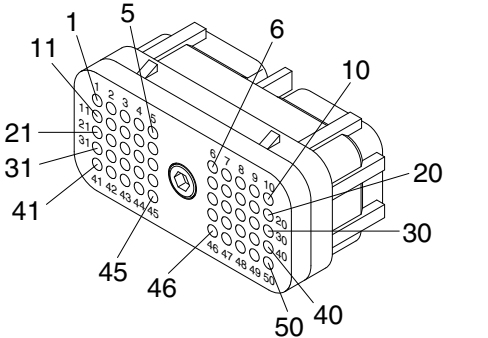No. of pin	Receptacle connector (Female)	Plug connector (Male)
50	 <p>DRC26-50S-04</p>	

24) DEUTSCH INTERMEDIATE CONNECTOR

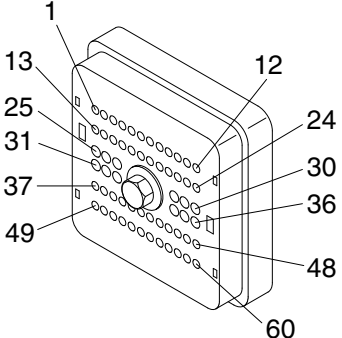No. of pin	Receptacle connector (Female)	Plug connector (Male)
60	 <p>DRB16-60SAE-L018</p>	

25) TE MCU CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
26	<p>1473416-1</p>	
34	<p>2-1437285-3 4-1437290-0</p>	
34	<p>4-1437290-1</p>	


SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline	5-1
Group 2 Mode Selection System	5-3
Group 3 Automatic Deceleration System	5-6
Group 4 Power Boost System	5-7
Group 5 Travel Speed Control System	5-8
Group 6 Automatic Warming Up System	5-9
Group 7 Engine Overheat Prevention System	5-10
Group 8 Variable Power Control System	5-11
Group 9 Attachment Flow Control System	5-12
Group 10 Intelligent Power Control System	5-13
Group 11 Anti-Restart System	5-15
Group 12 Self-Diagnostic System	5-16
Group 13 Engine Control System	5-61
Group 14 EPPR Valve	5-62
Group 15 Monitoring System	5-67
Group 16 Fuel Warmer System	5-109
Group 17 1 or 2-Way Optional Piping Pressure Removal System	5-110


GROUP 1 OUTLINE

The ADVANCED CAPO (Computer Aided Power Optimization) system controls engine and pump mutual power at an optimum and less fuel consuming state for the selected work by mode selection, auto-deceleration, power boost function, etc. It monitors machine conditions, for instance, engine speed, coolant temperature, hydraulic oil temperature, and hydraulic oil pressure, etc.

It consists of a MCU, a cluster, an ECM, EPPR valves, and other components. The MCU and the cluster protect themselves from over-current and high voltage input, and diagnose malfunctions caused by short or open circuit in electric system, and display error codes on the cluster.

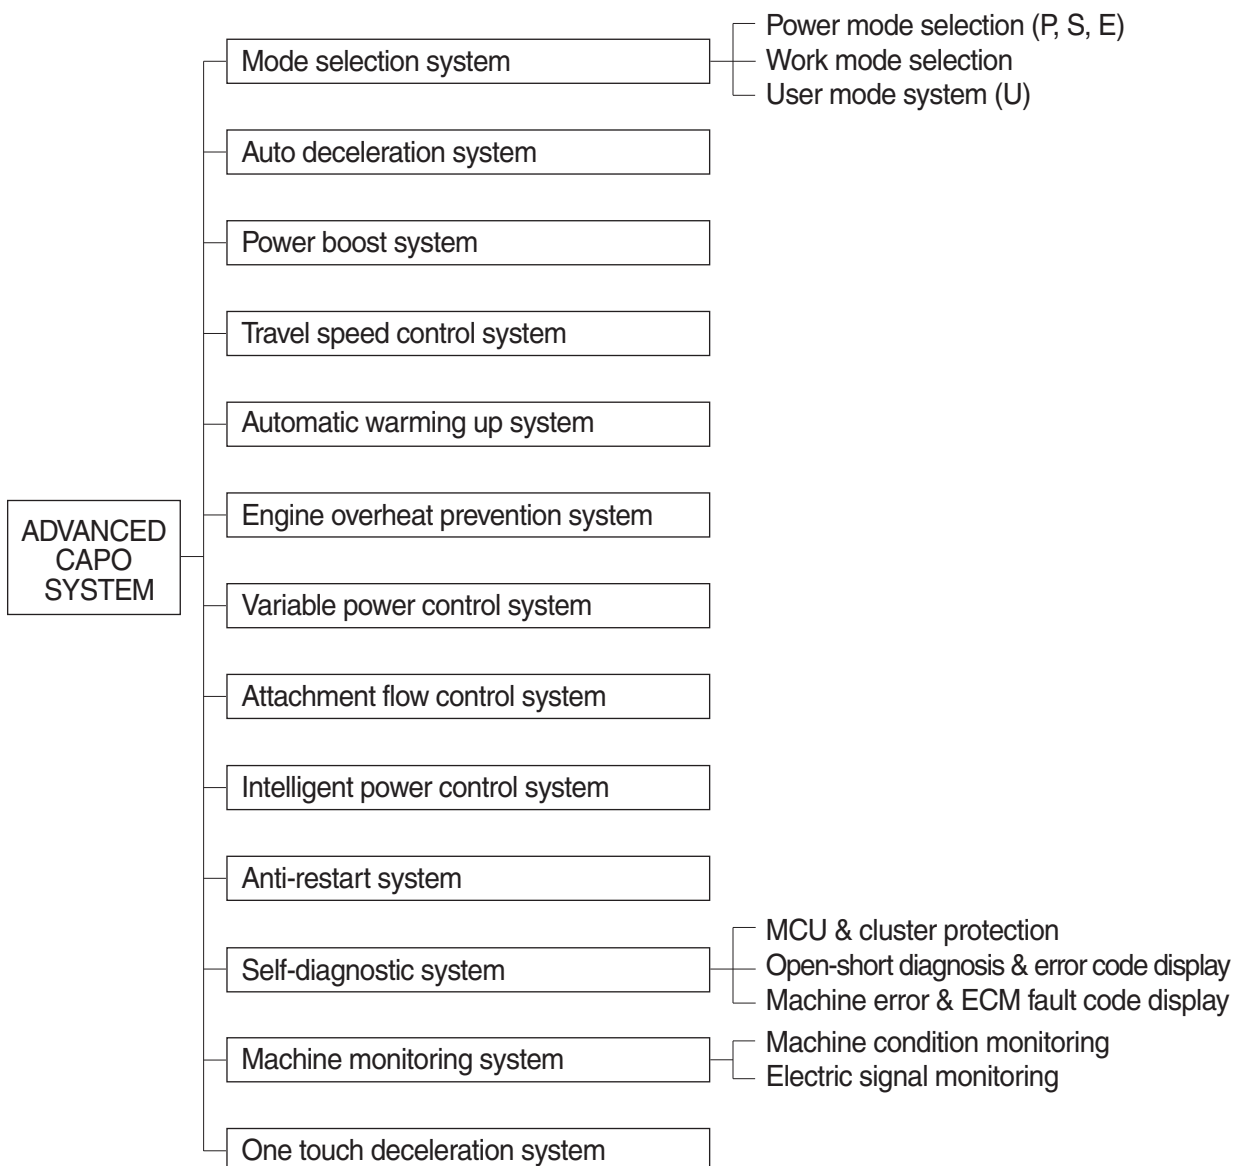


SYSTEM DIAGRAM

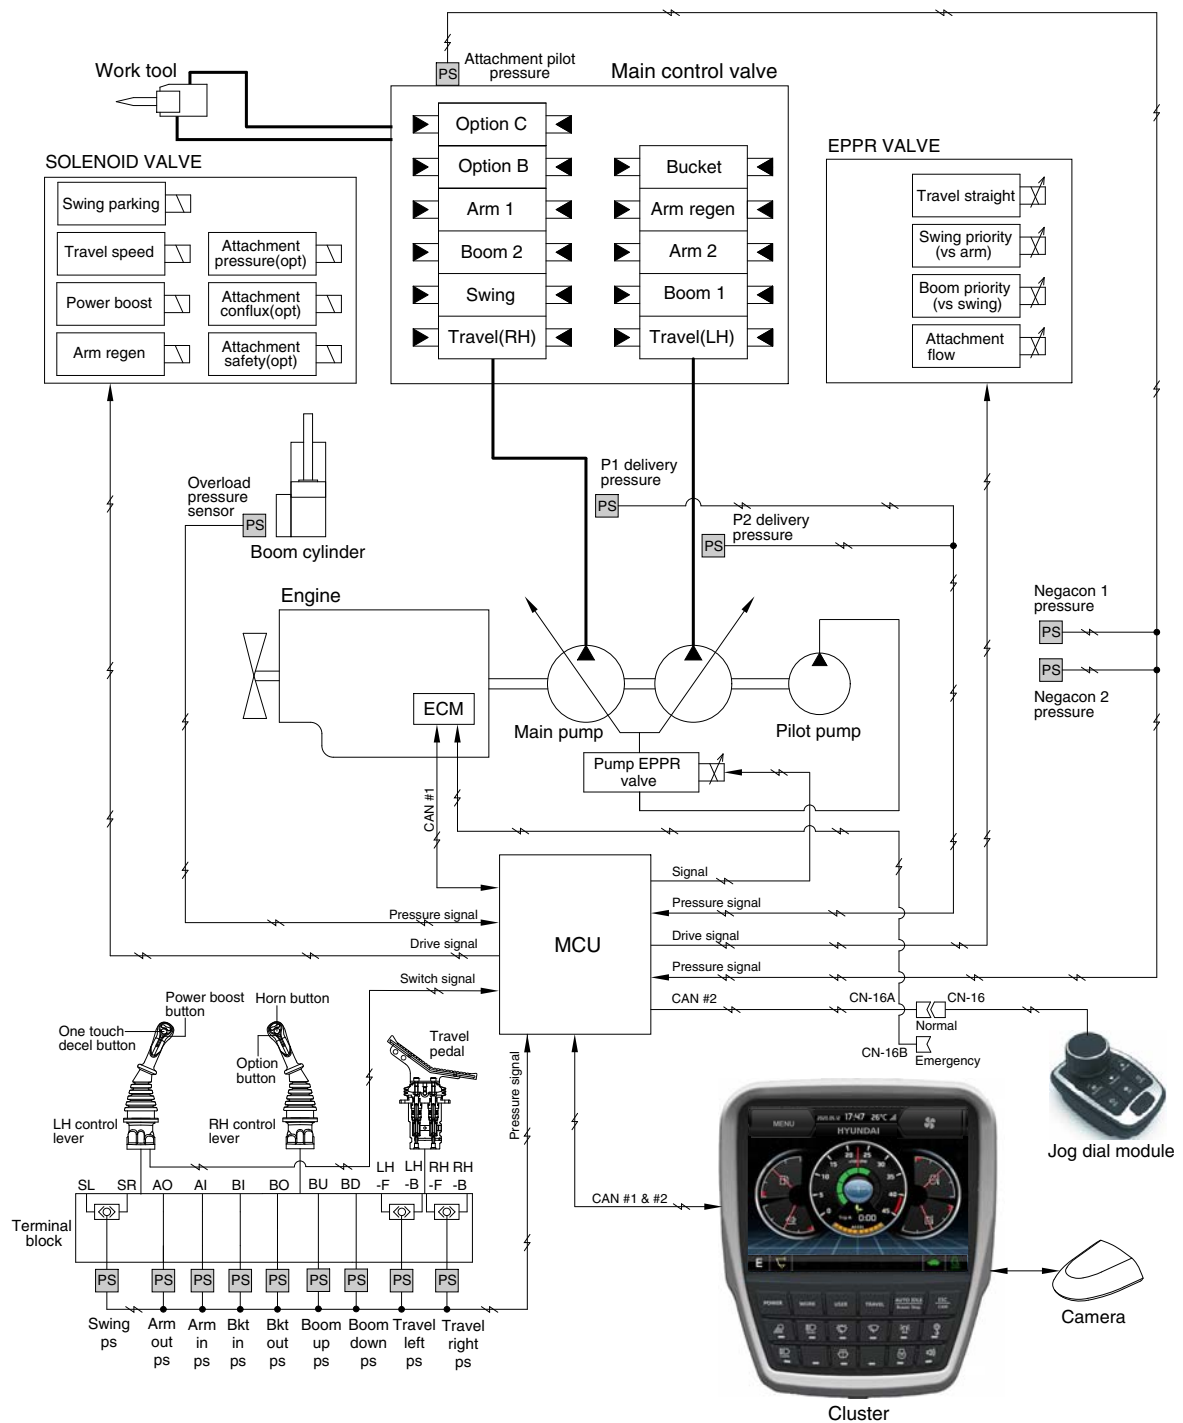

140A5MS01

GROUP 2 MODE SELECTION SYSTEM

1. POWER MODE SELECTION SYSTEM

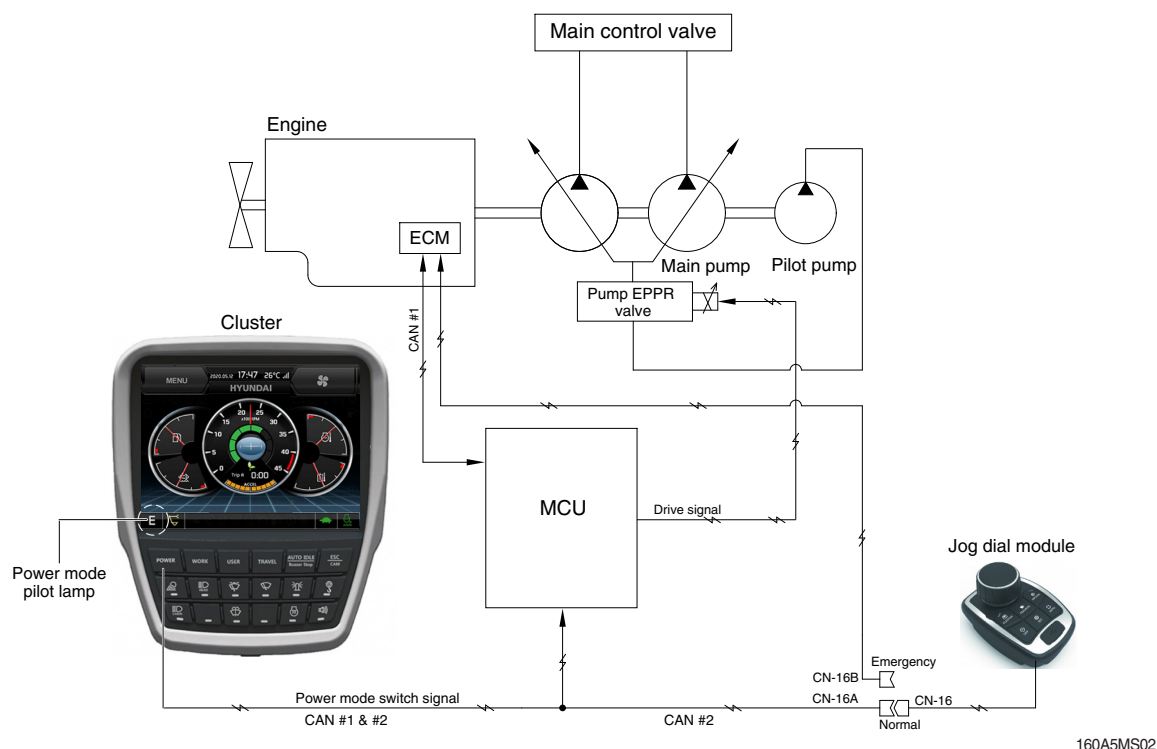

Mode selection system (micro computer based electro-hydraulic pump and engine mutual control system) optimizes the engine and pump performance.


The combination of 3 power modes (P, S, E) and acceleration mode (10 set) of jog dial module makes it possible to use the engine and pump power more effectively corresponding to the work conditions from a heavy and great power requesting work to a light and precise work.

Power mode	Application	Engine rpm				Pump EPPR (kgf/cm ²)			
		Standard		Option		Standard		Option	
		No load	Load	No load	Load	No load	Load	No load	Load
P	Heavy duty power	1850	1950	1950	1950	17	10	15	8
S	Standard power	1750	1850	1850	1850	20	13	17	10
E	Economy operation	1650	1750	1750	1750	22	15	19	12
Auto decel	Engine deceleration	1200 ± 50	-	1200 ± 50	-	38	38	38	38
One touch decel	Engine quick deceleration	1100 ± 50	-	1100 ± 50	-	38	38	38	38
Key start	Key switch start position	1000 ± 50	-	1000 ± 50	-	38	38	38	38

- ※ Power shift (Standard/Option) can be changed by "Service menu" in "Management" on the cluster.
- ※ In work modes, engine speed stays at 1000 rpm if the safety knob is at "LOCK" position. (Low idle goes to 1100 rpm if "UNLOCK")
- ※ Auto decel, one touch decel and low idle speed may increase to 1350 rpm while automatic exhaust system cleaning is being performed.

2. WORK MODE SELECTION SYSTEM

Work mode consists of the general operation (bucket) and the optional attachment (breaker, crusher).

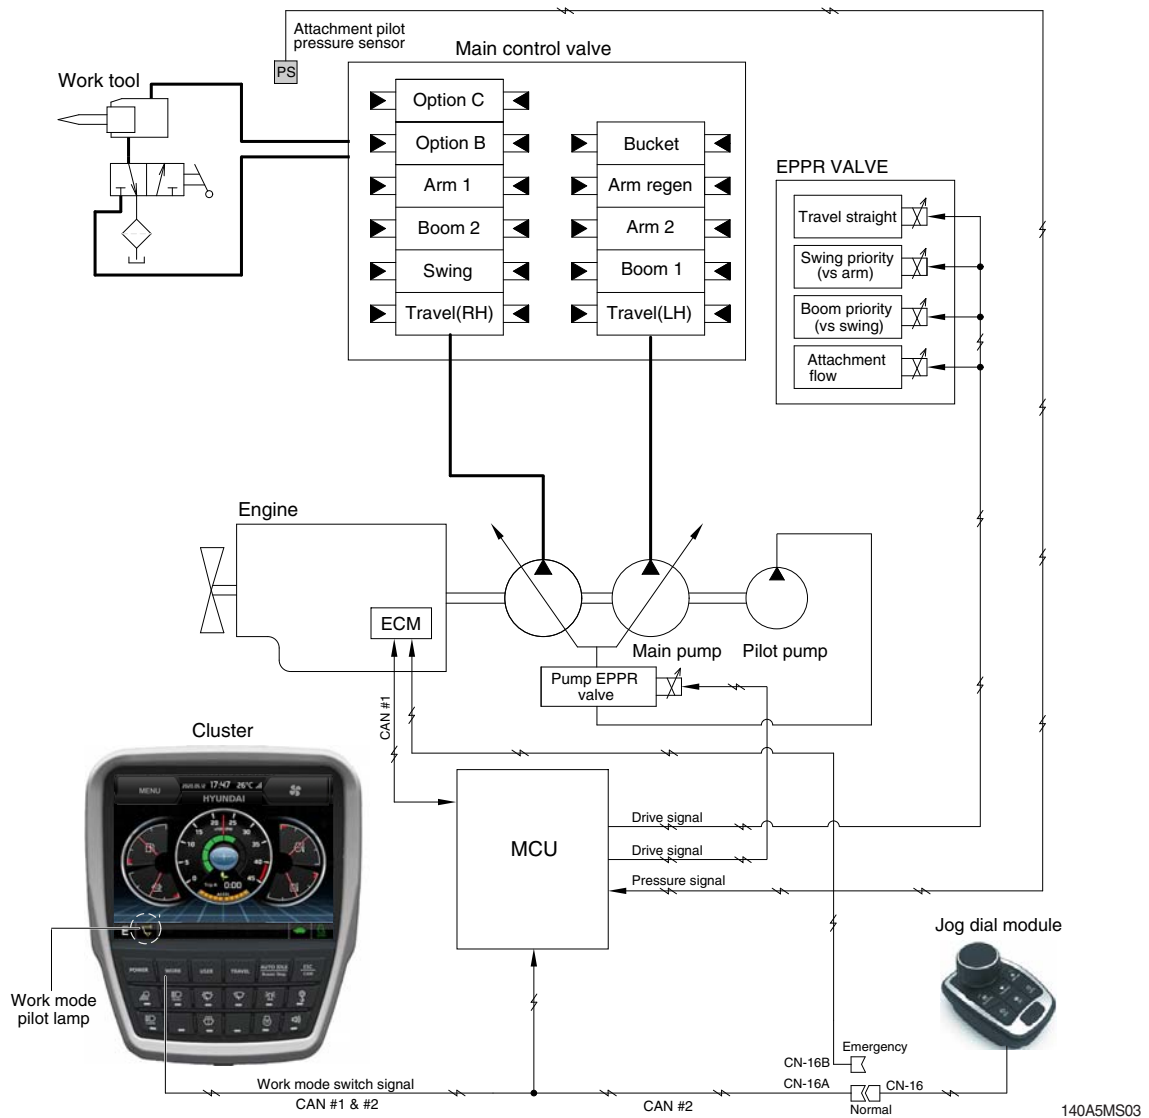

1) GENERAL WORK MODE (bucket)

This mode is used to general digging work.


2) ATT WORK MODE (breaker, crusher)

It controls the pump flow and system pressure according to the operation of breaker or crusher.

Description	General mode	Work tool	
	Bucket	Breaker	Crusher
Attachment safety solenoid	OFF	-	ON
Attachment conflux solenoid	OFF	ON/OFF	ON/OFF
Attachment flow EPPR current	100 mA	100~700 mA	100~700 mA
Breaker solenoid★	OFF	ON	-

★ When breaker operating button is pushed.

3. USER MODE SELECTION SYSTEM

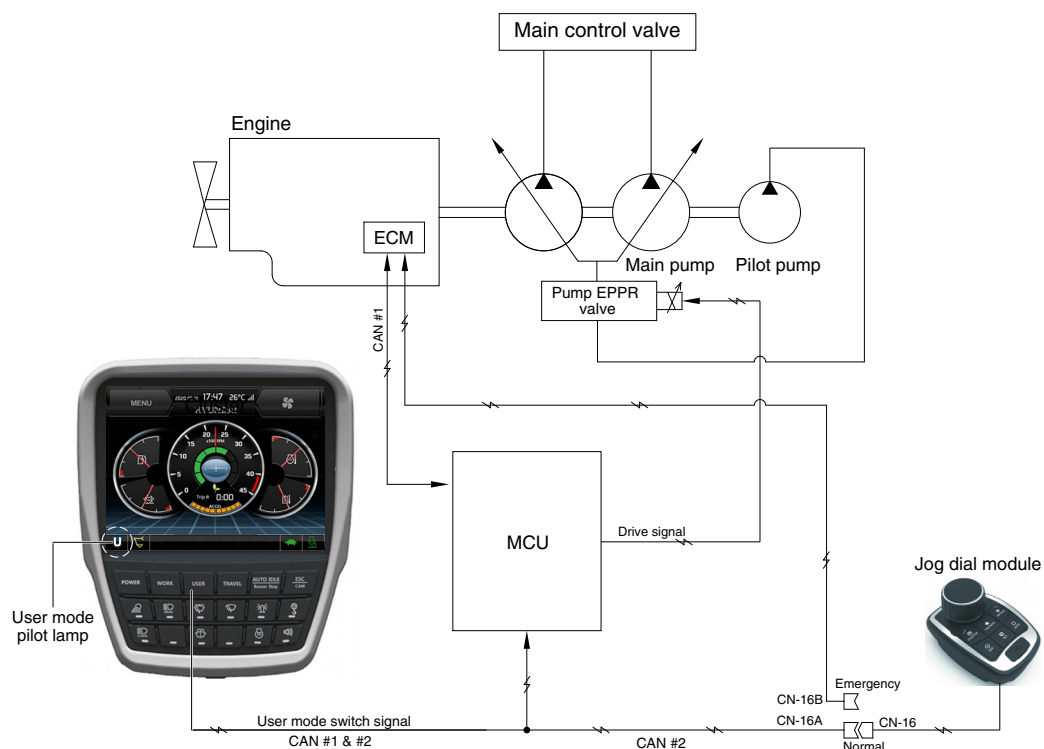

160A5MS04


1) High idle rpm, auto idle rpm and EPPR pressure can be adjusted and memorized in the U-mode.

2) LCD segment vs parameter setting

Step ()	Engine speed (rpm)	Idle speed (rpm)	Power shift pressure (bar)
1	1300	750	0
2	1400	800	3
3	1500	850	6
4	1600	900	9
5	1700	950	12
6	1800	1000	16
7	1850	1050	20
8	1900	1100	26
9	1950	1150	32
10	2000	1200 (auto decel)	38

※ Refer to page 5-90.

GROUP 3 AUTOMATIC DECELERATION SYSTEM

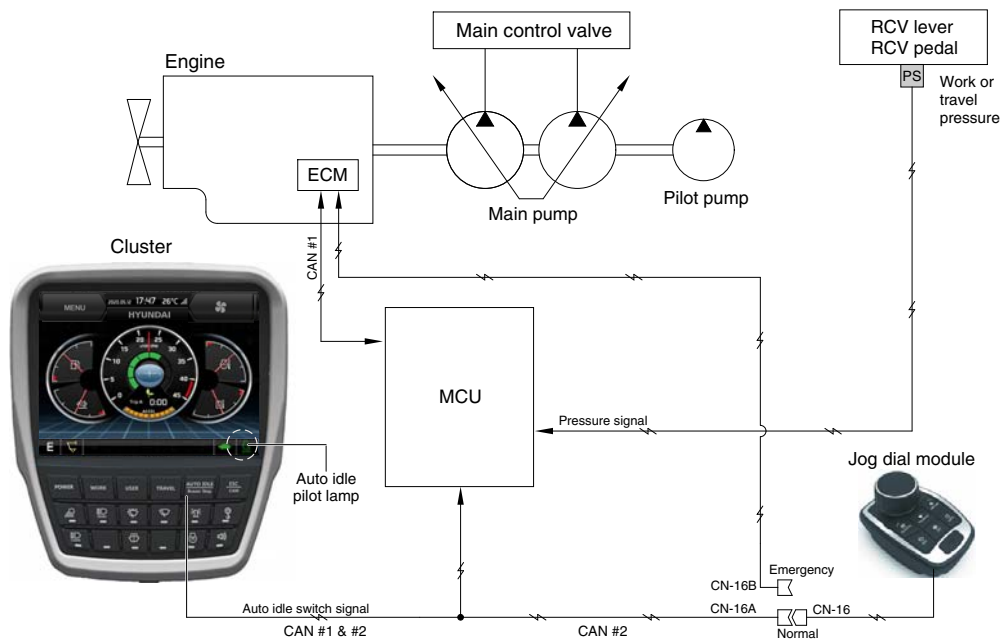


210A5MS05

1. WHEN AUTO IDLE PILOT LAMP ON

When all of the work equipment control levers including swing and travel levers are at neutral for 4 seconds, MCU sends throttle command to ECM to reduce the engine speed to 1200 rpm. If the control levers are at neutral for 1 minute, MCU reduces the engine speed to 1100 rpm. As the result of reducing the engine speed, fuel consumption and noise are effectively cut down during non-operation of the control levers.

When the Auto idle pilot lamp is turned off by pressing the switch or any control lever is operated, the reduced engine speed rises upto the speed before deceleration in a second.

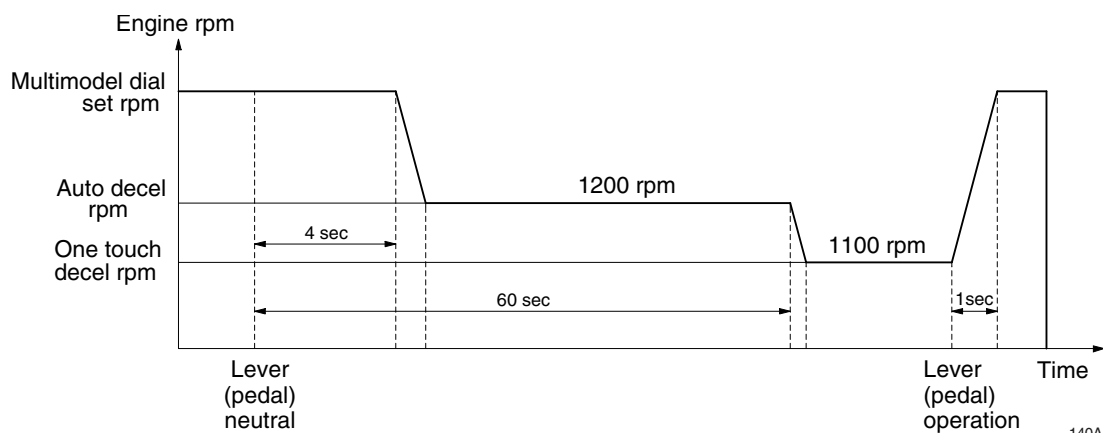


140A5MS105

2. WHEN AUTO IDLE PILOT LAMP OFF

The engine speed can be set as desired using the multimodal dial switch, and even if the control levers are neutral, the engine speed is not reduced.

※ Auto idle function can be activated when multimodal dial position is over 4.

GROUP 4 POWER BOOST SYSTEM

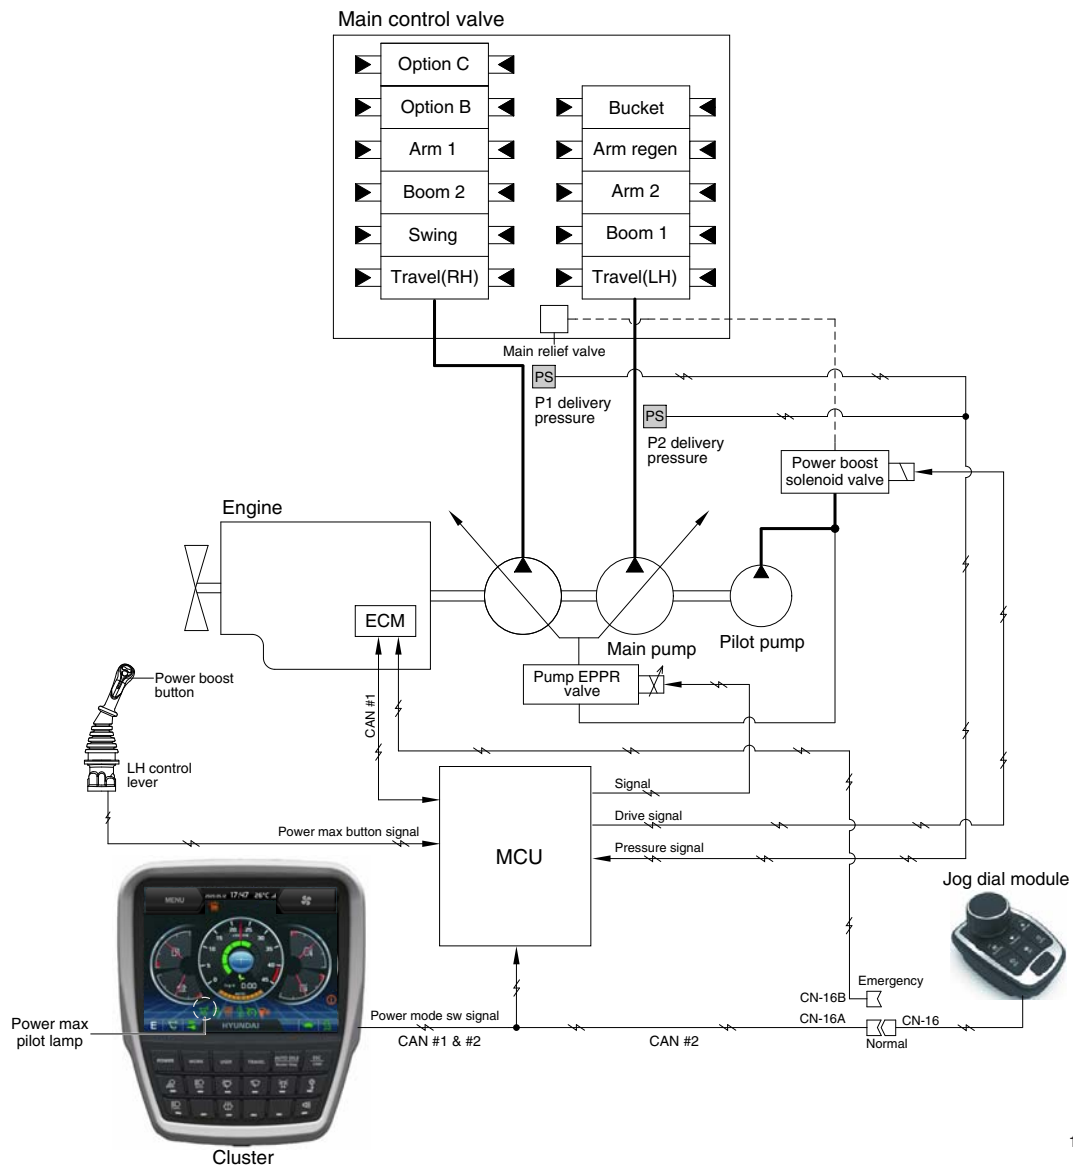


160A5MS06

- When the power boost switch on the left control lever knob is pushed ON, the power mode is set P mode and maximum digging power is increased by 10 %.
- When the power boost function is activated, the power boost solenoid valve pilot pressure raises the set pressure of the main relief valve to increase the digging power.

Description	Condition	Function
Activated	Power boost switch : ON Multimodal dial : over 8	<ul style="list-style-type: none"> - Power mode : P - Multimodal dial power : 9 - Power boost solenoid : ON - Power boost pilot lmap : ON - Operating time : max 8 seconds
Canceled	Power boost switch : OFF	<ul style="list-style-type: none"> - Pre-set power mode - Power boost solenoid : OFF - Power boost pilot lamp : OFF

- ※ When the auto power boost is set to Enable and power mode is set to P mode on the cluster, the digging power is automatically increased as working conditions by the MCU. It is operated max 8 seconds.

GROUP 5 TRAVEL SPEED CONTROL SYSTEM

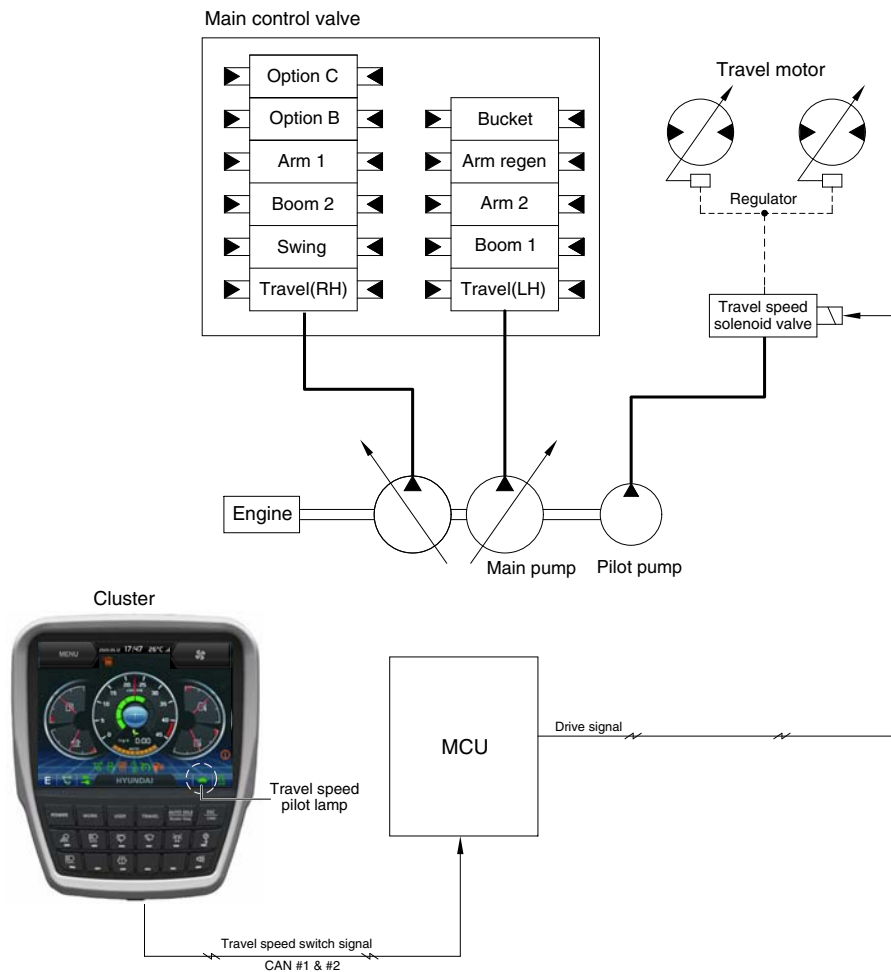


160A5MS07

Travel speed can be switched manually by pressing the travel speed switch on the cluster.

Speed	Travel speed solenoid valve	Lamp on cluster	Operation
Low	OFF	Turtle	Low speed, high driving torque in the travel motor
High	ON	Rabbit	High speed, low driving torque in the travel motor

※ Default : Turtle (Low)

GROUP 6 AUTOMATIC WARMING UP SYSTEM

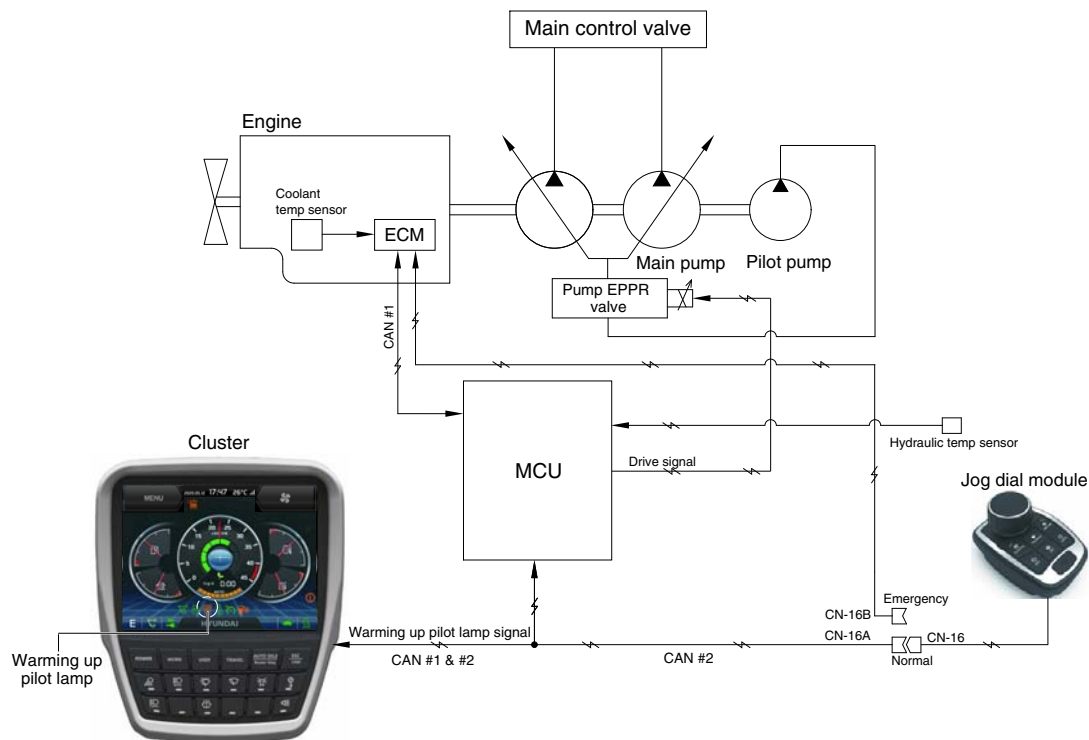


160A5MS08

1. The MCU receives the engine coolant temperature from the ECM, and if the coolant temperature is below 30°C, it increases the engine speed from key start rpm to 1200 rpm. At this time the mode does not change. If the coolant temperature sensor has fault, the hydraulic oil temperature signal is substituted.
2. In case of the coolant temperature increases up to 30°C, the engine speed is decreased to key start speed. And if an operator changes power mode set during the warming up function, the MCU cancels the automatic warming up function.

3. LOGIC TABLE

Description	Condition	Function
Actuated	- Coolant temperature : below 30°C(after engine run)	- Power mode : Default (E mode) - Warming up time : 10 minutes (max) - Warming up pilot lamp : ON
Canceled	- Coolant temperature : Above 30°C - Warming up time : Above 10 minutes - Changed power mode set by operator - RCV lever or pedal operating - Auto idle cancel ※ If any of the above conditions is applicable, the automatic warming up function is canceled	- Power mode : set mode - Warming up pilot lamp : OFF

GROUP 7 ENGINE OVERHEAT PREVENTION SYSTEM

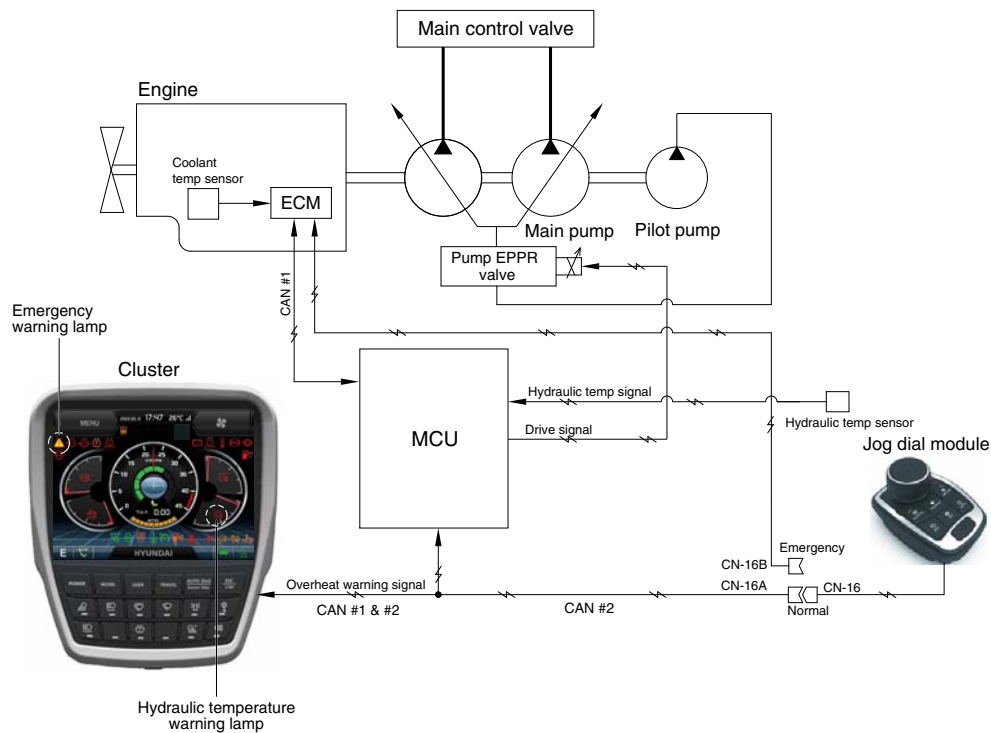


160A5MS09

1. If the engine coolant temperature is overheated over 103°C or the hydraulic oil temperature is overheated over 100°C, the warning lamp is ON and the pump input torque or the engine speed is reduced as below logic table.

2. LOGIC TABLE

Description		Condition	Function
First step warning	Activated	- Coolant temperature : Above 103°C - Hydraulic oil temperature : Above 100°C	- Warning lamp : ON , buzzer : OFF - Pump input torque is reduced.
	Canceled	- Coolant temperature : Less than 100°C - Hydraulic oil temperature : Less than 95°C	- Warning lamp & buzzer : ON - Pump input torque is reduced.
Second step warning	Activated	- Coolant temperature : Above 107°C - Hydraulic oil temperature : Above 105°C	- Emergency warning lamp pops up on the center of LCD and the buzzer sounds. - Engine speed is reduced after 10 seconds.
	Canceled	- Coolant temperature : Less than 103°C - Hydraulic oil temperature : Less than 100°C	- Return to pre-set the engine speed. - Hold pump absorption torque on the first step warning.

GROUP 8 VARIABLE POWER CONTROL SYSTEM

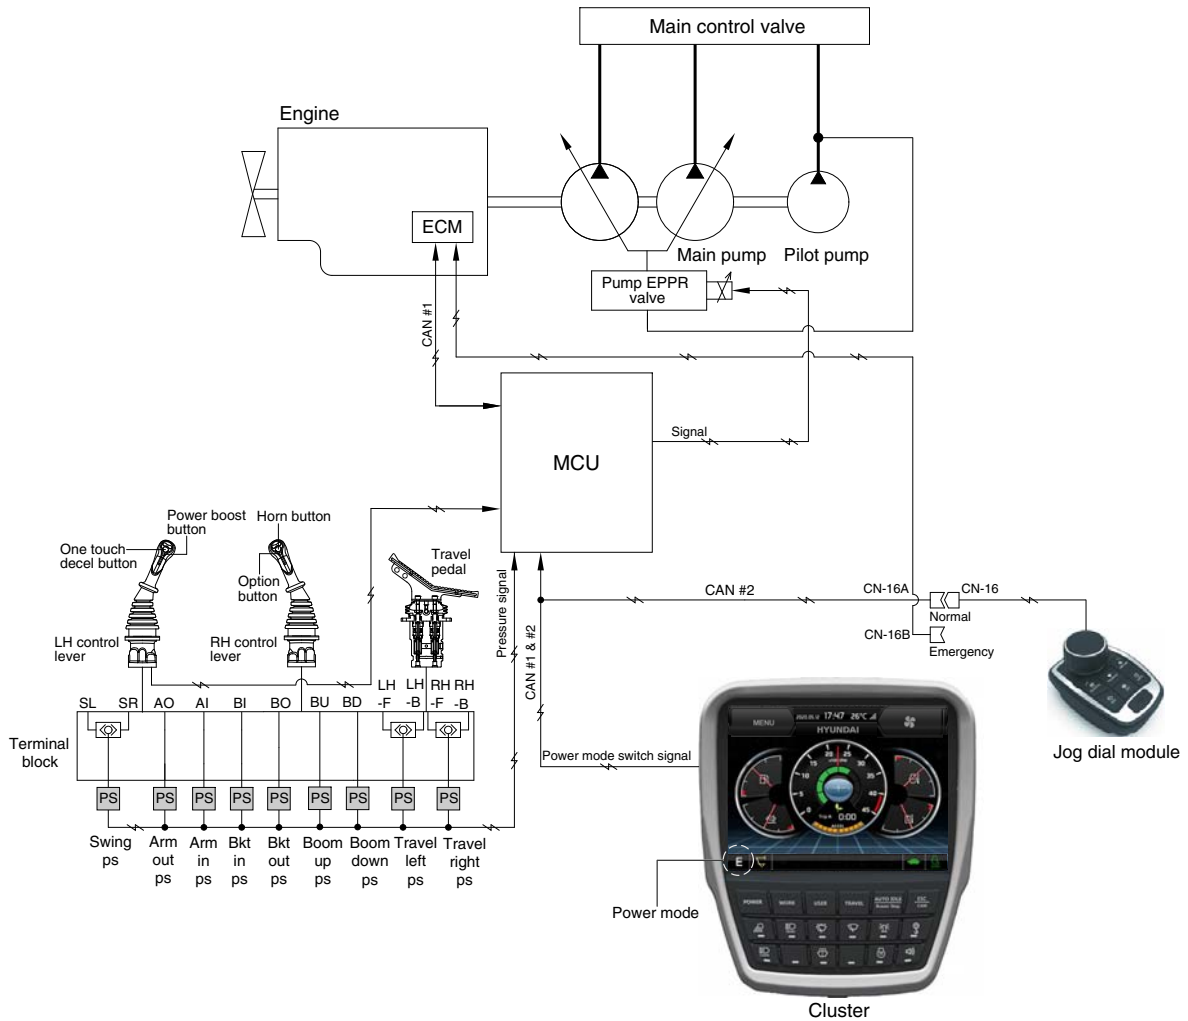

160A5MS10


The variable power control system controls the engine and pump mutual power according to RCV lever stroke and pump load.

It makes fuel saving and smooth control at precise work.

Description	Working condition
Power mode	P, S, E
Work mode	General (bucket)
Pressure sensor	Normal

※ The variable power control function can be activated when the power mode is set to all power mode.

GROUP 9 ATTACHMENT FLOW CONTROL SYSTEM

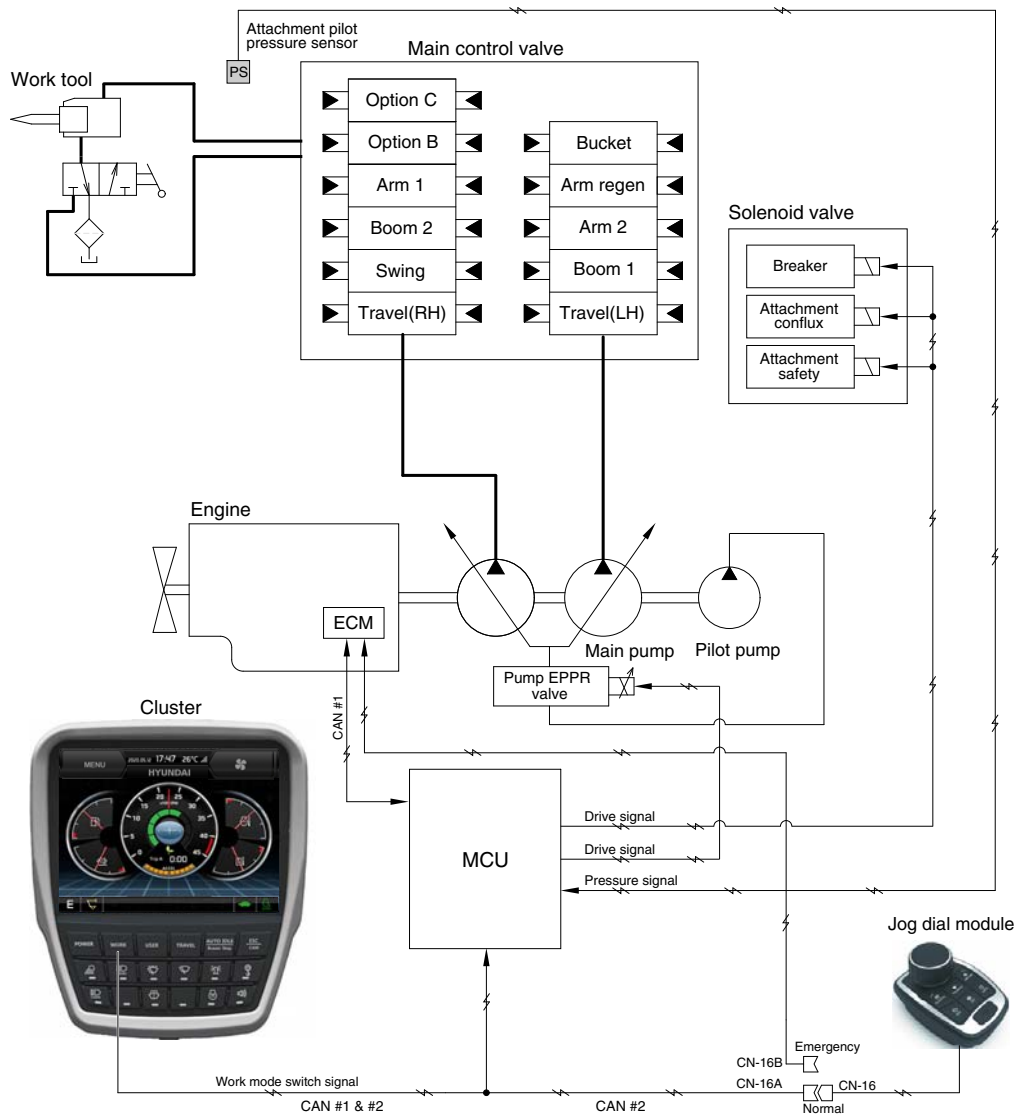

160A5MS11

- The system is used to control the pump delivery flow according to set of the work tool on the cluster by the attachment flow EPPR valve.

Description	Work tool	
	Breaker	Crusher
Flow level	100 ~ 180 lpm	100 ~ 440 lpm
Attach safety solenoid	-	ON
Attach conflux solenoid	ON/OFF	ON/OFF
Breaker solenoid★	ON	-

※ Refer to the page 5-90 for the attachment kinds and max flow.

★ When breaker operating button is pushed.

GROUP 10 INTELLIGENT POWER CONTROL SYSTEM



1. When the requirement of pump flow rate is low, IPC mode controls pump flow rate to improve fuel efficiency. The function works only in Balance or Efficiency mode.

Condition	Function
Arm in with boom up	Limitation of pump flow rate : Activated
Boom down with other actuator	
Starting point when swing operation	
Reduction for fuel when idle condition	
None of upper condition	Limitation of pump flow rate : Canceled

1) ARM IN WITH BOOM UP

A fuel efficiency is improved by maximizing arm regeneration by reducing pump flow rate during boom up and arm in combination operation.

2) BOOM DOWN WITH OTHER ACTUATOR

The flow for boom-down is replaced with regeneration-flow as much as possible, and fuel consumption is reduced by reducing the flow rate of the pump.

3) STARTING POINT WHEN SWING OPERATION

A technology reduces the amount of flow that is wasted to the swing relief due to the inertia at the beginning of the swing start.

4) REDUCTION FOR FUEL WHEN IDLE CONDITION

A technology reduces energy loss due to unnecessary pump volume increase in idle state before the machine operation.


2. IPC MODE SELECTION

The levels of flow rate limit depends on at IPC mode.



IPC mode	Description
Balance mode	Fuel efficiency ON, limit level 1
Efficiency mode	Fuel efficiency ON, limit level 2
Speed mode	Fuel efficiency OFF

GROUP 11 ANTI-RESTART SYSTEM

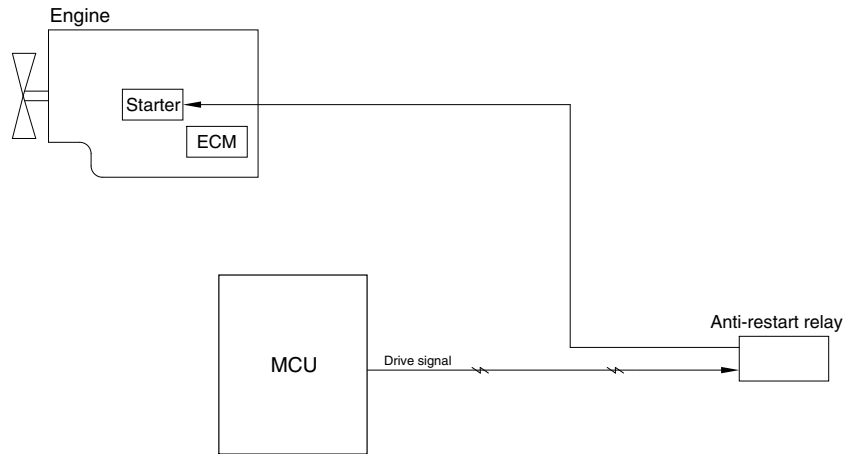

220A5MS12

1. ANTI-RESTART FUNCTION

After a few seconds from the engine starts to run, MCU turns off the anti-restart relay to protect the starter from inadvertent restarting.

GROUP 12 SELF-DIAGNOSTIC SYSTEM

1. OUTLINE

When any abnormality occurs in the ADVANCED CAPO system caused by electric parts malfunction and by open or short circuit, the MCU diagnoses the problem and sends the error codes to the cluster and also stores them in the memory.

2. MONITORING

1) Active fault



- The active faults of the MCU, engine ECM, FATC and AAVM (option) can be checked by this menu.

2) Logged fault



- The logged faults of the MCU, engine ECM, FATC and AAVM (option) can be checked by this menu.

3) Delete logged fault



- The logged faults of the MCU, engine ECM, FATC and AAVM (option) can be deleted by this menu.

3. MACHINE ERROR CODES TABLE

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
101	3	10 seconds continuous, Hydraulic Oil Temp. Measurement Voltage > 3.8V	●		
	4	10 seconds continuous, Hydraulic Oil Temp. Measurement Voltage < 0.3V	●		
	(Results / Symptoms)				
	1. Monitor – Hydraulic oil temperature display failure 2. Control Function – Fan revolutions control failure (Checking list) 1. CD-1 (#2) - CN-51 (#16) Checking Open/Short 2. CD-1 (#1) - CN-51 (#24) Checking Open/Short				
105	0	10 seconds continuous, Working Press. Sensor Measurement Voltage > 5.2V	●		
	1	10 seconds continuous, $0.3V \leq$ Working Press. Sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, Working Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Working Press. display failure 2. Control Function – Auto Idle operation failure, Engine variable horse power control operation failure (Checking list) 1. CD-7 (#B) – CN-52 (#19) Checking Open/Short 2. CD-7 (#A) – CN-51 (#32) Checking Open/Short 3. CD-7 (#C) – CN-51 (#31) Checking Open/Short				
108	0	10 seconds continuous, Travel Oil Press. Sensor Measurement Voltage > 5.2V		●	
	1	10 seconds continuous, $0.3V \leq$ Travel Oil Press. Sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, Travel Oil Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Travel Oil Press. display failure 2. Control Function – Auto Idle operation failure, Engine variable horse power control operation failure, IPC operation failure, Driving alarm operation failure (Checking list) 1. CD-601 or 602 (#B) – CN-52 (#24 or 27) Checking Open/Short 2. CD-601 or 602 (#A) – CN-51 (#32) Checking Open/Short 3. CD-601 or 602 (#C) – CN-51 (#31) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
120	0	10 seconds continuous, P1 pump delivery pressure sensor Measurement Voltage > 5.2V	●		
	1	10 seconds continuous, $0.3V \leq$ P1 pump delivery pressure sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, P1 pump delivery pressure sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – P1 pump delivery Press. display failure 2. Control Function – Automatic voltage increase operation failure, Overload at compensation control failure (Checking list) 1. CD-42 (#B) – CN-52 (#22) Checking Open/Short 2. CD-42 (#A) – CN-51 (#32) Checking Open/Short 3. CD-42 (#C) – CN-51 (#31) Checking Open/Short				
121	0	10 seconds continuous, P2 pump delivery pressure sensor Measurement Voltage > 5.2V	●		
	1	10 seconds continuous, $0.3V \leq$ P2 pump delivery pressure sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, P2 pump delivery pressure sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – P2 pump delivery Press. display failure 2. Control Function – Automatic voltage increase operation failure, Overload at compensation control failure (Checking list) 1. CD-43 (#B) – CN-51 (#14) Checking Open/Short 2. CD-43 (#A) – CN-51 (#32) Checking Open/Short 3. CD-43 (#C) – CN-51 (#31) Checking Open/Short				
122	1	(when you had conditions mounting pressure sensor) 10 seconds continuous, $0.3V \leq$ Overload Press. Sensor Measurement Voltage < 0.8V	●		
	4	(when you had conditions mounting pressure sensor) 10 seconds continuous, Overload Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Overload Press. display failure 2. Control Function – Overload warning alarm failure (Checking list) 1. CD-31 (#B) – CN-52 (#28) Checking Open/Short 2. CD-31 (#A) – CN-51 (#32) Checking Open/Short 3. CD-31 (#C) – CN-51 (#31) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
123	0	10 seconds continuous, Negative 1 Press. Sensor Measurement Voltage > 5.2V	●		
	1	10 seconds continuous, $0.3V \leq$ Negative 1 Press. Sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, Negative 1 Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Negative 1 Press. display failure 2. Control Function – IPC operation failure, Option attachment flow control operation failure (Checking list) 1. CD-70 (#B) – CN-51 (#22) Checking Open/Short 2. CD-70 (#A) – CN-51 (#32) Checking Open/Short 3. CD-70 (#C) – CN-51 (#31) Checking Open/Short				
124	0	10 seconds continuous, Negative 2 Press. Sensor Measurement Voltage > 5.2V	●		
	1	10 seconds continuous, $0.3V \leq$ Negative 2 Press. Sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, Negative 2 Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Negative 2 Press. display failure 2. Control Function – Option attachment flow control operation failure (Checking list) 1. CD-71 (#B) – CN-51 (#28) Checking Open/Short 2. CD-71 (#A) – CN-51 (#32) Checking Open/Short 3. CD-71 (#C) – CN-51 (#31) Checking Open/Short				
127	0	10 seconds continuous, Boom Up Pilot Press. Sensor Measurement Voltage > 5.2V	●		
	1	10 seconds continuous, $0.3V \leq$ Boom Up Pilot Press. Sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, Boom Up Pilot Press. Sensor Measurement < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Boom Up Pilot Press. display failure 2. Control Function – Engine/Pump variable horse power control operation failure, IPC operation failure, Boom first operation failure (Checking list) 1. CD-32 (#B) – CN-52 (#23) Checking Open/Short 2. CD-32 (#A) – CN-51 (#32) Checking Open/Short 3. CD-32 (#C) – CN-51 (#31) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
128	0	(when you had conditions mounting pressure sensor) 10 seconds continuous, Boom Down Pilot Press. Sensor Measurement Voltage > 5.2V	●		
	1	(when you had conditions mounting pressure sensor) 10 seconds continuous, $0.3V \leq$ Boom Down Pilot Press. Sensor Measurement Voltage < 0.8V	●		
	4	(when you had conditions mounting pressure sensor) 10 seconds continuous, Boom Down Pilot Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Boom Down Pilot Press. display failure 2. Control Function – Boom floating operation failure (Checking list) 1. CD-85 (#B) – CN-52 (#31) Checking Open/Short 2. CD-85 (#A) – CN-51 (#32) Checking Open/Short 3. CD-85 (#C) – CN-51 (#31) Checking Open/Short				
129	0	10 seconds continuous, Arm In Pilot Press. Sensor Measurement Voltage > 4.8V	●		
	1	10 seconds continuous, $0.3V \leq$ Arm In Pilot Press. Sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, Arm In Pilot Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Arm In Pilot Press. display failure 2. Control Function – IPC operation failure (Checking list) 1. CD-90 (#B) – CN-51 (#21) Checking Open/Short 2. CD-90 (#A) – CN-51 (#32) Checking Open/Short 3. CD-90 (#C) – CN-51 (#31) Checking Open/Short				
133	0	10 seconds continuous, Arm Out Pilot Press. Sensor Measurement Voltage > 5.2V	●		
	1	10 seconds continuous, $0.3V \leq$ Arm Out Pilot Press. Sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, Arm Out Pilot Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Arm Out Pilot Press. display failure 2. Control Function – Engine variable horse power control operation failure (Checking list) 1. CD-35 (#B) – CN-51 (#27) Checking Open/Short 2. CD-35 (#A) – CN-51 (#32) Checking Open/Short 3. CD-35 (#C) – CN-51 (#31) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
135	0	10 seconds continuous, Swing Pilot Press. Sensor Measurement Voltage > 5.2V	●		
	1	10 seconds continuous, 0.3V ≤ Swing Pilot Press. Sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, Swing Pilot Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Swing Pilot Press. display failure 2. Control Function – IPC operation, Boom first operation failure (Checking list) 1. CD-24 (#B) – CN-52 (#18) Checking Open/Short 2. CD-24 (#A) – CN-51 (#32) Checking Open/Short 3. CD-24 (#C) – CN-51 (#31) Checking Open/Short				
138	0	Monitor – Select Attachment(breaker / crusher) 10 seconds continuous, Attachment Pilot Press. Sensor Measurement Voltage > 5.2V	●		
	1	Monitor – Select Attachment(breaker / crusher) 10 seconds continuous, 0.3V ≤ Attachment Pilot Press. Sensor Measurement Voltage < 0.8V	●		
	4	Monitor – Select Attachment(breaker / crusher) 10 seconds continuous, Attachment Pilot Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Attachment Pilot Press. display failure 2. Control Function – Option attachment flow control operation failure (Checking list) 1. CD-69 (#B) – CN-52 (#32) Checking Open/Short 2. CD-69 (#A) – CN-51 (#32) Checking Open/Short 3. CD-69 (#C) – CN-51 (#31) Checking Open/Short				
139 (N.A)	1	10 seconds continuous, 0.3V ≤ Option Pilot Press. Sensor Measurement Voltage < 0.8V			●
	4	10 seconds continuous, Option Pilot Press. Sensor Measurement Voltage < 0.3V			●
	(Results / Symptoms) 1. Monitor – Option Pilot Press. display failure 2. Control Function – Auto Idle operation failure (Checking list) 1. CD-100 (#B) – CN-52 (#21) Checking Open/Short 2. CD-100 (#A) – CN-51 (#3) Checking Open/Short 3. CD-100 (#C) – CN-1 (#6) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
143 (N.A)	5	(Detection) (When Travel EPPR Current is more than 10 mA) 10 seconds continuous, Travel EPPR drive current = 0 mA (Cancellation) (When Travel EPPR Current is more than 100 mA) 3 seconds continuous, Travel EPPR drive current \geq 10 mA			●
	6	(Detection) 10 seconds continuous, Travel EPPR drive current > 1.0 A (Cancellation) 3 seconds continuous, Travel EPPR drive current \leq 1.0 A			●
	(Results / Symptoms) 1. Control Function – cruise control operation failure (Checking list) 1. CN-246 (#2) – CN-54 (#39) Checking Open/Short 2. CN-246 (#1) – CN-51 (#40) Checking Open/Short				
145	5	(Model Parameter) mounting Remote Cooling Fan EPPR (Detection) (When Remote Cooling Fan EPPR Current is more than 10 mA) 10 seconds continuous, Remote Cooling Fan EPPR drive current = 0 mA (Cancellation) (When Remote Cooling Fan EPPR Current is more than 10 mA) 3 seconds continuous, Remote Cooling Fan EPPR drive current \geq 10 mA	●		
	6	(Detection) 10 seconds continuous, Remote Cooling Fan EPPR drive current > 1.0 A (Cancellation) 3 seconds continuous, Remote Cooling Fan EPPR drive current \leq 1.0 A	●		
	(Results / Symptoms) 1. Control Function – Remote fan control operation failure (Checking list) 1. CN-385 (#3) – CN-53 (#7) Checking Open/Short 2. CN-385 (#1) – CN-51 (#3) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
164 (N.A)	4	(Detection) (When Working Cutoff Relay is Off) 10 seconds continuous, Working Cutoff Relay drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Working Cutoff Relay is Off) 3 seconds continuous, Working Cutoff Relay drive unit Measurement Voltage $> 3.0V$			●
	6	(Detection) (When Working Cutoff Relay is On) 10 seconds continuous, Working Cutoff Relay drive current $> 6.5 A$ (Cancellation) (When Working Cutoff Relay is On) 3 seconds continuous, Working Cutoff Relay drive current $\leq 6.5 A$			●
	(Results / Symptoms) 1. Control Function – (Wheel Excavator) In driving mode, attachment hydraulic pilot pressure cut off failure (Checking list) 1. CR-47 (#85) – CN-54 (#9) Checking Open/Short 2. CR-47 (#30, #86) – Fuse box (#28) Checking Open/Short				
166	4	(Detection) (When Power Max Solenoid is Off) 10 seconds continuous, Power Max Solenoid drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Power Max Solenoid is Off) 3 seconds continuous, Power Max Solenoid drive unit Measurement Voltage $> 3.0V$	●		
	6	(Detection) (When Power Max Solenoid is On) 5 seconds continuous, Power Max Solenoid drive current $> 4.5 A$ (Cancellation) (When Power Max Solenoid is On) 3 seconds continuous, Power Max Solenoid drive current $\leq 4.5 A$	●		
	(Results / Symptoms) 1. Control Function – Voltage increase operation failure (Checking list) 1. CN-88 (#1) – CN-53 (#10) Checking Open/Short 2. CN-88 (#2) – Fuse box (#31) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
167		(Detection) (When Travel High Speed Solenoid is Off) 10 seconds continuous, Travel High Speed Solenoid drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Travel High Speed Solenoid is Off) 3 seconds continuous, Travel High Speed Solenoid drive unit Measurement Voltage $> 3.0V$		●	
		4 (When Parking mode is not) (Detection) (When Travel High Speed Solenoid is Off) 10 seconds continuous, Travel High Speed Solenoid drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Travel High Speed Solenoid is Off) 3 seconds continuous, Travel High Speed Solenoid drive unit Measurement Voltage $> 3.0V$			●
	6	(Detection) (When Travel High Speed Solenoid is On) 10 seconds continuous, Travel High Speed Solenoid drive current $> 4.5 A$ (Cancellation) (When Travel High Speed Solenoid is On) 3 seconds continuous, Travel High Speed Solenoid drive current $\leq 4.5 A$	●		
	(Results / Symptoms) 1. Control Function – driving in 1/2 transmission operation failure (Checking list) 1. CN-70 (#1) – CN-52 (#5) Checking Open/Short 2. CN-70 (#2) – Fuse box (#31) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
169	4	Monitor – Selecting attachment(breaker / crusher) (Detection) (When Attachment Conflux Solenoid is Off) 10 seconds continuous, Attachment Conflux Solenoid drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Attachment Conflux Solenoid is Off) 3 seconds continuous, Attachment Conflux Solenoid drive unit Measurement Voltage $> 3.0V$	●		
		(Detection) (When Attachment Conflux Solenoid is On) 10 seconds continuous, Attachment Conflux Solenoid drive Current $> 6.5 A$ (Cancellation) (When Attachment Conflux Solenoid is On) 3 seconds continuous, Attachment Conflux Solenoid drive Current $\leq 6.5 A$	●		
	(Results / symptoms) 1. Control Function – Option attachment flow control – Joining operation failure (Eco breaker mode, crusher mode) (Checking list) 1. CN-237 (#1) – CN-52 (#16) Checking Open/Short 2. CN-237 (#2) – Fuse box (#28) Checking Open/Short				
170	4	(Model Parameter) mounting Arm Regenerating Solenoid (Detection) (When Arm Regeneration Solenoid is Off) 10 seconds continuous, Arm Regeneration Solenoid drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Arm Regeneration Solenoid is Off) 3 seconds continuous, Arm Regeneration Solenoid drive unit Measurement Voltage $> 3.0V$	●		
		(Detection) (When Arm Regeneration Solenoid is On) 10 seconds continuous, Arm Regeneration Solenoid drive current $> 4.5 A$ (Cancellation) (When Arm Regeneration Solenoid is On) 3 seconds continuous, Arm Regeneration Solenoid drive current $\leq 4.5 A$	●		
	(Results / symptoms) 1. Control Function – Arm regeneration operation failure (Checking list) 1. CN-135 (#1) – CN-52 (#7) Checking Open/Short 2. CN-135 (#2) – Fuse box (#31) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
171	4	Monitor – Selecting attachment(crusher) (Detection) (When Attachment Safety Solenoid is Off) 10 seconds continuous, Attachment Safety Solenoid drive unit Measurement Voltage \leq 3.0V (Cancellation) (When Attachment Safety Solenoid is Off) 3 seconds continuous, Attachment Safety Solenoid drive unit Measurement Voltage $>$ 3.0V	●		
		(Detection) (When Attachment Safety Solenoid is On) 10 seconds continuous, Attachment Safety Solenoid drive current $>$ 6.5 A (Cancellation) (When Attachment Safety Solenoid is On) 3 seconds continuous, Attachment Safety Solenoid drive current \leq 6.5 A	●		
	(Results / Symptoms) 1. Control Function – Option attachment flow control – Option spool pilot pressure cut off failure (crusher mode) (Checking list) 1. CN-149 (#1) – CN-53 (#9) Checking Open/Short 2. CN-149 (#2) – Fuse box (#28) Checking Open/Short				
179	4	Monitor – Selecting attachment(breaker / crusher) (Detection) (When Breaker Operating Solenoid is Off) 10 seconds continuous, Attachment Safety Solenoid drive unit Measurement Voltage \leq 3.0V (Cancellation) (When Breaker Operating Solenoid is Off) 3 seconds continuous, Attachment Safety Solenoid drive unit Measurement Voltage $>$ 3.0V	●		
		(Detection) (When Breaker Operating Solenoid is On) 10 seconds continuous, Attachment Safety Solenoid drive current $>$ 6.5 A (Cancellation) (When Breaker Operating Solenoid is On) 3 seconds continuous, Attachment Safety Solenoid drive current \leq 6.5 A	●		
	(Results / Symptoms) 1. Control Function – Option attachment flow control – Breaker operation failure (breaker mode) (Checking list) 1. CN-66 (#1) – CN-52 (#8) Checking Open/Short 2. CN-66 (#2) – Fuse box (#34) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
181 (N.A)	4	(Model Parameter) mounting Reverse Cooling Fan Solenoid (Detection) (When Reverse Cooling Fan Solenoid is Off) 10 seconds continuous, Reverse Cooling Fan Solenoid drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Reverse Cooling Fan Solenoid is Off) 3 seconds continuous, Reverse Cooling Fan Solenoid drive unit Measurement Voltage $> 3.0V$	●		
		(Detection) (When Reverse Cooling Fan Solenoid is On) 10 seconds continuous, Reverse Cooling Fan Solenoid drive current $> 4.5 A$ (Cancellation) (When Reverse Cooling Fan Solenoid is On) 3 seconds continuous, Reverse Cooling Fan Solenoid drive current $\leq 4.5 A$	●		
	(Results / Symptoms) 1. Control Function – Cooling Fan reverse control operation failure (not applicable)				
188	5	(Detection) (When Pump P1 regulator EPPR current is equal or more than 300 mA) 10 seconds continuous, Pump P1 regulator EPPR drive current $< 100 mA$ (Cancellation) (When Pump P1 regulator EPPR current is equal or more than 300 mA) 3 seconds continuous, Pump P1 regulator EPPR drive current $\geq 100 mA$	●		
		(Detection) 10 seconds continuous, Attachment Flow EPPR 1 drive current $> 1.0 A$ (Cancellation) 3 seconds continuous, Attachment Flow EPPR 1 drive current $\leq 1.0 A$	●		
	(Results / Symptoms) 1. Control Function – IPC operation failure, Option attachment flow control operation failure (Checking list) 1. CN-242 (#2) – CN-54 (#27) Checking Open/Short 2. CN-242 (#1) – CN-54 (#2) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
189	5	(Detection) (When Pump P2 regulator EPPR current is equal or more than 300 mA) 10 seconds continuous, Pump P2 regulator EPPR drive current < 100 mA (Cancellation) (When Pump P2 regulator EPPR current is equal or more than 300 mA) 3 seconds continuous, Pump P2 regulator EPPR drive current ≥ 100 mA	●		
		(Detection) 10 seconds continuous, Attachment Flow EPPR 2 drive current > 1.0 A (Cancellation) 3 seconds continuous, Attachment Flow EPPR 2 drive current ≤ 1.0 A	●		
	6	(Results / Symptoms) 1. Control Function – Option attachment flow control operation failure (Checking list) 1. CN-378 (#2) – CN-54 (#26) Checking Open/Short 2. CN-378 (#1) – CN-54 (#3) Checking Open/Short			
196 (N.A)	0	HW145 10 seconds continuous, Attachment flow control EPPR 1 press. Sensor Measurement Voltage > 5.2V			
	1	HW145 10 seconds continuous, 0.3V ≤ Attachment flow control EPPR 1 press. Sensor Measurement Voltage < 0.8V			
	4	HW145 10 seconds continuous, Attachment flow control EPPR 1 press. Sensor Measurement Voltage < 0.3V			
		(Results / Symptoms) 1. Control Function – Driving second pump joining function operation failure (Checking list) 1. CD-93 (#B) – CN-52 (#34) Checking Open/Short 2. CD-93 (#A) – CN-51 (#32) Checking Open/Short 3. CD-93 (#C) – CN-51 (#31) Checking Open/Short			
200	0	10 seconds continuous, Pump EPPR Press. Sensor Measurement Voltage > 5.2V	●		
	1	10 seconds continuous, 0.3V ≤ Pump EPPR Press. Sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, Pump EPPR Press. Sensor Measurement Voltage < 0.3V	●		
		(Results / Symptoms) 1. Monitor – Pump EPPR Press. display failure 2. Control Function – Pump input horse power control failure, Overload at compensation control operation failure (Fuel efficiency/speed performance failure) (Checking list) 1. CD-44 (#B) – CN-51 (#13) Checking Open/Short 2. CD-44 (#A) – CN-51 (#32) Checking Open/Short 3. CD-44 (#C) – CN-51 (#31) Checking Open/Short			

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
205 (N.A)	0	(Mounting pressure sensor) 10 seconds continuous, Boom Cylinder Rod Press. Sensor Measurement Voltage > 5.2V	●		
	1	(Mounting pressure sensor) 10 seconds continuous, 0.3V ≤ Boom Cylinder Rod Press. Sensor Measurement Voltage < 0.8V	●		
	4	(Mounting pressure sensor) 10 seconds continuous, Boom Cylinder Rod Press. Sensor Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Boom Cylinder Rod Press. display failure 2. Control Function – Boom floating control operation failure (Checking list) 1. CD-124 (#B) – CN-52 (#25) Checking Open/Short 2. CD-124 (#A) – CN-51 (#32) Checking Open/Short 3. CD-124 (#C) – CN-51 (#31) Checking Open/Short				
218 (N.A)	4	Mounting pressure sensor (HCESPN128 or HCESPN 205) (Detection) (When Boom Up Floating Solenoid is Off) 10 seconds continuous, Boom Up Floating Solenoid drive unit Measurement Voltage ≤ 3.0V (Cancellation) (When Boom Up Floating Solenoid is Off) 3 seconds continuous, Boom Up Floating Solenoid drive unit Measurement Voltage > 3.0V	●		
	6	(Detection) (When Boom Up Floating Solenoid is On) 10 seconds continuous, Boom Up Floating Solenoid drive current > 6.5 A (Cancellation) (When Boom Up Floating Solenoid is On) 3 seconds continuous, Boom Up Floating Solenoid drive current ≤ 6.5 A	●		
	(Results / Symptoms) 1. Control Function – Boom floating control operation failure (Checking list) 1. CN-368 (#1) – CN-53 (#05) Checking Open/Short 2. CN-368 (#2) – Fuse box (#19) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
220 (N.A)	4	Mounting pressure sensor (HCESPN 128 or 205) (Detection) (When Boom Down Pilot Pressure Cutoff Solenoid is Off) 10 seconds continuous, Boom Down Pilot Pressure Cutoff Solenoid drive unit Measurement Voltage $\leq 3.0V$	●		
		(Cancellation) (When Boom Down Pilot Pressure Cutoff Solenoid is Off) 3 seconds continuous, Boom Down Pilot Pressure Cutoff Solenoid drive unit Measurement Voltage $> 3.0V$			
	6	(Detection) (When Boom Down Pilot Pressure Cutoff Solenoid is On) 10 seconds continuous, Boom Down Pilot Pressure Cutoff Solenoid drive current $> 6.5 A$ (Cancellation) (When Boom Down Pilot Pressure Cutoff Solenoid is On) 3 seconds continuous, Boom Down Pilot Pressure Cutoff Solenoid drive current $\leq 6.5 A$	●		
(Results / Symptoms) 1. Control Function – Boom floating control operation failure (Checking list) 1. CN-369 (#1) – CN-53 (#08) Checking Open/Short 2. CN-369 (#2) – Fuse box (#19) Checking Open/Short					
221	5	Monitor – Selecting attachment(breaker / crusher) (Detection) (When ATT Relief Setting EPPR 1 Current is equal or more than 10 mA) 10 seconds continuous, ATT Relief Setting EPPR 1 drive current = 0 mA (Cancellation) ATT Relief Setting EPPR 1 Current is equal or more than 10 mA) 3 seconds continuous, ATT Relief Setting EPPR 1 drive current $\geq 10 mA$	●		
		(Detection) 10 seconds continuous, ATT Relief Setting EPPR 1 drive current $> 1.0 A$ (Cancellation) 3 seconds continuous, ATT Relief Setting EPPR 1 drive current $\leq 1.0 A$			
	6	(Detection) 10 seconds continuous, ATT Relief Setting EPPR 1 drive current $> 1.0 A$ (Cancellation) 3 seconds continuous, ATT Relief Setting EPPR 1 drive current $\leq 1.0 A$	●		
(Results / Symptoms) 1. Control Function – Option attachment flow control – P1 relief pressure setting failure (Checking list) 1. CN-365 (#2) – CN-54 (#17) Checking Open/Short 2. CN-365 (#1) – CN-54 (#9) Checking Open/Short					

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
222	5	Monitor – Selecting attachment(crusher) (Detection) (When ATT Relief Setting EPPR 2 Current is equal or more than 10 mA) 10 seconds continuous, ATT Relief Setting EPPR 2 drive current = 0 mA (Cancellation) (When ATT Relief Setting EPPR 2 Current is equal or more than 10 mA) 3 seconds continuous, ATT Relief Setting EPPR 2 drive current \geq 10mA	●		
		(Detection) 10 seconds continuous, ATT Relief Setting EPPR 2 drive current > 1.0 A (Cancellation) 3 seconds continuous, ATT Relief Setting EPPR 2 drive current \leq 1.0 A	●		
		(Results / Symptoms) 1. Control Function – Option attachment flow control – P2 relief pressure setting failure (Checking list) 1. CN-366 (#2) – CN-54 (#17) Checking Open/Short 2. CN-366 (#1) – CN-54 (#10) Checking Open/Short			
301	3	10 seconds continuous, Fuel Level Measurement Voltage > 3.8V	●		
	4	10 seconds continuous, Fuel Level Measurement Voltage < 0.3V	●		
		(Results / Symptoms) 1. Monitor – Fuel remaining display failure (Checking list) 1. CD-2 (#2) – CN-51 (#19) Checking Open/Short 2. CD-2 (#1) – CN-51 (#24) Checking Open/Short			
325	4	(Model Parameter) mounting Fuel Warmer Relay (Detection) (When Fuel Warmer Relay is Off) 10 seconds continuous, Fuel Warmer Relay drive unit Measurement Voltage \leq 3.0V (Cancellation) (When Fuel Warmer Relay is Off) 3 seconds continuous, Fuel Warmer Relay drive unit Measurement Voltage > 3.0V	●		
		(Detection) (When Fuel Warmer Relay is On) 10 seconds continuous, Fuel Warmer Relay drive current > 4.5 A (Cancellation) (When Fuel Warmer Relay is On) 3 seconds continuous, Fuel Warmer Relay drive current \leq 4.5 A	●		
		(Results / Symptoms) 1. Control Function – Fuel warmer operation failure (Checking list) 1. CR-46 (#85) – CN-52 (#13) Checking Open/Short 2. CR-46 (##30, #86) – Fuse box (#24) Checking Open/Short			

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
501 (N.A)	0	10 seconds continuous, Transmission Oil Press. Sensor Measurement Voltage > 5.2V			●
	1	10 seconds continuous, 0.3V ≤ Transmission Oil Press. Sensor Measurement Voltage < 0.8V			●
	4	10 seconds continuous, Transmission Oil Press. Sensor Measurement Voltage < 0.3V			●
	(Results / Symptoms) 1. Monitor – Transmission Oil Press. display failure, Transmission Oil low pressure warning failure (Checking list) 1. CD-5 (#B) – CN-52 (#26) Checking Open/Short 2. CD-5 (#A) – CN-51 (#32) Checking Open/Short 3. CD-5 (#C) – CN-51 (#31) Checking Open/Short				
503 (N.A)	0	10 seconds continuous, Brake Oil Press. Sensor Measurement Voltage > 5.2V			●
	1	10 seconds continuous, 0.3V ≤ Brake Oil Press. Sensor Measurement Voltage < 0.8V			●
	4	10 seconds continuous, Brake Oil Press. Sensor Measurement Voltage < 0.3V			●
	(Results / Symptoms) 1. Monitor – Brake Oil Press. display failure, Brake Oil low pressure warning failure (Checking list) 1. CD-3 (#B) – CN-52 (#29) Checking Open/Short 2. CD-3 (#A) – CN-51 (#32) Checking Open/Short 3. CD-3 (#C) – CN-51 (#31) Checking Open/Short				
505 (N.A)	0	10 seconds continuous, Working Brake Press. Sensor Measurement Voltage > 5.2V			●
	1	10 seconds continuous, 0.3V ≤ Working Brake Press. Sensor Measurement Voltage < 0.8V			●
	4	10 seconds continuous, Working Brake Press. Sensor Measurement Voltage < 0.3V			●
	(Results / Symptoms) 1. Monitor – Working Brake Oil Press. display failure, Working Brake Oil low pressure warning failure (Checking list) 1. CD-38 (#B) – CN-51 (#30) Checking Open/Short 2. CD-38 (#A) – CN-51 (#32) Checking Open/Short 3. CD-38 (#C) – CN-51 (#31) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
514 (N.A)	4	(Detection) (When Parking Relay is Off) 10 seconds continuous, Parking Relay drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Parking Relay is Off) 3 seconds continuous, Parking Relay drive unit Measurement Voltage $> 3.0V$			●
	6	(Detection) (When Parking Relay is On) 10 seconds continuous, Parking Relay drive current $> 6.5 A$ (Cancellation) (When Parking Relay is On) 3 seconds continuous, Parking Relay drive current $\leq 6.5 A$			●
	(Results / Symptoms) 1. Control Function – Parking Relay operation failure (Checking list) 1. CR-66 (#1) – CN-53 (#11) Checking Open/Short 2. CR-66 (#2) – Fuse box (#30) Checking Open/Short				
517 (N.A)	4	(Detection) (When Traveling Cutoff Relay is Off) 10 seconds continuous, Traveling Cutoff Relay drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Traveling Cutoff Relay is Off) 3 seconds continuous, Traveling Cutoff Relay drive unit Measurement Voltage $> 3.0V$			●
	6	(Detection) (When Traveling Cutoff Relay is On) 10 seconds continuous, Traveling Cutoff Relay drive current $> 6.5 A$ (Cancellation) (When Traveling Cutoff Relay is On) 3 seconds continuous, Traveling Cutoff Relay drive current $\leq 6.5 A$			●
	(Results / Symptoms) 1. Control Function – Traveling Cutoff Relay operation failure (Checking list) 1. CR-47 (#85) – CN-53 (#04) Checking Open/Short 2. CR-47 (#86) – Fuse box (#28) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
525 (N.A)	4	(Detection) (When Ram Lock Solenoid is Off) 10 seconds continuous, Ram Lock Solenoid drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Ram Lock Solenoid is Off) 3 seconds continuous, Ram Lock Solenoid drive unit Measurement Voltage $> 3.0V$			●
	6	(Detection) (When Ram Lock Solenoid is On) 10 seconds continuous, Ram Lock Solenoid drive current $> 6.5 A$ (Cancellation) (When Ram Lock Solenoid is On) 3 seconds continuous, Ram Lock Solenoid drive current $\leq 6.5 A$			●
	(Results / Symptoms) 1. Control Function – Ram lock control operation failure (Checking list) 1. CN-69 (#1) – CN-53 (#12) Checking Open/Short 2. CN-69 (#2) – Fuse box (#33) Checking Open/Short				
527 (N.A)	4	(Detection) (When Creep Solenoid is Off) 10 seconds continuous, Creep Solenoid drive unit Measurement Voltage $\leq 3.0V$ (Cancellation) (When Creep Solenoid is Off) 3 seconds continuous, Creep Solenoid drive unit Measurement Voltage $> 3.0V$			●
	6	(Detection) (When Creep Solenoid is On) 10 seconds continuous, Creep Solenoid drive current $> 6.5 A$ (Cancellation) (When Creep Solenoid is On) 3 seconds continuous, Creep Solenoid drive current $\leq 6.5 A$			●
	(Results / Symptoms) 1. Control Function – Creep mode operation failure (Checking list) 1. CN-206 (#1) – CN-52 (#17) Checking Open/Short 2. CN-206 (#2) – Fuse box (#30) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
530 (N.A)	0	10 seconds continuous, Travel Forward Press. Sensor Measurement Voltage > 5.2V			●
	1	10 seconds continuous, 0.3V ≤ Travel Forward Press. Sensor Measurement Voltage < 0.8V			●
	4	10 seconds continuous, Travel Forward Press. Sensor Measurement Voltage < 0.3V			●
		(Results / Symptoms) 1. Monitor – Travel Forward Press. display failure 2. Control Function – Driving interoperability power control operation failure (Checking list) 1. CD-73 (#B) – CN-51 (#20) Checking Open/Short 2. CD-73 (#A) – CN-51 (#32) Checking Open/Short 3. CD-73 (#C) – CN-51 (#31) Checking Open/Short			
531 (N.A)	1	10 seconds continuous, 0.3V ≤ Travel Reverse Press. Sensor Measurement Voltage < 0.8V			●
	4	10 seconds continuous, Travel Reverse Press. Sensor Measurement Voltage < 0.3V			●
		(Results / Symptoms) 1. Monitor – Travel Reverse Press. display failure 2. Control Function – Driving interoperability power control operation failure (Checking list) 1. CD-74 (#B) – CN-51 (#20) Checking Open/Short 2. CD-74 (#A) – CN-51 (#32) Checking Open/Short 3. CD-74 (#C) – CN-51 (#31) Checking Open/Short			
705	0	10 seconds continuous, Battery input Voltage > 35V	●		
	1	10 seconds continuous, Battery input Voltage < 18V	●		
		(Results / Symptoms) 1. Control Function – Startup impossibility (Checking list) 1. CS-74A (#1) – CN-51 (#01) Checking Open/Short			
707	1	(When Engine is equal or more than 400 rpm) 10 seconds continuous, Alternator Node I Measurement Voltage < 18V (In case 12v goods, Alternator Node I Measurement Voltage < 9V)	●		
		(Results / Symptoms) 1. Control Function – Battery charging circuit failure (Checking list) 1. CS-74A (#1) – CN-51 (#15) Checking Open/Short			

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
714 (N.A)	3	(Model Parameter) Mounting Acc. Dial 10 seconds continuous, Acc. Dial Measurement Voltage > 5.2V	●		
	4	(Model Parameter) Mounting Acc. Dial 10 seconds continuous, Acc. Dial Measurement Voltage < 0.3V	●		
	(Results / Symptoms) 1. Monitor – Acc. Dial Voltage display failure 2. Control Function – Engine rpm control failure (Checking list) 1. CN-7 (#15) – CN-52 (#33) Checking Open/Short				
722	4	(Detection) (When Travel Alarm (Buzzer) Sound is Off) 10 seconds continuous, Travel Alarm (Buzzer) Sound Relay drive unit Measurement Voltage ≤ 3.0V (Cancellation) (When Travel Alarm (Buzzer) Sound Relay is Off) 3 seconds continuous, Travel Alarm (Buzzer) Sound Relay drive unit Measurement Voltage > 3.0V	●		
	6	(Detection) (When Travel Alarm (Buzzer) Sound is On) 10 seconds continuous, Travel Alarm (Buzzer) Sound Relay drive current > 4.5 A (Cancellation) (When Travel Alarm (Buzzer) Sound is On) 3 seconds continuous, Travel Alarm (Buzzer) Sound Relay drive current ≤ 4.5 A	●		
	(Results / Symptoms) 1. Control Function – Driving alarm operation failure (Checking list) 1. CN-81 (#1) – CN-52 (#9) Checking Open/Short 2. CN-81 (#2) – Fuse box (#31) Checking Open/Short				
831	2	(When mounting the A/C Controller) 60 seconds continuous, A/C Controller Communication Data Error	●		
	(Results / Symptoms) 1. Control Function – A/C Controller operation failure (Checking list) 1. CN-11 (#8) – CN-51 (#9) Checking Open/Short 2. CN-11 (#7) – CN-51 (#8) Checking Open/Short				
840	2	60 seconds continuous, Cluster Communication Data Error	●		
	(Results / Symptoms) 1. Control Function – Cluster operation failure (Checking list) 1. CN-56A (#5) – CN-52 (#1) Checking Open/Short 2. CN-56A (#4) – CN-52 (#2) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
841	2	10 seconds continuous, ECM Communication Data Error	●		
		(Results / Symptoms) 1. Control Function – ECM operation failure (Checking list) 1. CN-93 (#22) – CN-52 (#2) Checking Open/Short 2. CN-93 (#46) – CN-52 (#1) Checking Open/Short			
848	2	(When mounting the Jog Dial Module) 60 seconds continuous, Jog Dial Module Communication Data Error	●		
		(Results / Symptoms) 1. Control Function – Jog Dial Module operation failure (Checking list) 1. CN-363 (#4) – CN-51 (#9) Checking Open/Short 2. CN-363 (#10) – CN-51 (#8) Checking Open/Short			
850	2	(When mounting the RMCU) 60 seconds continuous, RMCU communication Data Error	●		
		(Results / Symptoms) 1. Control Function – RMCU operation failure (Checking list) 1. CN-125A (#3) – CN-51 (#9) Checking Open/Short 2. CN-125A (#11) – CN-51 (#8) Checking Open/Short			
866	2	(When mounting the AAVM) 60 seconds continuous, AAVM communication Data Error	●		
		(Results / Symptoms) 1. Control Function – AAVM operation failure (Checking list) 1. CN-9 (#5) – CN-51 (#9) Checking Open/Short 2. CN-9 (#6) – CN-51 (#8) Checking Open/Short			
867	2	60 seconds continuous, RDU communication Data Error	●		
		(Results / Symptoms) 1. Control Function – RDU operation failure (Checking list) 1. CN-376 (#10) – CN-51 (#9) Checking Open/Short 2. CN-376 (#18) – CN-51 (#8) Checking Open/Short			

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
868	2	60 seconds continuous, Switch Controller communication Data Error	●		
	(Results / Symptoms) 1. Control Function – Switch Controller operation failure (Checking list) 1. CN-56A (#7) – CN-51 (#8) Checking Open/Short 2. CN-56A (#6) – CN-51 (#9) Checking Open/Short				
869	2	(When mounting the BKCU) 60 seconds continuous, BKCU communication Data Error	●		
	(Results / Symptoms) 1. Control Function – BKCU operation failure (Checking list) 1. CS-2B (#A) – CN-51 (#9) Checking Open/Short 2. CS-2B (#B) – CN-51 (#8) Checking Open/Short				

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

4. ENGINE FAULT CODE

Fault code J1939 SPN J1939 FMI	Item	Description
111 629 12	Engine control module critical internal failure	Bad intelligent device or component
122 102 3	Intake manifold 1 pressure sensor circuit	Voltage above normal, or shorted to high source
123 102 4	Intake manifold 1 pressure sensor circuit	Voltage below normal, or shorted to low source
124 102 16	Intake manifold 1 pressure	Data valid but above normal operating range - moderately severe level
125 102 18	Intake manifold 1 pressure	Data valid but below normal operating range - moderately severe level
133 974 3	Remote accelerator pedal or lever position sensor 1 circuit	Voltage above normal, or shorted to high source
134 974 4	Remote accelerator pedal or lever position sensor 1 circuit	Voltage below normal, or shorted to low source
135 100 3	Engine oil rifle pressure 1 sensor circuit	Voltage above normal, or shorted to high source
141 100 4	Engine oil rifle pressure 1 sensor circuit	Voltage below normal, or shorted to low source
143 100 18	Engine oil rifle pressure	Data valid but below normal operating range - moderately severe level
144 110 3	Engine coolant temperature 1 sensor circuit	Voltage above normal, or shorted to high source
145 110 4	Engine coolant temperature 1 sensor circuit	Voltage below normal, or shorted to low source
146 110 16	Engine coolant temperature	Data valid but above normal operating range - moderately severe level
147 91 1	Accelerator pedal or lever position 1 sensor circuit frequency	Data valid but below normal operating range
148 91 0	Accelerator pedal or lever position sensor 1	Data valid but above normal operational range - most severe level
151 110 0	Engine coolant temperature	Data valid but above normal operational range - most severe level

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
153 105 3	Intake manifold 1 temperature sensor circuit	Voltage above normal, or shorted to high source
154 105 4	Intake manifold 1 temperature sensor circuit	Voltage below normal, or shorted to low source
187 3510 4	Sensor supply 2 circuit	Voltage below normal, or shorted to low source
197 111 18	Coolant level	Data valid but below normal operating range - moderately severe level
227 3510 3	Sensor supply 2 circuit	Voltage above normal, or shorted to high source
234 190 0	Engine crankshaft speed/position	Data valid but above normal operational range - most severe level
235 111 1	Coolant level	Data valid but below normal operational range - most severe level
237 644 2	External speed command input (Multiple unit synchronization)	Data erratic, intermittent or incorrect
238 3511 4	Sensor supply 3 circuit	Voltage below normal, or shorted to low source
239 3511 3	Sensor supply 3 circuit	Voltage above normal, or shorted to high source
241 84 2	Wheel-based vehicle speed	Data erratic, intermittent or incorrect
242 84 10	Wheel-based vehicle speed sensor circuit tampering has been detected	Abnormal rate of change
271 1347 4	Engine fuel pump pressurizing assembly 1 circuit	Voltage below normal, or shorted to low source
272 1347 3	Engine fuel pump pressurizing assembly 1 circuit	Voltage above normal, or shorted to high source
285 639 9	SAE J1939 multiplexing pgn timeout error	Abnormal update rate
286 639 13	SAE J1939 multiplexing configuration error	Out of calibration

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
288 974 19	SAE J1939 multiplexing remote accelerator pedal or lever position sensor system	Received network data in error
293 441 3	Auxiliary temperature sensor input 1 circuit	Voltage above normal, or shorted to high source
294 441 4	Auxiliary temperature sensor input 1 circuit	Voltage below normal, or shorted to low source
297 1388 3	Auxiliary pressure sensor input 2 circuit	Voltage above normal, or shorted to high source
298 1388 4	Auxiliary pressure sensor input 2 circuit	Voltage below normal, or shorted to low source
322 651 5	Injector solenoid driver cylinder 1 circuit	Current below normal or open circuit
324 653 5	Injector solenoid driver cylinder 3 circuit	Current below normal or open circuit
331 652 5	Injector solenoid driver cylinder 2 circuit	Current below normal or open circuit
332 654 5	Injector solenoid driver cylinder 4 circuit	Current below normal or open circuit
334 110 2	Engine coolant temperature	Data erratic, intermittent or incorrect
343 629 12	Engine control module warning internal hardware failure	Bad intelligent device or component
349 191 16	Transmission output shaft speed	Data valid but above normal operating range - moderately severe level
351 3597 12	Injector power supply	Bad intelligent device or component
352 3509 4	Sensor supply 1 circuit	Voltage below normal, or shorted to low source
386 3509 3	Sensor supply 1 circuit	Voltage above normal, or shorted to high source
415 100 1	Engine oil rifle pressure	Data valid but below normal operational range - most severe level

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
418 97 15	Water in fuel indicator	Data valid but above normal operating range - least severe level
428 97 3	Water in fuel indicator sensor circuit	Voltage above normal, or shorted to high source
429 97 4	Water in fuel indicator sensor circuit	Voltage below normal, or shorted to low source
431 558 2	Accelerator pedal or lever idle validation switch	Data erratic, intermittent or incorrect
432 558 13	Accelerator pedal or lever idle validation switch circuit	Out of calibration
435 100 2	Engine oil rifle pressure	Data erratic, intermittent or incorrect
451 157 3	Injector metering rail 1 pressure sensor circuit	Voltage above normal, or shorted to high source
452 157 4	Injector metering rail 1 pressure sensor circuit	Voltage below normal, or shorted to low source
488 105 16	Intake manifold 1 temperature	Data valid but above normal operating range - moderately severe level
489 191 18	Transmission output shaft speed	Data valid but below normal operating range - moderately severe level
497 1377 2	Multiple unit synchronization switch	Data erratic, intermittent or incorrect
515 3514 3	Sensor supply 6 circuit	Voltage above normal, or shorted to high source
516 3514 4	Sensor supply 6 circuit	Voltage below normal, or shorted to low source
527 702 3	Auxiliary input/output 2 circuit	Voltage above normal, or shorted to high source
529 703 3	Auxiliary input/output 3 circuit	Voltage above normal, or shorted to high source
553 157 16	Injector metering rail 1 pressure	Data valid but above normal operating range - moderately severe level

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
559 157 18	Injector metering rail 1 pressure	Data valid but below normal operating range - moderately severe level
584 677 3	Starter relay driver circuit	Voltage above normal, or shorted to high source
585 677 4	Starter relay driver circuit	Voltage below normal, or shorted to low source
599 640 14	Auxiliary commanded dual output shutdown	Special instructions
611 1383 31	Engine shut down hot	Condition exists
649 1378 31	Engine oil change interval	Condition exists
687 103 18	Turbocharger 1 speed	Data valid but below normal operating range - moderately severe level
689 190 2	Engine crankshaft speed/position	Data erratic, intermittent or incorrect
691 1172 3	Turbocharger 1 compressor intake temperature circuit	Voltage above normal, or shorted to high source
692 1172 4	Turbocharger 1 compressor intake temperature circuit	Voltage below normal, or shorted to low source
693 1172 7	Turbocharger 1 compressor intake temperature	Data erratic, intermittent or incorrect
731 723 7	Engine speed / position camshaft and crankshaft misalignment	Mechanical system not responding or out of adjustment
741 1176 3	Turbocharger 1 compressor intake pressure circuit	Voltage above normal, or shorted to high source
742 1176 4	Turbocharger 1 compressor intake pressure circuit	Voltage below normal, or shorted to low source
743 1176 2	Turbocharger 1 compressor intake pressure	Data erratic, intermittent or incorrect

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
769 597 3	Brake switch circuit	Voltage above normal, or shorted to high source
771 597 4	Brake switch circuit	Voltage below normal, or shorted to low source
778 723 2	Engine camshaft speed / position sensor	Data erratic, intermittent or incorrect
1117 3597 2	Power supply lost with ignition on	Data erratic, intermittent or incorrect
1239 2623 3	Accelerator pedal or lever position sensor 2 circuit	Voltage above normal, or shorted to high source
1241 2623 4	Accelerator pedal or lever position sensor 2 circuit	Voltage below normal, or shorted to low source
1242 91 2	Accelerator pedal or lever position sensor 1	Data erratic, intermittent or incorrect
1358 91 3	Accelerator pedal or lever position sensor 1 circuit	Voltage above normal, or shorted to high source
1359 91 4	Accelerator pedal or lever position sensor 1 circuit	Voltage below normal, or shorted to low source
1515 91 19	SAE J1939 multiplexed accelerator pedal or lever sensor system	Received network data in error
1539 1387 3	Auxiliary pressure sensor input 1 circuit	Voltage above normal, or shorted to high source
1621 1387 4	Auxiliary pressure sensor input 1 circuit	Voltage below normal, or shorted to low source
1668 1761 4	Aftertreatment 1 diesel exhaust fluid tank level sensor circuit	Voltage below normal, or shorted to low source
1669 1761 3	Aftertreatment 1 diesel exhaust fluid tank level sensor circuit	Voltage above normal, or shorted to high source
1673 1761 1	Aftertreatment 1 diesel exhaust fluid tank level	Data valid but below normal operational range -most severe level
1677 3031 4	Aftertreatment 1 diesel exhaust fluid tank temperature sensor	Voltage below normal, or shorted to low source

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
1678 3031 3	Aftertreatment 1 diesel exhaust fluid tank temperature sensor	Voltage above normal, or shorted to high source
1679 3031 2	Aftertreatment 1 diesel exhaust fluid tank temperature	Data erratic, intermittent or incorrect
1682 3362 31	Aftertreatment 1 diesel exhaust fluid dosing unit input lines	Condition exists
1685 3364 4	Aftertreatment diesel exhaust fluid quality sensor circuit	Voltage below normal, or shorted to low source
1686 3364 3	Aftertreatment diesel exhaust fluid quality sensor circuit	Voltage above normal, or shorted to high source
1695 3513 3	Sensor supply 5	Voltage above normal, or shorted to high source
1696 3513 4	Sensor supply 5	Voltage below normal, or shorted to low source
1713 3363 16	Aftertreatment 1 diesel exhaust fluid tank heater	Data valid but above normal operating range - moderately severe level
1714 3364 13	Aftertreatment diesel exhaust fluid quality	Out of calibration
1715 3364 11	Aftertreatment diesel exhaust fluid quality	Root cause not known
1843 101 3	Crankcase pressure circuit	Voltage above normal, or shorted to high source
1844 101 4	Crankcase pressure circuit	Voltage below normal, or shorted to low source
1852 97 16	Water in fuel indicator	Data valid but above normal operating range - moderately severe level
1879 3251 3	Aftertreatment diesel particulate filter differential pressure sensor circuit	Voltage above normal
1881 3251 4	Aftertreatment diesel particulate filter differential pressure sensor circuit	Voltage below normal
1883 3251 2	Aftertreatment diesel particulate filter differential pressure sensor	Data erratic, intermittent or incorrect

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
1885 3216 4	Aftertreatment 1 intake NOx sensor circuit	Voltage below normal, or shorted to low source
1887 3226 4	Aftertreatment 1 outlet NOx sensor circuit	Voltage below normal, or shorted to low source
1921 3251 16	Aftertreatment diesel particulate filter differential pressure	Data valid but above normal operating range
1922 3251 0	Aftertreatment diesel particulate filter differential pressure	Data valid but above normal operating range
1993 4795 31	Aftertreatment 1 diesel particulate filter missing	Condition exists
2185 3512 3	Sensor supply 4 circuit	Voltage above normal, or shorted to high source
2186 3512 4	Sensor supply 4 circuit	Voltage below normal, or shorted to low source
2311 633 31	Electronic fuel injection control valve circuit	Condition exists
2321 190 2	Engine crankshaft speed/position	Data erratic, intermittent or incorrect
2322 723 2	Engine camshaft speed / position sensor	Data erratic, intermittent or incorrect
2373 1209 3	Exhaust gas pressure sensor 1 circuit	Voltage above normal, or shorted to high source
2374 1209 4	Exhaust gas pressure sensor 1 circuit	Voltage below normal, or shorted to low source
2448 111 17	Coolant level	Data valid but below normal operating range - least severe level
2468 190 16	Engine speed	Engine crankshaft speed/position - data valid but above normal operating range - moderately severe level
2554 1209 2	Exhaust gas pressure 1	Data erratic, intermittent or incorrect
2557 697 3	Auxiliary PWM driver 1 circuit	Voltage above normal, or shorted to high source

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
2558 697 4	AuxiliaryPWM driver 1 circuit	Voltage below normal, or shorted to low source
2571 2630 3	Engine charge air cooler outlet temperature	Voltage above normal, or shorted to high source
2572 2630 4	Engine charge air cooler outlet temperature	Voltage below normal, or shorted to low source
2639 3251 15	Aftertreatment diesel particulate filter differential pressure	Data valid but above normal operating range
2765 1209 16	Engine injector group 1	Engine injector bank 1 barcodes - out of calibration
2771 3226 9	Aftertreatment 1 outlet NOx sensor	Abnormal update rate
2778 3481 16	Aftertreatment fuel rate	Data valid but above normal operating range - moderately severe level
2973 102 2	Intake manifold 1 pressure	Data erratic, intermittent or incorrect
2976 3361 2	Aftertreatment 1 diesel exhaust fluid dosing unit temperature	Data erratic, intermittent or incorrect
3133 3610 3	Aftertreatment 1 diesel particulate filter outlet pressure sensor circuit	Voltage above normal, or shorted to high source
3134 3610 4	Aftertreatment 1 diesel particulate filter outlet pressure sensor circuit	Voltage below normal, or shorted to low source
3135 3610 2	Aftertreatment 1 diesel particulate filter outlet pressure	Data erratic, intermittent or incorrect
3139 3667 3	Engine air shutoff circuit	Voltage above normal, or shorted to high source
3141 3667 4	Engine air shutoff circuit	Voltage below normal, or shorted to low source
3142 4360 3	Aftertreatment 1 SCR intake temperature sensor circuit	Voltage above normal, or shorted to high source
3144 4360 2	Aftertreatment 1 SCR intake temperature sensor	Data erratic, intermittent or incorrect

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
3146 4363 3	Aftertreatment 1 SCR outlet temperature sensor circuit	Voltage above normal, or shorted to high source
3147 4363 4	Aftertreatment 1 SCR outlet temperature sensor circuit	Voltage below normal, or shorted to low source
3148 4363 2	Aftertreatment 1 SCR outlet temperature sensor	Data erratic, intermittent or incorrect
3151 4974 31	Aftertreatment 1 SCR catalyst system missing	Condition exists
3165 4363 0	Aftertreatment 1 SCR outlet temperature	Data valid but above normal operational range - most severe
3232 3216 9	Aftertreatment 1 intake NOx sensor	Abnormal update rate
3235 4363 16	Aftertreatment 1 SCR outlet temperature	Data valid but above normal operating range - moderately severe level
3251 4765 16	Aftertreatment 1 diesel oxidation catalyst intake temperature	Data valid but above normal operating range
3253 3242 16	Aftertreatment 1 diesel particulate filter intake temperature	Data valid but above normal operating range
3254 3242 16	Aftertreatment 1 diesel particulate filter intake temperature	Data valid but above normal operating range
3255 3246 16	Aftertreatment 1 diesel particulate filter outlet temperature	Data valid but above normal operating range
3311 3242 0	Aftertreatment 1 diesel particulate filter intake temperature	Data valid but above normal operation
3312 3246 0	Aftertreatment 1 diesel particulate filter outlet temperature	Data valid but above normal operation
3313 4765 4	Aftertreatment 1 diesel oxidation catalyst intake temperature sensor circuit	Voltage below normal, or shorted to low source
3314 4765 3	Aftertreatment 1 diesel oxidation catalyst intake temperature sensor circuit	Voltage above normal, or shorted to high source
3315 4765 2	Aftertreatment 1 diesel oxidation catalyst intake temperature	Data erratic, intermittent or incorrect

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
3316 3242 4	Aftertreatment 1 diesel particulate filter intake temperature sensor circuit	Voltage below normal, or shorted to low source
3317 3242 3	Aftertreatment 1 diesel particulate filter intake temperature sensor circuit	Voltage above normal, or shorted to high source
3318 3242 2	Aftertreatment 1 diesel particulate filter intake temperature	Data erratic, intermittent or incorrect
3319 3246 3	Aftertreatment 1 diesel particulate filter outlet temperature sensor circuit	Voltage above normal, or shorted to high source
3321 3246 4	Aftertreatment 1 diesel particulate filter outlet temperature sensor circuit	Voltage below normal, or shorted to low source
3322 3246 2	Aftertreatment 1 diesel particulate filter outlet temperature	Data erratic, intermittent or incorrect
3326 91 9	SAE J1939 multiplexed accelerator pedal or lever sensor system	Abnormal update rate
3341 107 16	Engine air filter differential pressure - data valid but above normal operating range	Moderately severe level
3375 5397 31	Aftertreatment diesel particulate filter regeneration too frequent	Condition exists
3376 5319 31	Aftertreatment diesel particulate filter incomplete regeneration	Condition exists
3497 1761 17	Aftertreatment 1 diesel exhaust fluid tank level	Data valid but below normal operating range - least severe level
3498 1761 18	Aftertreatment 1 diesel exhaust fluid tank level	Data valid but below normal operating range - moderately severe level
3527 558 19	Accelerator pedal or lever idle validation switch	Received network data in error
3528 558 9	Accelerator pedal or lever idle validation switch	Abnormal update rate
3545 3226 31	Aftertreatment 1 outlet NOx sensor	Abnormal rate of change
3547 4096 31	Aftertreatment diesel exhaust fluid tank empty	Condition exists

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
3558 3361 3	Aftertreatment 1 diesel exhaust fluid dosing unit	Voltage above normal, or shorted to high source
3559 3361 4	Aftertreatment 1 diesel exhaust fluid dosing unit	Voltage below normal, or shorted to low source
3567 5394 5	Aftertreatment diesel exhaust fluid dosing valve	Current below normal or open circuit
3568 5394 7	Aftertreatment diesel exhaust fluid dosing valve	Mechanical system not responding or out of adjustment
3571 4334 3	Aftertreatment 1 diesel exhaust fluid pressure sensor	Voltage above normal, or shorted to high source
3572 4334 4	Aftertreatment 1 diesel exhaust fluid pressure sensor	Voltage below normal, or shorted to low source
3574 4334 18	Aftertreatment 1 diesel exhaust fluid pressure sensor	Data valid but below normal operating range
3575 4334 16	Aftertreatment 1 diesel exhaust fluid pressure sensor	Data valid but above normal operating range
3577 4376 3	Aftertreatment diesel exhaust fluid return valve	Voltage above normal, or shorted to high source
3578 4376 4	Aftertreatment diesel exhaust fluid return valve	Voltage above normal, or shorted to low source
3583 5031 10	Aftertreatment 1 outlet nox sensor heater	Abnormal rate of change
3596 4334 2	Aftertreatment 1 diesel exhaust fluid pressure sensor	Data erratic, intermittent or incorrect
3641 748 9	Transmission output retarder	Abnormal update rate
3649 5024 10	Aftertreatment 1 intake NOx sensor heater	Abnormal rate of change
3681 3228 2	Aftertreatment 1 outlet NOx sensor power supply	Data erratic, intermittent or incorrect
3682 3218 2	Aftertreatment 1 intake NOx sensor power supply	Data erratic, intermittent or incorrect

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
3697 630 12	Engine control module calibration memory	Bad intelligent device or component
3712 5246 0	Aftertreatment SCR operator inducement	Data valid but above normal operational range - most severe level
3714 1569 31	Engine protection torque derate	Condition exists
3725 3216 10	Aftertreatment 1 intake NOx sensor	Abnormal rate of change
3727 5571 7	High pressure common rail fuel pressure relief valve	Mechanical system not responding or out of adjustment
3737 1675 31	Engine starter mode overcrank protection	Condition exists
3741 5571 0	High pressure common rail fuel pressure relief valve	Data valid but above normal operational range
3748 3216 20	Aftertreatment 1 intake NOx sensor	Data not rational - drifted high
3765 442 3	Auxiliary temperature sensor input 2 circuit	Voltage above normal, or shorted to high source
3766 442 4	Auxiliary temperature sensor input 2 circuit	Voltage below normal, or shorted to low source
3838 2978 9	Estimated engine parasitic losses - percent torque	Abnormal update rate
3841 596 2	Cruise control enable switch	Data erratic, intermittent or incorrect
3843 5603 9	Cruise control disable command	Abnormal update rate
3845 5603 31	Cruise control disable command	Condition exists
3866 3364 1	Aftertreatment diesel exhaust fluid quality	Data valid but below normal operational range - most severe level
3868 3364 9	Aftertreatment diesel exhaust fluid quality	Abnormal update rate

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
3878 3364 2	Aftertreatment diesel exhaust fluid quality	Data erratic, intermittent or incorrect
4151 5742 9	Aftertreatment diesel particulate filter temperature sensor module	Abnormal update rate
4152 5743 9	Aftertreatment selective catalytic reduction temperature sensor module	Abnormal update rate
4156 5746 4	Aftertreatment 1 diesel exhaust fluid dosing unit heater relay	Voltage below normal, or shorted to low source
4158 5742 12	Aftertreatment diesel particulate filter temperature sensor module	Bad intelligent device or component
4159 5743 12	Aftertreatment selective catalytic reduction temperature sensor module	Bad intelligent device or component
4161 5742 3	Aftertreatment diesel particulate filter temperature sensor module	Voltage above normal, or shorted to high source
4162 5742 4	Aftertreatment diesel particulate filter temperature sensor module	Voltage below normal, or shorted to low source
4163 5742 16	Aftertreatment diesel particulate filter temperature sensor module	Data valid but above normal operating range
4164 5743 3	Aftertreatment selective catalytic reduction temperature sensor module	Voltage above normal, or shorted to high source
4165 5743 4	Aftertreatment selective catalytic reduction temperature sensor module	Voltage below normal, or shorted to low source
4166 5743 16	Aftertreatment selective catalytic reduction temperature sensor module	Data valid but above normal
4168 5745 3	Aftertreatment 1 diesel exhaust fluid dosing unit heater	Voltage above normal, or shorted to high source
4169 5745 4	Aftertreatment 1 diesel exhaust fluid dosing unit heater	Voltage below normal, or shorted to low source
4249 4337 10	Aftertreatment 1 diesel exhaust fluid dosing temperature	Abnormal rate of change
4251 5798 10	Aftertreatment 1 diesel exhaust fluid dosing unit heater temperature	Abnormal rate of change

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
4259 5742 11	Aftertreatment diesel particulate filter temperature sensor module	Root cause not known
4261 5743 11	Aftertreatment selective catalytic reduction temperature sensor module	Root cause not known
4277 3364 10	Aftertreatment diesel exhaust fluid quality	Abnormal rate of change
4284 5793 9	Desired engine fueling state	Abnormal update rate
4452 3226 7	Aftertreatment 1 outlet NOx sensor closed loop operation	Condition exists
4484 3667 7	Engine air shutoff	Mechanical system not responding or out of Adjustment
4526 521 2	Brake pedal position	Data erratic, intermittent or incorrect
4572 3031 9	Aftertreatment 1 diesel exhaust fluid tank temperature	Abnormal update rate
4584 3936 14	Aftertreatment diesel particulate filter system	Special instructions
4585 4792 14	Aftertreatment 1 SCR catalyst system	Special instructions
4677 1761 9	SAE J1939 multiplexing pgn timeout error	Abnormal update rate
4724 702 5	Auxiliary input/output 2 circuit	Current below normal or open circuit
4725 702 6	Auxiliary input/output 2 circuit	Current above normal or grounded circuit
4731 3031 13	Aftertreatment 1 diesel exhaust fluid tank temperature sensor	Out of calibration
4734 701 14	Auxiliary input/output 1	Special instructions
4737 3031 11	Aftertreatment 1 diesel exhaust fluid tank temperature	Root cause not known

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
4739 1761 11	Aftertreatment 1 diesel exhaust fluid tank level sensor	Root cause not known
4747 3217 20	Aftertreatment intake oxygen sensor	Data not rational - drifted high
4748 3217 21	Aftertreatment intake oxygen sensor	Data not rational - drifted low
4749 3227 20	Aftertreatment outlet oxygen	Data not rational - drifted high
4751 3227 21	Aftertreatment outlet oxygen	Data not rational - drifted low
4768 3521 11	Aftertreatment 1 diesel exhaust fluid property	Root cause not known
4769 1761 10	Aftertreatment 1 diesel exhaust fluid tank level sensor	Abnormal rate of change
4842 3364 15	Aftertreatment diesel exhaust fluid quality	Data valid but above normal operating range - Least severe level
4863 5245 31	Aftertreatment diesel exhaust fluid tank low level indicator	-
4953 3353 3	Alternator 1 status	Voltage above normal, or shorted to high source
4954 3353 4	Alternator 1 status	Voltage below normal, or shorted to low source
5248 1623 13	Tachograph output shaft speed	Out of calibration
5272 649 4	Engine exhaust back pressure regulator control circuit	Voltage below normal, or shorted to low source
5273 649 5	Engine exhaust back pressure regulator control circuit	Current below normal or open circuit
5274 5625 2	Engine exhaust back pressure regulator position	Data erratic, intermittent or incorrect
5275 5625 3	Engine exhaust back pressure regulator position sensor circuit	Voltage above normal, or shorted to high source

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
5276 5625 4	Engine exhaust back pressure regulator position sensor circuit	Voltage above normal, or shorted to low source
5292 520809 31	Excessive time since last engine air shutoff maintenance test	Condition exists
5383 3720 15	Aftertreatment 1 diesel particulate filter ash load percent	Data valid but above normal operating range - least severe level
5576 107 15	Engine air filter differential pressure	Data valid but above normal operating range - least severe level
5632 6918 31	SCR system cleaning inhibited due to inhibit switch	Condition exists
5652 1209 15	Exhaust pressure 1	Data valid but above normal operating range - least severe level
5653 6881 9	SCR operator inducement override switch	Abnormal update rate
5654 6881 13	SCR operator inducement override switch	Out of calibration
5655 4364 31	Aftertreatment 1 scr conversion efficiency	Condition exists
5689 3226 11	Aftertreatment 1 outlet nox sensor	Root cause not known
5715 3521 10	Aftertreatment 1 diesel particulate filter differential pressure	Abnormal rate of change
5716 3610 10	Aftertreatment 1 diesel particulate filter outlet pressure	Abnormal rate of change
5864 4375 3	Aftertreatment 1 diesel exhaust fluid pump command circuit	Voltage above normal or shorted to high source
5865 4375 4	Aftertreatment 1 diesel exhaust fluid pump command circuit	Voltage below normal or shorted to low source
5868 4339 7	Aftertreatment 1 scr feedback control status	Mechanical system not responding or out of adjustment
5935 4334 7	Aftertreatment 1 diesel exhaust fluid pressure	Mechanical system not responding or out of adjustment

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
5936 4334 15	Aftertreatment 1 diesel exhaust fluid pressure	Data valid but above normal operating range - least severe level
5938 3750 14	Aftertreatment 1 diesel particulate filter conditions not met for active regeneration	Special instructions
5939 520968 9	Machine constrained operation	Abnormal update rate. No communication or an Invalid data transfer rate has been detected on the J1939 data link between the ECM and the machine
5941 520968 19	Machine constrained operation	Received network data in error. The received J1939 datalink message was not valid.
6256 168 15	Battery 1 voltage	Data valid but below normal operating range - moderately severe level
6257 168 17	Battery 1 voltage	Data valid but below normal operating range - moderately severe level
6263 647 3	Fan control circuit	Voltage above normal, or shorted to high source
6264 647 4	Fan control circuit	Voltage below normal, or shorted to low source
6456 5484 3	Engine fan clutch 2 control circuit	Voltage above normal, or shorted to high source
6457 5484 4	Engine fan clutch 2 control circuit	Voltage below normal, or shorted to low source
6467 1639 15	Fan speed	Data valid but above normal operational range - most severe level
6468 1639 17	Fan speed	Data valid but below normal operational range - most severe level
6471 6799 3	Fan blade pitch position sensor circuit	Voltage above normal, or shorted to high source
6472 6799 4	Fan blade pitch position sensor circuit	Voltage below normal, or shorted to low source
6475 3363 7	Aftertreatment 1 diesel exhaust fluid tank heater	Mechanical system not responding or out of adjustment
6476 3363 18	Aftertreatment 1 diesel exhaust fluid tank heater	Data valid but below normal operating range - moderately severe level

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
6477 5491 3	Aftertreatment diesel exhaust fluid line heater relay	Voltage above normal, or shorted to high source
6478 5491 4	Aftertreatment diesel exhaust fluid line heater relay	Voltage below normal, or shorted to low source
6479 3363 3	Aftertreatment 1 diesel exhaust fluid tank heater	Voltage above normal, or shorted to high source
6481 3363 4	Aftertreatment 1 diesel exhaust fluid tank heater	Voltage below normal, or shorted to low source
6511 6655 3	Maintain ECM power lamp	Voltage above normal, or shorted to high source
6512 6655 4	Maintain ECM power lamp	Voltage below normal, or shorted to low source
6513 5745 17	Aftertreatment 1 diesel exhaust fluid dosing unit heater	Data valid but below normal operating range
6522 111 3	Coolant level sensor 1 circuit	Voltage above normal, or shorted to high source
6523 111 4	Coolant level sensor 1 circuit	Voltage below normal, or shorted to low source
6526 1761 13	Aftertreatment 1 diesel exhaust fluid tank level sensor	Out of calibration
6527 4376 7	Aftertreatment diesel exhaust fluid return valve	Mechanical system not responding or out of adjust
6529 5746 3	Aftertreatment 1 diesel exhaust fluid dosing unit heater relay	Voltage above normal, or shorted to high source
6531 4340 3	Aftertreatment 1 diesel exhaust fluid line heater 1 circuit	Voltage above normal, or shorted to high source
6532 4340 4	Aftertreatment 1 diesel exhaust fluid line heater 1 circuit	Voltage below normal, or shorted to low source
6533 4342 3	Aftertreatment 1 diesel exhaust fluid line heater 2 circuit	Voltage above normal, or shorted to high source
6534 4342 4	Aftertreatment 1 diesel exhaust fluid line heater 2 circuit	Voltage below normal, or shorted to low source

※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
6535 4344 3	Aftertreatment diesel exhaust fluid line heater 3 circuit	Voltage above normal, or shorted to high source
6536 4344 4	Aftertreatment diesel exhaust fluid line heater 3 circuit	Voltage below normal, or shorted to low source
6556 729 3	Engine intake air heater 1 circuit	Voltage above normal, or shorted to high source
6557 729 4	Engine intake air heater 1 circuit	Voltage below normal, or shorted to low source
6563 976 2	Auxiliary intermediate (PTO) speed switch validation	Data erratic, intermittent or incorrect
6568 3695 2	Aftertreatment regeneration inhibit switch	Data erratic, intermittent or incorrect
6583 441 14	Auxiliary temperature sensor input 1	Special instructions
6584 1388 14	Auxiliary pressure sensor input 2	Special instructions
6595 190 11	Engine speed	Root cause not known
6596 3713 31	Diesel particulate filter active regeneration inhibited due to system timeout	Condition exists
6599 521002 31	Engine cranks slowly	Condition exists
6611 6385 3	Engine starter motor relay control circuit	Voltage above normal or shorted to high source
6612 6385 4	Engine starter motor relay control circuit	Voltage below normal or shorted to low source
6613 5842 14	SCR monitoring system malfunction	Special instructions
6618 70 2	Parking brake switch	Data erratic, intermittent, or incorrect
6619 3515 10	Aftertreatment 1 diesel exhaust fluid temperature 2	Abnormal rate of change


※ Some fault codes are not applied to this machine.

Fault code J1939 SPN J1939 FMI	Item	Description
6654 5626 7	Engine exhaust back pressure regulator	Mechanical system not responding or out of adjustment
6726 4796 31	Aftertreatment 1 diesel oxidation catalyst missing	Condition exists
6752 3364 18	Aftertreatment diesel exhaust fluid quality	Data valid but below normal operating range - moderately severe level
6771 521032 14	Aftertreatment system assembly	Special instructions
6938 5793 9	Desired engine fueling state	Abnormal update rate
6939 7745 9	Engine start request	Abnormal update rate
7133 7745 13	Engine start request	Out of calibration
7134 7746 13	Engine start consent	Out of calibration
7135 103 15	Engine turbocharger speed	Data valid but above normal operating range - least severe level
7745 1569 14	Engine protection torque derate	Special instructions
7393 7745 9	Engine start request	Abnormal update rate
7453 3242 15	Aftertreatment 1 diesel particulate filter intake temperature	Data valid but above normal operating range - least severe level
7454 3246 15	Aftertreatment 1 diesel particulate filter outlet temperature	Data valid but above normal operating range - least severe level

※ Some fault codes are not applied to this machine.

GROUP 13 ENGINE CONTROL SYSTEM

1. MCU AND ENGINE ECM

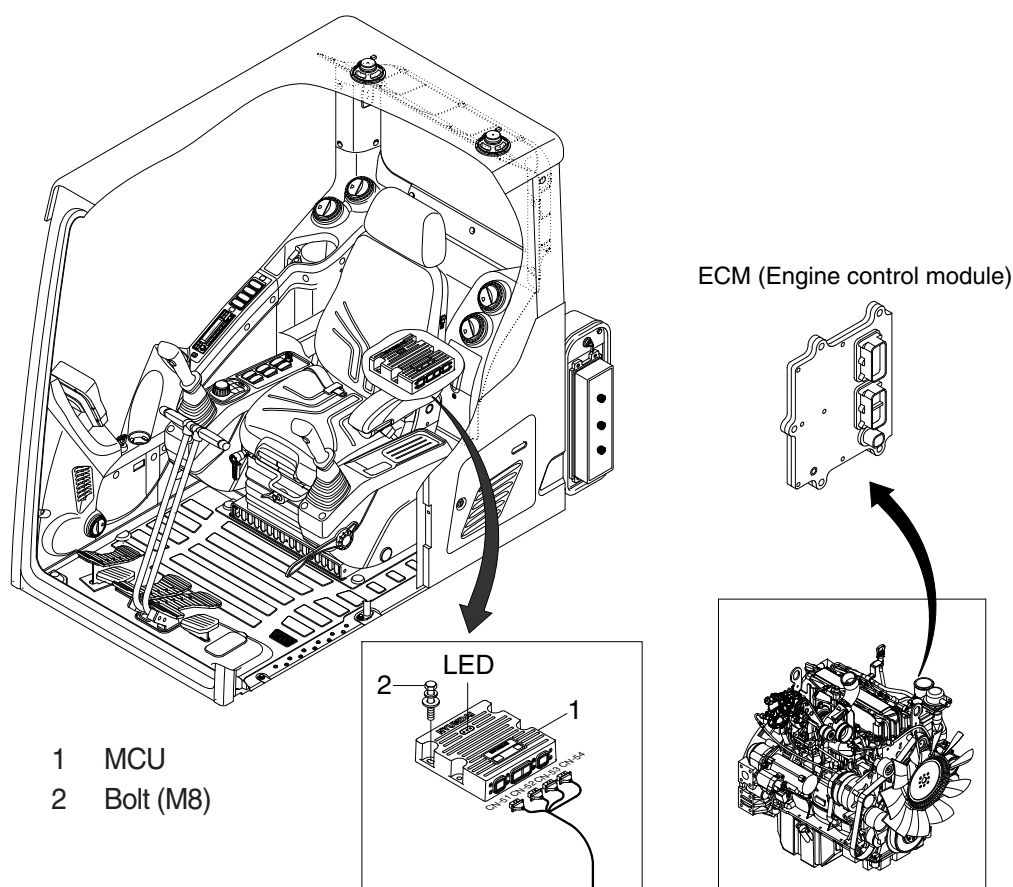

140A5MS13

2. MCU ASSEMBLY

1) To match the pump absorption torque with the engine torque, MCU varies EPPR valve output pressure, which control pump discharge amount whenever feedbacked engine speed drops under the reference rpm of each mode set.

2) Three LED lamps on the MCU display as below.

LED lamp	Trouble	Service
G is turned ON	Normal	-
G and R are turned ON	Trouble on MCU	· Change the MCU
G and Y are turned ON	Trouble on serial communication line	· Check if serial communication lines between MCU and cluster are disconnected
Three LED are turned OFF	Trouble on MCU power	· Check if the input power wire (24 V, GND) of MCU is disconnected · Check the fuse

G : green, R : red, Y : yellow

GROUP 14 EPPR VALVE

1. PUMP EPPR VALVE

1) COMPOSITION

EPPR (Electro Proportional Pressure Reducing) valve consists of electro magnet and spool valve installed at main pump.

(1) Electro magnet valve

Receive electric current from MCU and move the spool proportionally according to the specific amount of electric current value.


(2) Spool valve

Is the two way direction control valve for pilot pressure to reduce main pump flow.

When the electro magnet valve is activated, pilot pressure enters into flow regulator of main pump.

2) OPERATING PRINCIPLE (pump EPPR valve)

(1) Structure

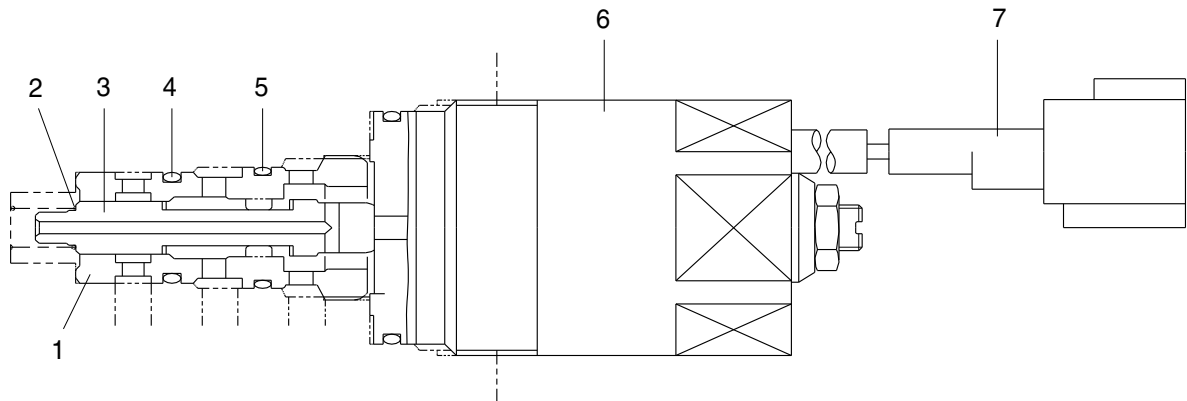


5-22(1)

- 1 Sleeve
- 2 Spring
- 3 Spool

- 4 O-ring
- 5 O-ring



- 6 Solenoid valve
- 7 Connector

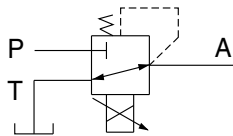

- P Pilot oil supply line (pilot pressure)
- T Return to tank
- A Secondary pressure to flow regulator at main pump



(2) Neutral

Pressure line is blocked and A oil returns to tank.

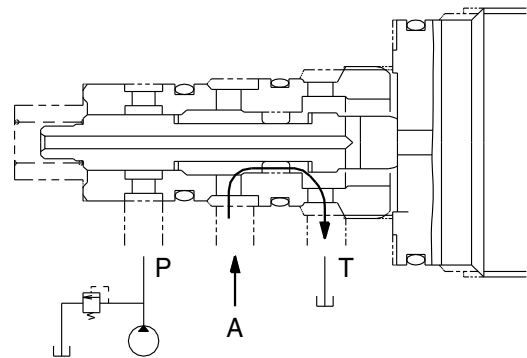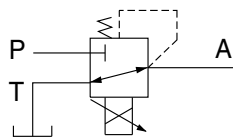

(3) Operating

Secondary pressure enters into A.

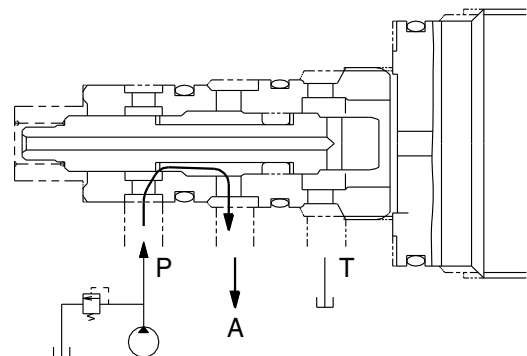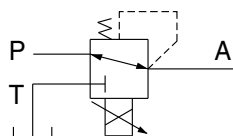


5-22(2)

3) EPPR VALVE CHECK PROCEDURE


(1) Check electric current value at EPPR valve

- ① Disconnect connector CN-75 from EPPR valve.
- ② Insert the adapter to CN-75 and install multimeter as figure.
- ③ Start engine.
- ④ Set S-mode and cancel auto decel mode.
- ⑤ Position the multimodal dial at 10.
- ⑥ If rpm display show approx 1750 ± 50 rpm check electric current at bucket circuit relief position.
- ⑦ Check electric current at bucket circuit relief position.

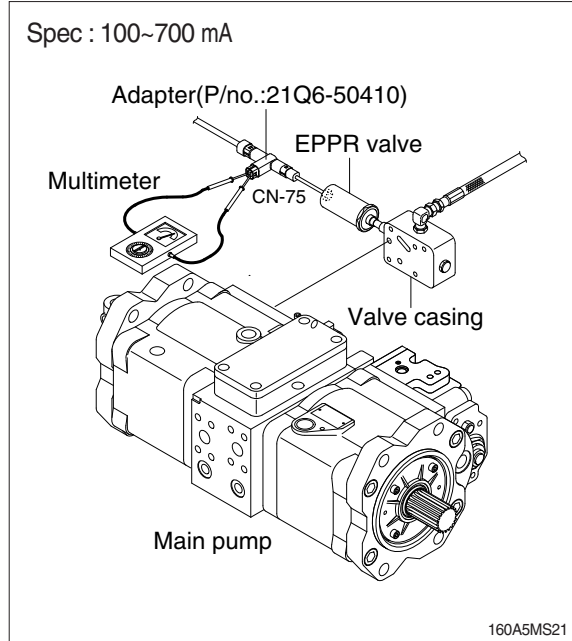

(2) Check pressure at EPPR valve

- ① Start engine.
- ② Set S-mode and cancel auto decel mode.
- ③ Position the multimodal dial at 10.
- ④ Slowly operate control lever of bucket functions at full stroke over relief and measure the EPPR valve pressure by the the monitoring menu of the cluster.
- ⑤ If pressure is not correct, adjust it.
- ⑥ After adjust, test the machine.

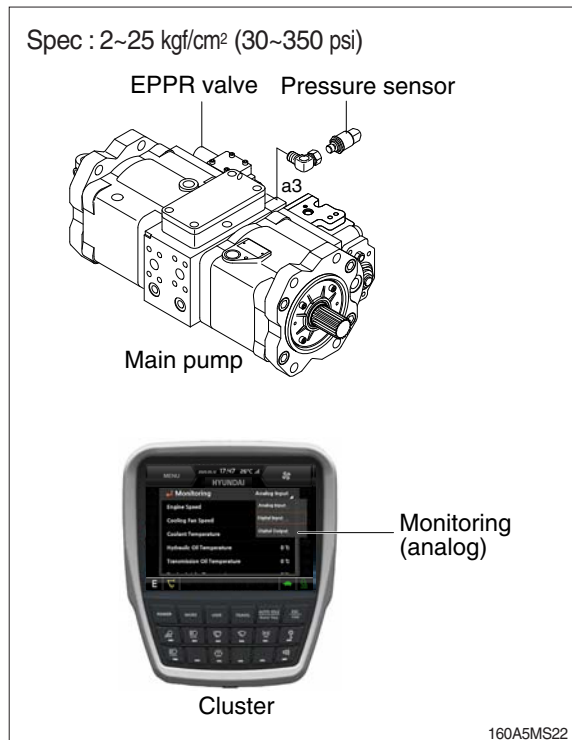

2. BOOM PRIORITY EPPR VALVE

1) COMPOSITION

The boom priority EPPR valve is built in a manifold and mainly consisting of valve body and coil.


This EPPR valve installed under the solenoid valve.

2) CONTROL


The boom priority EPPR valve has to be controlled by a specific electronic amplifier card, which is supplying the coil with a current 580 mA at 30Ω and 24 V.

3) OPERATING PRINCIPLE

(1) Structure

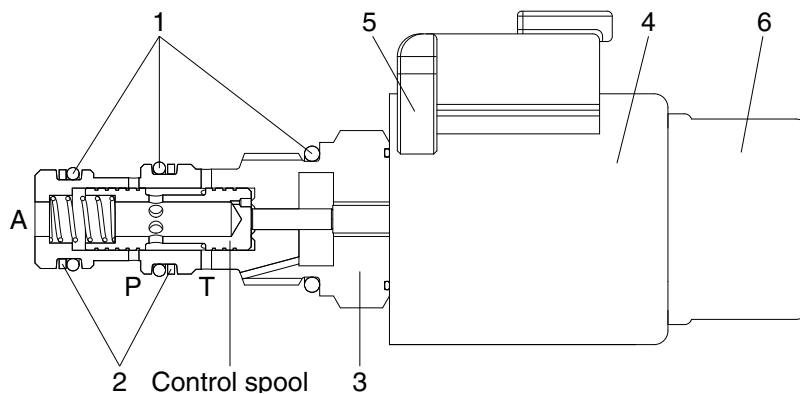

21095MS14

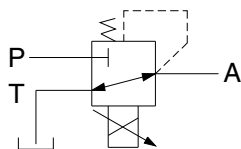

P : Pilot supply line

T : Return to tank

A : Secondary pressure to flow MCV

- | | | | | | |
|---|--------------|---|------------|---|-----------|
| 1 | O-ring | 3 | Valve body | 5 | Connector |
| 2 | Support ring | 4 | Coil | 6 | Cover cap |

(2) Operation

In de-energized mode the inlet port (P) is closed and the outlet port (A) is connected to tank port (T).

In energized mode the solenoid armature presses onto the control spool with a force corresponding to the amount of current. This will set a reduced pressure at port A. The setting is proportional to the amount of current applied.


(3) Maximum pressure relief

If a pressure from outside is applied on port A the valve may directly switch to tank port (T) and protect the system before overload.

4) EPPR VALVE CHECK PROCEDURE


(1) Check electric current value at EPPR valve

- ① Disconnect connector CN-133 from EPPR valve.
- ② Insert the adapter to CN-133 and install multimeter as figure.
- ③ Start engine.
- ④ Set S-mode and cancel auto decel mode.
- ⑤ If rpm display approx 1750 ± 50 rpm disconnect one wire harness from EPPR valve.
- ⑥ Check electric current in case of combined boom up and swing operation.

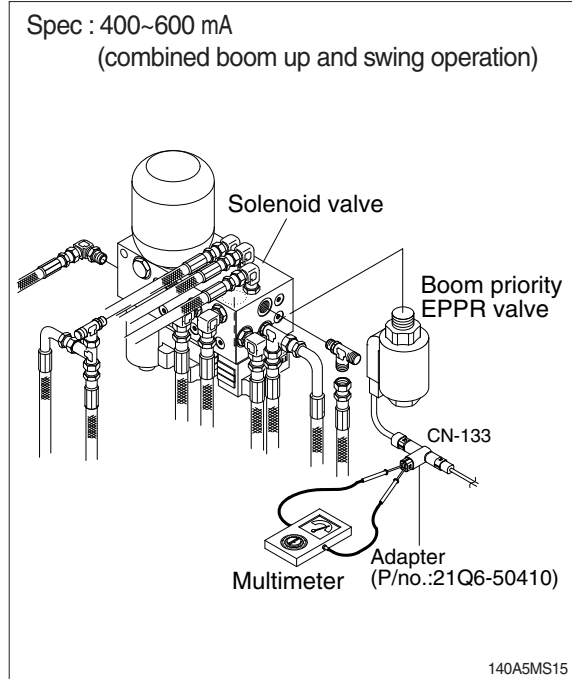

(2) Check pressure at EPPR valve

- ① Remove hose from A5 port and connect pressure gauge as figure.
 - Gauge capacity : 0 to 50 kgf/cm²
(0 to 725 psi)
- ② Start engine.
- ③ Set S-mode and cancel auto decel mode.
- ④ If rpm display approx 1750 ± 50 rpm check pressure (In case of combined boom up and swing operation).
- ⑤ If pressure is not correct, adjust it.
- ⑥ After adjust, test the machine.

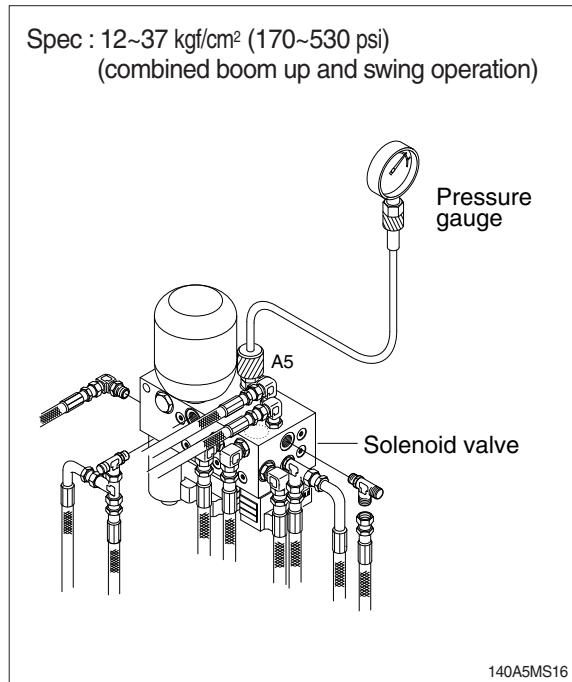

GROUP 15 MONITORING SYSTEM

1. OUTLINE

Monitoring system consists of the monitor part and switch part.

The monitor part gives warnings when any abnormality occurs in the machine and informs the condition of the machine.

Various select switches are built into the monitor panel, which act as the control portion of the machine control system.

2. CLUSTER

1) MONITOR PANEL




160A5CD20

※ The warning lamp pops up and/or blinks and the buzzer sounds when the machine has a problem.

The warning lamp blinks until the problem is cleared. Refer to page 5-73 for details.

※ This cluster is adjustable.

- Vertical (forward/backward) : each 15°
- Horizontal (left only) : 8°

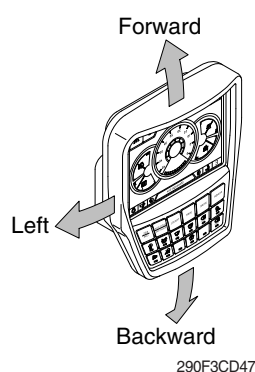

2) CLUSTER CHECK PROCEDURE

(1) Start key : ON

① Check monitor

- a. Buzzer sounding for 4 seconds with HYUNDAI logo on cluster.
- ※ If the ESL mode is set to the enable, enter the password to start engine.

② After initialization of cluster, the operating screen is displayed on the LCD.

Also, self diagnostic function is carried out.

- a. Engine rpm display : 0 rpm
- b. Engine coolant temperature gauge : White range
- c. Hydraulic oil temperature gauge : White range
- d. Fuel level gauge : White range

③ Indicating lamp state

- a. Power mode pilot lamp : E mode or U mode
- b. Work mode pilot lamp : General operation mode (bucket)
- c. Travel speed pilot lamp : Low (turtle)

(2) Start of engine

① Check machine condition

- a. RPM display indicates at present rpm
- b. Gauge and warning lamp : Indicate at present condition.
- ※ When normal condition : All warning lamp OFF
- c. Work mode selection : General work
- d. Power mode selection : E mode or U mode
- e. Travel speed pilot lamp : Low (turtle)

② When warming up operation

- a. Warming up pilot lamp : ON
- b. After engine started, engine speed increases 1200 rpm.
- ※ Others same as above.

③ When abnormal condition

- a. The warning lamp lights up and the buzzer sounds.
- b. If BUZZER STOP switch is pressed, buzzer sound is canceled but the lamp warning lights up until normal condition.
- ※ The pop-up warning lamp moves to the original position and blink when the buzzer stop switch is pushed. Also the buzzer stops.

3) CLUSTER CONNECTOR


(1) CN-56A

No.	Name	Signal
1	Battery 24V	20~32V
2	Power IG (24V)	20~32V
3	GND	-
4	CAN 1 (H)	0~5V
5	CAN 1 (L)	0~5V
6	CAN 2 (H)	0~5V
7	CAN 2 (L)	20~32V
8	NC	-
9	NC	-
10	Aux left	0~5V
11	Aux right	0~5V
12	Aux GND	-

(2) CN-56B

No.	Name	Signal
1	CAM 6.5V	6.3~6.7V
2	CAM GND	-
3	CAM DIFF (H)	0~5V
4	CAM DIFF (L)	0~5V
5	CAM 1	NTSC signal
6	CAM 2	NTSC signal
7	CAM 3	NTSC signal
8	CAM shield	0~5V

NTSC : National Television System Committee

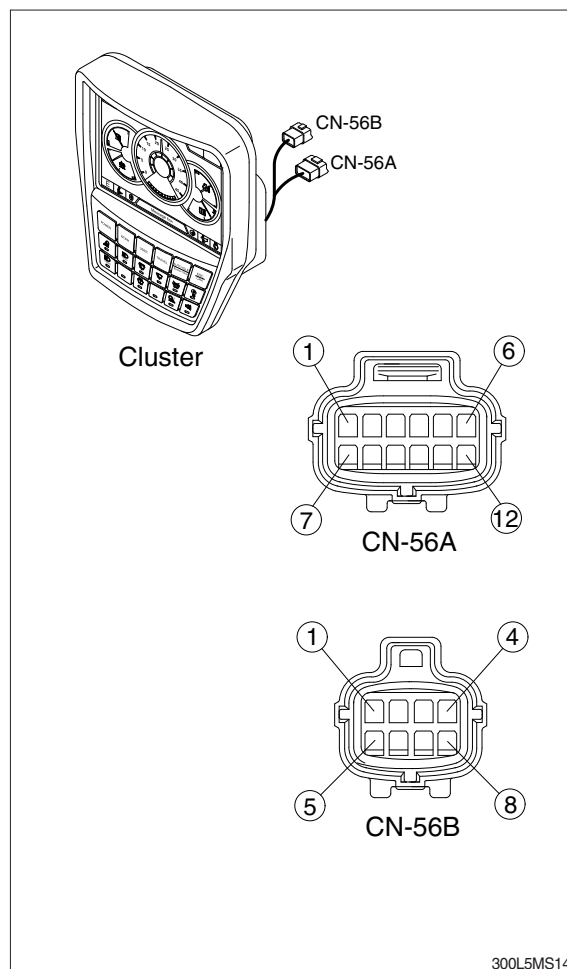

300L5MS14

4) GAUGE

(1) Operation screen


When you first turn starting switch ON, the operation screen will appear.



300A3CD21A

- | | |
|------------------------------------|---------------------------|
| 1 RPM / Speed gauge | 5 DEF/AdBlue® level gauge |
| 2 Engine coolant temperature gauge | 6 Tripmeter display |
| 3 Hydraulic oil temperature gauge | 7 Eco gauge |
| 4 Fuel level gauge | 8 Accel dial gauge |

(2) RPM / Speed gauge

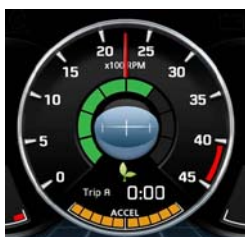



300A3CD22

- ① This displays the engine speed.


(3) Engine coolant temperature gauge





290F3CD53

- ① This gauge indicates the temperature of coolant.
- White range : 40-107°C (104-225°F)
 - Red range : Above 107°C (225°F)
- ② If the indicator is in the red range or  lamp pops up and the buzzer sounds, turn OFF the engine and check the engine cooling system.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is in the normal condition range, check the electric device as this can be caused by poor connection of sensor.

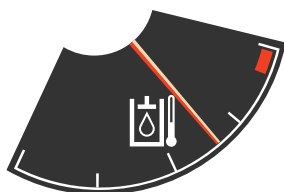
(4) Hydraulic oil temperature gauge





290F3CD54

- ① This gauge indicates the temperature of hydraulic oil.
 - White range : 40-105°C (104-221°F)
 - Red range : Above 105°C (221°F)
- ② If the indicator is in the red range or  lamp pops up and the buzzer sounds reduce the load on the system. If the gauge stays in the red range, stop the machine and check the cause of the problem.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is in the normal condition range, check the electric device as this can be caused by poor connection of electricity or sensor.

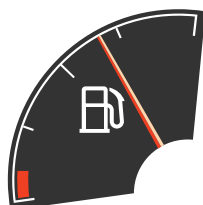(5) Fuel level gauge





290F3CD55

- ① This gauge indicates the amount of fuel in the fuel tank.
- ② Fill the fuel when in the red range, or  lamp pops up and the buzzer sounds.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition range, check the electric device as this can be caused by poor connection of electricity or sensor.

 
(6) DEF/AdBlue® Level gauge



290F3CD57

- ① This gauge indicates the amount of liquid in the DEF/AdBlue® tank.
- ② Fill the DEF/AdBlue® when in the red range, or  lamp pops up and the buzzer sounds.
- ③ Do not overfull DEF/AdBlue®.
- ※ Refer to page 5-78.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is in the normal condition range, check the electric device as this can be caused by poor connection of electricity or sensor.

(7) Tripmeter display



290F3CD56

- ① This displays the engine the tripmeter.
- ※ Refer to page 5-103 for details.

(8) Eco gauge



290F3CD58

- ① This gauge indicates the fuel consumption rate and machine load status so that the operators can operate the machine efficient in regards to fuel consumption.
- ② Fuel consumption rate or machine load is higher if the number of segments are increased.
- ③ The color of Eco gauge indicates operation status.
 - White : Idle operation
 - Green : Economy operation
 - Yellow : Non-economy operation at a medium level.
 - Red : Non-economy operation at a high level.


(9) Accel dial gauge



290F3CD59

- ① This gauge indicates the level of accel dial.

5) WARNING LAMPS

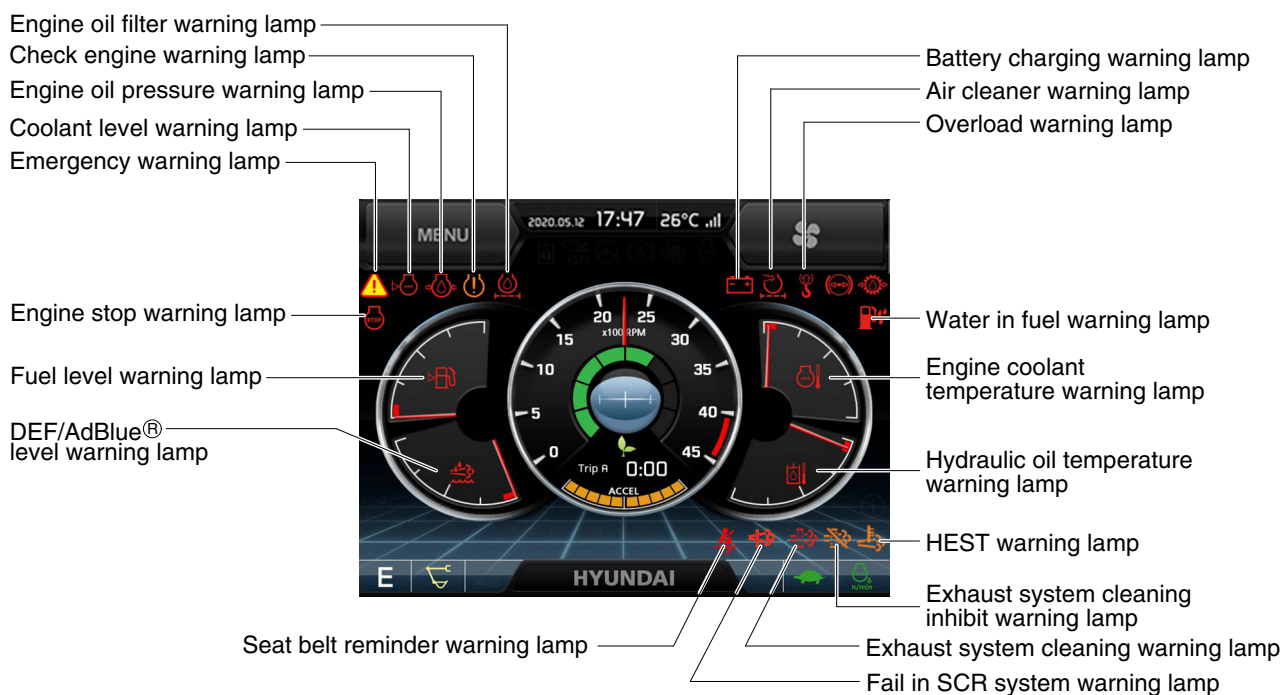

300A3CD23B

※ Warning lamps and buzzer


 





Warnings	When error happened	Lamps and buzzer
All warning lamps except below	Warning lamp pops up on the center of the LCD and the buzzer sounds	<ul style="list-style-type: none"> The pop-up warning lamp moves to the original position, blinks and the buzzer stops when; - the buzzer stop switch is pushed - the knob of the jog dial module is pushed - the lamp of the LCD is touched
	Warning lamp pops up on the center of the LCD and the buzzer sounds	<ul style="list-style-type: none"> The pop-up warning lamp moves to the original position, lights up or blinks and the buzzer stops when; - the buzzer stop switch is pushed - the knob of the jog dial module is pushed - the lamp of the LCD is touched <p>※ Refer to page 5-78 for details.</p>
	Warning lamp pops up on the center of the LCD and the buzzer sounds	<ul style="list-style-type: none"> The pop-up warning lamp moves to the original position, lights up and the buzzer stops after 2 seconds elapses.
	Warning lamp pops up on the center of the LCD and the buzzer sounds	<ul style="list-style-type: none"> The pop-up warning lamp moves to the original position, blinks and the buzzer stops after 2 seconds elapses.
	Warning lamp pops up on the center of the LCD and the buzzer sounds	<ul style="list-style-type: none"> Cluster displays this pop-up when it has communication error with MCU. If communication with MCU become normal state, it will disappear automatically.
	Warning lamp pops up on the center of the LCD and the buzzer sounds	※ Refer to page 5-74 for details.
	Warning lamp lights up and the buzzer sounds	※ Refer to page 5-78 for details.

※ Refer to page 5-86 for the buzzer stop switch and operator's manual page 3-67 for the jog dial module.


(1) Engine coolant temperature warning lamp







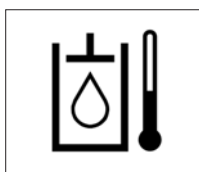


290F3CD61

- ① Engine coolant temperature warning is indicated in 2 steps.
 - 103°C over : The  lamp pops up and the buzzer sounds.
 - 107°C over : The  lamp pops up and the buzzer sounds.
- ② The pop-up ,  lamps move to the original position and blinks when the buzzer stop switch  is pushed. The buzzer will stop and ,  lamps will blink.
- ③ Check the cooling system when the lamps keep blinking.


(2) Hydraulic oil temperature warning lamp



290F3CD62

- ① Hydraulic oil temperature warning is indicated in 2 steps.
 - 100°C over : The  lamp pops up and the buzzer sounds.
 - 105°C over : The  lamp pops up and the buzzer sounds.
- ② The pop-up ,  lamps move to the original position and blinks when the buzzer stop switch  is pushed. The buzzer will stop and ,  lamps will blink.
- ③ Check the hydraulic oil level and hydraulic cooling system.

(3) Fuel level warning lamp

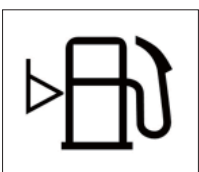


290F3CD63

- ① This warning lamp pops up and the buzzer sounds when the fuel level is below 36 ℓ (9.5 U.S. gal).
- ② Fill the fuel immediately after the lamp blinks.

(4) Emergency warning lamp



290F3CD64

- ① This warning lamp pops up and the buzzer sounds when each of the below warnings occurs.
 - Engine coolant overheating (over 107°C)
 - Hydraulic oil overheating (over 105°C)
 - MCU input voltage abnormal
 - Cluster communication data error
 - Engine ECM communication data error
- ※ The pop-up warning lamp moves to the original position and blinks when the buzzer stop switch  is pushed. The buzzer will stop.
- ② When this warning lamp blinks, machine must be checked and serviced immediately.

(5) Engine oil pressure warning lamp



290F3CD65

- ① This warning lamp pops up and the buzzer sounds when the engine oil pressure is low.
- ② If the lamp lights up, shut OFF the engine immediately. Check oil level.


(6) Check engine warning lamp



290F3CD66

- ① This warning lamp pops up and the buzzer sounds when the communication between MCU and engine ECM is abnormal, or if the cluster received specific fault code from the engine ECM.
- ② Check the communication line between the two.
If the communication line is OK, then check the fault codes on the cluster.

(7) Battery charging warning lamp

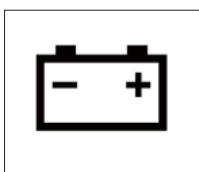

290F3CD67

- ① This warning lamp pops up and the buzzer sounds when the battery charging voltage is low.
- ② Check the battery charging circuit when this lamp blinks.


(8) Air cleaner warning lamp



290F3CD68

- ① This warning lamp pops up and the buzzer sounds when the air cleaner is clogged.
- ② Check, clean or replace filter.


(9) Overload warning lamp (opt)

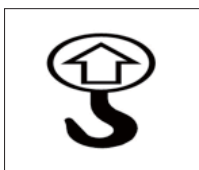

290F3CD69

- ① When the machine is overloaded, the overload warning lamp pops up and the buzzer sounds when the overload switch is ON. (if equipped)
- ② Reduce the machine load.

(10) Engine stop warning lamp

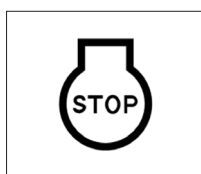

290F3CD252

① This warning lamp pops up and the buzzer sounds after 30 minutes of run time elapses, when the DEF/AdBlue® tank has reached its minimum level. Stop engine immediately and check actual DEF/AdBlue® level.

② Fill the DEF/AdBlue® immediately.

※ Refer to page 5-78.


③ This lamp pops up and the buzzer sounds when the manual (stationary) exhaust system cleaning is not performed.

※ Refer to page 5-77.

※ Please contact your HD Hyundai Construction Equipment service center or local dealer.

※ "Engine shutdown" cluster message pops up when the exhaust gas temperature reaches above 800°C.

(11) Exhaust system cleaning warning lamp

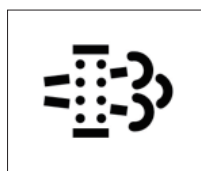


290F3CD70

① This warning lamp lights up or blinks when exhaust system cleaning is needed as seen in the table below.

Warning lamp				Description
Exhaust	HEST	Check engine	Stop engine	
Off	Off	Off	Off	· Normal operating mode
On (Amber)	Off	Off	Off	· Manual (stationary) exhaust system cleaning is recommended. ※ Refer to page 5-77.
On (Amber)	Off	On (Red)	Off	· Manual exhaust system cleaning must be conducted immediately. · Engine power will be reduced automatically if action is not taken. ※ Refer to page 5-77.
On (Amber)	Off	On (Red)	On (Red)	· These lamps will be ON if manual exhaust system cleaning is not conducted for a certain period of time. Stop the engine immediately. · Please contact HD Hyundai Construction Equipment service center or local dealer.
Blink (Red)	Off	Off	Off	· The exhaust system cleaning lamp will blink without HEST lamp while automatic exhaust system cleaning is being performed. · Low idle speed will increase to 1350 rpm. · The machine can be operated as normal operating mode. · Fuel consumption may slightly increase.
Blink (Red)	On (Amber)	Off	Off	· The exhaust system cleaning lamp will blink with HEST lamp while manual exhaust system cleaning is being performed. · The machine must remain stationary at low idle. ※ Refer to page 5-77.

(12) Exhaust system cleaning inhibit warning lamp



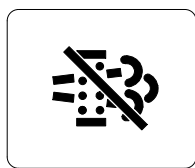


2609A3CD20

- ① This warning lamp indicates the exhaust system cleaning switch is pushed to the inhibit position, therefore automatic and manual exhaust system cleaning can not occur.

※ Refer to operator's manual page 3-43 for the exhaust system cleaning switch.

※ Manual exhaust system cleaning

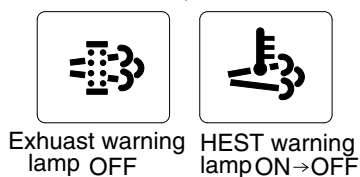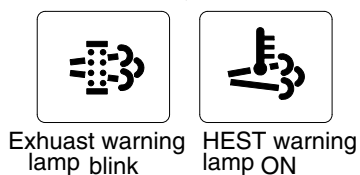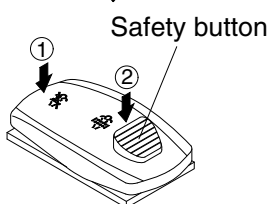

220A3CD73B

※ Manual exhaust system cleaning must be operated in a fireproof area.

※ To stop a manual exhaust system cleaning before it has completed, set to the exhaust system cleaning switch to the inhibit position or turn OFF the engine.

- ① Stop and park the machine.

- ② Pull the safety button and push the switch to position ② to initiate the manual exhaust system cleaning.


※ Refer to the page operator's manual 3-43 for the exhaust system cleaning switch operation.

※ The engine speed may increase to 1350 rpm and exhaust system cleaning begins and it will take approximately 20~30 minutes.

- ③ The exhaust system cleaning warning lamp will blink and HEST warning lamp will light up during the exhaust system cleaning operation.

- ④ The exhaust system cleaning and/or HEST warning lamp light will go off when the exhaust system cleaning is completed.

(13) HEST (High exhaust system temperature) warning lamp

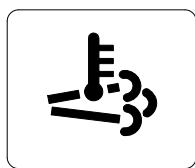

2609A3CD21

- ① This warning lamp indicates, when illuminated, that exhaust temperatures are high due to exhaust system cleaning.
- ② The lamp will also illuminate during a manual exhaust system cleaning.
- ③ When this lamp is illuminated, be sure the exhaust pipe outlet is not directed at any surface or material that can melt, burn, or explode.

⚠ When this lamp is illuminated, the exhaust gas temperature could reach 800°C [1500°F], which is hot enough to ignite or melt common materials, and to burn people.

※ The lamp does not signify the need for any kind of equipment or engine service; It merely alerts the equipment operator to high exhaust temperatures. It is common for the lamp to illuminate on and off during normal equipment operation as the engine completes exhaust system cleaning cycles.

(14) DEF/AdBlue® level warning lamp



290F3CD257

- ① This warning lamp when ON or blinking, indicates that the DEF/AdBlue® level is low as per the table below.

※ It is recommended that the DEF/AdBlue® tank be filled completely full of the DEF/AdBlue® in order to correct any fault conditions.

Warning lamp				Description
Fail in SCR system	DEF/AdBlue® level	Check engine	Stop engine	
On	On	Off	Off	<ul style="list-style-type: none"> The DEF/AdBlue® level has fallen below the initial warning level (10%).
On	On	On	Off	<ul style="list-style-type: none"> The DEF/AdBlue® level has fallen below the initial derate level (2.5%). The engine power will be limited automatically.
On	Blink	On	On	<ul style="list-style-type: none"> This happens when 30 minutes has elapsed with empty conditions (0%) of the DEF/AdBlue® tank. The engine will enter the final derate level which may include low idle lock or engine shutdown with restart limitations. In order to remove the final derate, the DEF/AdBlue® tank must be filled to above 10% gauge reading.

(15) Water in fuel warning lamp



300A3CD24A

① This warning lamp lights up and the buzzer sounds when the water separator is full of water or malfunctioning.

※ **When this lamp lights up, stop the machine and drain water from the separator.**

(16) Seat belt reminder warning lamp




300A3CD25

① When operator does not fasten the operator's seat belt, the seat belt reminder warning lamp pops up and the buzzer sounds.

② Fasten the seat belt.

(17) Coolant level warning lamp

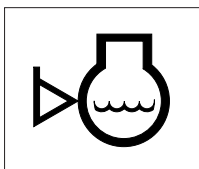


760F3CD58

① This warning lamp indicates lack of coolant.

② Check and refill coolant.

(18) Engine oil filter warning lamp

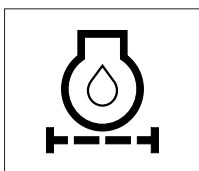


300A3CD306

① This warning lamp pops up and the buzzer sounds when the engine oil filter is clogged.


② Check, clean or replace filter.

(19) Fail in SCR system warning lamp

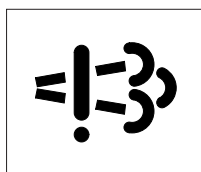


300A3CD15

 - ① This warning lamp indicates there are faults related to SCR system.
 - ② The lamp lights up when each of the below warnings is happening.
 - a. Low DEF/AdBlue® level
 - b. Poor quality of DEF/AdBlue®
 - c. Tempering or malfunction in the aftertreatment system
 - ③ Once the lamp lights up, the engine will derate soon.
- ※ **Please contact your HD Hyundai Construction Equipment service center or local dealer.**

Warning lamp		Torque reduction
	Time	
On	Fault detected	-
On	After 2 h 30 min	· Torque is reduced to 75% of the highest torque.
Blink	After 3 h 45 min	· Torque is reduced to 50% of the highest torque.
Blink rapidly	After 4 hours	· Torque is reduced to 0% (low idling) of the highest torque within 2~10 min.



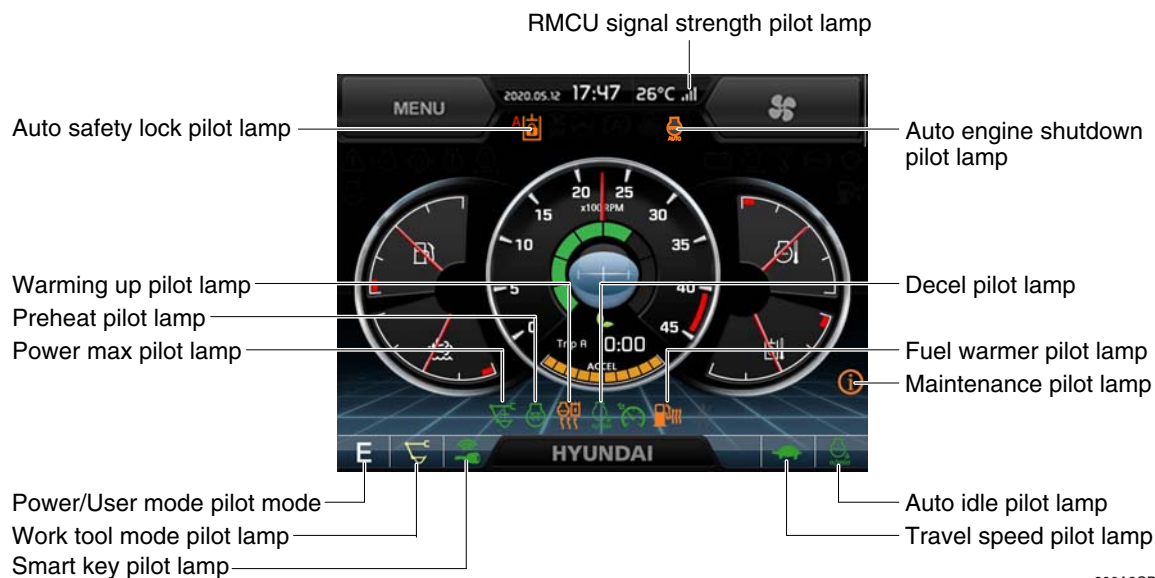

 

 






- ※ If a new fault occurs within 40 hours of operation since the first fault, the warning lamp will light up. After 3 hours of operation, the warning lamp will blink rapidly and torque will be reduced to 0% (low idling) within 2~10 minutes.
- ※ Once the fault has been remedied and the engine control unit has received an indication that it is working, torque returns to the normal level.

6) PILOT LAMPS



300A3CD26A

(1) Mode pilot lamps

No	Mode	Pilot lamp	Selected mode
1	Power mode	  	Heavy duty power work mode Standard power mode Economy power mode
2	User mode		User preferable power mode
3	Work tool mode	     	General operation - IPC speed mode General operation - IPC balance mode General operation - IPC efficiency mode Breaker operation mode Crusher operation mode Lifting mode
4	Travel mode	 	Low speed traveling High speed traveling
5	Auto idle mode		Auto idle

(2) Power max pilot lamp



300A3CD32

- ① The lamp will be ON when pushing power max switch on the LH RCV lever.
 - ② The power max function operates for a max period of 8 seconds.
- ※ Refer to the operator's manual page 3-45 for power max function.


(3) Preheat pilot lamp



290F3CD79

- ① Turning the start key switch to the ON position starts preheating in cold weather.
- ② Start the engine after this lamp goes OFF.

(4) Warming up pilot lamp

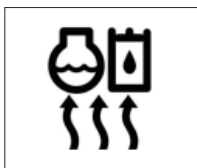

290F3CD80

- ① This lamp lights up when the coolant temperature is below 30°C (86°F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30°C (86°F), or when 10 minutes have passed since starting the engine.

(5) Decel pilot lamp




300A3CD33

- ① Operating one touch decel switch on the RCV lever makes the lamp light up.
- ② Also, the lamp will light up and engine speed will be reduced automatically to save fuel when all levers and pedals are in the neutral position, and the auto idle function is selected.
- ③ If it follows the case below, decel goes off in the idle state.
 - Auto idle button off
 - Working/Travel
 - One touch decel button off
 - Safety knob unlock

※ Refer to the operator's manual page 3-45.

(6) Fuel warmer pilot lamp

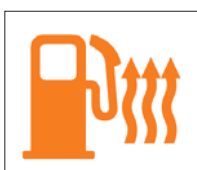

300A3CD34

- ① This lamp lights up when the coolant temperature is below 10°C (50°F) or the hydraulic oil temperature is 20°C (68°F).
- ② The automatic fuel warming is cancelled when the engine coolant temperature is above 60°C (140°F), and the hydraulic oil temperature is above 45°C (113°F) since the start switch was ON position.

(7) Maintenance pilot lamp



300A3CD35

- ① This lamp lights up when consumable parts are in need of replacement. It means that the change or replacement interval of parts is 30 hours from the required change interval.
- ② Check the message in maintenance information of main menu. Also, this lamp lights up for 3 minutes when the start switch is switched to the ON position.

※ Refer to page 5-96.

(8) RMCU signal strength pilot lamp (mobile only)




220A3CD200

① This lamp indicates RMCU signal strength as below.

- : Searching
- : Bad
- : Normal
- : Good
- : Excellent

(9) Smart key pilot lamp (opt)

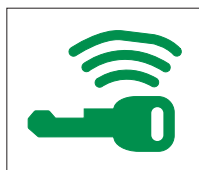

300A3CD36A

① This lamp lights up when the engine is started by the start button.

② This lamp is red when the authentication fails, it will be green when authentication is successful.

※ Refer to the page 5-97.

(10) Auto safety lock pilot lamp



300A3CD37A


① Auto safety lock system prevents unintended operation of the machine in order to improve safety.

② Engine will only start if safety knob is locked.

③ If operator unlocks safety knob when RCV lever is pressed, machine is not controlled by RCV lever.

⚠ If operator unlocks safety knob while any control/function is being operated, the machine will move violently. This could cause serious injury, death or damage to property.

④ The function is released only by turning the safety knob to the UNLOCK position and the LOCK position again.

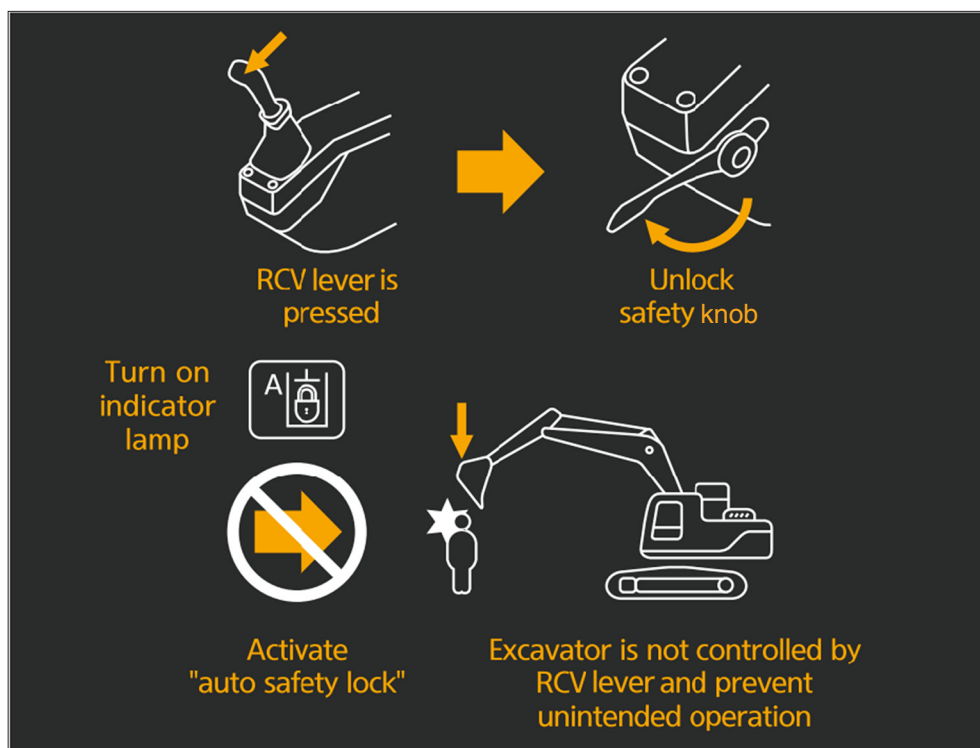

300A3CD38A

(11) Auto engine shutdown pilot lamp





220A3CD202A

① This lamp lights up when the auto engine shutdown is activated.

※ Refer to page 5-92.

(12) Engine rpm state

Function	Safety Knob	Auto Idle Mode	One Touch Decel	RPM State
				
State 1	Unlock	OFF	OFF	High rpm
State 2	Unlock	OFF	ON	Low rpm
State 3	Unlock	ON	OFF	Auto Idle rpm
State 4	Lock	ON	OFF	Low rpm
State 5	Lock	OFF	ON	Low rpm
State 6	Unlock	ON	ON	Low rpm
State 7	Lock → Unlock	ON	ON	Low → High → Low rpm (few seconds later)
State 8	Lock	ON	OFF	Low rpm
State 9	Lock	ON	ON	Low rpm


7) SWITCHES



300A3CD39A

※ When some of the switches are selected, the pilot lamps are displayed on the LCD. Refer to page 5-81 for details.

(1) Power mode switch

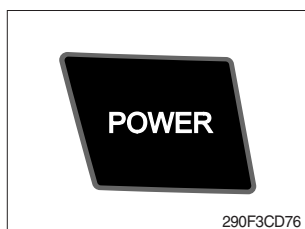


① This switch is to select the machine power mode and when pressed, the power mode pilot lamp will be displayed on the section of the monitor.

- P : Heavy duty power work.
- S : Standard power work.
- E : Economy power work.

② The pilot lamp changes E → S → P → E in this order.

(2) Work mode switch

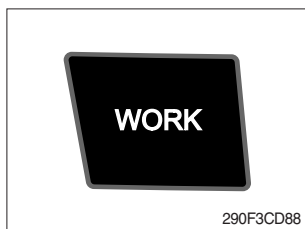


① This switch is to select the machine work mode, which shifts from general operation mode to optional attachment operation mode.

- : General operation mode
- : Breaker operation mode (if equipped)
- : Crusher operation mode (if equipped)
- : Lifting mode
- Not installed : Breaker or crusher is not installed.


※ Refer to the operator's manual page 2-7 for details.

② If you press this switch for a time (1 second), quick pop-up will appear. When you select an attachment from the popup, the operation mode will immediately switch to selected attachment.

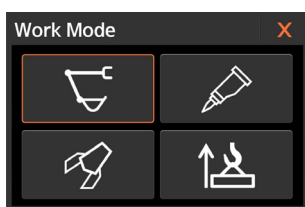

300A3CD168

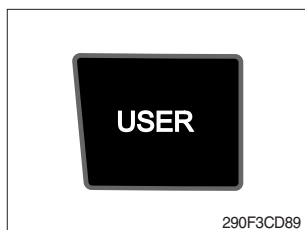

(3) User mode switch



- ① This switch is used to select the user mode.
- ② Refer to page 5-90 for another set of the user mode.

(4) Travel speed switch



- ① This switch is used to select the travel speed alternatively.
 -  : Low speed
 -  : High speed

※ Do not change the setting of the travel speed switch while machine is moving. Machine stability may be adversely affected.


⚠ Serious injury or death can result from sudden changes in machine stability.

(5) Auto idle/ buzzer stop switch




- ① This switch is used to activate or cancel the auto idle function.
 - Pilot lamp ON : Auto idle function is activated.
 - Pilot lamp OFF : Auto idle function is cancelled.
- ② The buzzer sounds when the machine has a problem.
In this case, push this switch and buzzer stops, but the warning lamp blinks until the problem is cleared.

(6) Escape/Camera switch

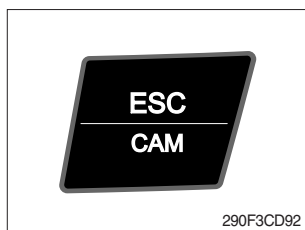

- ① This switch is used to return to the previous menu or parent menu.
- ② In the operation screen, pushing this switch will display the view of the camera on the machine (if equipped).
Please refer to page 5-103 for the camera.
- ③ If the camera is not installed, this switch is used only ESC function.

(7) Work light switch

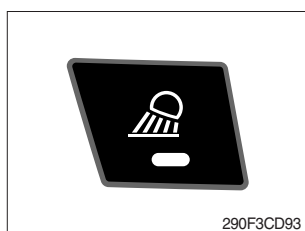

- ① This switch is used to operate the work light.
- ② The pilot lamp lights up when this switch is pressed.

(8) Head light switch



- ① This switch is used to operate the head light.
- ② The pilot lamp lights up when this switch is pressed.

(9) Intermittent wiper switch




- ① When this switch is pressed, wipers operate intermittently.
- ② The pilot lamp lights up when this switch is pressed.

(10) Wiper switch




- ① This switch is used to operate the wiper.
- ② Note that the wiper will self-park when switched off.
- ③ The pilot lamp lights up when this switch is pressed.
- △ If the wiper does not operate with the switch in ON position, turn the switch OFF immediately. Check the cause. If the switch remains ON, motor failure can result.

(11) Washer switch

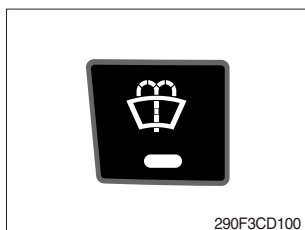


- ① Washer fluid is sprayed and the wiper is operated only when this switch is pressed.
- ② The pilot lamp lights up when this switch is pressed.

(12) Cab light switch

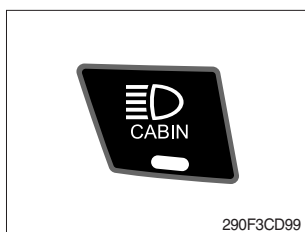


- ① This switch turns on the cab light.
- ② The pilot lamp lights up when this switch is pressed.

(13) Beacon switch (opt)

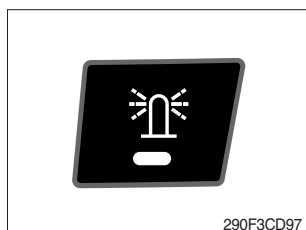

- ① This switch activates the rotary light on the cab.
- ② The pilot lamp lights up when this switch is pressed.


(14) Overload switch (opt)

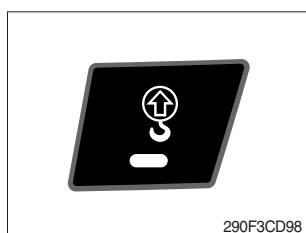

- ① When this switch is activated, buzzer makes sound and overload warning lamp lights up in the event that the machine is or becomes in an overloaded situation.
- ② When the switch is inactivated, buzzer stops and warning lamp goes off.


⚠ Overloading the machine could impact the machines stability which could result in tipover hazard. A tipover hazard could result in serious injury or death. Always activate the overload warning device before you handle or lift objects.

(15) Travel alarm switch

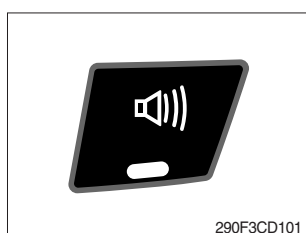

- ① This switch is to activate travel alarm function surrounding when the machine travels.
 - ON : The travel alarm function is activated.
 - OFF : The travel alarm function is not activated.

(16) Air conditioner quick touch switch

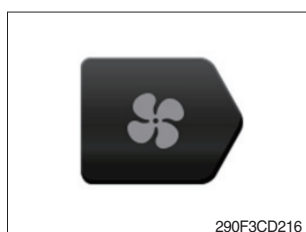

- ① This switch used to select air conditioner control mode.
※ Refer to page 5-105.

(17) Main menu quick touch switch



- ① This switch is to activate the main menu in the cluster.
※ Refer to page 5-89.

8) MAIN MENU

※ You can select or set the menu by the jog dial module or touch screen.

On the operation screen, tap MENU to access the main menu screen.

On the sub menu screen, you can tap the menu bar to access functions or applications.






· Operation screen



300A3CD40A


※ Please refer to the jog dial module, operator's manual page 3-67 for selection and change of menu and input value.

(1) Structure

No	Main menu	Sub menu	Description
1	 Mode 290F3CD103	Work tool U mode power Boom/Arm speed Auto power boost IPC mode Auto engine shutdown Initial mode Emergency mode	Breaker, Crusher, Not installed User mode only Boom speed, Arm speed Enable, Disable Speed mode, Balance mode, Efficiency mode One time, Always, Disable Key on initial mode / initial work mode, Accel initial mode / step Switch function
2	 Monitoring 290F3CD104	Active fault Logged fault Delete logged fault Monitoring	MCU, Engine ECM, FATC, AAVM (option) MCU, Engine ECM, FATC, AAVM (option) All logged fault delete, Initialization canceled Machine information, Switch status, Output status,
3	 Management 290F3CD105	Fuel rate information Maintenance information Machine security Machine information Contact Service menu Clinometer Update	General record, Hourly, Daily, Mode record Replacement, Change interval oils and filters ESL mode setting, Password change Model, MCU, Monitor, jog dial module, switch controller, RMCU, Relay drive unit, FATC, AAVM (option) A/S phone number, A/S phone number change Power shift, Operating hour, Breaker mode pump acting, EPPR current level, Overload pressure, Optional piping pressure removal, Fine swing Clinometer setting Cluster, ETC device
4	 Display 290F3CD106	Display item Clock Brightness Unit setup Language selection Screen type	Engine speed, Tripmeter A, Tripmeter B, Tripmeter C Clock Manual, Auto Temperature, Pressure, Flow, Distance, Date format Korean, English, ETC A type, B type
5	 Utilities 290F3CD107	Tripmeter Camera Auto idle time setting	3 kinds (A, B, C) Camera setting, Auto mode (travel) Time setting

(2) Mode setup


① Work tool (Machine Serial No. : -#0600)

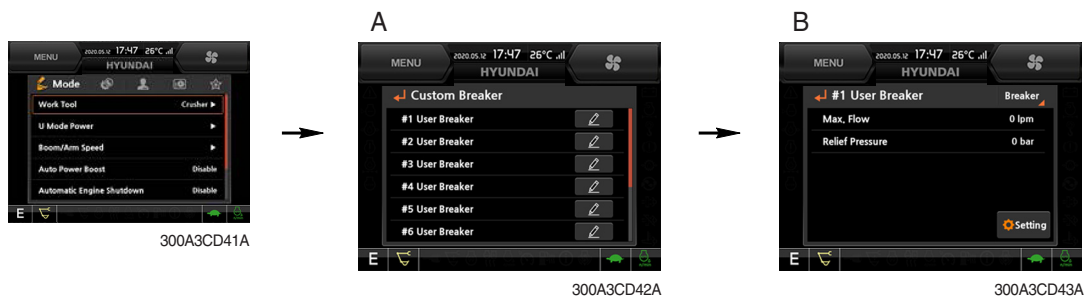

- Select installed optional attachment
 - A : It can set the user's attachment.
It is available in setting #1~#10.
 - B : Max flow - Set the maximum flow for the attachment.
Relief pressure - Set the relief pressure.

(2) Mode setup

① Work tool (Machine Serial No. : #0601-)

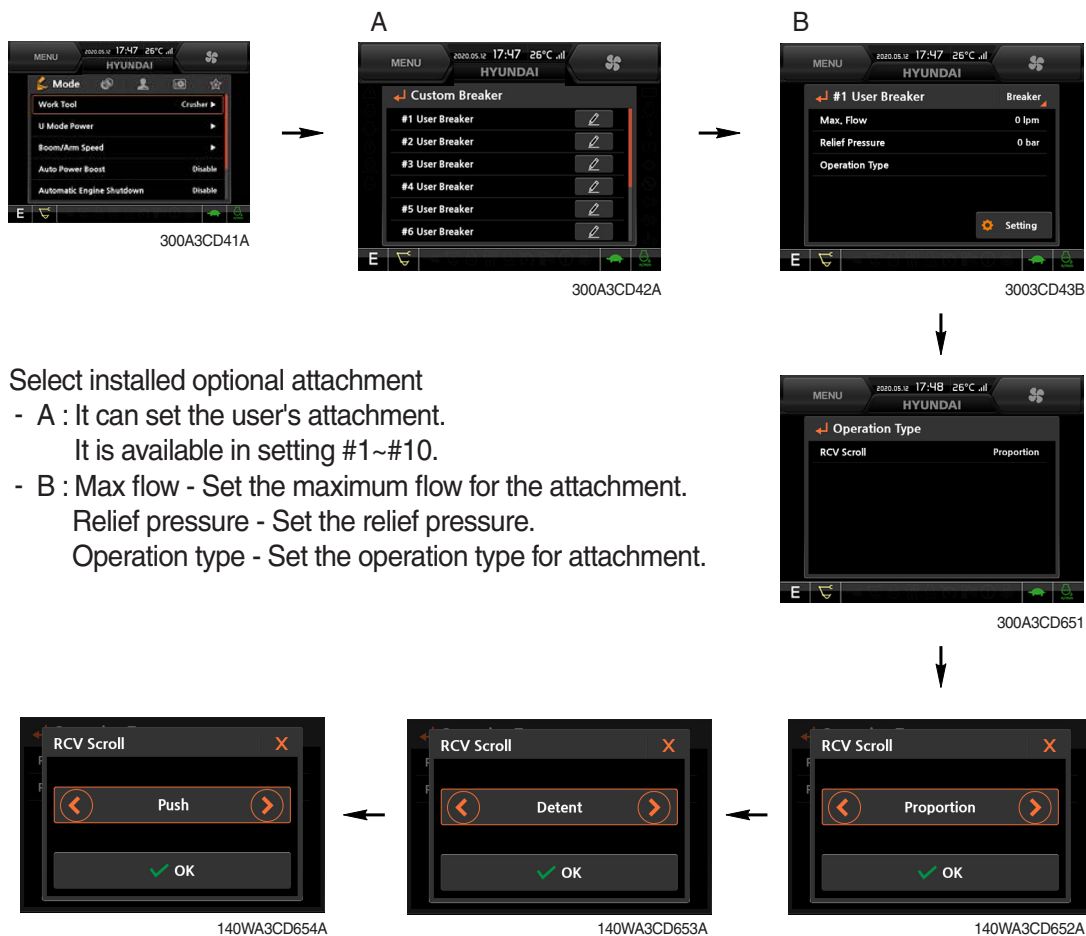


- Select installed optional attachment
 - A : It can set the user's attachment.
It is available in setting #1~#10.
 - B : Max flow - Set the maximum flow for the attachment.
Relief pressure - Set the relief pressure.
Operation type - Set the operation type for attachment.

■ Operation type


Operation type is used to set the operation of the proportion switch on the RCV lever if equipped proportional function.

- Push : Switch actuation will be deactivated when the proportion switch is released.
- Detent : Switch actuation will remain even if the proportion switch is released.
To deactivate, move the switch in the same direction again or to the opposite direction.
- Proportion : Switch actuation is proportional to the movement of the proportion switch.

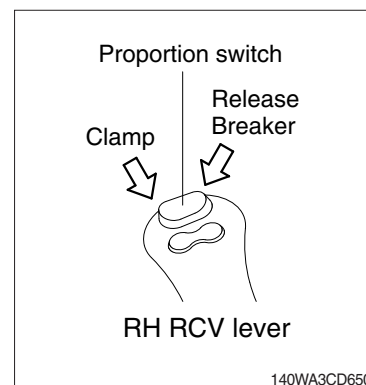

140WA3CD650

② U mode power

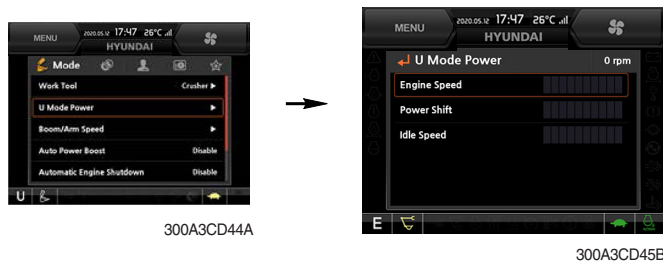

- Engine high idle rpm, auto idle rpm and pump torque (power shift) can be modulated and memorized separately in U-mode.
- U-mode can be activated by user mode switch.


Step (■)	Engine speed (rpm)	Idle speed (rpm)	Power shift (bar)
1	1300	750	0
2	1400	800	3
3	1500	850	6
4	1600	900	9
5	1700	950	12
6	1800	1000	16
7	1850	1050	20
8	1900	1100	26
9	1950	1150	32
10	2000	1200 (auto decel)	38

※ One touch decel : 1100 rpm

※ Low idle speed

- Safety knob release : 1100 rpm
- Safety knob lock : 1100 rpm

③ Boom/Arm speed

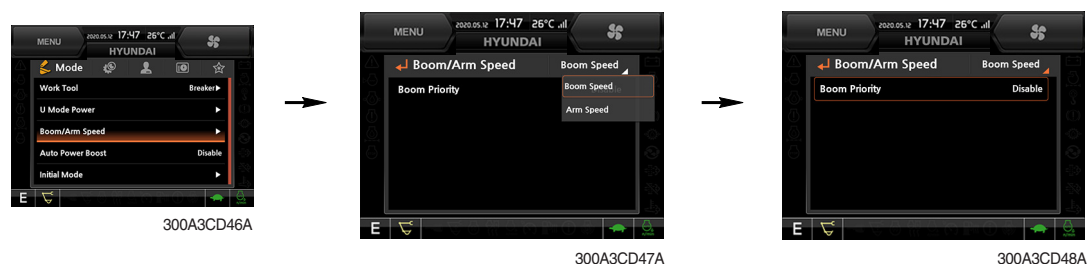

· Boom speed

It adjusts the ratio of relative speed in the boom up and swing combination operation.


- Boom priority enable is mainly used in work environments that require high boom up work at a short swing angle of about 45 degrees.
- Boom priority disable is recommended for use in work environments that require high swing speed and acceleration, some slow boom up, and more than 45 degrees.

· Arm speed

This provides ON and OFF of the regeneration function of the arm in operation.

- Enable means that regeneration is ON, and an energy can be used efficiently through automatic regeneration according to the load.
- Disable means that regeneration is always OFF, and it can be effective for heavy digging work.

④ Auto power boost

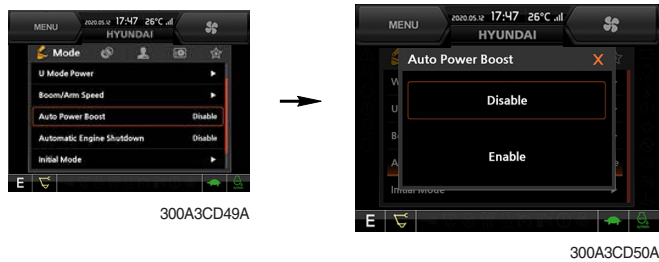

- The power boost function can be activated or cancelled.
 - Enable : The digging power is automatically increased as working conditions by the MCU. It is operated max 8 seconds.
 - Disable : Not operated.
- ※ The auto power boost function is activated in P mode. It does not work in S mode and E mode.

⑤ IPC mode



- The operator can improve fuel consumption and working speed through IPC mode.
- IPC mode is working by using inertial energy in specific case.
- The IPC mode can be selected by this menu.
 - Speed mode / Balance mode / Efficiency mode
- The effect of IPC mode is different at power mode. The fuel efficiency is about 5% in P mode and about 3% in E mode based on Balance mode against Speed mode.
- The manufacturer recommends using the balance mode in IPC mode.
- ※ The effect is the result of the standard operation. Depending on the operator's working conditions and machine options, the results could be different.
- ※ Please update the cluster programs if this mode is not displayed in the mode setup menu. Refer to page 5-99.

⑥ Automatic engine shutdown



- The automatic engine shutdown function can be set by this menu.
 - One time
 - Always
 - Disable
 - Wait time setting : Max 40 minutes, min 2 minutes

⑦ Initial mode



- **Key on initial mode**
 - Selected the power mode is activated when the engine is started.
- **Key on initial work mode**
 - Not installed
 - Last setting
 - Work mode
- **Accel initial mode**
 - Last setting value
 - User setting value
- **Accel initial step**
 - 0~9 step

⑧ Emergency mode



- This mode can be used when the switches are abnormal on the cluster.
- The cluster switches can be selected by touching each icon.


(3) Monitoring

① Active fault



- The active faults of the MCU, ECM, FATC, AAVM (option) can be checked by this menu.

② Logged fault

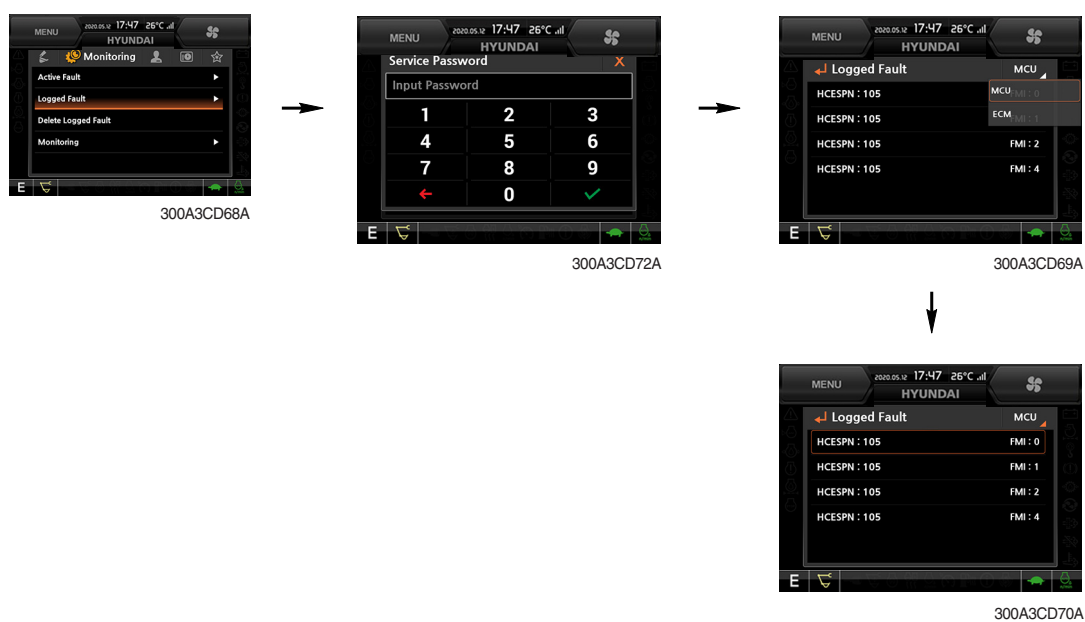


- The logged faults of the MCU, ECM, FATC, AAVM (option) can be checked by this menu.

③ Delete logged fault



- The logged faults of the MCU, ECM, FATC, AAVM (option) can be deleted by this menu.

④ Monitoring

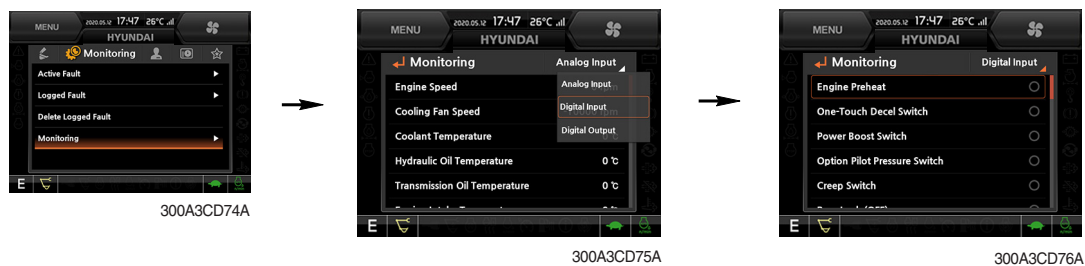


- The machine status such as the engine rpm, oil temperature, voltage and pressure etc. can be checked by this menu (Analog input).
- The switch status or output status can be confirmed by this menu (Digital input & Digital output).
- The activated switch or output pilot lamps ● will light up.

(4) Management

① ECO report

This reports the machine's inefficient operation status in order to improve operator's improper working habit.

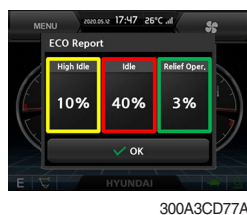


High idle




- Shows a breakdown of high idle, idle and relief operation when monitor is on.
- Gives a daily usage breakdown record for a 7 day period and an overall accumulated record from the first operation.

Idle

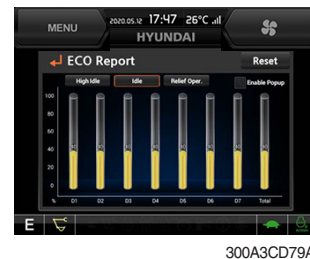

Relief operation

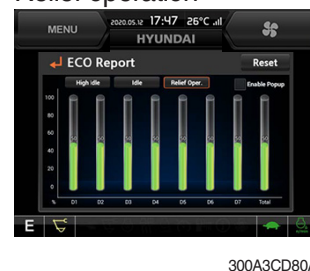

② Fuel rate information



A



B



C



D



· General record (A)

- Average fuel rate (left) (from "Reset" to now)
Fuel consumption divided by engine run time (service meter time).
- A days fuel used (right)
Fuel consumption from 24:00 (or "Reset" time) to now (MCU real time).

· Hourly record (B)

- Hourly fuel rates for past 12 hours (service meter time).
- No record during key-off time.
- One step shift to the right for every one hour.
- Automatic deletion of data from 12 hours and earlier.
- "Reset" deletes all hourly records.

· Daily record (C)

- Daily fuel consumption for past seven days (MCU real time).
- No record during key-off time.
- One step shift to the right at 24:00 for every day.
- Automatically deletes data from 7 days and earlier.
- All daily records deletion by "Reset".

· Mode record (D)

- Average fuel rate for each power mode/accel dial (at least 7) from "Reset" till present.
- No record during idle.
- All records can be deleted by "Reset".

③ Maintenance information



300A3CD87A



300A3CD88A



300A3CD89A

- Alarm lamp (●) is ON when oil or filter needs to be changed or replaced.
 - Replacement : The elapsed time will be reset to zero (0).
 - Change interval : The change intervals can be changed in hour increments of 50.
- ※ Refer to section, Maintenance chart for further information of maintenance interval.

④ Machine security



· ESL mode setting

- ESL : Engine Starting Limit
- ESL mode is designed to be a theft deterrent or will prevent the unauthorized operation of the machine.
- When you Enable the ESL mode, the password will be required when the starting switch is turned to the on position.

- Machine security

Disable : ESL function is disabled and password is not required to start engine.


Enable (always) : The password is required whenever the operator starts engine.

- Interval : The password is required when the operator starts engine first. But the operator can restart the engine within the interval time without inputting the password. The interval time can be set to a maximum 4 hours.

※ Default password : 00000 + ✓


※ Password length : (5~10 digits) + ✓

- Smart key (option) : Refer to next page.

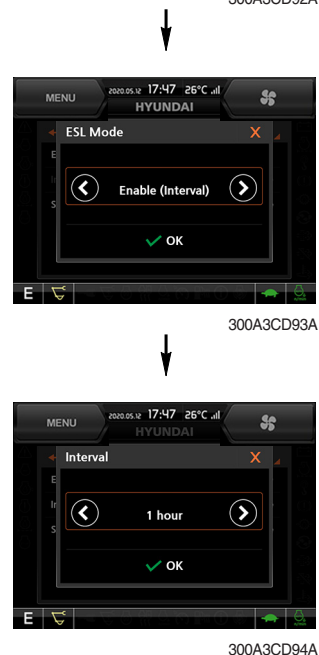

· Password change

- The password is 5~10 digits.

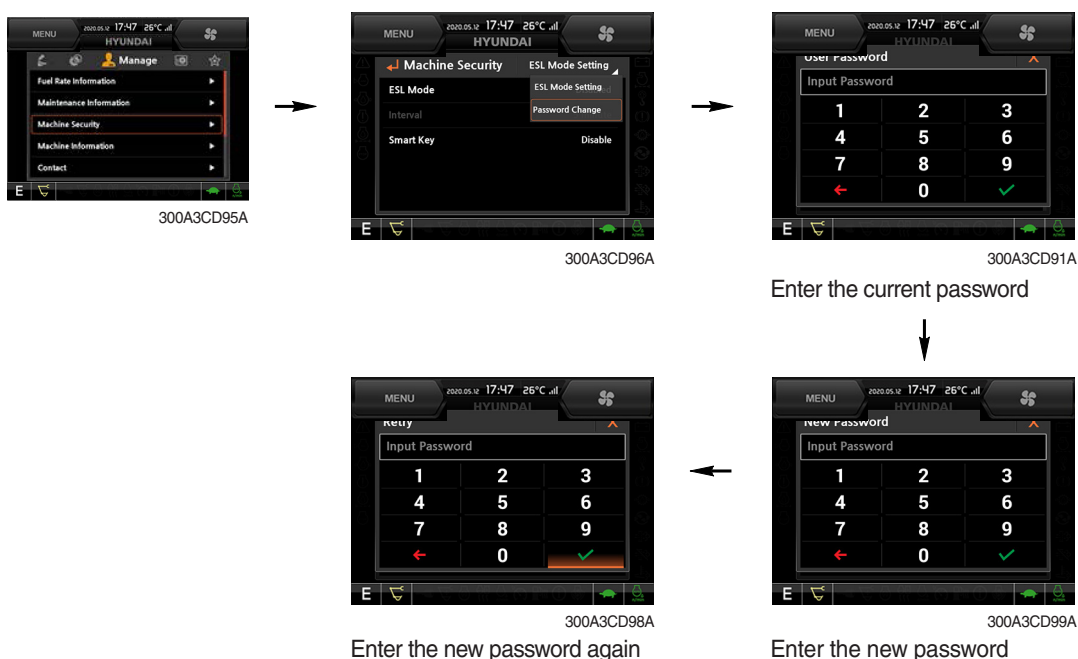

※ Before first use, please set user password and owner password in advance for machine security.


- Smart key




300A3CD90A




300A3CD91A

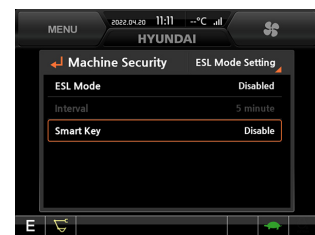


300A3CD001

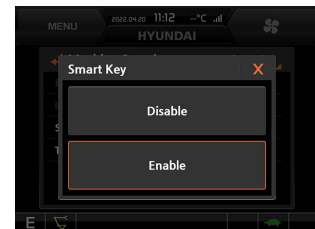

300A3CD002

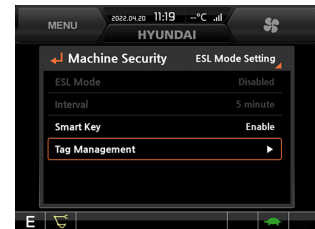


300A3CD003

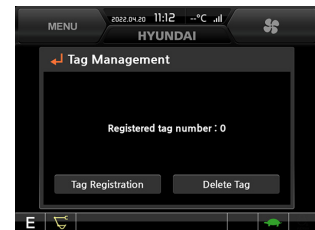


300A3CD004

Registering

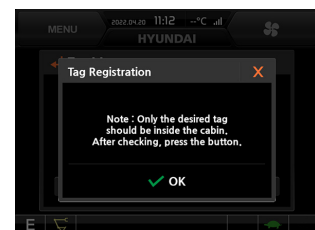

300A3CD005

Deleting

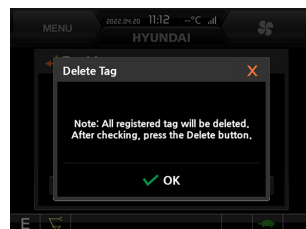

300A3CD006

- Smart key is registered when equipped with optional smart key. If smart key is not inside of the cabin, authentication process fails and the password is needed.
- Tag management menu is activated when the Smart key menu is Enabled.
You can register and delete the tags.

- Tag management

- When registering a tag : Only the tag you want to register must be in the cabin.
- When deleting a tag : All registered tags are deleted.

※ Engine Starting Condition

Case	ESL Mode	Smart Key	Condition
1	Disable	Disable	- With registered tag : Engine can be started without password input. - Without registered tag : Engine can be started without password input.
2	Disable	Enable	If Smart Key is enabled, ESL Mode is automatically enabled. This Case 2 work the same as the Case 4.
3	Enable	Disable	- With registered tag : Engine can be started with password input. - Without registered tag : Engine can be started with password input.
4	Enable	Enable	- With registered tag : Engine can be started without password input. - Without registered tag : Engine can be started with password input.

⑤ Machine Information




- This can confirm the identification of the model information (ECU), MCU, monitor, jog dial module, switch controller, RMCU, relay driver unit, FATC (air conditioner controller), AAVM (opt).

⑥ Contact (A/S phone number)



Enter the new A/S phone number


⑦ Service menu

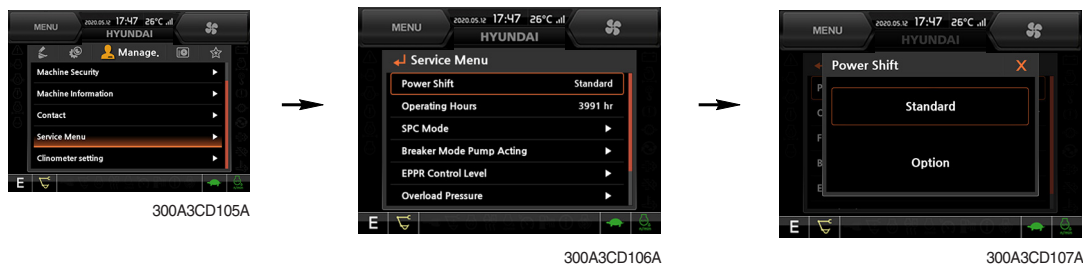

※ This menu can be used only HCE service man and can not be accessible by the owner and the operator.


- Power shift (standard / option) : Power shift pressure can be set by option menu.
- Operating hours : Operating hours since the machine line out can be checked by this menu.
- Breaker mode pump acting (1 pump / 2 pump)
- EPPR current level (attach flow EPPR 1 & 2, boom priority EPPR, attach relief pressure EPPR 1 & 2)
- Overload pressure : 100 ~ 350 bar
- Optional piping pressure removal (Disable / Enable)
It is removing the residual pressure remaining in the option line when the quick coupler is operated.
- Fine swing (Disable / Enable)

⑧ Clinometer

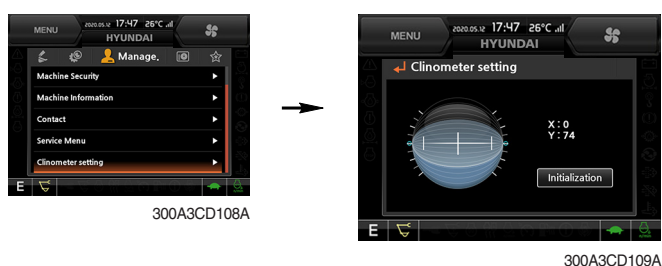

- When the machine is on the flatland, if you touch "initialization" on cluster, the values of X, Y will reset to "0".
- You can confirm tilt of machine in cluster's operating screen.


⑨ Update (cluster & ETC devices)

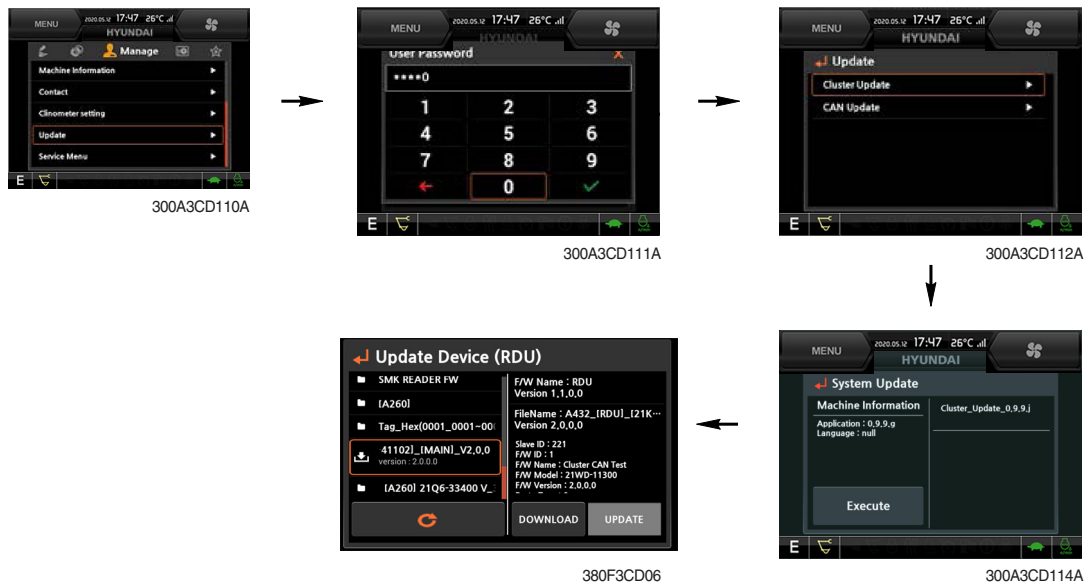

- ETC devices and cluster can be updated through CAN 2 network.
- Insert USB memory stick which includes program files, start download.

⑩ OME (owner menu editing)

The owner of machine can restrict operator access to set functions.

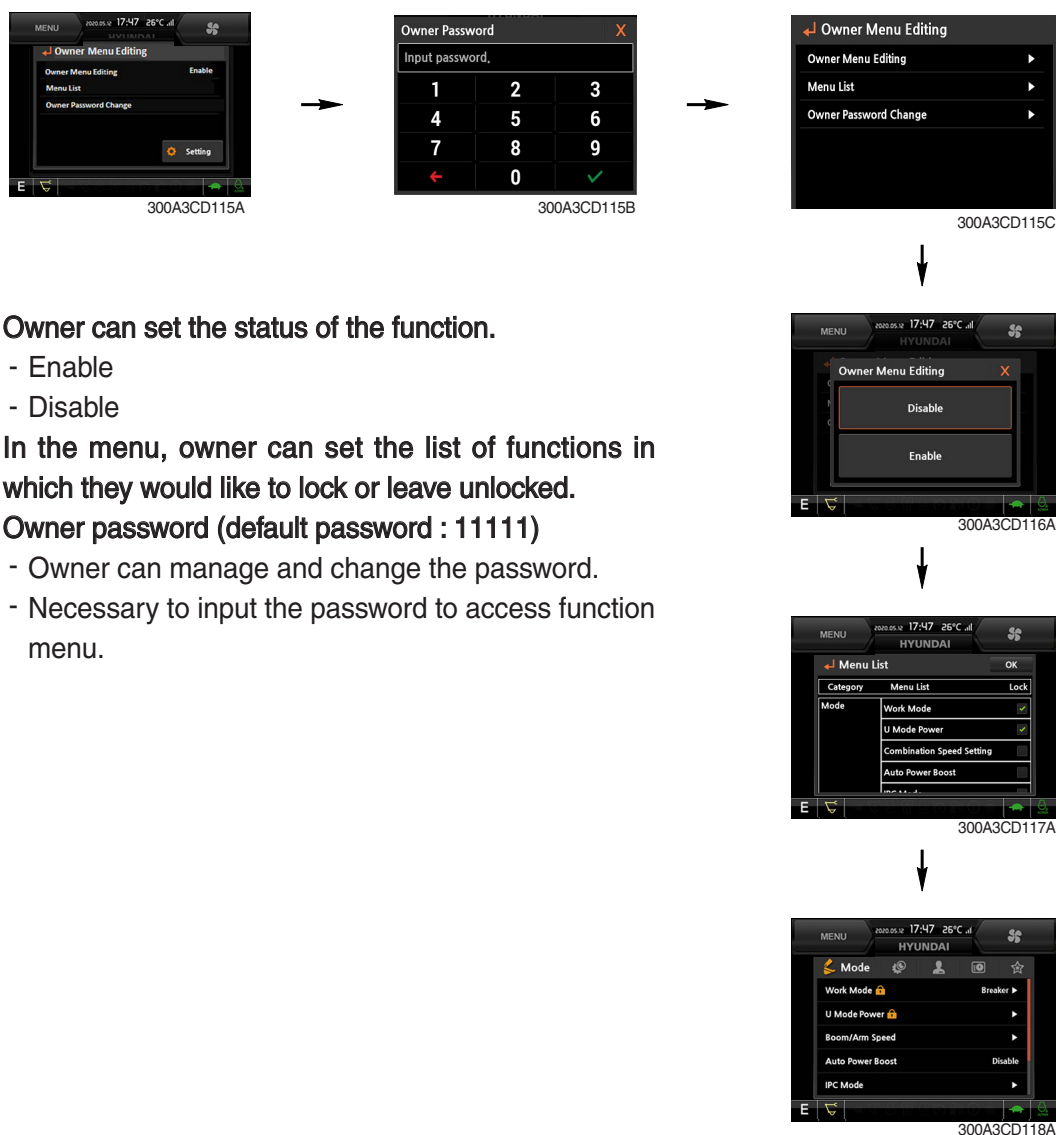

- Owner can set the status of the function.
 - Enable
 - Disable
- In the menu, owner can set the list of functions in which they would like to lock or leave unlocked.
- Owner password (default password : 11111)
 - Owner can manage and change the password.
 - Necessary to input the password to access function menu.

(5) Display

① Display item



300A3CD119A



300A3CD120A



300A3CD121A

- The center display type of the LCD can be selected by this menu.
- The engine speed or the tripmeter menu (A,B,C) is displayed on the center display.

② Clock



300A3CD122A



300A3CD123A

- The first row of boxes indicate Year/Month/Day.
- The second row shows the current time. (0:00~23:59)


③ Brightness




- If "Auto" is chosen, brightness for day and night can be set accordingly. Also by using the bar in lower side, users can define which an operation interval belongs to day and night. (in bar figure, white area represents night time while orange shows day time)

④ Unit



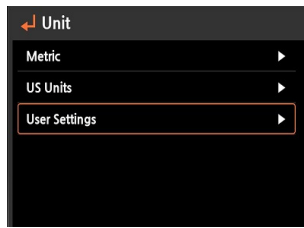


300A3CD130F

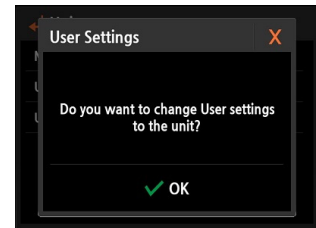

300A3CD130G



300A3CD131A

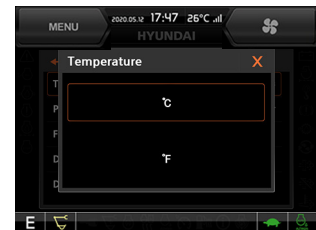

300A3CD132A

- Temperature : °C ↔ °F
- Pressure : bar ↔ MPa ↔ kgf/cm²
- Volume : l ↔ gal
- Flow : lpm ↔ gpm
- Distance : km ↔ mile
- Date format : yy/mm/dd ↔ mm/dd/yy ↔ dd-mm-yy

⑤ Language



300A3CD133A




300A3CD134A

- User can select preferable language and all displays are changed to the selected language.

(6) Utilities

① Tripmeter

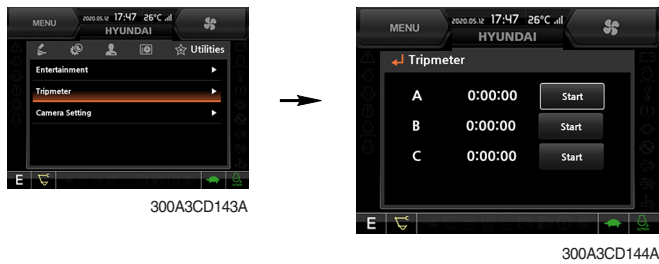


- A maximum of 3 types of tripmeters can be used at the same time.
- Each tripmeter can be turned on by choosing "Start". It can be turned off by choosing "Stop".
- If the tripmeter icon is activated in the operation screen, it can be controlled directly in this screen.

② Camera setting

- If the rear camera is not installed on the machine, set disable.
- If the rear camera is installed on the machine, set enable.



- Auto Mode (Travel) : Enable
The cluster will automatically show camera view while machine is traveling.
- In the operation screen, rear camera screen shows up when ESC/CAM switch is pushed.

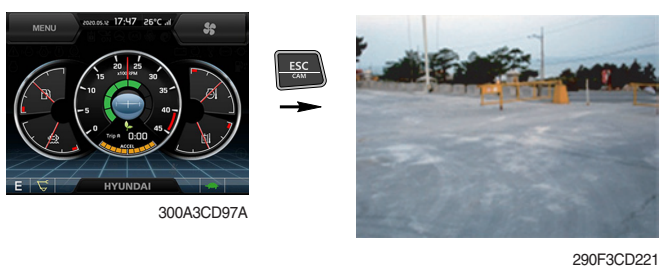

③ Auto idle time setting



- The auto idle time is can be set by this menu.
- Time : 3~30 seconds


④ AAVM (Advanced Around View Monitoring, option)

- The AAVM switches of the cluster consist of ESC/CAM and AUTO IDLE/Buzzer stop.



- Escape switch

- Activates AAVM mode from the beginning if AAVM is installed.
- While in the AAVM mode, select the ESC switch to return to the home screen.

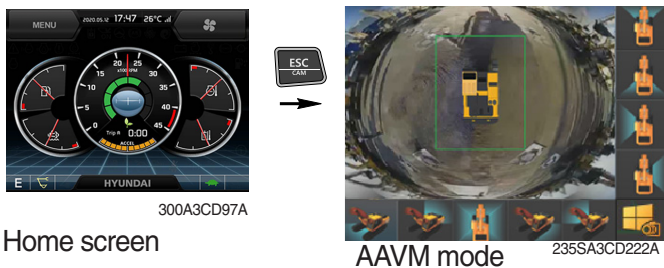

- Buzzer stop switch

- AAVM mode detects surrounding pedestrians or objects and the warning buzzer sounds.
- User can turn OFF the warning sound by pressing the buzzer stop switch.



- When a worker/pedestrian reaches the green line, which is an external danger area equipped on the cluster, warning buzzer sounds and it displays a green rectangular box recognizing the worker/pedestrian. Stop work immediately. Stop the buzzer by pressing the buzzer stop switch. Then resume work after you confirm that the area is safe and clear of workers/objects.



- When a worker/pedestrian reaches the red line, which is an internal danger area equipped on the cluster, warning buzzer sounds and it displays a red rectangular box recognizing the worker/pedestrian. Stop work immediately. Stop the buzzer by pressing the buzzer stop switch. Then resume work after you confirm that the area is safe and clear of workers/objects.


▲ Failure to comply may result in serious injury or death.

※ In AAVM mode, a touch screen of the LCD is available only. The multimodal dial of the jog dial module is not available.

9) AIR CONDITIONER AND HEATER

Full auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.


· Location of air flow ducts

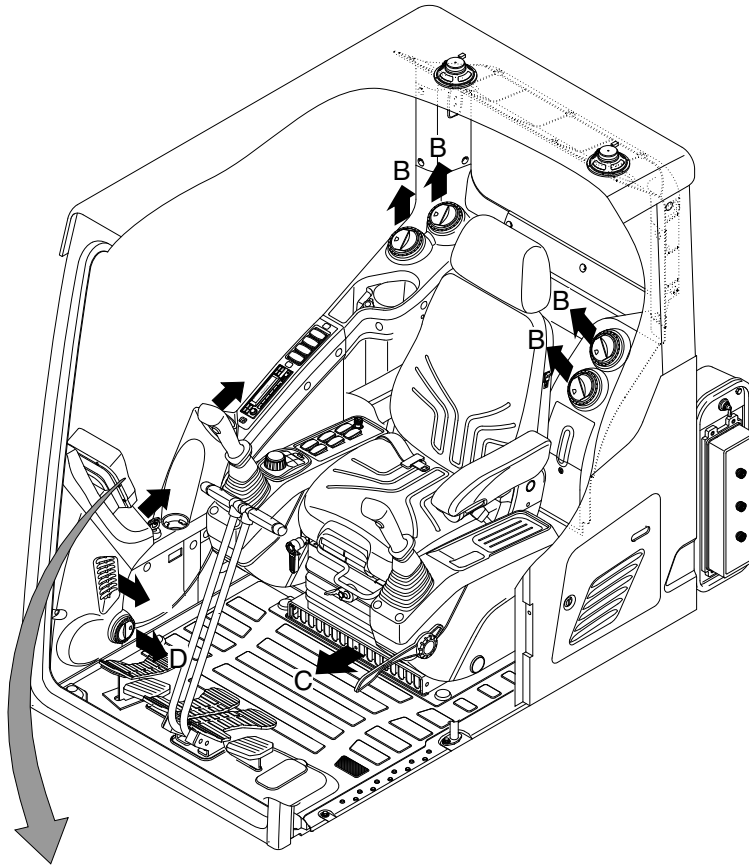

Cluster LCD



Cluster :  or
Jog dial module : 

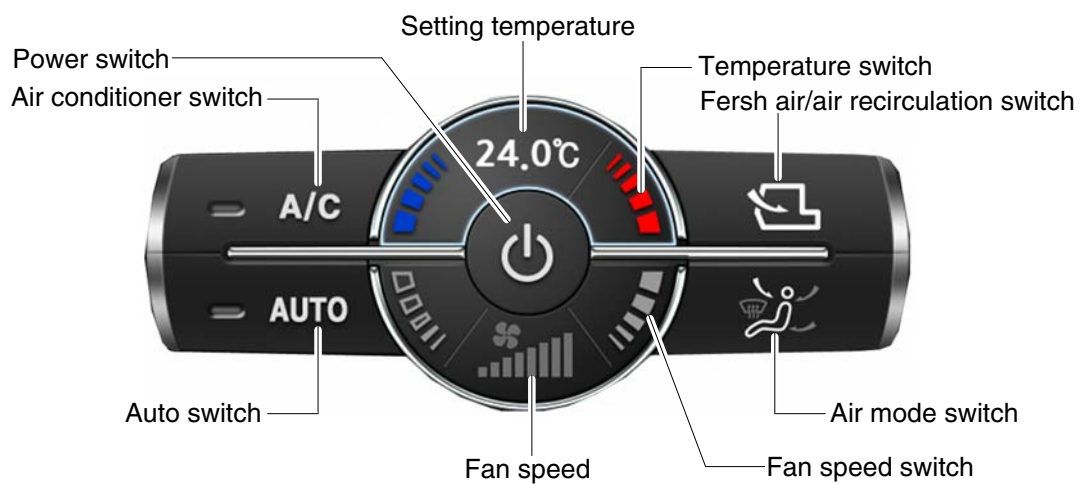

※ Jog dial module : Refer to page operator's manual 3-67.

160A3CD21

(1) Power switch



- ① This switch turns the system ON and OFF.
Just before powering OFF, set values are stored.
- ② Default setting values

Function	Air conditioner	In/outlet	LCD	Temperature	Mode
Value	OFF	Inlet	OFF	Previous sw OFF	Previous sw OFF

(2) Air conditioner switch



- ① This switch turns the compressor ON/OFF.
- ※ **Air conditioner operates to remove vapor and drains water through a drain hose. Water can be sprayed into the cab in case that the drain cock at the ending point of drain hose has a problem.**
In this case, exchange the drain cock.

(3) Auto switch




- ① Auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.

(4) Setting temperature



- ① Displays the temperature setting.

(5) Temperature switch

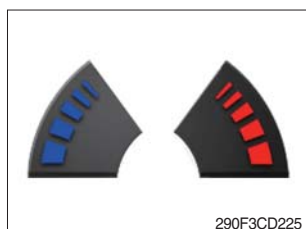


- ① Setting temperature indication
· Lo (17°C), 17.5~31.5°C, Hi (32°C)
- ② Max cool and max warm beeps 5 times.
- ③ The max cool or the max warm position operates per the following table.

Temperature	Compressor	Fan speed	In/outlet	Mode
Max cool	ON	Hi (8 step)	Recirculation	Face
Max warm	OFF	Hi (7 step)	Fresh	Def/Foot

- ④ Temperature unit can be changed between celsius (°C) and fahrenheit (°F)
 - a. Default status (°C)
 - b. The temperature unit can be changed (°C ↔ °F) by pressing temperature switches (Up/Down) simultaneously for more than 5 seconds.

(6) Fan speed switch

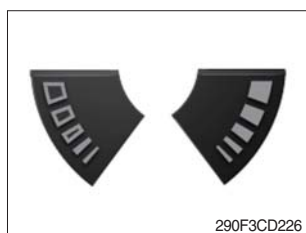

- ① Fan speed is controlled automatically by set temperature.
- ② This switch controls fan speed manually.
 - There are 8 up/down steps to control fan speed.
 - The maximum step or the minimum step beeps 5 times.

(7) Fan speed



- ① Steps 1 through 8 to display the amount of air being circulated.

(8) Fresh air/air recirculation switch



- ① It is possible to change the air-inlet method.
 - a. **Fresh air** (Icon: outside air)
Inhaling air from the outside.
 - b. **Air recirculation** (Icon: circular arrows)
It recycles the heated or cooled air to increase the energy efficiency.
 - ※ **Change air occasionally when using recirculation for a long periods of time.**
 - ※ **Check condition of an outer filter and an inner filter periodically to maintain good efficiency of the system.**

(9) Air mode switch



- ① Operating this switch, it beeps and displays symbol of each mode in the following order. (Face → Face/Rear → Face/Rear/Foot → Foot → Def/Foot)

Mode switch		Face	Face/Rear	Face/Rear/Foot	Foot	Def/Foot
Outlet	A	●	●	●		
	B		●	●		
	C			●	●	●
	D					●

- ② When operating defroster, FRESH AIR/AIR RECIRCULATION switch turns to FRESH AIR mode and air conditioner switch turns ON.

(10) Self Diagnosis Function

- ① Diagnostic methods : Diagnostic information window, select
- ② Diagnostic indication (Displays fault)

Fault code	Description	Fail safe function
F01	Ambient temperature sensor open	20°C alternate value control
F02	Ambient temperature sensor short	
F03	Cab inside temperature sensor open	25°C alternate value control
F04	Cab inside temperature sensor short	
F05	Evaporate temperature sensor open	0°C alternate value control
F06	Evaporate temperature sensor short	
F07	Null	-
F08	Null	-
F09	Mode 1 actuator open/short	The alternate value is face
F10	Mode 1 actuator drive circuit malfunction	If not, the alternate value is Def/Foot
F11	Intake actuator open/short	The alternate value is air recirculation
F12	Intake actuator drive circuit malfunction	The alternate fresh air
F13	Temperature actuator open/short	If opening amount is 0 %, the alternate value is 0 %
F14	Temperature actuator drive circuit malfunction	If not, the alternate value is 100 %
F15	Null	-
F16	Null	-


GROUP 16 FUEL WARMER SYSTEM

1. SPECIFICATION


- 1) Operating voltage : 24 ± 4 V
- 2) Power : 350 ± 50 W
- 3) Current : 15 A

2. OPERATION

- 1) The current of fuel warmer system is automatically controlled without thermostat according to fuel temperature.
 - 2) At the first state, the 15 A current flows to the fuel warmer and engine may be started in 1~2 minutes.
 - 3) If the fuel starts to flow, ceramic-disk in the fuel warmer heater senses the fuel temperature to reduce the current as low as 1.5 A.
- So, fuel is protected from overheating by this mechanism.

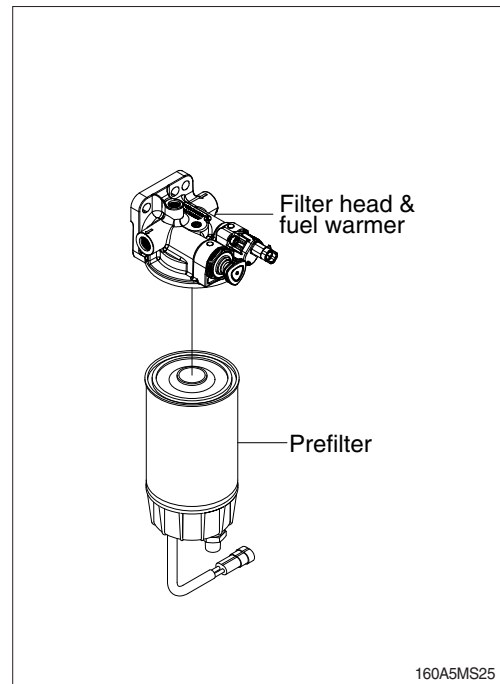

3. ELECTRIC CIRCUIT

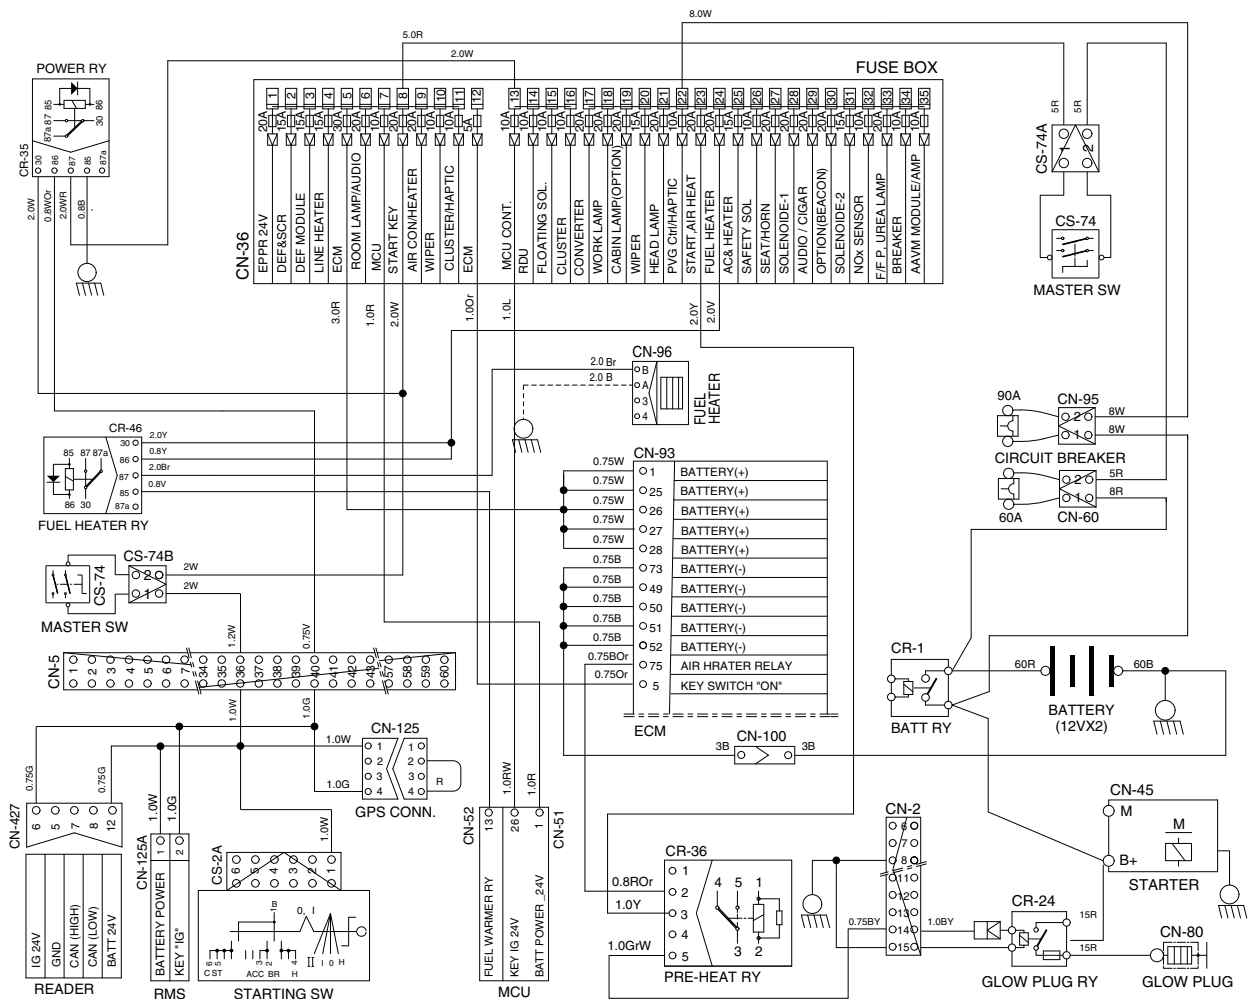

GROUP 17 1 or 2-WAY OPTIONAL PIPING PRESSURE REMOVAL SYSTEM

1. OUTLINE

This system can be removed the residual pressure of the optional attachment hydraulic piping when the quick coupler is operated by the switch of the RCV lever and then the oil quick function of the optional attachment is performed.


※ Oil quick function

In a convention work, the optional attachments such as breaker or grab are installed on the machine and needed to connect hydraulic piping additionally.


But currently, the hydraulic piping connection is not needed by the work man. The attachment is installed on the machine and the hydraulic pipings are connected by a coupler that is built in the quick coupler automatically and the attachment can be ready to operate immediately. This is called the oil quick function.

2. OPERATING PRINCIPLE

This is operated by controlling the setting pressure of the electric type relief valve when you operate the quick coupler with the switch of the RCV lever.

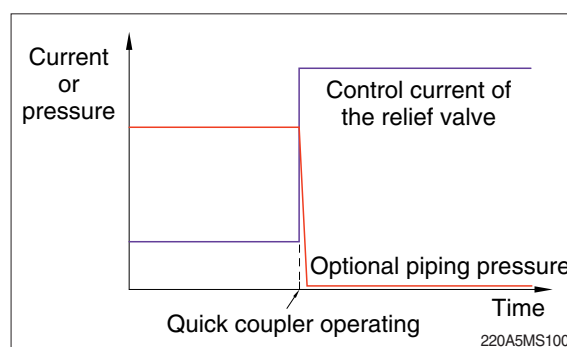

3. SETTING METHOD

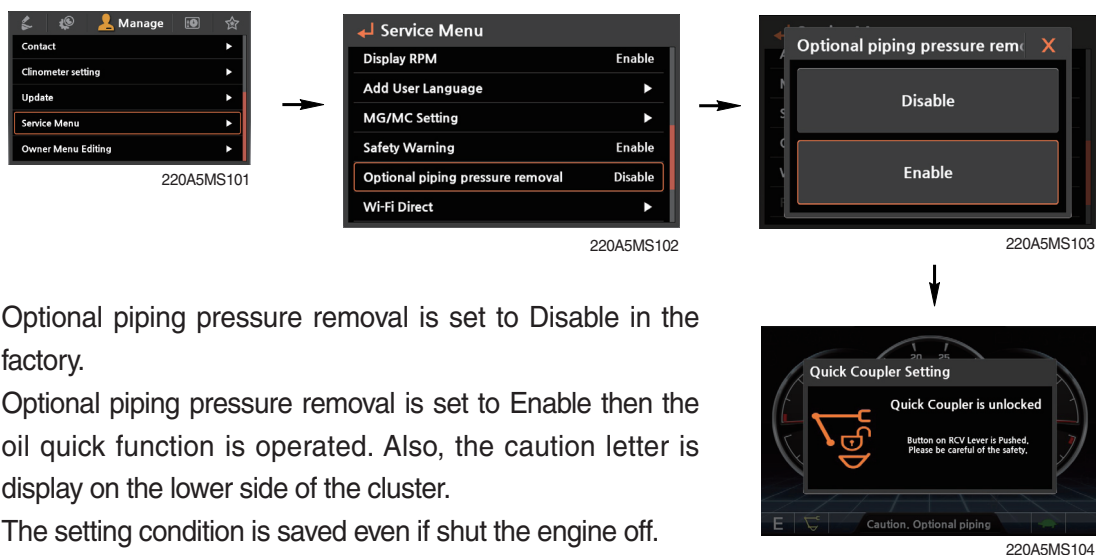

- 1) Optional piping pressure removal is set to Disable in the factory.
- 2) Optional piping pressure removal is set to Enable then the oil quick function is operated. Also, the caution letter is display on the lower side of the cluster.
- 3) The setting condition is saved even if shut the engine off.

4. CAUTION

- 1) When the oil quick function is used, the hydraulic drift and etc can be occurred as the modified equipment specification.
- 2) The status of the cluster must be changed by a manager that is well-acquainted with the function and the operator must be well-informed of the oil quick function and safety work.

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting	6-1
Group 2 Hydraulic and Mechanical System	6-4
Group 3 Electrical System	6-25
Group 4 Mechatronics System	6-43
Group 5 Air conditioner and Heater System	6-71


GROUP 1 BEFORE TROUBLESHOOTING

1. INTRODUCTION

When a trouble is occurred in the machine, this section will help an operator to maintain the machine with easy.

The trouble of machine is parted Hydraulic & Mechanical system, Electrical system, Mechatronics system and Air conditioner and heater system. At each system part, an operator can check the machine according to the troubleshooting process diagram.

※ Before carrying out troubleshooting procedure, check monitoring menu in the cluster.

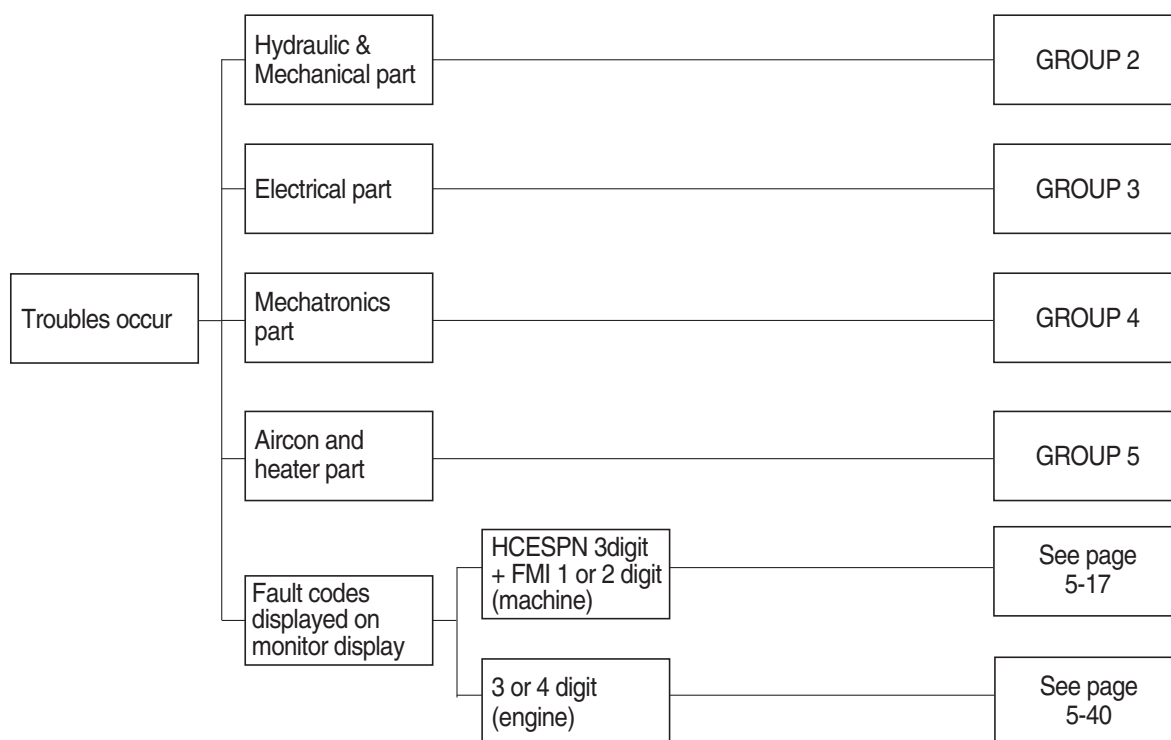


2. DIAGNOSING PROCEDURE

To carry out troubleshooting efficiently, the following steps must be observed.

STEP 1. Study the machine system

Study and know how the machine is operating, how the system is composing, what kinds of function are installed in the machine and what are specifications of the system components by the machine service manual.


Especially, deepen the knowledge for the related parts of the trouble.

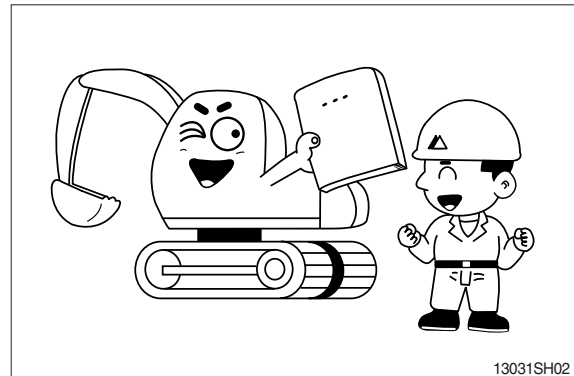

STEP 2. Ask the operator

Before inspecting, get the full story of malfunctions from a witness --- the operator.


- 1) How the machine is used and when it is serviced?
- 2) When the trouble was noticed and what work the machine was doing at that time?
- 3) What is the phenomenon of the trouble?
Was the trouble getting worse, or did it come out suddenly for the first time?
- 4) Did the machine have any troubles previously? If so, which parts were repaired before.

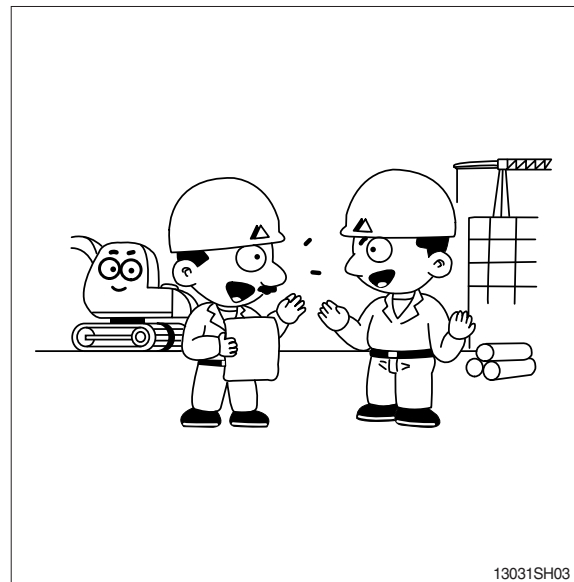

STEP 3. Inspect the machine

Before starting troubleshooting, check the machine for the daily maintenance points as shown in the operator's manual.


And also check the electrical system including batteries, as the troubles in the electrical system such as low battery voltage, loose connections and blown out fuses will result in malfunction of the controllers causing total operational failures of the machine.

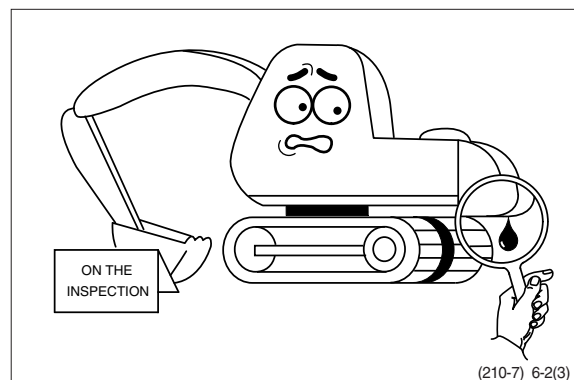

STEP 4. Inspect the trouble actually on the machine


In case that some trouble cannot be confirmed, obtain the details of the malfunction from the operator.

Also, check if there are any incomplete connections of the wire harnesses or not.

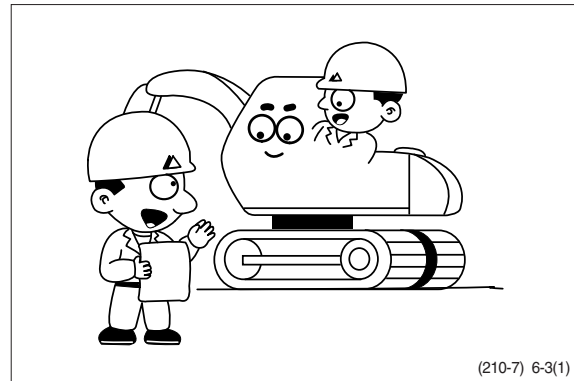

STEP 5. Perform troubleshooting


According to where the trouble parts are located, hydraulic & mechanical system part or electrical system part or mechatronics system part, perform troubleshooting the machine refer to the each system part's troubleshooting process diagram.

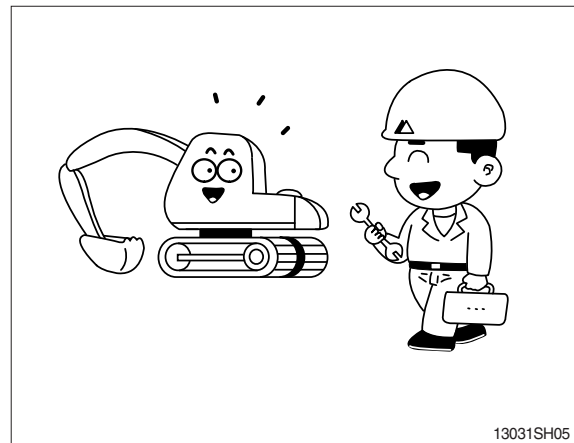

STEP 6. Trace a cause

Before reaching a conclusion, check the most susceptible causes again. Try to trace what the real cause of the trouble is.

Make a plan of the appropriate repairing procedure to avoid consequential malfunctions.

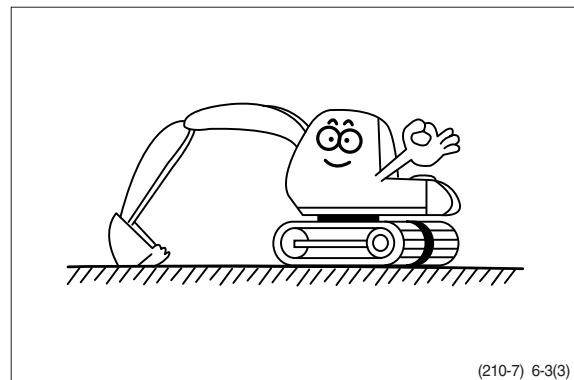

GROUP 2 HYDRAULIC AND MECHANICAL SYSTEM

1. INTRODUCTION

1) MACHINE IN GENERAL

- (1) If even a minor fault is left intact and operation is continued, a fatal failure may be caused, entailing a large sum of expenses and long hours of restoration.

Therefore when even a small trouble occurs, do not rely on your intuition and experience, but look for the cause based on the troubleshooting principle and perform maintenance and adjustment to prevent major failure from occurring. Keep in mind that a fault results from a combination of different causes.

- (2) The following lists up commonly occurring faults and possible causes with this machine. For the troubleshooting of the engine, refer to the coming troubleshooting and repair.

- (3) When carrying out troubleshooting, do not hurry to disassemble the components.

It will become impossible to find the cause of the problem.

- (4) Ask user or operator the following.


- ① Was there any strange thing about machine before failure occurred?
- ② Under what conditions did the failure occur?
- ③ Have any repairs been carried out before the failure?

- (5) Check before troubleshooting.

- ① Check oil and fuel level.
- ② Check for any external leakage of oil from components.
- ③ Check for loose or damage of wiring and connections.

2) MACHINE STATUS MONITORING ON THE CLUSTER

- (1) The machine status such as the engine rpm, oil temperature, voltage and pressure etc. can be checked by this menu.

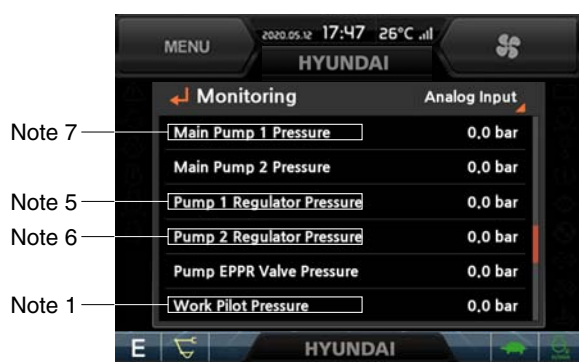

Analog 1



Analog 2


210A6HS01

(2) Specification


No.	Description	Specification
Note 1	Work pilot pressure	40 ⁺² ₀ bar
Note 2	Swing pilot pressure	0~40 bar
Note 3	Boom up pilot pressure	0~40 bar
Note 4	Arm/bucket pilot pressure	0~40 bar
Note 5	Pump 1 regulator pressure	0~50 bar
Note 6	Pump 2 regulator pressure	0~50 bar
Note 7	Pump 1 pressure	350 bar

2. DRIVE SYSTEM

1) UNUSUAL NOISE COMES OUT OF PUMP CONNECTION

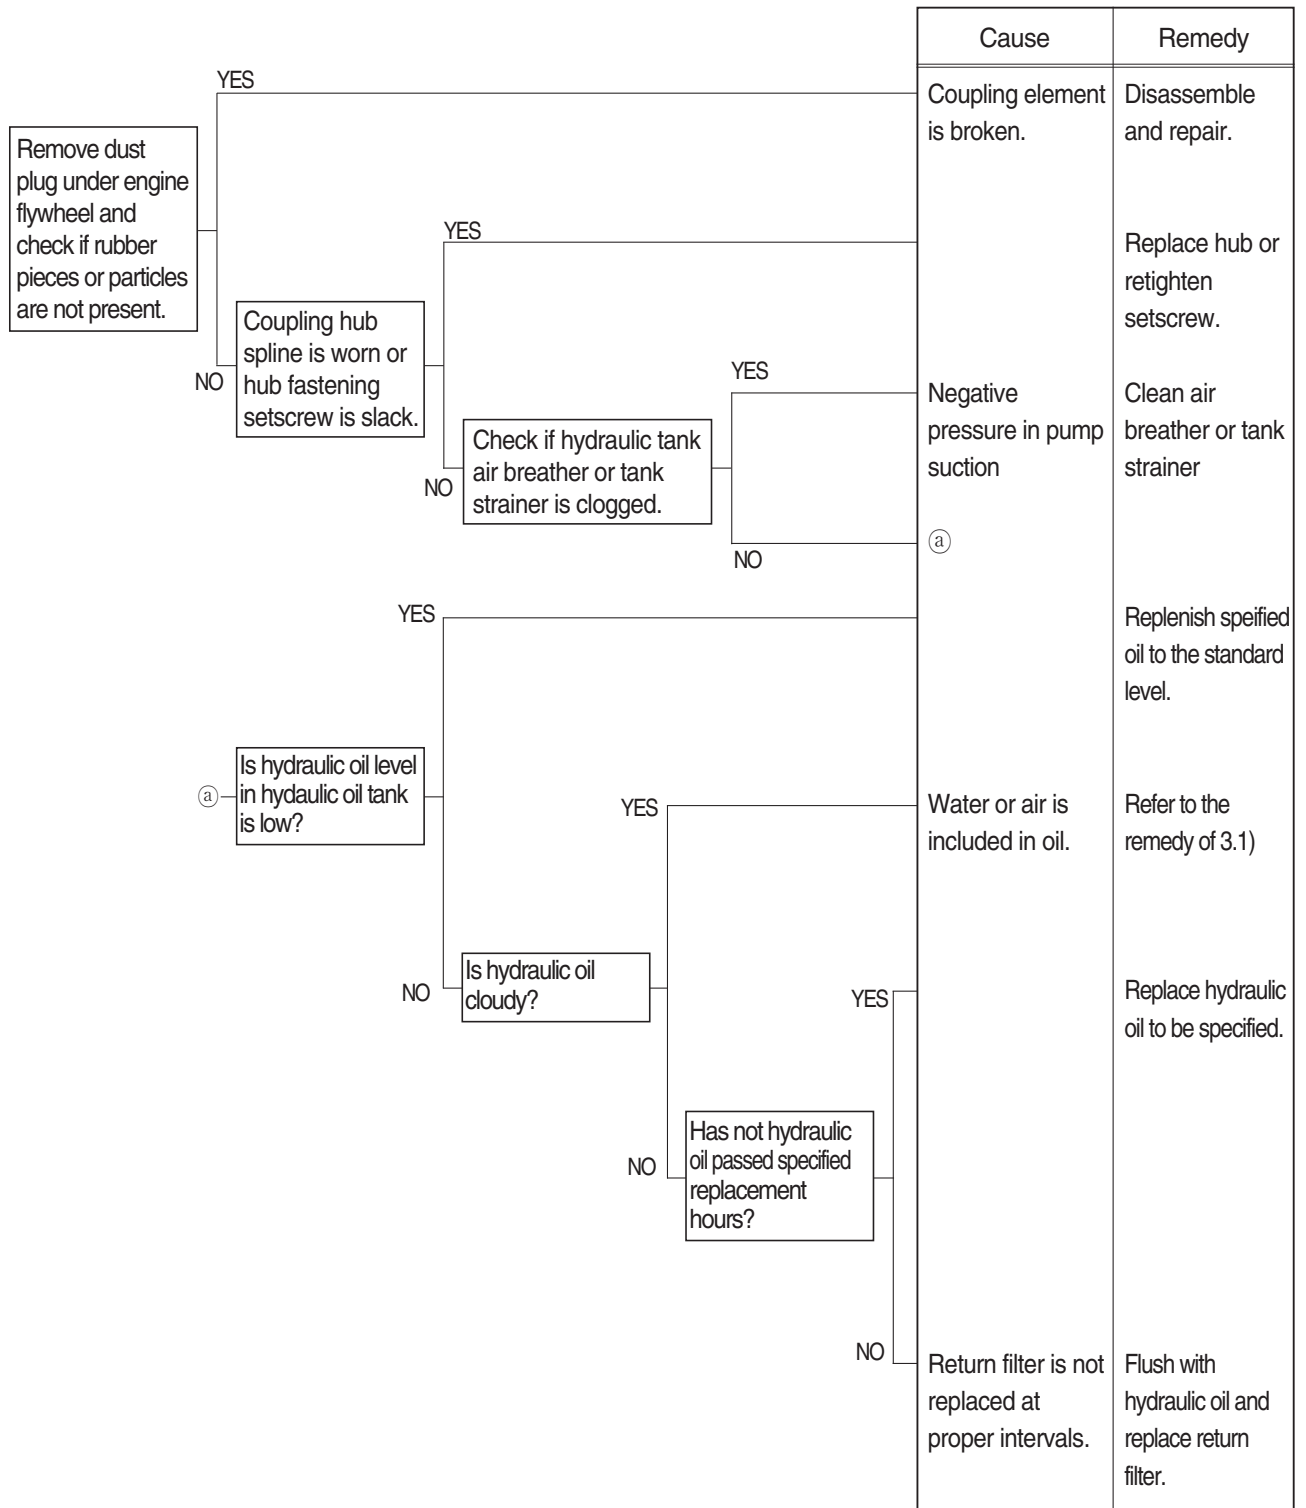

2) ENGINE STARTS BUT MACHINE DOES NOT OPERATE AT ALL

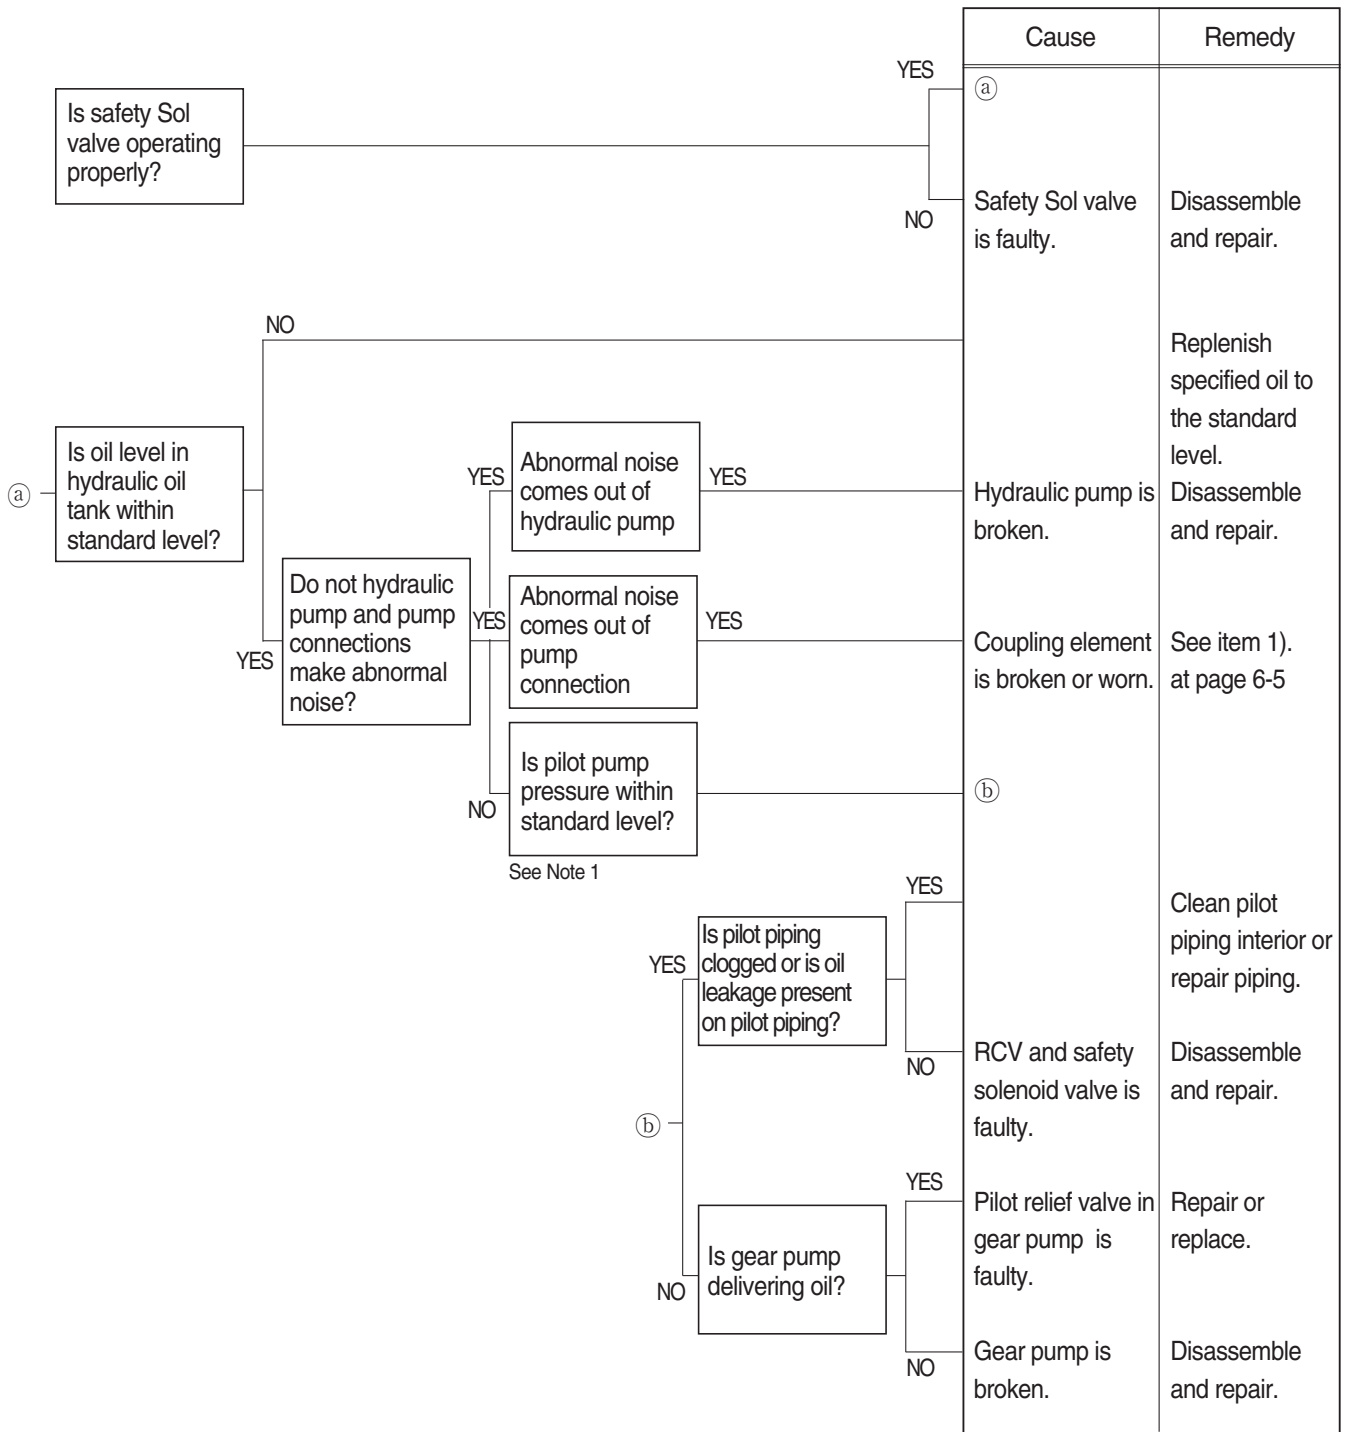


3. HYDRAULIC SYSTEM


1) HYDRAULIC OIL IS CLOUDY




2) HYDRAULIC OIL TEMPERATURE HAS RISEN ABNORMALLY

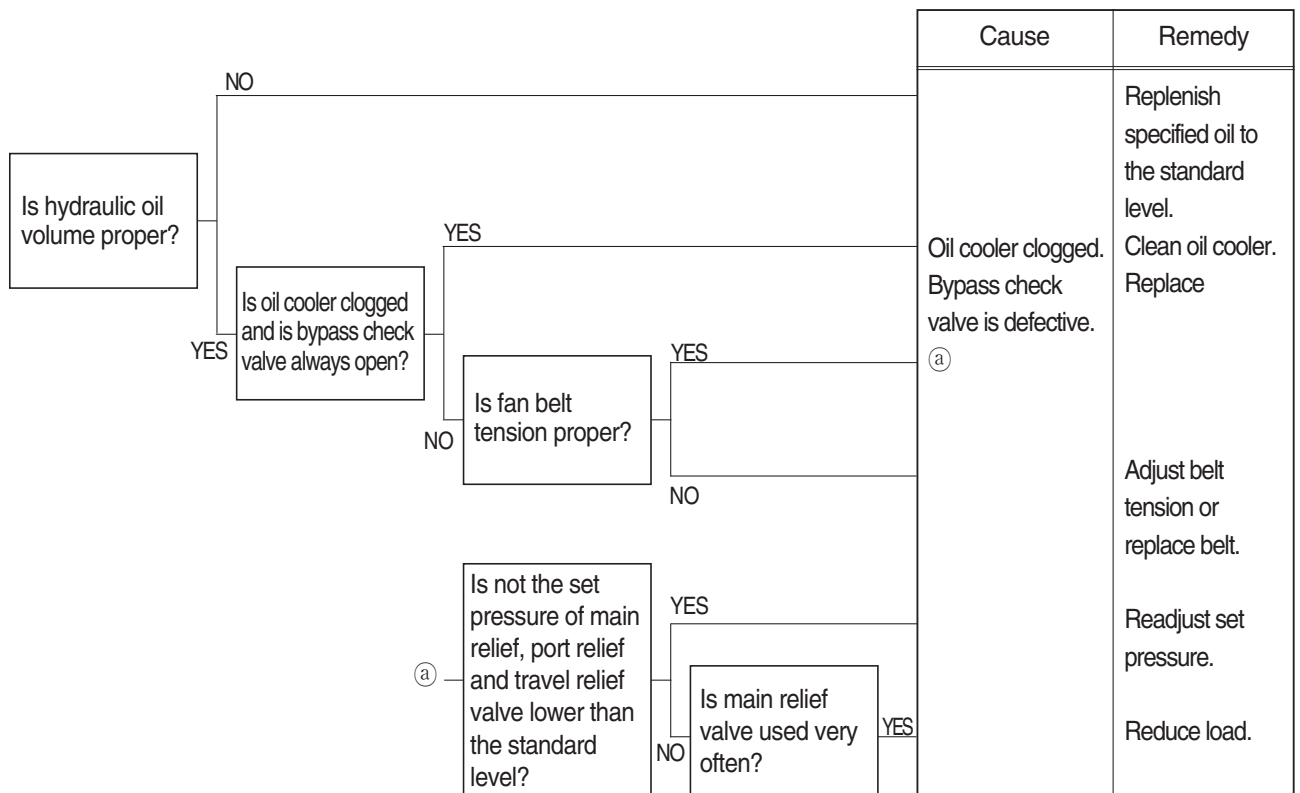

3) CAVITATION OCCURS WITH PUMP

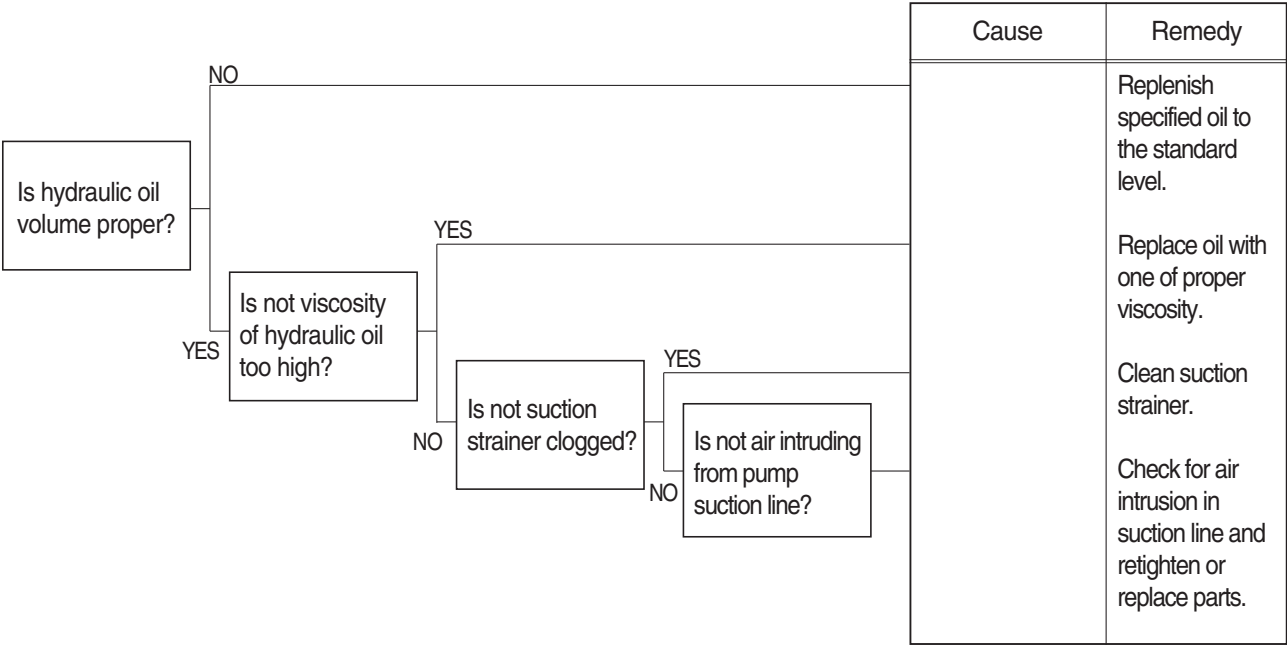


4) HYDRAULIC OIL IS CONTAMINATED

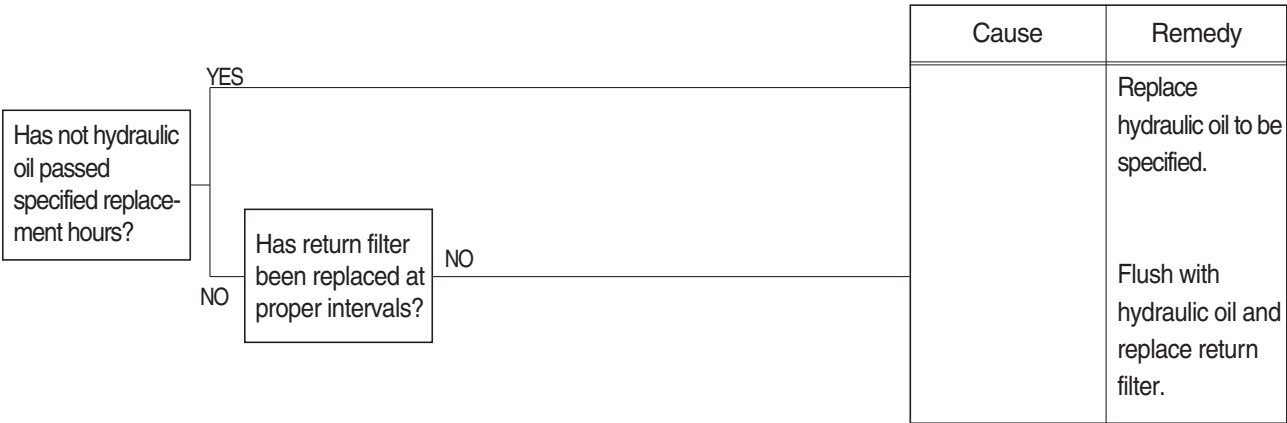


4. SWING SYSTEM


1) BOTH LH AND RH SWING ACTIONS ARE IMPOSSIBLE

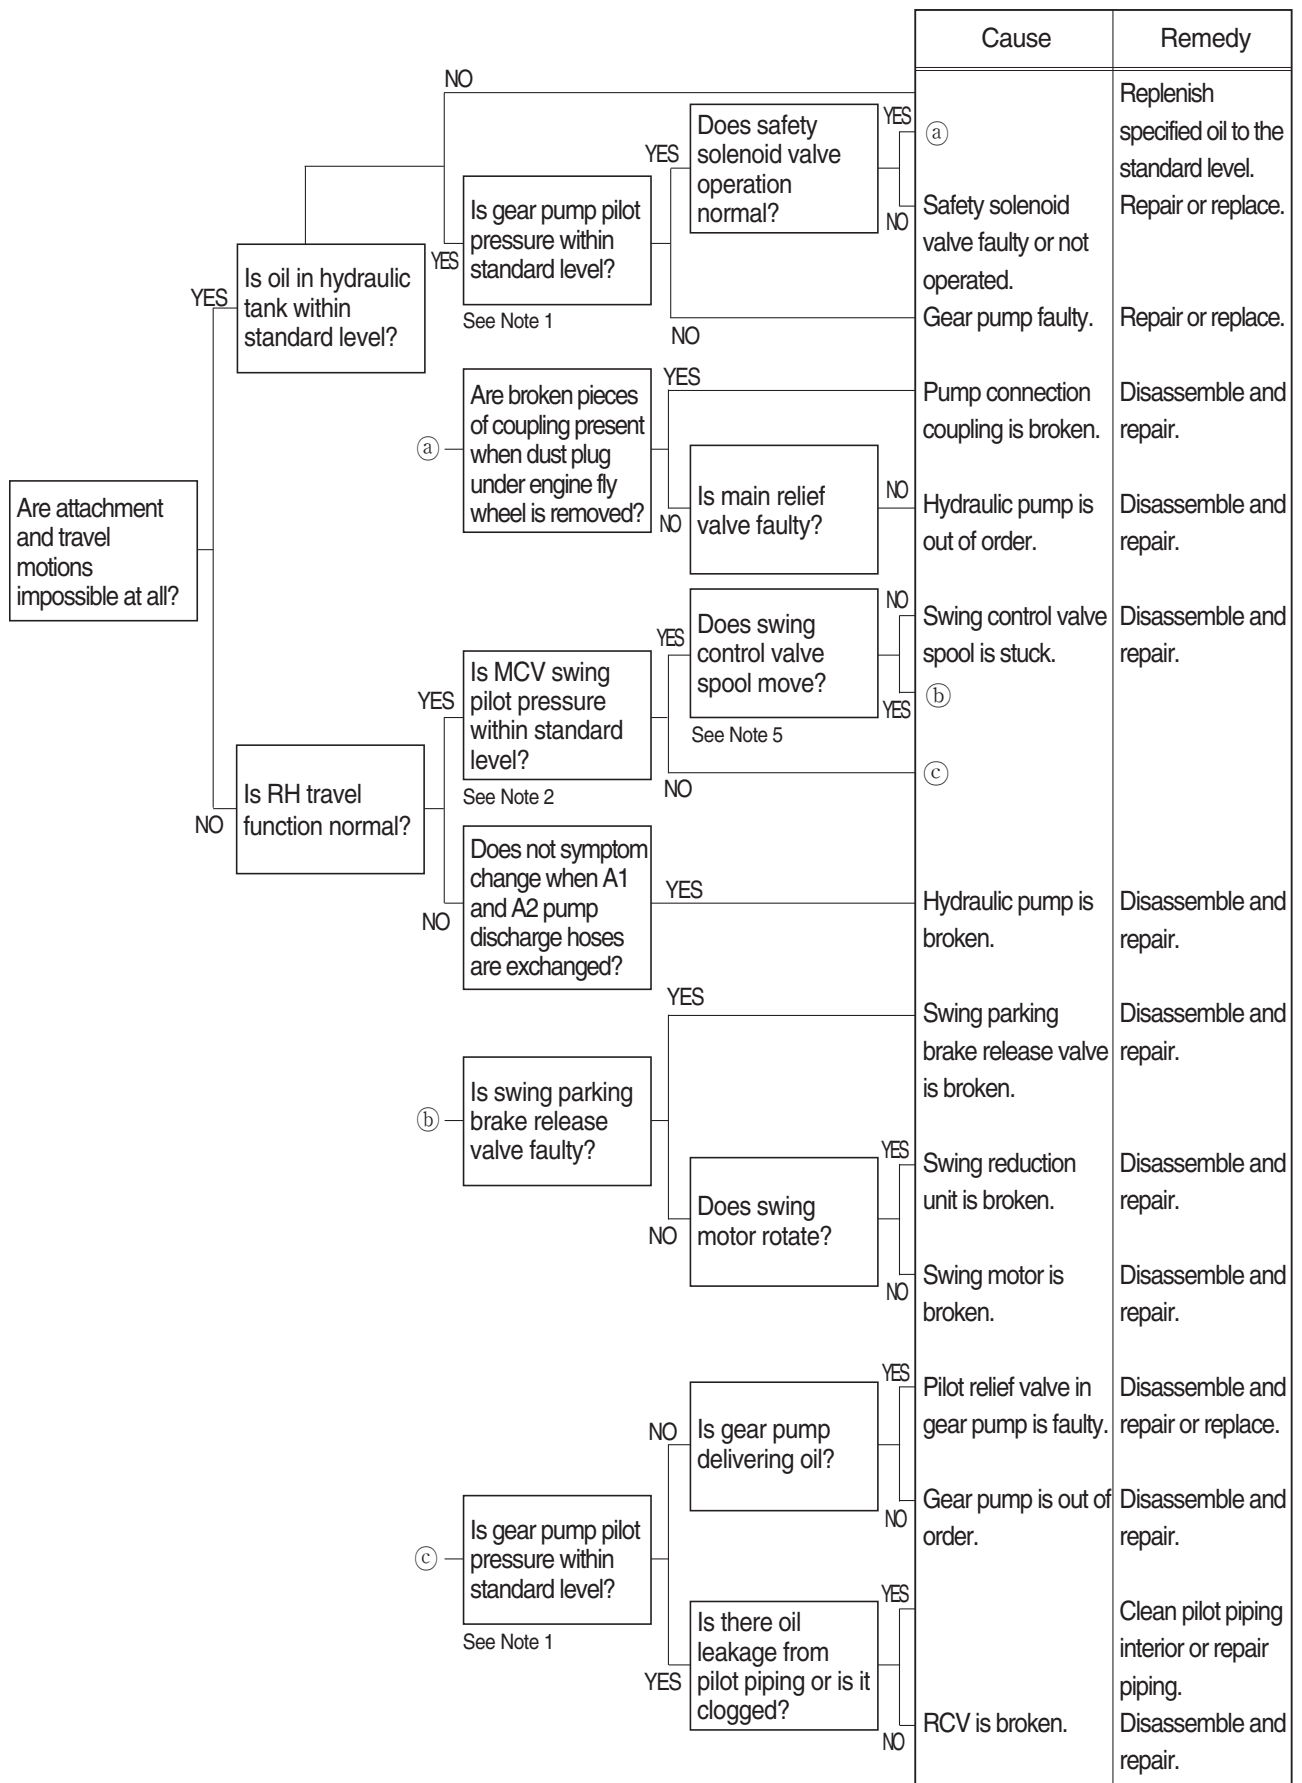


2) SWING SPEED IS LOW

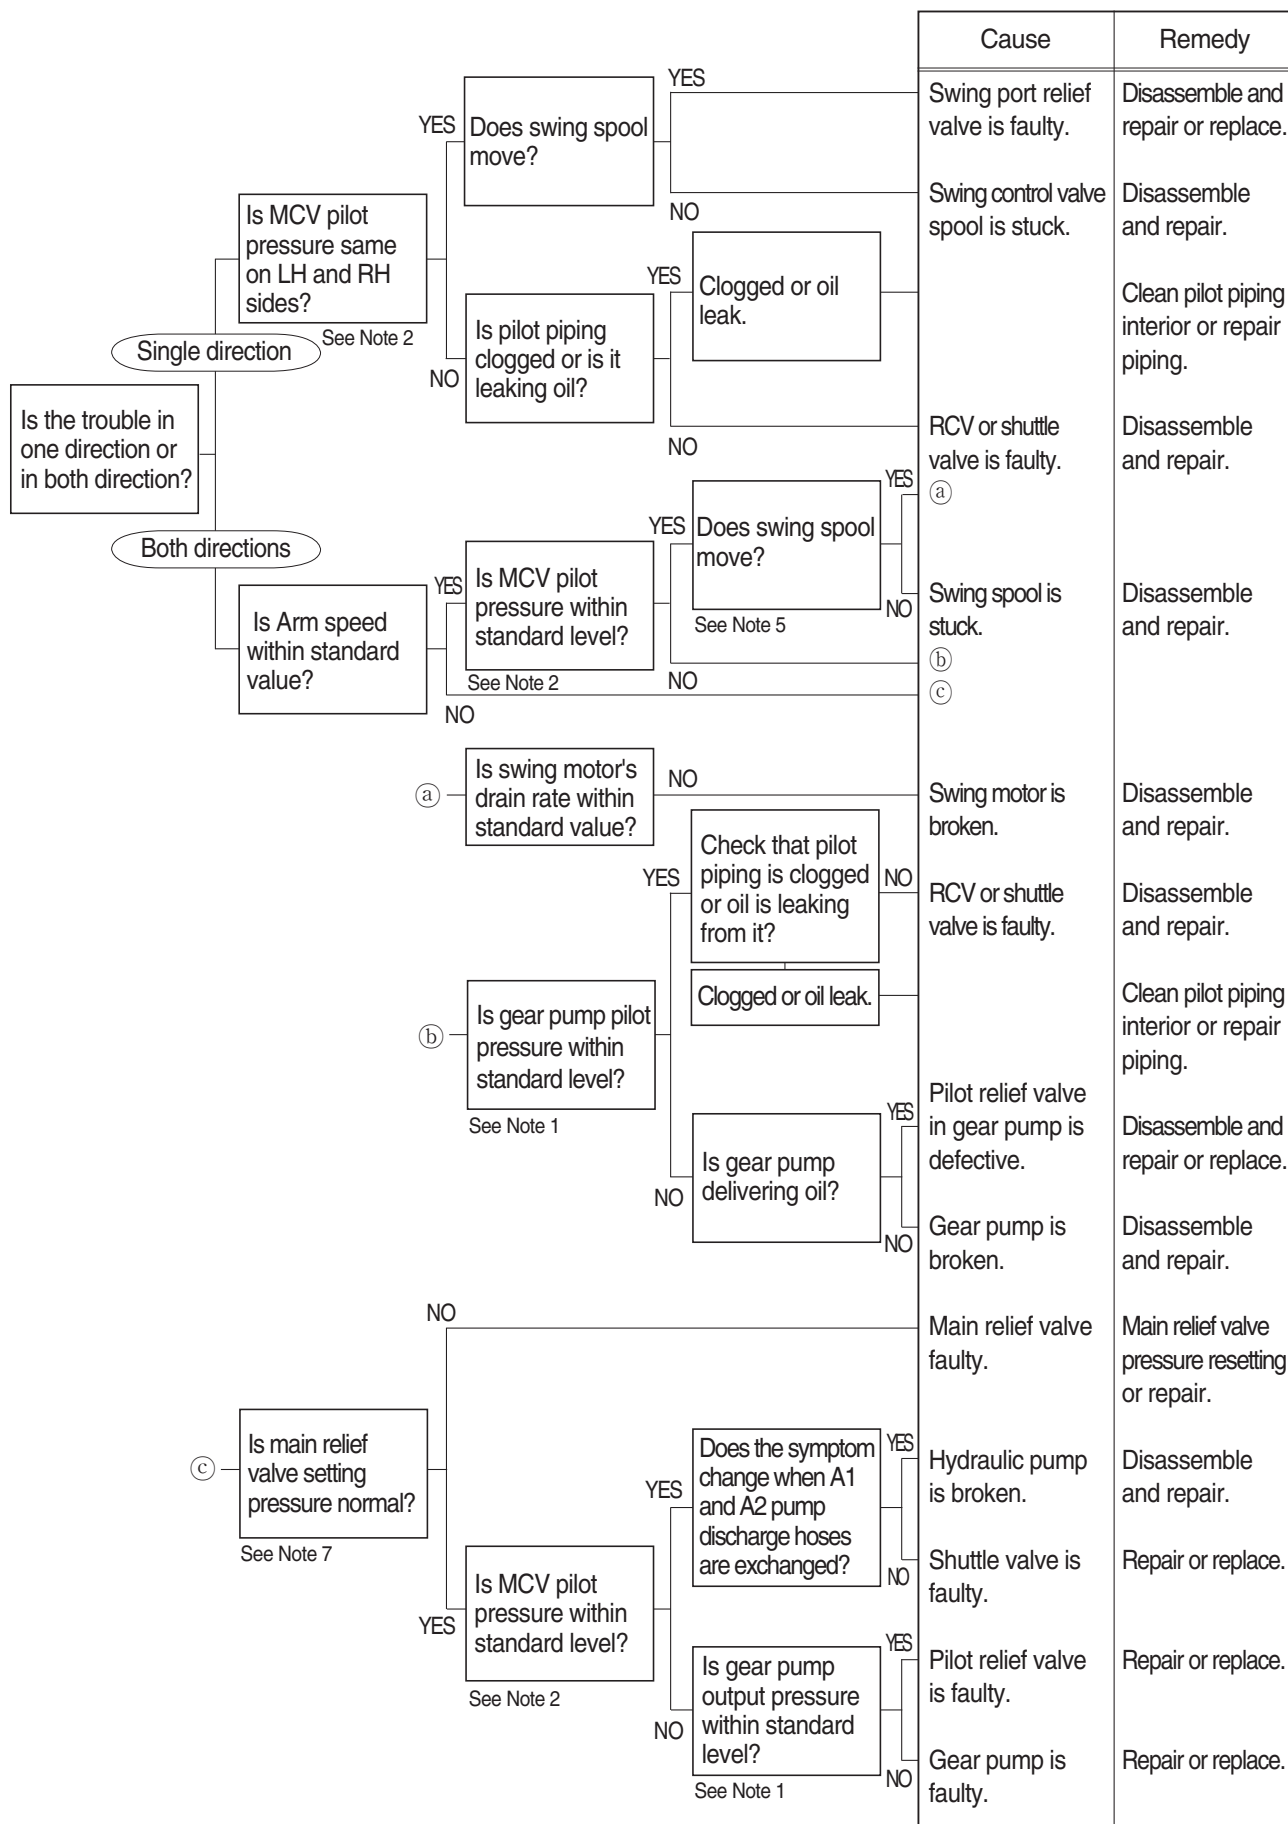


3) SWING MOTION IS IMPOSSIBLE IN ONE DIRECTION

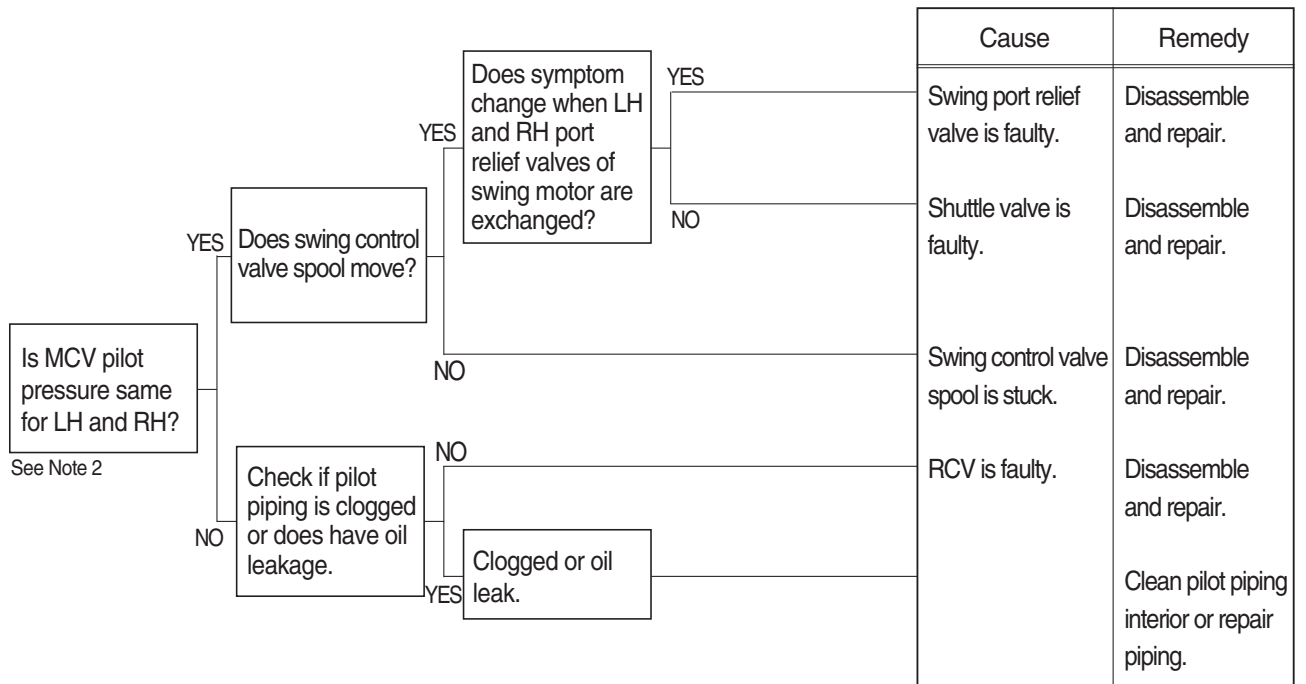


4) MACHINE SWINGS BUT DOES NOT STOP

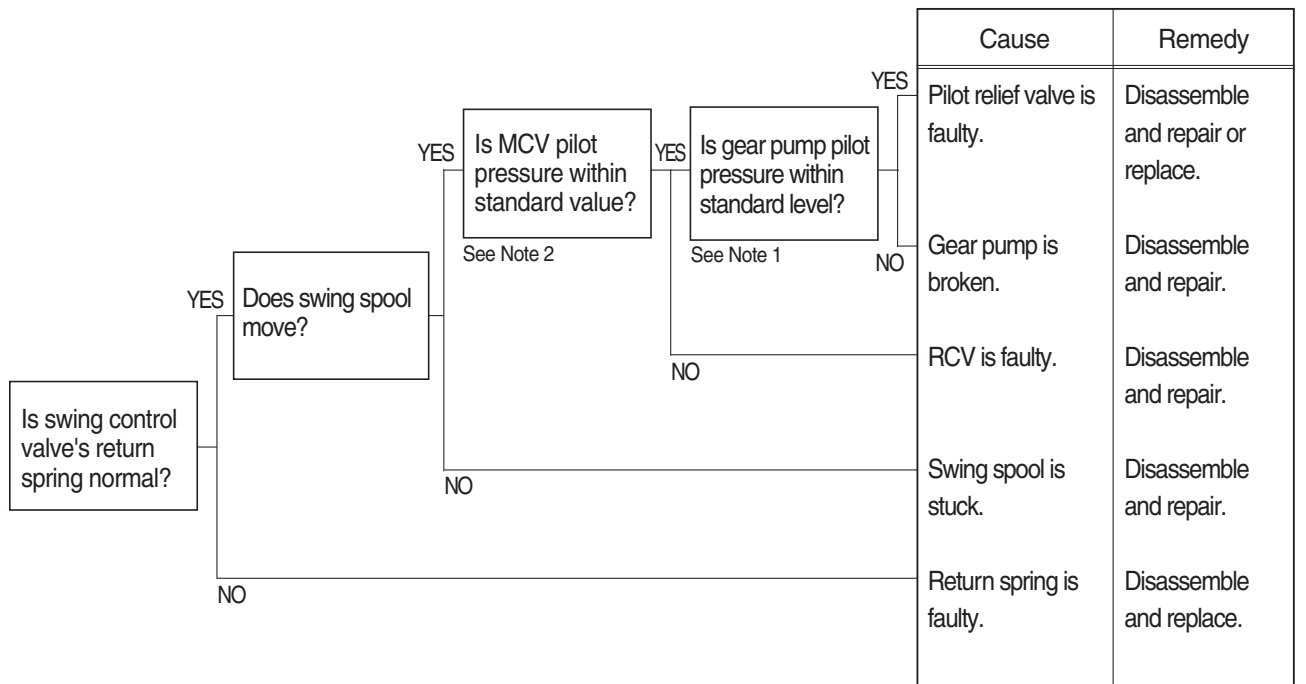


5) THE SWING UNIT DRIFTS WHEN THE MACHINE IS AT REST ON A SLOPE

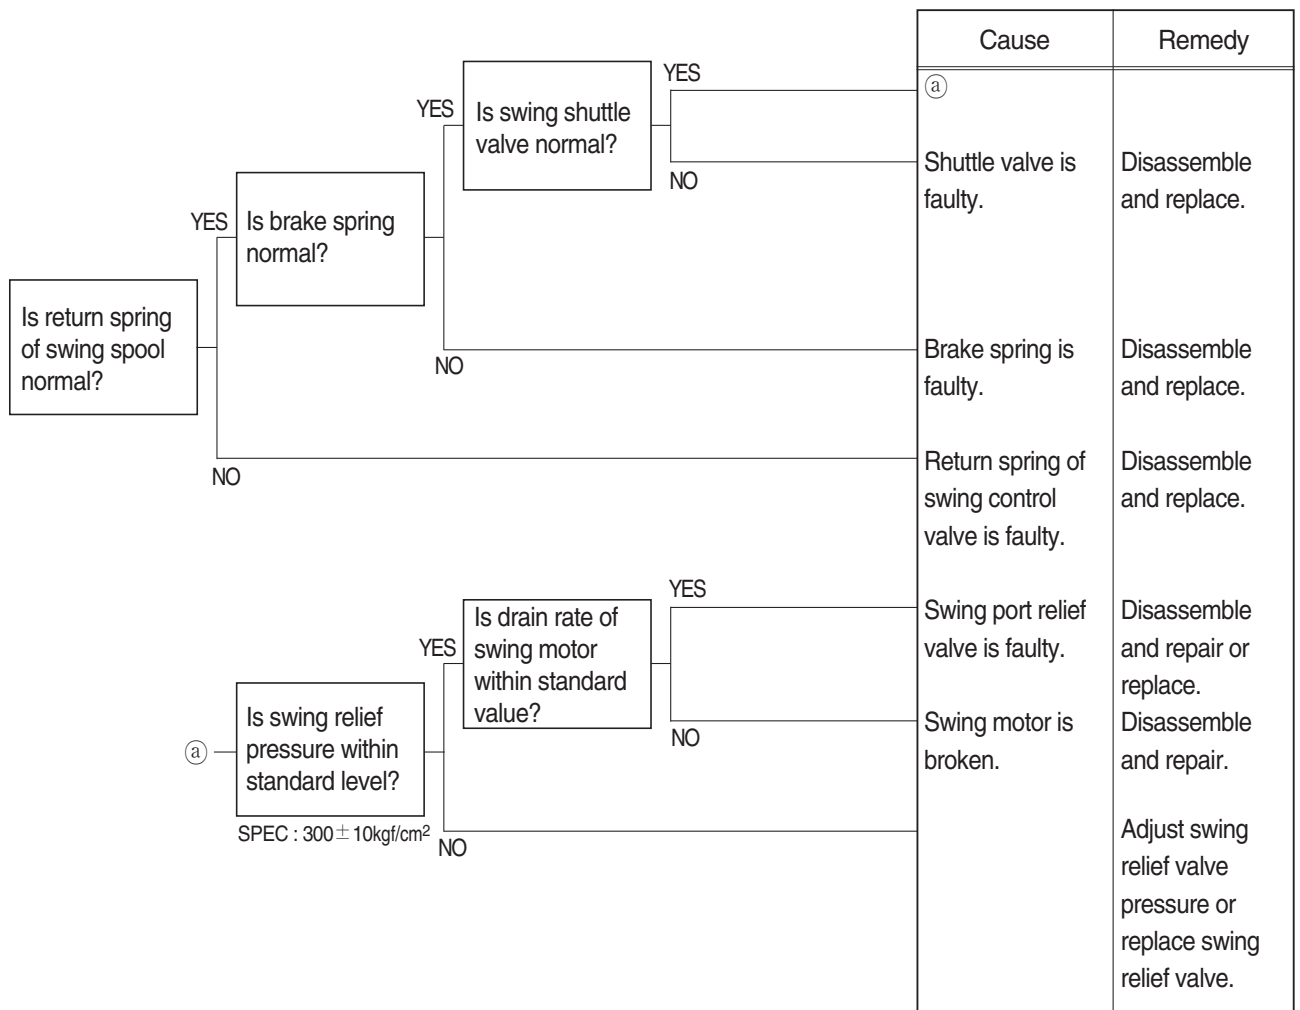

6) LARGE SHOCK OCCURS WHEN STOP SWINGING

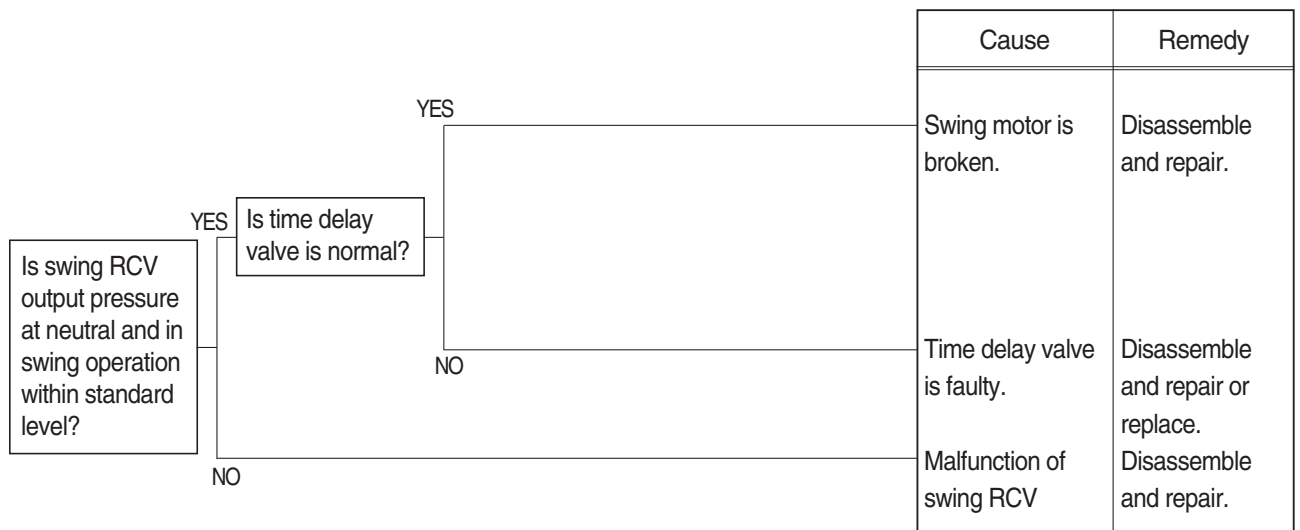


7) LARGE SOUND OCCURS WHEN STOP SWINGING

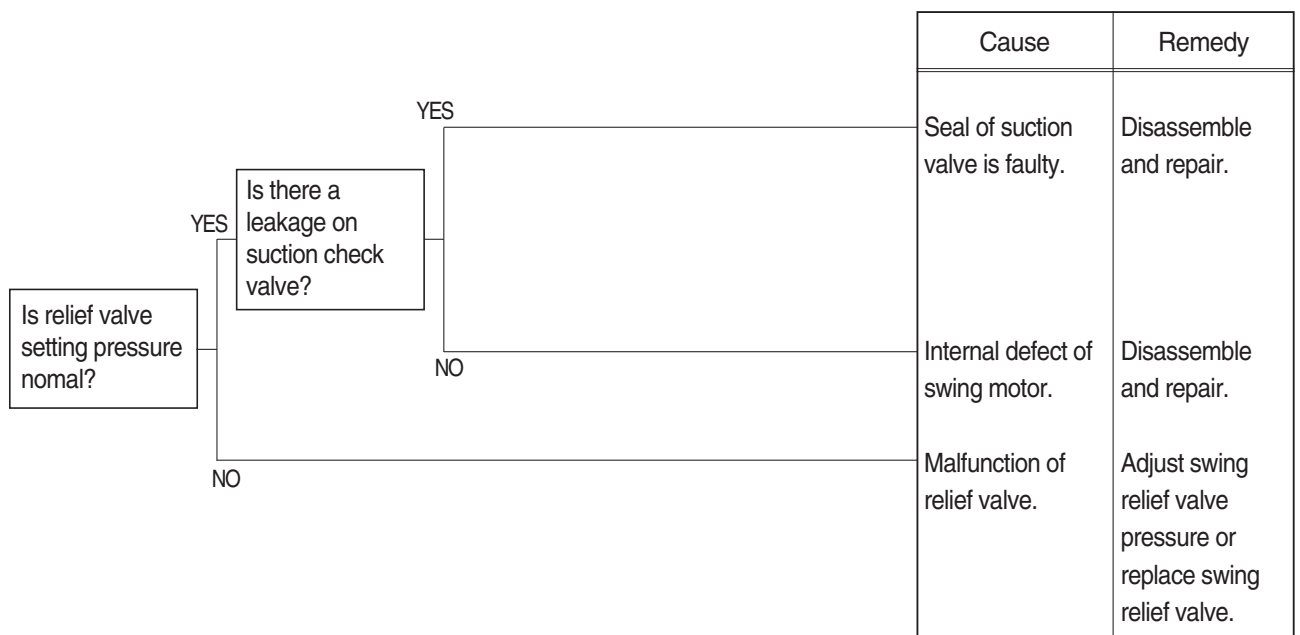


5. TRAVEL SYSTEM

1) TRAVEL DOES NOT FUNCTION AT ALL ON ONE SIDE

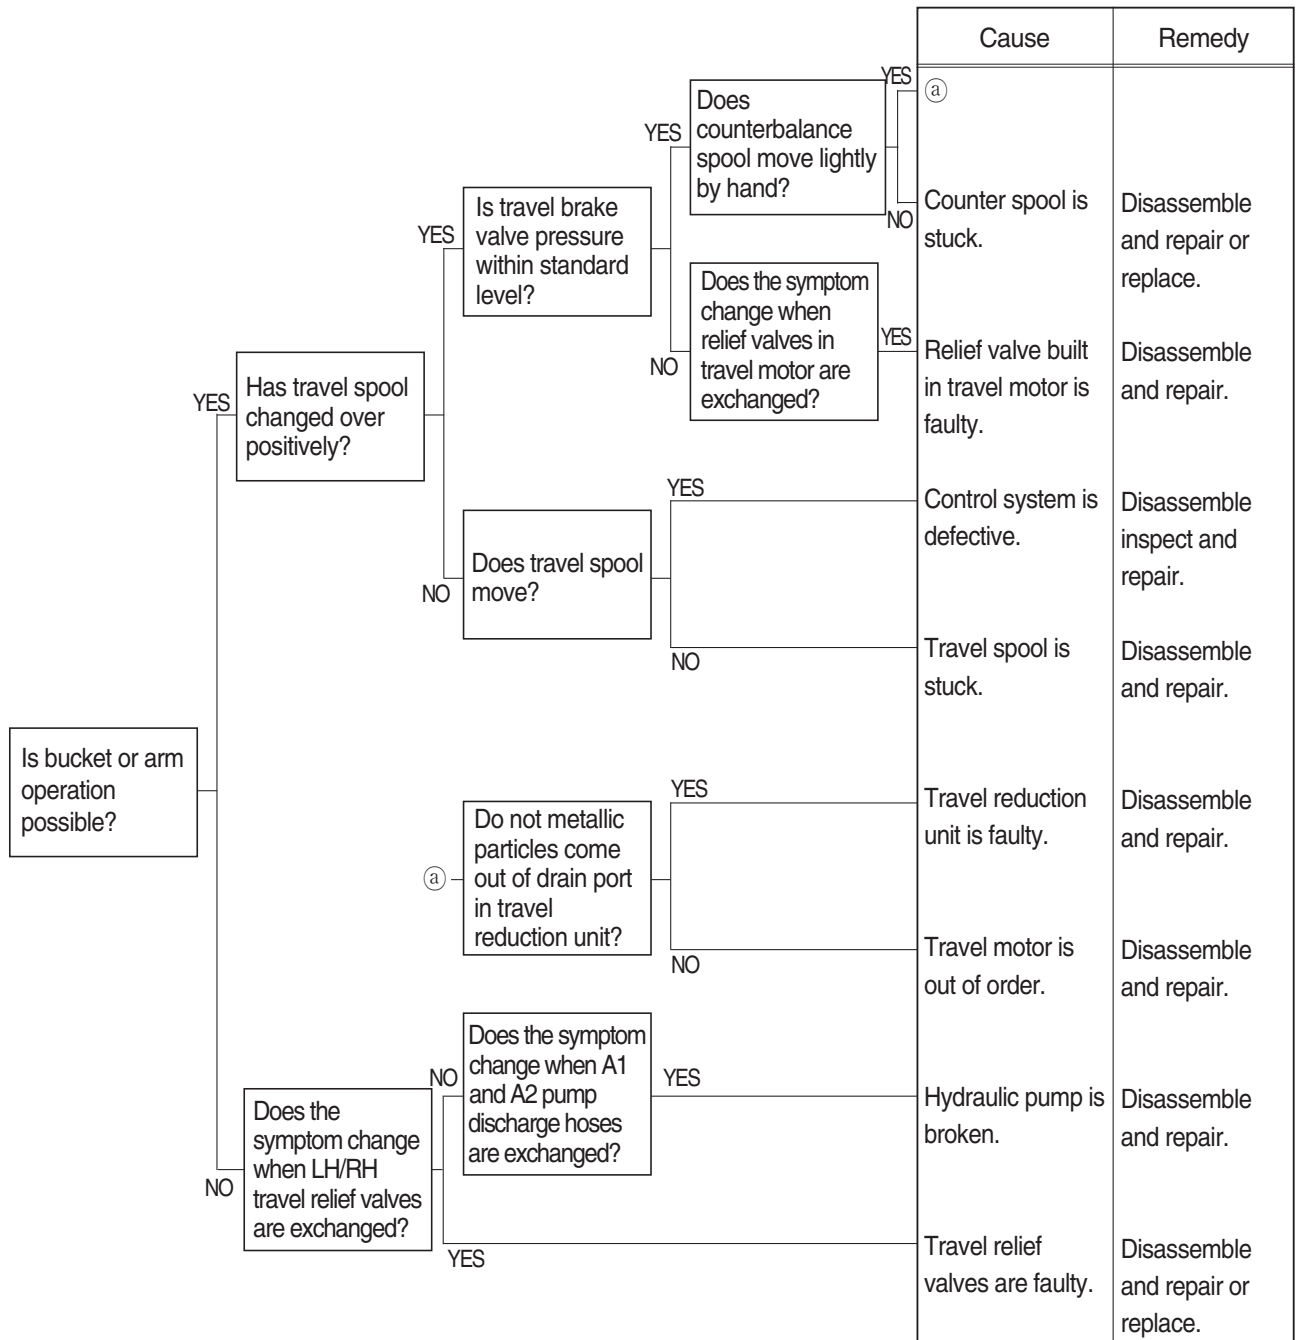


2) SPEED ON ONE SIDE FALLS AND THE MACHINE CURVES

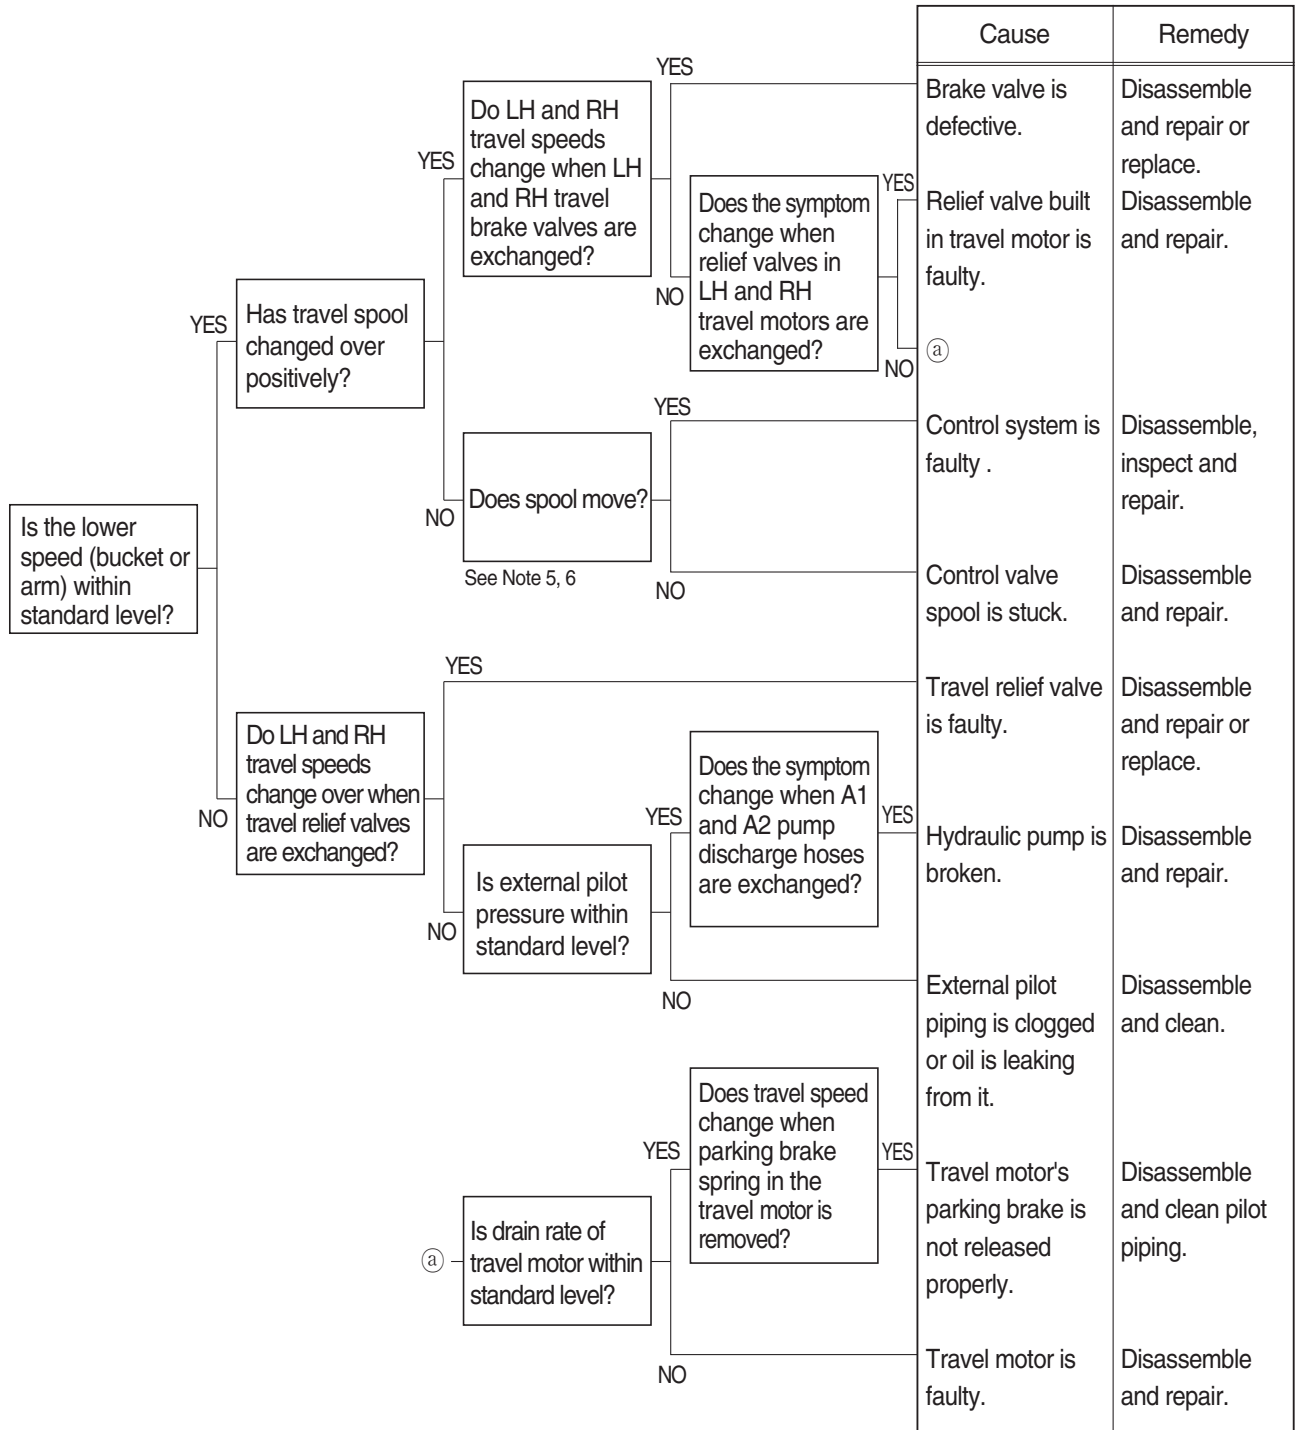


3) MACHINE DOES NOT STOP ON A SLOPE


Machine is pulled forward as sprocket rotates during digging operation.

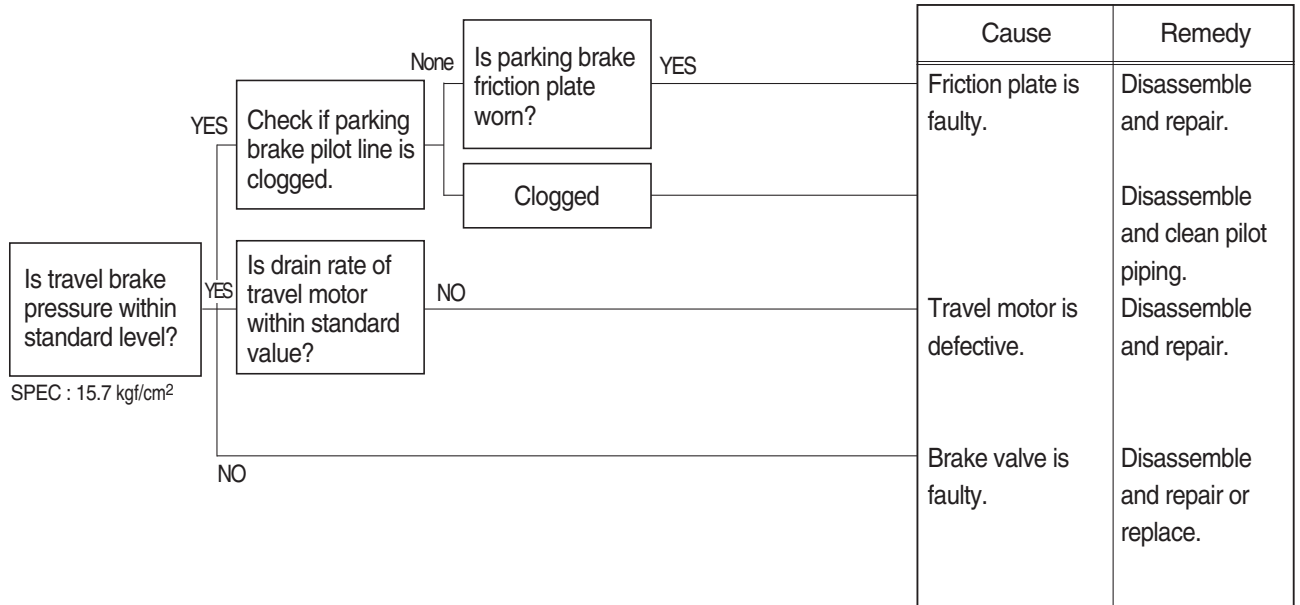

4) LH AND RH TRAVEL MOTIONS ARE IMPOSSIBLE

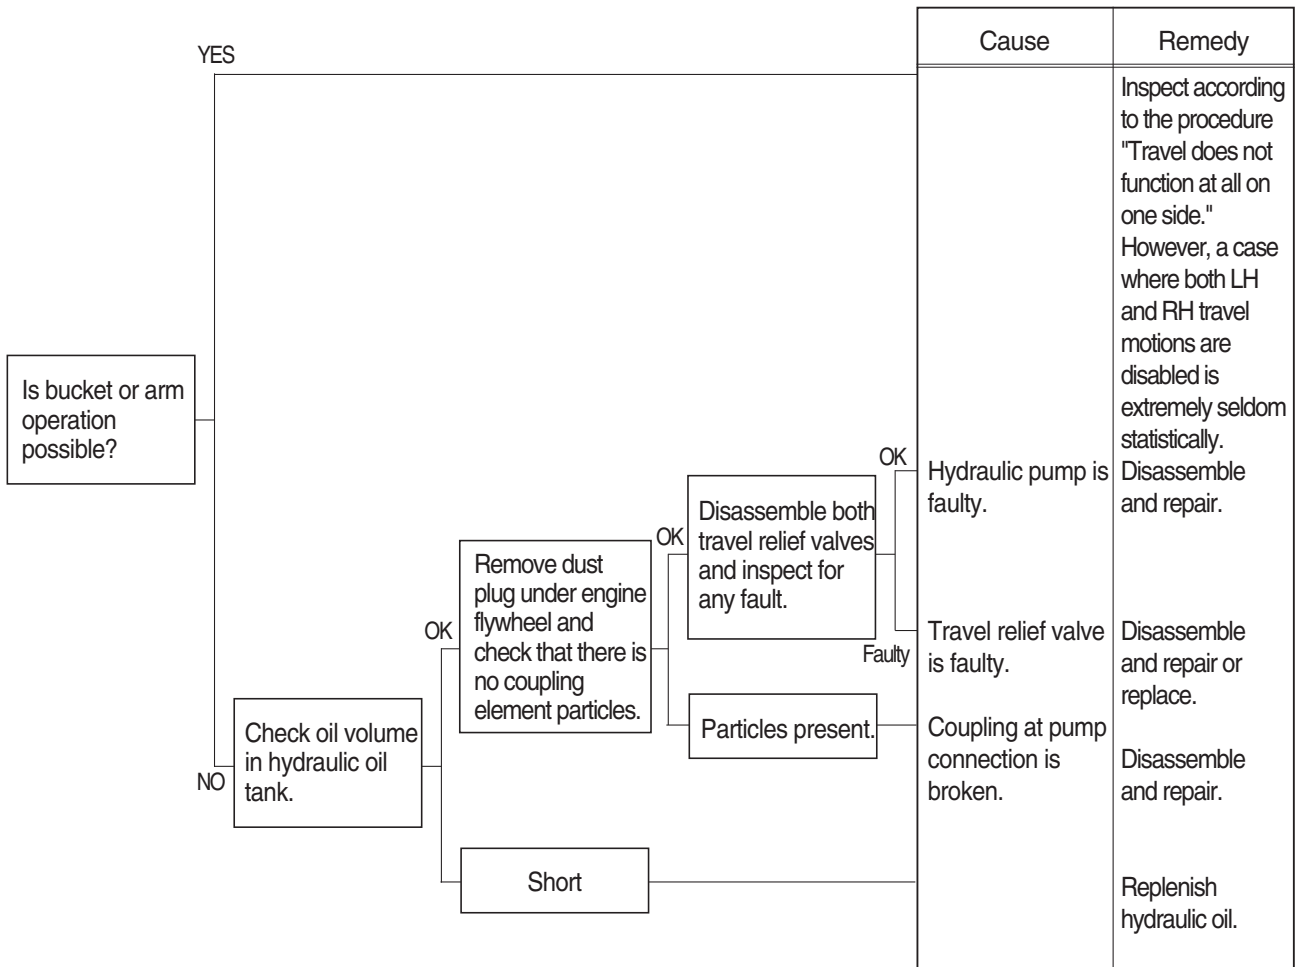


5) TRAVEL ACTION IS POWERLESS (travel only)

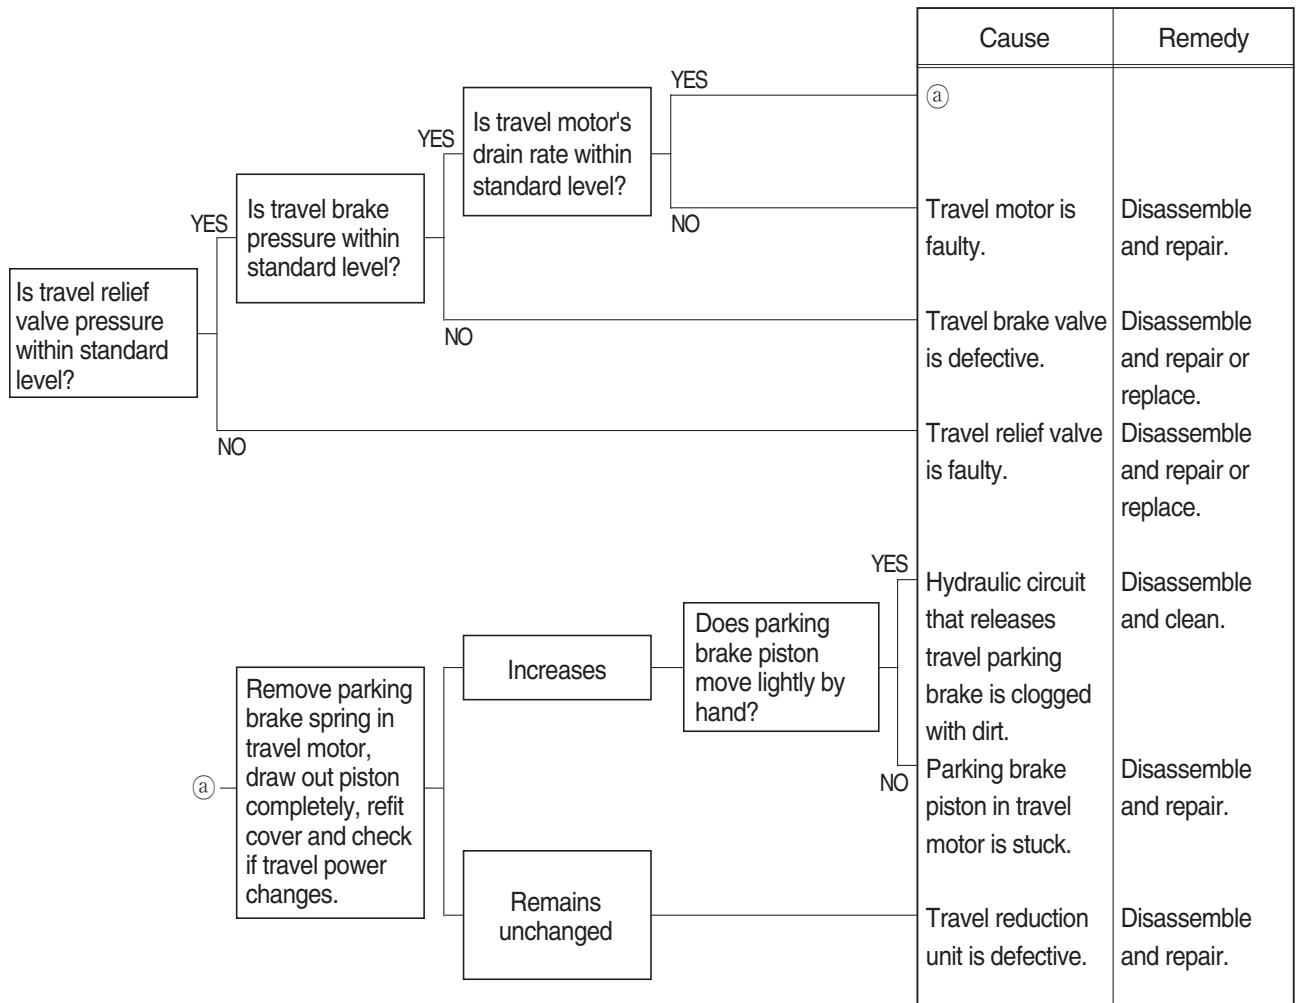

6) MACHINE RUNS RECKLESSLY ON A SLOPE




7) MACHINE MAKES A CURVED TRAVEL OR DOES NOT TRAVEL AT ALL WHEN TRAVEL AND ATTACHMENT OPERATIONS ARE EXECUTED AT THE SAME TIME

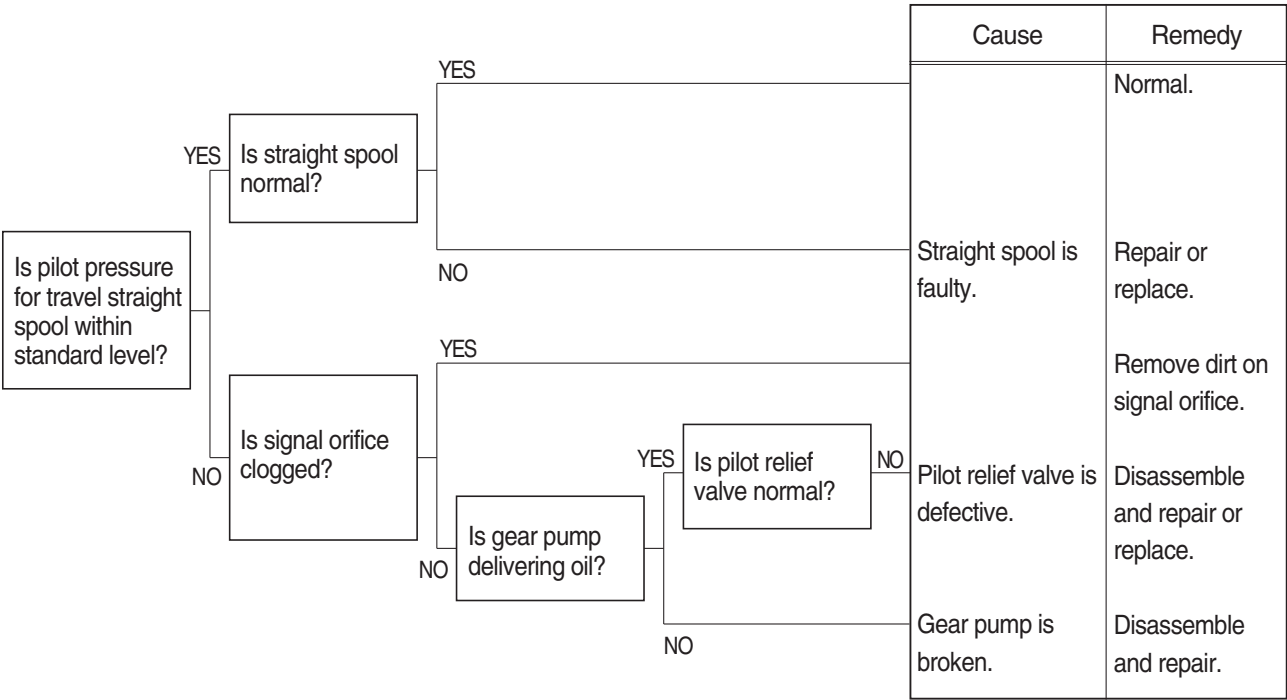


6. ATTACHMENT SYSTEM


1) BOOM OR ARM ACTION IS IMPOSSIBLE AT ALL

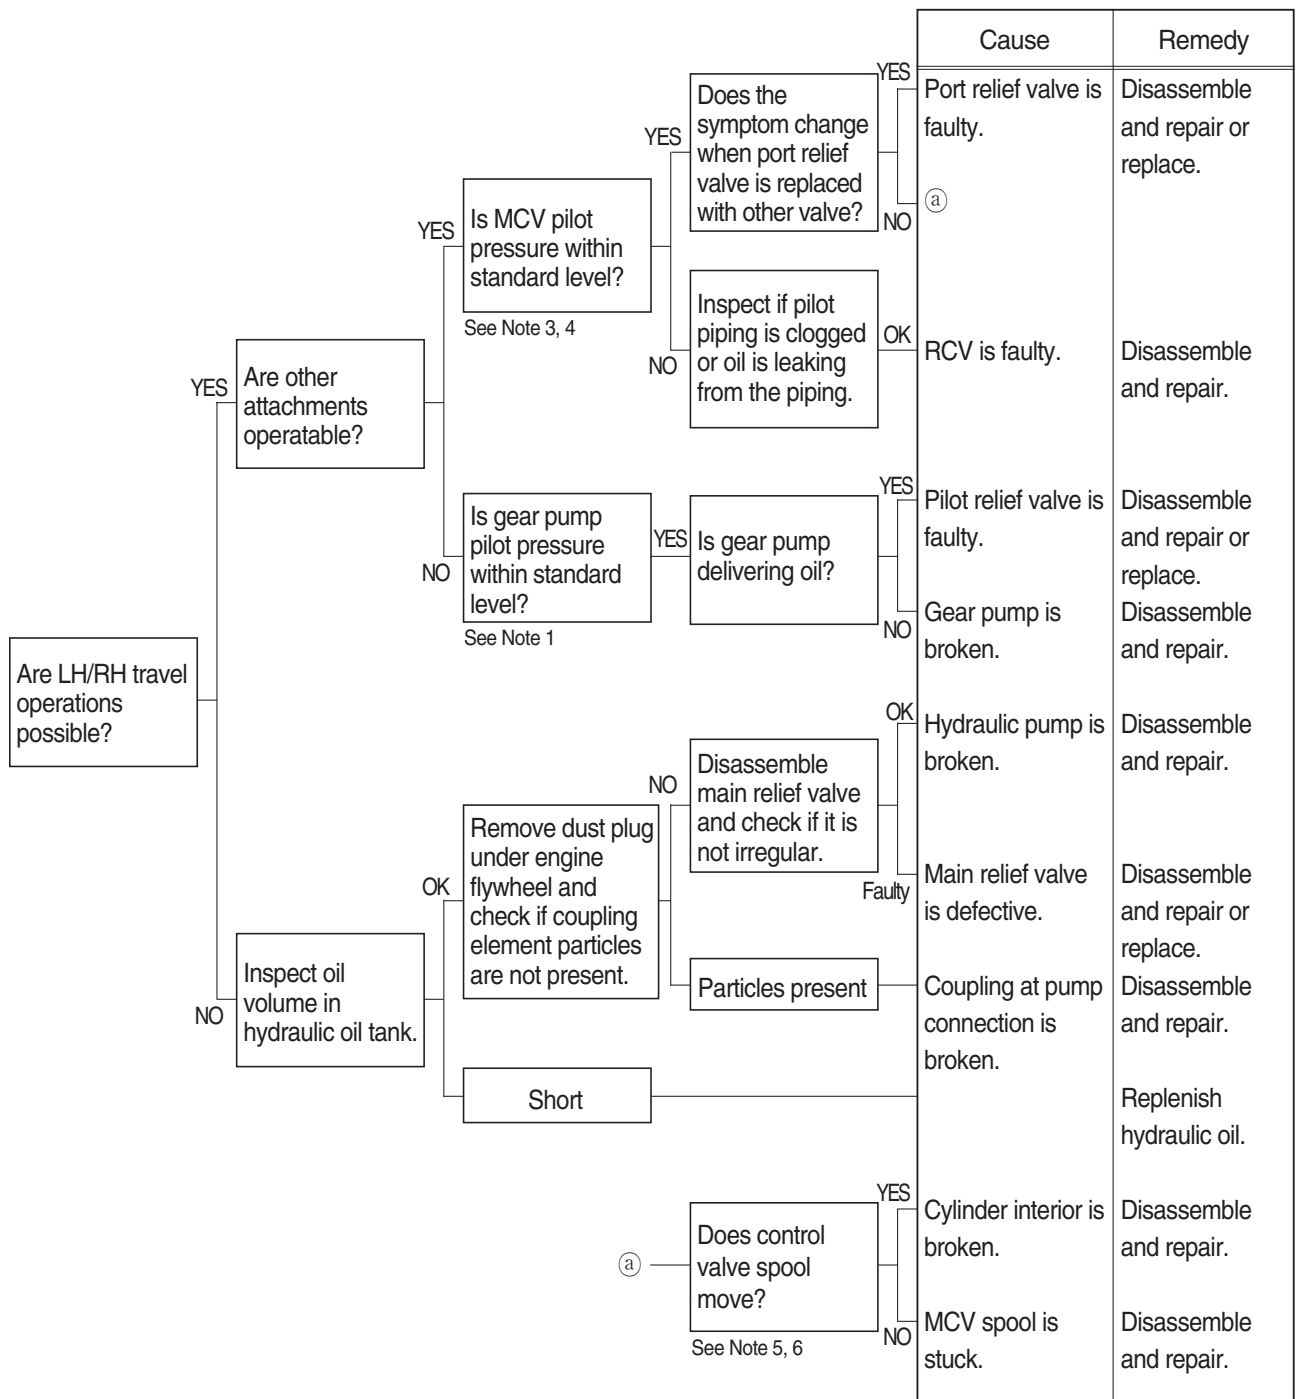


2) BOOM, ARM OR BUCKET SPEED IS LOW

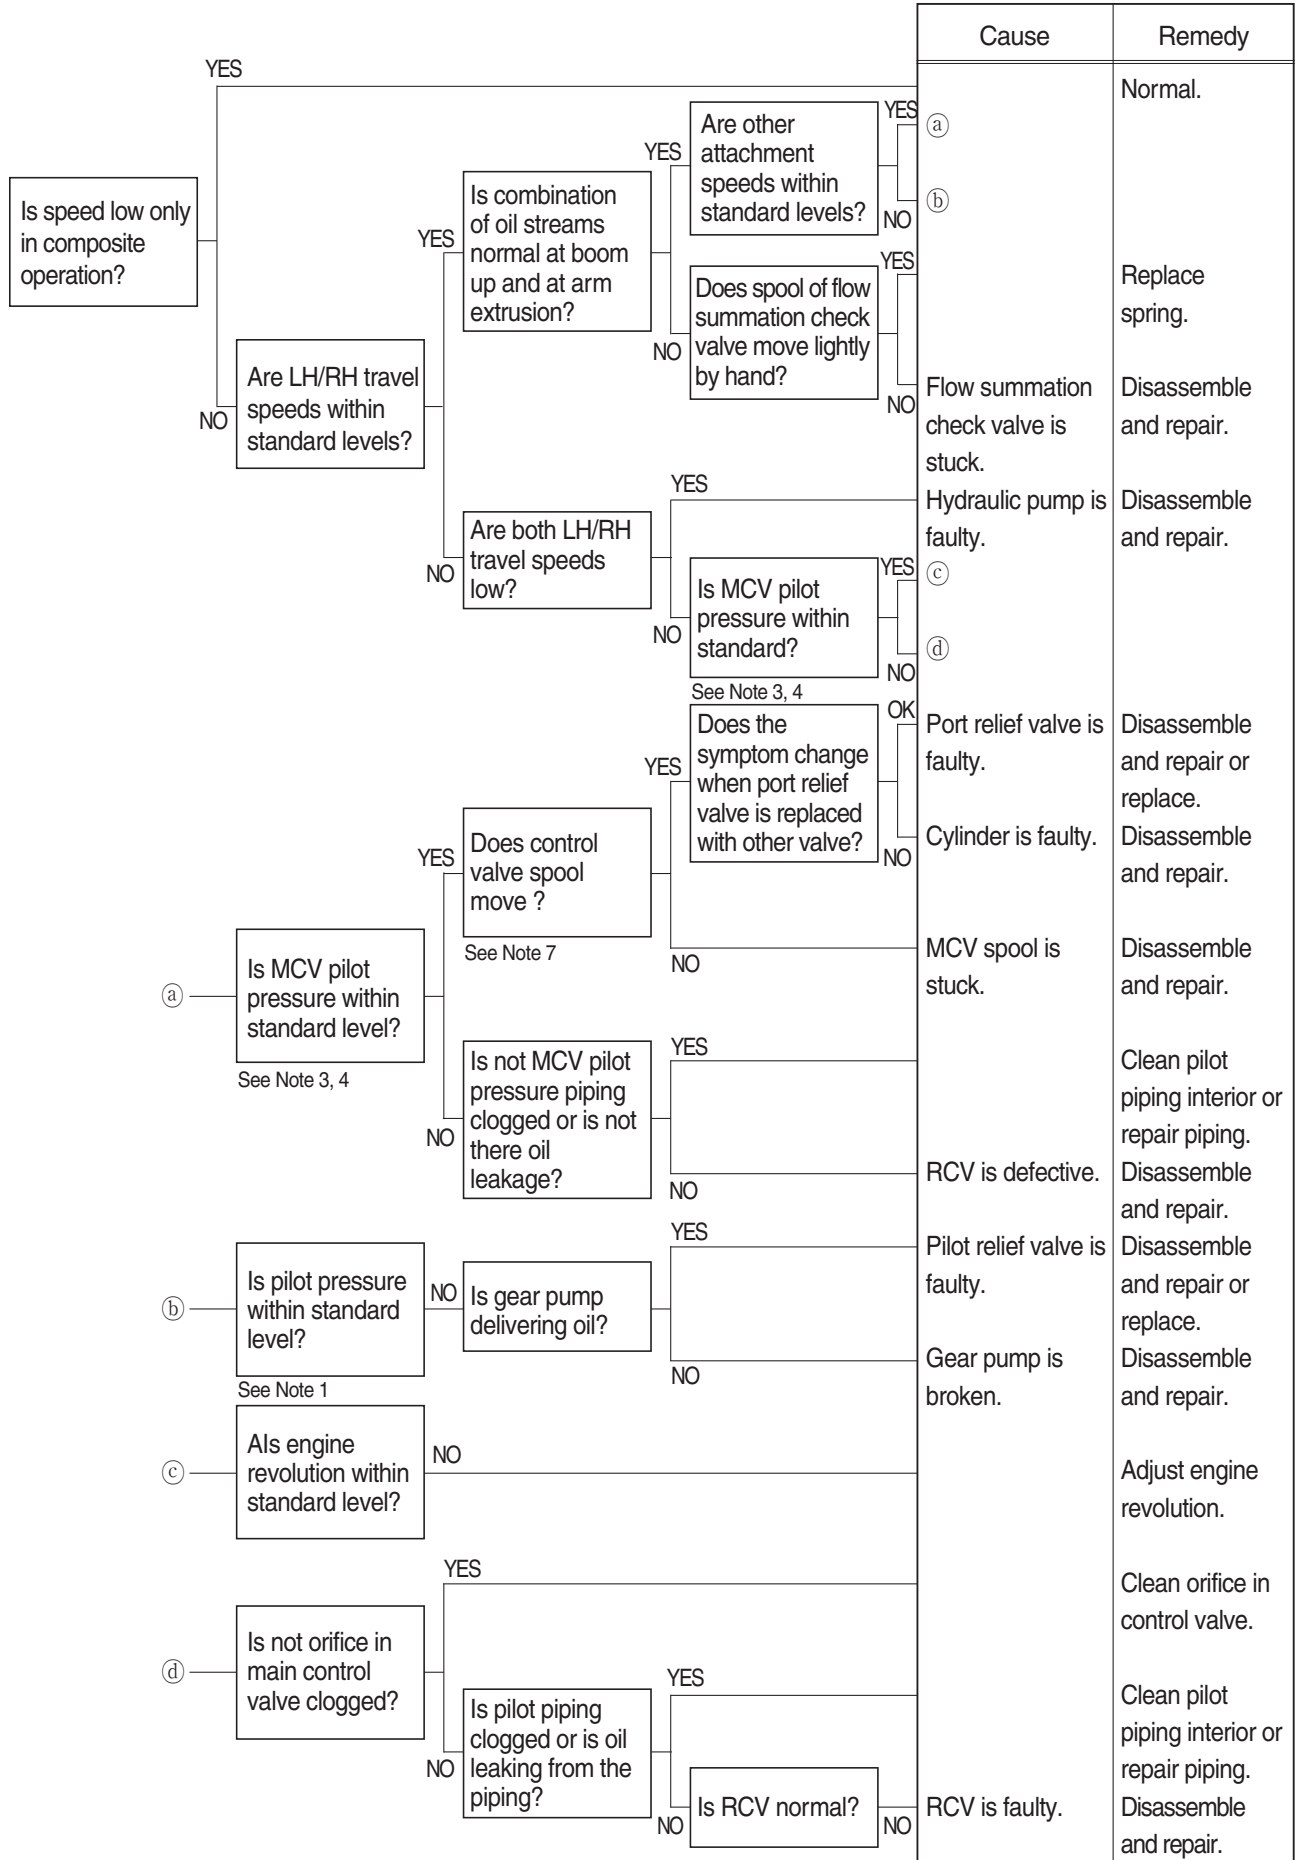


3) BOOM, ARM OR BUCKET CYLINDER EXTENDS OR CONTRACTS ITSELF AND ATTACHMENT FALLS

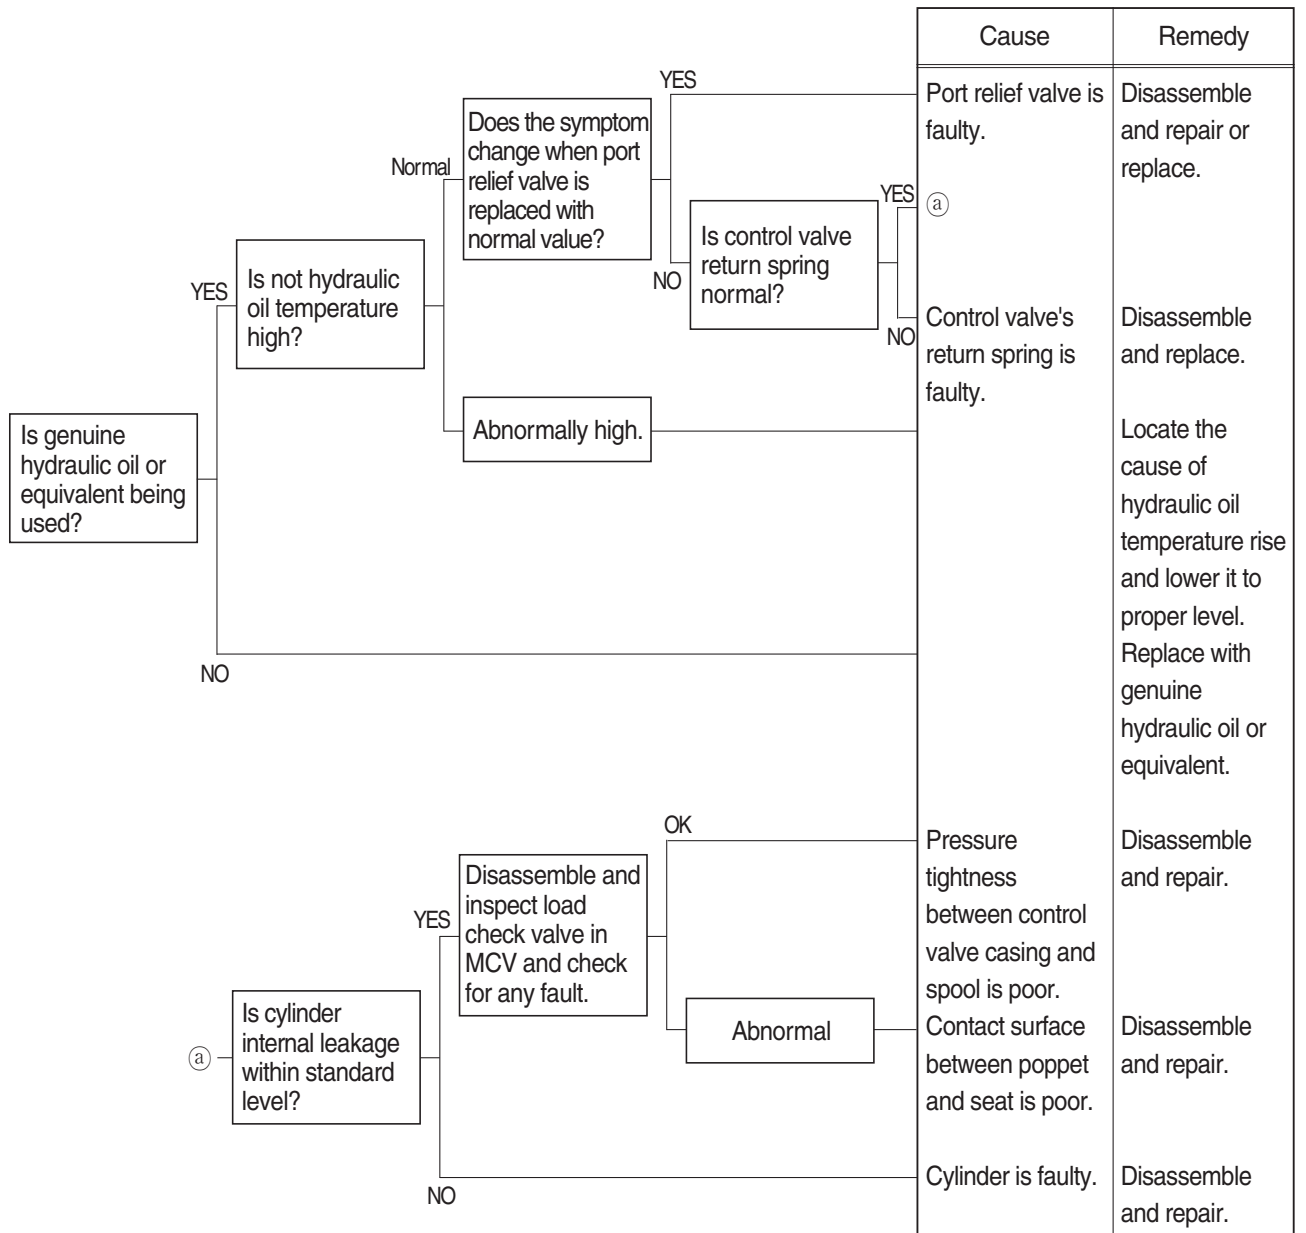

4) BOOM, ARM OR BUCKET POWER IS WEAK

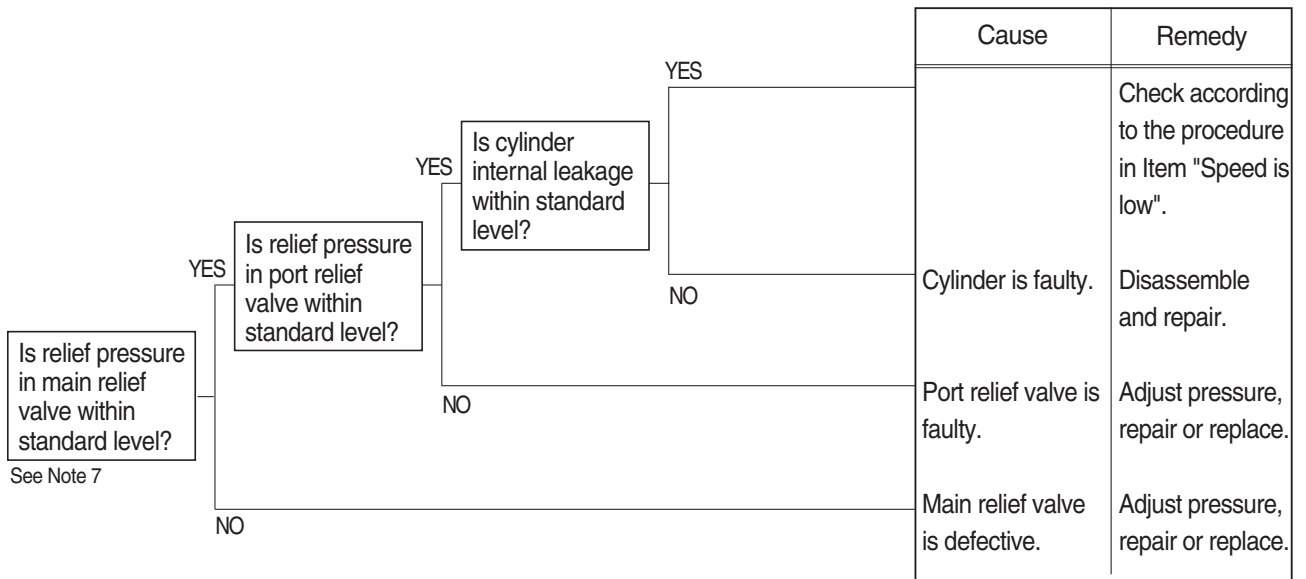

5) ONLY BUCKET OPERATION IS TOTALLY IMPOSSIBLE

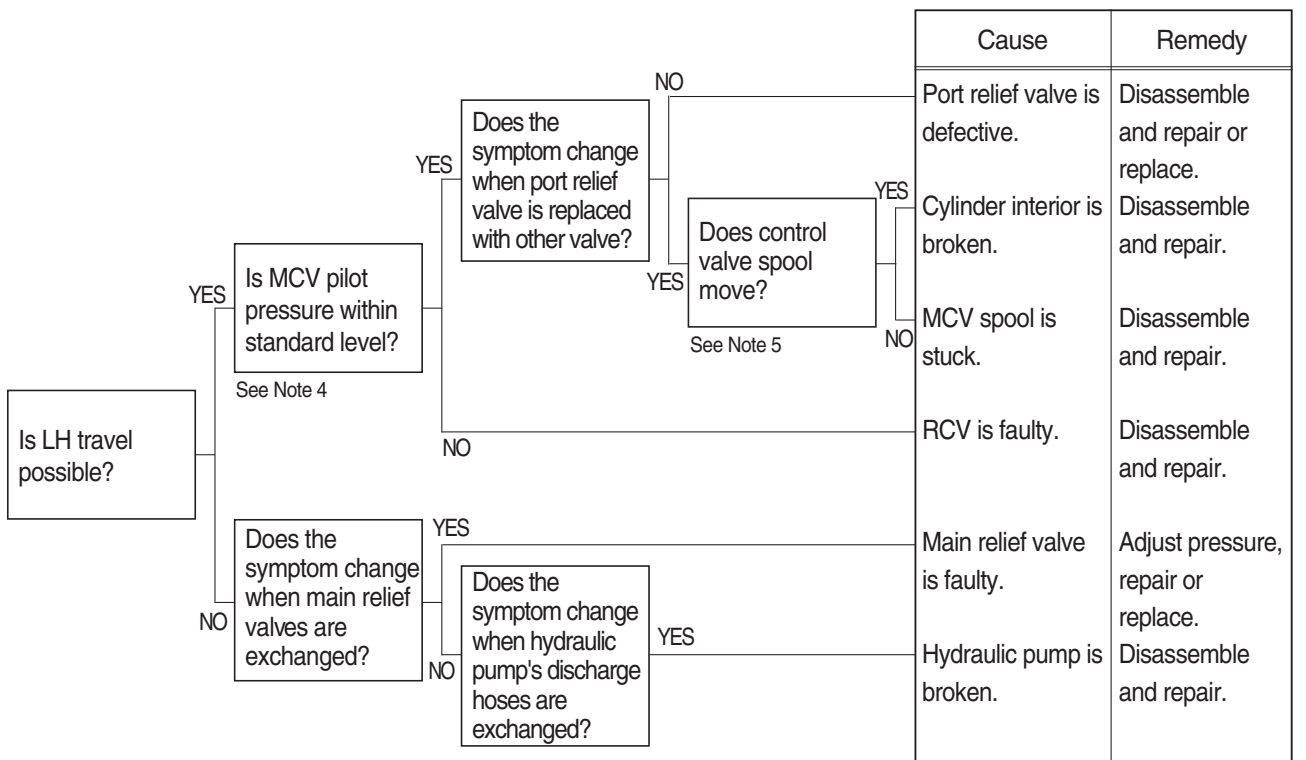

6) BOOM MAKES A SQUEAKING NOISE WHEN BOOM IS OPERATED


		Cause	Remedy
Is boom foot pin greased sufficiently?	YES		Frictional noise occurs between the sliding faces of boom cylinder's oil seal and boom proper. ※ Frictional noise will disappear if they are kept used.
	NO	Boom foot pin has run out of grease.	Supply grease to it. ※ If seizure is in an initial stage, supply sufficient grease. If seizure is in a grown state, correct it by paper lapping or with an oil stone.

7) TIME LAG OF MACHINE WORKING IS LARGE.


		Cause	Remedy
Is overload relief valve for each spool working properly?	YES		Refer to 2)
	NO	Overload relief valve is faulty.	Disassemble and repair.

※ HOW TO CHECK INTERNAL BOOM CYLINDER LEAKAGE

1. Lower the bucket teeth to the ground with bucket cylinder fully retracted and arm cylinder rod retracted almost in full.

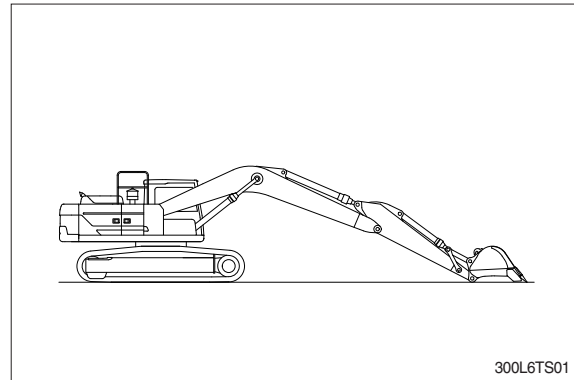


2. Disconnect hose (A) from rod side of boom cylinder and drain oil from cylinders and hose. (put cups on piping and hose ends)

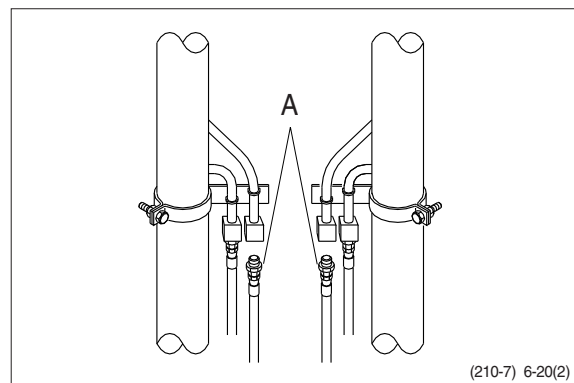

3. Raise bucket OFF the ground by retracting the arm cylinder rod.

If oil leaks from piping side and boom cylinder rod is retracted there is an internal leak in the cylinder.


If no oil leaks from piping side and boom cylinder rod is retracted, there is an internal leak in the control valve.

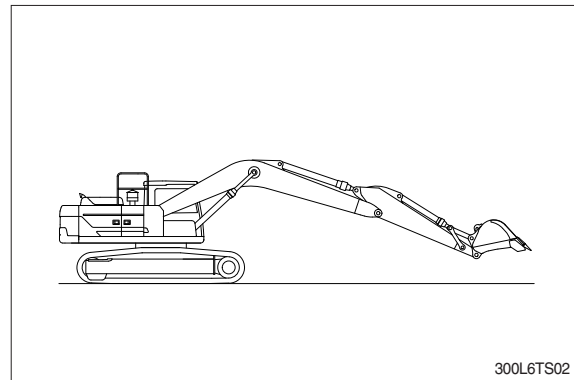

GROUP 3 ELECTRICAL SYSTEM


1. WHEN STARTING SWITCH IS TURNED ON, CLUSTER DISPLAY DOES NOT APPEAR

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 11, 16.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

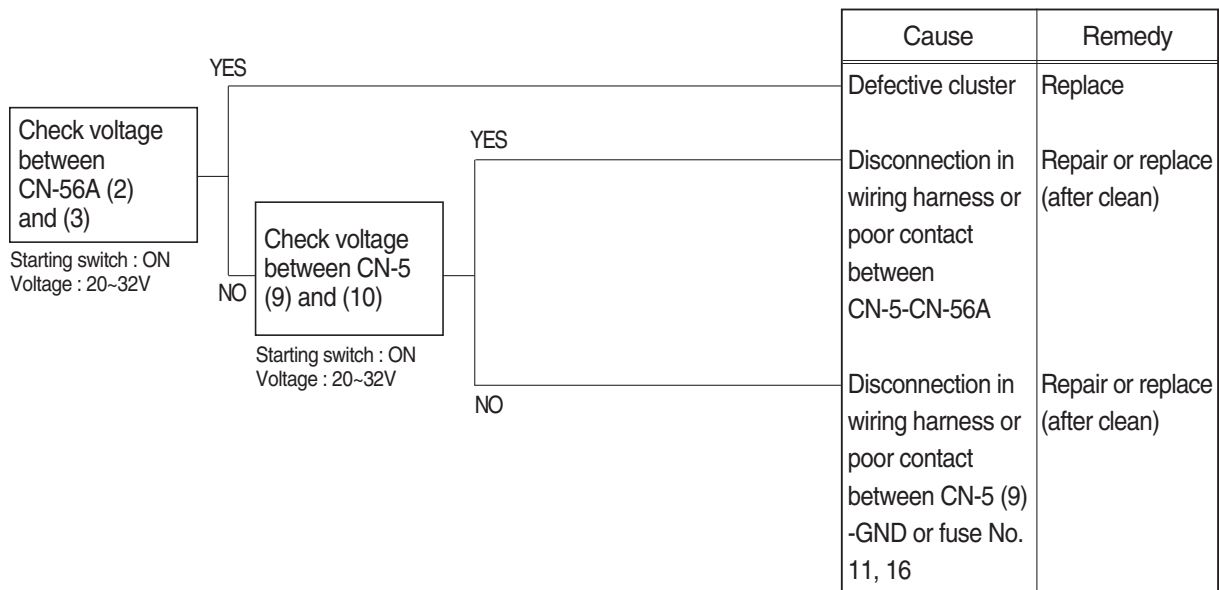

Check voltage


YES	20~32V
NO	0V

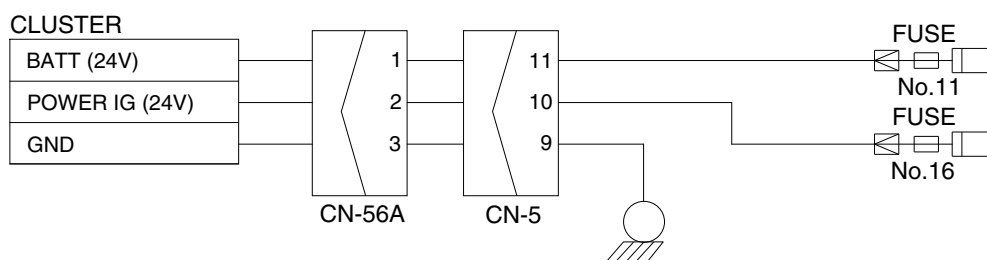

160A6ES01


2. COMMUNICATION ERROR FLASHES ON THE CLUSTER (HCESPN 840, FMI 2)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

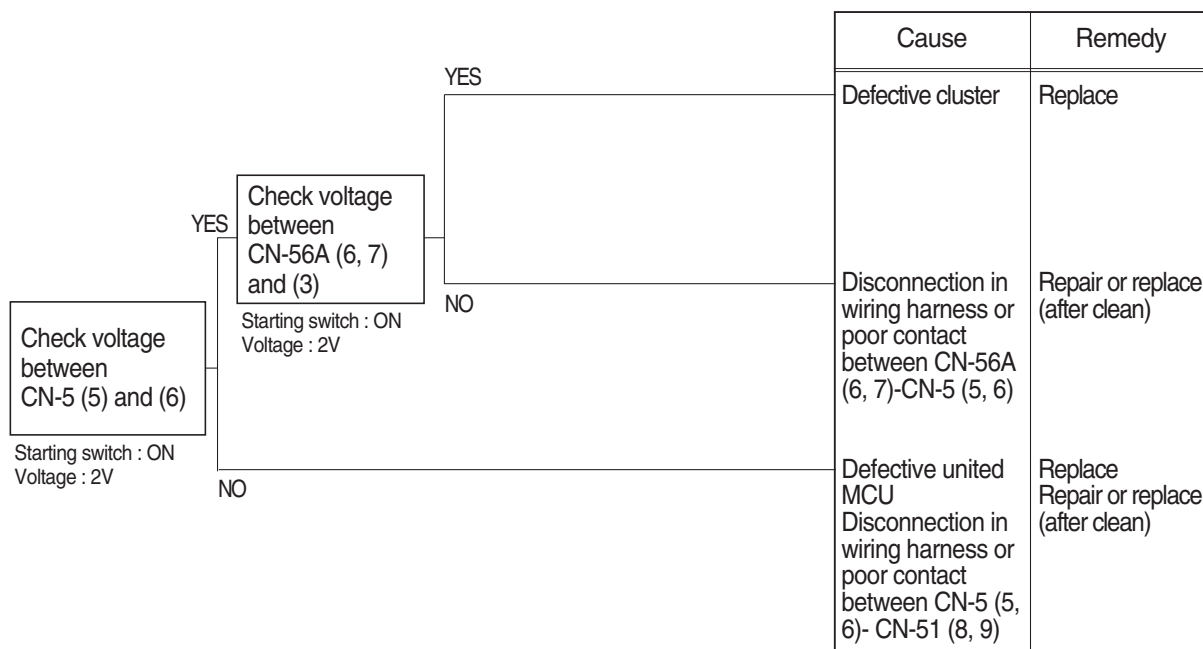


Check voltage

YES	2V
NO	0V

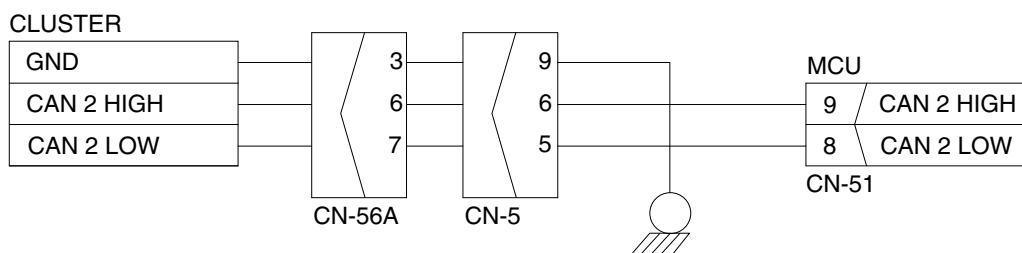


3. BATTERY CHARGING WARNING LAMP LIGHTS UP (Starting switch : ON)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

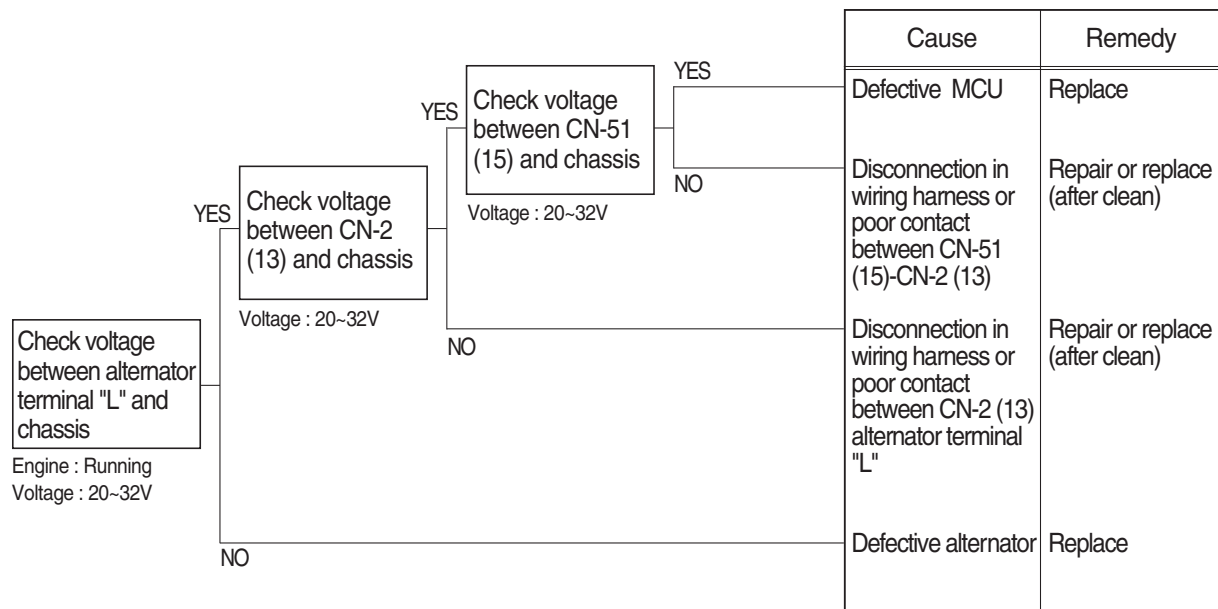

Check voltage



YES	20~32V
NO	0V

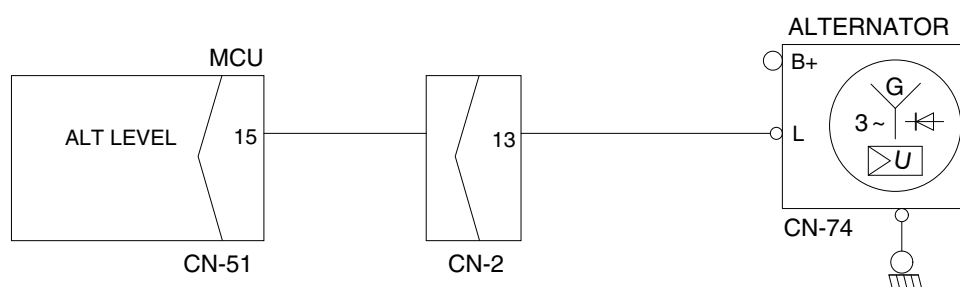

140A6ES03


4. WHEN COOLANT OVERHEAT WARNING LAMP LIGHTS UP (engine is started)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

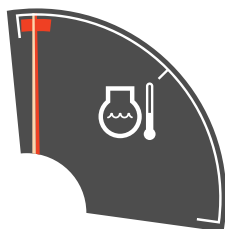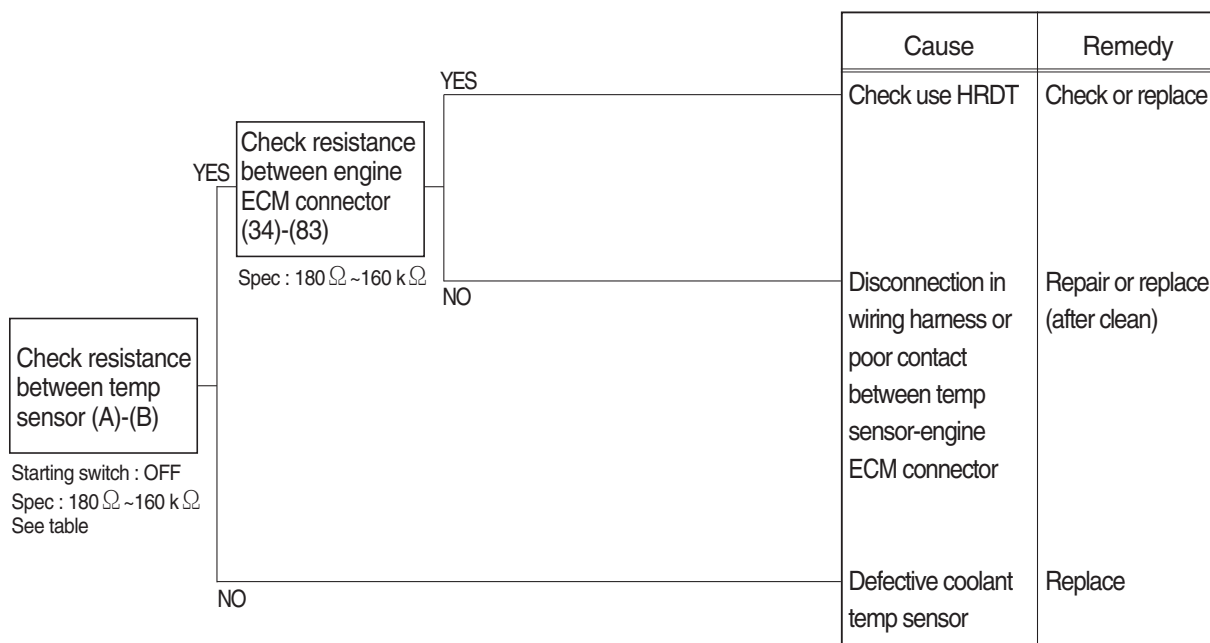

Check Table


Temperature (°C)	0	25	50	80	95
Resistance (kΩ)	30~37	9.3~10.7	3.2~3.8	1.0~1.3	0.7~0.8

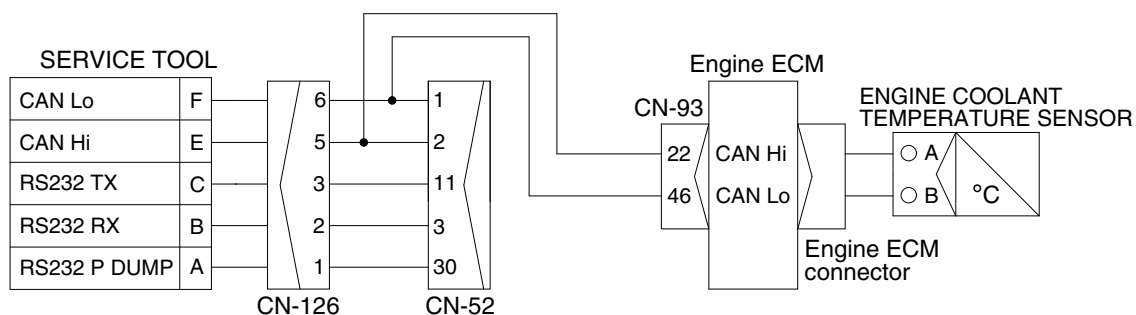

140A6ES04


5. WHEN AIR CLEANER WARNING LAMP LIGHTS UP (engine is started)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

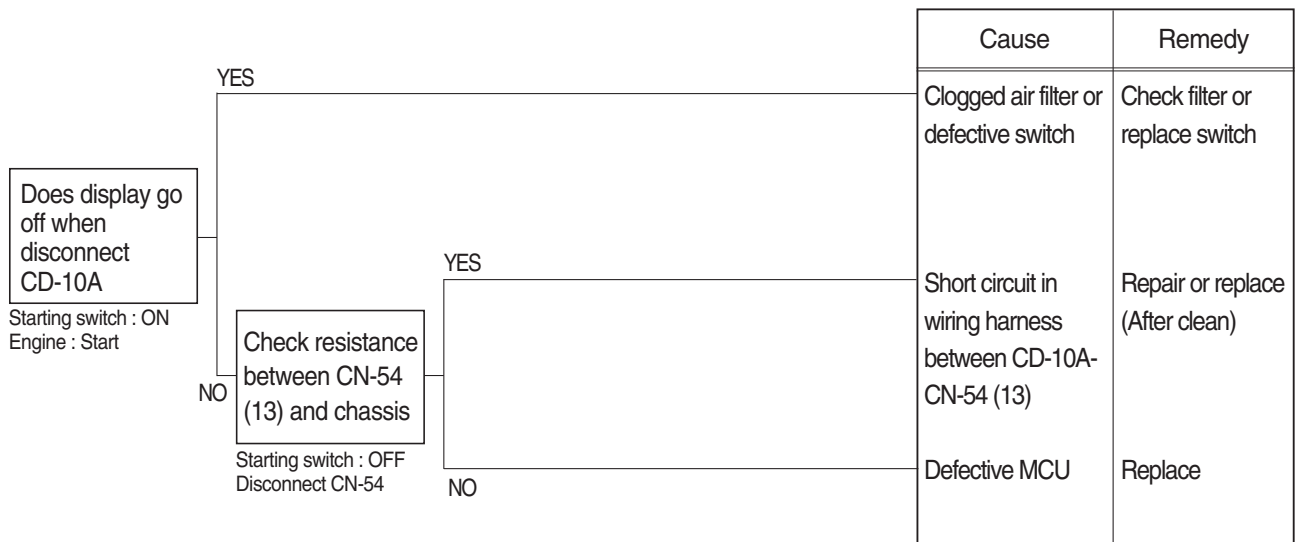

Check resistance



YES	MAX 1Ω
NO	MIN 1MΩ

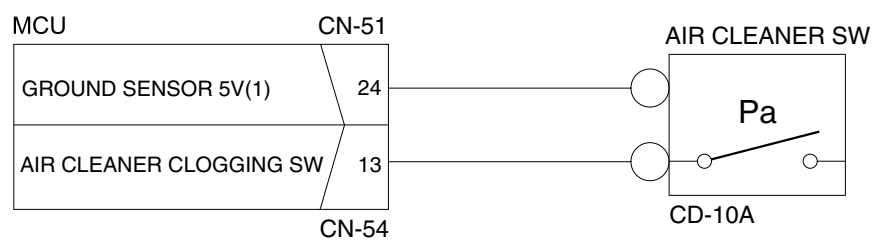

160A6ES06

6. WHEN ENGINE OIL PRESSURE WARNING LAMP LIGHTS UP (engine is started)



- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

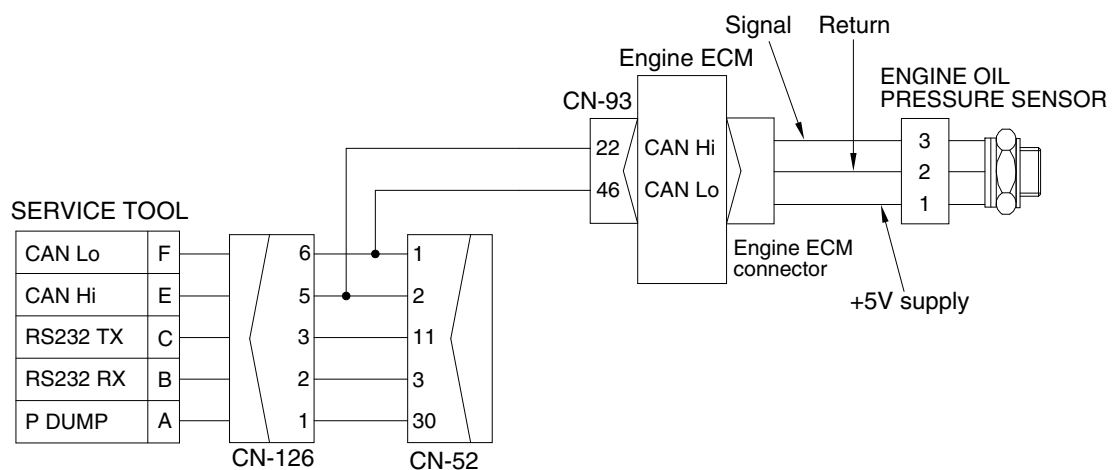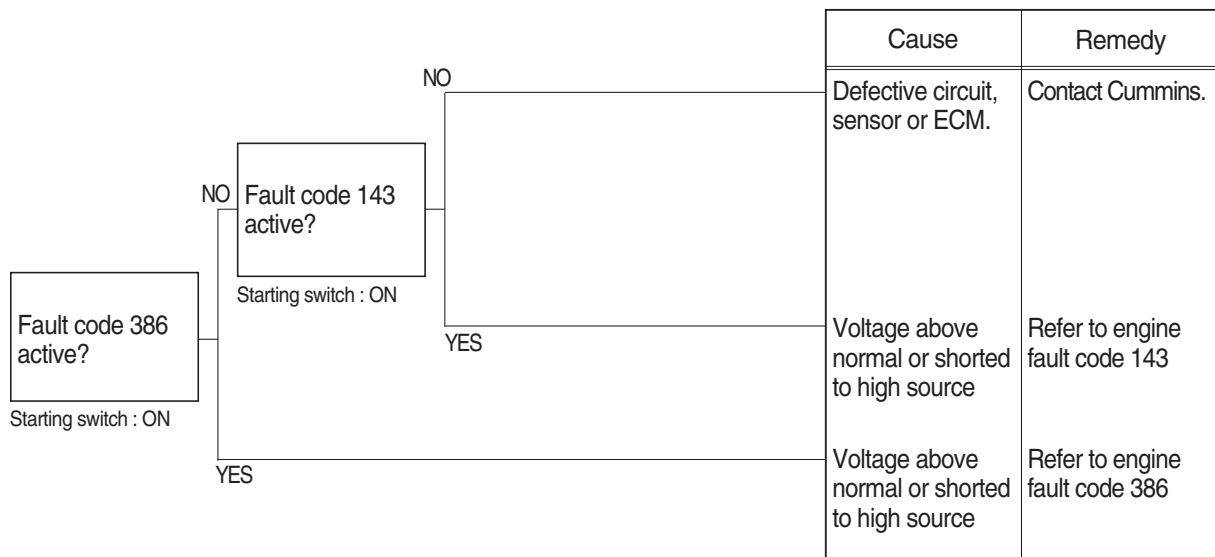

160A6ES07


7. WHEN HYDRAULIC OIL TEMPERATURE WARNING LAMP LIGHTS UP (engine is started)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

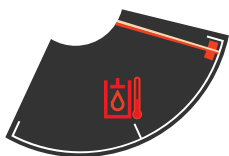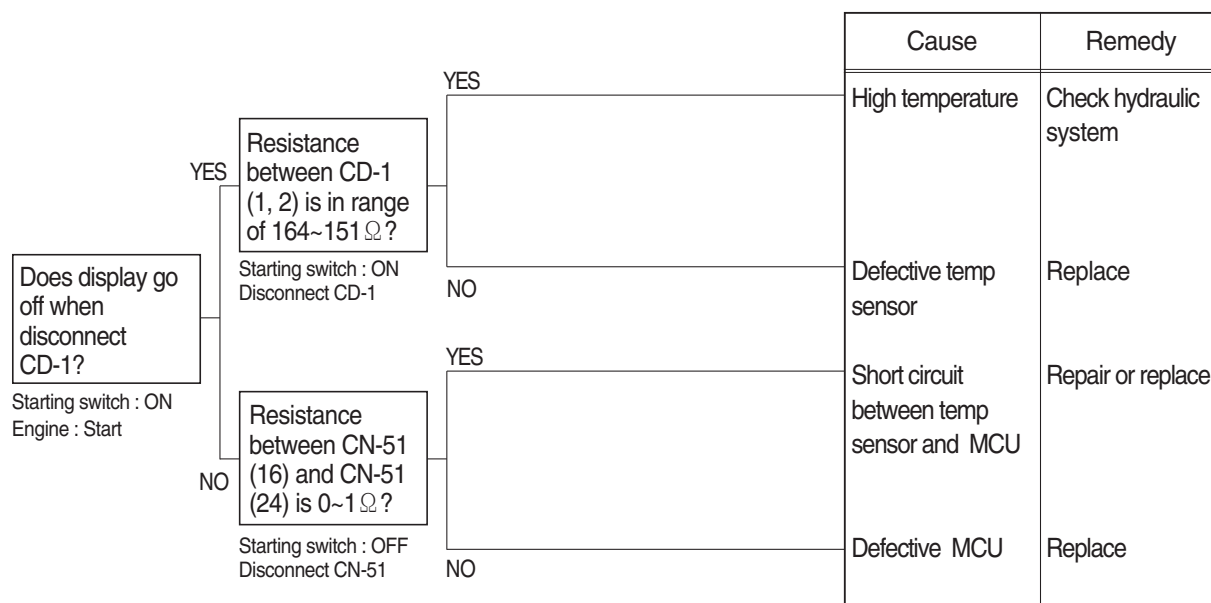

Check Table


Temperature (°C)	~ -30	~ -10	~ 0	~ 40	~ 70	~ 80	~ 90	~ 100	105~
Resistance (k Ω)	22.22 ~31.78	8.16 ~10.74	5.18 ~ 6.6	1.06 ~1.28	0.39 ~0.476	0.322 ~0.298	0.243 ~0.219	0.185 ~0.167	0.164 ~0.151

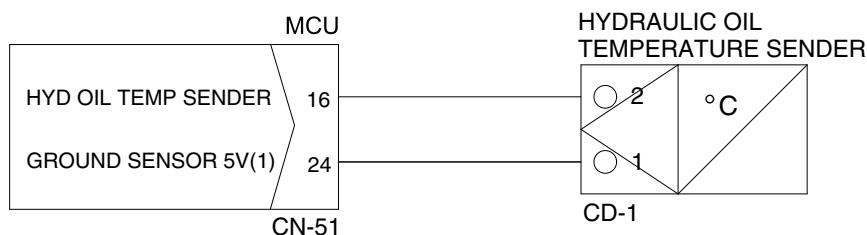

160A6ES08


8. WHEN COOLANT TEMPERATURE GAUGE DOES NOT OPERATE

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

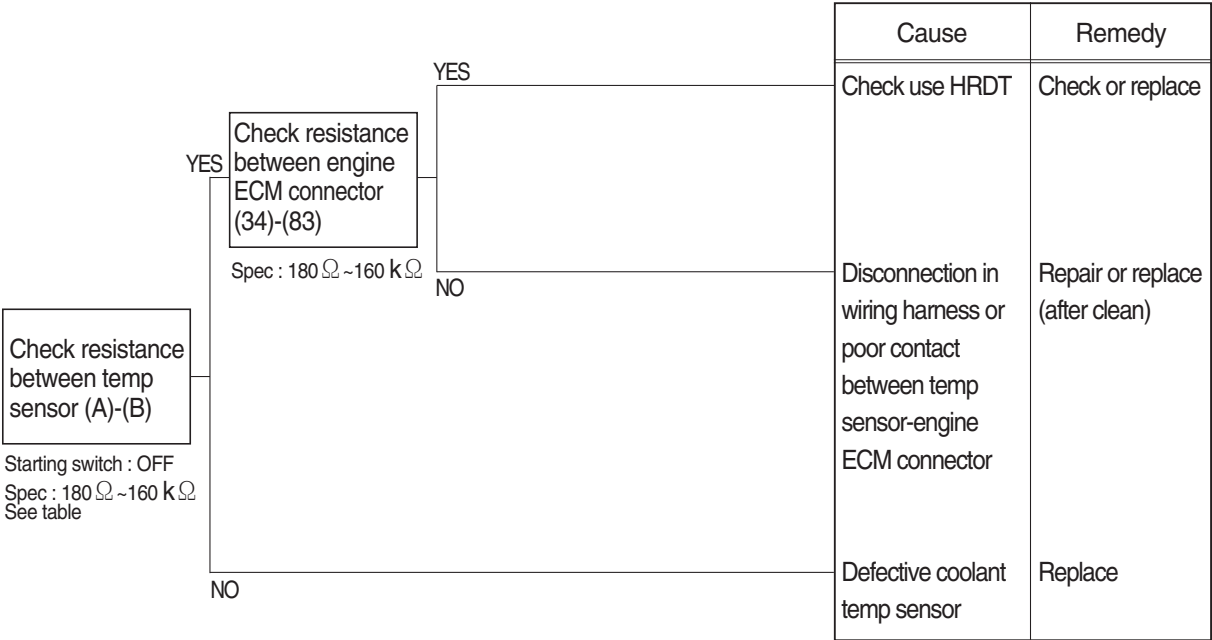



Check Table

Temperature (°C)	0	25	50	80	95
Resistance (kΩ)	30~37	9.3~10.7	3.2~3.8	1.0~1.3	0.7~0.8

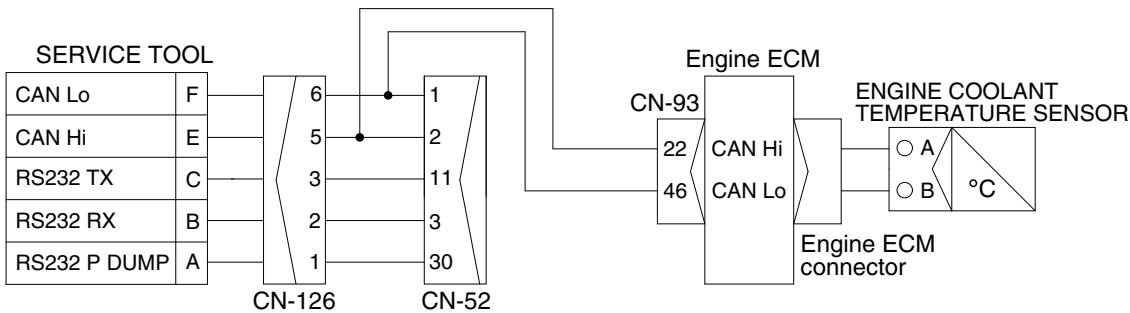


9. WHEN FUEL GAUGE DOES NOT OPERATE (HCESPN 301, FMI 3 or 4)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

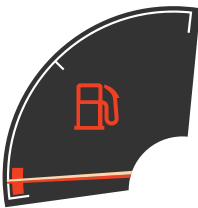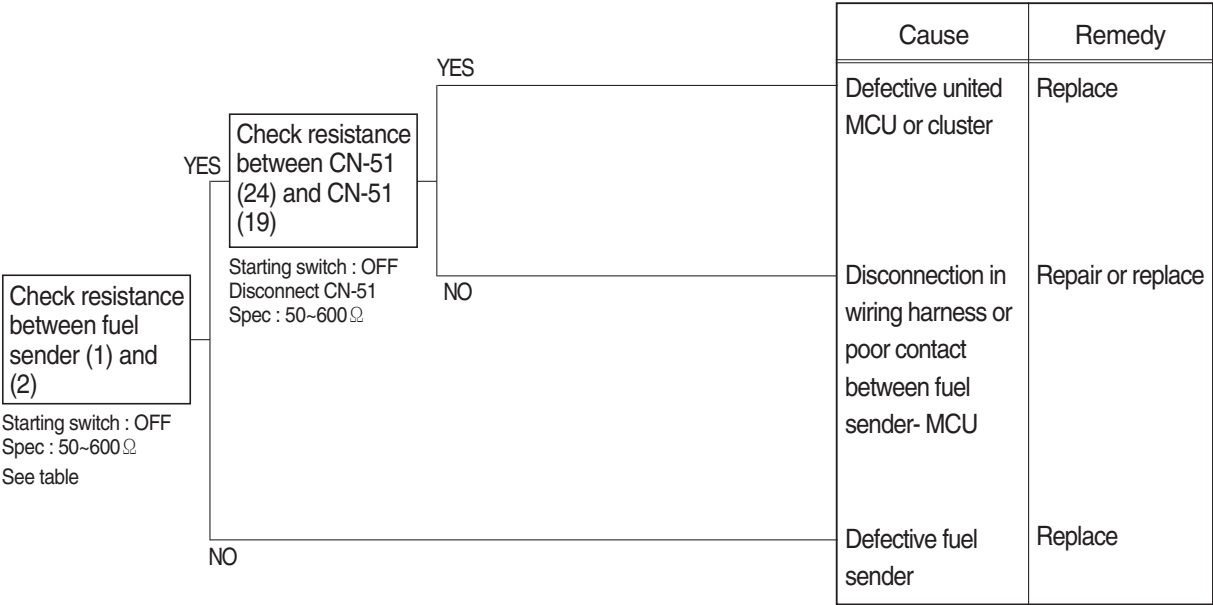



Check Table

Range	Resistance (Ω)	Range	Resistance (Ω)
Full	50	5/12	400
11/12	100	4/12	450
10/12	150	3/12	500
9/12	200	2/12	550
8/12	250	1/12	600
7/12	300	Empty warning	700
6/12	350	-	-

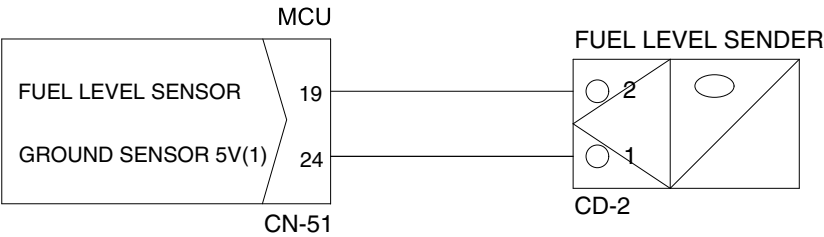



10. WHEN SAFETY SOLENOID DOES NOT OPERATE

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 26.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.
- Auto safety lock function execution condition : When the RCV pilot pressure increases above certain pressure within the standard time after changing the safety knob LOCK → UNLOCK
- Under the above conditions, the electric current is turned off to the safety solenoid, and the function of RCV and pedal is disabled.

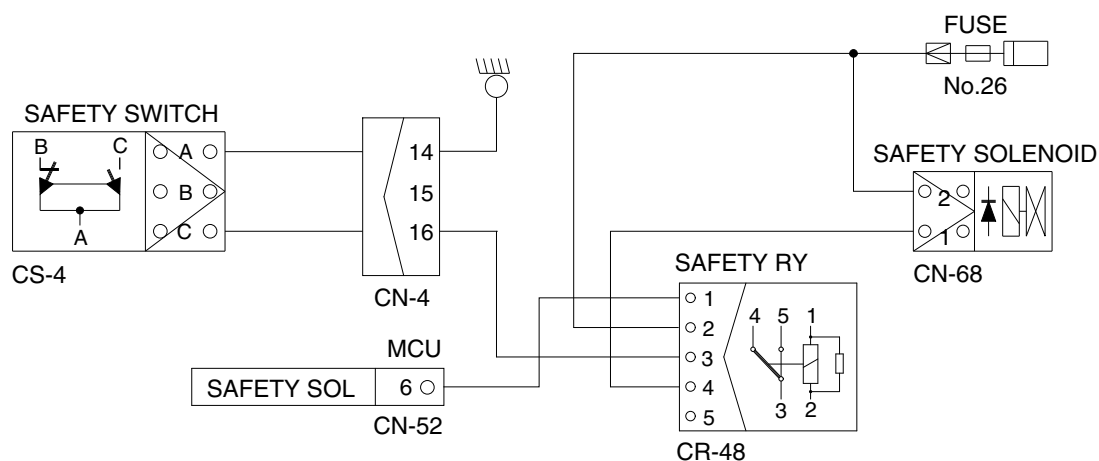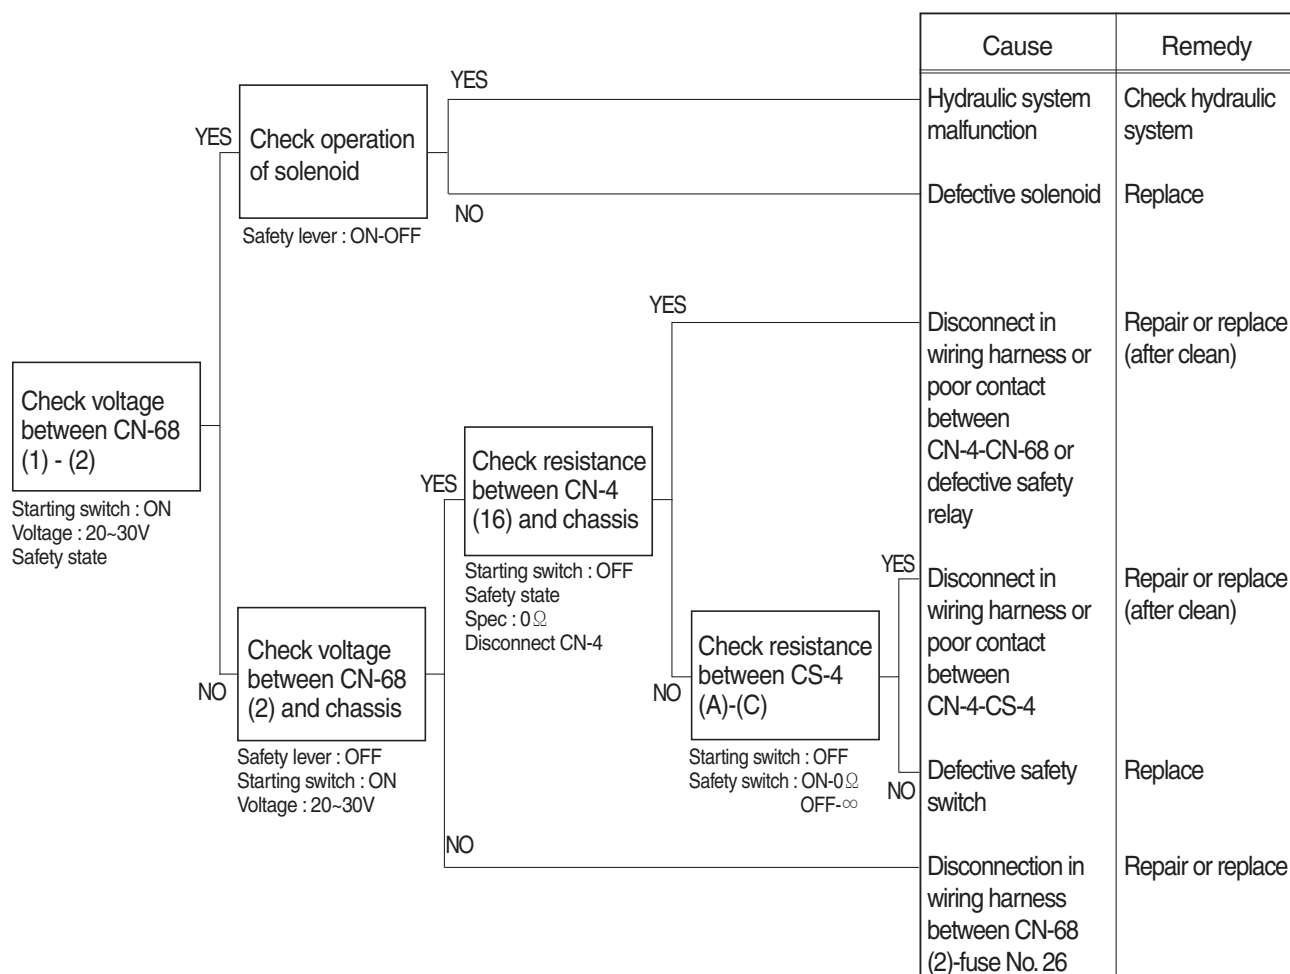



11. WHEN TRAVEL SPEED 1, 2 DOES NOT OPERATE (HCESPN 167, FMI 4 or 6)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 28.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

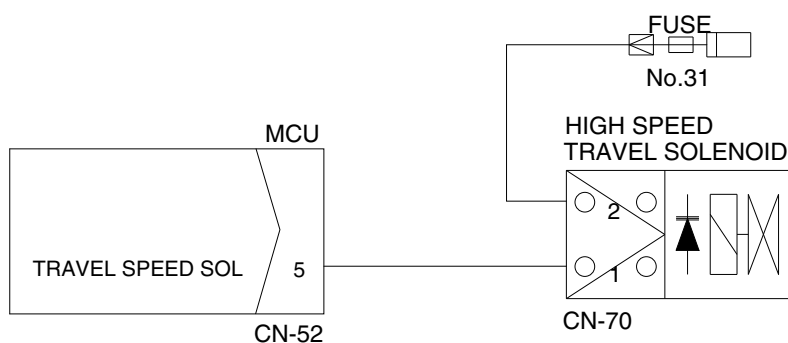
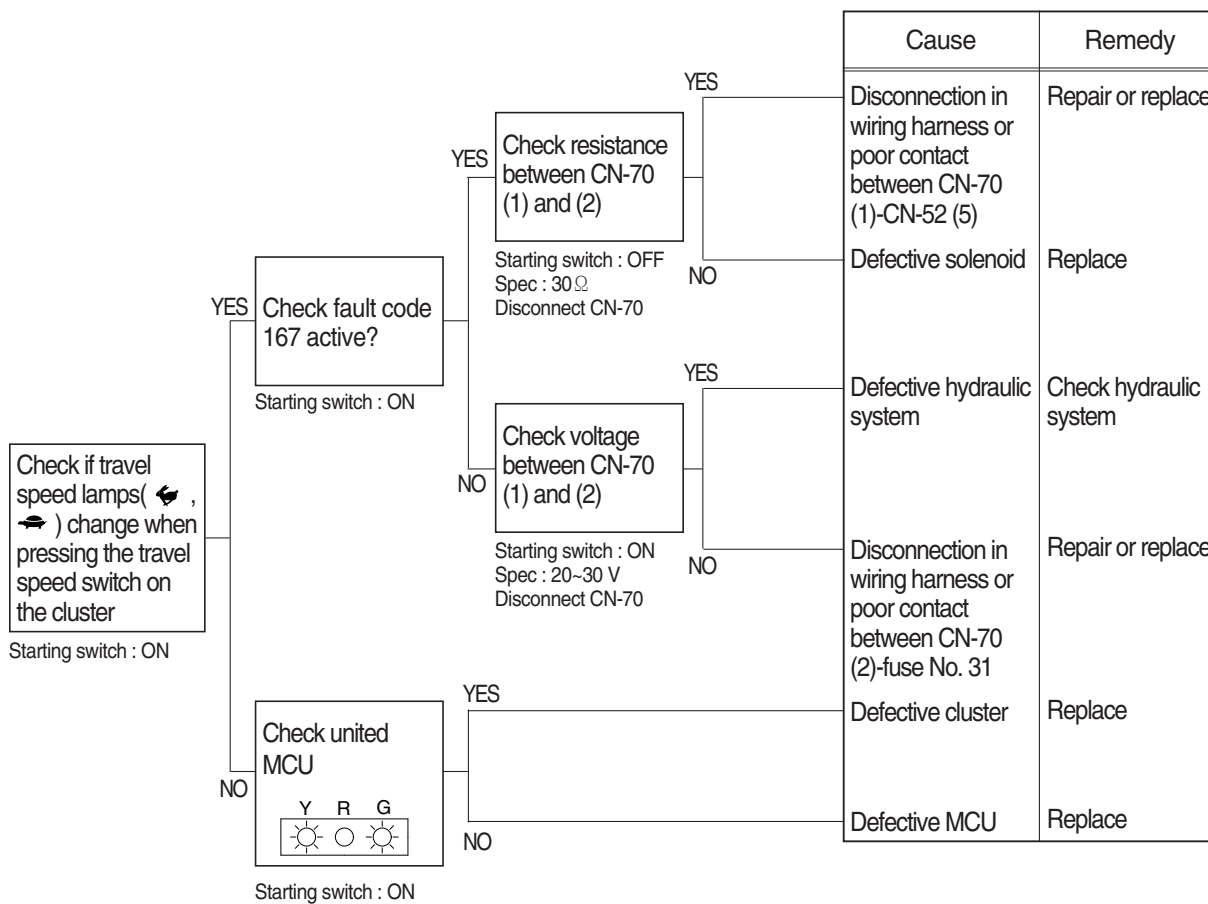


160A6ES11

12. TRAVEL ALARM DOES NOT SOUND OR DOES NOT STOP SOUNDING

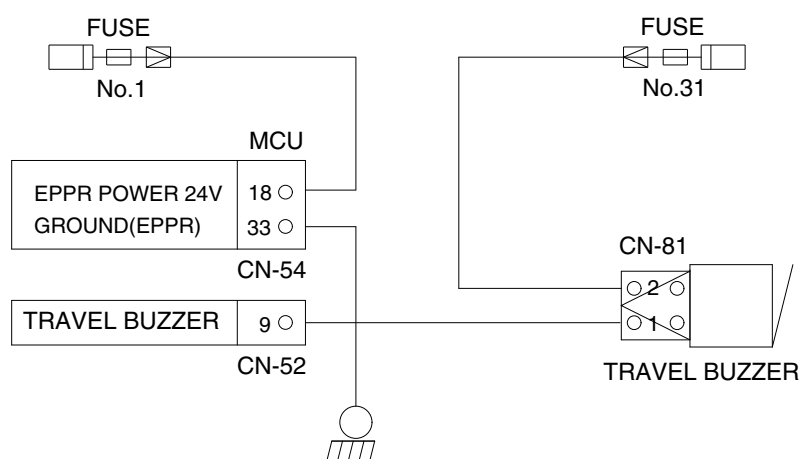
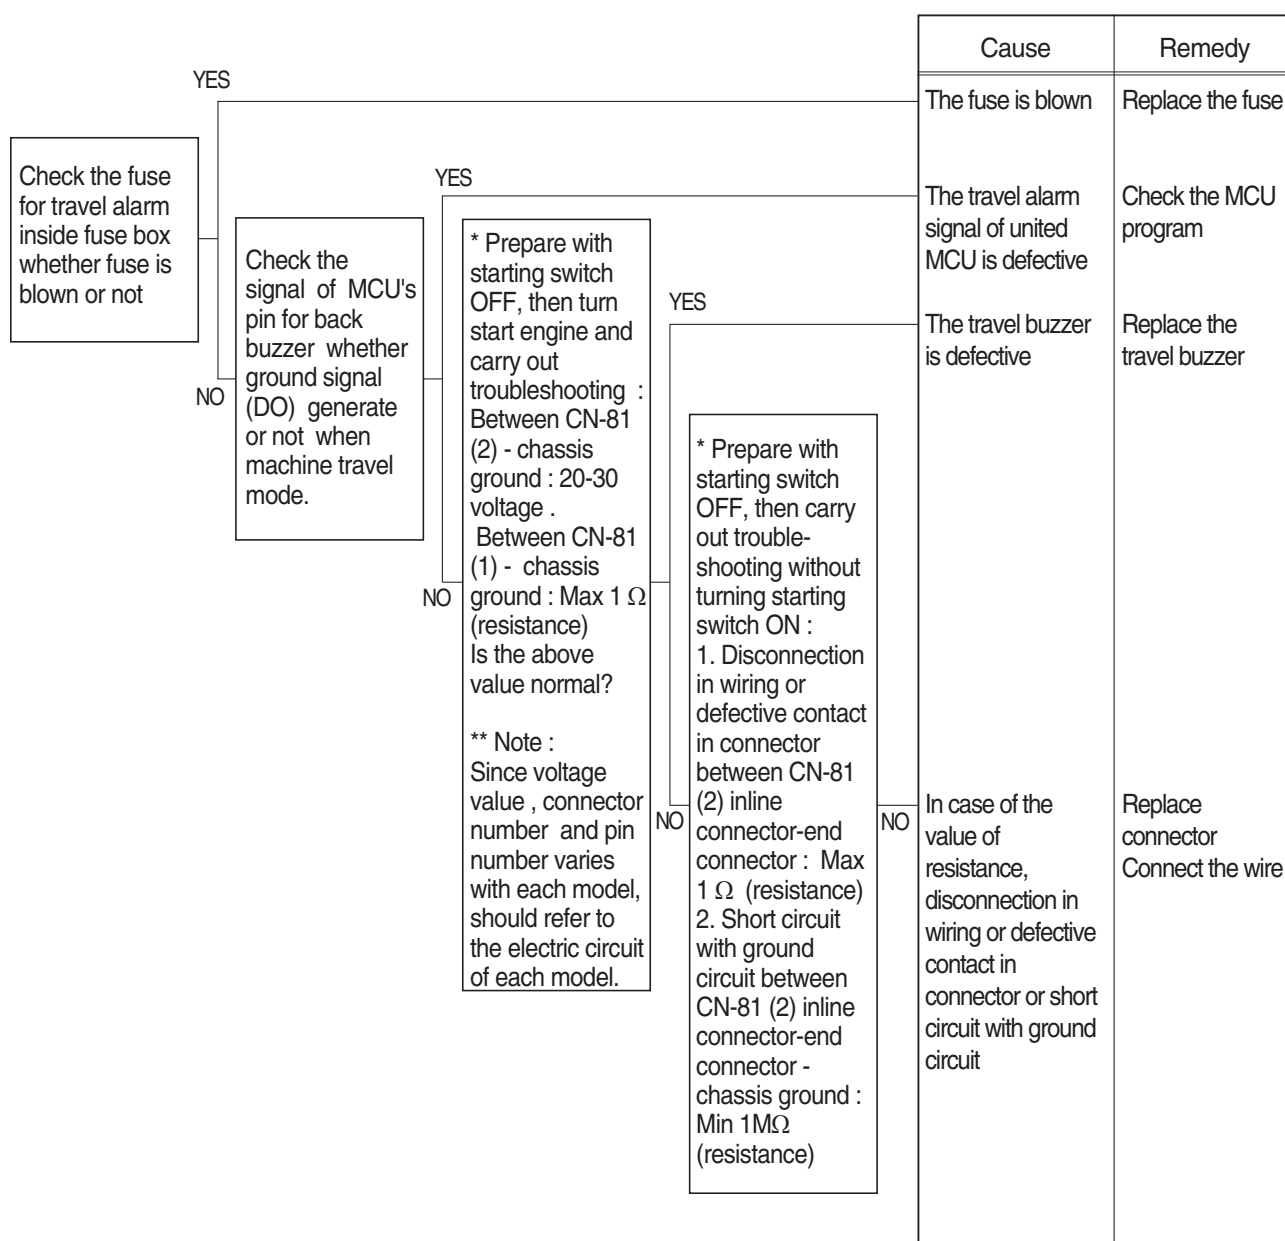


13. HORN DOES NOT SOUND

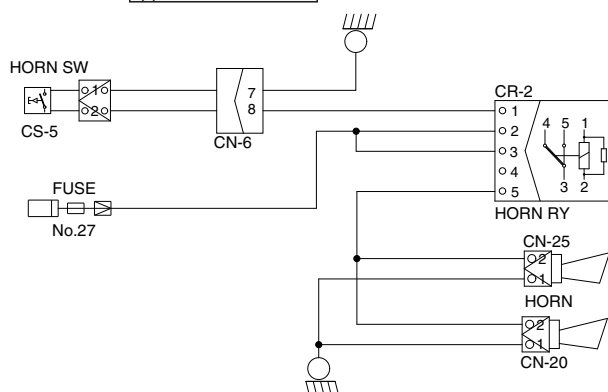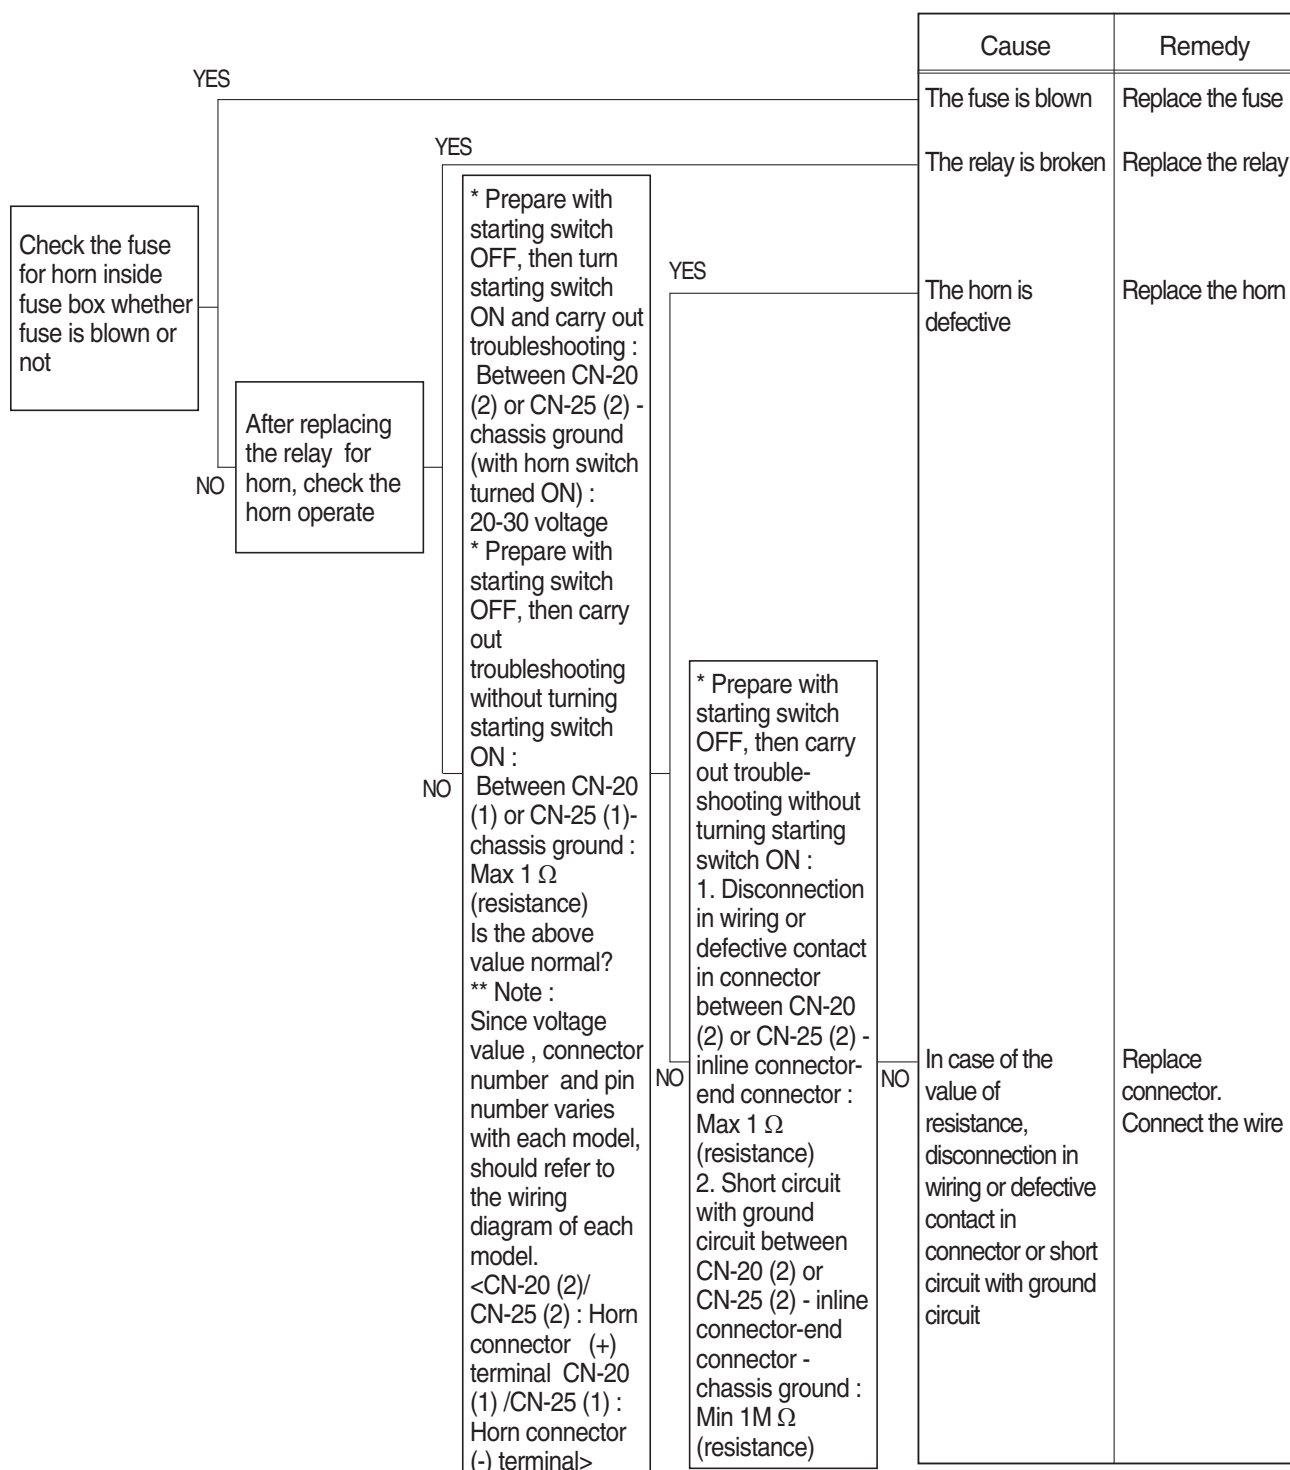



14. WHEN ENGINE DOES NOT START (lights up condition)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 5, 8, 12, 13, 23.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

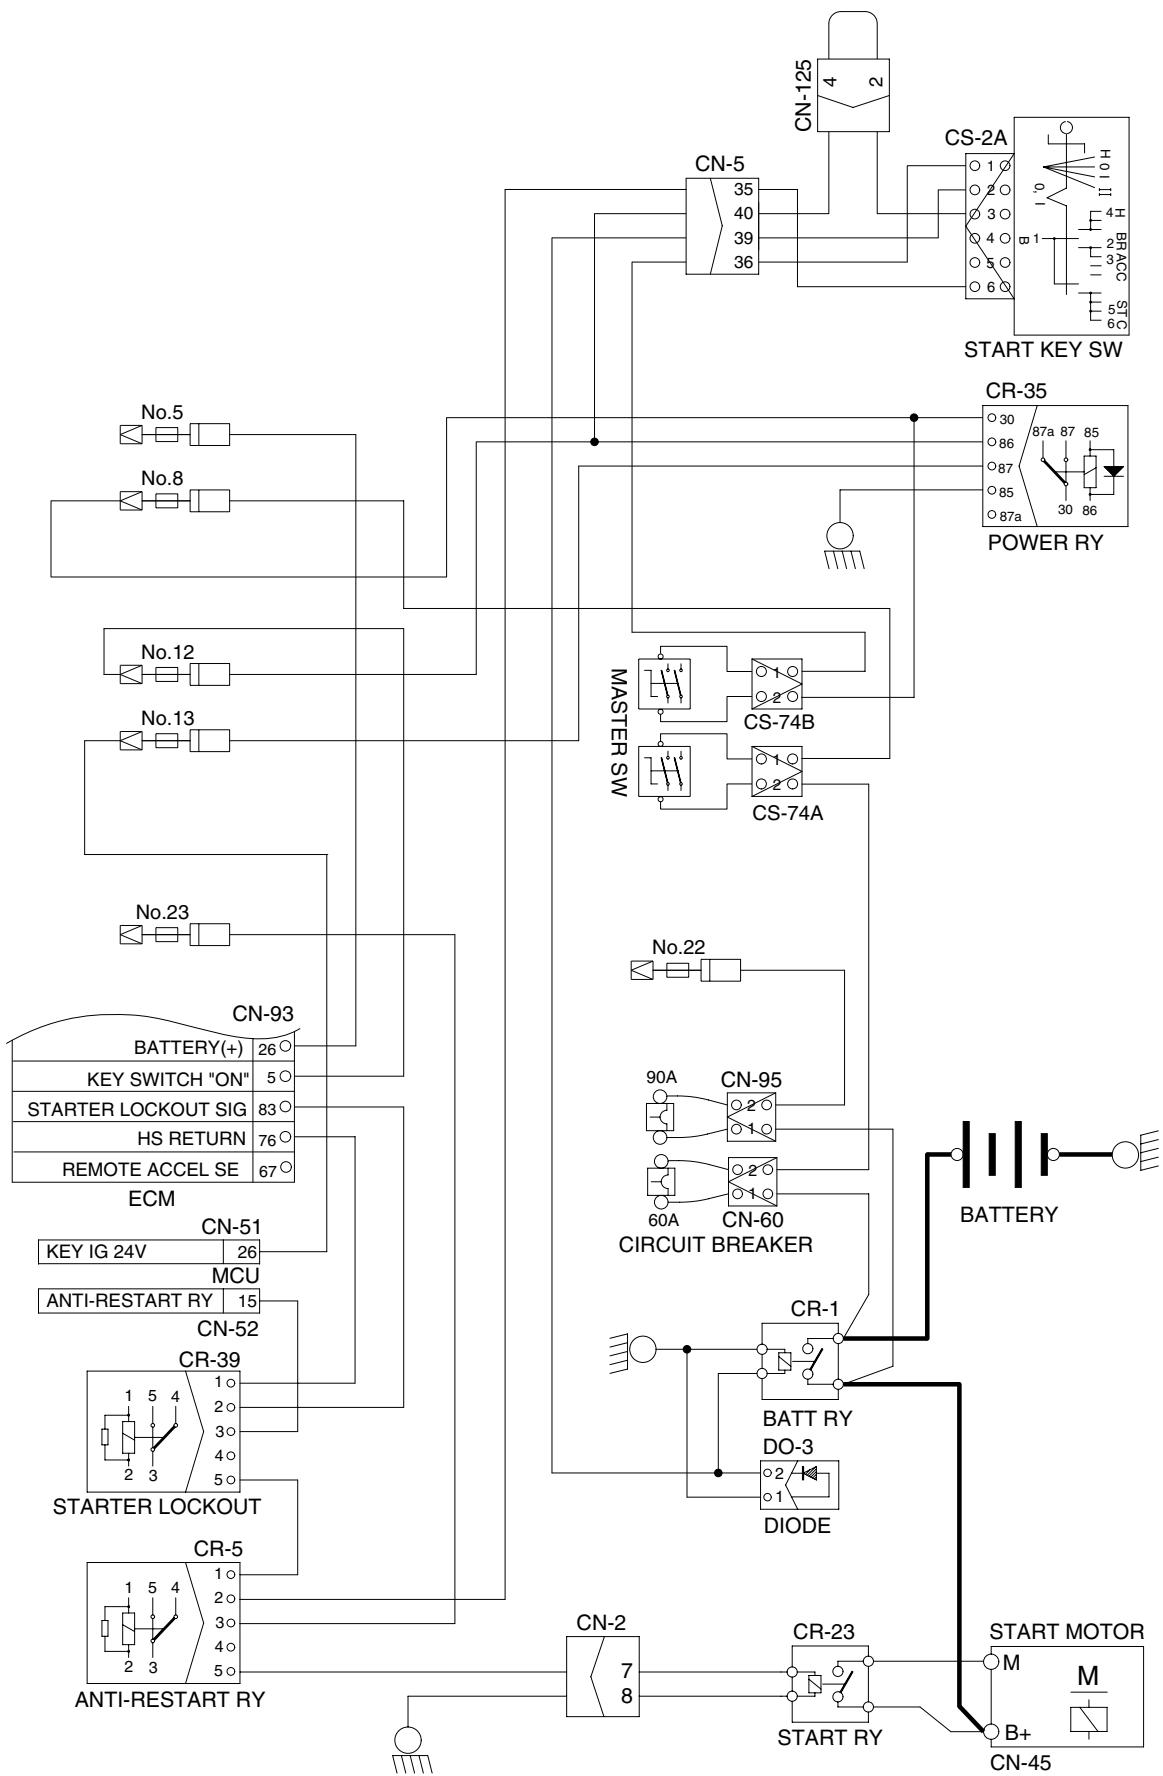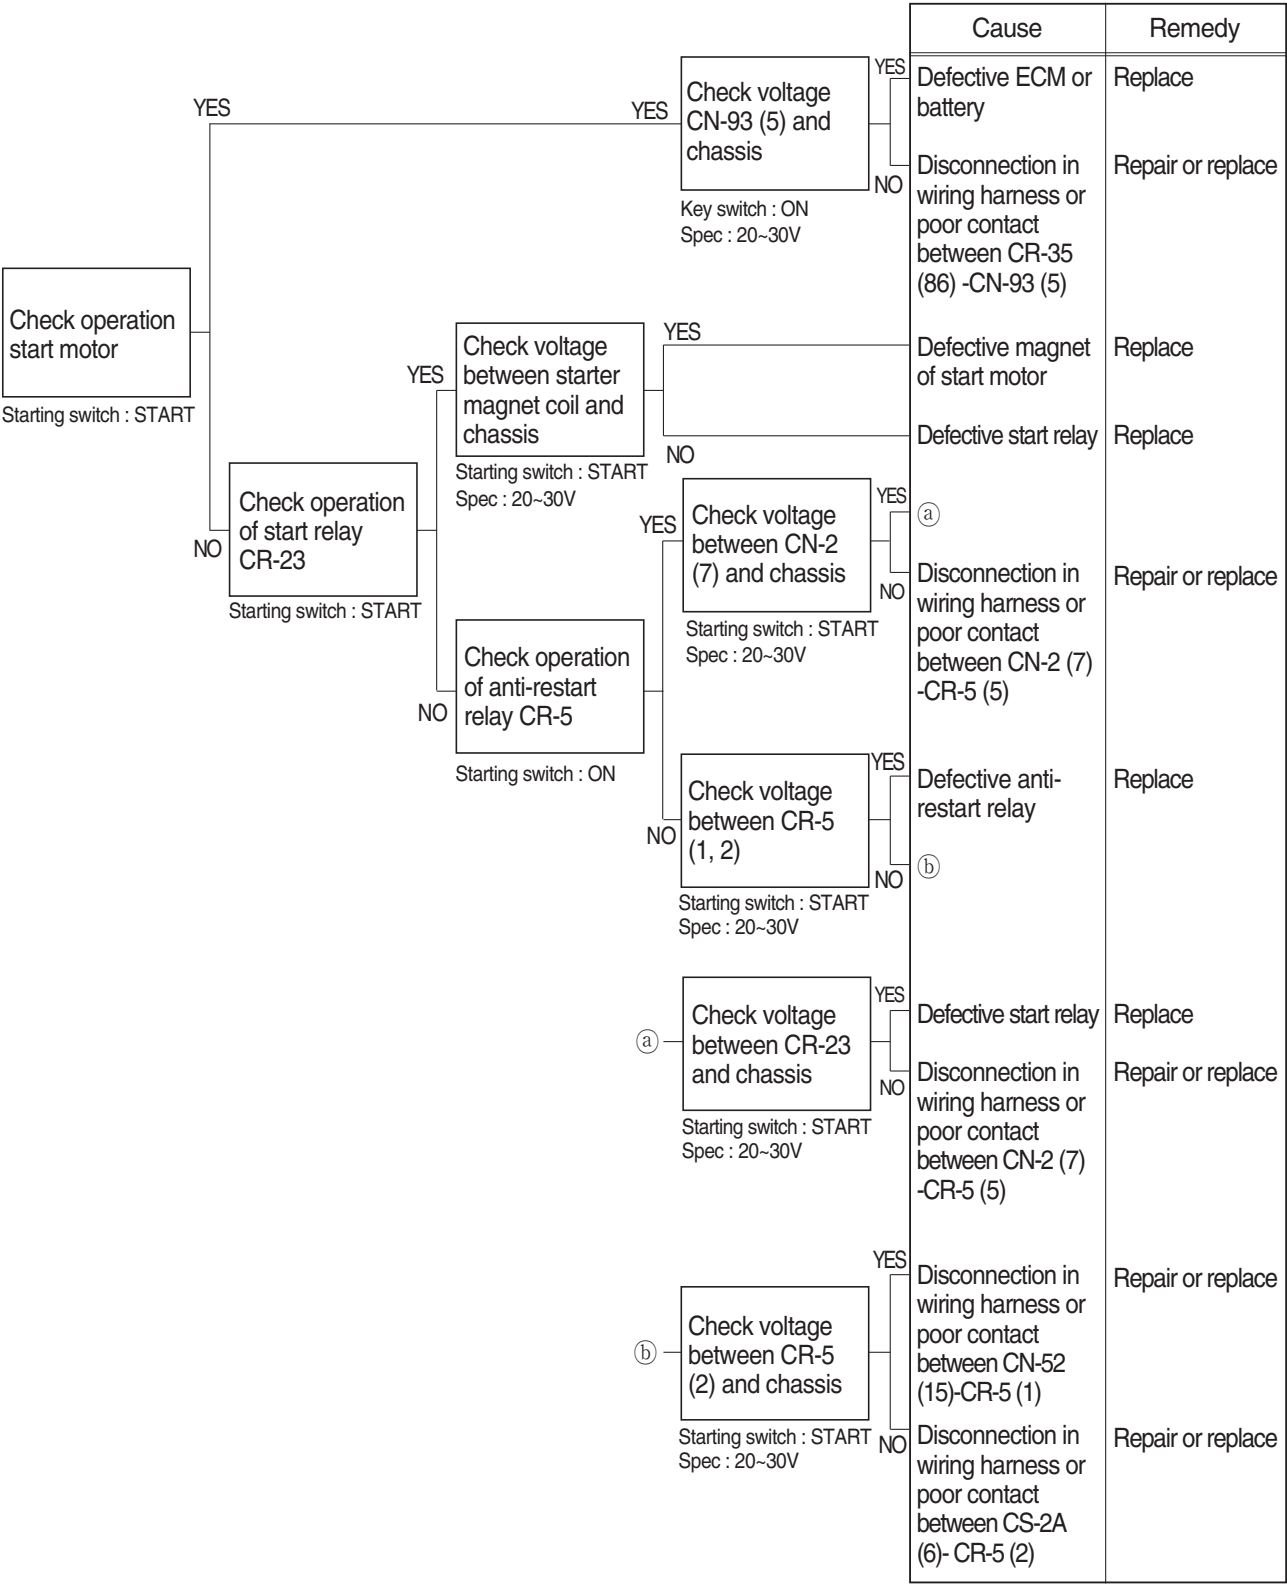



15. WHEN STARTING SWITCH ON DOES NOT OPERATE

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted, master switch ON and check open circuit of circuit breaker (CN-60).
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

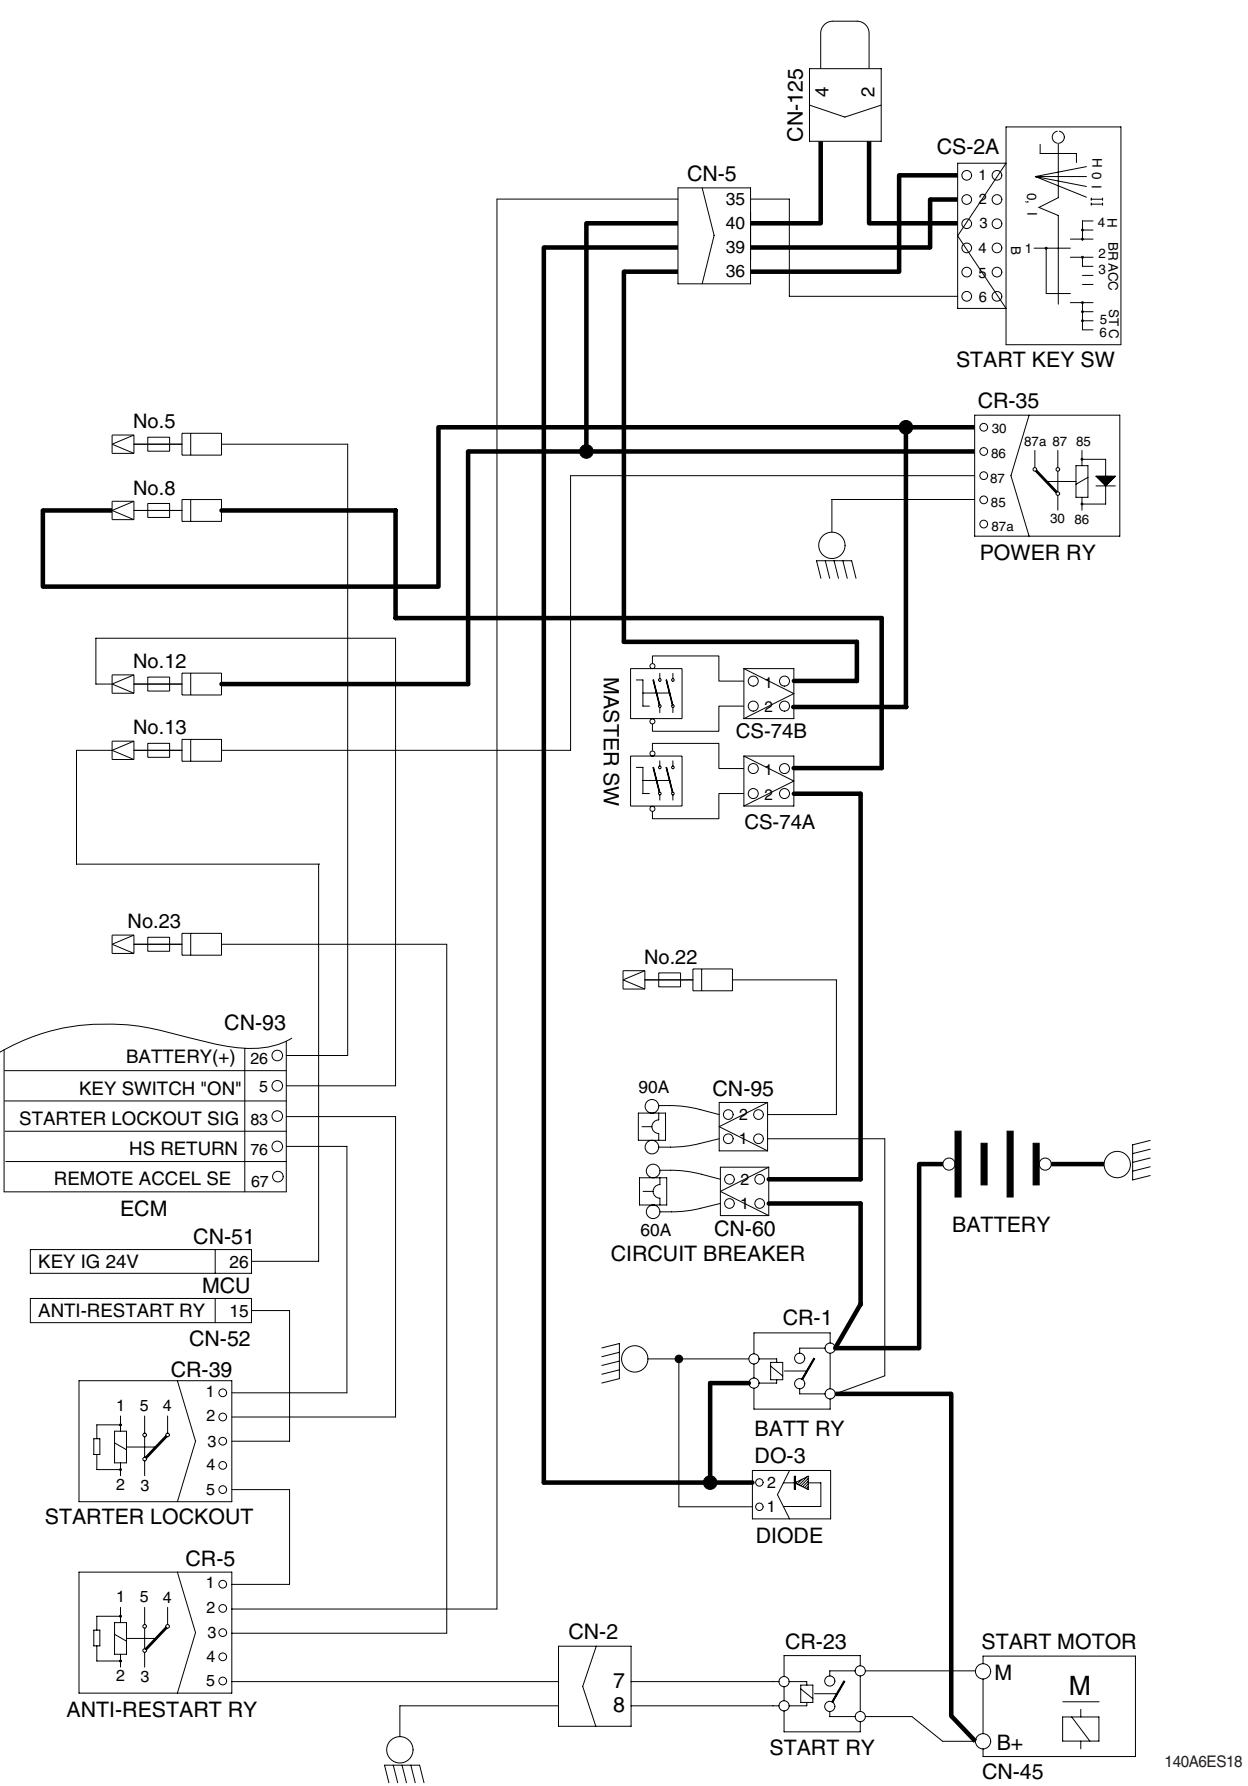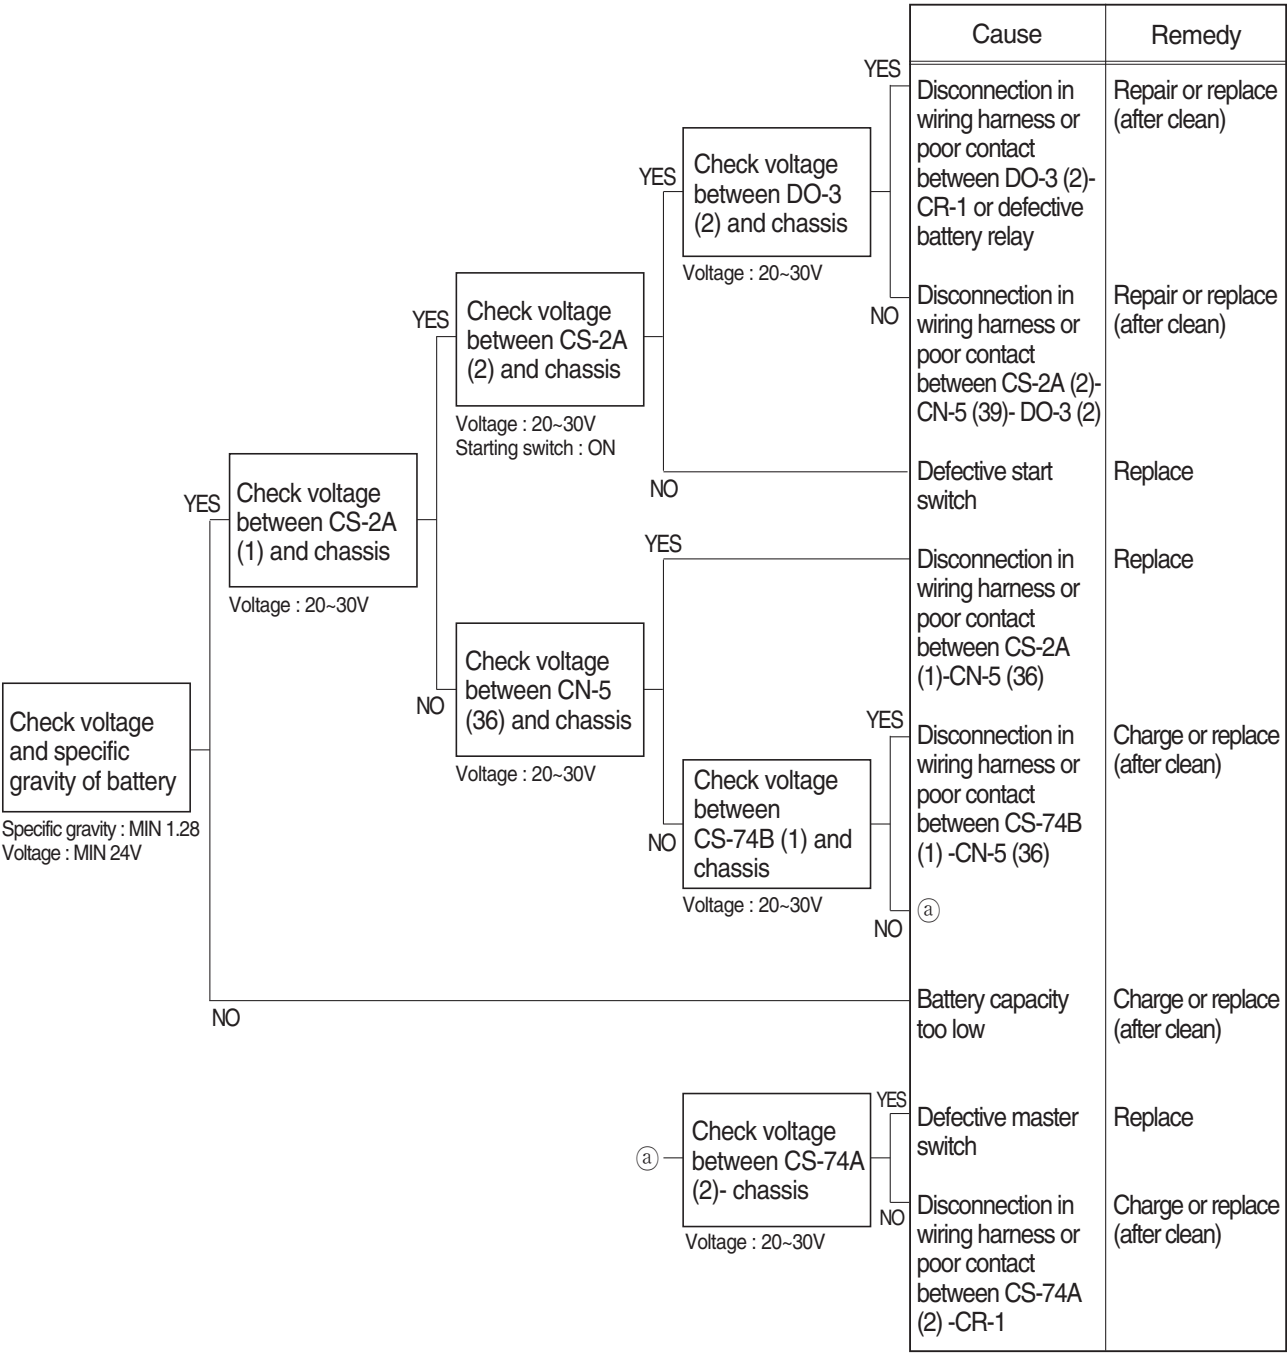



16. WHEN STARTING SWITCH IS TURNED ON, WIPER MOTOR DOES NOT OPERATE

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and the fuse No. 10, 14 and 20 is not blown out.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

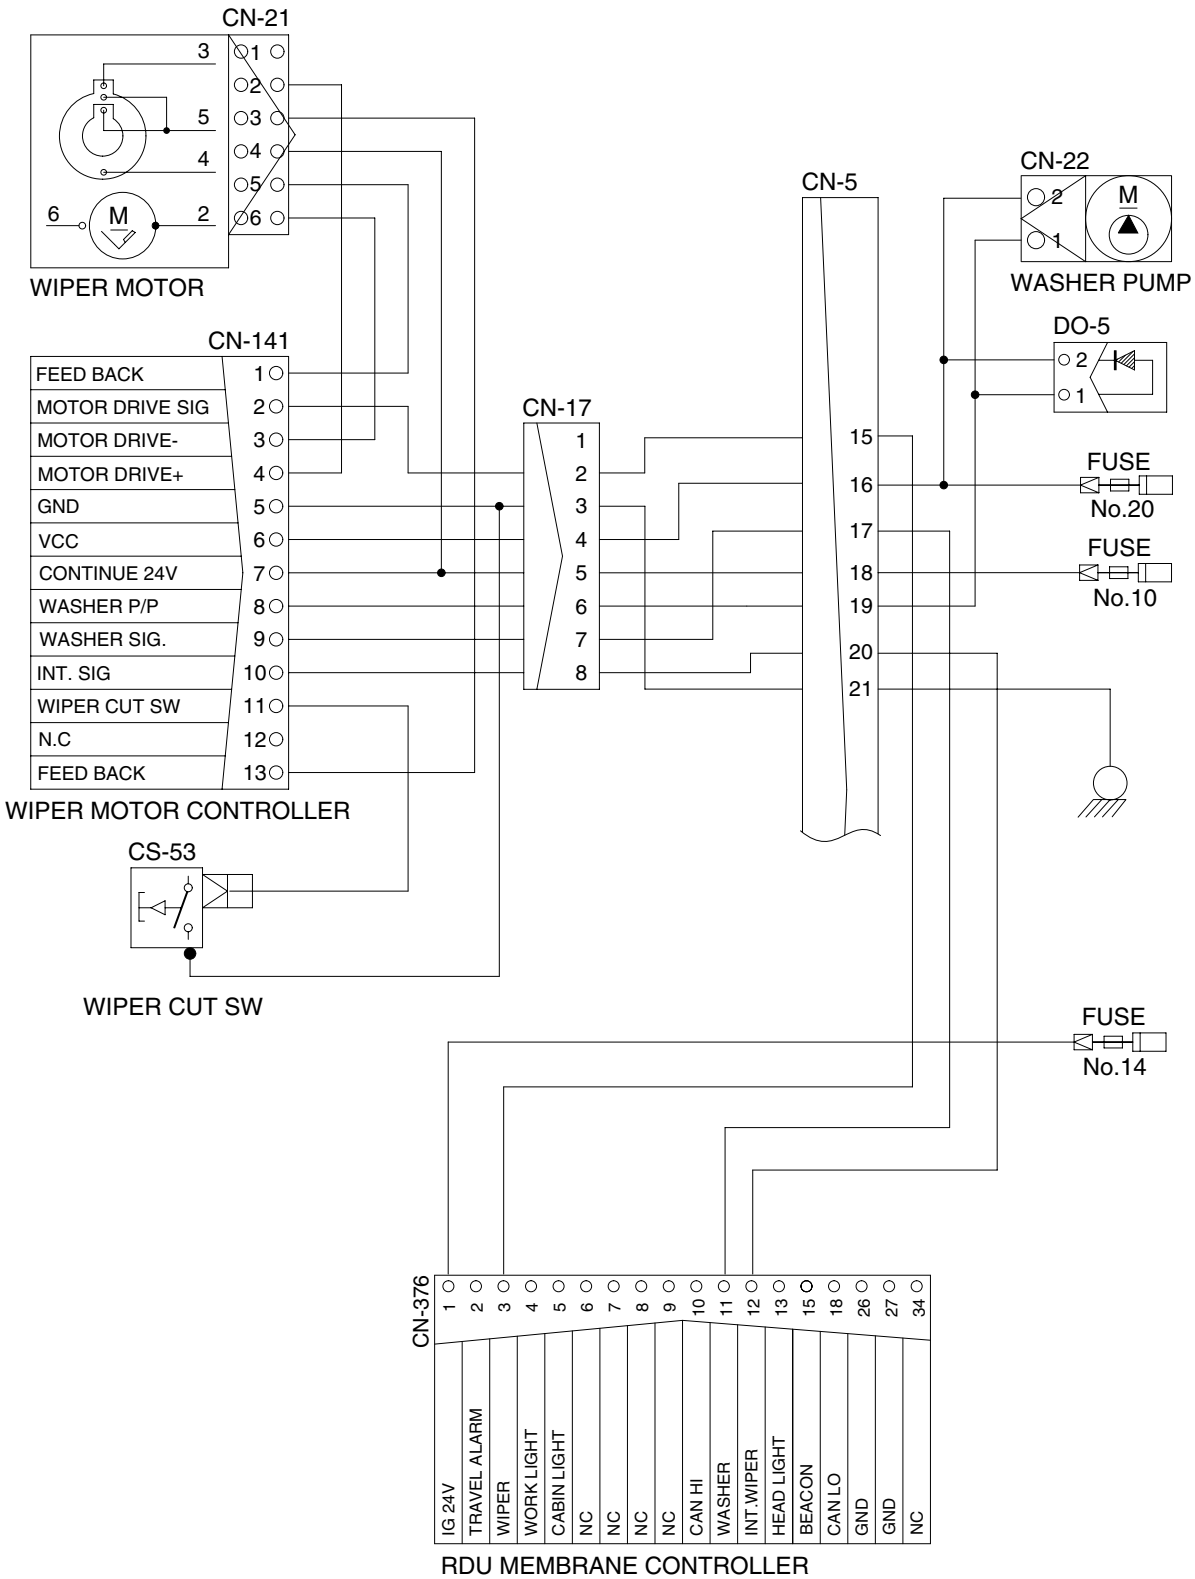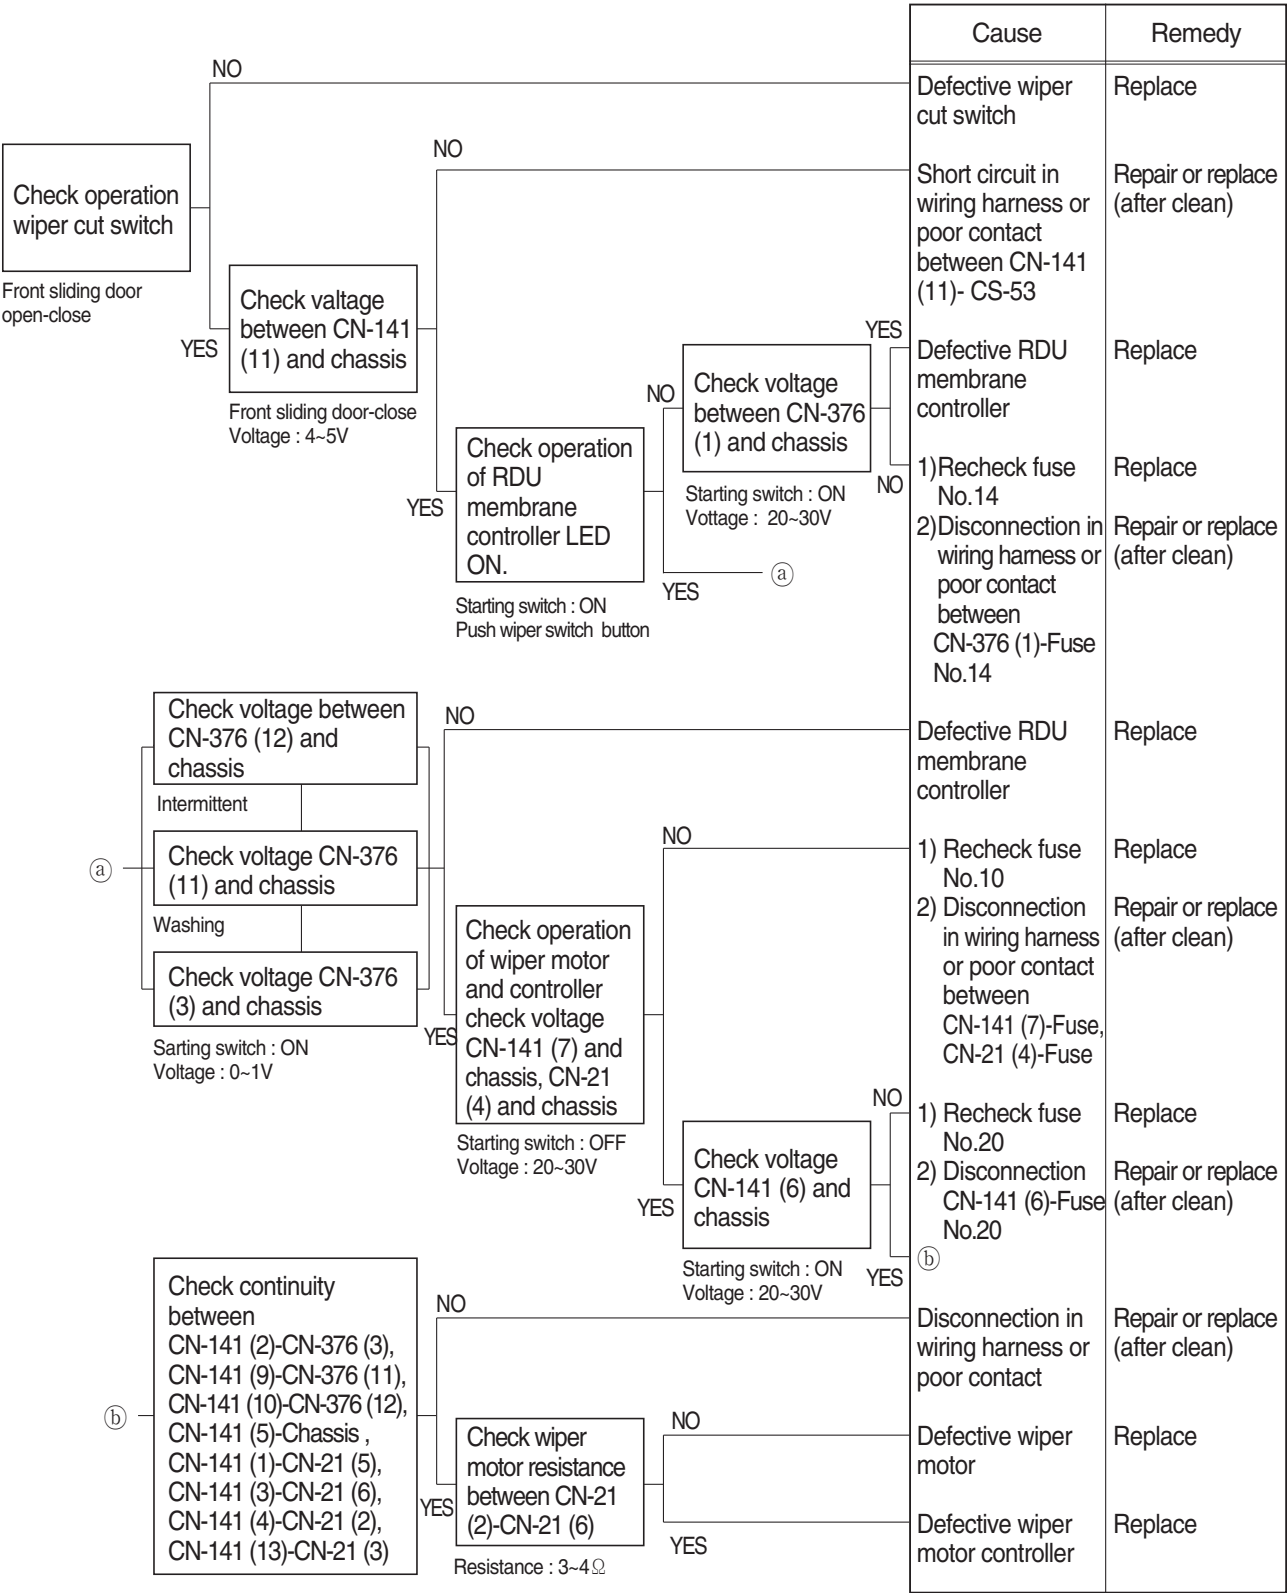



17. WHEN STARTING SWITCH IS TURNED ON, HEAD LAMP DOES NOT LIGHTS UP

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No.14 & 21.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

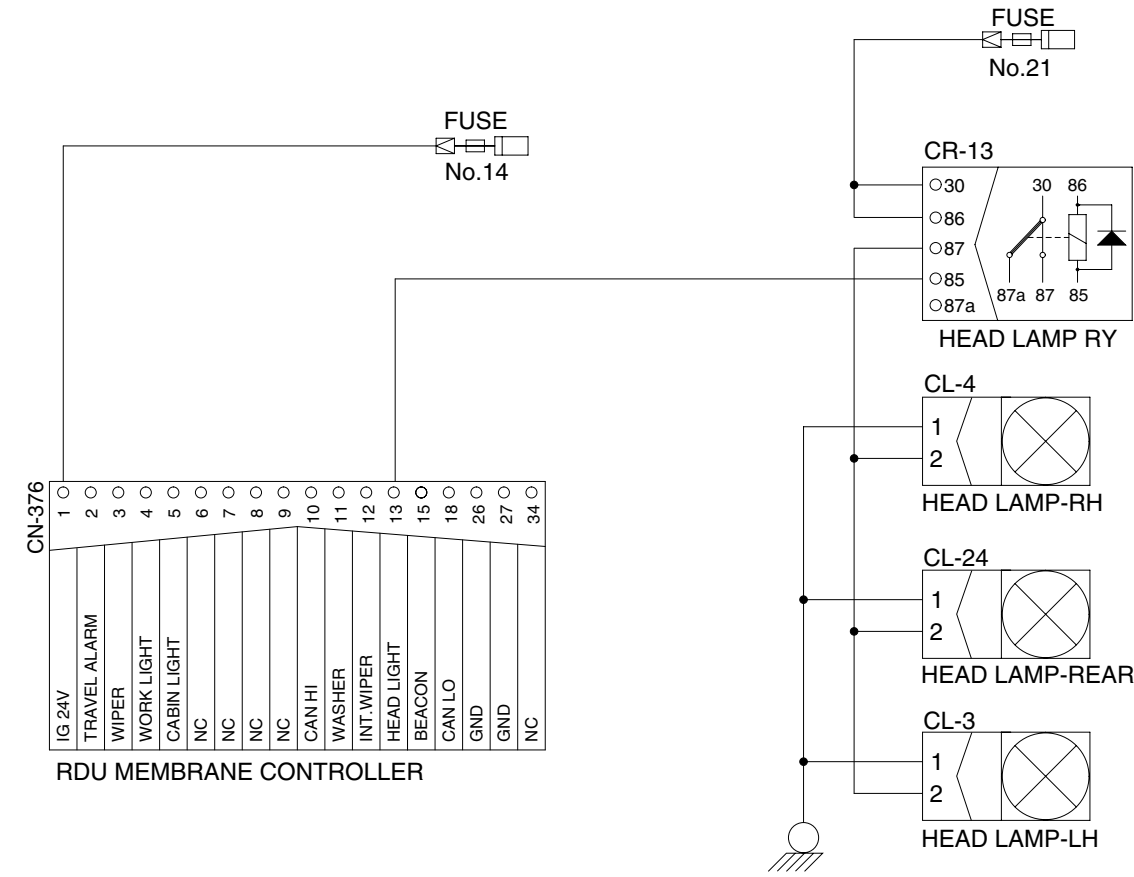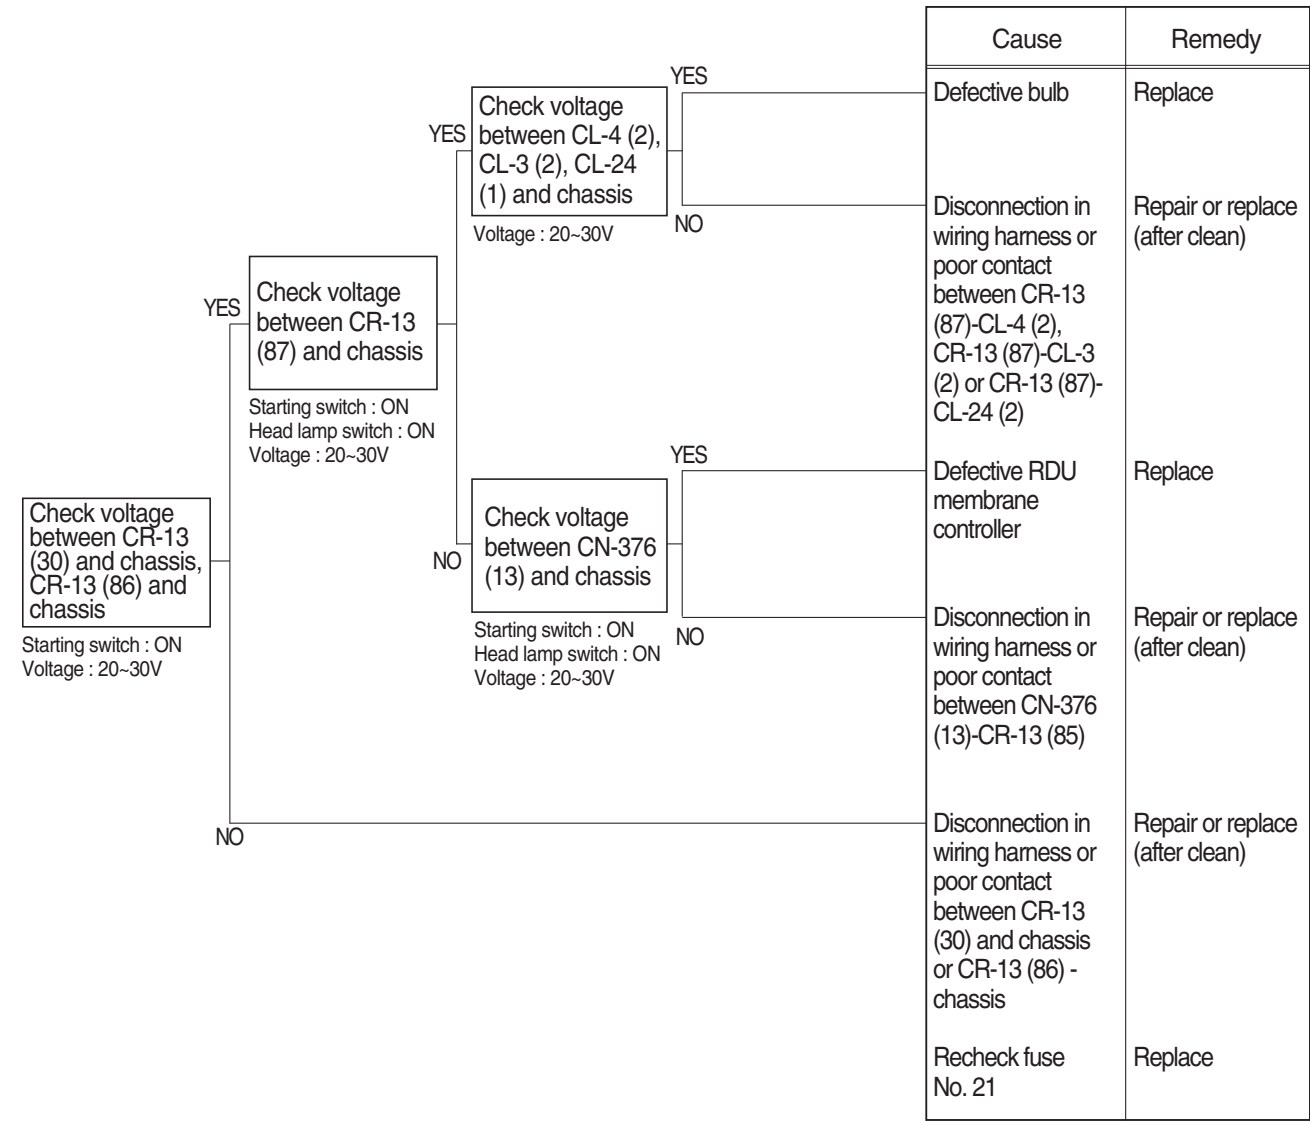

18. WHEN STARTING SWITCH IS TURNED ON, WORK LAMP DOES NOT LIGHTS UP

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No.14 & 18.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

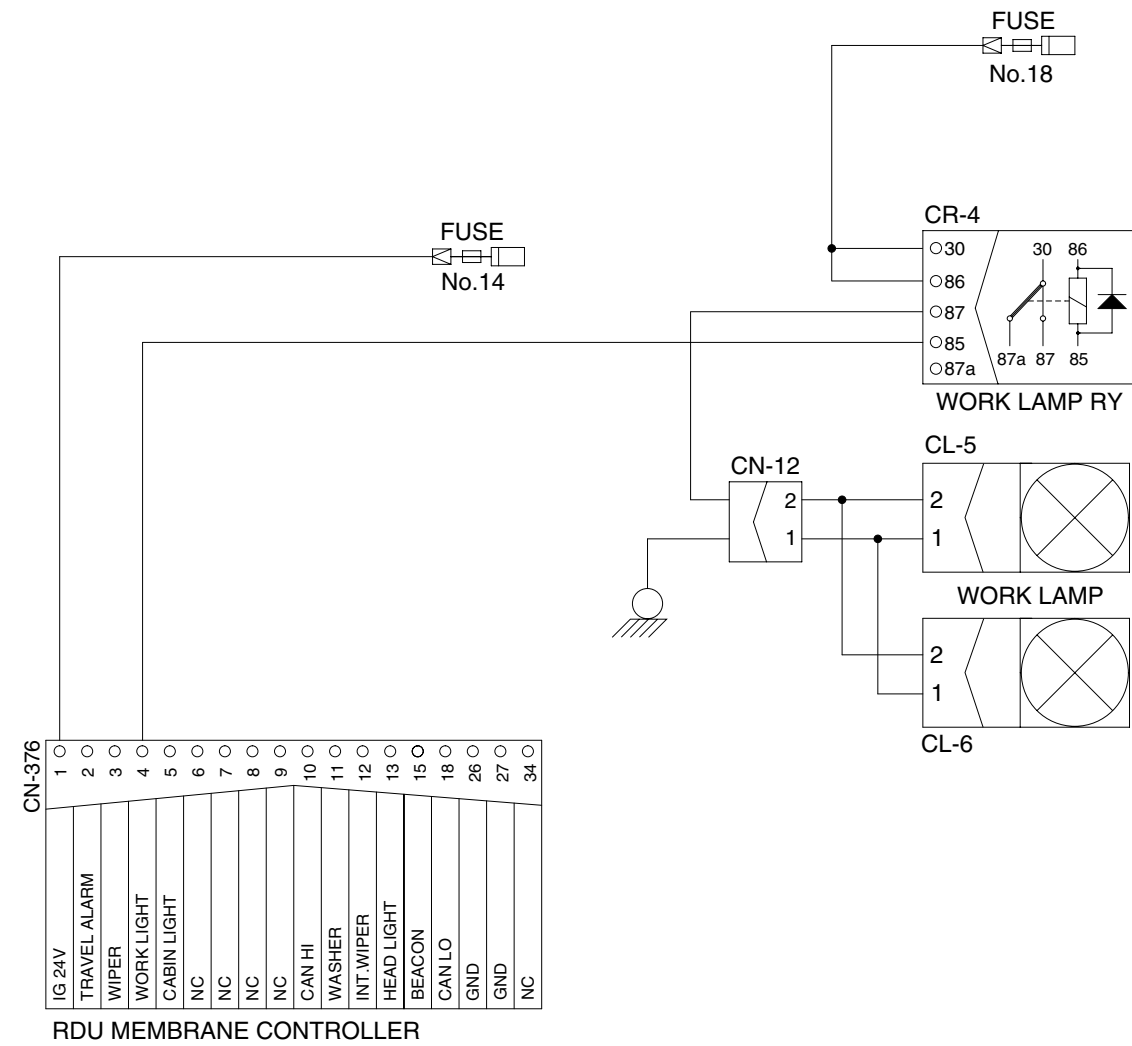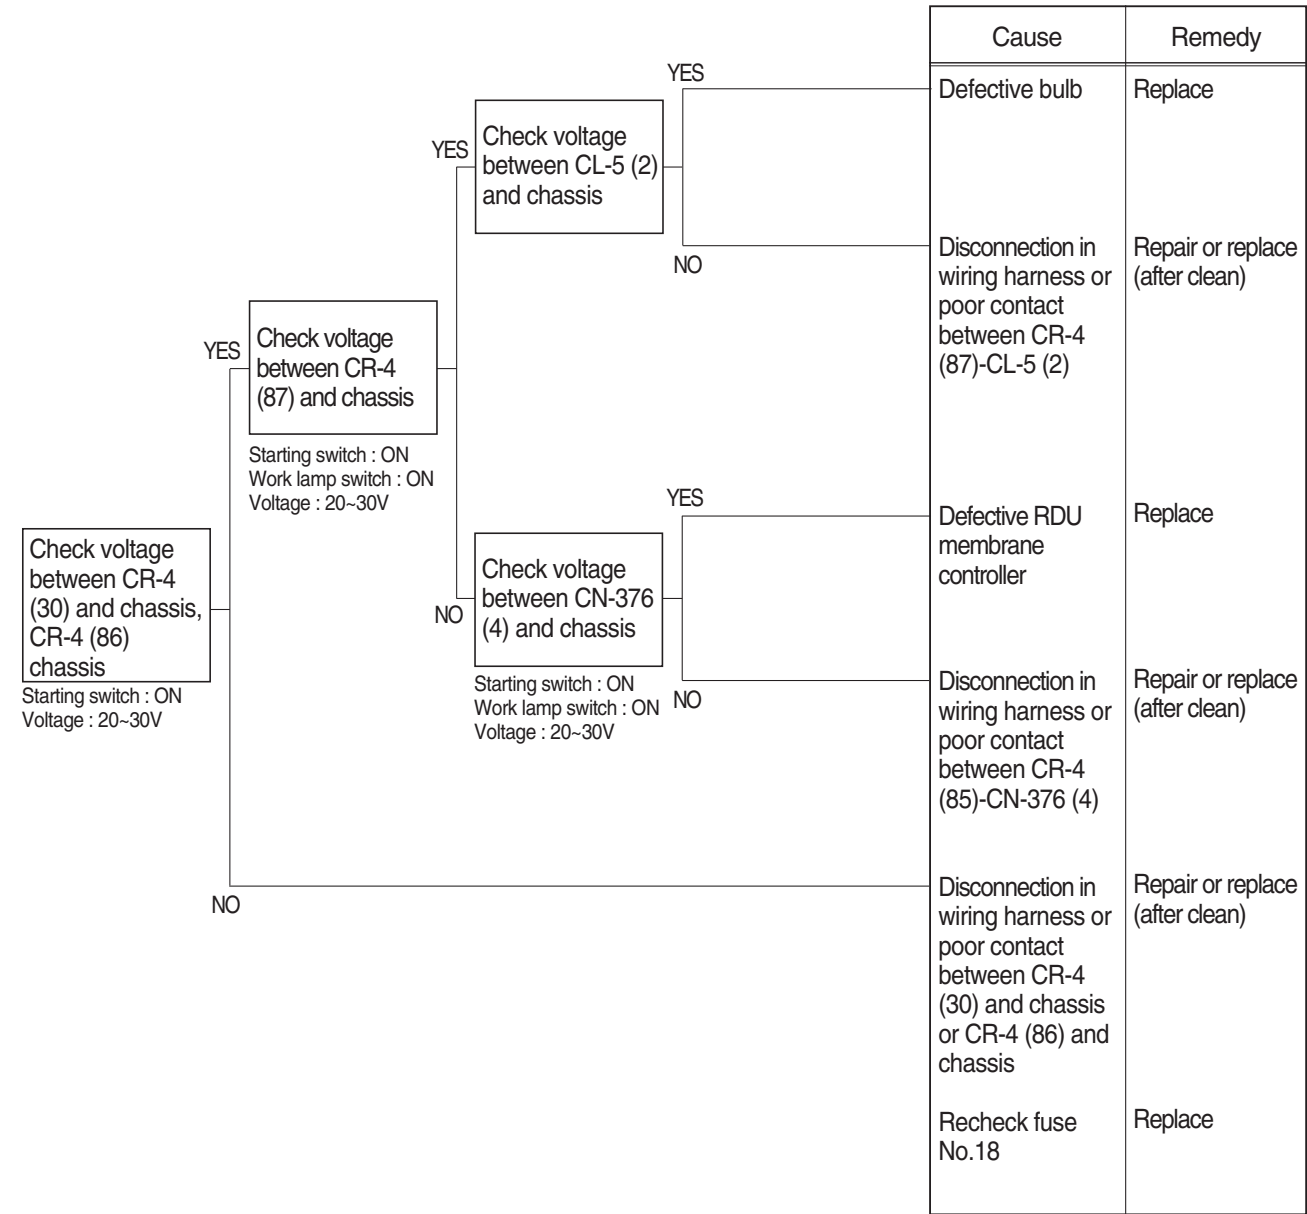


GROUP 4 MECHATRONICS SYSTEM


1. ALL ACTUATORS SPEED ARE SLOW

- ※ Boom, Arm, Bucket, Swing and travel speed are slow, but engine speed is good.
- ※ Spec : P-mode 1850 ± 50 rpm S-mode 1750 ± 50 rpm E-mode 1650 ± 50 rpm
- ※ Before carrying out below procedure, check all the related connectors are properly inserted and fault code on the cluster.

1) INSPECTION PROCEDURE

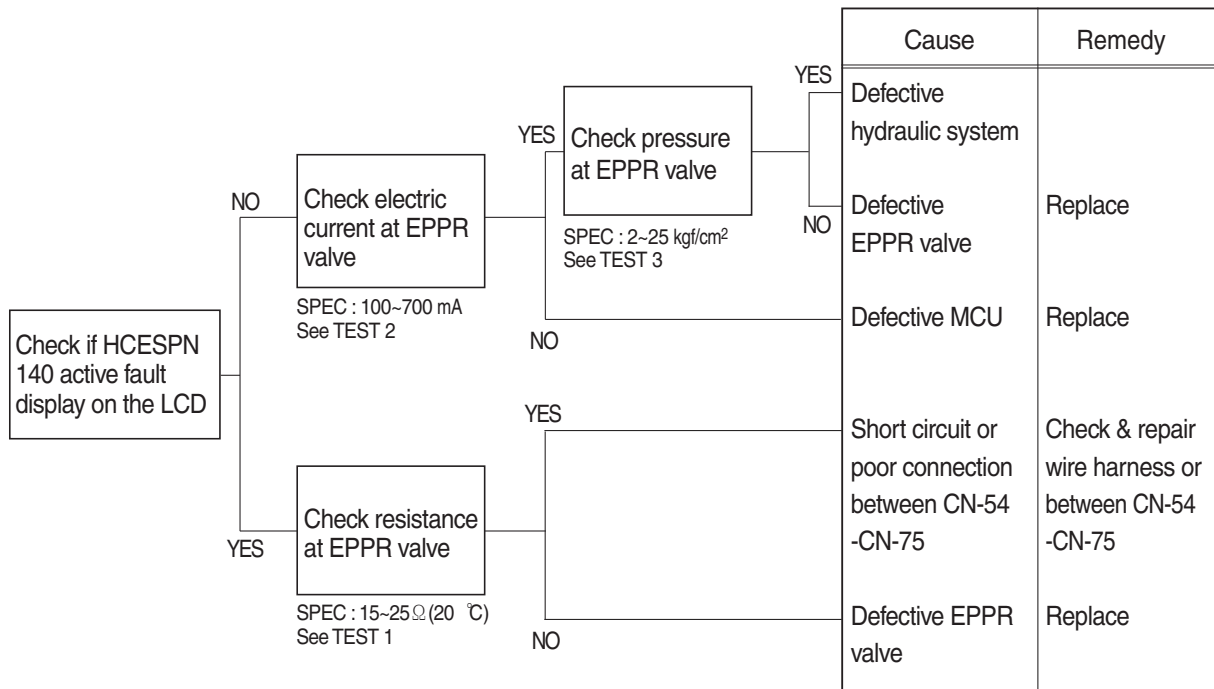

Wiring diagram

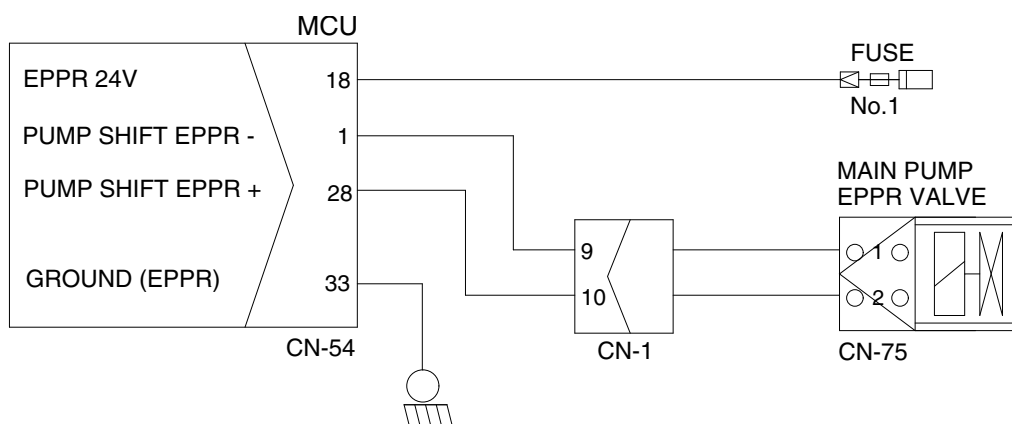


140A6MS01

2) TEST PROCEDURE

(1) **Test 1** : Check resistance at connector CN-75.

- ① Starting switch OFF.
- ② Disconnect connector CN-75 from EPPR valve at main hydraulic pump.
- ③ Check resistance between 2 lines as figure.

SPEC : 15~25 Ω (20°C)

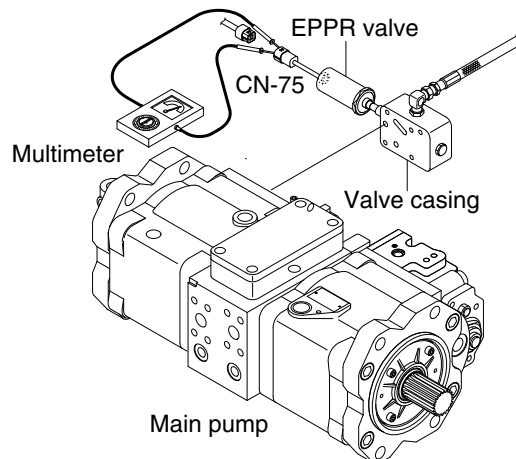


160A6MS15

(2) **Test 2** : Check electric current at EPPR valve.

- ① Disconnect connector CN-75 from EPPR valve.
- ② Insert the adapter to CN-75 and install multimeter as figure.
- ③ Start engine.
- ④ Set S-mode and cancel auto decel mode.
- ⑤ Position the multimodal dial at 10.
- ⑥ If tachometer show approx 1750 ± 50 rpm disconnect one wire harness from EPPR valve.
- ⑦ Check electric current at bucket circuit relief position.

Spec : 100~700 mA

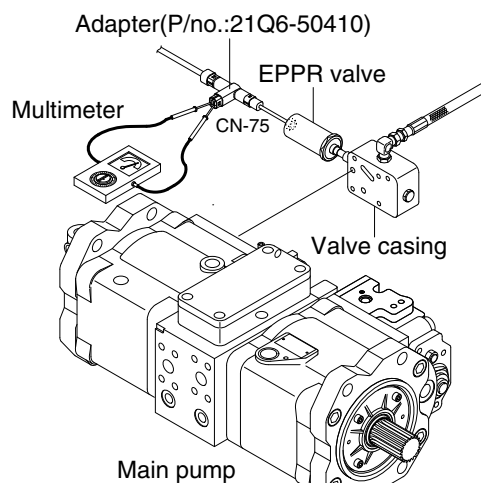


160A5MS21

(3) **Test 3** : Check pressure at EPPR valve.

- ① Start engine.
- ② Set S-mode and cancel auto decel mode.
- ③ Position the multimodal dial at 10.
- ④ Slowly operate control lever of bucket functions at full stroke over relief and measure the EPPR valve pressure by the the monitoring menu of the cluster.
- ⑤ If pressure is not correct, adjust it.
- ⑥ After adjust, test the machine.

Spec : 2~25 kgf/cm² (30~350 psi)

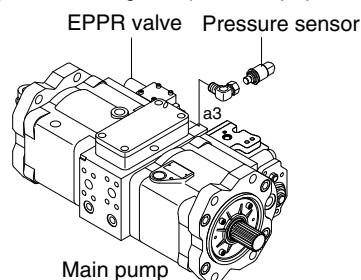

Monitoring
(analog)


Cluster

160A5MS22


2. ENGINE STALL

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

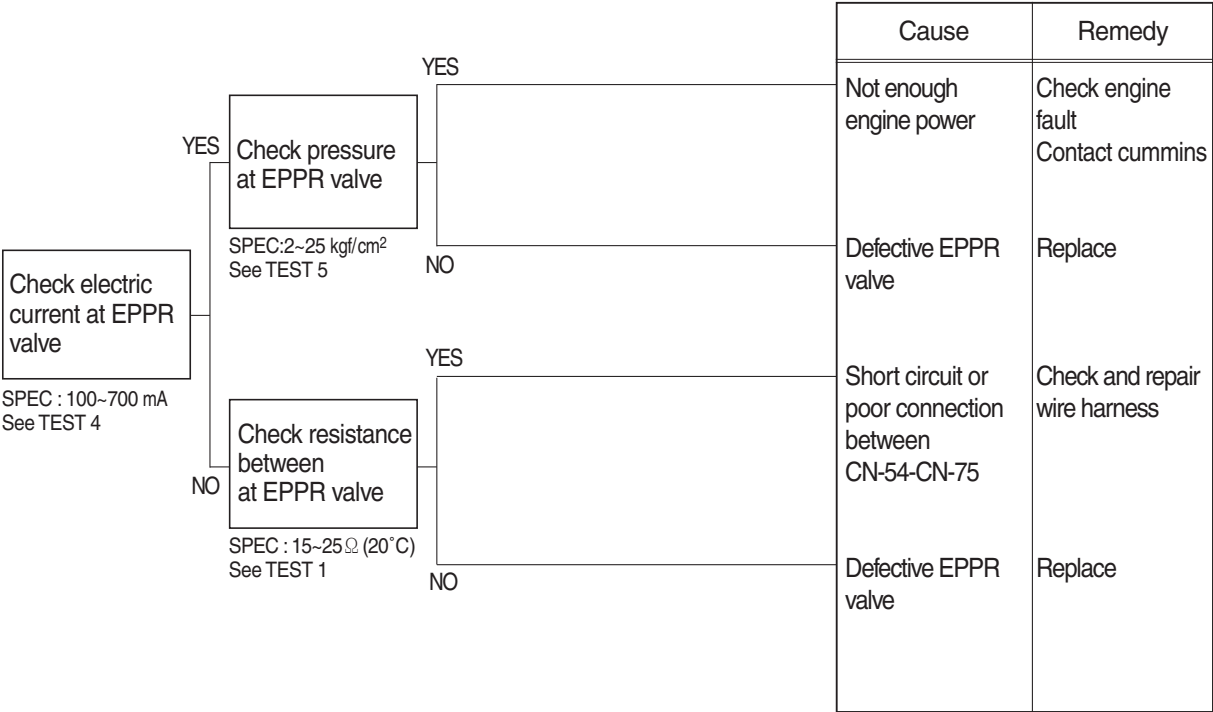

Wiring diagram

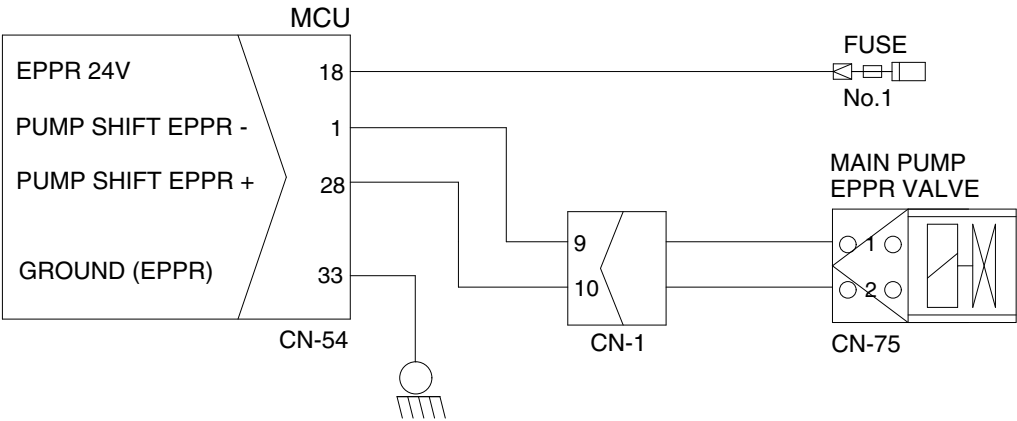


140A6MS01

2) TEST PROCEDURE

(1) Test 4 : Check electric current at EPPR valve.

- ① Disconnect connector CN-75 from EPPR valve.
- ② Insert the adapter to CN-75 and install multimeter as figure.
- ③ Start engine.
- ④ Set S-mode and cancel auto decel mode.
- ⑤ Position the multimodal dial at 10.
- ⑥ If rpm show approx 1750 ± 50 rpm disconnect one wire harness from EPPR valve. Check electric current at bucket circuit relief position.
- ⑦ relief position.

Spec : 100~700 mA

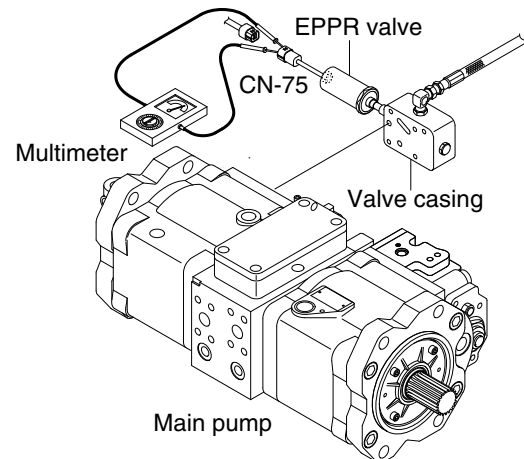


160A6MS15

(2) Test 5 : Check pressure at EPPR valve.

- ① Start engine.
- ② Set S-mode and cancel auto decel mode.
- ③ Position the multimodal dial at 10.
- ④ Slowly operate control lever of bucket functions at full stroke over relief and measure the EPPR valve pressure by the the monitoring menu of the cluster.
- ⑤ If pressure is not correct, adjust it.
- ⑥ After adjust, test the machine.

SPEC : 2~25 kgf/cm² (30~350 psi)

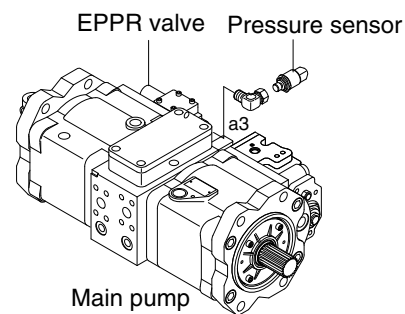


160A5MS22


3. MALFUNCTION OF CLUSTER OR MODE SELECTION SYSTEM

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

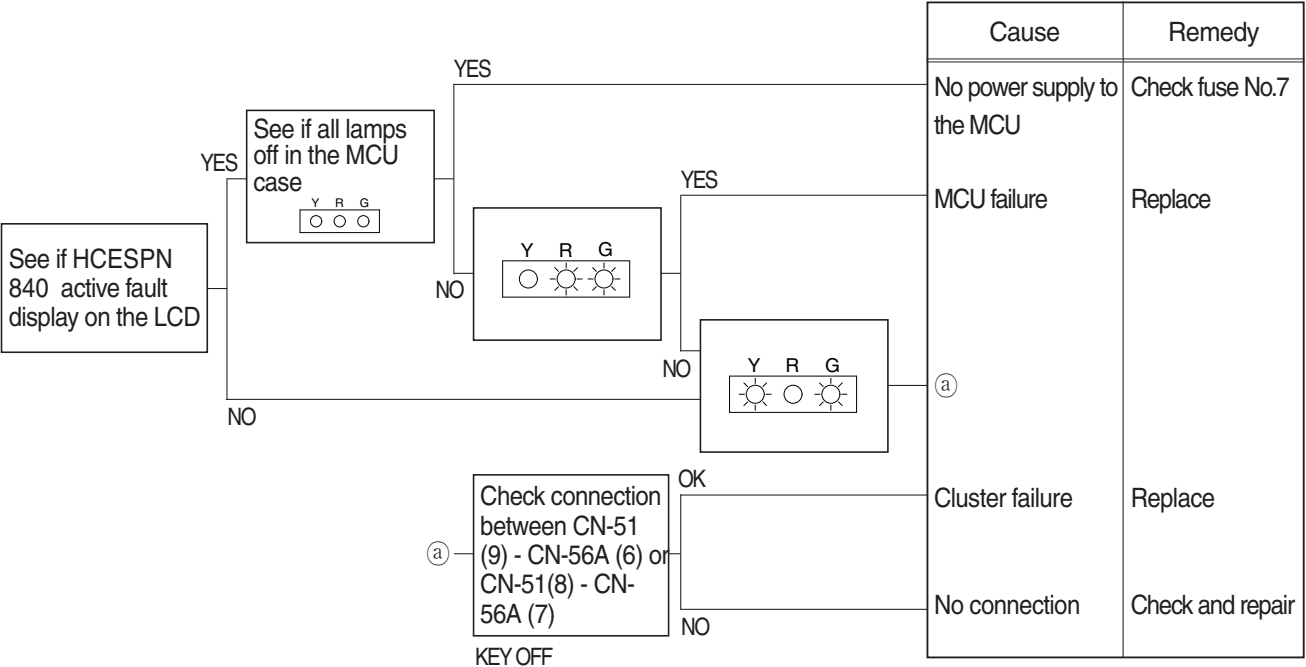

Wiring diagram

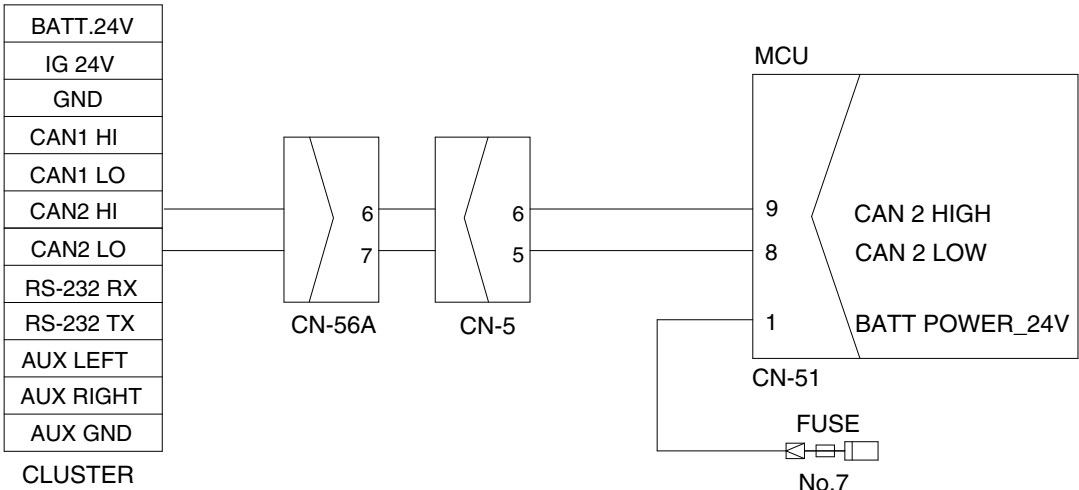


160A6MS02

4. AUTO DECEL SYSTEM DOES NOT WORK


- Fault code : HCESPN 105, FMI 0~4 (work pressure sensor)
HCESPN 108, FMI 0~4 (travel oil pressure sensor)

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

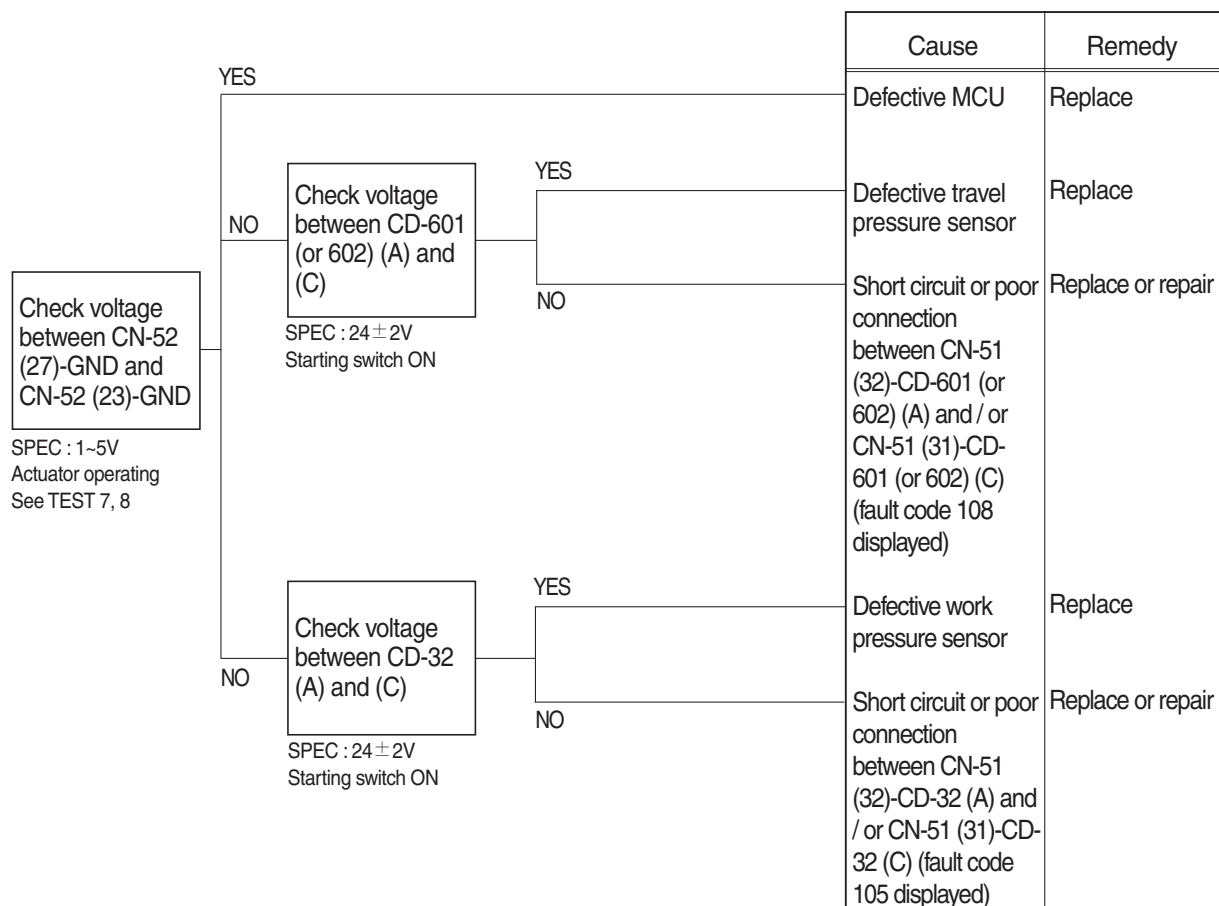

Wiring diagram

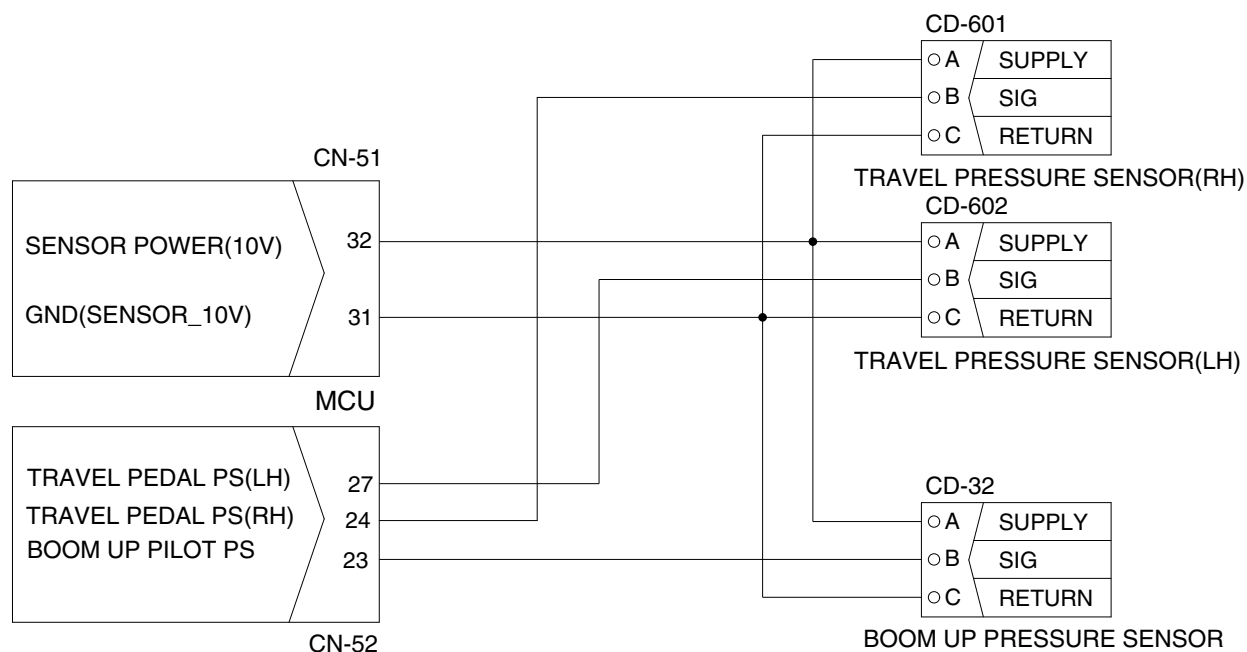

2) TEST PROCEDURE


(1) **Test 7** : Check voltage at CN-52 (24 or 27) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (24 or 27) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

(2) **Test 8** : Check voltage at CN-52 (23) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper
- ② Insert prepared pin to rear side of connectors : One pin to (23) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

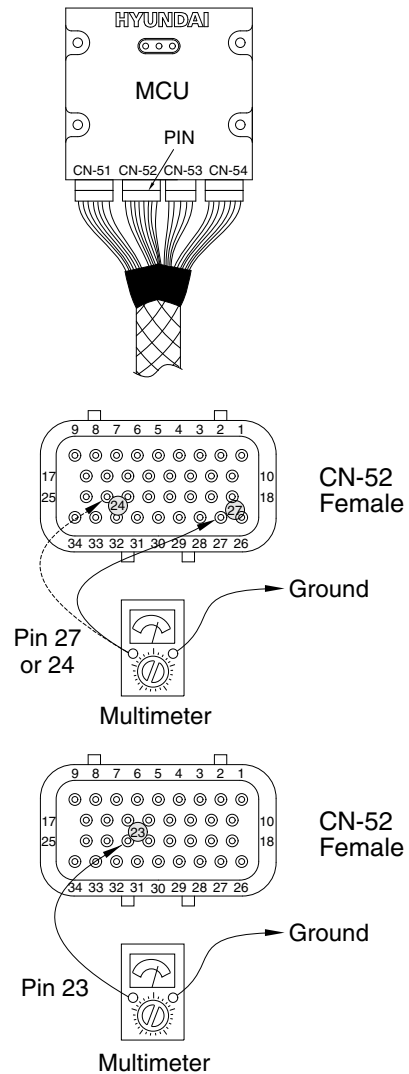


235A6MS104

5. MALFUNCTION OF PUMP 1 PRESSURE SENSOR


· Fault code : HCESPN 120, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

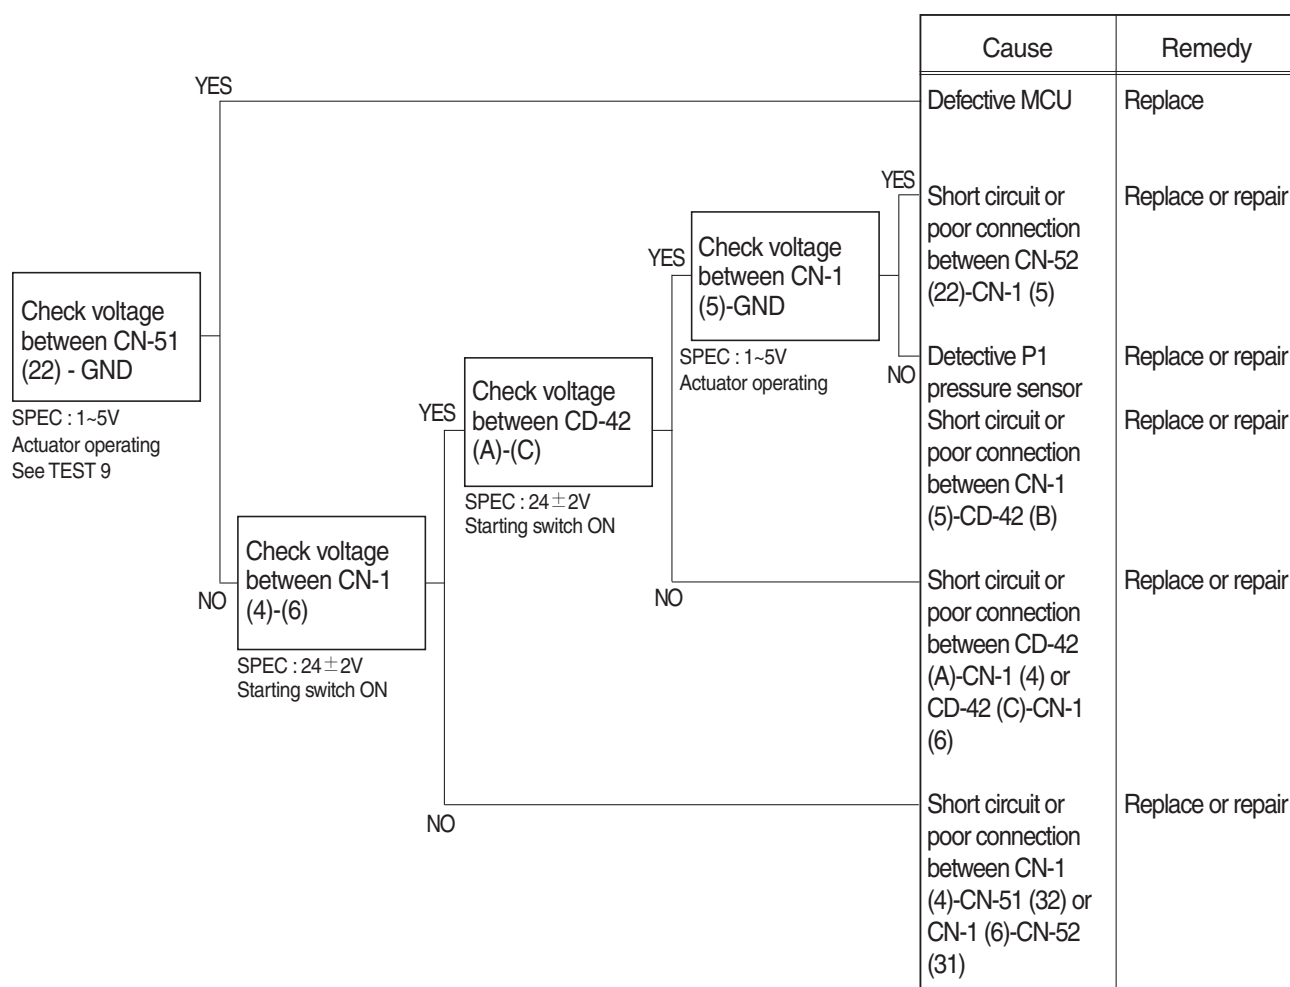

Wiring diagram

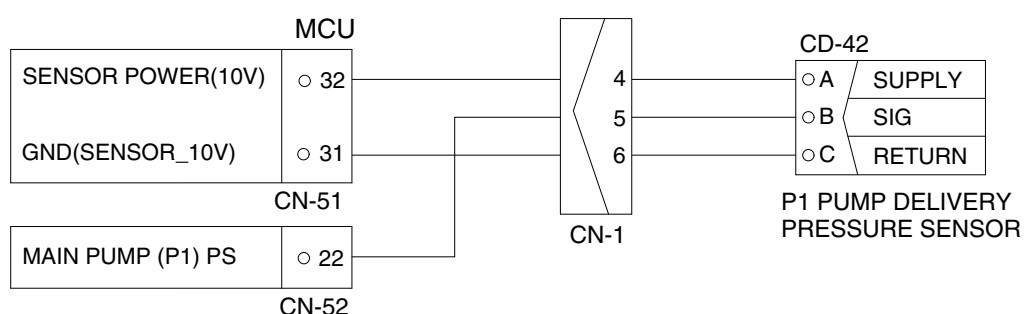


2) TEST PROCEDURE

(1) **Test 9** : Check voltage at CN-52 (22) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (22) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

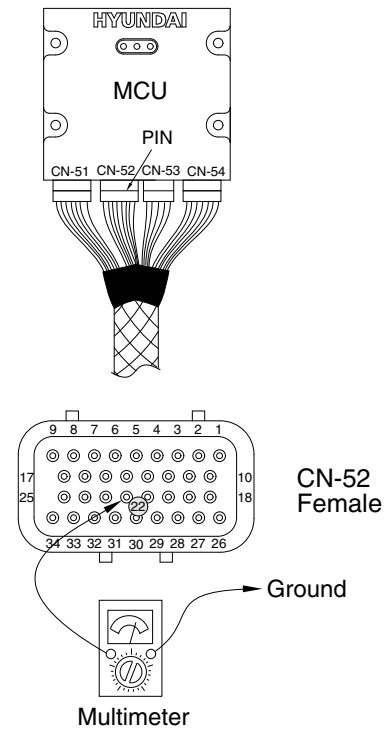


220A6MS106

6. MALFUNCTION OF PUMP 2 PRESSURE SENSOR


· Fault code : HCESPN 121, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

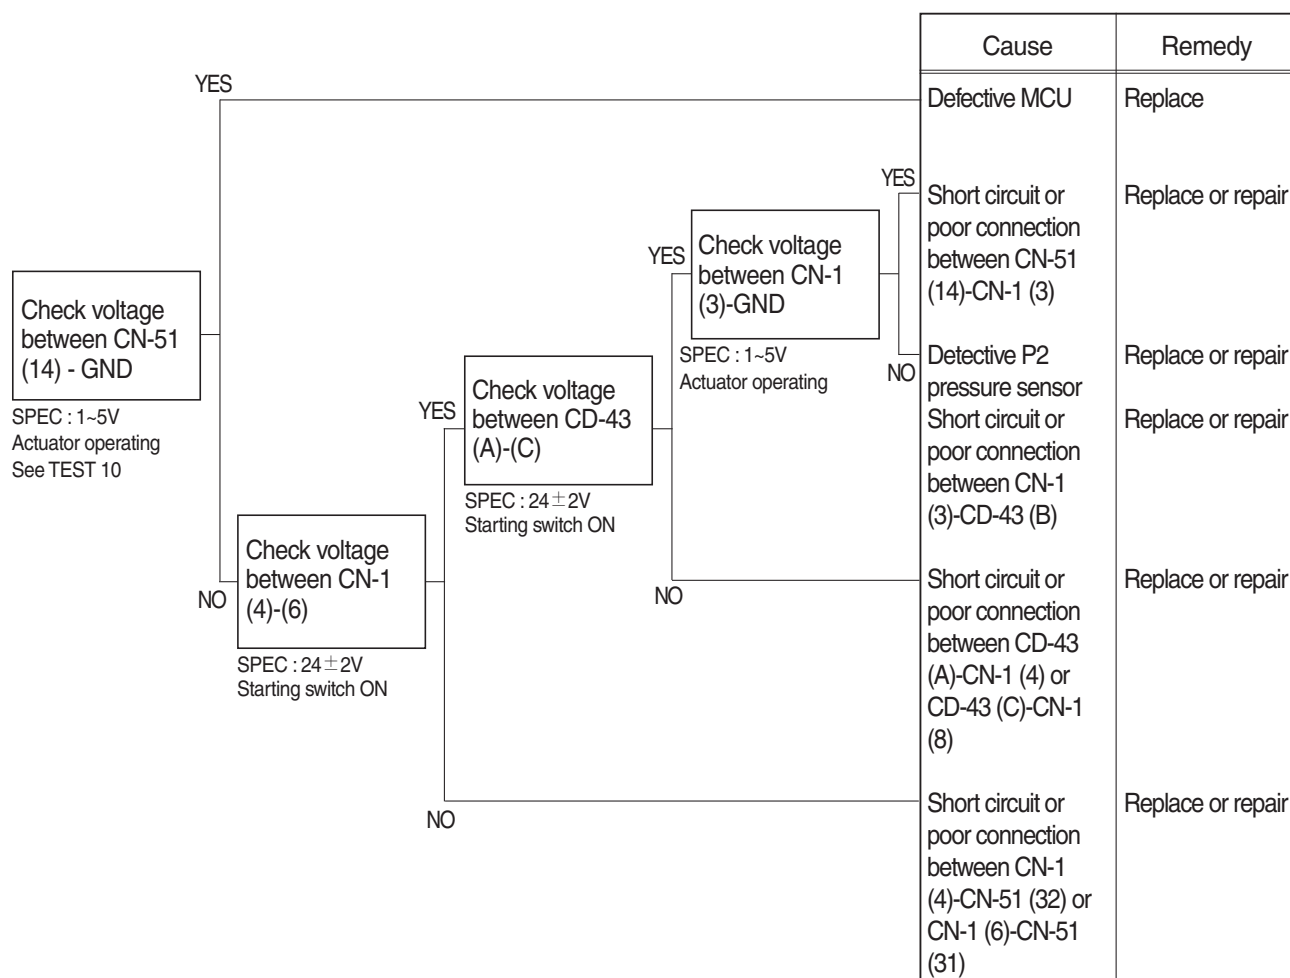

Wiring diagram

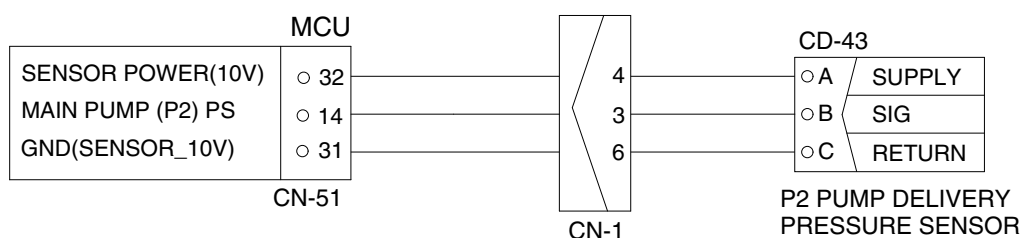


2) TEST PROCEDURE

(1) **Test 10** : Check voltage at CN-51 (14) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (14) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

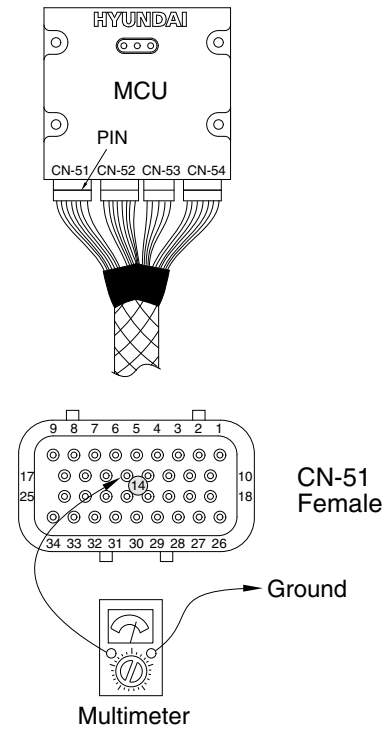


220A6MS108

7. MALFUNCTION OF NEGATIVE 1 PRESSURE SENSOR


· Fault code : HCESPN 123, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

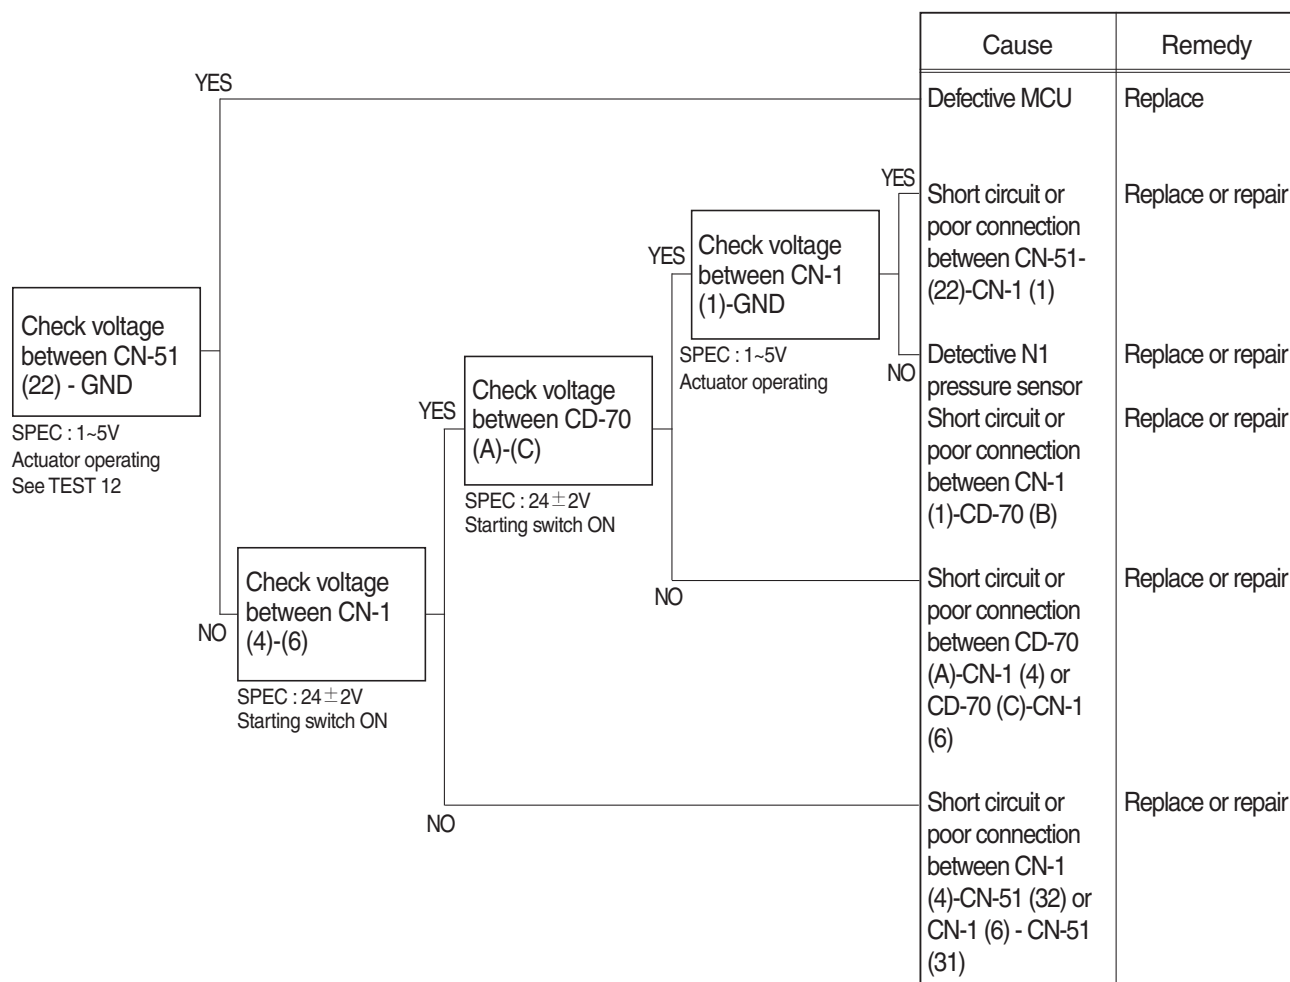

Wiring diagram

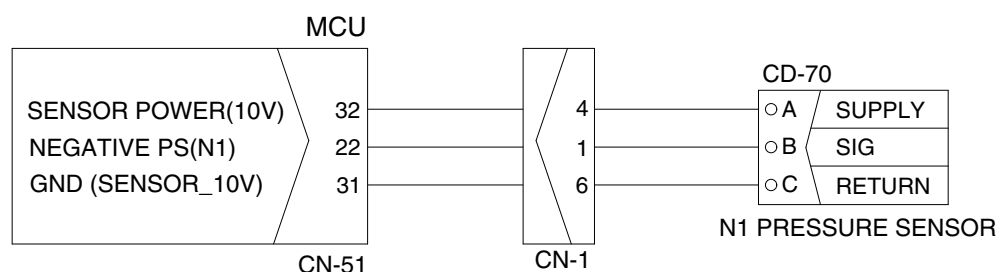


2) TEST PROCEDURE

(1) **Test 12** : Check voltage at CN-51 (22) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (22) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

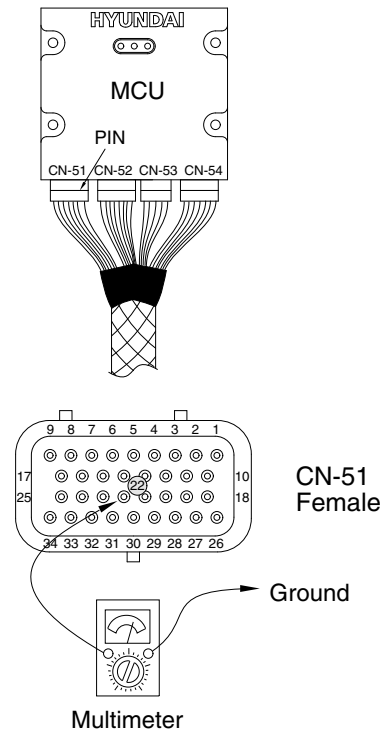


140L6MS112

8. MALFUNCTION OF NEGATIVE 2 PRESSURE SENSOR


· Fault code : HCESPN 124, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

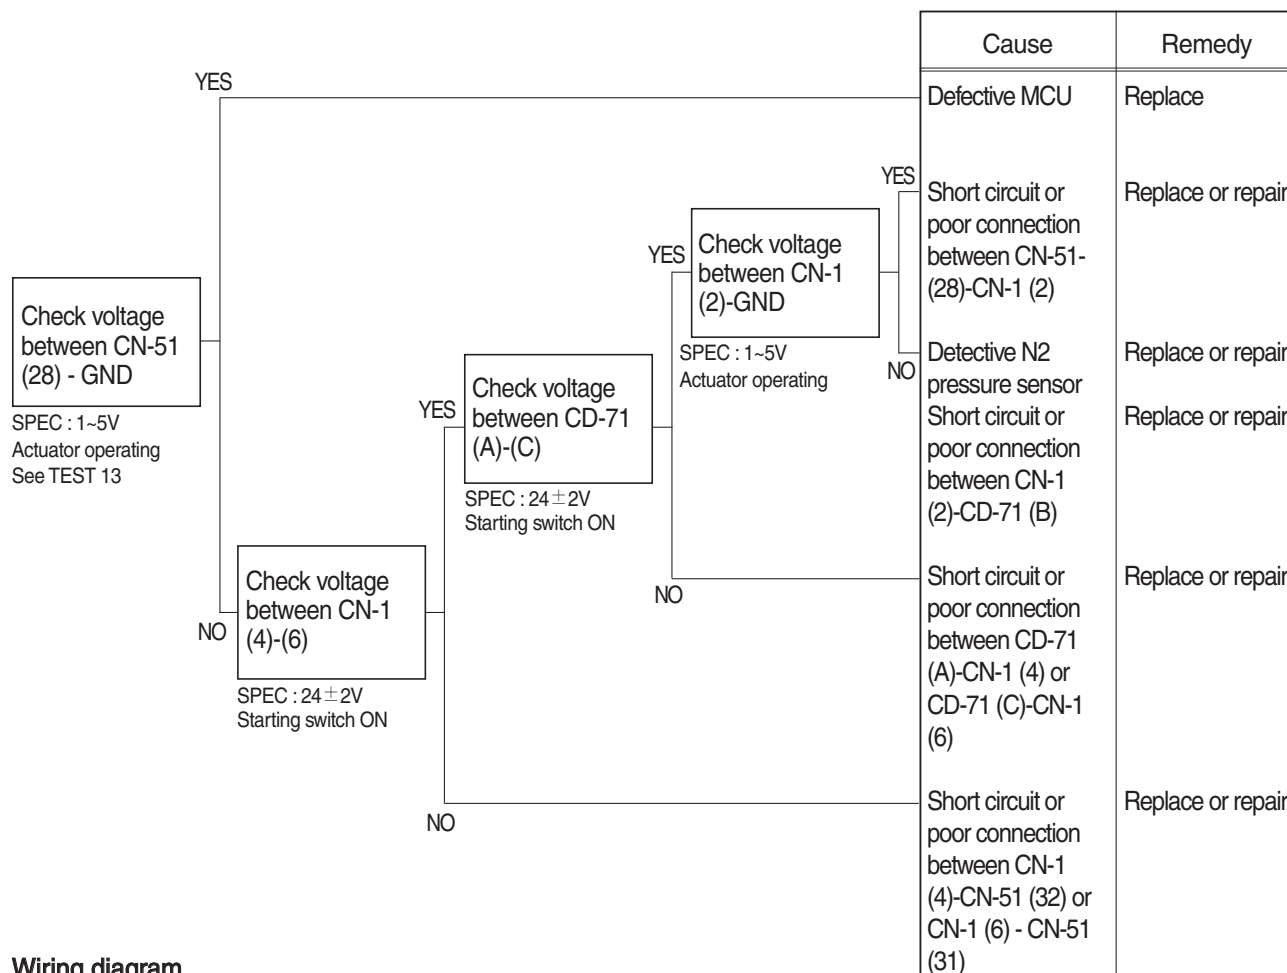

Wiring diagram

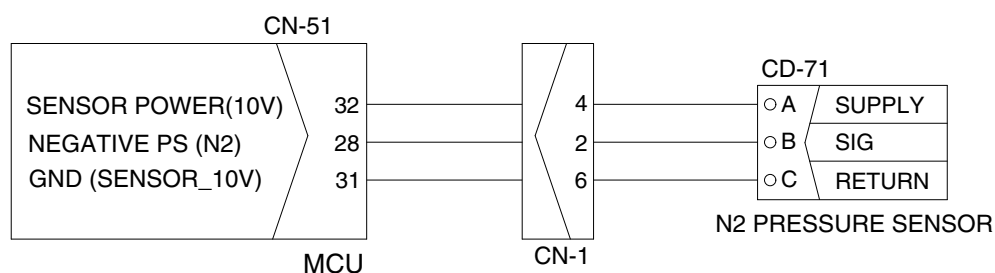


140A6MS13

2) TEST PROCEDURE

(1) **Test 13** : Check voltage at CN-51 (28) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (28) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

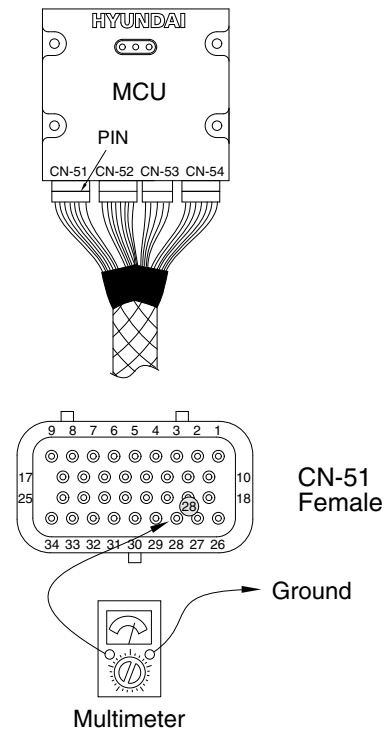


140L6MS114

9. MALFUNCTION OF SWING PRESSURE SENSOR


· Fault code : HCESPN 135, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

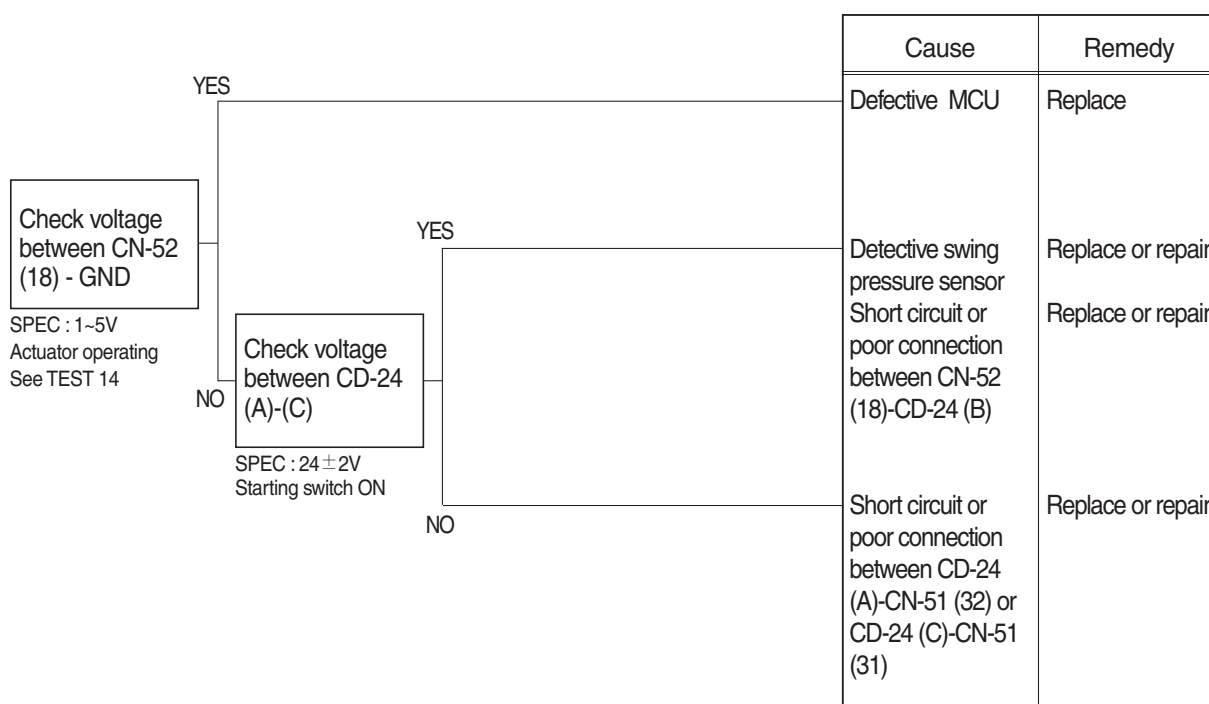

Wiring diagram

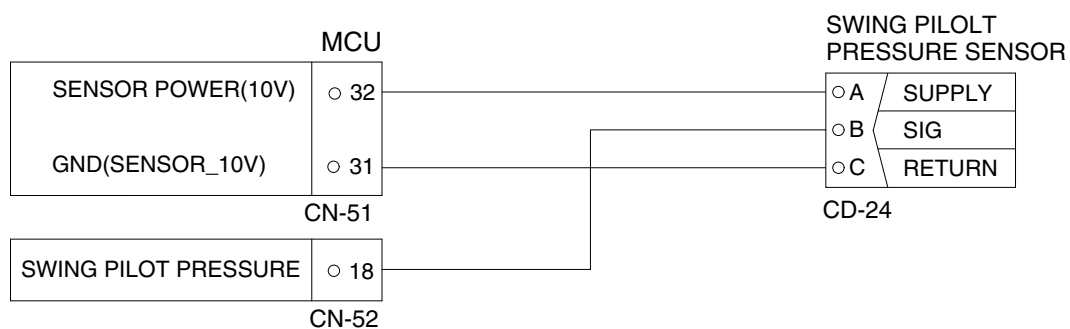


160A6MS14

2) TEST PROCEDURE

(1) **Test 14** : Check voltage at CN-52 (18) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (18) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

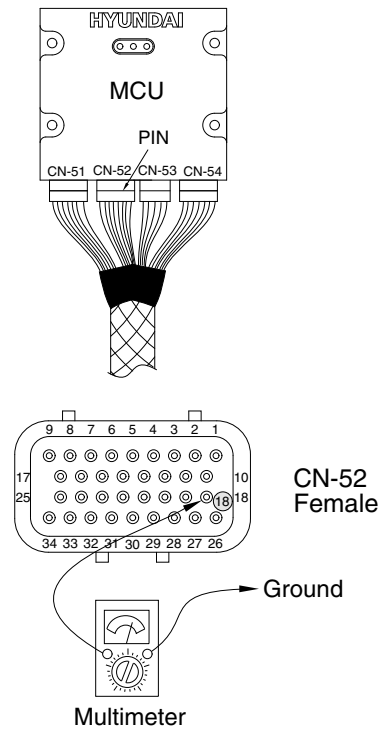


220A6MS116


10. MALFUNCTION OF ARM OUT PRESSURE SENSOR

- Fault code : HCESPN 130, FMI 0~4
- ※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

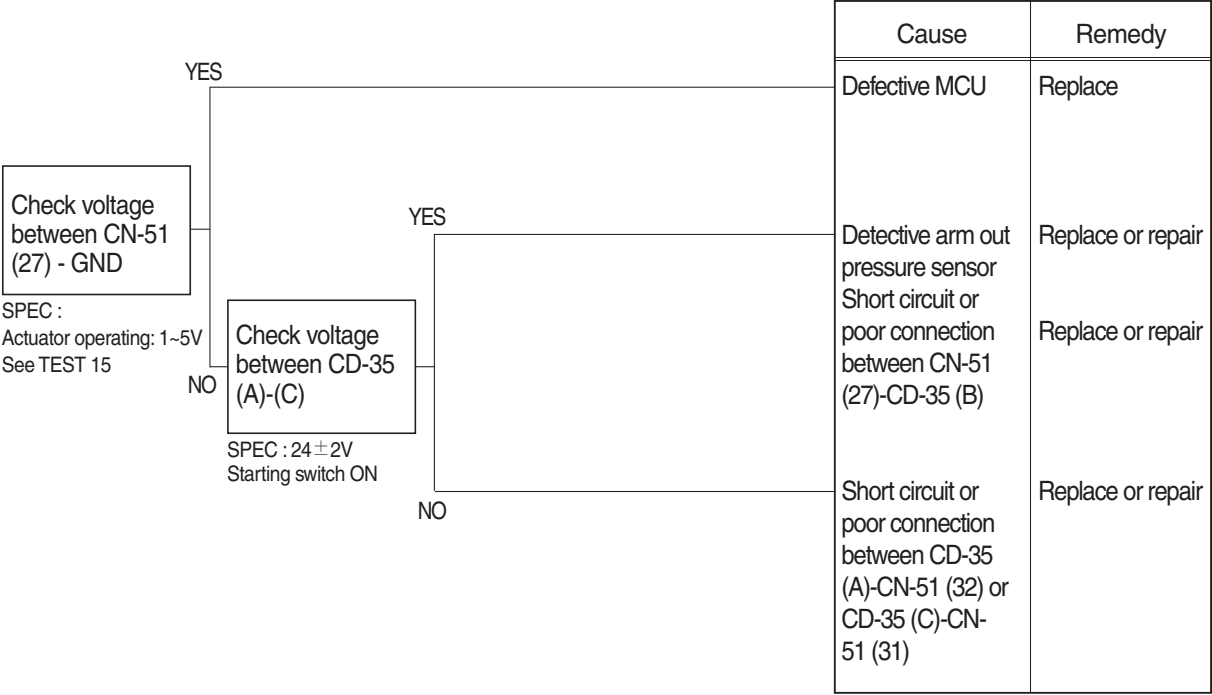

Wiring diagram

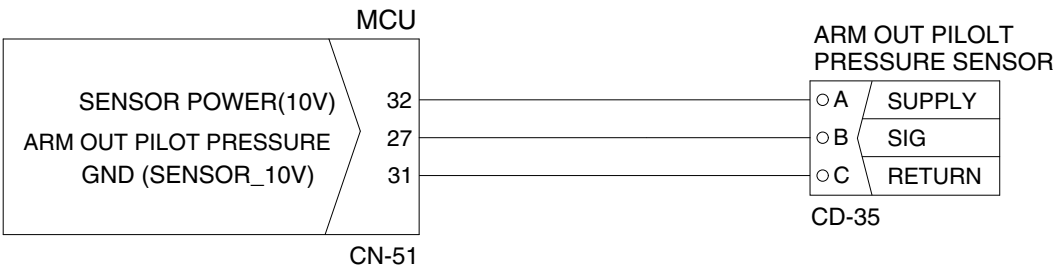


2) TEST PROCEDURE

(1) **Test 15** : Check voltage at CN-51 (27) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (27) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

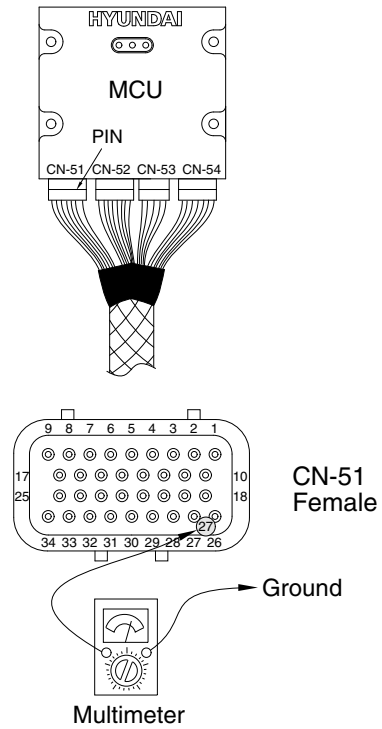


220A6MS118

11. MALFUNCTION OF BOOM UP PRESSURE SENSOR


· Fault code : HCESPN 127, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

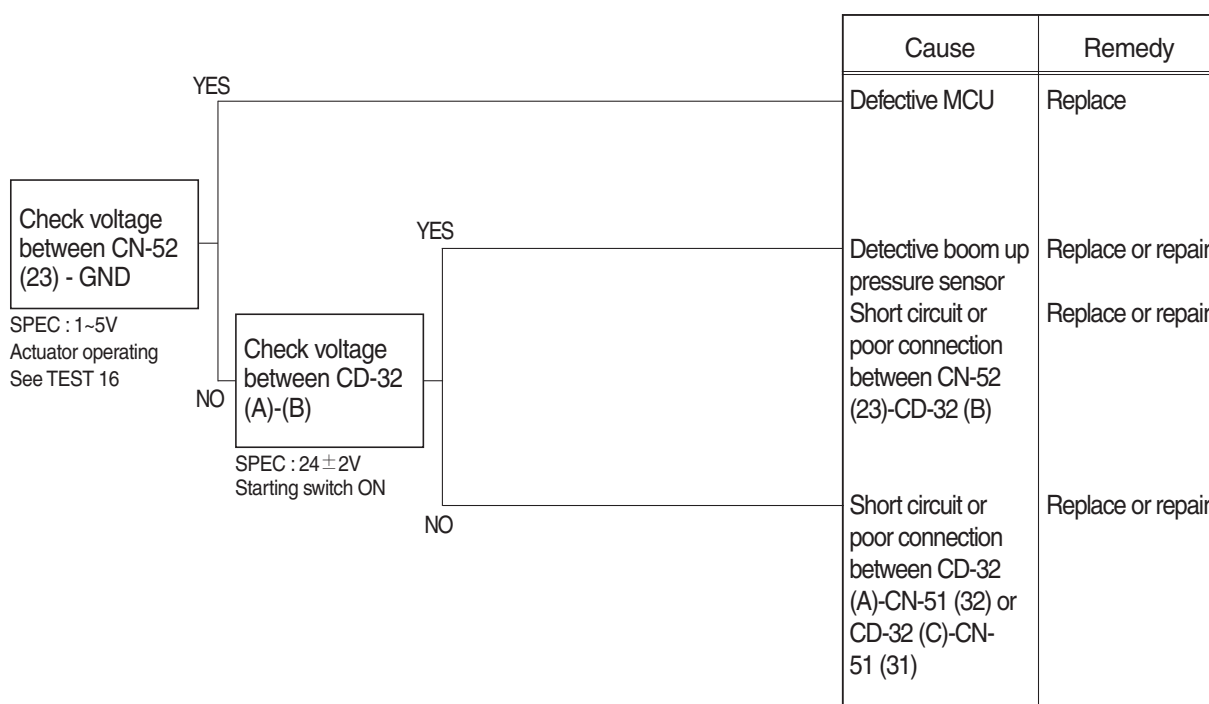

Wiring diagram

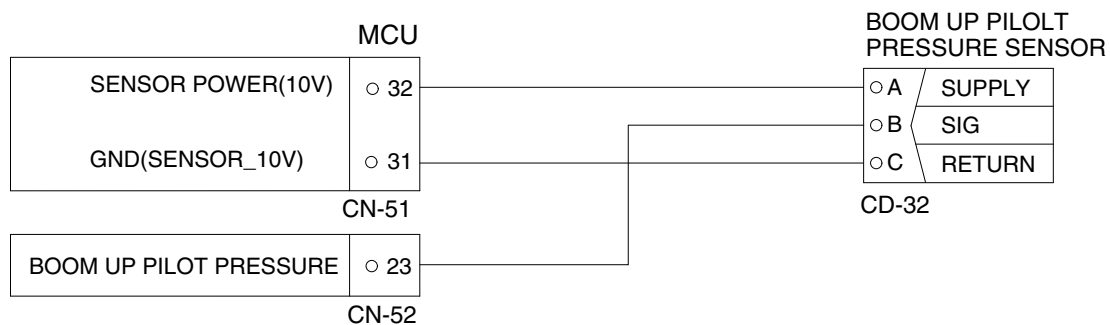


2) TEST PROCEDURE

(1) **Test 16** : Check voltage at CN-52 (23) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (23) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

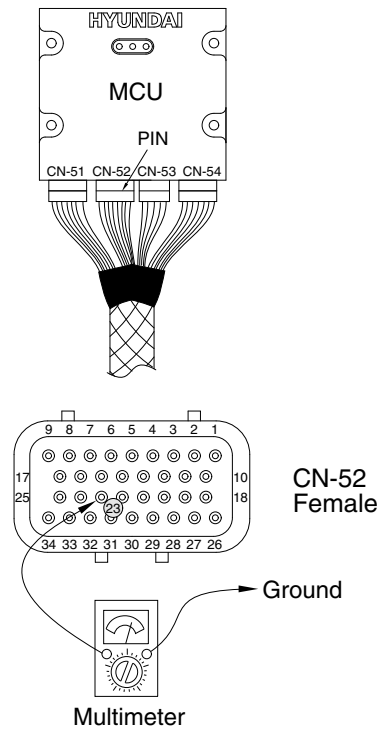


220A6MS120


12. MALFUNCTION OF BOOM DOWN PRESSURE SENSOR

- Fault code : HCESPN 128, FMI 0~4
- ※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

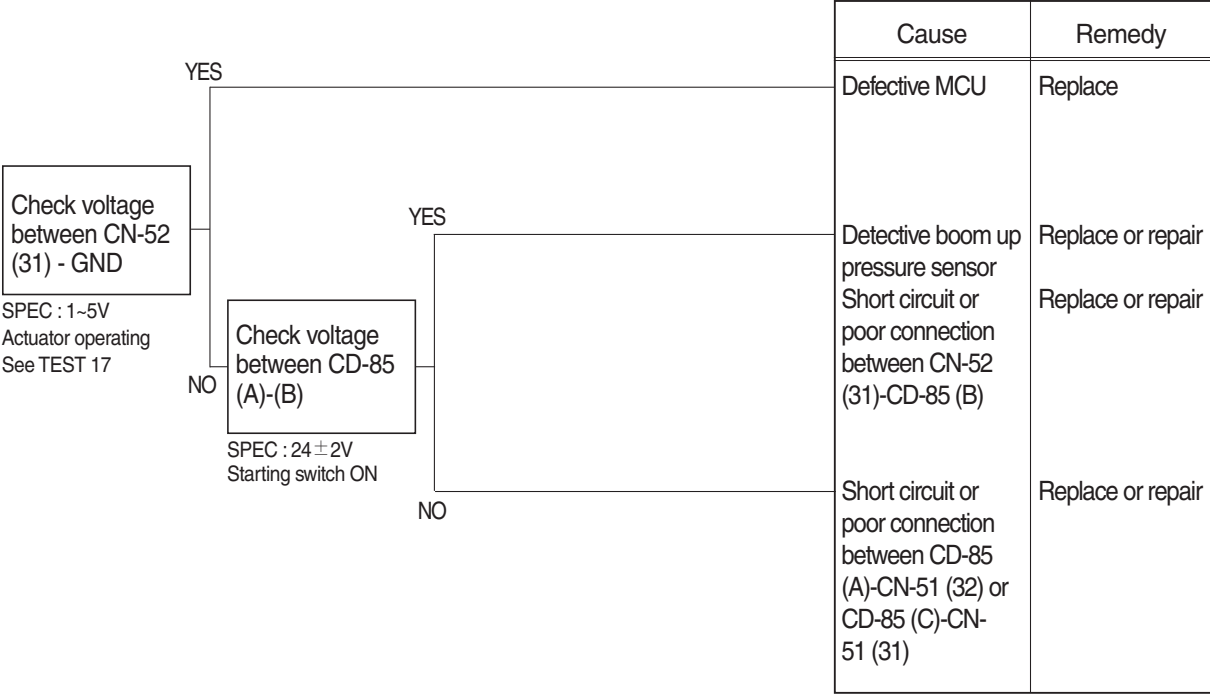

Wiring diagram

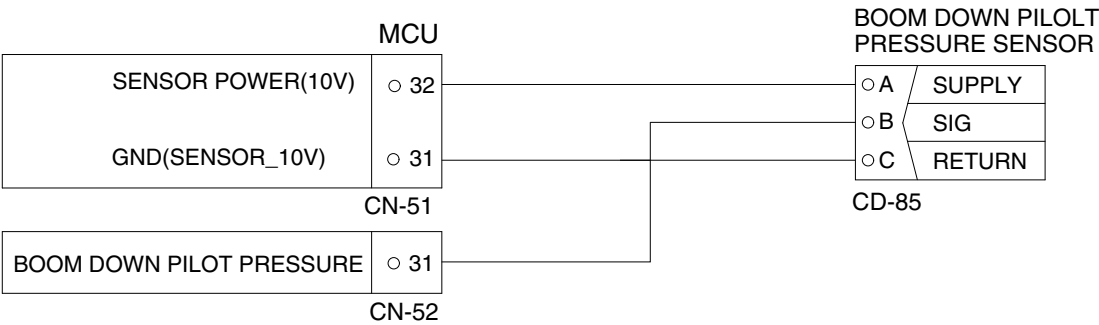


2) TEST PROCEDURE

(1) **Test 17** : Check voltage at CN-52 (31) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (31) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

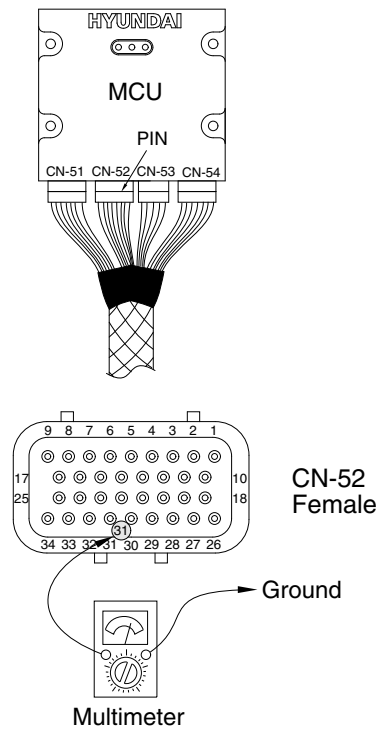


220A6MS122

13. MALFUNCTION OF POWER MAX


· Fault code : HCESPN 166, FMI 4 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

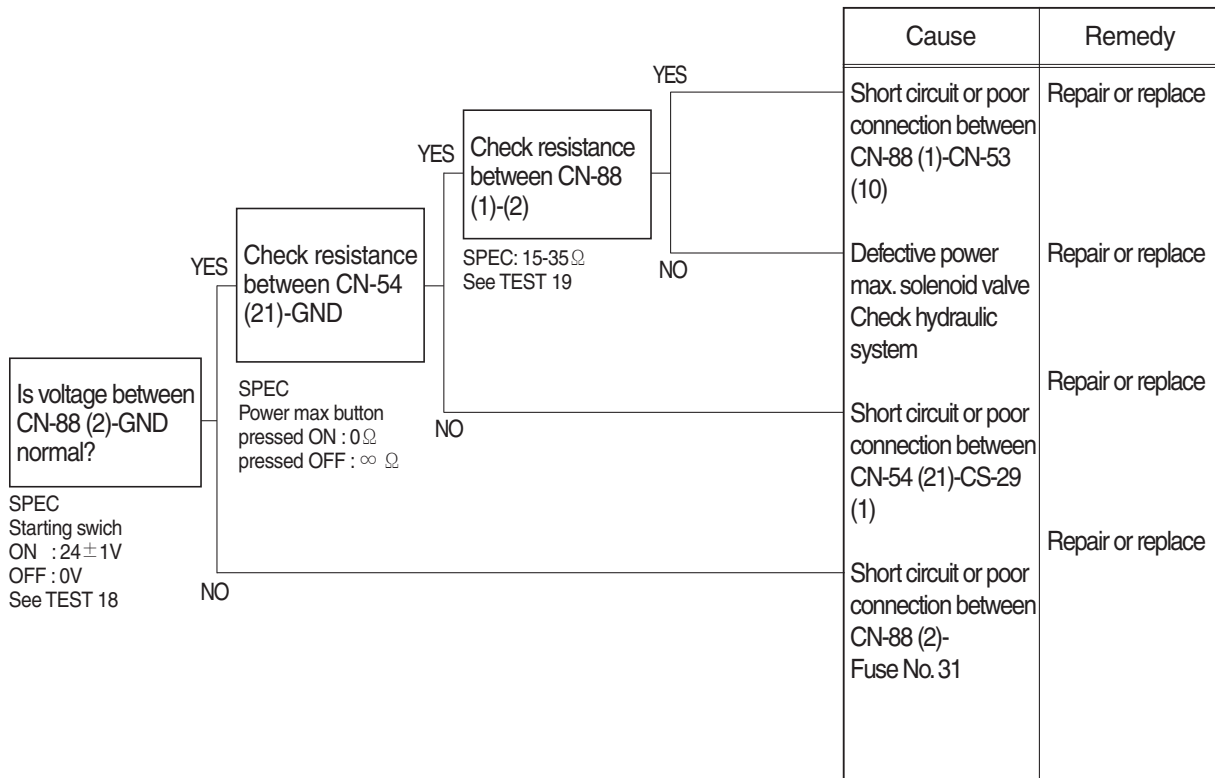

Wiring diagram

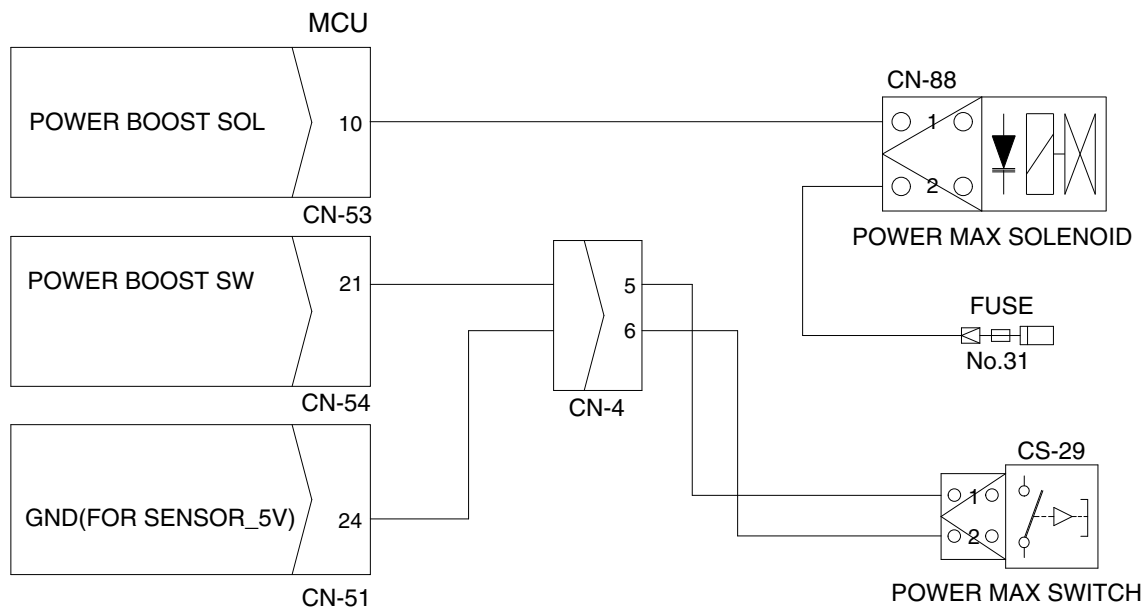


160A6MS22

2) TEST PROCEDURE

(1) **Test 18:** Check voltage between connector CN-88 (2) - GND.

- ① Disconnect connector CN-88 from power max solenoid valve.
- ② Start switch ON.
- ③ Check voltage as figure.

SPEC : Starting switch ON : $24 \pm 1V$
Starting switch OFF : $0V$

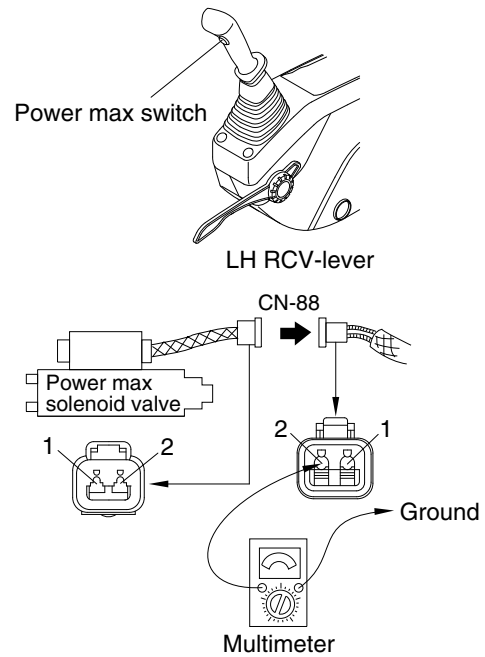


140L6MS123

(2) **Test 19:** Check resistance of the solenoid valve between CN-88 (1)-(2).

- ① Starting switch OFF.
- ② Disconnect connector CN-88 from power max solenoid valve.
- ③ Check resistance as figure.

SPEC : $15 \sim 35 \Omega$

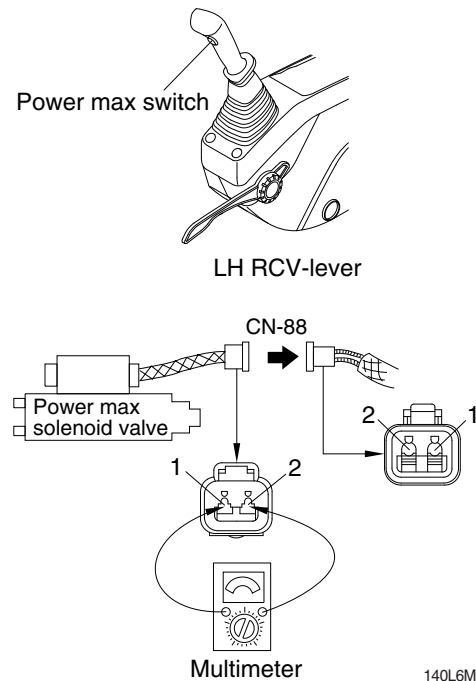


140L6MS124

14. MALFUNCTION OF BOOM PRIORITY EPPR VALVE


- Fault code : HCESPN 141, FMI 5 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

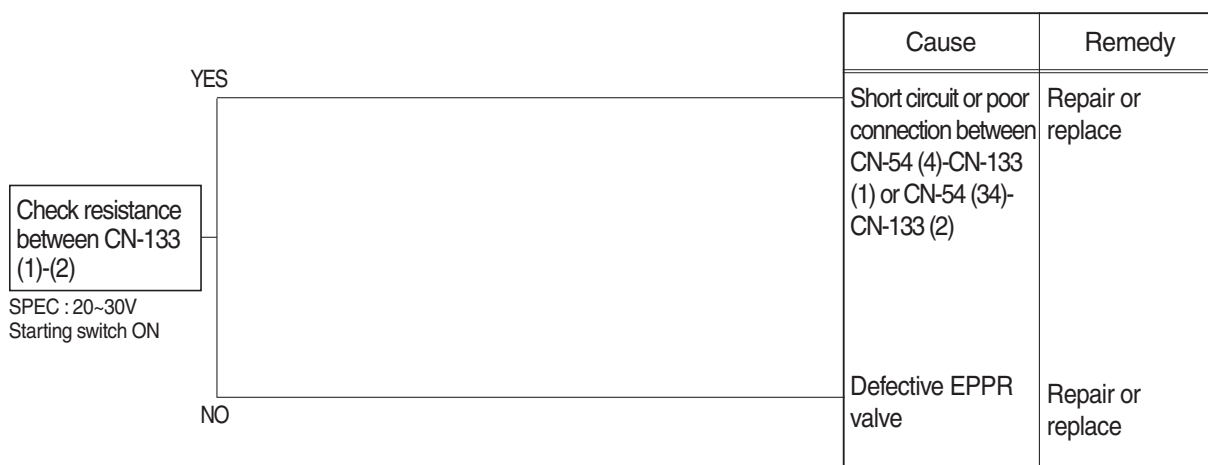

Wiring diagram

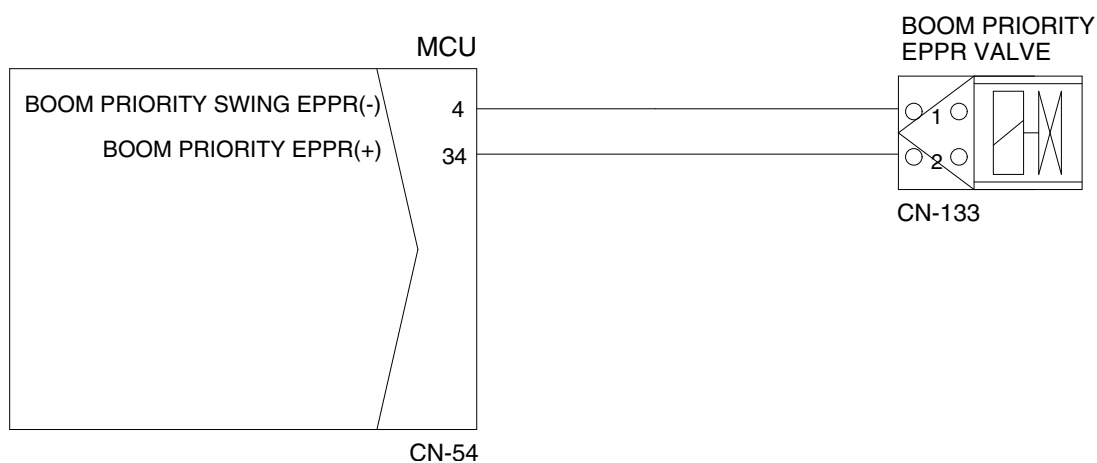


160A6MS23

15. MALFUNCTION OF ARM REGENERATION SOLENOID


· Fault code : HCESPN 170, FMI 4 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

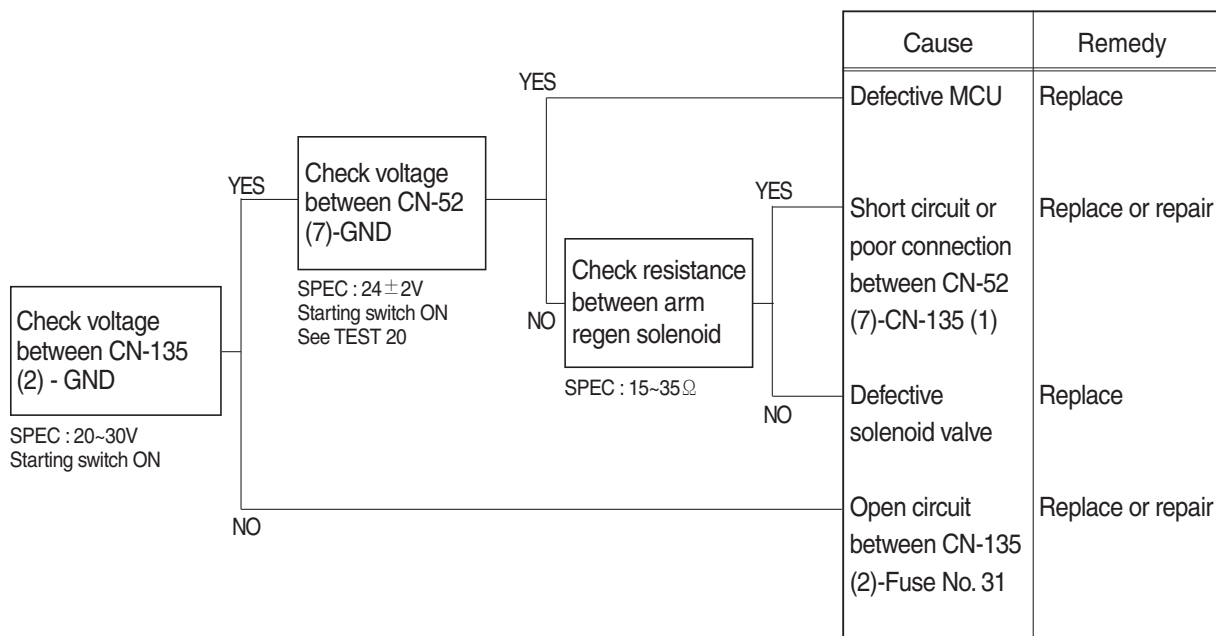

Wiring diagram

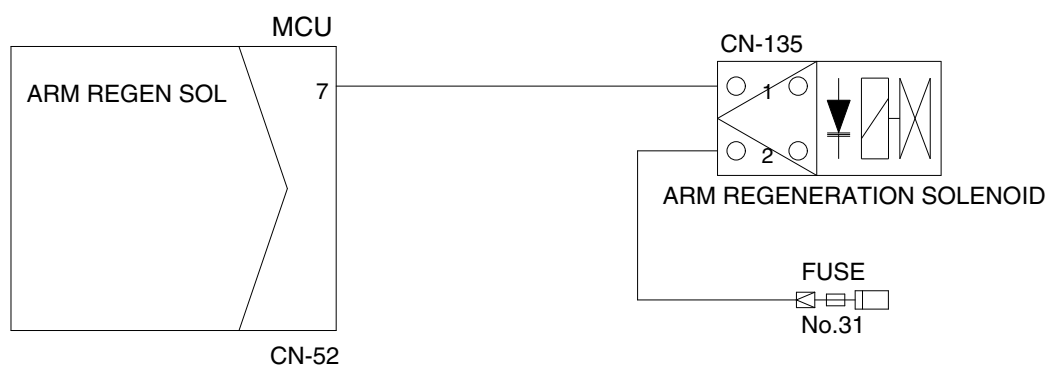


160A6MS27

2) TEST PROCEDURE

(1) **Test 20** : Check voltage at CN-52 (7) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (7) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.


SPEC : Key ON : 24 ± 2 V

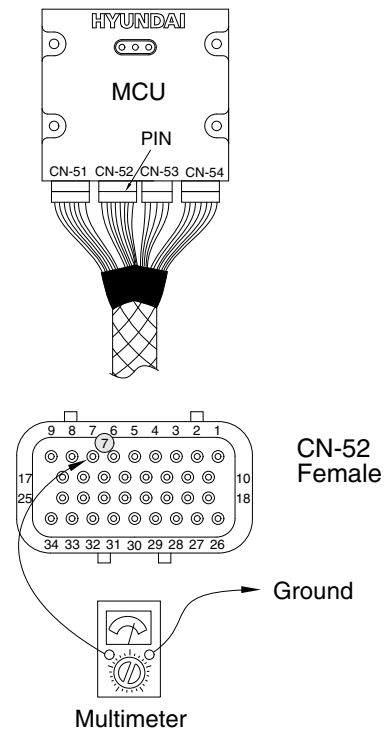

140A6MS128

GROUP 5 AIR CONDITIONER & HEATER SYSTEM

1. AIR CONDITIONER DOES NOT OPERATE

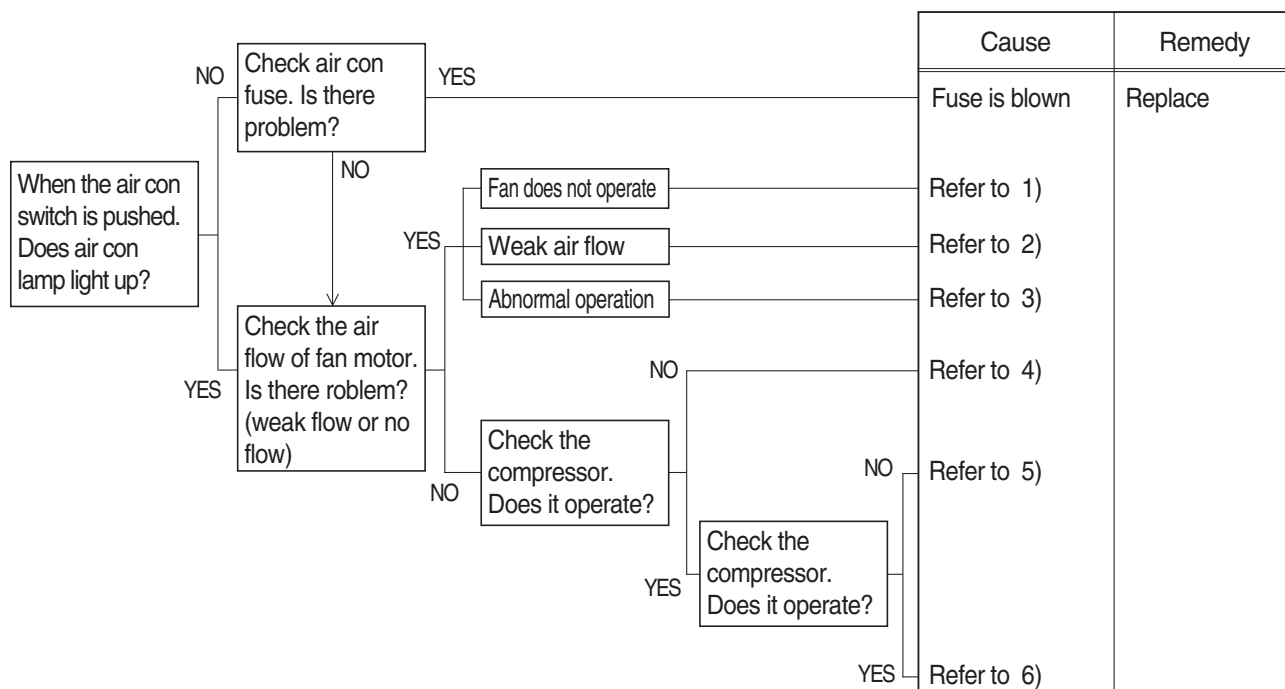

1) FAN DOES NOT OPERATE

Cause	Check	Remedy
Fuse is blown or abnormal relay operation	* Fuse * Does relay normally operate?	Replace
Harness short or poor contact	Check any harness short or abnormal contact of connector	Repair shortage
Fan motor failure	Supply 24V to 2 lead wire from motor and check the operation	Replace
Resistor is broken	Check current flow of resistor with tester	Replace
Fan switch failure	Push fan switch by turn and check the operation	Replace

2) WEAK AIR FLOW FROM FAN MOTOR

Cause	Check	Remedy
Clogged evaporator or obstacles around air inlet	Check if evaporator is contaminated	Clean
Leakage of air flow	Check HVAC case assembly	Adjust
Duct sensor failure	Check if evaporator is frozen	Replace

3) ABNORMAL OPERATION OF FAN MOTOR

Cause	Check	Remedy
Abnormal operation of each step of control	4 step only operate	Replace resistor
	1 or 2 step does not operate	Replace control
	3 or 4 step does not operate	Replace relay

4) COMPRESSOR DOES NOT ROTATE OR HARDLY ROTATE

Cause	Check	Remedy
Loose belt	Belt shaking is severe	Adjust tension
Failure of compressor itself	Belt slip	Repair or Replace
Low voltage of battery	Slip when rotate	Charge battery
Fieldcoil short	Slip when rotate	Replace magnetic clutch
Oily clutch face	Contamination around clutch	Replace magnetic clutch, clean
Fieldcoil is broken	Magnetic clutch does not operate or " ∞ " resistance	Replace compressor
Leakage of refrigerant or oil inside	Check if wet with oil	Replace compressor Charge refrigerant

5) COMPRESSOR OPERATE NORMALLY AND AIR FLOW IS NORMAL

Cause	Check	Remedy
Shortage of refrigerant	When air con operate during 5~10 min small temperature difference between high and low pressure pipes.	Repair leakage joint Charge refrigerant
Overcharge of refrigerant	*Magnetic clutch on/off rapidly *High pressure over specification *Lukewarm air from nozzle	Recharge refrigerant following specification
Lower pressure than normal condition at low side	Shortage of refrigerant	Make up refrigerant
	Clogged receive dryer	Replace receive dryer
	Clogged expansion valve	Replace expansion valve
	Clogged or crushed pipe	Replace pipe or clean
	Failure of duct sensor	Replace duct sensor

6) COMPRESSOR OPERATE NORMALLY AND AIR FLOW IS NORMAL

Cause	Check	Remedy
Lower pressure than normal condition at low side	Failure of duct sensor Magnetic clutch off before air temperature sufficiently down	Replace duct sensor or adjust location
	Defective compressor gasket When compressor off, high and low pressure balance immediatly	Repair compressor or Replace
Higher pressure than normal condition at high side	Failure of condensing Contamination on condenser or insufficient air flow from fan	Clean the condenser Repair fan
	Overcharge of refrigerant	Adjust refrigerant
	Entrained air	Vacuum and recharge
Lower pressure than normal condition at high side	Shortage of refrigerant	Make up refrigerant

SECTION 7 MAINTENANCE STANDARD

Group 1	Operational Performance Test	7-1
Group 2	Major Components	7-21
Group 3	Track and Work Equipment	7-30

SECTION 7 MAINTENANCE STANDARD

GROUP 1 OPERATIONAL PERFORMANCE TEST

1. PURPOSE

Performance tests are used to check:

1) OPERATIONAL PERFORMANCE OF A NEW MACHINE

Whenever a new machine is delivered in parts and reassembled at a customer's site, it must be tested to confirm that the operational performance of the machine meets HD Hyundai Construction Equipment spec.


2) OPERATIONAL PERFORMANCE OF A WORKING MACHINE

With the passage of time, the machine's operational performance deteriorates, so that the machine needs to be serviced periodically to restore it to its original performance level.

Before servicing the machine, conduct performance tests to check the extent of deterioration, and to decide what kind of service needs to be done (by referring to the "Service Limits" in this manual).

3) OPERATIONAL PERFORMANCE OF A REPAIRED MACHINE

After the machine is repaired or serviced, it must be tested to confirm that its operational performance was restored by the repair and/or service work done.

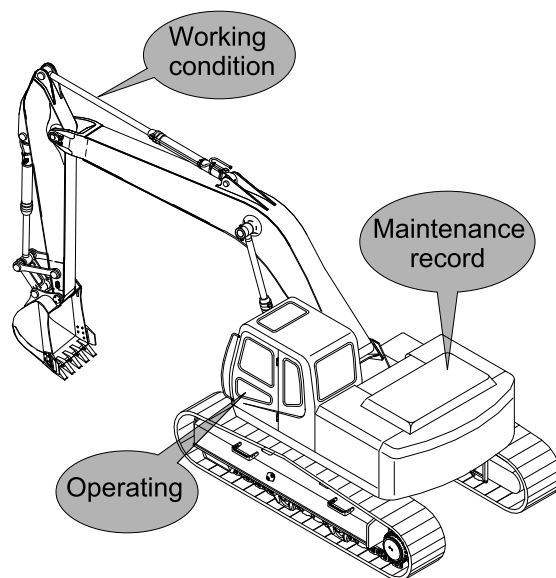


140LC7MS01

2. TERMINOLOGY

1) STANDARD


Specifications applied to the brand-new machine, components and parts.

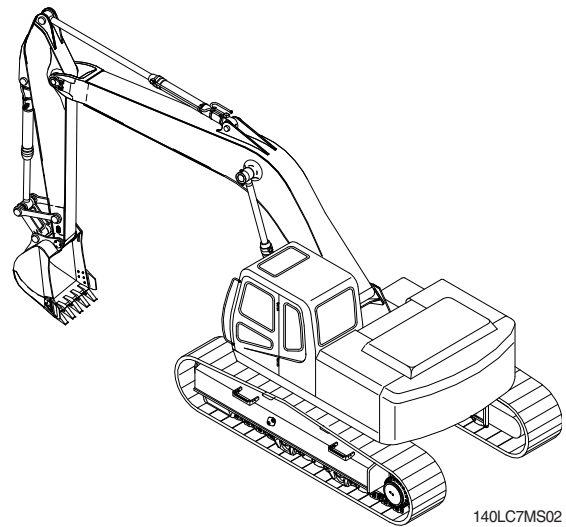

140LC7MS02

2) SERVICE LIMIT

The lowest acceptable performance level. When the performance level of the machine falls below this level, the machine must be removed from work and repaired. Necessary parts and components must be replaced.

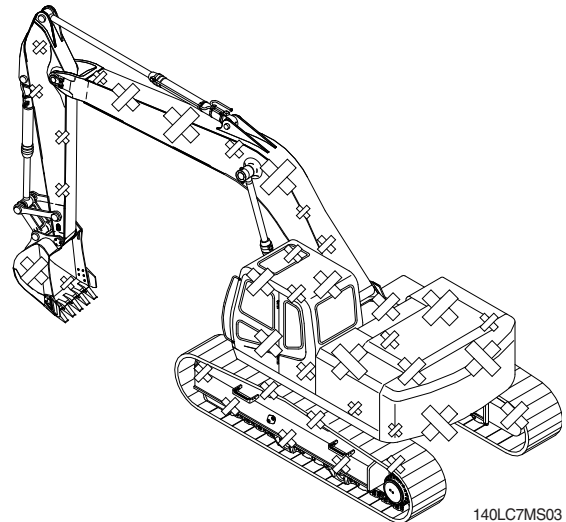

140LC7MS03

3. OPERATION FOR PERFORMANCE TESTS

- 1) Observe the following rules in order to carry out performance tests accurately and safely.

(1) The machine

Repair any defects and damage found, such as oil or water leaks, loose bolts, cracks and so on, before starting to test.

(2) Test area


- ① Select a hard, flat surface.
- ② Secure enough space to allow the machine to run straight more than 20m, and to make a full swing with the front attachment extended.
- ③ If required, rope off the test area and provide signboards to keep unauthorized personnel away.

(3) Precautions

- ① Before starting to test, agree upon the signals to be employed for communication among coworkers. Once the test is started, be sure to communicate with each other using these signals, and to follow them without fail.
- ② Operate the machine carefully and always give first priority to safety.
- ③ While testing, always take care to avoid accidents due to landslides or contact with high voltage power lines. Always confirm that there is sufficient space for full swings.
- ④ Avoid polluting the machine and the ground with leaking oil. Use oil pans to catch escaping oil. Pay special attention to this when removing hydraulic pipings.

(4) Make precise measurements

- ① Accurately calibrate test instruments in advance to obtain correct data.
- ② Carry out tests under the exact test conditions prescribed for each test item.
- ③ Repeat the same test and confirm that the test data obtained can be procured repeatedly. Use mean values of measurements if necessary.

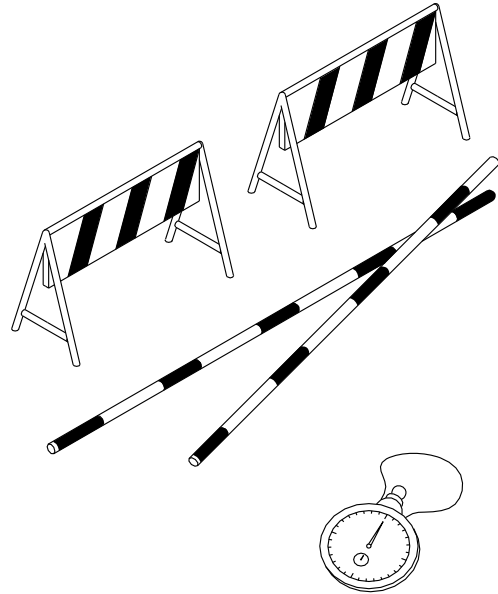

(290-7TIER) 7-3

2) ENGINE SPEED


- (1) Measure the engine speed at each power mode
- ※ The engine speed at each power mode must meet standard RPM; if not, all other operational performance data will be unreliable. It is essential to perform this test first.

(2) Preparation

- ① Warm up the machine, until the engine coolant temperature reaches 50°C or more, and the hydraulic oil is 50 ± 5°C.
- ② Set the multimodal dial at 10 (Max) position.
- ③ Measure the engine RPM.

(3) Measurement

- ① Start the engine. The engine will run at start idle speed. Measure engine speed with a engine rpm display.
- ② Measure and record the engine speed at each mode (P, S, E).
- ③ Select the P-mode.
- ④ Lightly operate the bucket control lever a few times, then return the control lever to neutral; The engine will automatically enter the auto-idle speed after 4 seconds.
- ⑤ Measure and record the auto deceleration speed.

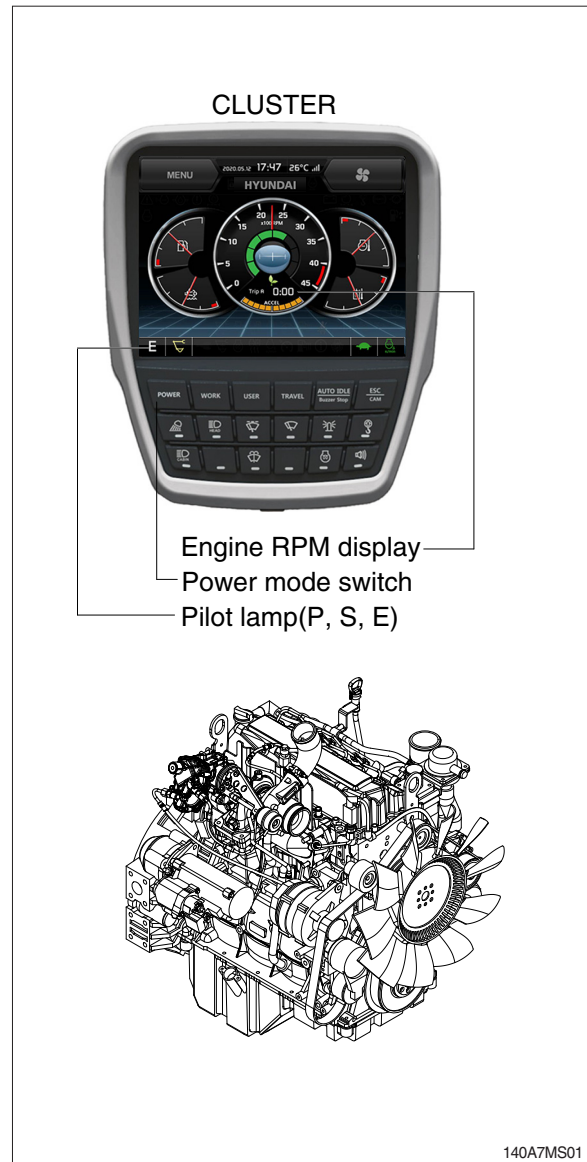

(4) Evaluation

The measured speeds should meet the following specifications.

Unit : rpm

Model	Engine speed	Standard	Remarks
HX140A L	Start idle	1000 ± 50	Safety knob : Lock position
		1100 ± 50	Safety knob : Unlock position
	P mode	1850 ± 20	
	S mode	1750 ± 20	
	E mode	1650 ± 20	
	Auto decel	1200 ± 50	
	One touch decel	1100 ± 50	

※ Condition : P-mode, Accel dial 10 (Max) position


※ Auto decel, one touch decel and low idle speed may increase to 1350 rpm while automatic exhaust system cleaning is being performed.

3) TRAVEL SPEED

- (1) Measure the time required for the excavator to travel a 20 m test track.

(2) Preparation


- ① Adjust the tension of both tracks to be equal.
- ② Prepare a flat and solid test track 20m in length, with extra length of 3 to 5 m on both ends for machine acceleration and deceleration.
- ③ Hold the bucket 0.3 to 0.5 m above the ground with the arm and bucket rolled in.
- ④ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

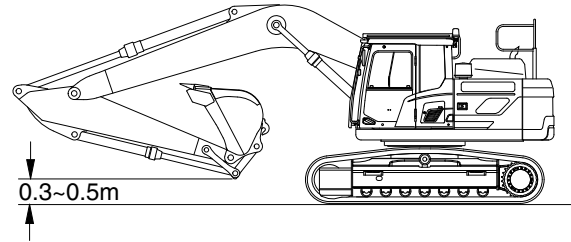

140A7MS02

(3) Measurement

- ① Measure both the low and high speeds of the machine.
- ② Before starting either the low or high speed tests, adjust the travel mode switch to the speed to be tested, then select the following switch positions.
 - Power mode switch : P mode
- ③ Start traveling the machine in the acceleration zone with the travel levers at full stroke.
- ④ Measure the time required to travel 20 m.
- ⑤ After measuring the forward travel speed, turn the upperstructure 180 ° and measure the reverse travel speed.
- ⑥ Repeat steps ④ and ⑤ three times in each direction and calculate the average values.

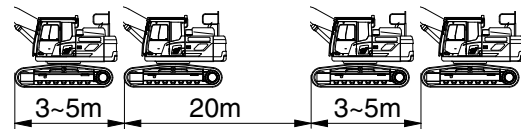

140A7MS03

(4) Evaluation

The average measured time should meet the following specifications.

Unit : Seconds / 20 m


Model	Travel speed	Standard	Maximum allowable	Remarks
HX140A L	1 Speed	22.7 ± 2.0	27.3	
	2 Speed	13.1 ± 1.0	16.1	

4) TRACK REVOLUTION SPEED

- (1) Measure the track revolution cycle time with the track raised off ground.

(2) Preparation

- ① Adjust the tension of both side tracks to be equal.
- ② On the track to be measured, mark one shoe with chalk.
- ③ Swing the upperstructure 90 ° and lower the bucket to raise the track off ground. Keep the boom-arm angle between 90 to 110 ° as shown. Place blocks under machine frame.
- ④ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

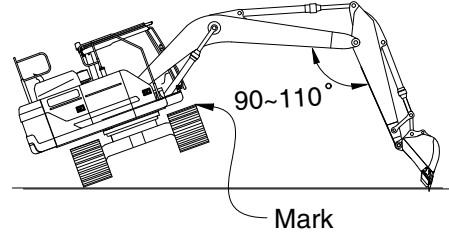

140A7MS04

(3) Measurement

- ① Select the following switch positions.
 - Travel mode switch : 1 or 2 speed
 - Power mode switch : P mode
 - Auto idle switch : OFF
- ② Operate the travel control lever of the raised track in full forward and reverse.
- ③ Rotate 1 turn, then measure time taken for next 3 revolutions.
- ④ Raise the other side of machine and repeat the procedure.
- ⑤ Repeat steps ③ and ④ three times and calculate the average values.

(4) Evaluation

The revolution cycle time of each track should meet the following specifications.

Unit : Seconds / 3 revolutions


Model	Travel speed	Standard	Maximum allowable
HX140A L	1 Speed	25.9 ± 2.0	31.4
	2 Speed	14.7 ± 2.0	18.4

5) TRAVEL DEVIATION

- (1) Measure the deviation by the tracks from a 20m straight line.

(2) Preparation


- ① Adjust the tension of both tracks to be equal.
- ② Provide a flat, solid test yard 20 m in length, with extra length of 3 to 5 m on both ends for machine acceleration and deceleration.
- ③ Hold the bucket 0.3 to 0.5 m above the ground with the arm and bucket rolled in.
- ④ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

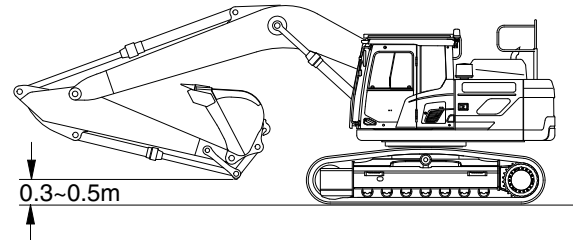

140A7MS02

(3) Measurement

- ① Measure the amount of mistracking at high and low travel speeds.
- ② Before beginning each test, select the following switch positions.
 - Power mode switch : P mode
- ③ Start traveling the machine in the acceleration zone with the travel levers at full stroke.
- ④ Measure the distance between a straight 20 m line and the track made by the machine. (Dimension a)
- ⑤ After measuring the tracking in forward travel, turn the upperstructure 180 ° and measure that in reverse travel.
- ⑥ Repeat steps ④ and ⑤ three times and calculate the average values.

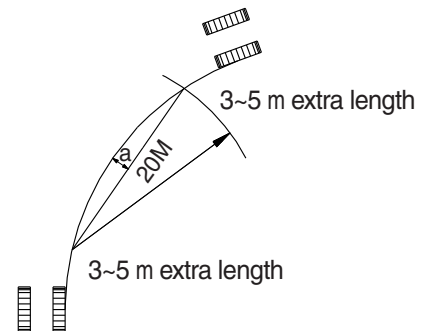

(210-7) 7-7(2)

(4) Evaluation

Mistrack should be within the following specifications.

Unit : mm / 20 m


Model	Standard	Maximum allowable	Remarks
HX140A L	200 below	240	

6) SWING SPEED

- (1) Measure the time required to swing three complete turns.

(2) Preparation

- ① Check the lubrication of the swing gear and swing bearing.
- ② Place the machine on flat, solid ground with ample space for swinging. Do not conduct this test on slopes.
- ③ With the arm rolled out and bucket rolled in, hold the bucket so that the height of the bucket pin is the same as the boom foot pin. The bucket must be empty.
- ④ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

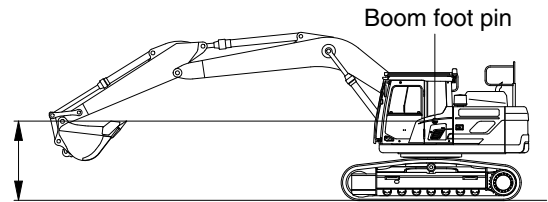

140A7MS05

(3) Measurement

- ① Select the following switch positions.
 - Power mode switch : P mode
- ② Operate swing control lever fully.
- ③ Swing 1 turn and measure time taken to swing next 3 revolutions.
- ④ Repeat steps ② and ③ three times and calculate the average values.

(4) Evaluation

The time required for 3 swings should meet the following specifications.

Unit : Seconds / 3 revolutions


Model	Power mode switch	Standard	Maximum allowable
HX140A L	P mode	15.8 ± 1.5	19.5

7) SWING FUNCTION DRIFT CHECK

- (1) Measure the swing drift on the bearing outer circumference when stopping after a 360 ° full speed swing.

(2) Preparation


- ① Check the lubrication of the swing gear and swing bearing.
- ② Place the machine on flat, solid ground with ample space for swinging. Do not conduct this test on slopes.
- ③ With the arm rolled out and bucket rolled in, hold the bucket so that the height of the bucket pin is the same as the boom foot pin. The bucket must be empty.
- ④ Make two chalk marks: one on the swing bearing and one directly below it on the track frame.
- ⑤ Swing the upperstructure 360°.
- ⑥ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

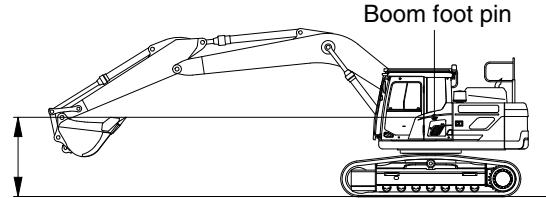

140A7MS05

(3) Measurement

- ① Conduct this test in the M mode.
- ② Select the following switch positions.
 - Power mode switch : P mode
- ③ Operate the swing control lever fully and return it to the neutral position when the mark on the upperstructure aligns with that on track frame after swinging 360 °
- ④ Measure the distance between the two marks.
- ⑤ Align the marks again, swing 360 °, then test the opposite direction.
- ⑥ Repeat steps ④ and ⑤ three times each and calculate the average values.

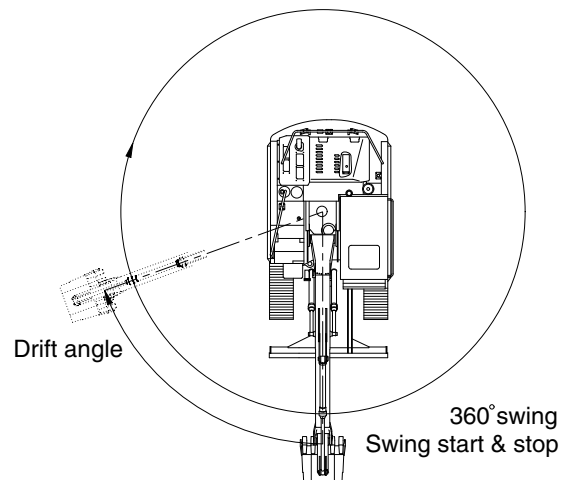

140A7MS09

(4) Evaluation

The measured drift angle should be within the following specifications.

Unit : Degree


Model	Power mode switch	Standard	Maximum allowable	Remarks
HX140A L	P mode	90 below	157.5	

8) SWING BEARING PLAY

- (1) Measure the swing bearing play using a dial gauge to check the wear of bearing races and balls.

(2) Preparation

- ① Check swing bearing mounting cap screws for loosening.
- ② Check the lubrication of the swing bearing. Confirm that bearing rotation is smooth and without noise.
- ③ Install a dial gauge on the track frame as shown, using a magnetic base.
- ④ Position the upperstructure so that the boom aligns with the tracks facing towards the front idlers.
- ⑤ Position the dial gauge so that its needle point comes into contact with the bottom face of the bearing outer race.
- ⑥ Bucket should be empty.

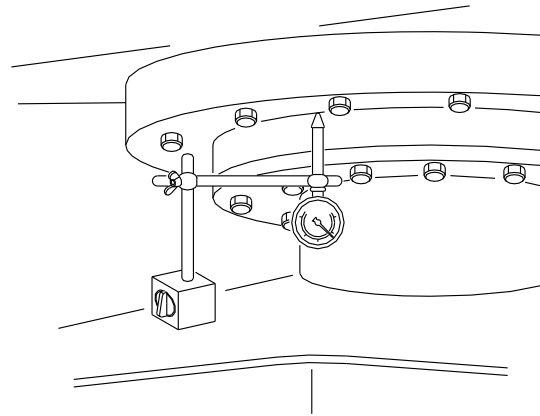


(210-7) 7-10(1)

(3) Measurement


- ① With the arm rolled out and bucket rolled in, hold the bottom face of the bucket to the same height of the boom foot pin. Record the dial gauge reading (h1).
- ② Lower the bucket to the ground and use it to raise the front idler 50cm. Record the dial gauge reading (h2).
- ③ Calculate bearing play (H) from this data (h1 and h2) as follows.

$$H = h2 - h1$$

Measurement : (h1)

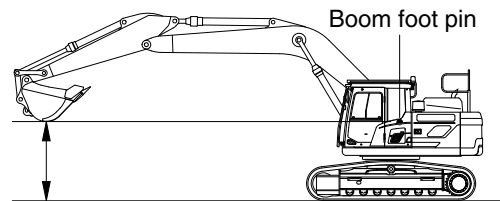

Measurement : (h2)

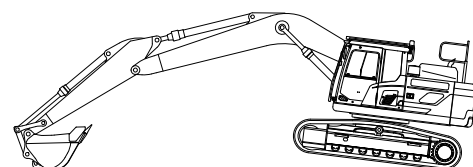

140A7MS06

(4) Evaluation

The measured drift should be within the following specifications.

Unit : mm

Model	Standard	Maximum allowable	Remarks
HX140A L	0.5 ~ 1.5	3.0	

9) HYDRAULIC CYLINDER CYCLE TIME

- (1) Measure the cycle time of the boom, standard arm, and standard bucket cylinders.


(2) Preparation

- ① To measure the cycle time of the boom cylinders:
With the arm rolled out and the empty bucket rolled out, lower the bucket to the ground, as shown.
- ② To measure the cycle time of the arm cylinder:
With the empty bucket rolled in, position the arm so that it is vertical to the ground. Lower the boom until the bucket is 0.5 m above the ground.
- ③ To measure the cycle time of the bucket cylinder:
The empty bucket should be positioned at midstroke between roll-in and roll-out, so that the sideplate edges are vertical to the ground.
- ④ Keep the hydraulic oil temperature at $50 \pm 5^\circ\text{C}$.


(3) Measurement

- ① Select the following switch positions.
 - Power mode switch : P mode
- ② To measure cylinder cycle times.
 - Boom cylinders.
Measure the time it takes to raise the boom, and the time it takes to lower the boom. To do so, position the boom at one stroke end then move the control lever to the other stroke end as quickly as possible.
 - Arm cylinder.
Measure the time it takes to roll in the arm, and the time it takes to roll out the arm. To do so, position the bucket at one stroke end, then move the control lever to the other stroke end as quickly as possible.


Boom cylinder

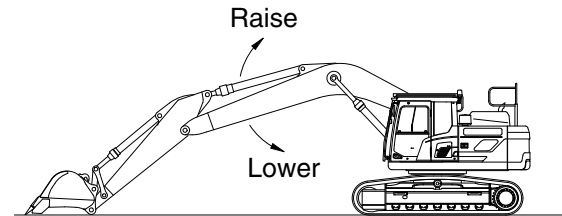

Arm cylinder

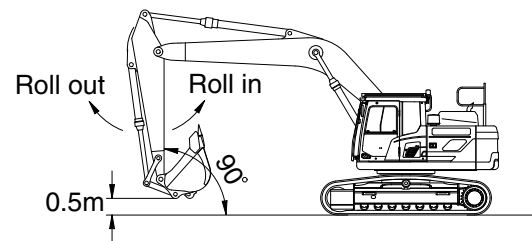

Bucket cylinder

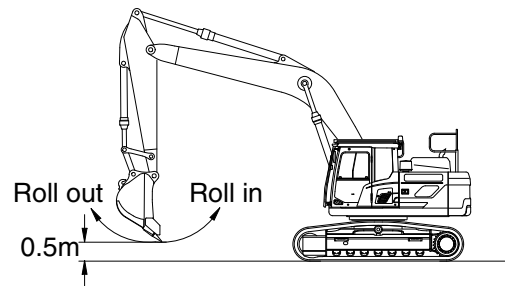

140A7MS07

- Bucket cylinders

Measure the time it takes to roll in the bucket, and the time it takes to roll out the bucket. To do so, position the bucket at one stroke end, then move the control lever to the other stroke end as quickly as possible.

- Repeat each measurement 3 times and calculate the average values.

(4) Evaluation

The average measured time should meet the following specifications.

Unit : Seconds

Model	Function		Standard	Maximum allowable	Remarks
HX140A L	Boom raise		3.3 ± 0.4	4.4	
	Boom lower		2.5 ± 0.4	3.6	
	Arm in	Regen ON	2.2 ± 0.4	3.6	
		Regen OFF	2.6 ± 0.4	4.0	
	Arm out		2.4 ± 0.4	3.6	
	Bucket in		3.5 ± 0.4	4.6	
	Bucket out		2.3 ± 0.4	2.9	


10) DIG FUNCTION DRIFT CHECK

- (1) Measure dig function drift, which can be caused by oil leakage in the control valve and boom, standard arm, and standard bucket cylinders, with the loaded bucket.
When testing the dig function drift just after cylinder replacement, slowly operate each cylinder to its stroke end to purge air.

(2) Preparation

- ① Load bucket fully. Instead of loading the bucket, weight(W) of the following specification can be used.

$$W = M^3 \times 1.5$$
 Where :
 M^3 = Bucket heaped capacity (m³)
 1.5 = Soil specific gravity
- ② Position the arm cylinder with the rod 20 to 30mm extended from the fully retracted position.
- ③ Position the bucket cylinder with the rod 20 to 30mm retracted from the fully extended position.
- ④ With the arm rolled out and bucket rolled in, hold the bucket so that the height of the bucket pin is the same as the boom foot pin.
- ⑤ Keep the hydraulic oil temperature at $50 \pm 5^\circ\text{C}$.

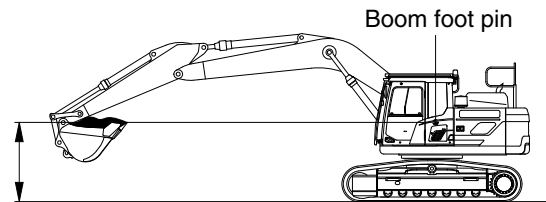

140A7MS08

(3) Measurement

- ① Stop the engine.
- ② Five minutes after the engine has been stopped, measure the changes in the positions of the boom, arm and bucket cylinders.
- ③ Repeat step ② three times and calculate the average values.

- (4) The measured drift should be within the following specifications.

Unit : mm / 5min

Model	Drift to be measured	Standard	Maximum allowable	Remarks
HX140A L	Boom cylinder	10 below	20	
	Arm cylinder	10 below	20	
	Bucket cylinder	40 below	50	

11) CONTROL LEVER OPERATING FORCE

- (1) Use a spring scale to measure the maximum resistance of each control lever at the middle of the grip.

(2) Preparation

- ① Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

(3) Measurement

- ① Start the engine.
- ② Select the following switch positions.
- Power mode switch: P mode
- ③ Operate each boom, arm, bucket and swing lever at full stroke and measure the maximum operating force for each.
- ④ Lower the bucket to the ground to raise one track off the ground. Operate the travel lever at full stroke and measure the maximum operating force required. When finished, lower the track and then jack-up the other track.
- ⑤ Repeat steps ③ and ④ three times and calculate the average values.

(4) Evaluation

The measured operating force should be within the following specifications.

Unit : kgf

Model	Kind of lever	Standard	Maximum allowable	Remarks
HX140A L	Boom lever	1.3 or below	1.7	
	Arm lever	1.3 or below	1.7	
	Bucket lever	1.3 or below	1.7	
	Swing lever	1.3 or below	1.7	
	Travel lever	2.1 or below	3.15	

12) CONTROL LEVER STROKE

(1) Measure each lever stroke at the lever top using a ruler.

※ When the lever has play, take a half of this value and add it to the measured stroke.

(2) Preparation

Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

(3) Measurement

- ① Stop the engine.
- ② Measure each lever stroke at the lever top from neutral to the stroke end using a ruler.
- ③ Repeat step ② three times and calculate the average values.

(4) Evaluation

The measured drift should be within the following specifications.

Unit : mm

Model	Kind of lever	Standard	Maximum allowable	Remarks
HX140A L	Boom lever	90 ± 10	115	
	Arm lever	90 ± 10	115	
	Bucket lever	90 ± 10	115	
	Swing lever	90 ± 10	115	
	Travel lever	142 ± 10	178	


13) PILOT PRIMARY PRESSURE

(1) Preparation

- ① Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

(2) Measurement

- ① Select the following switch positions.
 - Power mode switch : P mode
 - Auto decel switch : OFF
- ② Slowly operate the boom control lever of boom up functions at full stroke over relief and measure the primary pilot pressure by the monitoring menu of the cluster.

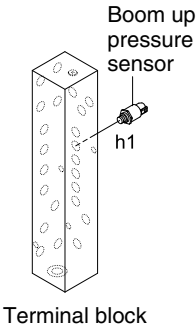

140A7MS12

(3) Evaluation

The average measured pressure should meet the following specifications:


Unit : kgf / cm²

Model	Engine speed	Standard	Allowable limits	Remarks
HX140A L	P mode	40^{+2}_0	-	

14) FOR TRAVEL SPEED SELECTING PRESSURE:

(1) Preparation

- ① Stop the engine.
- ② Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.
- ③ To measure the speed selecting pressure: Install a connector and pressure gauge assembly to turning joint P port as shown.
- ④ Start the engine and check for on leakage from the adapter.
- ⑤ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

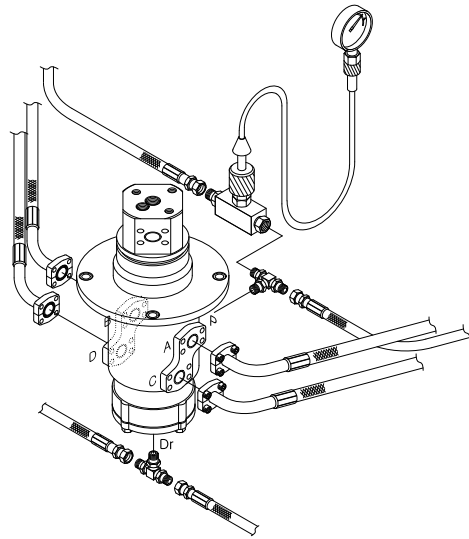

21077MS13

(2) Measurement

- ① Select the following switch positions.
Travel mode switch : 1 speed
 2 speed
· Mode selector : P mode
- ② Measure the travel speed selecting pressure in the Hi or Lo mode.
- ③ Repeat step ② three times and calculate the average values.

(3) Evaluation

The average measured pressure should be within the following specifications.


Unit : kgf / cm²

Model	Travel speed mode	Standard	Maximum allowable	Remarks
HX140A L	1 Speed	0	-	
	2 Speed	40 ± 5	-	

15) SWING PARKING BRAKE RELEASING PILOT PRESSURE

(1) Preparation

- ① Stop the engine.
- ② Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.
- ③ The pressure release L wrench to bleed air.
- ④ Install a connector and pressure gauge assembly to swing motor PG port, as shown.
- ⑤ Start the engine and check for oil leakage from the adapter.
- ⑥ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

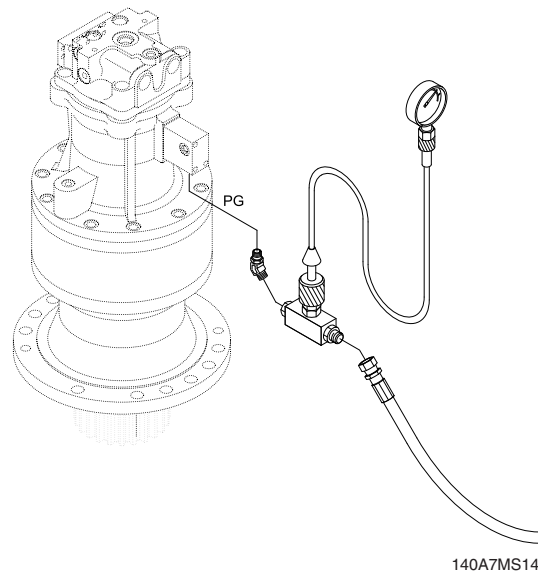

(2) Measurement

- ① Select the following switch positions.
 - Power mode switch : P mode
- ② Operate any of the swing, arm in, boom up or travel function and measure the swing brake control pressure with the brake disengaged. Release the control lever to return to neutral and measure the control pressure when the brake is applied.
- ③ Repeat step ② three times and calculate the average values.

(3) Evaluation

The average measured pressure should be within the following specifications.

Unit : kgf / cm²

Model	Description	Standard	Allowable limits	Remarks
HX140A L	Brake disengaged	40	Over 9	
	Brake applied	0	-	


16) MAIN PUMP DELIVERY PRESSURE

(1) Preparation

- ① Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

(2) Measurement

- ① Select the following switch positions.
 - Power mode switch : P mode
 - ② Measure the main pump delivery pressure in the P mode (high idle).
- ※ Do not operate any of the RCV lever and pedal.

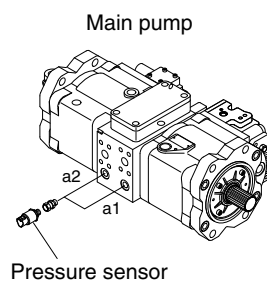

160A7MS15

(3) Evaluation

The average measured pressure should meet the following specifications.

Unit : kgf / cm^2

Model	Engine speed	Standard	Allowable limits	Remarks
HX140A L	High idle	30^{+2}_0	-	


17) SYSTEM PRESSURE REGULATOR RELIEF SETTING

(1) Preparation

- ① Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

(2) Measurement

- ① Select the following switch positions.
 - Power mode switch : P mode
- ② Slowly operate each control lever of boom, arm and bucket functions at full stroke over relief and measure the pressure.
- ③ In the swing function, place bucket against an immovable object and measure the relief pressure.
- ④ In the travel function, lock undercarriage with an immovable object and measure the relief pressure.

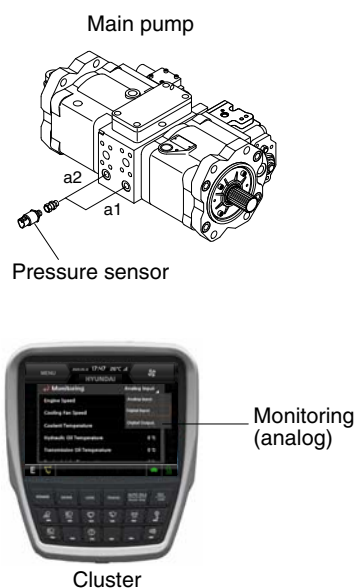

160A7MS15

(3) Evaluation

The average measured pressure should be within the following specifications.


Unit : kgf / cm^2

Model	Function to be tested	Standard	Port relief setting at 20 lpm
HX140A L	Boom, Arm, Bucket	$350 (380) \pm 10$	400 ± 10
	Travel	350 ± 10	-
	Swing	290 ± 10	-





() : Power boost

GROUP 2 MAJOR COMPONENT

1. MAIN PUMP

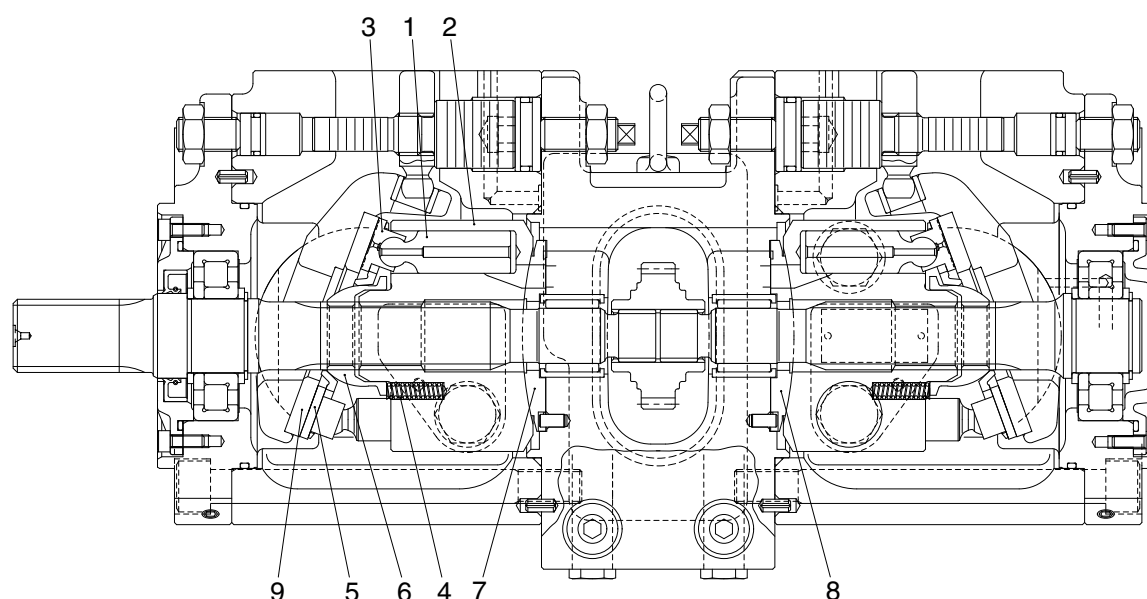

14097MP01

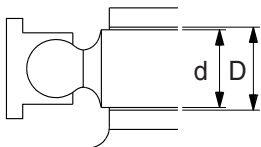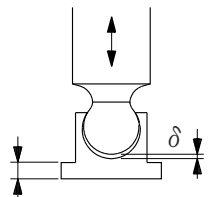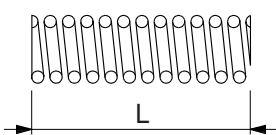
 
Part name & inspection item		Standard dimension	Recommended replacement value	Counter measures
Clearance between piston (1) & cylinder bore (2) (D-d)		0.028	0.056	Replace piston or cylinder.
Play between piston (1) & shoe caulking section (3) (δ)		0-0.1	0.3	Replace assembly of piston & shoe.
Thickness of shoe (t)		3.9	3.7	
Free height of cylinder spring(4) (L)		31.3	30.5	Replace cylinder spring.
Combined height of set plate(5)(H) & spherical bushing(6)(h) (H-h)		19.0	18.3	Replace retainer or set plate.
Surface roughness for valve plate (Sliding face)(7,8), swash plate (shoe plate area) (9), & cylinder (2) (Sliding face)	Surface roughness necessary to be corrected	3z		Lapping
	Standard surface roughness (Corrected value)	0.4z or lower		

2. MAIN CONTROL VALVE

Part name	Inspection item	Criteria & measure
Casing	<ul style="list-style-type: none"> Existence of scratch, rusting or corrosion. 	<ul style="list-style-type: none"> In case of damage in following section, replace part. <ul style="list-style-type: none"> Sliding sections of casing fore and spool, especially land sections applied with holded pressure. Seal pocket section where spool is inserted. Seal section of port where O-ring contacts. Seal section of each relief valve for main, travel, and port. Other damages that may damage normal functions.
Spool	<ul style="list-style-type: none"> Existence of scratch, gnawing, rusting or corrosion. O-ring seal sections at both ends. Insert spool in casing hole, rotate and reciprocate it. 	<ul style="list-style-type: none"> Replacement when its outside sliding section has scratch (especially on seals-contacting section). Replacement when its sliding section has scratch. Correction or replacement when O-ring is damaged or when spool does not move smoothly.
Poppet	<ul style="list-style-type: none"> Damage of poppet or spring Insert poppet into casing and function it. 	<ul style="list-style-type: none"> Correction or replacement when sealing is incomplete. Normal when it can function lightly without being caught.
Around spring	<ul style="list-style-type: none"> Rusting, corrosion, deformation or breaking of spring, spring seat, plug or cover. 	<ul style="list-style-type: none"> Replacement for significant damage.
Around seal for spool	<ul style="list-style-type: none"> External oil leakage. Rusting, corrosion or deformation of seal plate. 	<ul style="list-style-type: none"> Correction or replacement. Correction or replacement.
Main relief valve, port relief valve & negative control relief valve	<ul style="list-style-type: none"> External rusting or damage. Contacting face of valve seat. Contacting face of poppet. Abnormal spring. O-rings, back up rings and seals. 	<ul style="list-style-type: none"> Replacement. Replacement when damaged. Replacement when damaged. Replacement. 100% replacement in general.

3. SWING DEVICE

 1) WEARING PARTS

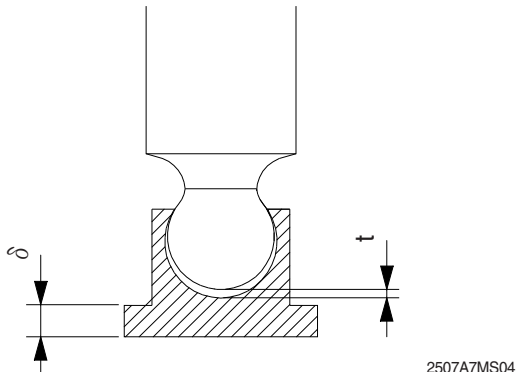Inspection item	Standard dimension	Standard dimension	Counter measures
Clearance between piston and cylinder block bore	0.028	0.058	Replace piston or cylinder block
Play between piston and shoe caulking section (δ)	0	0.3	Replace assembly of piston and shoe
Thickness of shoe (t)	5.5	5.3	Replace assembly of piston and shoe
Combined height of retainer plate and spherical bushing (H-h)	6.5	6.0	Replace set of retainer plate and spherical bushing
Thickness of friction plate	4.0	3.6	Replace
<div style="display: flex; justify-content: space-around; align-items: center;">   </div>			

2) SLIDING PARTS


Part name	Standard roughness	Allowable roughness	Remark
Shoe	0.8-Z (Ra=0.2) (LAPPING)	3-Z (Ra=0.8)	
Shoe plate	0.4-Z (Ra=0.1) (LAPPING)	3-Z (Ra=0.8)	
Cylinder	1.6-Z (Ra=0.4) (LAPPING)	12.5-Z (Ra=3.2)	
Valve plate	0.8-Z (Ra=0.2) (LAPPING)	6.3-Z (Ra=1.6)	

4. TRAVEL MOTOR

1) TYPE 1

Problem		Cause	Remedy
Does not start	Pressure is not developed	<ul style="list-style-type: none"> · Pump failure · Control valve malfunction 	<ul style="list-style-type: none"> · Check if action other than traveling is available. If faulty, repair. · Check if spool moves correctly. Repair if necessary.
	Pressure is developed	<ul style="list-style-type: none"> · Brake valve failure -Sleeve stick -Check valve stick · Motor failure -Valve seat seizure · Gear broken and fragment locked · Overloaded 	<ul style="list-style-type: none"> · Replace brake valve · Replace -Check hydraulic oil for contamination · Replace reduction gear · Reduce load
Oil leakage	Leakage from engaging surfaces	<ul style="list-style-type: none"> · Scratch on engaging surfaces · Loosening by poor bolt tightening 	<ul style="list-style-type: none"> · Correct surfaces by oilstone or sandpaper or replace · Check after retightening
	Leakage from casing	<ul style="list-style-type: none"> · Plug loosened · Crack formed by stone 	<ul style="list-style-type: none"> · Retighten · Replace reduction gear
	Leakage from floating seal	<ul style="list-style-type: none"> · Sliding surfaces worn · Creep on O-ring 	<ul style="list-style-type: none"> · Replace reduction gear · Replace floating seal
	Leakage from hydraulic motor	<ul style="list-style-type: none"> · Bolt loosened · O-ring damaged · Sealing surface scratched 	<ul style="list-style-type: none"> · Tighten properly · Replace O-ring · Correct by oilstone or sandpaper
Coasts on slope excessively		<ul style="list-style-type: none"> · Poor volumetric efficiency of hydraulic motor · Increase of internal leakage of brake valve · Parking brake not actuated -Spring breakage -Wear of friction plate 	<ul style="list-style-type: none"> · Replace hydraulic motor · Replace brake valve · Replace spring · Replace parking brake
Excessive temperature on reduction gear case		<ul style="list-style-type: none"> · Pitting on bearing · Lack of gear oil · Hydraulic oil introduced to gear case 	<ul style="list-style-type: none"> · Replace reduction gear · Supply gear oil properly · Check motor and replace oil seal
Meanders	Meanders at low pressure	<ul style="list-style-type: none"> · Delivery rate is different between right and left · Motor drain rate is different between right and left 	<ul style="list-style-type: none"> · Repair pump · Replace motor
	Meanders at high pressure	<ul style="list-style-type: none"> · Delivery rate is different between right and left · Motor drain rate is different between right and left 	<ul style="list-style-type: none"> · Repair regulator or pump · Replace motor
	Meanders at high pressure	<ul style="list-style-type: none"> · Relief pressure dropped at right and left brake valve · Main relief pressure dropped at right or left of control valve 	<ul style="list-style-type: none"> · Replace brake valve · Replace main relief valve
Pump delivery is poor		<ul style="list-style-type: none"> · Regulator operation poor · External leakage of pump is excessive 	<ul style="list-style-type: none"> · Repair regulator · Repair pump
External leakage of motor is excessive		-	<ul style="list-style-type: none"> · Replace motor


2) TYPE 2

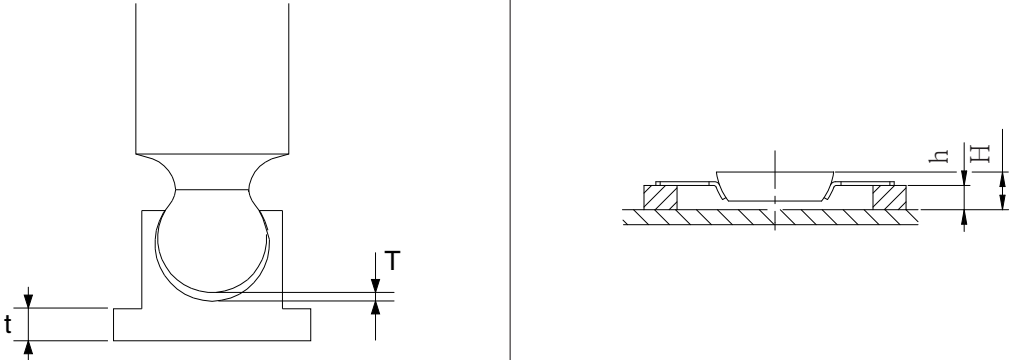Inspection item	Standard dimension	Recommended replacement value	Counter measures
Clearance between piston and cylinder block bore	0.025	0.050	Replace piston or cylinder block
Play between piston and shoe caulking section (T)	0	0.3	Replace assembly of piston and shoe
Thickness of shoe (t)	4.5	4.3	Replace assembly of piston and shoe
Combined height of set plate and ball guide (H)	7.3	7.0	Replace set of set plate and ball guide
Thickness of friction plate	3.0	2.6	Replace
			

2) SLIDING PARTS


Part name	Standard roughness	Remark
Shoe	0.8S	-
Shoe plate	0.8S	-
Cylinder	0.8S	-
Valve plate	0.8S	-

5. RCV LEVER

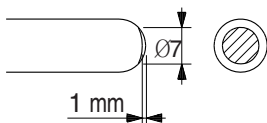Maintenance check item	Criteria	Remark
Leakage	The valve is to be replaced when the leakage becomes more than 1000 cc/m at neutral handle position, or more than 2000 cc/m during operation.	Conditions : Primary pressure : 40 kgf/cm ² Oil viscosity : 23 cSt
Spool	This is to be replaced when the sliding surface has worn more than 10 μ m, compared with the non-sliding surface.	The leakage at the left condition is estimated to be nearly equal to the above leakage.
Push rod	 <p>This is to be replaced when the top end has worn more than 1mm.</p>	
Play at operating section	The pin, shaft, and joint of the operating section are to be replaced when their plays become more than 2 mm due to wears or so on.	When a play is due to looseness of a tightened section, adjust it.
Operation stability	When abnormal noises, hunting, primary pressure drop, etc. are generated during operation, and these cannot be remedied, referring to section 6 troubleshooting, replace the related parts.	

  

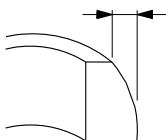
Notes 1. It is desirable to replace seal materials, such as O-rings, every disassembling. However, they may be reused, after being confirmed to be free of damage.

6. RCV PEDAL

Maintenance check item	Criteria	Remark
Leakage	The valve is to be replaced when the leakage effect to the system. For example, the primary pressure drop.	Conditions : Primary pressure : 40 kgf/cm ² Oil viscosity : 23 cSt
Spool	This is to be replaced when the sliding surface has worn more than 10 μ m, compared with the non-sliding surface.	The leakage at the left condition is estimated to be nearly equal to the above leakage.
Push rod	 <p>This is to be replaced when the top end has worn more than 1 mm.</p>	
Play at operating section	The pin, shaft, and joint of the operating section are to be replaced when their plays become more than 2 mm due to wears or so on.	When a play is due to looseness of a tightened section, adjust it.
Operation stability	When abnormal noises, hunting, primary pressure drop, etc. are generated during operation, and these cannot be remedied, referring to section 6. Troubleshooting, replace the related parts.	

Notes 1. It is desirable to replace seal materials, such as O-rings, every disassembling. However, they may be reused, after being confirmed to be free of damage.

7. TURNING JOINT

Part name		Maintenance standards	Remedy
Body, Stem	Sliding surface with sealing sections.	Plating worn or peeled due to seizure or contamination.	Replace
	Sliding surface between body and stem other than sealing section.	· Worn abnormality or damaged more than 0.1 mm (0.0039 in) in depth due to seizure contamination.	Replace
		· Damaged more than 0.1 mm (0.0039 in) in depth.	Smooth with oilstone.
	Sliding surface with thrust plate.	· Worn more than 0.5 mm (0.02 in) or abnormality.	Replace
		· Worn less than 0.5 mm (0.02 in).	Smooth
Cover	Sliding surface with thrust plate.	· Damage due to seizure or contamination remediable within wear limit (0.5 mm) (0.02 in).	Smooth
		· Worn more than 0.5 mm (0.02 in) or abnormality.	Replace
		· Worn less than 0.5 mm (0.02 in).	Smooth
Seal set	-	· Extruded excessively from seal groove square ring. 	Replace
	-	· Slipper ring 1.5 mm (0.059 in) narrower than seal groove, or narrower than back ring. 	Replace
	-	· Worn more than 0.5 mm (0.02 in) ~ 1.5 mm (MAX.) (0.059 in) 	Replace


8. CYLINDER

Part name	Inspecting section	Inspection item	Remedy
Piston rod	· Neck of rod pin	· Presence of crack	· Replace
	· Weld on rod hub	· Presence of crack	· Replace
	· Stepped part to which piston is attached.	· Presence of crack	· Replace
	· Threads	· Presence of crack	· Recondition or replace
	· Plated surface	· Plating is not worn off to base metal.	· Replace or replate
		· Rust is not present on plating.	· Replace or replate
		· Scratches are not present.	· Recondition, replate or replace
Cylinder tube	· Rod	· Wear of O.D.	· Recondition, replate or replace
	· Bushing at mounting part	· Wear of I.D.	· Replace
	· Weld on bottom	· Presence of crack	· Replace
	· Weld on head	· Presence of crack	· Replace
	· Weld on hub	· Presence of crack	· Replace
Gland	· Tube interior	· Presence of faults	· Replace if oil leak is seen
	· Bushing at mounting part	· Wear on inner surface	· Replace
Gland	· Bushing	· Flaw on inner surface	· Replace if flaw is deeper than coating

GROUP 3 TRACK AND WORK EQUIPMENT

1. TRACK

1) UPPER ROLLER

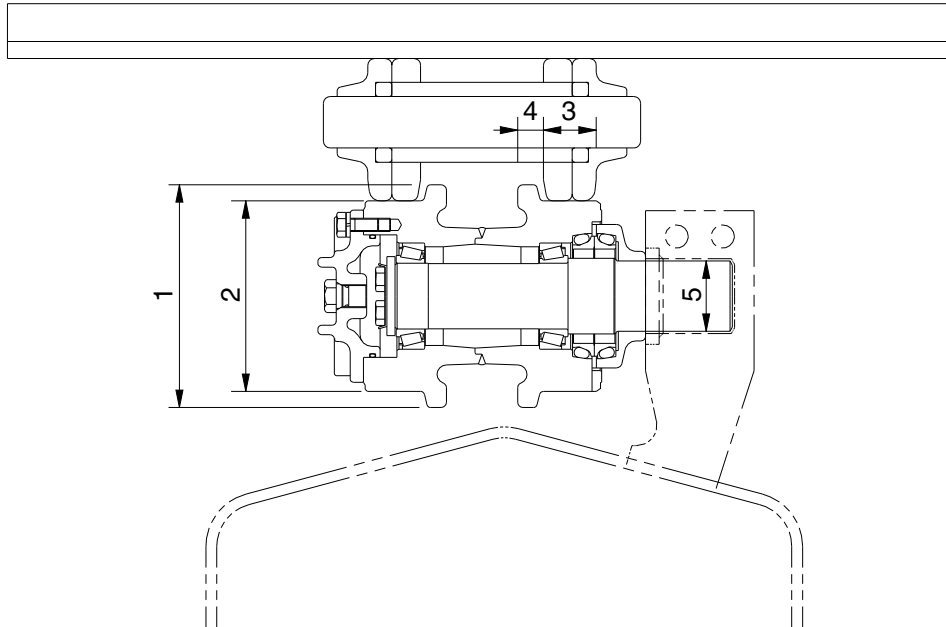

21037MS02

Unit : mm


No.	Check item	Criteria						Remedy
1	Outside diameter of flange	Standard size				Repair limit		Rebuild or replace
		Ø 175				—		
2	Outside diameter of tread	Ø 151				Ø 141		
3	Width of tread	37.25				42.25		
4	Width of flange	18.25				—		
5	Clearance between shaft and busing	Standard size & Tolerance				Standard clearance	Clearance limit	Replace bushing
		Shaft		Hole				
		Dimension	Tolerance	Dimension	Tolerance			
		Ø41.27	0 -0.05	Ø 41.5	0.2 -0.1	0.13~0.48	1.2	

(Machine Serial No. #0686-)

Unit : mm

No.	Check item	Criteria						Remedy
1	Outside diameter of flange	Standard size				Repair limit		Rebuild or replace
		Ø 140				—		
2	Outside diameter of tread	Ø 120				Ø 110		
3	Width of tread	25.5				30.5		
4	Width of flange	15				—		
5	Clearance between shaft and busing	Standard size & Tolerance				Standard clearance	Clearance limit	Replace bushing
		Shaft		Hole				
		Dimension	Tolerance	Dimension	Tolerance			
		Ø 45	-0.05 -0.08	Ø 45.2	0.05 0	0.25~0.33	1.2	

2) LOWER ROLLER

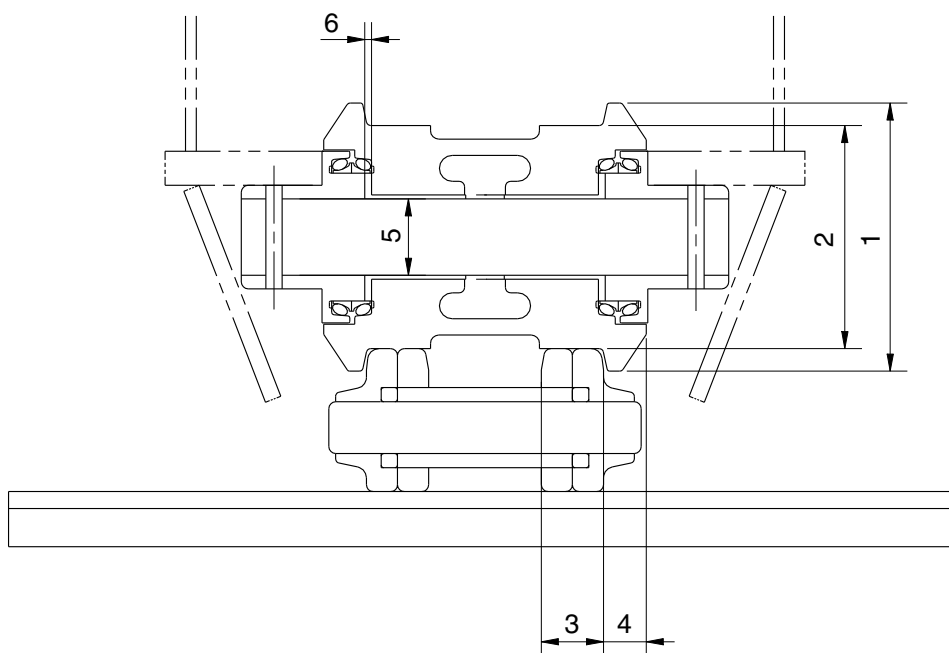

21037MS01

Unit : mm


No.	Check item	Criteria						Remedy	
1	Outside diameter of flange	Standard size				Repair limit		Rebuild or replace	
		Ø 173				—			
2	Outside diameter of tread	Ø 143				Ø 131			
3	Width of tread	39.5				45.5			
4	Width of flange	24.0				—		Replace bushing	
5	Clearance between shaft and bushing	Standard size and tolerance				Standard clearance	Clearance limit		
		Shaft		Hole					
		Dimension	Tolerance	Dimension	Tolerance				
		Ø55	0 -0.03	Ø55	0.35 0.3	0.30~0.38	2.0		
6	Side clearance of roller (both side)	Standard clearance				Clearance limit		Replace	
		0.21~1.34				2.0			

(Machine Serial No. #0686-)

Unit : mm

No.	Check item	Criteria						Remedy		
1	Outside diameter of flange	Standard size				Repair limit		Rebuild or replace		
		Ø 170				—				
2	Outside diameter of tread	Ø 140				Ø 130				
3	Width of tread	36.5				42.5				
4	Width of flange	24.5				—				
5	Clearance between shaft and bushing	Standard size and tolerance						Standard clearance	Clearance limit	Replace bushing
		Shaft		Hole						
		Dimension	Tolerance	Dimension	Tolerance					
		Ø50	-0.05 -0.075	Ø50	0.28 0.12	0.17~0.355	2.0			
6	Side clearance of roller (both side)	Standard clearance				Clearance limit		2.0	Replace	
		0.25~1.65								

3) IDLER

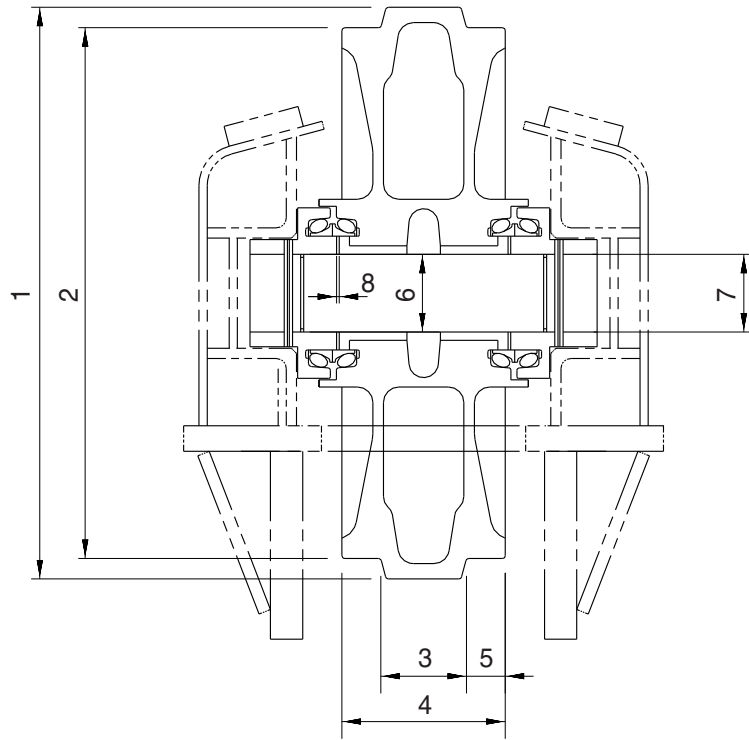

21037MS03

Unit : mm


No.	Check item	Criteria						Remedy
1	Outside diameter of flange	Standard size				Repair limit		Rebuild or replace
		Ø 552				—		
2	Outside diameter of tread	Ø 507				Ø 497		
3	Width of protrusion	67				—		
4	Total width	135				—		
5	Width of tread	34				39		
6	Clearance between shaft and bushing	Standard size & Tolerance				Standard clearance	Clearance limit	Replace bushing
		Shaft		Hole				
		Dimension	Tolerance	Dimension	Tolerance			
		Ø 70	0 -0.03	Ø 70.3	0.35 0.3	0.6~0.68	2.0	
7	Clearance between shaft and support	Ø 70	0 -0.03	Ø 70	0.106 0.06	0.06~0.136	1.2	Replace
8	Side clearance of idler (both side)	Standard clearance				Clearance limit		Replace bushing
		0.31~1.29				2.0		

(Machine Serial No. #0686-)

Unit : mm

No.	Check item	Criteria						Remedy		
1	Outside diameter of flange	Standard size				Repair limit		Rebuild or replace		
		Ø 489				—				
2	Outside diameter of tread	Ø 454				Ø 444				
3	Width of protrusion	68				—				
4	Total width	135				—				
5	Width of tread	33.5				38.5				
6	Clearance between shaft and bushing	Standard size & Tolerance						Standard clearance	Clearance limit	Replace bushing
		Shaft		Hole						
		Dimension	Tolerance	Dimension	Tolerance					
		Ø75	0.08 0.03	Ø75	0.415 0.37	0.29~0.385	2.0			
7	Clearance between shaft and support	Ø75	0.08 0.03	Ø75	0.15 0.11	0.03~0.12	1.2	Replace		
8	Side clearance of idler (both side)	Standard clearance				Clearance limit		Replace bushing		
		0.25~1.15				2.0				

4) TRACK

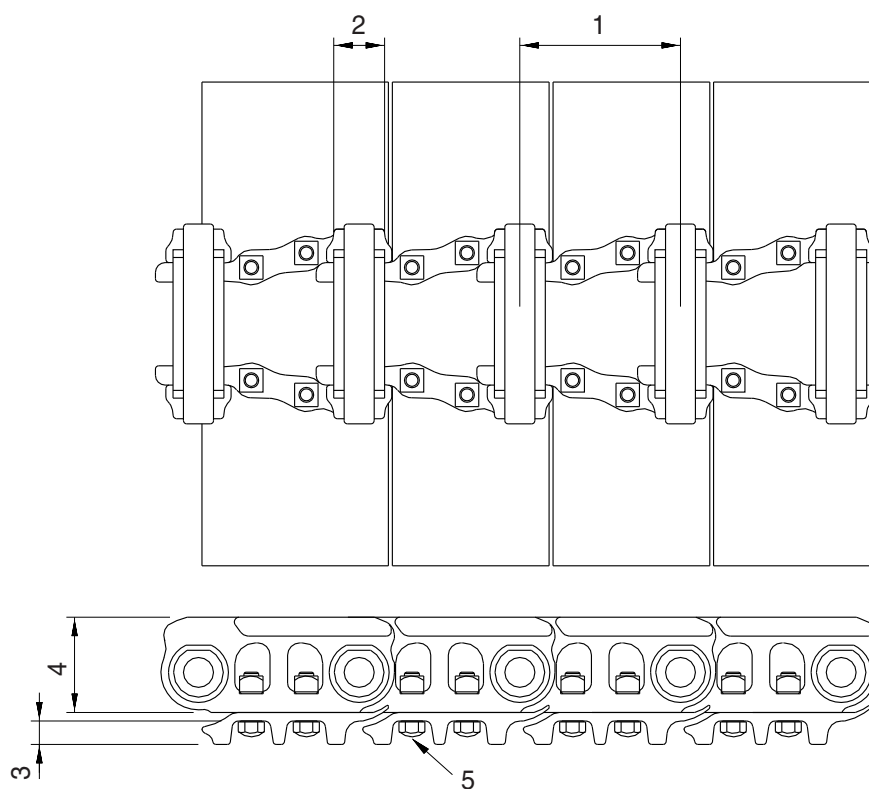


21037MS04

Unit : mm

No.	Check item	Criteria		Remedy
		Standard size	Repair limit	
1	Link pitch	171.45	175.65	Turn or replace
2	Outside diameter of bushing	Ø53.75	Ø43.95	Rebuild or replace
3	Height of grouser	25	16	
4	Height of link	94.5	86.5	
5	Tightening torque (Tightening angle method)	Initial tightening torque : 42 ± 4 kgf · m Additional tightening angle : 32°		Retighten
	★Tightening torque (Tightening angle method)	Initial tightening torque : 45 ± 3 kgf · m Additional tightening angle : 0°		Retighten

★ : Machine Serial No. #0686-

5) TRACK FRAME AND RECOIL SPRING

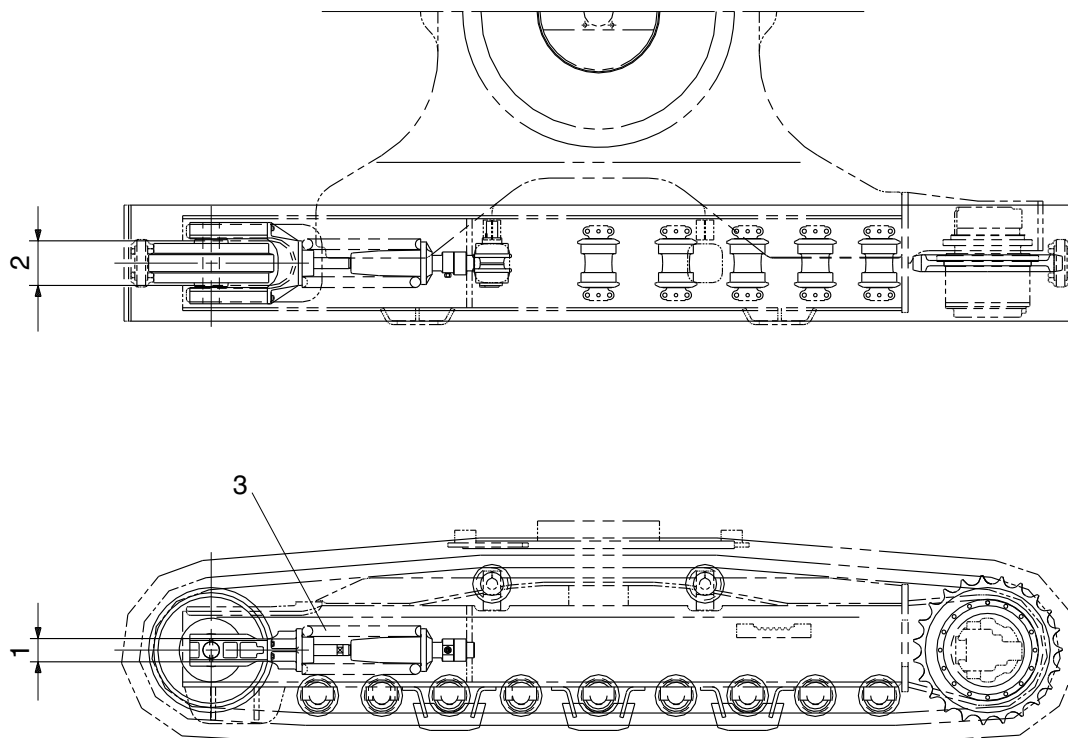

21037MS05

Unit : mm


No.	Check item	Criteria				Remedy	
1	Vertical width of idler guide		Standard size	Tolerance	Repair limit	Rebuild or replace	
		Track frame	103	2.0 0	107		
		Idler support	100	0.3 -0.3	98		
2	Horizontal width of idler guide	Track frame	192	2.0 0	196		
		Idler support	190	—	188		
3	Recoil spring	Standard size			Repair limit		Replace
		Free length	Installation length	Installation load	Free length	Installation load	
		470	405	8497 kg	—	6978 kg	

(Machine Serial No. #0686-)

Unit : mm

No.	Check item	Criteria				Remedy	
1	Vertical width of idler guide		Standard size	Tolerance	Repair limit	Rebuild or replace	
		Track frame	112	2.0 -1.0	116		
		Idler support	110	0.3 -0.3	108		
2	Horizontal width of idler guide	Track frame	210	2.0 0	214		
		Idler support	207.6	0.75 -1.25	205.6		
3	Recoil spring	Standard size			Repair limit		Replace
		Free length	Installation length	Installation load	Free length	Installation load	
		470	400	9220 kg	—	7560 kg	

2. WORK EQUIPMENT

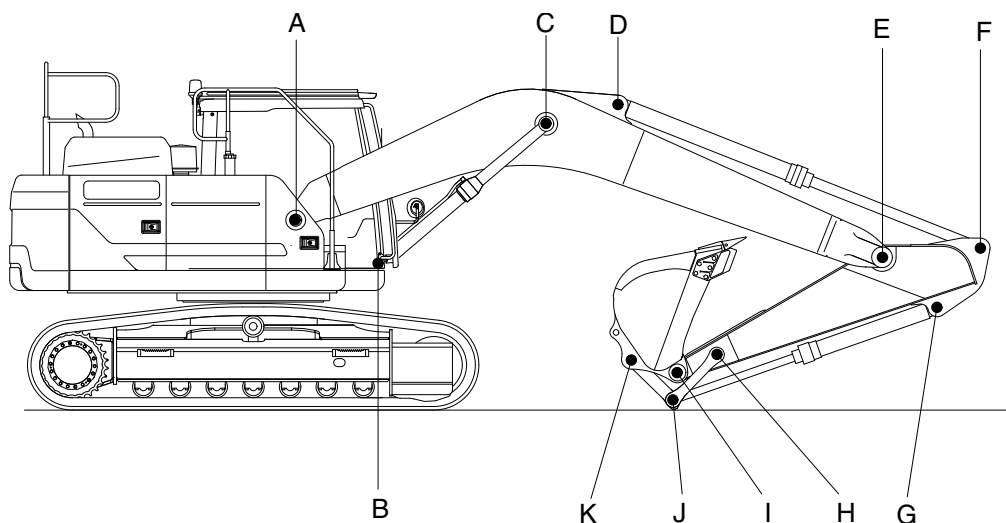

140A7MS21

Unit : mm

Mark	Measuring point (Pin and Bushing)	Normal value	Pin		Bushing		Remedy & Remark
			Recomm. service limit	Limit of use	Recomm. service limit	Limit of use	
A	Boom Rear	70	69	68.5	70.5	71	Replace
B	Boom Cylinder Head	70	69	68.5	70.5	71	"
C	Boom Cylinder Rod	70	69	68.5	70.5	71	"
D	Arm Cylinder Head	70	69	68.5	70.5	71	"
E	Boom Front	70	69	68.5	70.5	71	"
F	Arm Cylinder Rod	70	69	68.5	70.5	71	"
G	Bucket Cylinder Head	70	69	68.5	70.5	71	"
H	Arm Link	65	64	63.5	65.5	66	"
I	Bucket and Arm Link	65	64	63.5	65.5	66	"
J	Bucket Cylinder Rod	70	69	68.5	70.5	71	"
K	Bucket Link	65	64	63.5	65.5	66	"

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1	Precaution	8-1
Group 2	Tightening Torque	8-4
Group 3	Pump Device	8-7
Group 4	Main Control Valve	8-29
Group 5	Swing Device	8-43
Group 6	Travel Device	8-62
Group 7	RCV Lever	8-126
Group 8	Turning Joint	8-140
Group 9	Boom, Arm and Bucket Cylinder	8-145
Group 10	Undercarriage	8-168
Group 11	Work Equipment	8-182


SECTION 8 DISASSEMBLY AND ASSEMBLY

GROUP 1 PRECAUTIONS

1. REMOVAL WORK

- 1) Lower the work equipment completely to the ground.
If the coolant contains antifreeze, dispose of it correctly.
- 2) After disconnecting hoses or tubes, cover them or fit blind plugs to prevent dirt or dust from entering.
- 3) When draining oil, prepare a container of adequate size to catch the oil.
- 4) Confirm the match marks showing the installation position, and make match marks in the necessary places before removal to prevent any mistake when assembling.
- 5) To prevent any excessive force from being applied to the wiring, always hold the connectors when disconnecting the connectors.
- 6) Fit wires and hoses with tags to show their installation position to prevent any mistake when installing.
- 7) Check the number and thickness of the shims, and keep in a safe place.
- 8) When raising components, be sure to use lifting equipment of ample strength.
- 9) When using forcing screws to remove any components, tighten the forcing screws alternately.
- 10) Before removing any unit, clean the surrounding area and fit a cover to prevent any dust or dirt from entering after removal.
- 11) When removing hydraulic equipment, first release the remaining pressure inside the hydraulic tank and the hydraulic piping.
- 12) If the part is not under hydraulic pressure, the following corks can be used.

Nominal number	Dimensions		
	D	d	L
06	6	5	8
08	8	6.5	11
10	10	8.5	12
12	12	10	15
14	14	11.5	18
16	16	13.5	20
18	18	15	22
20	20	17	25
22	22	18.5	28
24	24	20	30
27	27	22.5	34

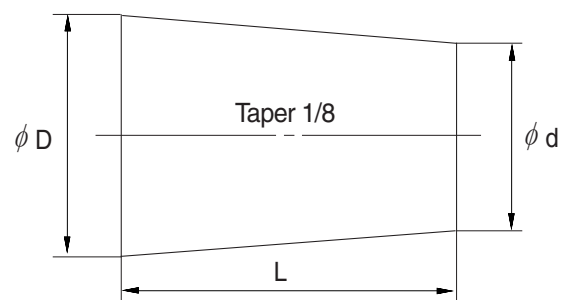

2. INSTALL WORK

- 1) Tighten all bolts and nuts (sleeve nuts) to the specified torque.
- 2) Install the hoses without twisting or interference.
- 3) Replace all gaskets, O-rings, cotter pins, and lock plates with new parts.
- 4) Bend the cotter pin or lock plate securely.
- 5) When coating with adhesive, clean the part and remove all oil and grease, then coat the threaded portion with 2-3 drops of adhesive.
- 6) When coating with gasket sealant, clean the surface and remove all oil and grease, check that there is no dirt or damage, then coat uniformly with gasket sealant.
- 7) Clean all parts, and correct any damage, dents, burrs, or rust.
- 8) Coat rotating parts and sliding parts with engine oil.
- 9) When press fitting parts, coat the surface with antifriction compound (LM-P).
- 10) After installing snap rings, check that the snap ring is fitted securely in the ring groove (Check that the snap ring moves in the direction of rotation).
- 11) When connecting wiring connectors, clean the connector to remove all oil, dirt, or water, then connect securely.
- 12) When using eyebolts, check that there is no deformation or deterioration, and screw them in fully.
- 13) When tightening split flanges, tighten uniformly in turn to prevent excessive tightening on one side.
- 14) When operating the hydraulic cylinders for the first time after repairing and reassembling the hydraulic cylinders, pumps, or other hydraulic equipment or piping, always bleed the air from the hydraulic cylinders as follows:
 - (1) Start the engine and run at low idling.
 - (2) Operate the control lever and actuate the hydraulic cylinder 4-5 times, stopping 100mm before the end of the stroke.
 - (3) Next, operate the piston rod to the end of its stroke to relieve the circuit. (The air bleed valve is actuated to bleed the air.)
 - (4) After completing this operation, raise the engine speed to the normal operating condition.
 - ※ If the hydraulic cylinder has been replaced, carry out this procedure before assembling the rod to the work equipment.
 - ※ Carry out the same operation on machines that have been in storage for a long time after completion of repairs.

3. COMPLETING WORK

- 1) If the coolant has been drained, tighten the drain valve, and add water to the specified level. Run the engine to circulate the water through the system. Then check the water level again.
- 2) If the hydraulic equipment has been removed and installed again, add engine oil to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
- 3) If the piping or hydraulic equipment, such as hydraulic cylinders, pumps, or motors, have been removed for repair, always bleed the air from the system after reassembling the parts.
- 4) Add the specified amount of grease (molybdenum disulphied grease) to the work equipment related parts.

GROUP 2 TIGHTENING TORQUE

1. MAJOR COMPONENTS

No.	Descriptions		Bolt size	Torque	
				kgf · m	lbf · ft
1	Engine	Engine mounting bolt (engine-bracket, FR)	M12×1.75	11.5±1.0	81.2±7.2
2		Engine mounting bolt (engine-bracket, RR)	M12×1.75	11.5±1.0	81.2±7.2
3		Engine mounting bolt (bracket-frame, FR)	M16×2.0	29.7±3.0	215±21.7
4		Engine mounting bolt (bracket-frame, RR)	M16×2.0	29.7±3.0	215±21.7
5		Radiator mounting bolt	M16×2.0	29.7±4.5	215±32.5
6		Coupling mounting socket bolt	M16×2.0	22.0±1.0	159±7.2
7		Main pump housing mounting bolt	M10×1.5	6.5±0.7	47.0±5.1
8	Hydraulic system	Main pump mounting socket bolt	M16×2.0	29.7±4.5	215±32.5
9		Main control valve mounting bolt	M12×1.75	12.2±1.3	88.2±9.4
10		Fuel tank mounting bolt	M20×2.5	57.8±5.8	418±42.0
11		Hydraulic oil tank mounting bolt	M20×2.5	57.8±5.8	418±42.0
12		Turning joint mounting bolt, nut	M12×1.75	12.8±3.0	92.6±21.7
13	Power train system	Swing motor mounting bolt	M16×2.0	29.6±3.2	214±23.1
14		Swing bearing upper part mounting bolt	M18×2.5	41.3±4.0	299±28.9
15		Swing bearing lower part mounting bolt	M16×1.5	29.7±3.0	215±21.7
16		Travel motor mounting bolt	M16×2.0	25.7±4.0	186±28.9
17		Travel motor mounting bolt (HIGH WALKER)	M16×2.0	57.9±6.0	419±43.4
18		Sprocket mounting bolt	M16×2.0	29.7±3.0	215±21.7
19	Under carriage	Upper roller mounting bolt, nut	M16×2.0 M20×2.5★	29.7±3.0 57.9±6.0★	215±21.7 419±43.4★
20		Upper roller mounting bolt, nut (HIGH WALKER)	M20×2.5	57.9±6.0	419±43.4
21		Lower roller mounting bolt	M16×2.0	29.7±3.0	215±21.7
22		Lower roller mounting bolt (HIGH WALKER)	M20×2.5	57.9±6.0	419±43.4
23		Track tension cylinder mounting bolt	M16×2.0	29.7±3.0	215±21.7
24		Track shoe mounting bolt, nut	5/8-18UNF M16×1.5★	42.0±4.0 45.0±4.5★	304±28.9 325±32.5★
25		Track guard mounting bolt	M16×2.0	29.6±3.2	214±23.1
26	Others	Counterweight mounting bolt	M27×3.0	140±15	1013±108
27		Cab mounting bolt	M12×1.75	12.8±3.0	92.6±21.7
28		Operator's seat mounting bolt	M8×1.25	4.05±0.8	29.3±5.8
29		Under cover mounting bolt	M12×1.75	12.8±3.0	92.6±21.7

★ : Machine Serial No. #0686-

※ For tightening torque of engine and hydraulic components, see engine maintenance guide and service manual.

2. TORQUE CHART

Use following table for unspecified torque.

1) BOLT AND NUT

(1) Coarse thread

Bolt size	8T		10T	
	kgf · m	lbf · ft	kgf · m	lbf · ft
M 6 × 1.0	0.85 ~ 1.25	6.15 ~ 9.04	1.14 ~ 1.74	8.2 ~ 12.6
M 8 × 1.25	2.0 ~ 3.0	14.5 ~ 21.7	2.73 ~ 4.12	19.7 ~ 29.8
M10 × 1.5	4.0 ~ 6.0	28.9 ~ 43.4	5.5 ~ 8.3	39.8 ~ 60
M12 × 1.75	7.4 ~ 11.2	53.5 ~ 79.5	9.8 ~ 15.8	71 ~ 114
M14 × 2.0	12.2 ~ 16.6	88.2 ~ 120	16.7 ~ 22.5	121 ~ 167
M16 × 2.0	18.6 ~ 25.2	135 ~ 182	25.2 ~ 34.2	182 ~ 247
M18 × 2.5	25.8 ~ 35.0	187 ~ 253	35.1 ~ 47.5	254 ~ 343
M20 × 2.5	36.2 ~ 49.0	262 ~ 354	49.2 ~ 66.6	356 ~ 482
M22 × 2.5	48.3 ~ 63.3	350 ~ 457	65.8 ~ 98.0	476 ~ 709
M24 × 3.0	62.5 ~ 84.5	452 ~ 611	85.0 ~ 115	615 ~ 832
M30 × 3.5	124 ~ 168	898 ~ 1214	169 ~ 229	1223 ~ 1655
M36 × 4.0	174 ~ 236	1261 ~ 1703	250 ~ 310	1808 ~ 2242

(2) Fine thread

Bolt size	8T		10T	
	kgf · m	lbf · ft	kgf · m	lbf · ft
M 8 × 1.0	2.17 ~ 3.37	15.7 ~ 24.3	3.04 ~ 4.44	22.0 ~ 32.0
M10 × 1.25	4.46 ~ 6.66	32.3 ~ 48.2	5.93 ~ 8.93	42.9 ~ 64.6
M12 × 1.25	7.78 ~ 11.58	76.3 ~ 83.7	10.6 ~ 16.0	76.6 ~ 115
M14 × 1.5	13.3 ~ 18.1	96.2 ~ 130	17.9 ~ 24.1	130 ~ 174
M16 × 1.5	19.9 ~ 26.9	144 ~ 194	26.6 ~ 36.0	193 ~ 260
M18 × 1.5	28.6 ~ 43.6	207 ~ 315	38.4 ~ 52.0	278 ~ 376
M20 × 1.5	40.0 ~ 54.0	289 ~ 390	53.4 ~ 72.2	386 ~ 522
M22 × 1.5	52.7 ~ 71.3	381 ~ 515	70.7 ~ 95.7	512 ~ 692
M24 × 2.0	67.9 ~ 91.9	491 ~ 664	90.9 ~ 123	658 ~ 890
M30 × 2.0	137 ~ 185	990 ~ 1338	182 ~ 248	1314 ~ 1795
M36 × 3.0	192 ~ 260	1389 ~ 1879	262 ~ 354	1893 ~ 2561

2) PIPE AND HOSE (FLARE TYPE)

Thread size (PF)	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130.2
1"	41	21	151.9
1-1/4"	50	35	253.2

3) PIPE AND HOSE (ORFS TYPE)

Thread size (UNF)	Width across flat (mm)	kgf · m	lbf · ft
9/16-18	19	4	28.9
11/16-16	22	5	36.2
13/16-16	27	9.5	68.7
1-3/16-12	36	18	130.2
1-7/16-12	41	21	151.9
1-11/16-12	50	35	253.2

4) FITTING

Thread size	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130.2
1"	41	21	151.9
1-1/4"	50	35	253.2

GROUP 3 PUMP DEVICE

1. REMOVAL AND INSTALL

1) REMOVAL

- (1) Lower the work equipment to the ground and stop the engine.
- (2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping
- (3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ Escaping fluid under pressure can penetrate the skin causing serious injury.

- (4) Loosen the drain plug under the hydraulic tank and drain the oil from the hydraulic tank.

· Hydraulic tank quantity : 120 ℓ (31.7 U.S. gal)

- (5) Remove socket bolts (11) and disconnect hoses (1,2).
- (6) Disconnect pilot line hoses (5, 6, 7, 8, 9, 10).

- (7) Remove socket bolts (12) and disconnect pump suction pipe (4).



※ When pump suction tube is disconnected, the oil inside the piping will flow out, so catch it in oil pan.

- (8) Sling the pump assembly and remove the pump mounting bolts (15).

· Weight : 92 kg (203 lb)
· Tightening torque : 29.7 ± 4.5 kgf·m
(215 ± 32.5 lbf·ft)

※ Pull out the pump assembly from housing.

When removing the pump assembly, check that all the hoses have been disconnected.

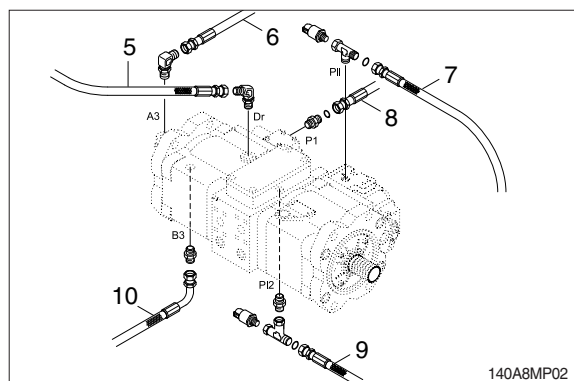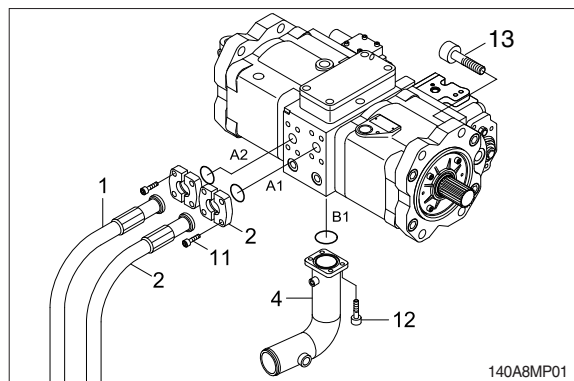


2) INSTALL

- (1) Carry out installation in the reverse order to removal.
- (2) Remove the suction strainer and clean it.
- (3) Replace return filter with new one.
- (4) Remove breather and clean it.
- (5) After adding oil to the hydraulic tank to the specified level.
- (6) Bleed the air from the hydraulic pump.
 - ① Remove the air vent plug (2EA).
 - ② Tighten plug lightly.
 - ③ Start the engine, run at low idling, and check oil come out from plug.
 - ④ Tighten plug.
- (7) Start the engine, run at low idling (3~5 minutes) to circulate the oil through the system.
- (8) Confirm the hydraulic oil level and check the hydraulic oil leak or not.

2. MAIN PUMP (1/2)

1) STRUCTURE

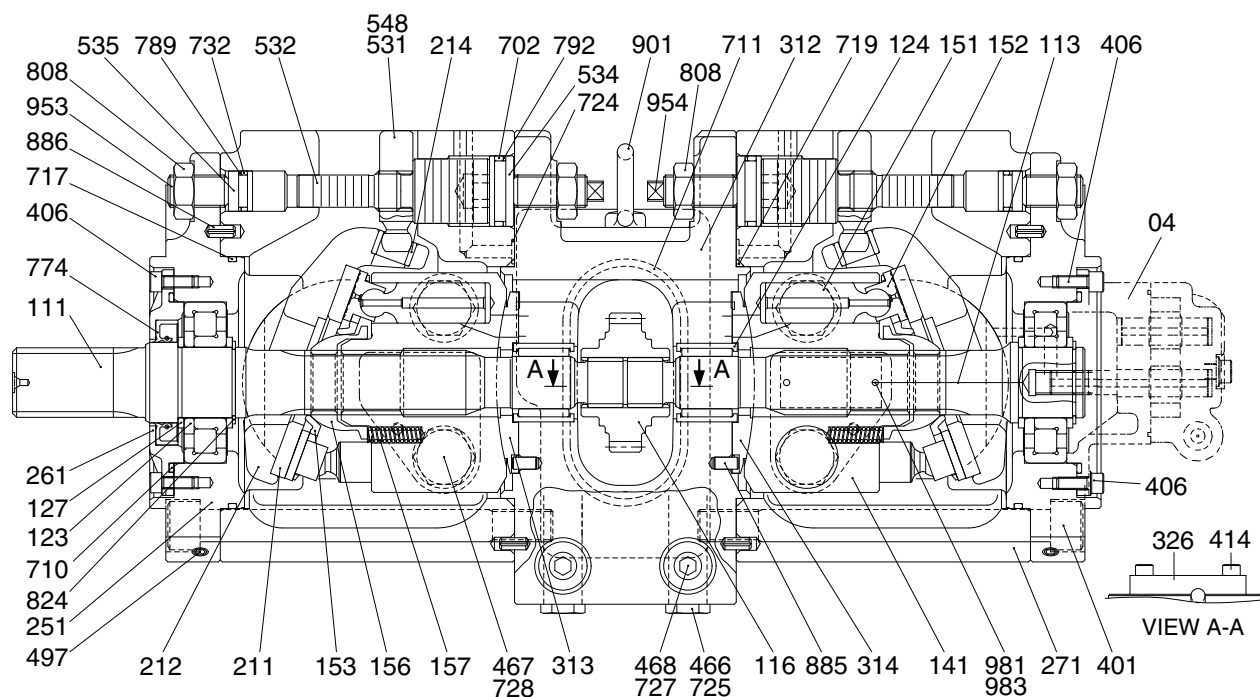



140A2MP02

04	Gear pump	312	Valve block	717	O-ring
111	Drive shaft (F)	313	Valve plate (R)	719	O-ring
113	Drive shaft (R)	314	Valve plate (L)	724	Square ring
116	1st Gear	326	Cover	725	O-ring
123	Roller bearing	401	Hexagon socket bolt	727	O-ring
124	Needle bearing	406	Hexagon socket bolt	728	O-ring
127	Bearing spacer	414	Hexagon socket bolt	732	O-ring
141	Cylinder block	466	Plug	774	Oil seal
151	Piston	467	plug	789	Back up ring
152	Shoe	468	Plug	792	Back up ring
153	Set plate	497	Plug	808	Hexagon head nut
156	Bushing	531	Tilting pin	824	Snap ring
157	Cylinder spring	532	Servo piston	885	Pin
211	Shoe plate	534	Stopper (L)	886	Spring pin
212	Swash plate	535	Stopper (S)	901	Eye bolt
214	Bushing	548	Pin	953	Set screw
251	Support	702	O-ring	954	Set screw
261	Seal cover (F)	710	O-ring	981	Name plate
271	Pump casing	711	O-ring	983	Pin

2) TOOLS AND TIGHTENING TORQUE

(1) Tools

 The tools necessary to disassemble/reassemble the pump are shown in the follow list.

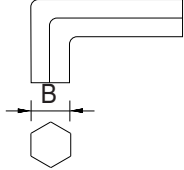
Tool name & size		Part name			
Name	B	Hexagon socket head bolt	PT plug (PT thread)	PO plug (PF thread)	Hexagon socket head setscrew
<div>Allen wrench</div> 	4	M 5	BP-1/16	-	M 8
	5	M 6	BP-1/8	-	M10
	6	M 8	BP-1/4	PO-1/4	M12, M14
	8	M10	BP-3/8	PO-3/8	M16, M18
	17	M20, M22	BP-1	PO-1, 1 1/4, 1 1/2	-
<div>Double ring spanner, socket wrench, double (single) open end spanner</div> 	-	Hexagon bolt	Hexagon nut	VP plug (PF thread)	
	19	M12	M12	VP-1/4	
	24	M16	M16	-	
	27	M18	M18	VP-1/2	
	30	M20	M20	-	
	36	-	-	VP-3/4	
Adjustable angle wrench		Medium size, 1 set			
Screw driver		Minus type screw driver, Medium size, 2 sets			
Hammer		Plastic hammer, 1 set			
Pliers		For snap ring, TSR-160			
Steel bar		Steel bar of key material approx. 10×8×200			
Torque wrench		Capable of tightening with the specified torques			

(2) Tightening torque

Part name	Bolt size	Torque		Wrench size	
		kgf · m	lbf · ft	in	mm
Hexagon socket head bolt (material : SCM435)	M 5	0.7	5.1	0.16	4
	M 6	1.2	8.7	0.20	5
	M 8	3.0	21.7	0.24	6
	M10	5.8	42.0	0.31	8
	M12	10.0	72.3	0.39	10
	M14	16.0	116	0.47	12
	M16	24.0	174	0.55	14
	M18	34.0	246	0.55	14
	M20	44.0	318	0.67	17
PT Plug (material : S45C) ※ Wind a seal tape 1 1/2 to 2 turns round the plug	PT1/16	0.7	5.1	0.16	4
	PT 1/8	1.05	7.59	0.20	5
	PT 1/4	1.75	12.7	0.24	6
	PT 3/8	3.5	25.3	0.31	8
	PT 1/2	5.0	36.2	0.39	10
PF Plug (material : S45C)	PF 1/4	3.0	21.7	0.24	6
	PF 1/2	10.0	72.3	0.39	10
	PF 3/4	15.0	109	0.55	14
	PF 1	19.0	137	0.67	17
	PF 1 1/4	27.0	195	0.67	17
	PF 1 1/2	28.0	203	0.67	17


3) DISASSEMBLY

- (1) Select place suitable to disassembling.
 - ※ Select clean place.
 - ※ Spread rubber sheet, cloth or so on on overhaul workbench top to prevent parts from being damaged.
- (2) Remove dust, rust, etc, from pump surfaces with cleaning oil or so on.
- (3) Remove drain port plug (468) and let oil out of pump casing (front and rear pump).
- (4) Remove hexagon socket head bolts (412, 413) and remove regulator.

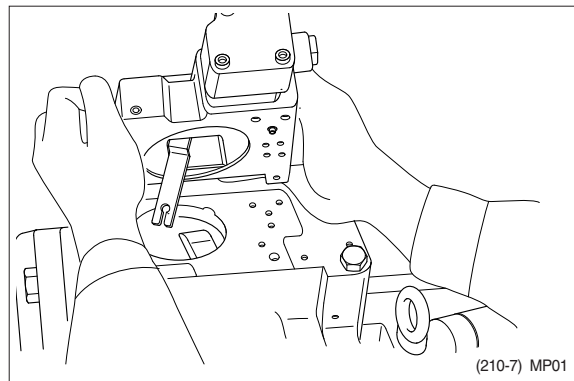


- (5) Loosen hexagon socket head bolts (401) which tighten swash plate support (251), pump casing (271) and valve block (312).
 - ※ If gear pump and so on are fitted to rear face of pump, remove them before starting this work.

- (6) Place pump horizontally on workbench with its regulator-fitting surface down and separate pump casing (271) from valve block (312).
 - ※ Before bringing this surface down, spread rubber sheet on workbench without fail to prevent this surface from being damaged.

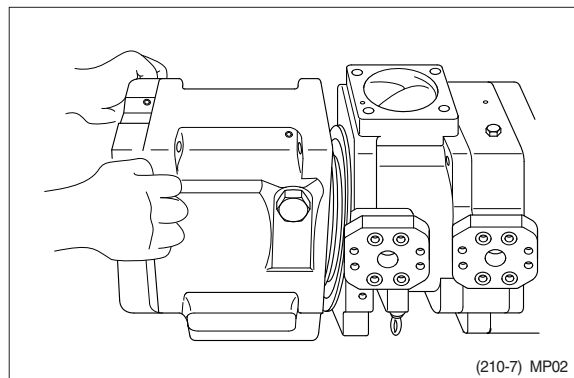

- (7) Pull cylinder block (141) out of pump casing (271) straightly over drive shaft (111). Pull out also pistons (151), set plate (153), spherical bush (156) and cylinder springs (157) simultaneously.


※ Take care not to damage sliding surfaces of cylinder, spherical bushing, shoes, swash plate, etc.

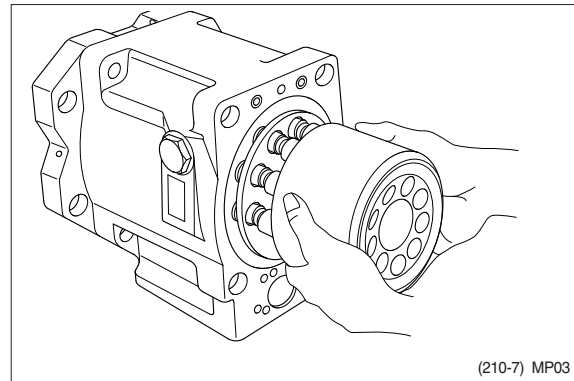

- (8) Remove hexagon socket head bolts (406) and then seal cover (F, 261).

※ Fit bolt into pulling out tapped hole of seal cover (F), and cover can be removed easily.


※ Since oil seal is fitted on seal cover (F), take care not to damage it in removing cover.

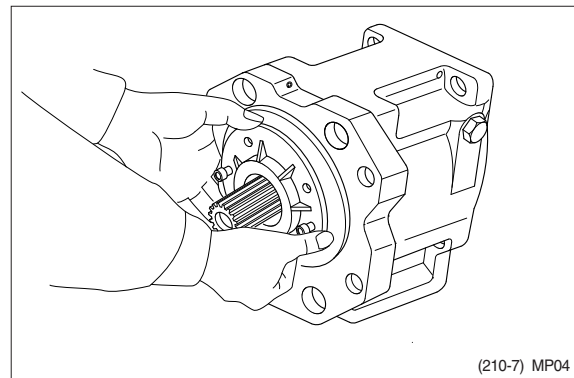


- (9) Remove hexagon socket head bolts (408) and then seal cover (R, 262).

In case fitting a gear pump, first, remove gear pump.


- (10) Tapping lightly fitting flange section of swash plate support (251) on its pump casing side, separate swash plate support from pump casing.

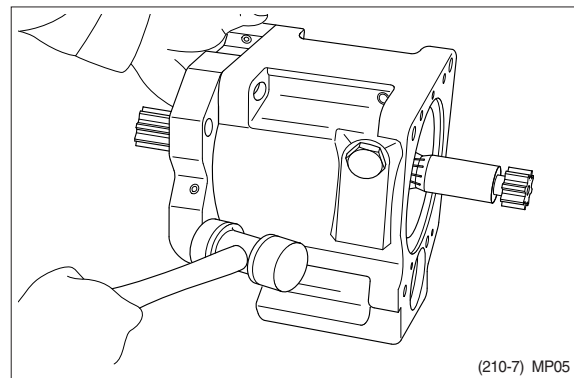

- (11) Remove shoe plate (211) and swash plate (212) from pump casing (271).

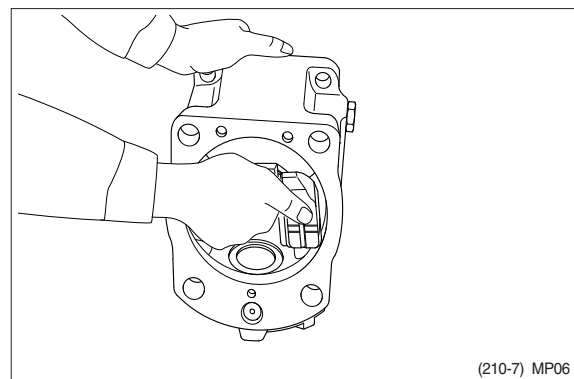


- (12) Tapping lightly shaft ends of drive shafts (111, 113) with plastic hammer, take out drive shafts from swash plate supports.

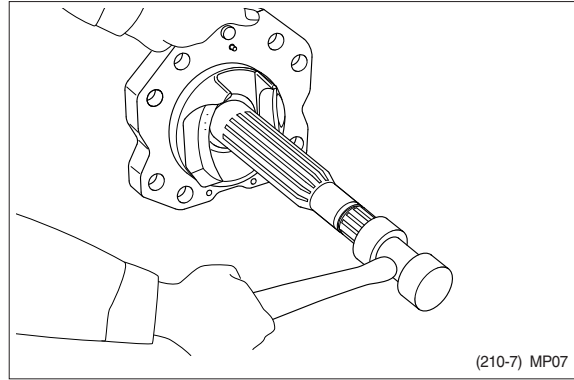

- (13) Remove valve plates (313, 314) from valve block (312).

※ These may be removed in work (6).

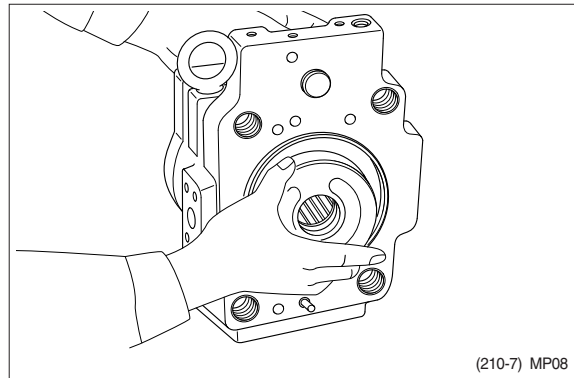

- (14) If necessary, remove stopper (L, 534), stopper (S, 535), servo piston (532) and tilting pin (531) from pump casing (271), and needle bearing (124) and splined coupling (114) from valve block (312).

- ※ In removing tilting pin, use a protector to prevent pin head from being damaged.
- ※ Since loctite is applied to fitting areas of tilting pin and servo piston, take care not to damage servo piston.
- ※ Do not remove needle bearing as far as possible, except when it is considered to be out of its life span.
- ※ Do not loosen hexagon nuts of valve block and swash plate support.
If loosened, flow setting will be changed.


4) ASSEMBLY

(1) For reassembling reverse the disassembling procedures, paying attention to the following items.

- ① Do not fail to repair the parts damaged during disassembling, and prepare replacement parts in advance.
- ② Clean each part fully with cleaning oil and dry it with compressed air.
- ③ Do not fail to apply clean working oil to sliding sections, bearings, etc. before assembling them.
- ④ In principle, replace seal parts, such as O-rings, oil seals, etc.
- ⑤ For fitting bolts, plug, etc, prepare a torque wrench or so on, and tighten them with torques shown in page 8-10, 11.
- ⑥ For the double-pump, take care not to mix up parts of the front pump with those of the rear pump.


(2) Fit swash plate support (251) to pump casing (271), tapping the former lightly with a hammer.

- ※ After servo piston, tilting pin, stopper (L) and stopper (S) are removed, fit them soon to pump casing in advance for reassembling.
- ※ In tightening servo piston and tilting pin, use a protector to prevent tilting pin head and feedback pin from being damaged. In addition, apply loctite (Medium strength) to their threaded sections.

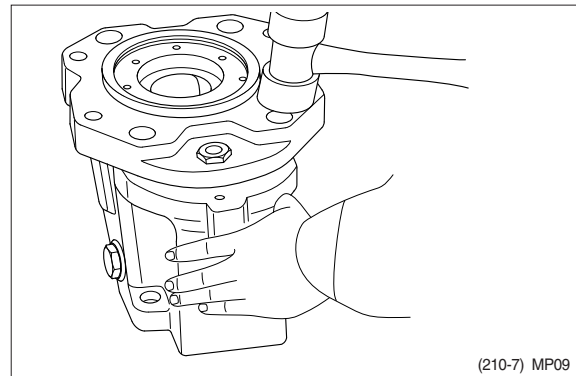


- (3) Place pump casing with its regulator fitting surface down, fit tilting bush of swash plate to tilting pin (531) and fit swash plate (212) to swash plate support (251) correctly.

- ※ Confirm with fingers of both hands that swash plate can be removed smoothly.
- ※ Apply grease to sliding sections of swash plate and swash plate support, and drive shaft can be fitted easily.

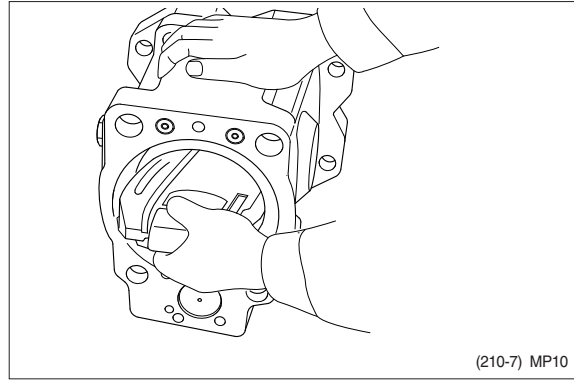


- (4) To swash plate support (251), fit drive shaft (111) set with bearing (123), bearing spacer (127) and snap ring (824).

- ※ Do not tap drive shaft with hammer or so on.
- ※ Assemble them into support, tapping outer race of bearing lightly with plastic hammer.
- Fit them fully, using steel bar or so on.

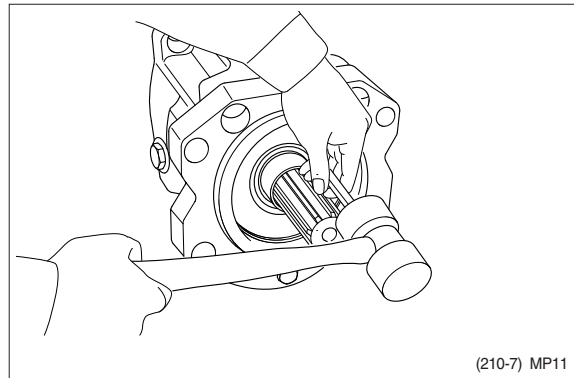


- (5) Assemble seal cover (F, 261) to pump casing (271) and fix it with hexagon socket head bolts (406).

- ※ Apply grease lightly to oil seal in seal cover (F).
- ※ Assemble oil seal, taking full care not to damage it.
- ※ For tandem type pump, fit rear cover (263) and seal cover (262) similarly.

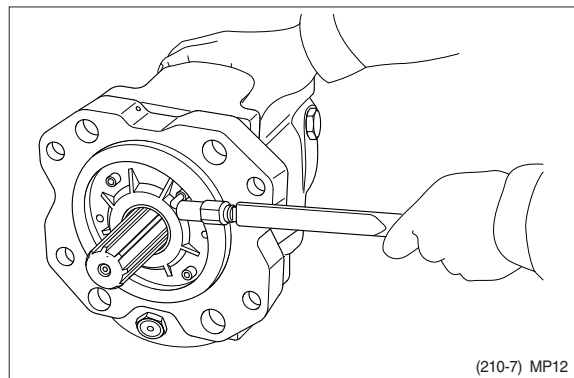


- (6) Assemble piston cylinder subassembly [cylinder block (141), piston subassembly (151, 152), set plate (153), spherical bush (156), spacer (158) and cylinder spring (157)] .


Fit spline phases of retainer and cylinder. Then, insert piston cylinder subassembly into pump casing.

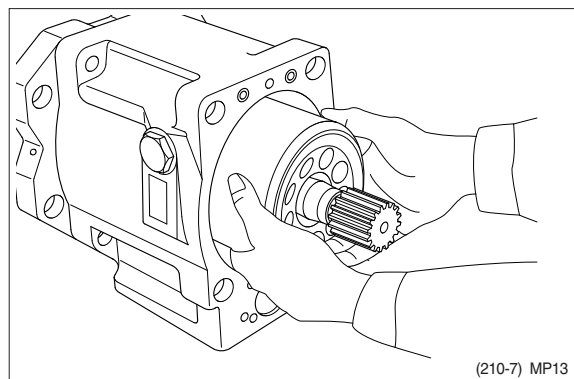


- (7) Fit valve plate (313) to valve block (312), entering pin into pin hole.
- ※ Take care not to mistake suction / delivery directions of valve plate.

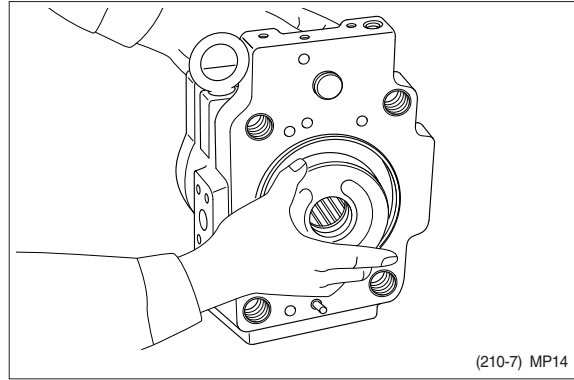

- (8) Fit valve block (312) to pump casing (271) and tighten hexagon socket head bolts (401).
- ※ At first assemble this at rear pump side, and this work will be easy.
 - ※ Take care not to mistake direction of valve block.
 - ※ Clockwise rotation (Viewed from input shaft side) - Fit block with regulator up and with delivery flange left, viewed from front side.
 - ※ Counter clockwise rotation (Viewed from input shaft side) - Fit block with delivery flange right, viewed from front side.

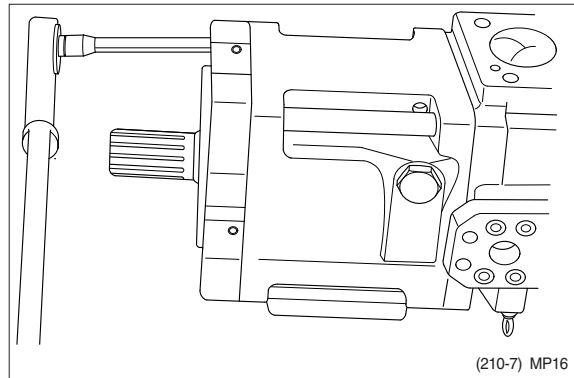




- (9) Putting feedback pin of tilting pin into feedback lever of regulator, fit regulator and tighten hexagon socket head bolts (412, 413).
- ※ Take care not to mistake regulator of front pump for that of rear pump.

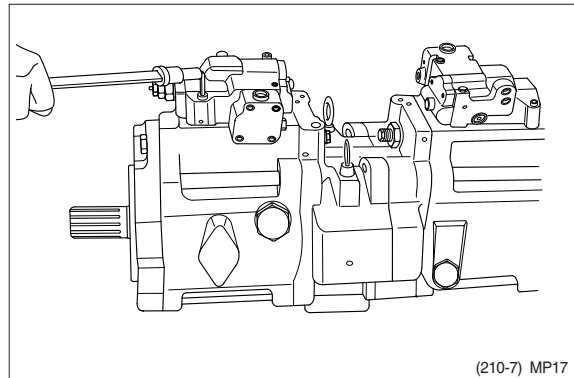


- (10) Fit drain port plug (468).
This is the end of reassembling procedures.

3. REGULATOR



1) STRUCTURE (1/2)

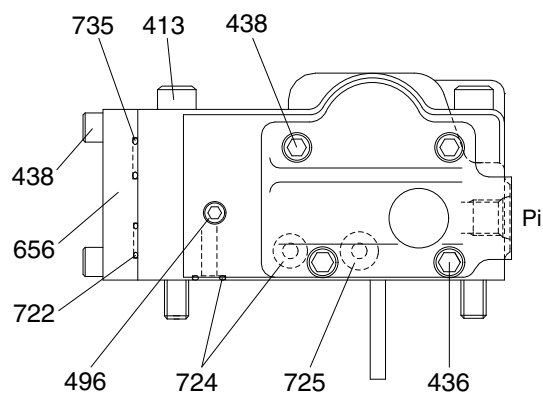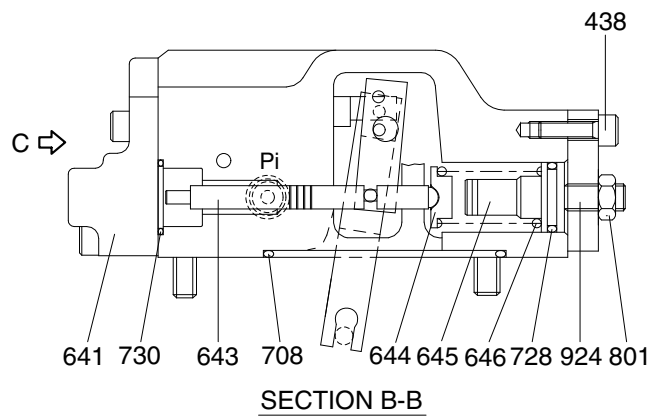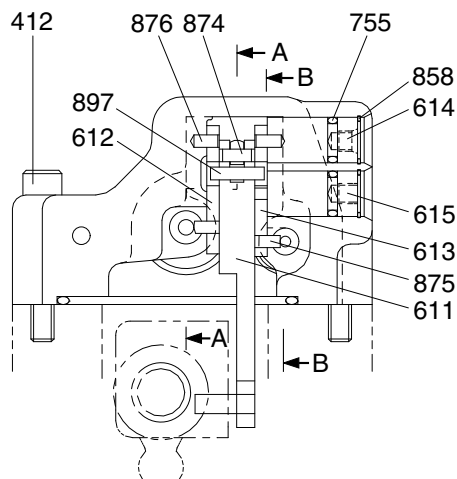


VIEW C (FRONT)

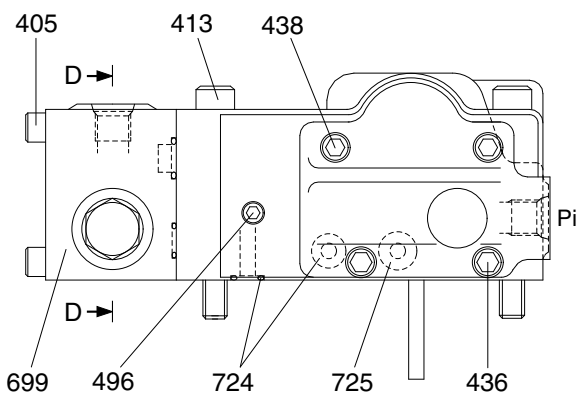

VIEW C (REAR)

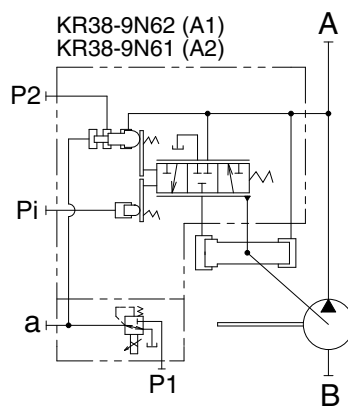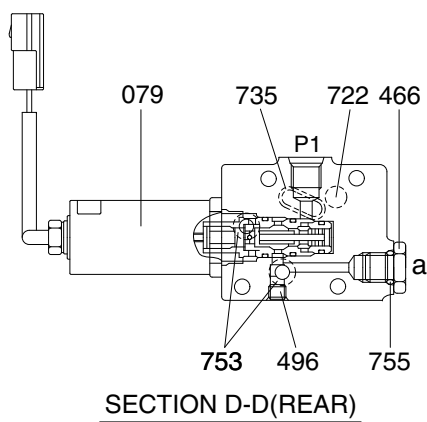

REGULATOR (2/2)

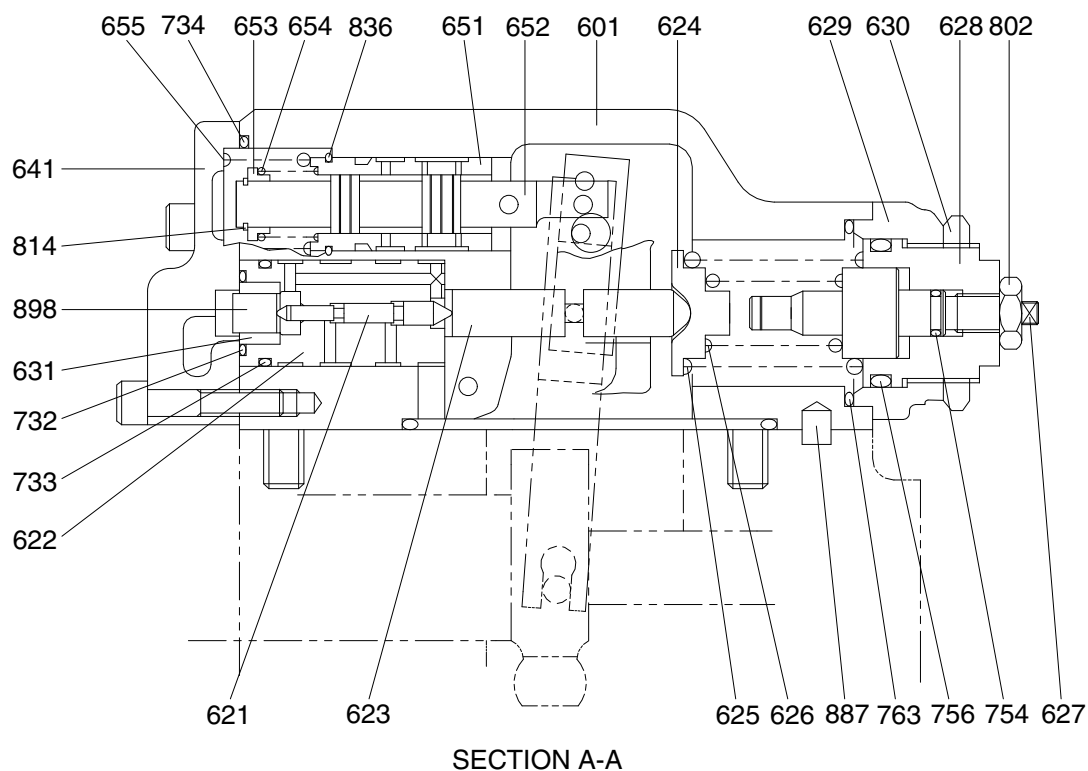



14092MP05

079	EPPR valve assembly	629	Cover (C)	733	O-ring
405	Hexagon socket screw	630	Lock nut	734	O-ring
412	Hexagon socket screw	631	Sleeve, Pf	735	O-ring
413	Hexagon socket screw	641	Pilot cover	753	O-ring
436	Hexagon socket screw	643	Pilot piston	754	O-ring
438	Hexagon socket screw	644	Spring seat (Q)	755	O-ring
466	Plug	645	Adjust stem (Q)	756	O-ring
496	Plug	646	Pilot spring	763	O-ring
601	Casing	651	Sleeve	801	Lock nut
611	Feed back lever	652	Spool	802	Lock nut
612	Lever (1)	653	Spring seat	814	Snap ring
613	Lever (2)	654	Return spring	836	Snap ring
614	Fulcrum plug	655	Set spring	858	Snap ring
615	Adjust plug	656	Block cover	874	Pin
621	Compensator piston	699	Valve casing	875	Pin
622	Piston case	708	O-ring	876	Pin
623	Compensator rod	722	O-ring	887	Pin
624	Spring seat (C)	724	O-ring	897	Pin
625	Outer spring	725	O-ring	898	Pin
626	Inner spring	728	O-ring	924	Set screw
627	Adjust stem (C)	730	O-ring		
628	Adjust screw (C)	732	O-ring		

2) TOOLS AND TIGHTENING TORQUE

(1) Tools

 The tools necessary to disassemble/reassemble the pump are shown in the follow list.

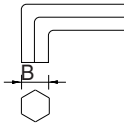Tool name & size		Part name			
Name	B	Hexagon socket head bolt	PT plug (PT thread)	PO plug (PF thread)	Hexagon socket head setscrew
Allen wrench 	4	M5	BP-1/16	-	M 8
	5	M6	BP-1/8	-	M10
	6	M8	BP-1/4	PO-1/4	M12, M14
Double ring spanner, socket wrench, double (single) open end spanner 	-	Hexagon head bolt	Hexagon nut		VP plug (PF thread)
	6	M 8	M 8		-
Adjustable angle wrench		Small size, Max 36 mm			
Screw driver		Minus type screw driver, Medium size, 2 sets			
Hammer		Plastic hammer, 1 set			
Pliers		For snap ring, TSR-160			
Steel bar		4 × 100 mm			
Torque wrench		Capable of tightening with the specified torques			
Pincers		-			
Bolt		M4, Length : 50 mm			

(2) Tightening torque

Part name	Bolt size	Torque		Wrench size	
		kgf · m	lbf · ft	in	mm
Hexagon socket head bolt (material : SCM435)	M 5	0.7	5.1	0.16	4
	M 6	1.2	8.7	0.20	5
	M 8	3.0	21.7	0.24	6
	M10	5.8	42.0	0.31	8
	M12	10.0	72.3	0.39	10
	M14	16.0	116	0.47	12
	M16	24.0	174	0.55	14
	M18	34.0	246	0.55	14
	M20	44.0	318	0.67	17
PT Plug (material : S45C) ※ Wind a seal tape 1 1/2 to 2 turns round the plug	PT1/16	0.7	5.1	0.16	4
	PT 1/8	1.05	7.59	0.20	5
	PT 1/4	1.75	12.7	0.24	6
	PT 3/8	3.5	25.3	0.31	8
	PT 1/2	5.0	36.2	0.39	10
PF Plug (material : S35C)	PF 1/4	3.0	21.7	0.24	6
	PF 1/2	10.0	72.3	0.39	10
	PF 3/4	15.0	109	0.55	14
	PF 1	19.0	137	0.67	17
	PF 1 1/4	27.0	195	0.67	17
	PF 1 1/2	28.0	203	0.67	17

3) DISASSEMBLY

Since the regulator consists of small precision finished parts, disassembly and assembly are rather complicated.

For this reason, replacement of a regulator assembly is recommended, unless there is a special reason, but in case disassembly is necessary for an unavoidable reason, read through this manual to the end before starting disassembly.

(1) Choose a place for disassembly.


※ Choose a clean place.

※ Spread rubber sheet, cloth, or so on on top of work-bench to prevent parts from being damaged.

(2) Remove dust, rust, etc. from surfaces of regulator with clean oil.

(3) Remove hexagon socket head screw (412, 413) and remove regulator main body from pump main body.


※ Take care not to lose O-ring.

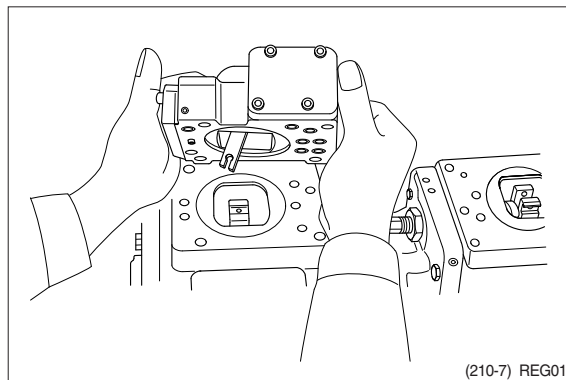

(4) Remove hexagon socket head screw (438) and remove cover (C,629)

※ Cover (C) is fitted with adjusting screw (C, 628), adjusting ring (C, 627), lock nut (630), hexagon nut (801) and adjusting screw (924).


※ Do not loosen these screws and nuts.
If they are loosened, adjusted pressure-flow setting will vary.

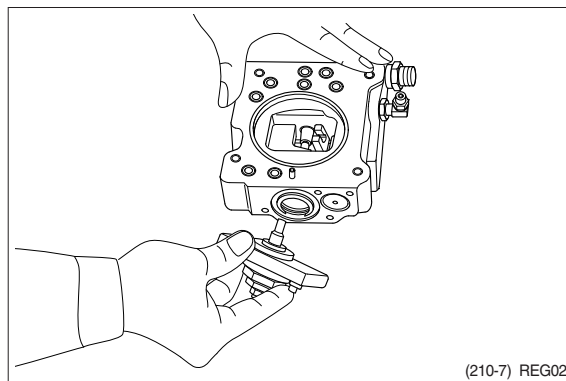


- (5) After removing cover (C, 629) subassembly, take out outer spring (625), inner spring (626) and spring seat (C, 624) from compensating section.

Then draw out adjusting ring (Q, 645), pilot spring (646) and spring seat (644) from pilot section.

- ※ Adjusting ring (Q,645) can easily be drawn out with M4 bolt.

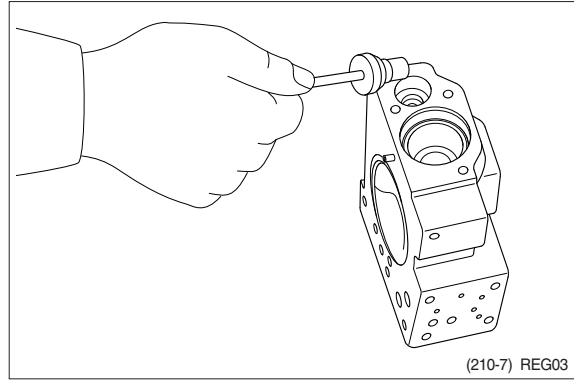


- (6) Remove hexagon socket head screws (436, 438) and remove pilot cover (641). After removing pilot cover, take out set spring (655) from pilot section.

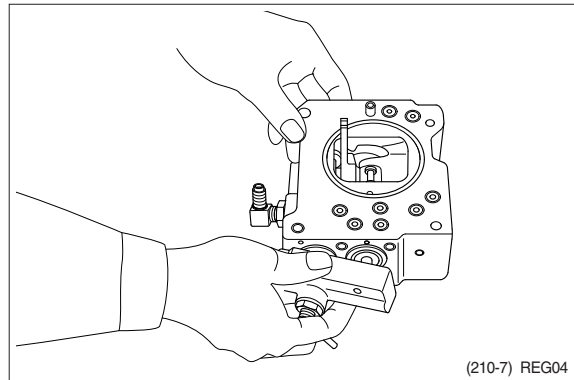


- (7) Remove snap ring (814) and take out spring seat (653), return spring (654) and sleeve (651).


- ※ Sleeve (651) is fitted with snap ring (836).
※ When removing snap ring (814), return spring (654) may pop out. Take care not to lose it.

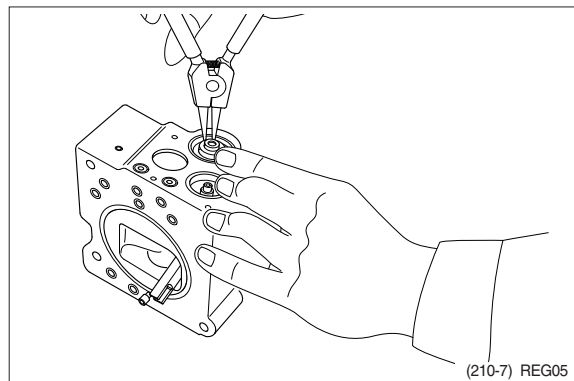


- (8) Remove locking ring (858) and take out fulcrum plug (614) and adjusting plug (615).

- ※ Fulcrum plug (614) and adjusting plug (615) can easily be taken out with M6 bolt.


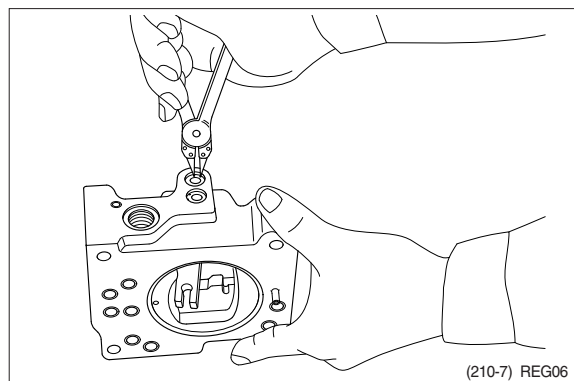


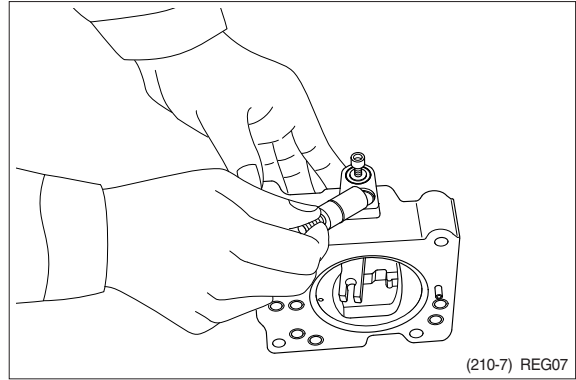

- (9) Remove lever (2, 613). Do not draw out pin (875).
 ※ Work will be promoted by using pincers or so on.

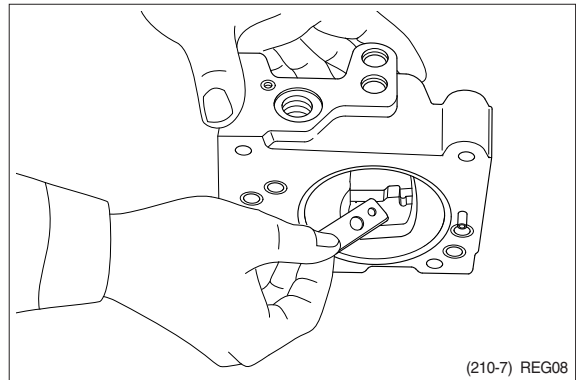

- (10) Draw out pin (874) and remove feedback lever (611).
 Push out pin (874, 4 mm in dia.) from above with slender steel bar so that it may not interfere with lever (1, 612).

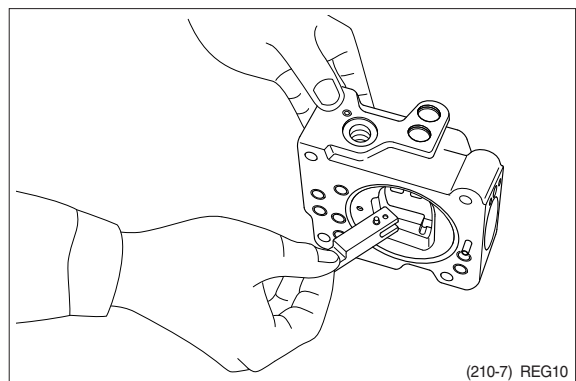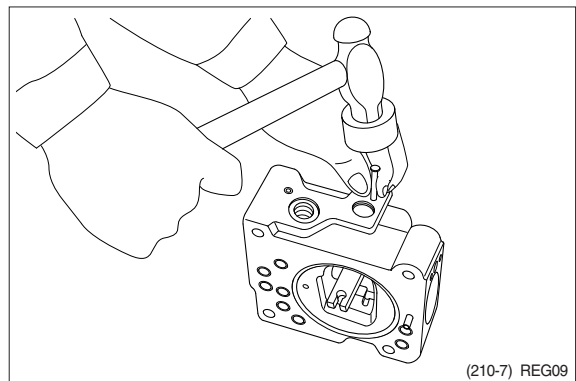

- (11) Remove lever 1 (612). Do not draw out pin (875).
- (12) Draw out pilot piston (643) and spool (652).
- (13) Draw out piston case (622), compensating piston (621) and compensating rod (623).
- ※ Piston case (622) can be taken out by pushing compensating rod (623) at opposite side of piston case.

This completes disassembly.

4) ASSEMBLY

(1) For assembly, reverse disassembly procedures, but pay attention to the following items.


- ① Always repair parts that were scored at disassembly.
- ② Get replacement parts ready beforehand.
Mixing of foreign matter will cause malfunction.
Therefore, wash parts well with cleaning oil, let them dry with jet air and handle them in clean place.
- ③ Always tighten bolts, plugs, etc. to their specified torques.
- ④ Do not fail to coat sliding surfaces with clean hydraulic oil before assembly.
- ⑤ Replace seals such as O-ring with new ones as a rule.

(2) Put compensating rod (623) into compensating hole of casing (601).

(3) Put pin force-fitted in lever 1 (612) into groove of compensating rod and fit lever 1 to pin force-fitted in casing.


(4) Fit spool (652) and sleeve (651) into hole in spool of casing.

- ※ Confirm that spool and sleeve slide smoothly in casing without binding.
- ※ Pay attention to orientation of spool.

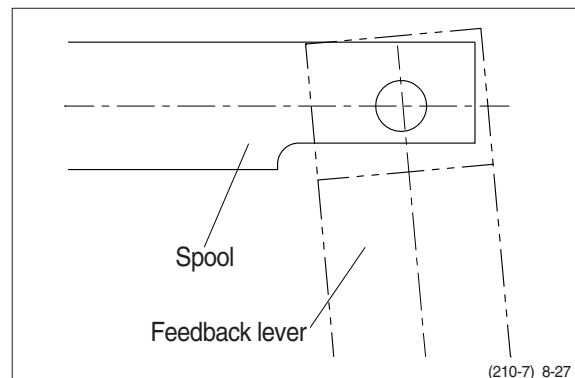

- (5) Fit feedback lever (611), matching its pin hole with pin hole in spool.
Then insert pin (874).


- ※ Insert pin in feedback lever a little to ease operation.
- ※ Take care not to mistake direction of feedback lever.

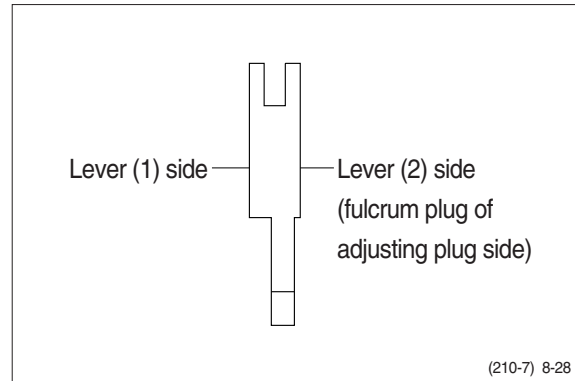

- (6) Put pilot piston (643) into pilot hole of casing.

- ※ Confirm that pilot piston slides smoothly without binding.


- (7) Put pin force-fitted in lever 2 (613) into groove of pilot piston.
Then fix lever 2.

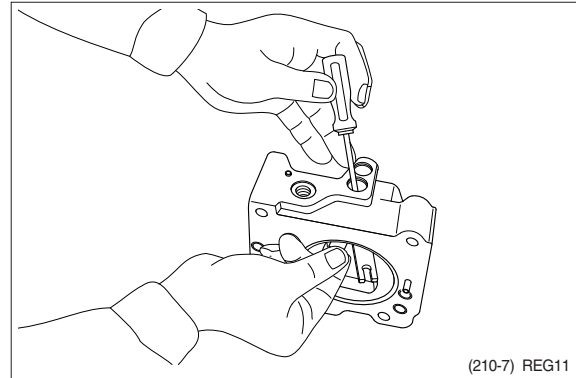


- (8) Fit fulcrum plug (614) so that pin force-fitted in fulcrum plug (614) can be put into pin hole of lever 2.
Then fix locking ring (858).

- (9) Insert adjusting plug (615) and fit locking ring.

- ※ Take care not to mistake inserting holes for fulcrum plug and adjusting plug.
- At this point in time move feedback lever to confirm that it has no large play and is free from binding.

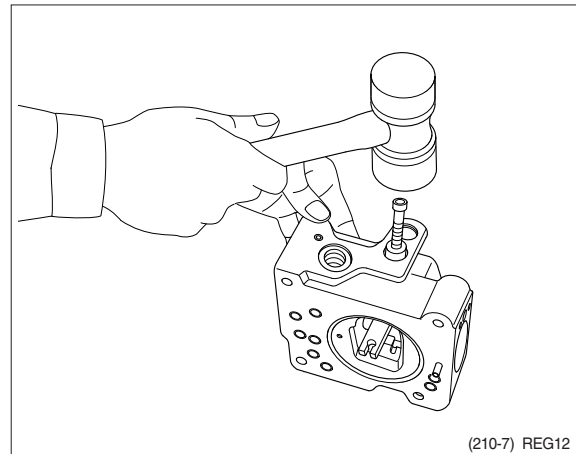


- (10) Fit return spring (654) and spring seat (653) into spool hole and attach snap ring (814).

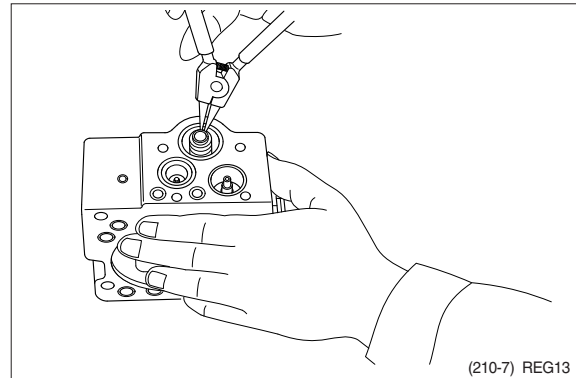

- (11) Fit set spring (655) to spool hole and put compensating piston (621) and piston case (622) into compensating hole.


Fit pilot cover (641) and tighten it with hexagonal socket head screws (436, 438).

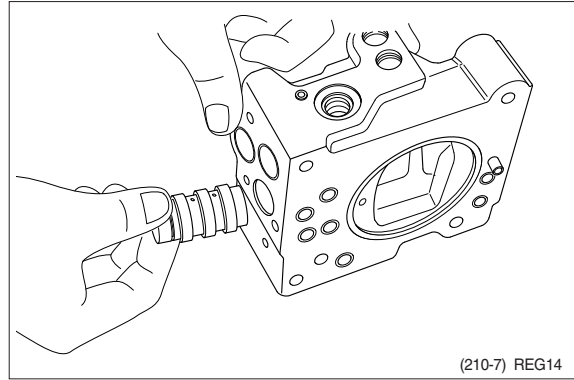

(210-7) REG14

- (12) Put spring seat (644), pilot spring (646) and adjusting ring (Q, 645) into pilot hole. Then fix spring seat (624), inner spring (626) and outer spring (625) into compensating hole.


※ When fitting spring seat, take care not to mistake direction of spring seat.

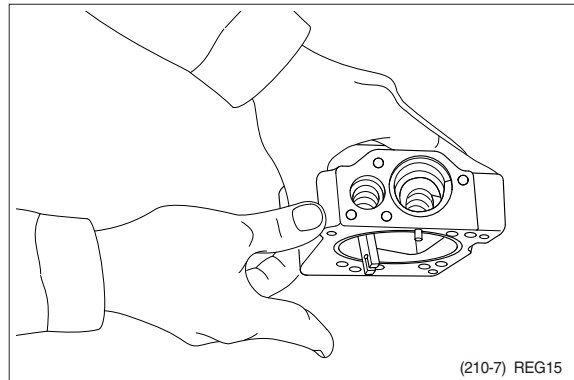

(210-7) REG15

- (13) Install cover (C, 629) fitted with adjusting screws (628), adjusting ring (C, 627), lock nut (630), hexagon nut (801) and adjusting screw (924).

Then tighten them with hexagonal socket head screws (438).

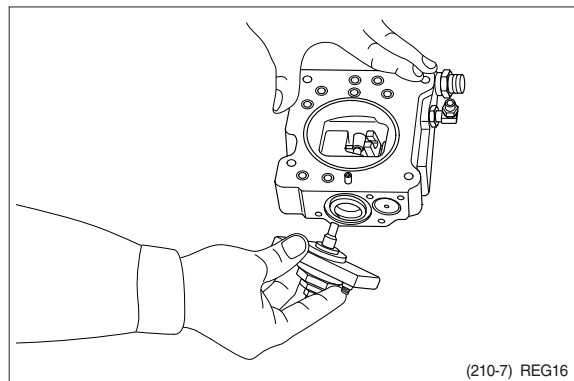

(210-7) REG16



This completes assembly.

GROUP 4 MAIN CONTROL VALVE

1. REMOVAL AND INSTALL OF MOTOR


1) REMOVAL

- (1) Lower the work equipment to the ground and stop the engine.
- (2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.
- (3) Loosen the breather slowly to release the pressure inside the hydraulic tank.
- ▲ **Escaping fluid under pressure can penetrate the skin causing serious injury.**
- ※ When pipes and hoses are disconnected, the oil inside the piping will flow out, so catch it in oil pan.
- (4) Remove the wirings for the pressure sensor and so on.
- (5) Remove bolts and disconnect pipe.
- (6) Disconnect pilot line hoses.
- (7) Disconnect pilot piping.
- (8) Sling the control valve assembly and remove the control valve mounting bolt and bracket.
 - Weight : 140 kg (309 lb)
 - Tightening torque : $29.7 \pm 4.5 \text{ kgf} \cdot \text{m}$
($215 \pm 32.5 \text{ lbf} \cdot \text{ft}$)
- (9) Remove the control valve assembly.
When removing the control valve assembly, check that all the piping have been disconnected.

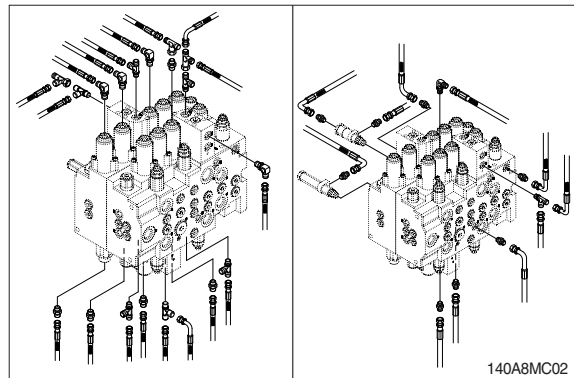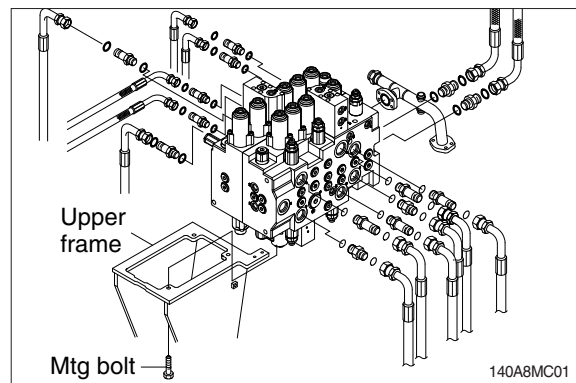


2) INSTALL

- (1) Carry out installation in the reverse order to removal.
- (2) Bleed the air from below items.
 - ① Cylinder (Boom, arm, bucket)
 - ② Swing motor
 - ③ Travel motor
 ※ See each item removal and install.
- (3) Confirm the hydraulic oil level and recheck the hydraulic oil leak or not.

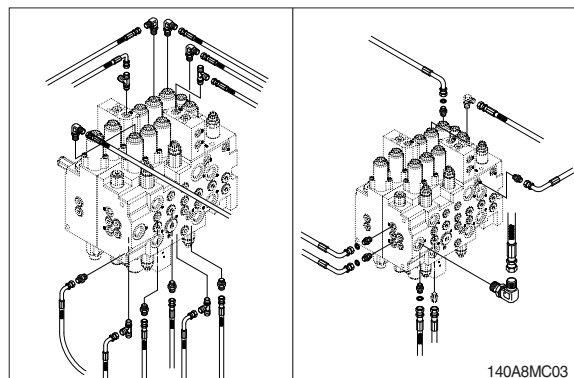


2. STRUCTURE (1/4)

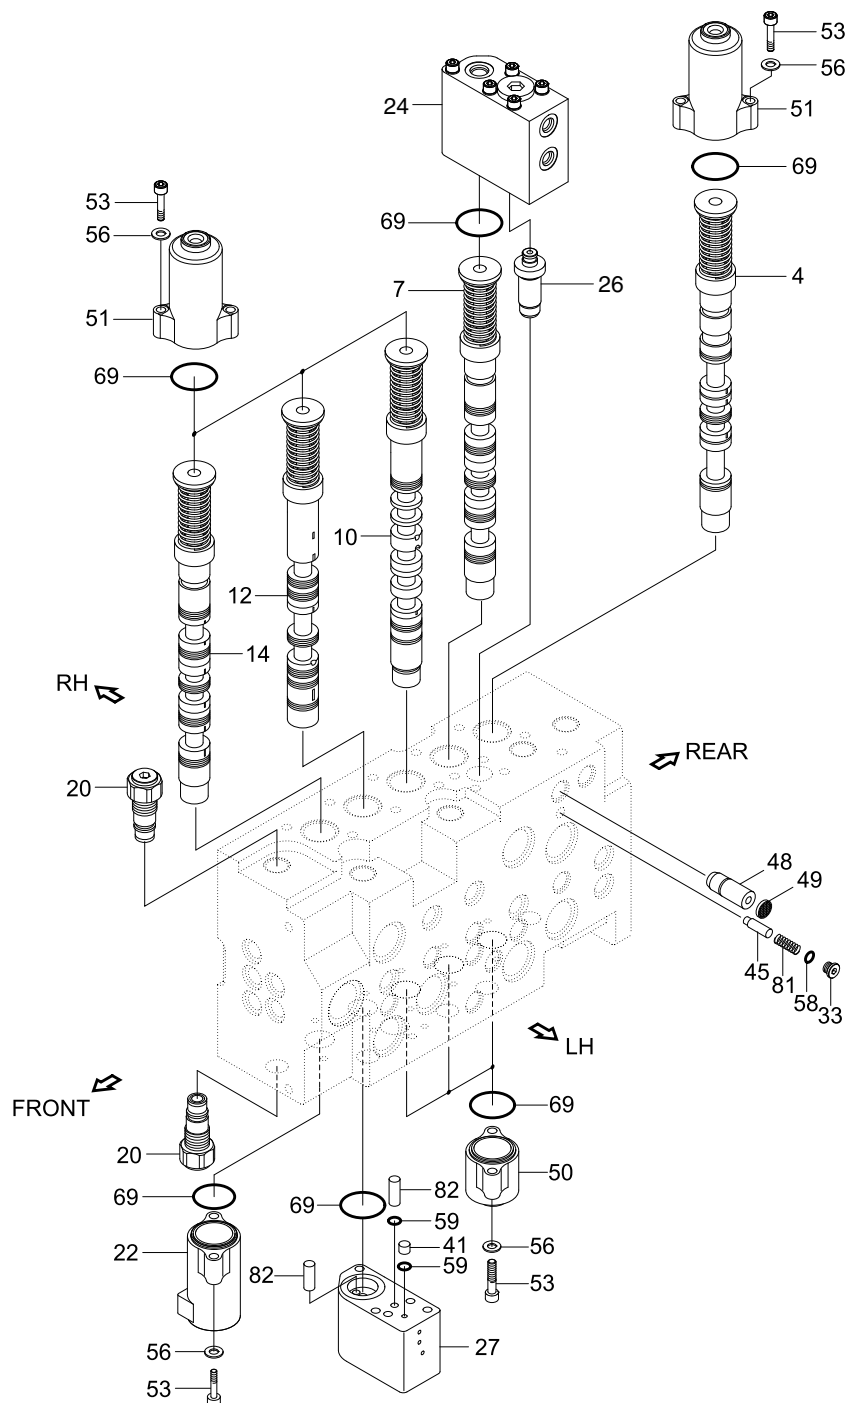

140A8MC04

- | | | | | | |
|----|------------------------|----|--------------------|----|------------------|
| 1 | Housing-P1 | 26 | Lock valve kit B | 51 | Pilot B1 cap |
| 4 | Spool assy-travel (LH) | 27 | Regeneration block | 53 | Socket head bolt |
| 7 | Spool assy-boom 1 | 33 | Plug | 56 | Plain washer |
| 10 | Spool assy-arm 2 | 41 | Orifice plug | 58 | O-ring |
| 12 | Spool assy-arm regen | 42 | Plug | 59 | O-ring |
| 14 | Spool assy-bucket | 45 | Signal poppet | 69 | O-ring |
| 20 | Nega con relief valve | 48 | Signal orifice | 81 | Check spring |
| 22 | Bucket stroke limiter | 49 | Coin type filter | 82 | Regeneration pin |
| 24 | Holding valve kit A1 | 50 | Pilot A cap | | |

STRUCTURE (2/4)

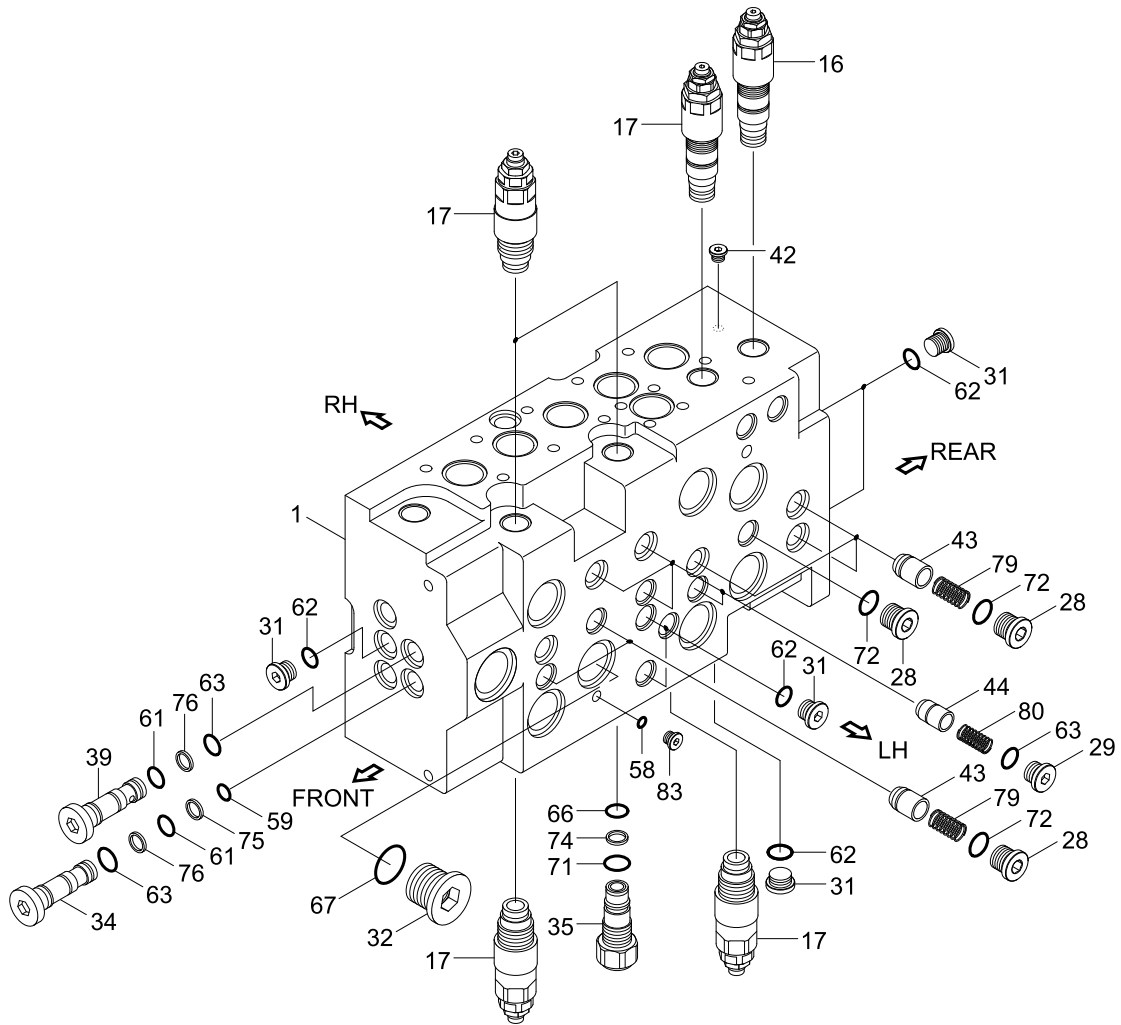


140A8MC05

- 16 Main relief valve
- 17 Overload relief valve
- 28 Plug
- 29 Plug
- 31 Plug
- 32 Plug
- 35 Plug
- 39 Plug
- 42 Plug

- 43 Poppet
- 44 Poppet
- 58 O-ring
- 59 O-ring
- 61 O-ring
- 62 O-ring
- 63 O-ring
- 66 O-ring
- 67 O-ring

- 71 O-ring
- 72 O-ring
- 74 Back up ring
- 75 Back up ring
- 76 Back up ring
- 79 Spring
- 80 Spring
- 83 Plug


STRUCTURE (3/4)

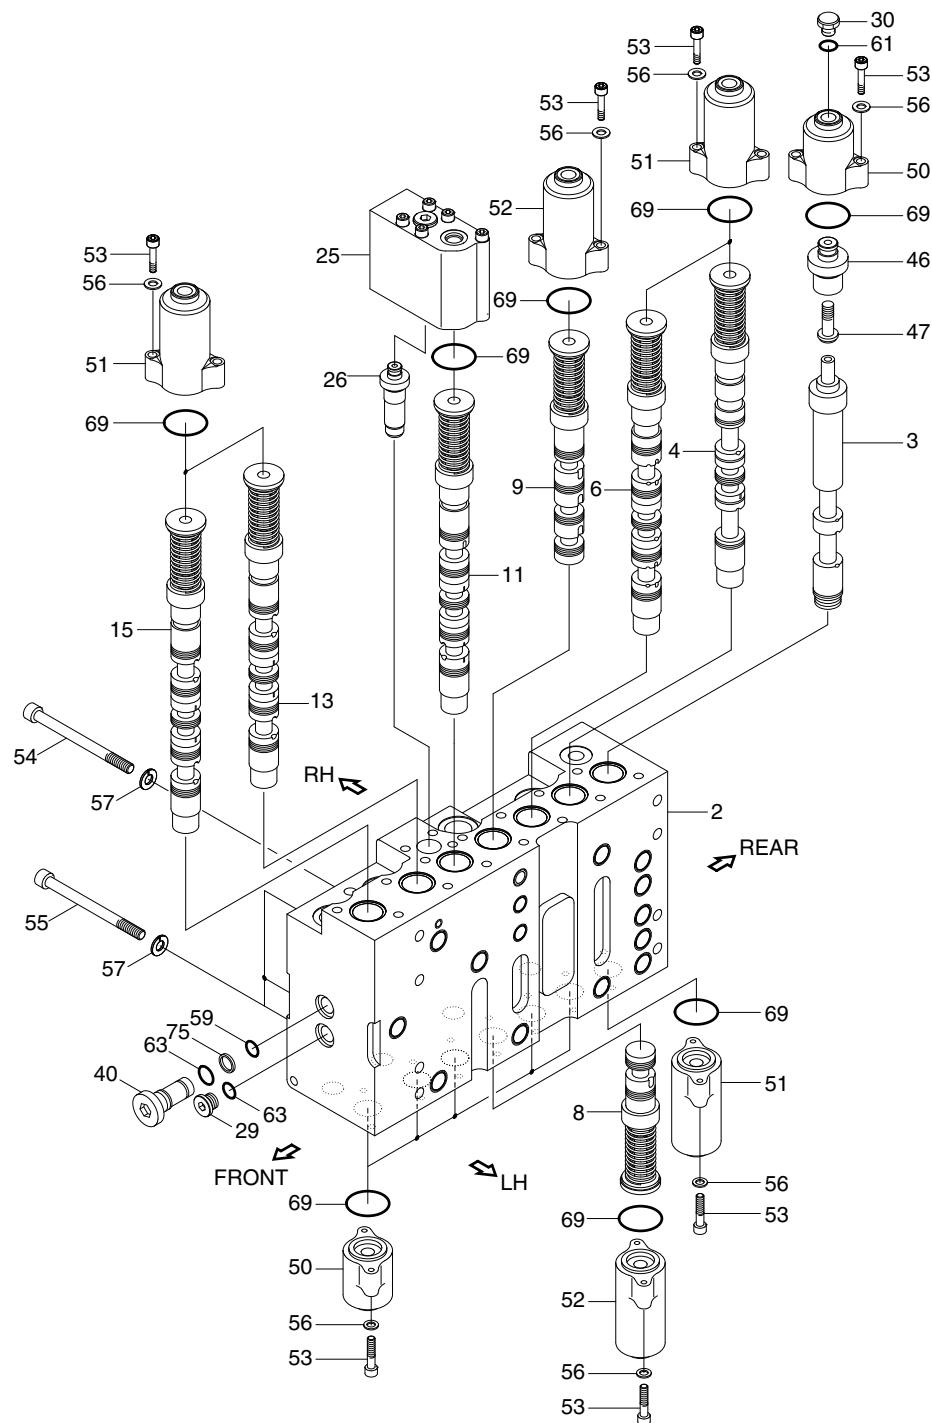

140L8MC06

2	Housing-P2	26	Lock valve kit B	54	Socket head bolt
3	Spool assy-straight travel	29	Plug	55	Socket head bolt
4	Spool assy-travel(RH)	30	Plug	56	Plain washer
6	Spool assy-swing	40	Plug	57	Spring washer
8	Spool assy-swing priority	46	T/straighe sleeve	59	O-ring
9	Spool assy-boom 2	47	T/straight piston	61	O-ring
11	Spool assy-arm 1	50	Pilot A cap	63	O-ring
13	Spool assy-option B	51	Pilot cap	69	O-ring
15	Spool assy-option C	52	Pilot B cap	75	Back up ring
25	Arm 1 holding valve kit A2	53	Socket head bolt		

STRUCTURE (4/4)

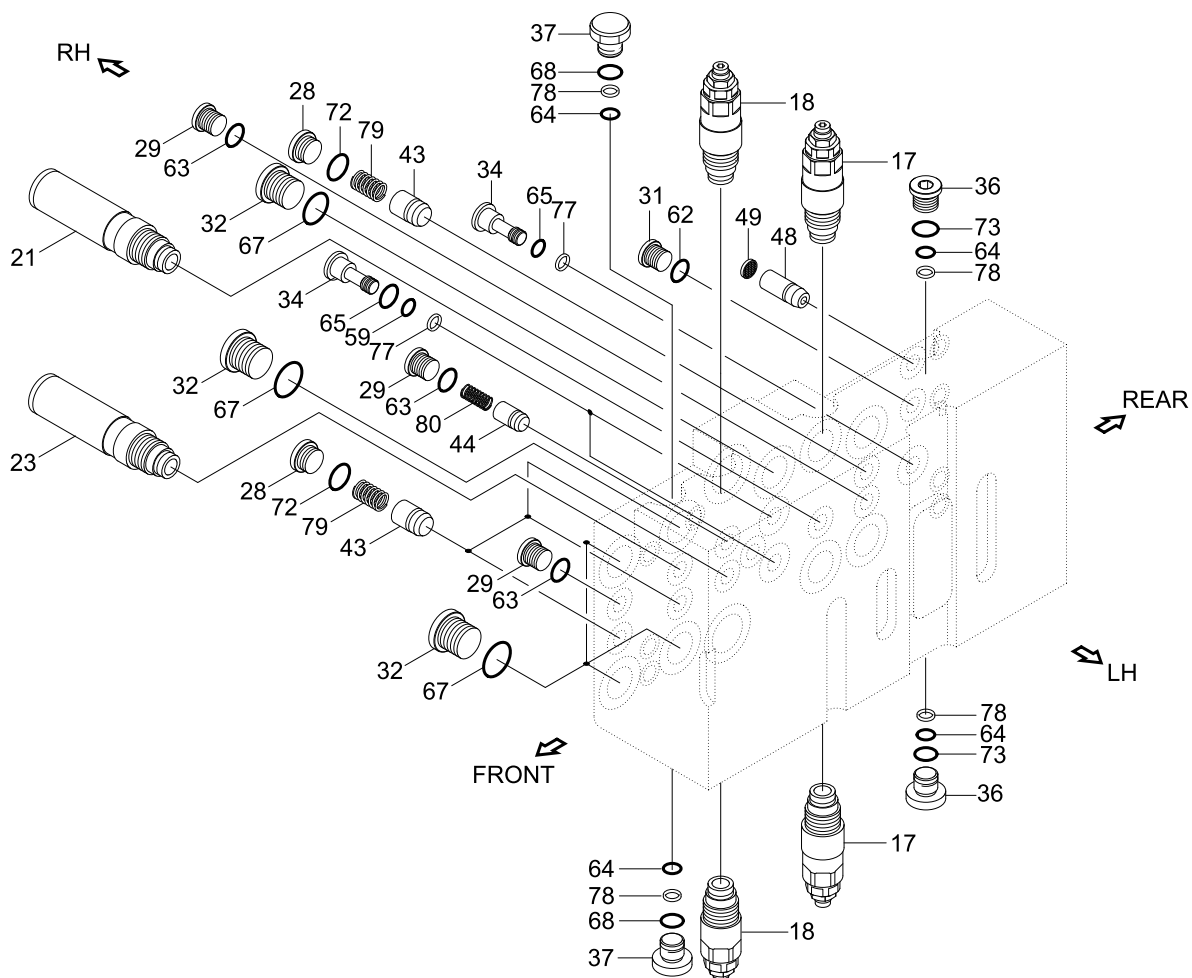

- 17 Overload relief valve
- 18 Overload relief valve
- 21 Swing logic valve
- 23 ON/OFF valve-option
- 28 Plug
- 29 Plug
- 31 Plug
- 32 Plug
- 34 Plug

- 36 Plug
- 37 Plug
- 43 Poppet
- 44 Poppet
- 48 Orifice
- 49 Coin type filter
- 62 O-ring
- 63 O-ring
- 64 O-ring

- 65 O-ring
- 67 O-ring
- 68 O-ring
- 72 O-ring
- 73 O-ring
- 77 Back up ring
- 78 Back up ring
- 79 Spring
- 80 Spring

140A8MC07

3. DISASSEMBLY AND ASSEMBLY

1) GENERAL PRECAUTIONS

- (1) All hydraulic components are manufactured to a high precision. Consequently, before disassembling and assembling them, it is essential to select an especially clean place.
- (2) In handling a control valve, pay full attention to prevent dust, sand, etc. from entering into it.
- (3) When a control valve is to be removed from the machine, apply caps and masking seals to all ports. Before disassembling the valve, recheck that these caps and masking seals are fitted completely, and then clean the outside of the assembly. Use a proper bench for working. Spread paper or a rubber mat on the bench, and disassemble the valve on it.
- (4) Support the body section carefully when carrying or transferring the control valve. Do not lift by the exposed spool, end cover section etc.
- (5) After disassembling and assembling of the component it is desired to carry out various tests (for the relief characteristics, leakage, flow resistance, etc.), but hydraulic test equipment is necessary for these tests. Therefore, even when its disassembling can be carried out technically, do not disassemble such components that cannot be tested, adjusted, and so on. Additionally one should always prepare clean cleaning oil, hydraulic oil, grease, etc. beforehand.

2) TOOLS


Before disassembling the control valve, prepare the following tools beforehand.

Name of tool	Quantity	Size (mm)
Vice mounted on bench (soft jaws)	1 unit	
Hexagon wrench	Each 1 piece	5, 6, 10, 12 and 14
Socket wrench	Each 1 piece	27 and 32
Spanner	Each 1 piece	32 (main relief valve, overload relief valve, negative relief valve) 26 (holding valve)

3) DISASSEMBLY

(1) Disassembly of spools without holding valve (travel right, travel left)


- ① Loosen hexagon socket head bolts with washer.
(hexagon wrench : 5 mm)
- ② Remove the pilot cover.
- ※ Pay attention not to lose the O-ring under the pilot cover.
- ③ Remove the spool assembly from the body by hand slightly.
- ※ When extracting each spool from its body, pay attention not to damage the body.
- ※ When extracting each spool assembly, it must be extracted from spring side only.
- ※ When any abnormal parts are found, replace it with completely new spool assembly.
- ※ When disassembled, tag the components for identification so that they can be reassembled correctly.

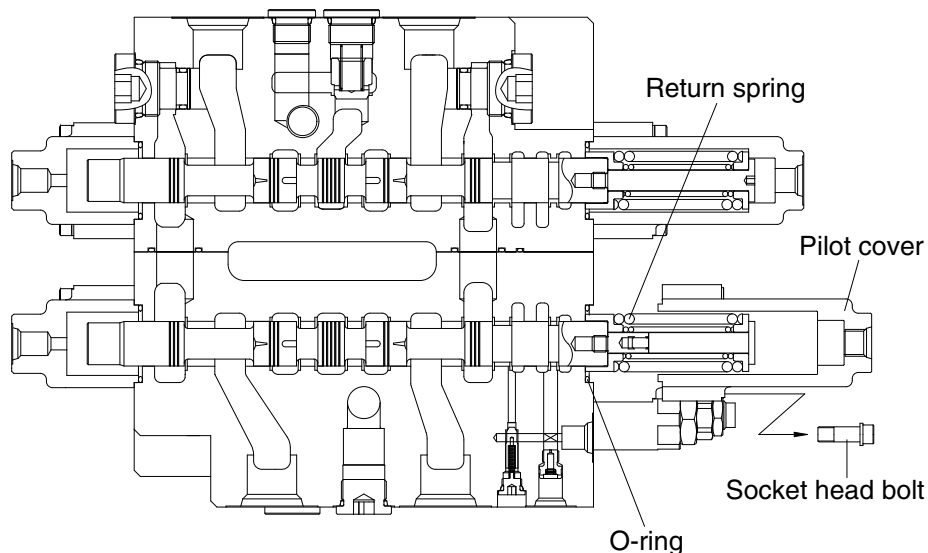

14098MC10

(2) Disassembly of spools with holding valve (boom 1, Arm 1 spool)


- ① Loosen hexagon socket head bolts with washer.
(hexagon wrench : 5 mm)
- ② Remove the pilot cover with internal parts.
 - ※ Pay attention not to lose the O-ring and the poppet under the pilot cover.
 - ※ Pay attention not to damage the "piston A" under pilot cover.
- ③ Remove the spool assembly from the body by hand slightly.
 - ※ When extracting each spool from its body, pay attention not to damage the body.
 - ※ When extracting each spool assembly, it must be extracted from spring side only.
 - ※ When any abnormal parts are found, replace it with completely new spool assembly.
 - ※ When disassembled, tag the components for identification so that they can be reassembled correctly.

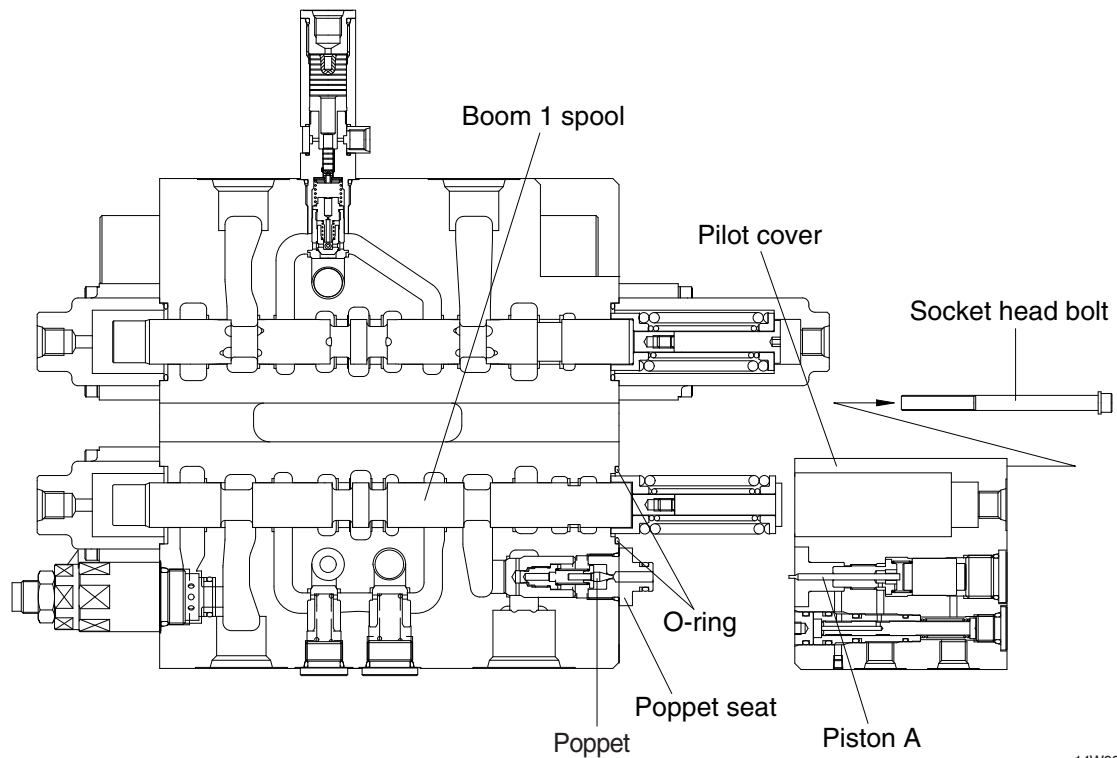

14W98MC11

(3) Disassembly of the holding valve

- ① Remove the pilot cover with the holding valve as described on previous page.
 - ※ Do not disassemble internal parts of the pilot cover.
- ② Loosen the poppet seat and remove the poppet, spring seat, spring and check.
(spanner : 26 mm)
 - ※ Pay attention not to lose the poppet.
 - ※ Do not disassemble internal parts of the check.

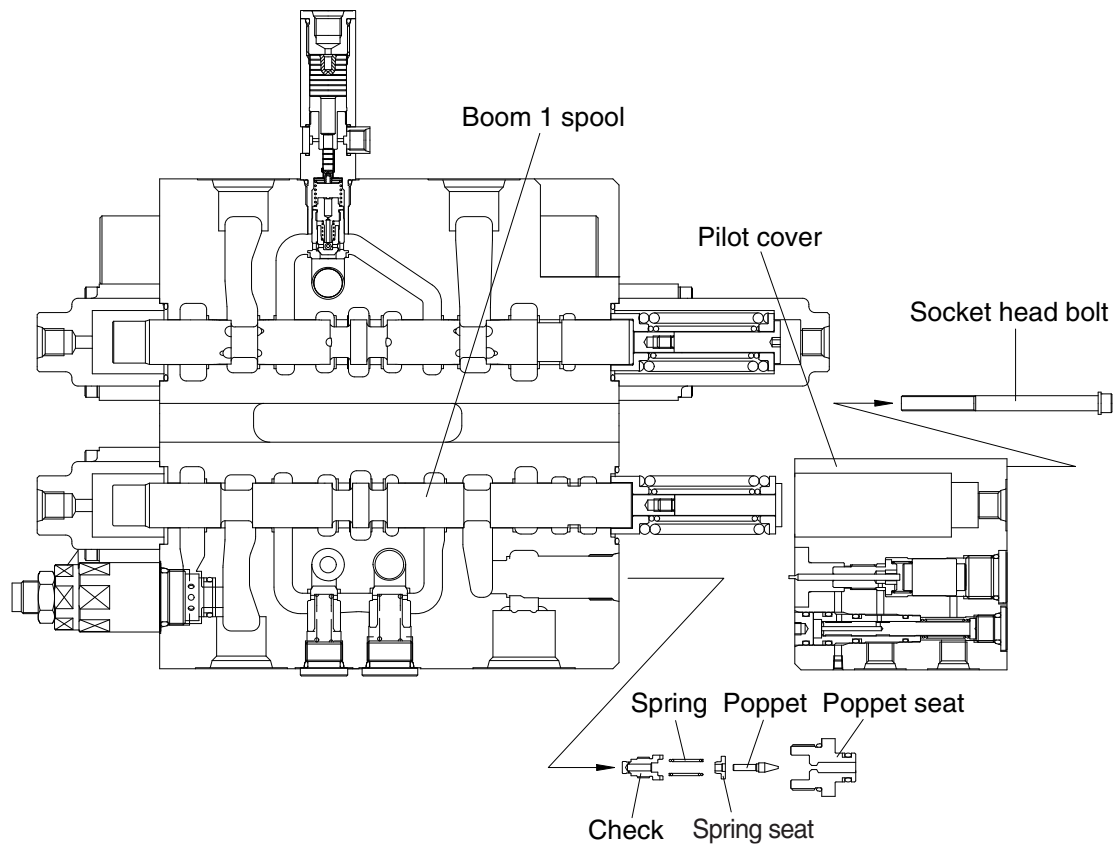

14W98MC12

(4) Disassembly of the load check valve and the negative relief valve

① The load check valve

a. Fix the body to suitable work bench.

※ Pay attention not to damage the body.


b. Loosen the plug (hexagon wrench : 10 mm).

c. Remove the spring and the load check valve with pincers or magnet.

② The negative relief valve

a. Loosen the socket (spanner : 32 mm).

b. Remove the spring, spring holder, piston and negative control poppet.

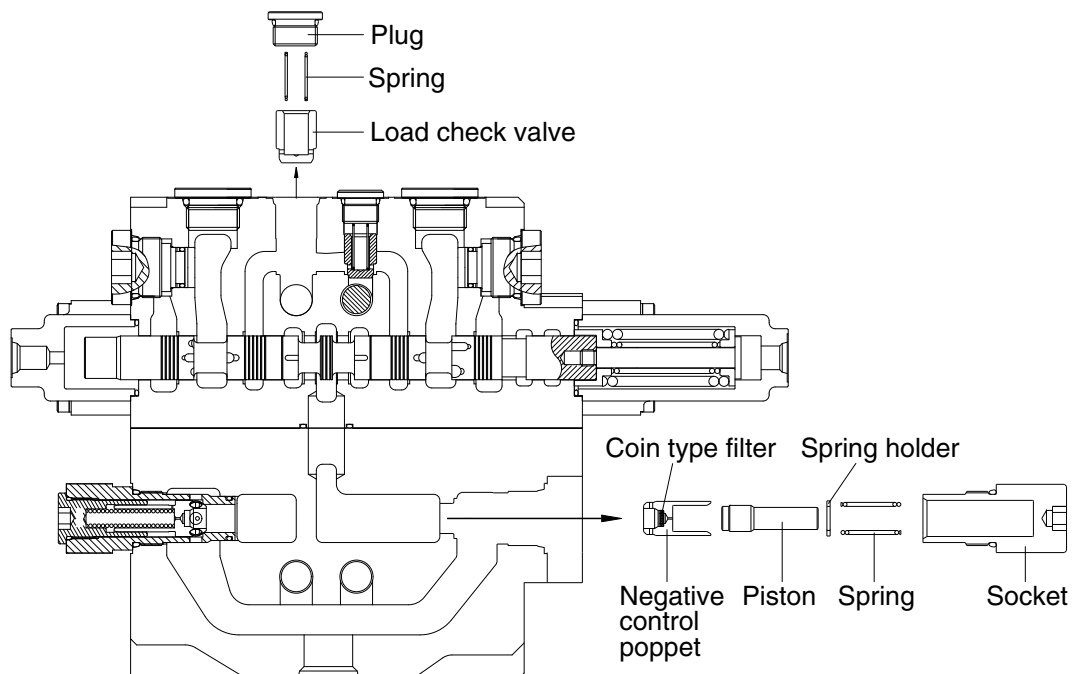

14W98MC13

(5) Disassembly of the main and overload relief valve

① Fix the body to suitable work bench.



② Remove the main relief valve.
(spanner : 32 mm)

③ Remove the overload relief valve.
(spanner : 32 mm)

※ When disassembled, tag the relief valve for identification so that they can be reassembled correctly.

※ Pay attention not to damage seat face.

※ When any abnormal parts are found, replace it with completely new relief valve assembly.

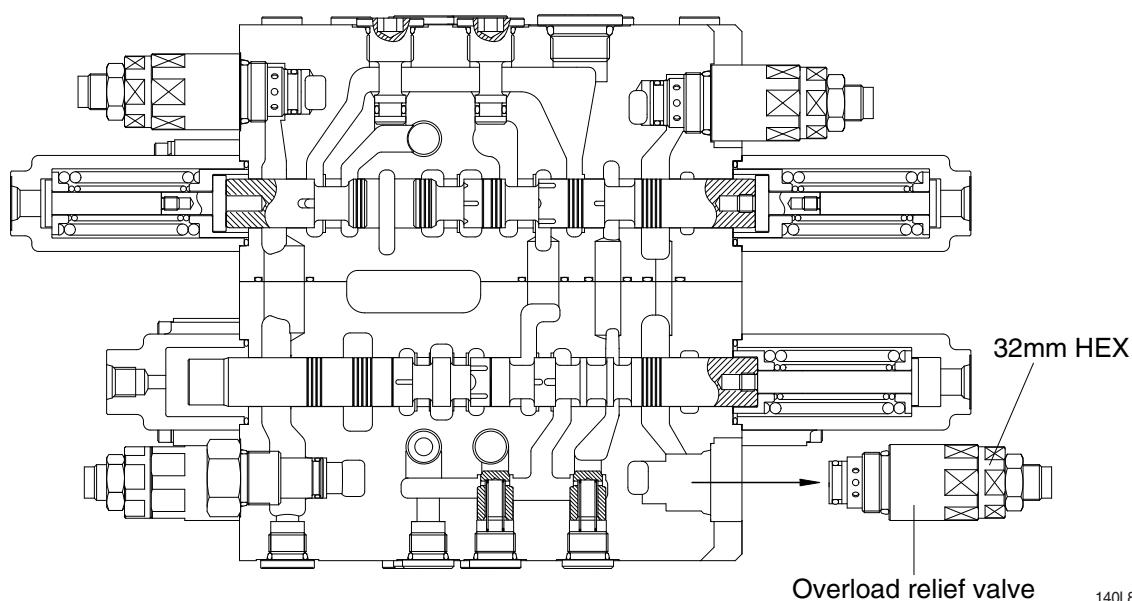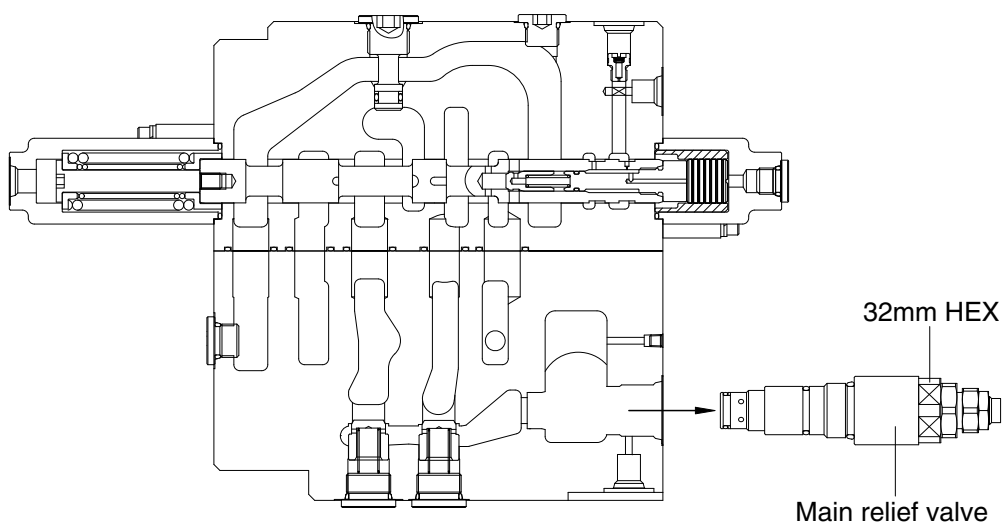

140L8MC14

(6) Inspection after disassembly

Clean all disassembled parts with clean mineral oil fully, and dry them with compressed air. Then, place them on clean papers or cloths for inspection.

① Control valve

- a. Check whole surfaces of all parts for burrs, scratches, notches and other defects.
- b. Confirm that seal groove faces of body and block are smooth and free of dust, dent, rust etc.
- c. Correct dents and damages and check seat faces within the body, if any, by lapping.
※ Pay careful attention not to leave any lapping agent within the body.
- d. Confirm that all sliding and fitting parts can be moved manually and that all grooves and path's are free foreign matter.
- e. If any spring is broken or deformed, replace it with new one.
- f. When a relief valve does not function properly, repair it, following it's the prescribed disassembly and assembly procedures.
- g. Replace all seals and O-rings with new ones.

② Relief valve

- a. Confirm that all seat faces at ends of all poppets and seats are free of defects and show uniform and consistent contact faces.
- b. Confirm manually that main poppet and seat can slide lightly and smoothly.
- c. Confirm that outside face of main poppet and inside face of seat are free from scratches and so on.
- d. Confirm that springs are free from breakage, deformation, and wear.
- e. Confirm that orifices of main poppet and seat section are not clogged with foreign matter.
- f. Replace all O-rings with new ones.
- g. When any light damage is found in above inspections, correct it by lapping.
- h. When any abnormal part is found, replace it with a completely new relief valve assembly.

4) ASSEMBLY

(1) General precaution

- ① In this assembly section, explanation only is shown.
For further understanding, please refer to the figures shown in the previous structure & disassembly section.
- ② Pay close attention to keeping all seals free from handling damage and inspect carefully for damage before using them.
- ③ Apply clean grease or hydraulic oil to the seal so as to ensure it is fully lubricated before assembly.
Do not stretch seals so much as to deform them permanently.
- ④ In fitting O-rings, pay close attention not to roll them into their final position in addition, a twisted
- ⑤ O-ring cannot easily untwist itself naturally and could thereby cause inadequate sealing and thereby both internal and external oil leakage.
- ⑥ Tighten fitting bolts for all sections with a torque wrench adjusted to the respective tightening torque.
- ⑦ Do not reuse removed O-rings and seals.

(2) Load check valve

- ① Assemble the load check valve and spring.
- ② Put O-rings on to plug.
- ③ Tighten plug to the specified torque.
 - Hexagon wrench : 10 mm
 - Tightening torque : 6~7 kgf · m (43.4~50.6 lbf · ft)

(3) Negative control relief valve

- ① Assemble the nega-con poppet, piston, spring holder and spring together into body.
- ② Put O-ring on to plug and tighten the latter to its specified torque.
 - Hexagon wrench : 12 mm
 - Tightening torque : 8~9 kgf · m (57.8~65.1 lbf · ft)

(4) Main relief, overload relief valves

Install main relief valve, overload relief valve into the body and tighten to the specified torque.

Component	Tools	Tightening torque	
		kgf · m	lbf · ft
Main relief valve	Spanner 32 mm	8~9	57.8~65.1
Overload relief valve	Spanner 32 mm	8~9	57.8~65.1

(5) Main spools

- ① Carefully insert the previously assembled spool assemblies into their respective bores within of body.
- ※ Fit spool assemblies into body carefully and slowly. Do not under any circumstances push them forcibly in.

(6) Pilot covers

- ① Fit spool covers to the non-spring assembly end of the spool, and tighten the hexagonal socket head bolts to the specified torque.

- Hexagon wrench : 5 mm
- Tightening torque : 1.0~1.1 kgf · m (7.2~7.9 lbf · ft)

※ Confirm that O-rings have been fitted.

- ② Fit spring covers to the spring end for the spools, and tighten hexagon socket head bolts to the specified torque.

- Hexagon wrench : 5mm
- Tightening torque : 1.0~1.1 kgf·m (7.2~7.9 lbf·ft)

※ Confirm that O-rings have been fitted.

(7) Holding valves

- ① Assemble the check, spring seat and poppet together into body.

- ② Tighten the poppet seat to the specified torque.

- Spanner : 26 mm
- Tightening torque : 6~7 kgf · m (43.4~50.6 lbf · ft)

- ③ Fit the "piston A" under pilot cover with internal parts into hole on the poppet seat.

- ④ Tighten hexagon socket head bolt to specified torque.

- Hexagon wrench : 5mm
- Tightening torque : 1.0~1.1 kgf · m (7.2~7.9 lbf · ft)

GROUP 5 SWING DEVICE

1. REMOVAL AND INSTALL OF MOTOR

1) REMOVAL

- (1) Lower the work equipment to the ground and stop the engine.
- (2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.
- (3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ Escaping fluid under pressure can penetrate the skin causing serious injury.



※ When pipes and hoses are disconnected, the oil inside the piping will flow out, so catch it in oil pan.

- (4) Disconnect hose assembly (2).
- (5) Disconnect pilot line hoses (3, 4, 5).
- (6) Sling the swing motor assembly (1) and remove the swing motor mounting socket bolts (9).
 - Weight : 130 kg (287 lb)
 - Tightening torque : $29.6 \pm 3.2 \text{ kgf} \cdot \text{m}$
($214 \pm 23.1 \text{ lbf} \cdot \text{ft}$)

- (7) Remove the swing motor assembly.
 - ※ When removing the swing motor assembly, check that all the piping have been disconnected.



2) INSTALL

- (1) Carry out installation in the reverse order to removal.
- (2) Bleed the air from the swing motor.
 - ① Remove the air vent plug.
 - ② Pour in hydraulic oil until it overflows from the port.
 - ③ Tighten plug lightly.
 - ④ Start the engine, run at low idling and check oil come out from plug.
 - ⑤ Tighten plug fully.
- (3) Confirm the hydraulic oil level and check the hydraulic oil leak or not.

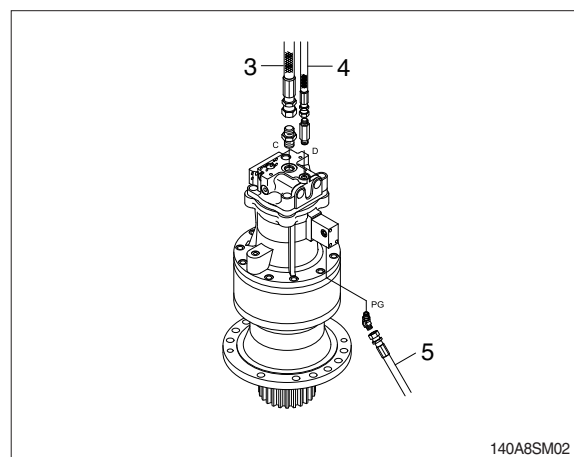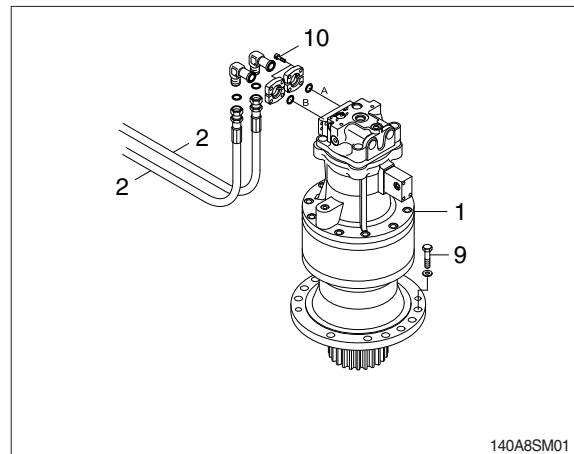

2. DISASSEMBLY AND ASSEMBLY OF SWING MOTOR

1) STRUCTURE

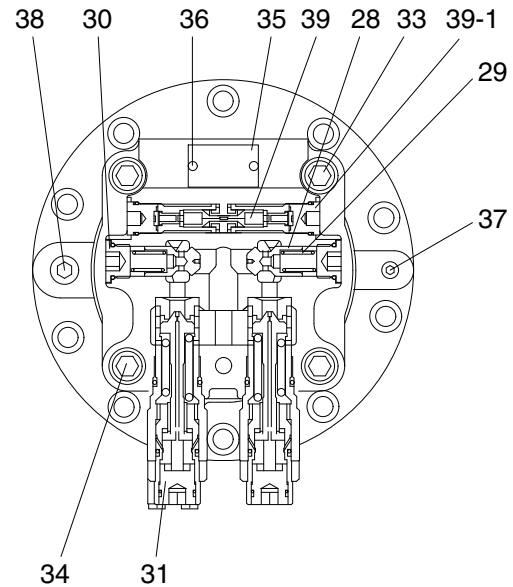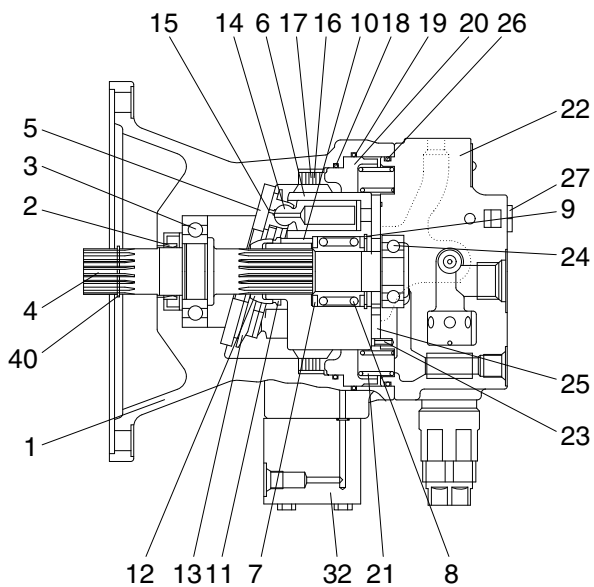

140A2SM02

1 Casing	15 Shoe	29 Spring
2 Oil seal	16 Separate plate	30 Plug assy
3 Ball bearing	17 Friction plate	31 Relief valve assy
4 Drive shaft	18 O-ring	32 Port block assy
5 Shoe plate	19 O-ring	33 Socket bolt
6 Rotary block	20 Brake piston	34 Socket bolt
7 Washer	21 Spring	35 Name plate
8 Spring	22 Valve casing	36 Screw
9 Snap ring	23 Spring pin	37 Plug
10 Roller	24 Ball bearing	38 Plug
11 Collar washer	25 Valve plate	39 Reactionless valve assy
12 Thrust ball	26 O-ring	39-1 Plug
13 Retainer plate	27 Plug assy	40 Snap ring
14 Piston	28 Plunger	41 Socket bolt

2) DISASSEMBLY

※ Some illustrations can be different from the machine.

- (1) For easy assembly, put motor on worktable with the spline side of shaft (4) facing downwards.
- ※ Lay rubber plate on worktable and take care not to damage the components.



125LCR8SM03

- (2) Remove snap ring (40) using snap ring plier.



125LCR8SM04

- (3) Disassemble level gauge assembly (if equipped) using pipe wrench.



125LCR8SM05

- (4) Disassemble two sets of relief valve assembly (51) using socket wrench.




125LCR8SM06

- (5) Unscrew M16 socket bolt 33 (2ea), 34 (2ea) using 14 mm hexagon wrench.



125LCR8SM07

- (6) Remove valve plate (25) from valve casing.
※ Take care not to drop the valve plate (25).

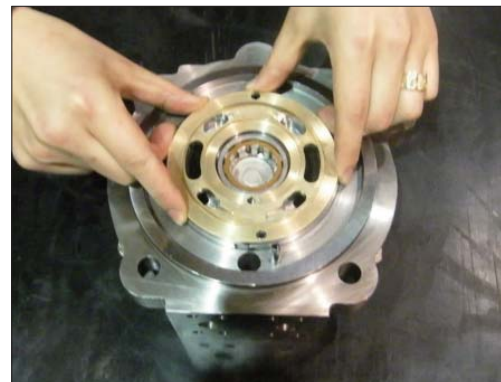


125LCR8SM08

- (7) Remove O-ring (19) from valve casing.



125LCR8SM09

- (8) Remove plug (39-1) using hexagon wrench and take out reactionless valve assembly (39). (same for the set on opposite side)

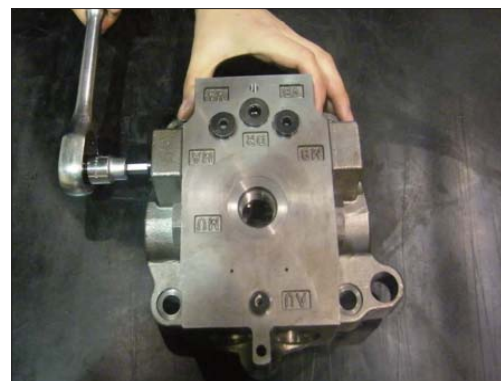

125LCR8SM10

- (9) Remove plug assy (27) (2ea) using 6 mm hexagon wrench.



125LCR8SM11

- (10) Remove plug assy (30) using 17 mm socket wrench and separate spring ; spring (29) and plunger (28). (same for the set on opposite side)



125LCR8SM12

- (11) Remove spring (21) (22ea) from brake piston.



125LCR8SM15

- (12) Disassemble brake piston (20) from casing using air gun.



125LCR8SM16

- (13) Lay casing down horizontally and remove rotary block assembly from shaft.
And remove all friction plate (17) and separate plate (16).



125LCR8SM17

- (14) Separate piston assembly (14, 15), trust ball (12), retainer plate (13).



125LCR8SM18

- (15) Remove O-ring (18) from casing.



125LCR8SM19

- (16) Use a magnet to separate shoe plate (5) from casing.
※ Sliding surface should be carefully treated to avoid scratches and damage.



125LCR8SM20

(17) Disassemble drive shaft (4) and ball bearing (3).

※ Do not remove ball bearing (5) unless malfunction is detected, since it is mounted by shrink fit.



125LCR8SM21

(18) Turn casing (1) upside down and remove oil seal (2) using jig.



125LCR8SM22

3) ASSEMBLY

※ Even though assembly is accomplished by reversing disassembly steps, be careful of the following.

- ① Repair the damaged part when disassembling and prepare parts for exchange in advance.
- ② All parts should be cleaned with cleaner, dried with compressed air.
- ③ Sliding surface, O-ring, bearing and oil seal should be lubricated with clean hydraulic oil, prior to final assembly.
- ④ Replacement of O-ring and oil seal with new parts is generally recommended.
- ⑤ Use a torque wrench to make sure that assembly fasteners are tightened to specified values.
- ⑥ When assembling bolt, spread loctite.

(1) Put casing (1) on worktable.

Press oil seal (2) using oil seal jig, until it reach the bottom.

※ Spread grease on external diameter of oil seal.



125LCR8SM23

(2) Mount ball bearing (3, 24) on drive shaft (4) using shrink fitting method.



125LCR8SM24

- (3) Assemble shaft assembly in casing using urethane hammer.
※ Take care not to damage oil seal.



125LCR8SM25

- (4) Insert shoe plate (5).
※ Take care not to damage sliding surface.



125LCR8SM26

- (5) After applying grease on O-ring (18), insert O-ring in casing (1).




125LCR8SM27

- (6) Assemble cylinder spring (8) (9ea) in rotary block (6).



125LCR8SM28

- (7) Assemble thrust ball (12) in cylinder block.
※ Take care not to damage sliding surface of cylinder block.

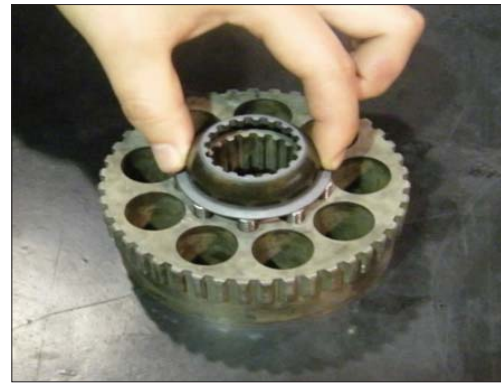

125LCR8SM29

- (8) Insert piston assembly (14, 15) in retainer plate (13).
※ Do not mix piston with other piston (9ea/1set).
※ Spread sufficient amount of hydraulic oil on piston assembly.



125LCR8SM30

- (9) Place all 9 pistons simultaneously into the holes of rotary block.
※ Take care not to damage sliding surface.



125LCR8SM31

- (10) Lay casing down horizontally and put rotary block assembly in casing.
※ Check whether rotary block assembly rotates smoothly.



125LCR8SM32


(11) Put friction plate (17) in casing.



125LCR8SM33

(12) Put separate plate (16) in casing.

※ Put friction plate and separate plate alternately.

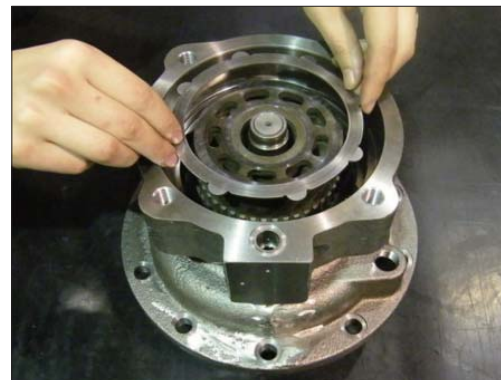

125LCR8SM34

(13) Assemble O-ring (19) in brake piston (20).

※ Apply grease on O-ring.



125LCR8SM35

(14) Assemble parking piston (20) in casing using jig.

※ Pay attention to the hole location of parking piston.



125LCR8SM36

(15) Put spring (21) (22ea) in each hole of brake piston.



125LCR8SM37


(16) Assemble plug (27) using 6 mm hexagon wrench.

※ Tightening torque : $4.5 \pm 0.45 \text{ kgf} \cdot \text{m}$
($32.5 \pm 3.3 \text{ lbf} \cdot \text{ft}$)




125LCR8SM41

(17) Assemble reactionless valve assembly (39) in valve casing.

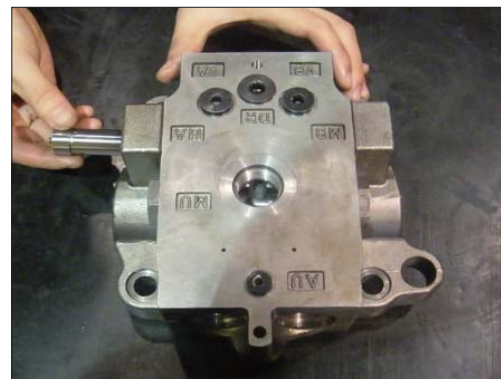

125LCR8SM43

(18) Assemble plug (39-1) using hexagon wrench.

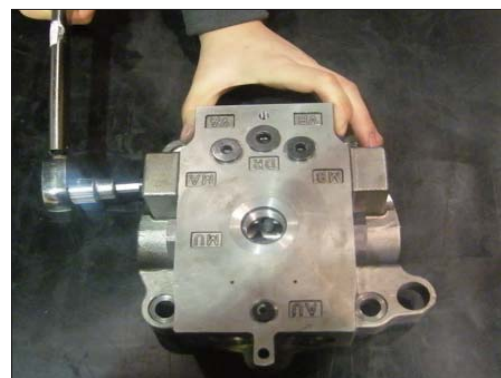

125LCR8SM44

(19) Caulk plunger (28) using jig. (same for the set on opposite side)



125LCR8SM45

(20) Assemble spring (29), plug (30). (in that order)
(same for the set on opposite side)



125LCR8SM46

(21) Assemble spring pin (23) in valve casing using jig.



125LCR8SM47

(22) Assemble O-ring (19) & ball bearing (24) in valve casing.

※ Use jig (press fit or cold shrink fit).



125LCR8SM48

(23) Apply grease on steel side of valve plate (25) to prevent plate from sliding.

Assemble valve plate with the copper side facing upwards.


- ※ Pay attention to the assembly direction.
- ※ Take care not to damage sliding surface.



125LCR8SM49

(24) Assemble valve casing by matching its holes and pins of casing and parking piston. And tighten M16 socket bolt 33 (2ea), 34 (2ea) using 14 mm hexagon wrench.

- ※ Make sure valve plate stays in place.
- ※ When tightening bolts, make sure mating surfaces between casing and valve casing maintain parallel to each other.

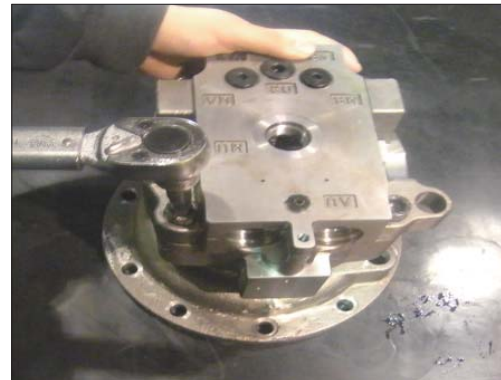

125LCR8SM50

(25) Assemble relief valve assembly (31) using socket wrench in valve casing.

- ※ Spread grease on O-ring part of relief valve assembly.



125LCR8SM51

(26) Assemble snap ring (40) in shaft by using snap ring plier.



125LCR8SM52

(27) Wrap teflon tape 2 or 3 times around the tap part of level gauge assembly (if equipped).
And assemble it using pipe wrench.



125LCR6SM53

3. REMOVAL AND INSTALL OF REDUCTION GEAR


1) REMOVAL

- (1) Remove the swing motor assembly.
For details, see removal of swing motor assembly.
- (2) Sling reduction gear assembly (1) and remove dowel pin (3) and mounting bolts (2).
- (3) Remove the reduction gear assembly.
 - Reduction gear device weight : 75 kg
(165 lb)




2) INSTALL

- (1) Carry out installation in the reverse order to removal.
 - Tightening torque : 29.6 ± 3.2 kgf · m
(214 ± 23.1 lbf · ft)

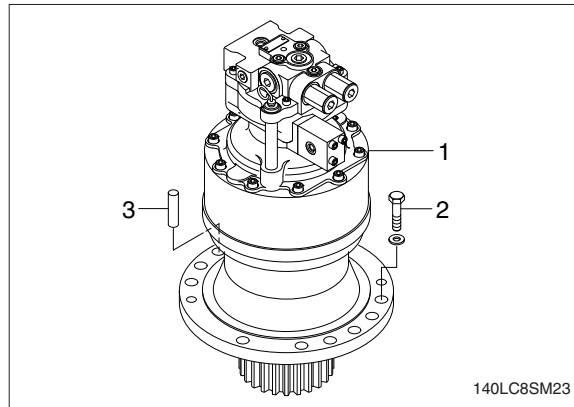

4. DISASSEMBLY AND ASSEMBLY OF REDUCTION GEAR

1) STRUCTURE

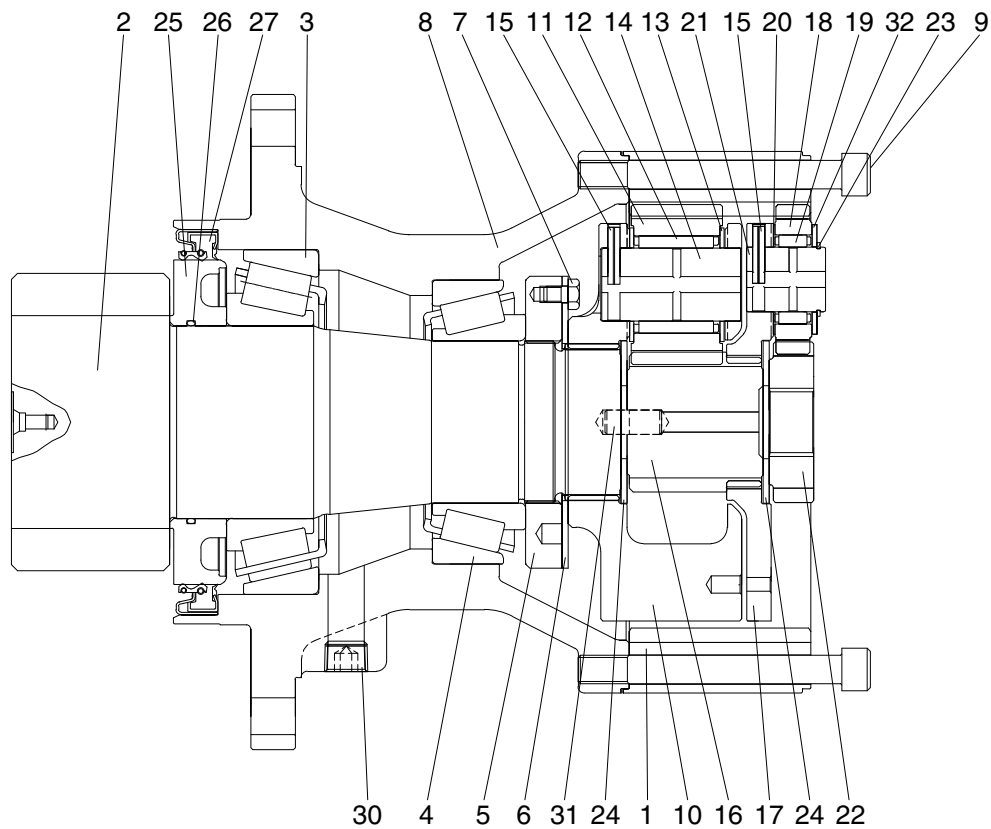

125LCR2SM23

1	Ring gear	11	Planetary gear No. 2	21	Carrier pin No. 1
2	Drive shaft	12	Needle bearing	22	Sun gear No. 1
3	Taper roller bearing	13	Thrust washer	23	Snap ring
4	Taper roller bearing	14	Carrier pin No. 2	24	Thrust plate
5	Ring nut	15	Spring pin	25	Sleeve
6	Lock plate	16	Sun gear No. 2	26	O-ring
7	Hexagon bolt	17	Carrier No. 1	27	Oil seal
8	Casing	18	Planetary gear No. 1	30	Socket plug
9	Socket bolt	19	Needle bearing	31	Parallel pin
10	Carrier No. 2	20	Thrust washer	32	Thrust washer

2) DISASSEMBLY

- (1) Remove the swing motor, and then place swing reduction gear on the bench.



125LCR8SM60

- (2) Disassemble sun gear No.1 (22).



125LCR8SM61

- (3) Disassemble carrier No.1 sub assembly.



125LCR8SM62

Carrier No.1 sub assy disassembly

- (4) Put carrier No.1 sub assembly on the bench, then remove the snap ring (23).



125LCR8SM63

- (5) Disassemble thrust washer (upper) (32).(3 pcs)



125LCR8SM64

- (6) Disassemble planetary gear No.1 (18). (3 pcs)



125LCR8SM65

- (7) Disassemble thrust plate (24).



125LCR8SM66

- (8) Disassemble needle bearing (19). (3 pcs)



125LCR8SM67

(9) Disassemble thrust washer (lower) (20). (3 pcs)



125LCR8SM68

(10) After placing spring pin (15) to center of carrier pin No.1 (21) with a jig, disassemble it. (3 pcs)

※ Do not reuse spring pin, carrier and carrier pin.



125LCR8SM69

(11) Disassemble sun gear No.2 (16).



125LCR8SM70

(12) Disassemble carrier No.2 sub assembly.



125LCR8SM71

Carrier No.2 sub assy disassembly

(13) After placing spring pin (15) to center of carrier pin No.2 (14) with a press machine, disassemble it.(3 pcs)

※ Do not reuse spring pin.



125LCR8SM72

(14) Disassemble planetary gear No.2.(3 pcs)



125LCR8SM73

(15) Disassemble thrust plate (24).



125LCR8SM74

(16) Disassemble thrust washer No.2 (13).(6 pcs)



125LCR8SM75

(17) Disassemble needle bearing (12). (3 pcs)



125LCR8SM76

(18) Separate ring gear (1) from casing (8).



125LCR8SM77

(19) Loosen bolt (7) (4 pcs), and disassemble lock plate (6).



125LCR8SM78

(20) Disassemble ring nut (5) by using the jig.



125LCR8SM79

Drive shaft sub assy disassembly

- (21) Separate drive shaft sub assembly from casing (8).



- (22) Disassemble taper roller bearing (3) and oil seal (27) by using a press machine.



- (23) Disassemble sleeve (25) and O-ring (26).



- (24) Disassemble the outer ring of taper roller bearing (3) in casing (8) by using the jig.



3) ASSEMBLY

※ Even though assembly is accomplished by reversing disassembly steps, be careful of the following.

- ① Repair the damaged part when disassembling and prepare parts for exchange in advance.
- ② All parts should be cleaned with cleaner, dried with compressed air.
- ③ Sliding surface, O-ring, bearing and oil seal should be lubricated with clean hydraulic oil, prior to final assembly.
- ④ Replacement of O-ring and oil seal with new parts is generally recommended.
- ⑤ Use a torque wrench to make sure that assembly fasteners are tightened to specified values.
- ⑥ When assembling bolt, spread loctite.

Carrier No.1 sub assembly

- (1) After heating the carrier No.1 (17), assemble carrier pin No.1 (21) to the side without the hole.



125LCR8SM84


- (2) After drilling $\varnothing 6$ hole, assemble spring pin (15).(3 pcs)



125LCR8SM85

(3) Caulking is performed on the assembled spring pin unit.

※ To cover pins, implement the caulking in two places that are located direction of 180 degrees around assembled spring pin.

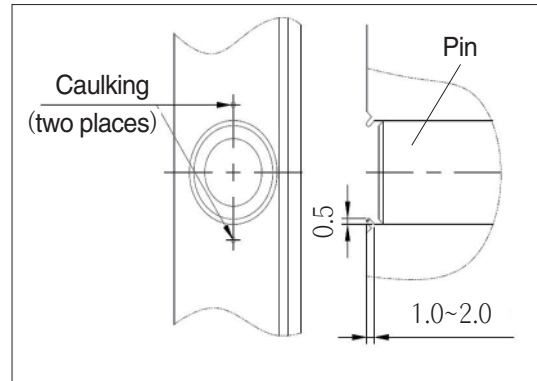

125LCR8SM86

(4) Assemble thrust washer (lower) (20). (3 pcs)



125LCR8SM87

(5) Assemble needle bearing (19).(3 pcs)



125LCR8SM88

(6) Assemble thrust plate (24).



125LCR8SM89

- (7) Assemble planetary gear No.1 (18) of which groove is faced downward.(3 pcs)



125LCR8SM90

- (8) Assemble thrust washer (upper) (32). (3 pcs)



125LCR8SM91

- (9) Assemble snap ring (23) (3 pcs), complete carrier No.1 sub assembly.

※ Gear rotation state should be smooth.



125LCR8SM92

Carrier No.2 sub assy assembly

- (10) Assemble needle bearing (12) in the planetary gear No.2 (11).



125LCR8SM93

- (11) After spreading grease on thrust washer (13), assemble it on both upper side and lower side of planetary gear No.2.



125LCR8SM94

- (12) Assemble thrust plate (24).



125LCR8SM95

- (13) Assemble planetary gear No.2 in the carrier No.2 (10).(3 pcs)

※ Thrust washer should not separated.



125LCR8SM96

- (14) Assemble carrier pin No.2 (14) to match the pin hole of the carrier No.2.(3 pcs)



125LCR8SM97


(15) Assemble spring pin (15).(3 pcs)



125LCR8SM98

(16) Caulking is performed on the assembled spring pin unit.

- ※ To cover pins, implement the caulking in two places that are located direction of 180 degrees around assembled spring pin.

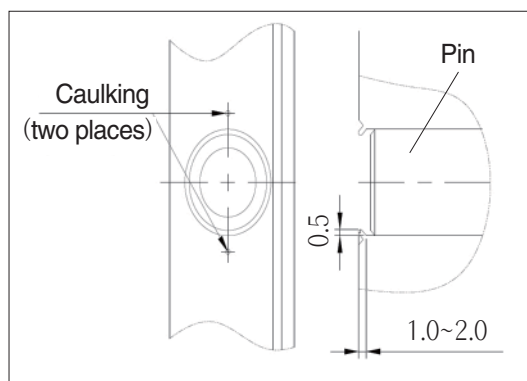

125LCR8SM99

Drive shaft sub assy assembly

(17) After heating sleeve (25), assemble O-ring (26) to groove of inside diameter in it.



125LCR8SM100

(18) Shrink fit the sleeve on drive shaft (2).

- ※ Be careful of fully seat at the bottom.



125LCR8SM101

- (19) Shrink fit taper roller bearing (3) on drive shaft, complete drive shaft sub assembly.



125LCR8SM102

Casing assembly

- (20) Press outer ring of the taper roller bearing in the casing (8) by using the jig.



125LCR8SM103

- (21) Press in oil seal (27) by using the jig.
※ Be careful of the direction of the assembly.



125LCR8SM104

- (22) Assemble drive shaft sub assembly.
※ Be careful of damage of oil seal.



125LCR8SM105

- (23) After fixing drive shaft so that it does not fall, and then turn it over, press taper bearing (4).



125LCR8SM106

- (24) Assemble nut ring (5) by using the jig.
※ Tightening torque : $3.5 \pm 0.4 \text{ kgf} \cdot \text{m}$
($25.3 \pm 2.9 \text{ lbf} \cdot \text{ft}$)



125LCR8SM107

- (25) Place lock plate (6) on the nut ring.




125LCR8SM108

- (26) After spreading loctite #242, assemble the bolt (7) (4 pcs).
※ Tightening torque : $2.5 \pm 0.25 \text{ kgf} \cdot \text{m}$
($18.1 \pm 1.8 \text{ lbf} \cdot \text{ft}$)




125LCR8SM109

(27) Press parallel pin (31) by using press machine.

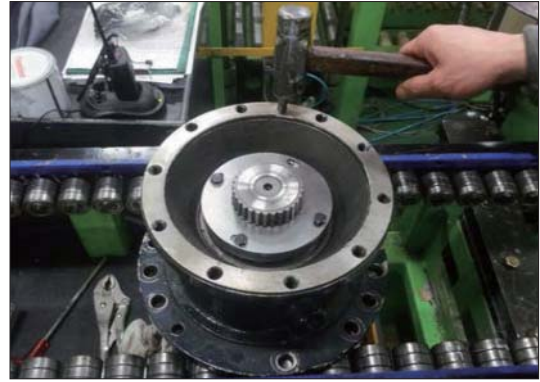

125LCR8SM110

(28) Spread the loctite #515 on the casing with reference to the right detail view.
※ Loctite should not flow into casing.

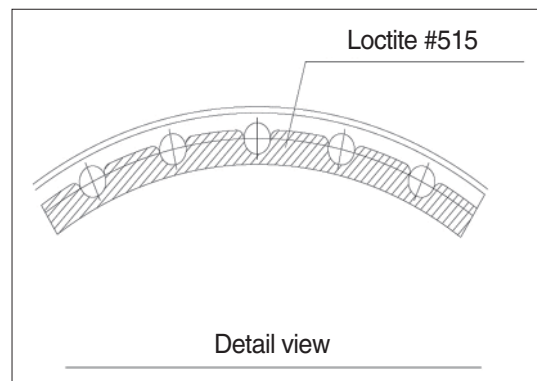

125LCR8SM111

(29) Assemble ring gear (1) in accordance with a pin hole on casing.
※ Be careful of damage of the ring gear.



125LCR8SM112

(30) Assemble carrier No.2 sub assembly.



125LCR8SM113

(31) Assemble sun gear No.2 (16).



125LCR8SM114

(32) Assemble carrier No.1 sub assembly.



125LCR8SM115

(33) Assemble sun gear No.1 (22) of which grinding surface is faced downward.



125LCR8SM116

(34) Fill with gear oil 3.5 liter.



125LCR8SM117

GROUP 6 TRAVEL DEVICE (TYPE 1)

1. REMOVAL AND INSTALL

1) REMOVAL

- (1) Swing the work equipment 90° and lower it completely to the ground.
- (2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.
- (3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ Escaping fluid under pressure can penetrate the skin causing serious injury.

※ When pipes and hoses are disconnected, the oil inside the piping will flow out, so catch it in oil pan.

- (4) Remove the track shoe assembly.
For details, see **removal of track shoe assembly**.

- (5) Remove the cover.

- (6) Remove the hose.

※ Fit blind plugs to the disconnected hoses.

- (7) Remove the bolts and the sprocket.


· Tightening torque : $29.7 \pm 3.0 \text{ kgf} \cdot \text{m}$
($215 \pm 21.7 \text{ lbf} \cdot \text{ft}$)

- (8) Sling travel device assembly (1).

- (9) Remove the mounting bolts (2), then remove the travel device assembly.

· Weight : 139 kg (306 lb)

· Tightening torque : $25.7 \pm 4.0 \text{ kgf} \cdot \text{m}$
($166 \pm 28.9 \text{ lbf} \cdot \text{ft}$)

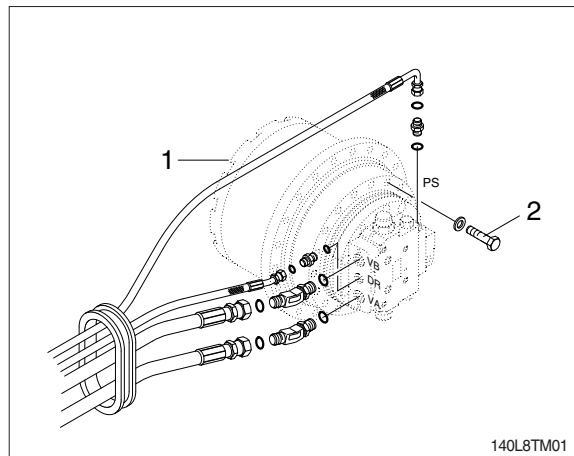

2) INSTALL

- (1) Carry out installation in the reverse order to removal.

- (2) Bleed the air from the travel motor.

① Remove the air vent plug.

② Pour in hydraulic oil until it overflows from the port.

③ Tighten plug lightly.



④ Start the engine, run at low idling, and check oil come out from plug.

⑤ Tighten plug fully.

- (3) Confirm the hydraulic oil level and check the hydraulic oil leak or not.

2. TRAVEL MOTOR

1) STRUCTURE

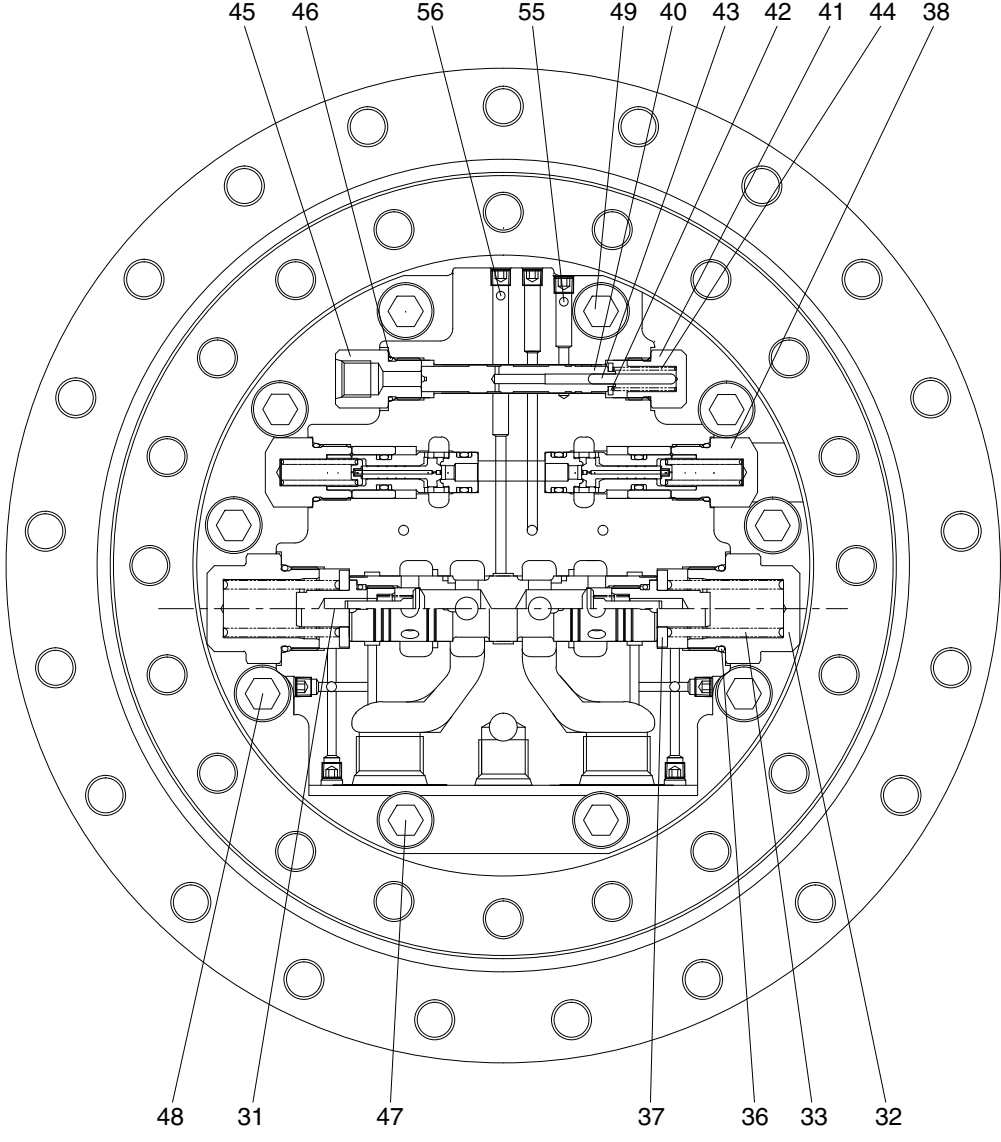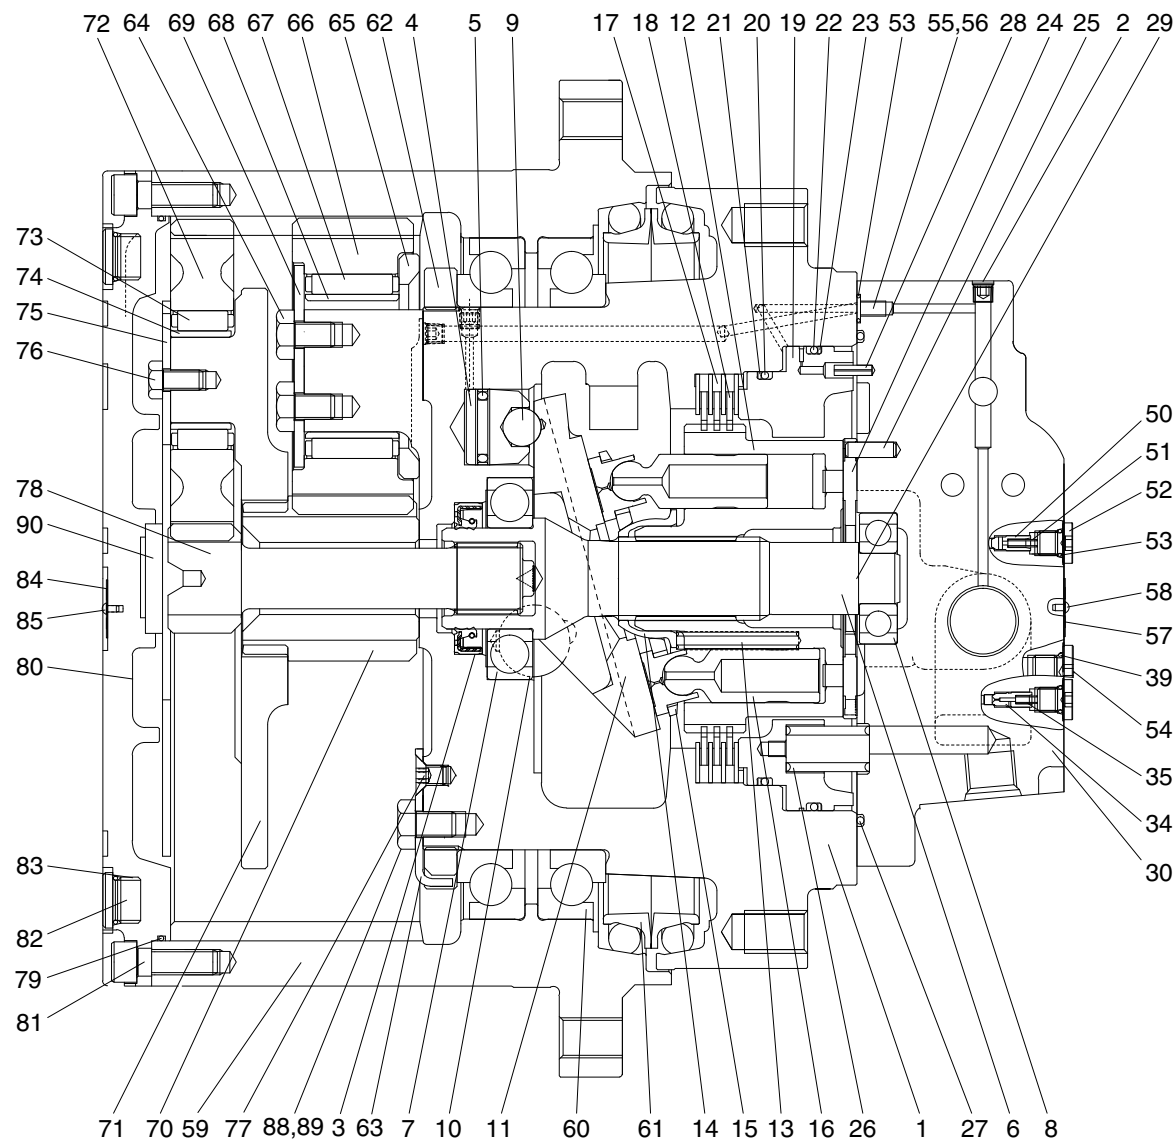

- | | | | | |
|----------------------|--------------------|-----------------------------|------------------------|---------------------------|
| 1 Casing | 19 Parking piston | 37 Spring seat | 55 Restrictor | 73 Needle bearing |
| 2 Plug | 20 O-ring | 38 Relief valve assy | 56 Restrictor | 74 Inner race No. 1 |
| 3 Oil seal | 21 Back up ring | 39 O-ring | 57 Name plate | 75 Thrust plate |
| 4 Piston | 22 O-ring | 40 Spool | 58 Rivet | 76 Hexagon head bolt |
| 5 Piston seal | 23 Back up ring | 41 Plug | 59 Ring gear | 77 Countersunk head screw |
| 6 Shaft | 24 Valve plate | 42 Spring seat | 60 Ball bearing | 78 Sun gear No.1 |
| 7 Front ball bearing | 25 Spring pin | 43 Parallel pin | 61 Floating seal assy | 79 O-ring |
| 8 Rear ball bearing | 26 Spring | 44 Spring | 62 Nut ring | 80 Cover |
| 9 Steel ball | 27 O-ring | 45 Connector | 63 Lock plate | 81 Hex socket head bolt |
| 10 Pivot | 28 Spring pin | 46 O-ring | 64 Hexagon head bolt | 82 Plug |
| 11 Swash plate | 29 Parallel pin | 47 Hexagon socket head bolt | 65 Thrust plate | 83 O-ring |
| 12 Cylinder block | 30 Rear cover | 48 Hexagon socket head bolt | 66 Planetary gear No.2 | 84 Name plate |
| 13 Spring | 31 Main spool assy | 49 Hexagon socket head bolt | 67 Needle bearing | 85 Rivet |
| 14 Ball guide | 32 Cover | 50 Check valve | 68 Inner race No. 2 | 88 Plain washer |
| 15 Retainer plate | 33 Spring | 51 Spring | 69 Thrust washer | 89 Hexagon head bolt |
| 16 Piston assy | 34 Restrictor | 52 Plug | 70 Sun gear No.2 | 90 Thrust plate |
| 17 Friction plate | 35 Spring | 53 O-ring | 71 Carrier No.1 | |
| 18 Separated plate | 36 O-ring | 54 Plug | 72 Planetary gear No.1 | |


2) DISASSEMBLY

- (1) Choose a clean place, remove contaminants (dust, etc) and cleans motor before placing it on worktable.
 - ※ Lay the rubber plate on worktable and take care not to damage the component.




125LCR8TM02

- (2) Remove the connector (45) using 21 mm socket wrench.

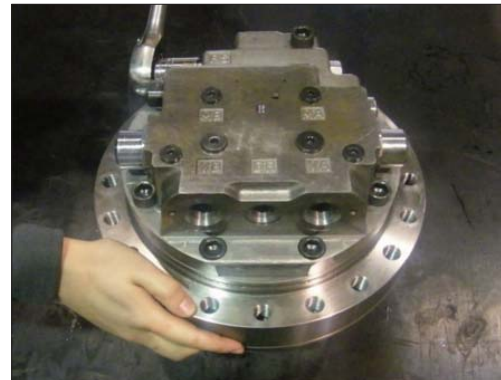


125LCR8TM03

- (3) Remove plug (41) using 21 mm socket wrench.

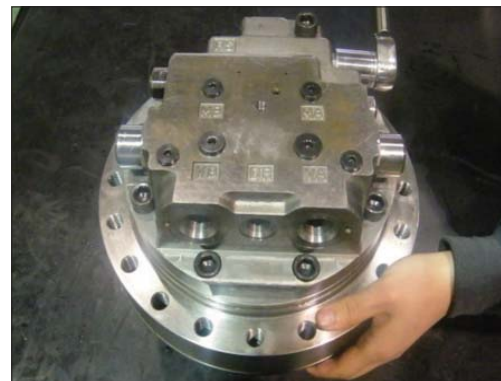

125LCR8TM04

- (4) Disassemble parallel pin (43) and spring (44).
 - ※ Do not lose spring.
 - ※ Do not mix spring with other springs.

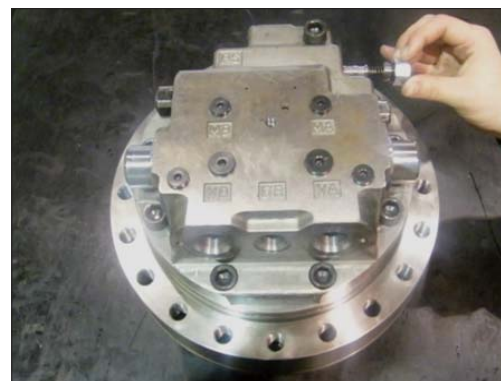

125LCR8TM05

(5) Remove spring seat (42) and spool (40).




125LCR8TM06

(6) Disassemble relief valve assembly (38) using 26 mm socket wrench. (2 sets)



125LCR8TM07

(7) Disassemble cover (32) using 41 mm socket wrench.

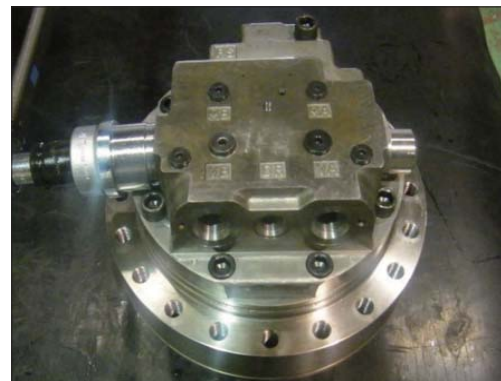


125LCR8TM08

(8) Disassemble spring seat (37) and spring (33). (2 sets)



125LCR8TM09

- (9) Separate main spool assembly (31) from rear cover.

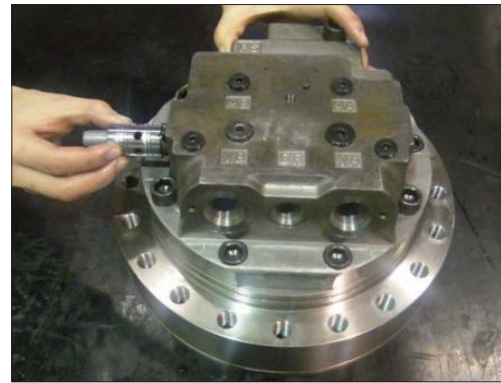

125LCR8TM10

- (10) Unscrew socket bolt (47) (1EA), (48) (3EA), (49) (6EA) from rear cover.



125LCR8TM11

- (11) Remove parallel pin (29).



125LCR8TM12

- (12) From rear cover, disassemble valve plate (24) and O-ring (27).

※ Take care not to damage assembly surface of rear cover.



125LCR8TM13

(13) Disassemble restrictor (55, 56) (2EA).

- ※ Mark the number on restrictor and its hole to avoid confusing (55) and (56).



125LCR8TM14


(14) Remove plug (52).



125LCR8TM15


(15) Remove restrictor (34) and spring (35). (2 sets)

- ※ Do not confuse restrictor (34) and check valve (50).
- ※ Do not confuse spring (35) and spring (51).
- ※ Do not lose spring.
- ※ Do not mix spring with other springs.

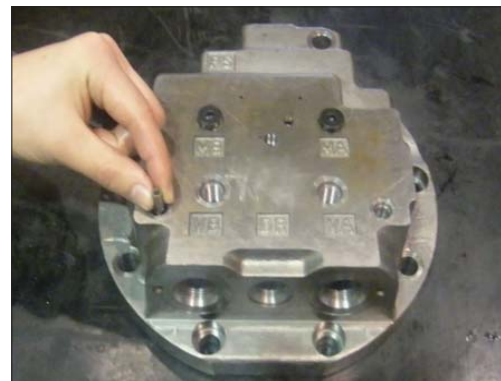

125LCR8TM16

(16) Remove plug (52) using 5 mm hexagon wrench.

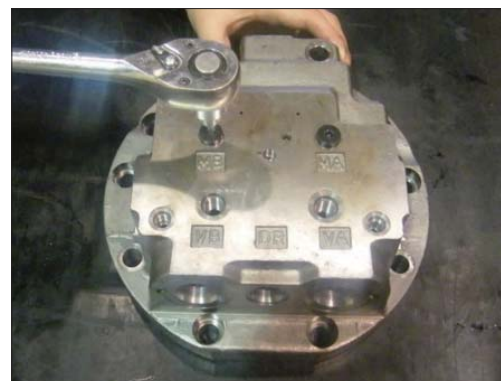

125LCR8TM17

(17) Remove check valve (50) and spring (51). (2 sets)

- ※ Do not confuse restrictor (34) and check valve (50).
- ※ Do not confuse spring (35) and spring (51).
- ※ Do not lose spring.
- ※ Do not mix spring with other springs.



125LCR8TM18

(18) From parking piston, remove spring (26) (12ea).

- ※ Do not lose spring.
- ※ Do not mix spring with other springs.



125LCR8TM19

(19) Disassemble parking piston (19) using air gun or jig.



125LCR8TM20

(20) From parking piston, separate O-ring (22) and back-up ring (23).



125LCR8TM21

(21) From parking piston separate O-ring (20) and back-up ring (21).



125LCR8TM22

(22) Lay casing down horizontally and remove cylinder block assembly, friction plate (17) (3EA) and separator plate (18) (4EA).



125LCR8TM23

(23) Separate retainer plate (15) and piston assembly (16).

- ※ Take care not to damage sliding surface of each component.



125LCR8TM24

(24) Disassemble ball guide (14) and spring (13) (9EA).


- ※ Do not lose spring.
- ※ Do not mix spring with other springs.



125LCR8TM25

(25) Disassemble swash plate (11) and steel ball (10).

※ Take care not to damage sliding surface.

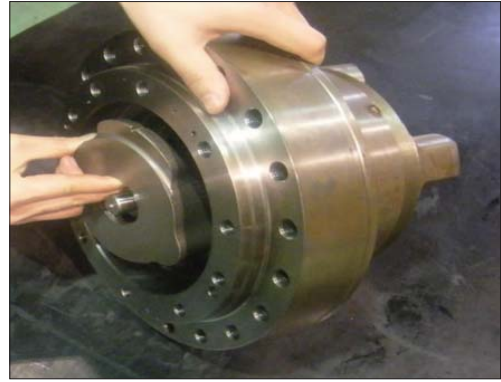

125LCR8TM26

(26) Disassemble shaft (6) and ball bearing (7).

※ Do not remove ball bearing unless malfunction is detected, since it is mounted by shrink fit.



125LCR8TM27

(27) Disassemble 1, 2 speed piston (4) and steel ball (9) using air gun.



125LCR8TM28

(28) Disassemble piston seal (5).



125LCR8TM29

(29) Turn casing (1) upside down and remove oil seal (3) using jig.



125LCR8TM30

3) ASSEMBLY

※ Even though assembly is accomplished by reversing disassembly steps, be careful of the following.

- ① Repair the damaged part when disassembling and prepare parts for exchange in advance.
- ② All parts should be cleaned with cleaner, dried with compressed air.
- ③ Sliding surface, O-ring, bearing and oil seal should be lubricated with clean hydraulic oil, prior to final assembly.
- ④ Replacement of O-ring and oil seal with new parts is generally recommended.
- ⑤ Use a torque wrench to make sure that assembly fasteners are tightened to specified values shown table1.
- ⑥ When assembling bolt, spread Loctite.

(1) Put casing (1) on the worktable.



125LCR8TM31

(2) After applying grease on the external diameter of oil seal (3), insert oil seal in casing.



125LCR8TM32

- (3) After applying grease on steel ball (10), insert steel ball in casing.



125LCR8TM33

- (4) After assembling piston seal (5) and steel ball (9) in 1, 2 speed piston (4), insert piston in hole of casing.

- ※ Check whether piston sticks in hole.
- ※ Use piston seal jig.



125LCR8TM34

- (5) Mount ball bearing (7) on shaft (6) by shrink fit. Insert shaft in casing.

- ※ Take care not to damage oil seal.



125LCR8TM35

- (6) Assemble swash plate (11) by matching its hole and steel ball.

- ※ Take care not to damage sliding surface.



125LCR8TM36

- (7) Assemble spring (13) (9ea) and ball guide (14) in cylinder block (12) in that order.



125LCR8TM37

- (8) Insert piston assembly (16) in retainer plate (15) and assemble them in cylinder block.
- ※ Spread hydraulic oil on piston assembly.
 - ※ Take care not to damage each component.
 - ※ Check cylinder block and piston assembly runs properly.




125LCR8TM38

- (9) Lay casing down horizontally and assemble cylinder block assembly by matching its spline with shaft.
- ※ Make sure swash plate stays in place.
 - ※ Check the assembling status of cylinder block by pressing it.



125LCR8TM39

- (10) Assemble separator plate (18) (4EA) and friction plate (17) (3EA) alternately.

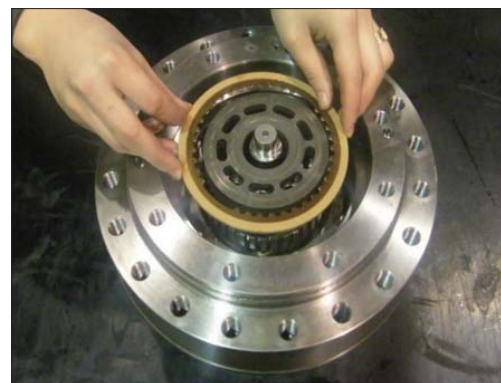

125LCR8TM40

(11) Insert back-up ring & O-ring in parking piston.



125LCR8TM41

(12) Align the pin hole of parking piston (19) with oil hole of casing, assemble them using jig.
※ Spread grease on O-ring and back-up ring.
※ Take care not to damage components.



125LCR8TM42

(13) Insert spring (26) (12EA) in parking piston.



125LCR8TM43

(14) Insert parallel pin (29) (2EA) in casing.



125LCR8TM44

(15) Assemble check valve (50) and spring (51) in order.

※ Do not confuse check valve (50) and restrictor (34).


※ Do not confuse spring (51) and spring (35)



125LCR8TM45

(16) Clamp plug (52) using 5 mm hexagon wrench.

※ Tightening torque : 1.5 kgf · m (10.9 lbf · ft)

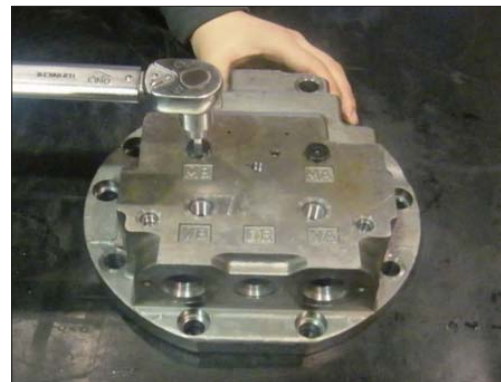


125LCR8TM46

(17) Assemble restrictor (34) and spring (35) in order.

※ Do not confuse check valve (50) and restrictor (34).

※ Do not confuse spring (51) and spring (35).

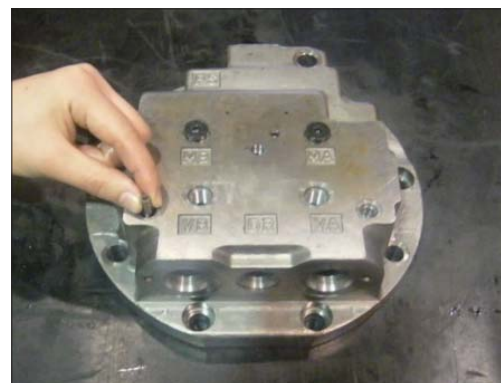

125LCR8TM47

(18) Clamp plug (52).


※ Tightening torque : 1.5 kgf · m (10.9 lbf · ft)



125LCR8TM48

(19) Clamp plug (54).

※ Tightening torque : 3 kgf · m (21.7 lbf · ft)

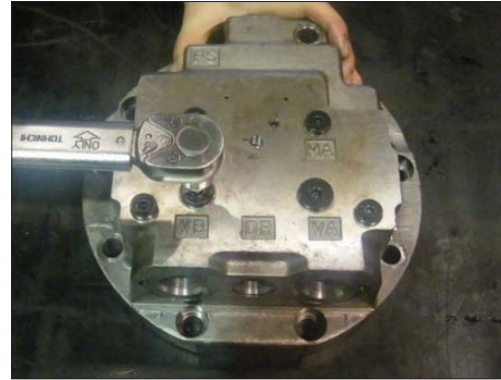


125LCR8TM49

(20) Assemble restrictor (55) and (56) in rear cover.

※ Check whether the restrictor is placed in exact hole.

※ Do not confuse (55) and (56).

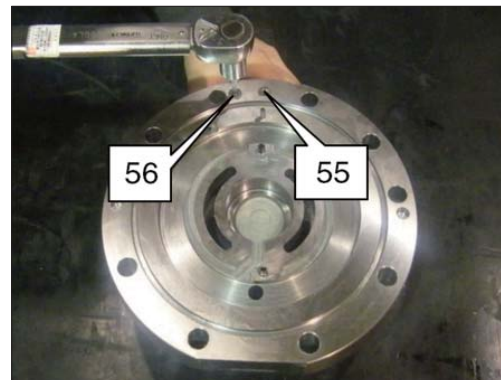

125LCR8TM50

(21) Assemble ball bearing (8) in rear cover using jig.



125LCR8TM51

(22) Insert spring pin (25) (2ea) and (28) in rear cover using jig.



125LCR8TM52

(23) After spreading grease sufficiently to the bottom side of valve plate (24), assemble valve plate in rear cover by matching its holes with pins.

- ※ Take care not to damage sliding surface.
- ※ Pay attention to the assembly direction.



125LCR8TM53

(24) Assemble O-ring (27) in rear cover.

- ※ Spread grease on O-ring.



125LCR8TM54


(25) Put rear cover upon casing, paying attention to the location of pin and hole. And tighten bolt (47), (48) and (49).

- ※ Tightening torque : 17.5 kgf · m (127 lbf · ft)
- ※ Make sure valve plate stays in place.
- ※ Check bolt position.



125LCR8TM55


(26) Assemble main spool assembly (31), spring seat (37) and spring (33) in rear cover.

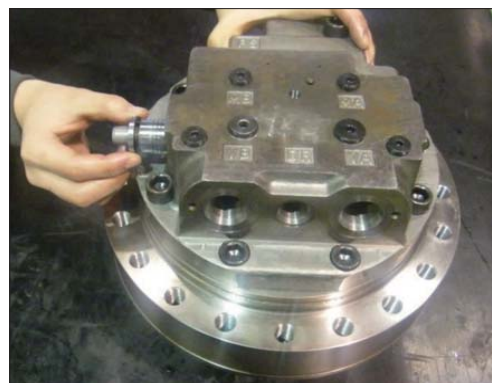

125LCR8TM56

(27) Settle cover (32).

※ Tightening torque : 15 kgf · m (108 lbf · ft)

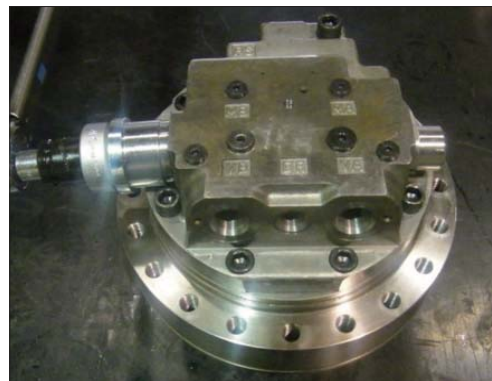

125LCR8TM57

(28) Insert relief valve (38) in rear cover.


※ Tightening torque : 15 kgf · m (108 lbf · ft)



125LCR8TM58


(29) After clamping connector (45) to rear cover, assemble spool (40).

※ Tightening torque : 5 kgf · m (36 lbf · ft)

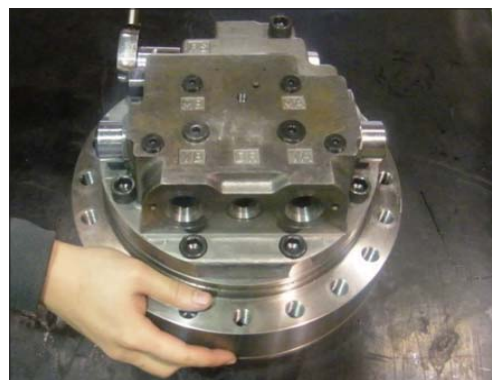

125LCR8TM59


(30) After inserting parallel pin (43), assemble seat-spring (42).

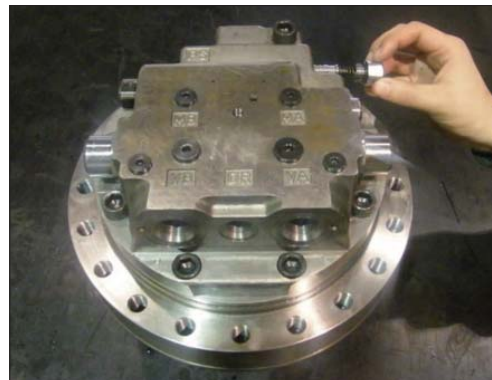

125LCR8TM60

(31) After assembling spring (44) in order, clamp plug (41).

※ Tightening torque : 5 kgf · m (36 lbf · ft)

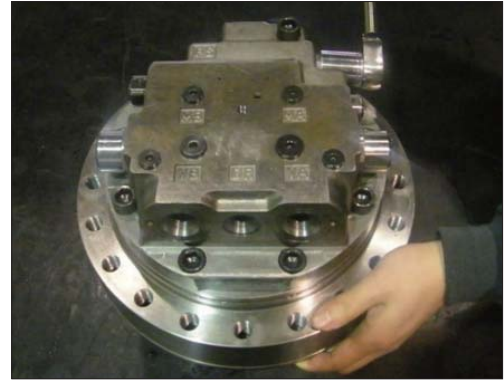

125LCR8TM61

3. TRAVEL REDUCTION GEAR DISASSEMBLY

- 1) While travel reduction gear is tilted to one side disassemble PF3/8 plug (82), remove gear oil and place motor side to the bench.



125LCR8TM70

- 2) Disassemble cover (80) by unscrewing the M10 bolts (81) (16 pcs).



125LCR8TM71

- 3) Disassemble sun gear No.1 (78).



125LCR8TM72

- 4) Disassemble carrier No.1 assembly.



125LCR8TM73

Carrier No. 1 sub assy disassembly

- 5) Disassemble M8 bolt (76) from the carrier assembly. (3 pcs)



125LCR8TM74

- 6) Disassemble thrust plate (75) from the carrier assembly.



125LCR8TM75

- 7) Disassemble planetary gear No.1 (72). (3 pcs)



125LCR8TM76

- 8) Disassemble needle bearing (73). (3 pcs)
※ Do not disassemble inner race in the absence of abnormalities.



125LCR8TM77

9) Disassemble sun gear No.2 (70).



125LCR8TM78

10) Disassemble M10 bolt (64). (4 pcs)



125LCR8TM79

11) Disassemble thrust washer (69). (4 pcs)



125LCR8TM80

12) Disassemble planetary gear (66). (4 pcs)



125LCR8TM81

13) Disassemble needle bearing No.2 (67). (4 pcs)



125LCR8TM82

14) Disassemble thrust plate (65). (4 pcs)

※ Do not disassemble inner race in the absence of abnormalities.



125LCR8TM83

15) Disassemble M10 bolt (64) and M8 screw bolt (76).



125LCR8TM84

16) Disassemble lock plate (63).



125LCR8TM85

17) Disassemble nut ring (62) by using the jig.



125LCR8TM86

18) Disassemble ring gear sun assembly from motor assembly.



125LCR8TM87


19) Disassemble floating seal assembly (61) from ring gear sun assembly and motor assembly.



125LCR8TM88

20) Disassemble ball bearing (60) (2ea) from ring gear assembly.

※ Do not disassemble ball bearing in the absence of abnormalities.

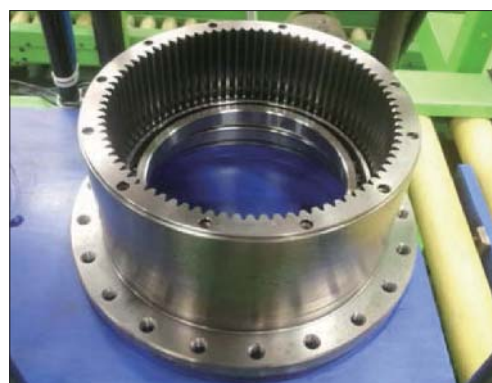

125LCR8TM89

4. TRAVEL REDUCTION GEAR ASSEMBLY

※ Even though assembly is accomplished by reversing disassembly steps, be careful of the following.

- ① Repair the damaged part when disassembling and prepare parts for exchange in advance.
- ② All parts should be cleaned with cleaner, dried with compressed air.
- ③ Sliding surface, O-ring, bearing and oil seal should be lubricated with clean hydraulic oil, prior to final assembly.
- ④ Replacement of O-ring and oil seal with new parts is generally recommended.
- ⑤ Use a torque wrench to make sure that assembly fasteners are tightened to specified values.
- ⑥ When assembling bolt, spread loctite.

1) Put carrier No.1 (71) on the jig, and shrink-fit inner race No.1 (74) to carrier pin. (3 places)

※ Do not tilt inner race to one side.

※ Match inner race and end of carrier pin.



125LCR8TM90

2) Assemble needle bearing (73). (3 pcs)



125LCR8TM91

- 3) Assemble planetary gear No.1 (72) of which groove is faced downward. (3 places)



125LCR8TM92

- 4) Assemble thrust plate (75).



125LCR8TM93

- 5) After spreading loctite #242, assemble the M8 bolt (76). (3 pcs)
※ Tightening torque : $2.7 \pm 0.3 \text{ kgf} \cdot \text{m}$
※ After the assembly, instantly check the noise and interference by rotating the gear.



125LCR8TM94

- 6) First, place ball bearing (60) on the ring gear (59), then put jig on it, then press it with press machine.




125LCR8TM95

- 7) After turning ring gear over, assemble bearing the same way.
- ※ Be care of nick and safety when turn ring gear over.



125LCR8TM96

- 8) Assemble floating seal assembly (61) by using the jig.
- ※ After assembling, wipe steel-lined section with alcohol.
 - ※ Flatness deviation has to be less than 1 mm.

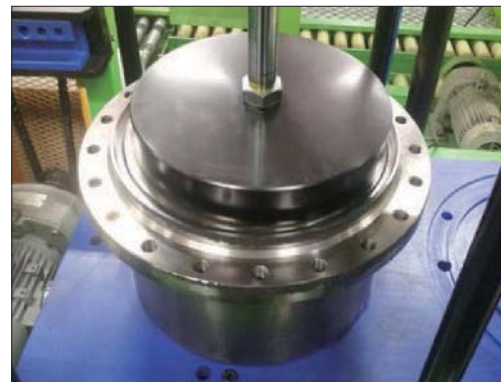

125LCR8TM97

- 9) Place floating seal assembly on the motor assembly then assemble it.
- ※ After assembling, wipe steel-lined section with alcohol.
 - ※ Flatness deviation has to be less than 1 mm.



125LCR8TM98

- 10) After arriving safely ring gear sun assembly in the motor assembly, press it with press machine.
- ※ After press-fitting, clamp ring gear to fix it.
 - ※ When using the press pay attention to bearing damage.

 


125LCR8TM99


※ Tightening torque : 60 kgf · m (434 lbf · ft)



- ※ Select best position from one of 4 casing hole to assemble lock plate.



 - ※ Make sure that M8 bolt doesn't stick out of lock plate.



125LCR8TM103

14) Shrink fit the inner race No.2 (68). (4 pcs)



125LCR8TM104

15) Assemble thrust plate (65). (4 pcs)



125LCR8TM105

16) Assemble needle bearing (67). (4 pcs)



125LCR8TM106

17) Assemble planetary gear No.2 (66). (4 pcs)

※ Grooves of planetary gear will be facing up.



125LCR8TM107

18) Assemble thrust washer (69). (4 pcs)



125LCR8TM108

19) After spreading loctite #242, assemble the M10 bolt (64). (4 pcs)

※ Tightening torque : $5.5 \pm 0.6 \text{ kgf} \cdot \text{m}$
($39.8 \pm 4.3 \text{ lbf} \cdot \text{ft}$)



125LCR8TM109

20) Assemble sun gear No.2 (70).



125LCR8TM110

21) Assemble carrier No.1 assembly.



125LCR8TM111

22) Assemble sun gear No.1 (78).




125LCR8TM112

23) Place steel ball on the sun gear No.1. (N.A)



125LCR8TM113

24) Spread the loctite #515 on the cover (80) with reference to the right detail view.

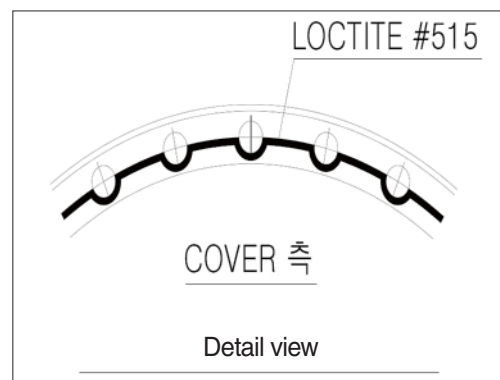

125LCR8TM114

25) Place cover (80) to fit the bolt holes.



125LCR8TM115

26) After spreading loctite #242, assemble the M10 bolt (81). (12 pcs)

※ Tightening torque : $6.3 \pm 0.7 \text{ kgf} \cdot \text{m}$
($45.6 \pm 5.1 \text{ lbf} \cdot \text{ft}$)



125LCR8TM116

27) Inject the 2.5 ± 0.3 liter gear oil to PF3/8 tap section.



125LCR8TM117

28) After assembling the O-ring (83) to the plug (82), assemble it to the cover.(3 pcs)

※ Tightening torque : $5 \pm 0.5 \text{ kgf} \cdot \text{m}$
($36.2 \pm 3.6 \text{ lbf} \cdot \text{ft}$)



125LCR8TM118

TRAVEL DEVICE (TYPE 2, HIGH WALKER)

1. REMOVAL AND INSTALL

1) REMOVAL

- (1) Swing the work equipment 90 ° and lower it completely to the ground.
- (2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.
- (3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ Escaping fluid under pressure can penetrate the skin causing serious injury.

※ When pipes and hoses are disconnected, the oil inside the piping will flow out, so catch it in oil pan.

- (4) Remove the track shoe assembly.
For details, see **removal of track shoe assembly**.

- (5) Remove the cover.

- (6) Remove the hose.

※ Fit blind plugs to the disconnected hoses.

- (7) Remove the bolts and the sprocket.

· Tightening torque : $29.7 \pm 3.0 \text{ kgf} \cdot \text{m}$
($215 \pm 21.7 \text{ lbf} \cdot \text{ft}$)

- (8) Sling travel device assembly (1).

- (9) Remove the mounting bolts (2), then remove the travel device assembly.

· Weight : 299 kg (659 lb)

· Tightening torque : $57.9 \pm 6.0 \text{ kgf} \cdot \text{m}$
($419 \pm 43.4 \text{ lbf} \cdot \text{ft}$)

2) INSTALL

- (1) Carry out installation in the reverse order to removal.

- (2) Bleed the air from the travel motor.

① Remove the air vent plug.


② Pour in hydraulic oil until it overflows from the port.

③ Tighten plug lightly.

④ Start the engine, run at low idling, and check oil come out from plug.



⑤ Tighten plug fully.

- (3) Confirm the hydraulic oil level and check the hydraulic oil leak or not.

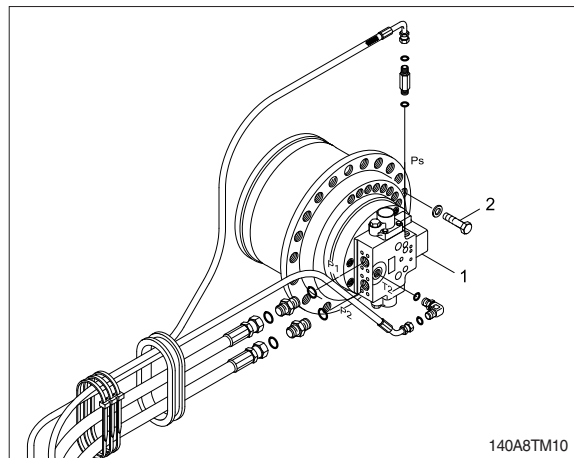

2. TRAVEL MOTOR

1) STRUCTURE

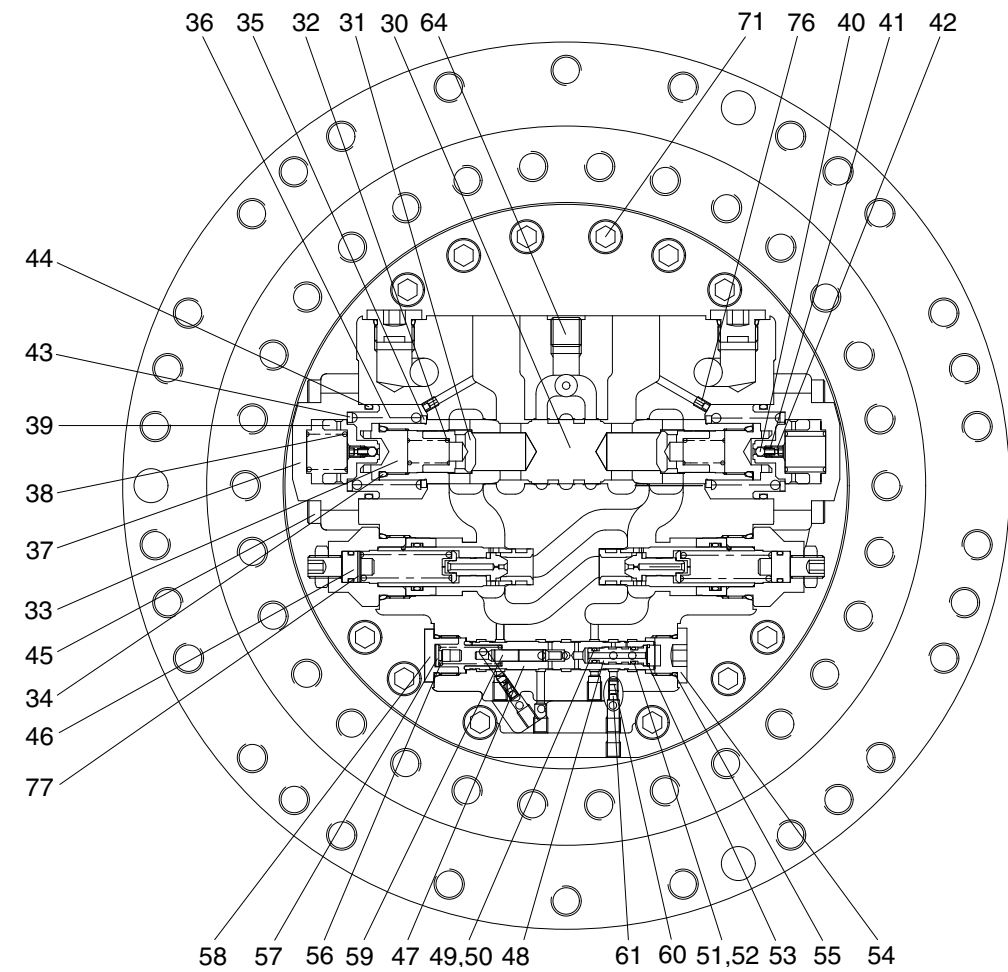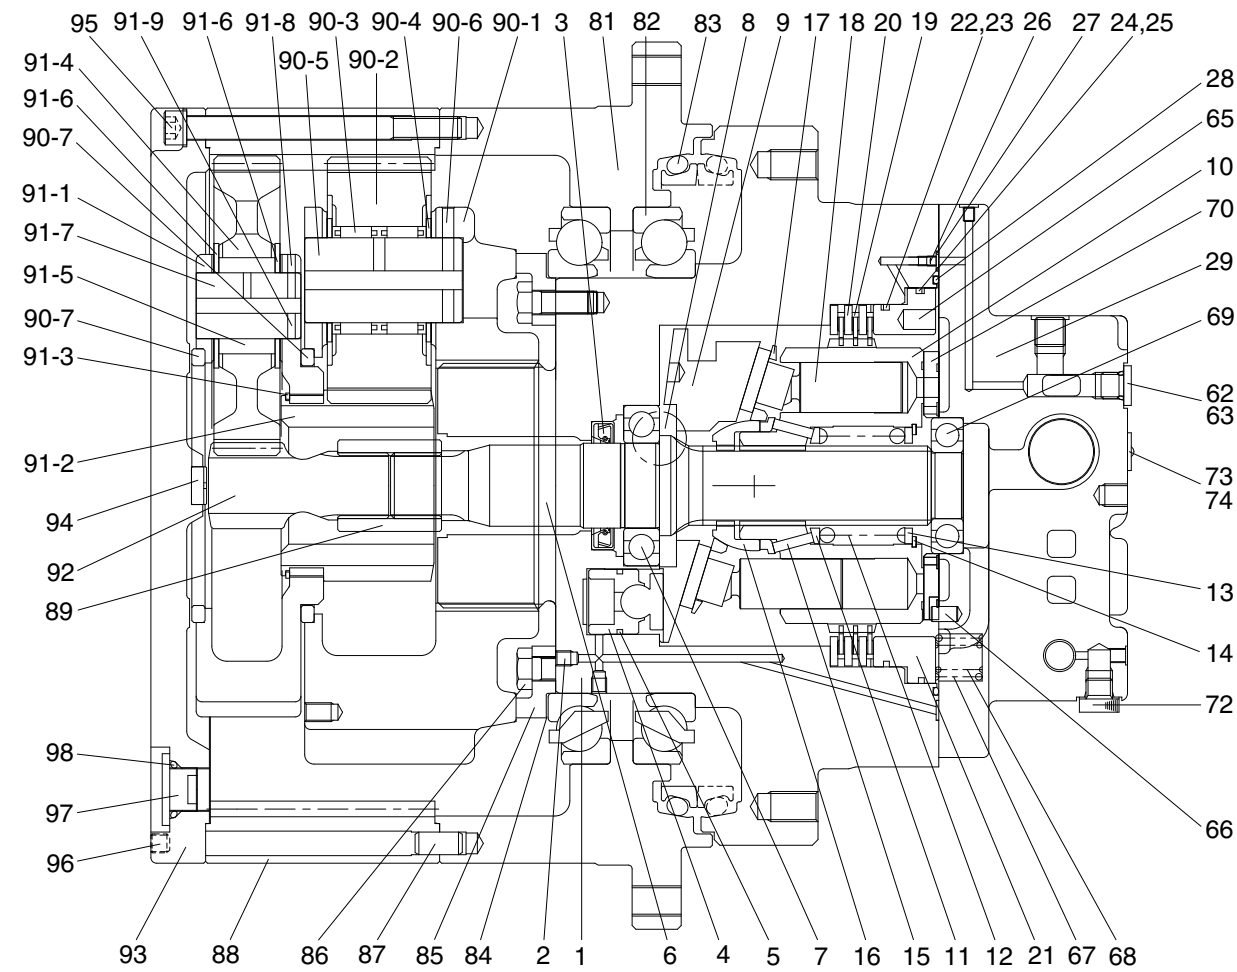


16092TM02

1	Shaft casing	20	Separate plate	39	Spool	58	Plug	77	Shim	91-1	Carrier No.1
2	Plug	21	Parking piston	40	Steel ball	59	Spool	81	Housing	91-2	Sun-gear No.2
3	Oil seal	22	O-ring	41	Spring	60	Orifice	82	Main bearing	91-3	Retaining ring
4	Swash piston	23	Back up ring	42	Plug	61	Orifice	83	Floating seal	91-4	Planetary gear No.1
5	Piston ring	24	O-ring	43	Spring seat	62	Plug	84	Shim	91-5	Needle bearing No.1
6	Shaft	25	Back up ring	44	O-ring	63	O-ring	85	Retainer	91-6	Thrust washer
7	Bearing	26	Orifice	45	Wrench bolt	64	Plug	86	Hex head bolt	91-7	Pin No.1
8	Steel ball	27	O-ring	46	Relief valve assy	65	Pin	87	Parallel pin	91-8	Spring pin
9	Swash plate	28	O-ring	47	Spool	66	Pin	88	Ring gear	91-9	Spring pin
10	Cylinder block	29	Rear cover	48	Guide	67	Spring	89	Coupling	92	Sun gear No.1
11	Spring seat	30	Spool	49	O-ring	68	Spring	90	Carrier assy No.2	93	Cover
12	Spring	31	Check	50	Back up ring	69	Bearing	90-1	Carrier No.2	94	Pad
13	End plate	32	Spring	51	O-ring	70	Valve plate	90-2	Planetary gear No.2	95	Hex socket head bolt
14	Snap ring	33	Plug	52	Back up ring	71	Wrench bolt	90-3	Needle bearing No.2	96	Hex socket Screw
15	Pin	34	O-ring	53	Snap ring	72	Plug	90-4	Thrust washer	97	Hydraulic plug
16	Ball guide	35	Spring seat	54	plug	73	Name plate	90-5	Pin No.2	98	O-ring
17	Set plate	36	Spring	55	O-ring	74	Rivet	90-6	Spring pin	99	Name plate
18	Piston assy	37	Cover	56	Spring	75	Seal kit	90-7	Thrust ring		
19	Friction plate	38	Spring	57	Spring seat	76	Orifice	91	Carrier assy No.1		

2) TOOLS AND TIGHTENING TORQUE

 (1) Tools

Tool name		Remark	
Allen wrench		2, 5, 4, 6, 10	
Socket for socket wrench, spanner	Socket	8, 14, 24, 27	
Torque wrench		Capable of tightening with the specified torques	
Pliers		-	
Plastic and iron hammer		Wooden hammer allowed. Normal 1 or so	
Monkey wrench		-	
Oil seal inserting jig		-	
Bearing pliers		-	
Seal tape		-	
Eye bolt		M10, M12, M14	
Press (0.5 ton)		-	
Oil stone		-	
Bearing assembling jig		-	

(2) Tightening torque

Part name	Item	Size	Torque	
			kgf · m	lbf · ft
Plug	2	NPT 1/16	1 ± 0.1	7.2 ± 0.7
Orifice	26	M5	0.7 ± 0.1	5 ± 0.7
Wrench bolt	45	M12×40	10 ± 1.0	72 ± 7.0
Relief valve	46	HEX 27	18 ± 1.0	130 ± 7.0
Plug	54	PF 1/2	8.5 ± 1.0	61 ± 7.0
Plug	58	HEX 24	5 ± 1.0	36 ± 7.0
Plug	62	PF 1/4	5 ± 1.0	36 ± 7.0
Wrench bolt	71	M12×35	10 ± 1.0	72 ± 7.0
Hex head bolt	-	M12×25	11 ± 1.5	79 ± 10
Hex socket head bolt	-	M12×155	11 ± 1.5	79 ± 10
Hex socket head plug	-	PF 3/4	19 ± 1	137 ± 7.0


3. OUTLINE OF DISASSEMBLING

1) GENERAL SUGGESTIONS

- (1) Select a clean place for dismantling.
Spread a rubber plate on a working table in order to prohibit the damage of parts.
- (2) Clean a deceleration equipment and a motor part, washing out dirt and unnecessary substances.
- (3) Without any damage of O-ring, oil seal, the adhered surface of other seals, a gear, a pin, the adhered surface of other bearings, and the surface of moisturized copper, treat each parts.
- (4) Numbers written in the parenthesis, (), next to the name of a part represent the part numbers of a cross-sectional view annexed with a drawing.
- (5) The side of a pipe in a motor can be written as a rear side; the side of out-put as a front side.
- (6) Using and combining a liquid gasket, both sides must be dried completely before spraying a liquid gasket.
- (7) In case of bonding bolts, combine a standard torque by torque wrench after spraying loctite 262 on the tab parts. (It can be dealt as assembling NPTF screws and an acceleration equipment.)

3.1 DISASSEMBLING

- 1) Unloosing wrench bolt and disassemble cover (37).
※ Wrench bolt = M12×40L-8 EA
(purchasing goods)

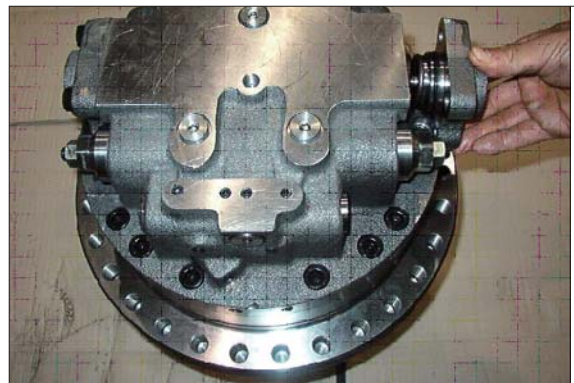


21078TM21

- 2) Disassemble parts related to counterbalance valve.



21078TM22

- 3) Unloosing wrench bolt (M12×35L, 16 EA) and disassemble rear cover assembly from motor assembly.

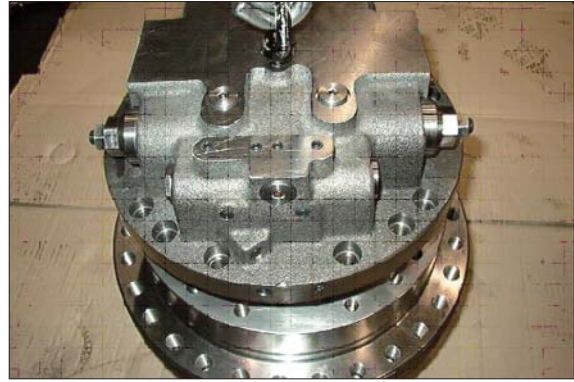

21078TM23




21078TM24

- 4) Dismantle packing piston (21) using compressed air.



21078TM25

- 5) Disassembly rotary kit from motor assembly (cylinder block assembly, piston assembly, ball guide, set plate, friction plate, steel plate...)

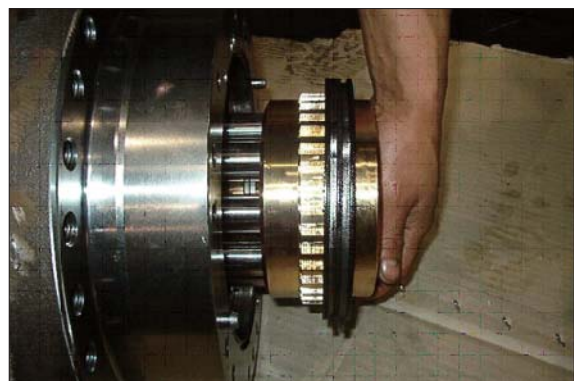

21078TM26

- 6) Using a jig, disassemble swash plate (9) from shaft casing.



21078TM27

- 7) Using compressed air, disassemble piston swash (4) piston ring (5), respectively.




21078TM28



21078TM29

- 8) Using a hammer, disassemble shaft (6) from shaft casing (1).

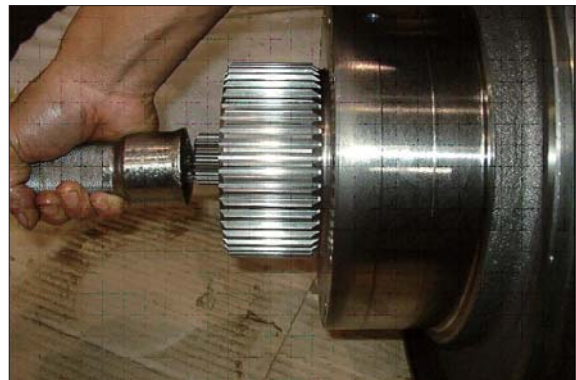

21078TM30

■ **Disassemble cylinder sub.**

- 9) Disassemble cylinder block assembly, piston assembly (9) and seat plate (M).



21078TM31



21078TM32

- 10) Disassemble ball guide (16), ring and pin (15) from cylinder block, respectively.



21078TM33




21078TM34



21078TM35

- 11) Pushing spring (12) by an assembling jig, disassemble snap ring (14), spring seat (13), spring (12) and spring seat (11), respectively.

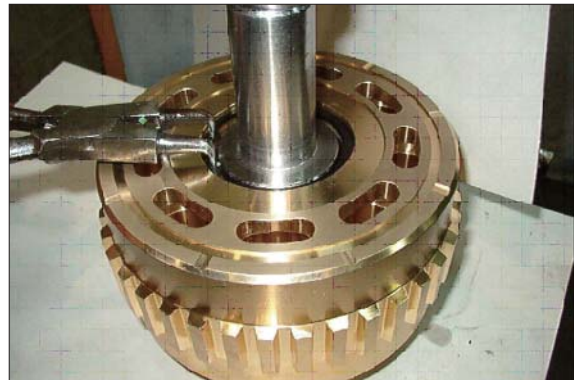


21078TM36



21078TM37

■ Disassemble valve casing sub.

- 12) Using an hexagon wrench, unloosing wrench bolt (45) and disassemble cover (37), spring (38), spool (39), spring seat (43), spring (36) and spring seat (35), respectively.
(same balance on both sides)

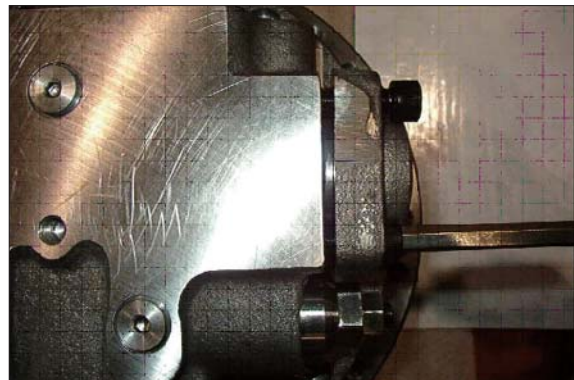


21078TM38



21078TM39

- 13) Disassemble spool (59), spool (47), O-ring (51), guide (48) and snap ring (53) on rear cover, respectively.

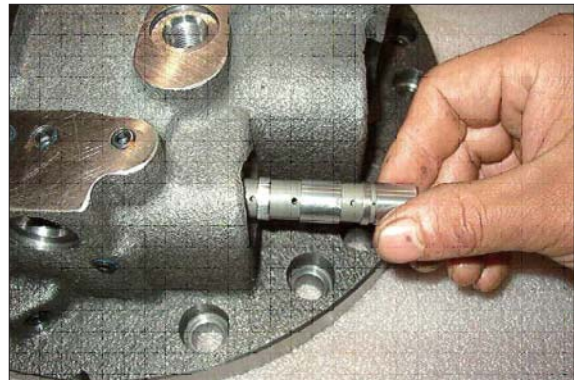


21078TM40



21078TM41

- 14) Using a torque wrench, disassemble relief valve assembly (46) on rear cover.

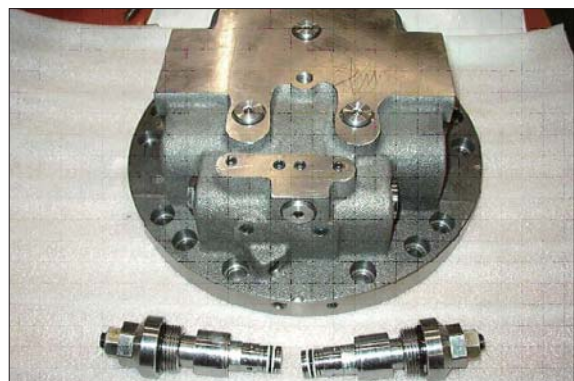

21078TM42

4. OUTLINE FOR ASSEMBLING

1) GENERAL SUGGESTIONS

- (1) After washing each parts cleanly, dry it with compressed air.
Provided that you do not wash friction plate with treated oil.
- (2) In bonding each part, fasten bond torque.
- (3) When using a hammer, do not forget to use a plastic hammer.

4.1 ASSEMBLING

■ Assemble the sub of turning axis

- 1) Using a jig, assemble oil seal (3) into shaft casing (1)



21078TM43

- 2) Have a bearing (8) thermal reacted into shaft (6).



21078TM44



21078TM45



21078TM46

- 3) Using a jig, assemble shaft assembly into shaft casing (1).



21078TM47

- 4) After spreading grease on steel ball (8) assemble into shaft casing (1).



21078TM48

- 5) Assemble swash piston assembly (4, 5) into shaft casing (1).



21078TM49

- 6) Assemble swash plate (9) into shaft casing (1).




21078TM50

■ Assemble cylinder block sub.

- 7) Assemble spring seat (13), spring (12), spring seat (11) into cylinder block (10) respectively, pushing spring (12) using by a jig, assemble snap ring (14) with a snap ring (14).



21078TM51

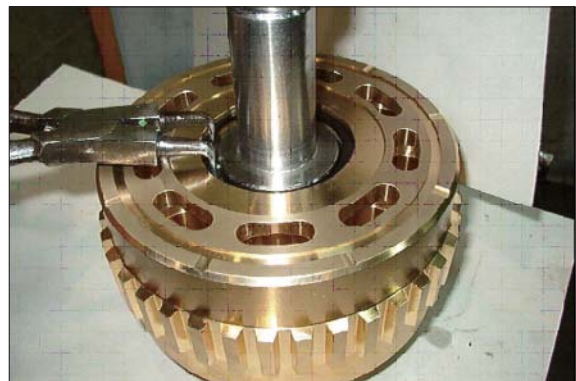

21078TM52

- 8) Assemble ring, pin (15) on cylinder block (10) ball guide (16) respectively.



21078TM53



21078TM54



21078TM55

- 9) Assemble cylinder block assembly, piston assembly (9), seat plate (17).




21078TM56



21078TM57

- 10) Assemble cylinder block assembly (9) into shaft casing (1).

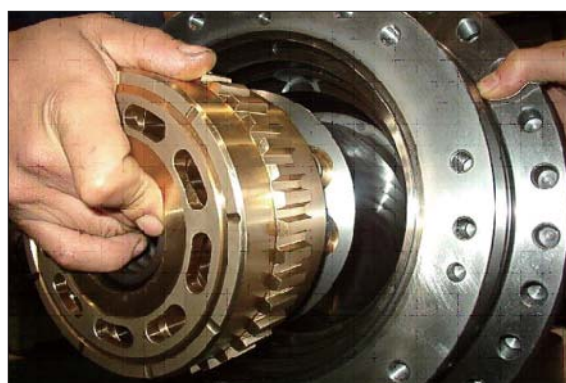


21078TM58

- 11) Assemble friction plate (19) and plate (20) into shaft casing (1) respectively, prepare 6 set.



21078TM59

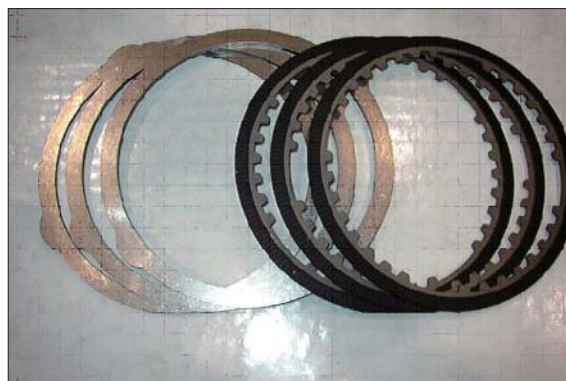


21078TM59-1

- 12) Assemble O-ring (22, 23) into packing piston (21).



21078TM60

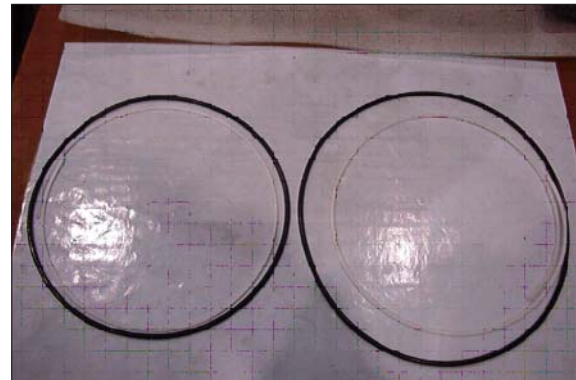

21078TM60-1

- 13) After spreading grease on packing piston (21) bond wrench bolt and assemble shaft casing (1).



21078TM61

■ Assemble rear cover sub.

- 14) Using a jig, assemble bearing (69) into rear cover (29).




21078TM62


- 15) After assembling spool (59), spool (47), O-ring (51), guide (48) and snap ring (53) respectively into rear cover (29).
Using torque wrench, assemble it.



21078TM63

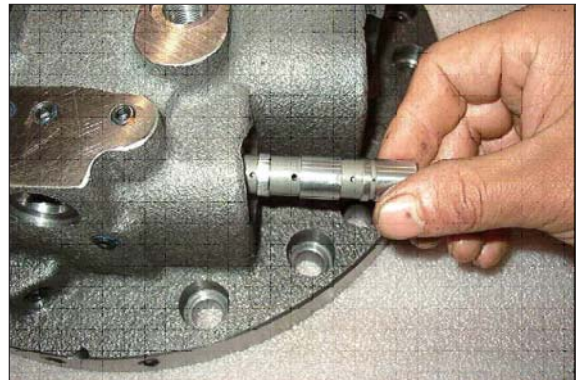


21078TM64

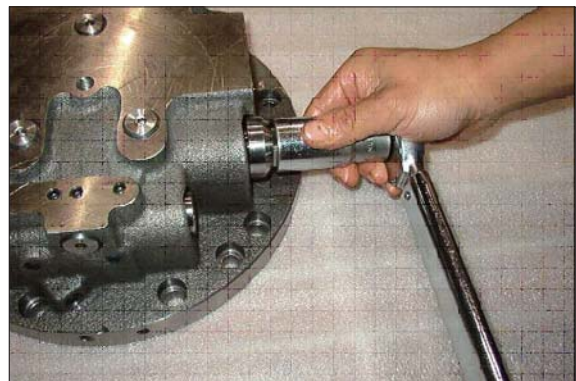


21078TM65


- 16) Assemble spring seat (35), spring (36), spring seat (43), spool (39), spring (38), cover (37) respectively and assemble wrench bolt (45).
(same balance on both sides)

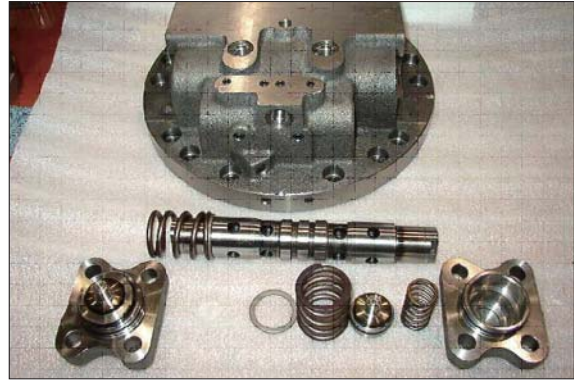

21078TM66

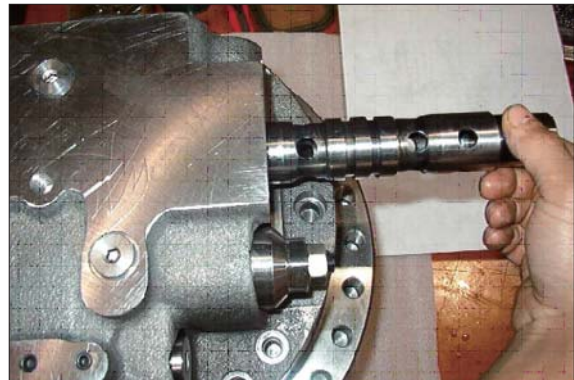

21078TM67

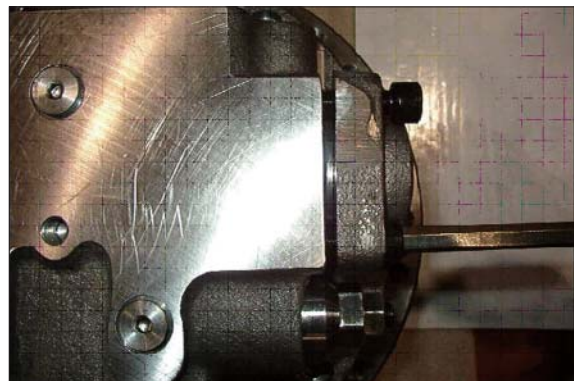

21078TM67-1

17) Assemble plug (2).


※ Plug (NPT1/16) - 11 EA



21078TM68



21078TM69

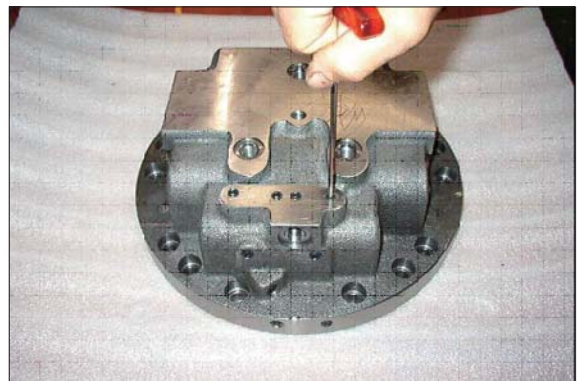


21078TM70



21078TM71


18) Assemble plug (64).

※ Plug (PT3/8) - 11 EA

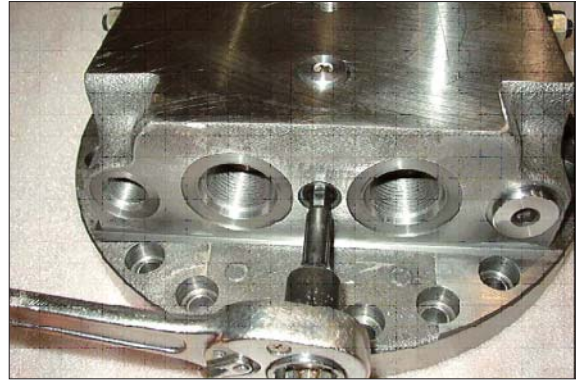


21078TM72

19) Assemble plug (62, 63) into rear cover (29) and assemble relief valve assembly.

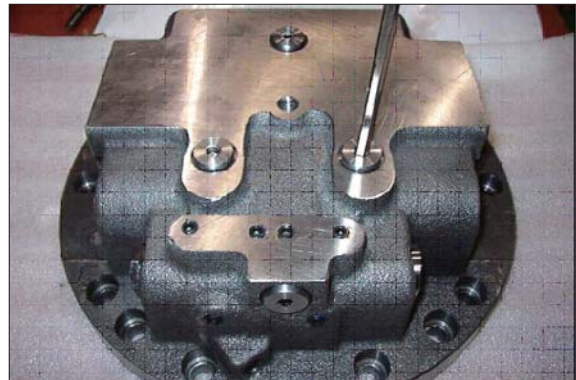

21078TM73

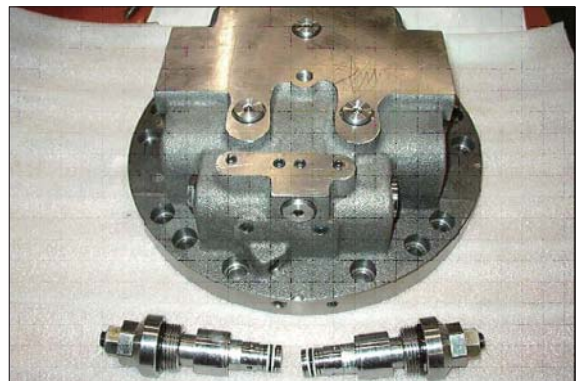

21078TM74

20) Put spring (67, 68) together into rear cover (29), prepare 6 set.



21078TM75




21078TM76

21) Assemble valve plate (70) into rear cover (29).



21078TM77

22) After assembling shaft casing (1) and rear cover (29).
Assemble spool assembly (30), spring (38),
spool (39), cover (37) after then complete
assembly with wrench bolt (45).

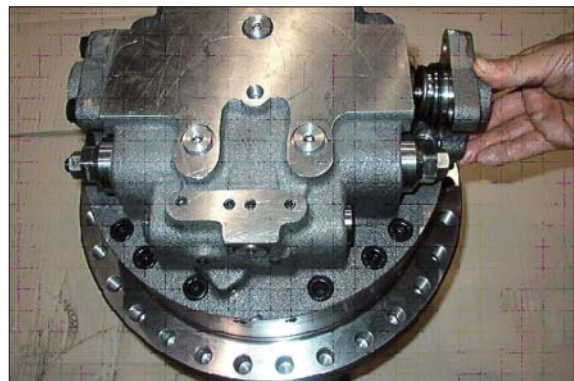

21078TM78

23) Finish assembly.



21078TM79

5.1 DISASSEMBLING REDUCTION UNIT


1) Preparation for disassembling

- (1) The reduction units removed from excavator are usually covered with mud. Wash outside of propelling unit and dry it.
- (2) Locate reducer in order for drain port to be at the lowest level loosen taper screw plug of drain port, and drain oil from reduction gear.
 - ※ While oil is still hot, inside of the unit may be pressurized.

▲ Take care of the hot oil gushing out of the unit when loosening the plug.

(3) Mark for mating

Put marks on each mating parts when disassembling so as to reassemble correctly as before.

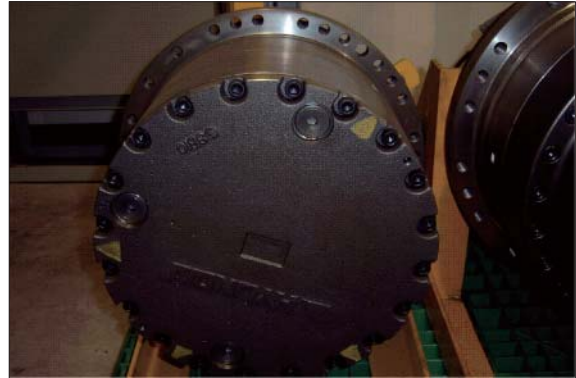

21078TM80

2) Setting reduction unit (or whole propelling unit) on work stand for disassembling

- (1) Remove M12 hexagon socket head bolts (95) at 3 places from cover (93) almost equally apart each other, and then install M12 × 155L eye bolts. Lift up the unit using them and place it on work stand with cover upward.


▲ Take great care not to pinch your hand between parts while disassembling nor let fall parts on your foot while lifting them.



21078TM81

3) Removing cover

- (1) Remove the rest of M12 hexagon socket head bolts (95) that securing gear and housing. Loosen all the socket bolts and then, disassemble cover.
- (2) As the cover (93) is adhered to ring gear (88), disassemble ring gear (88) and cover (93) by lightly hammering slantwise upward using sharpen punch inserted between the cover and ring gear.

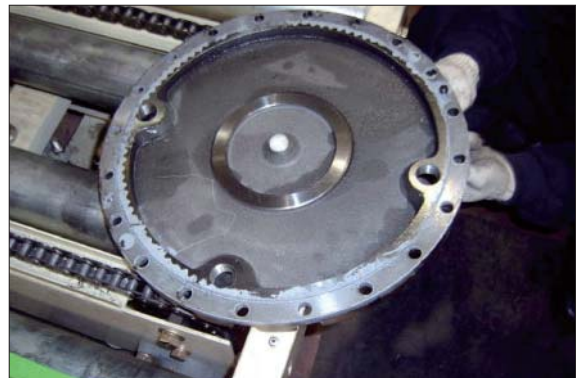

21078TM82

4) Removing No.1 carrier sub assembly

- (1) Screw three M10 eye-bolt in No.1 carrier and lift up and remove No.1 carrier assy.



21078TM83

- (2) Remove No.1 sun gear

- ※ Be sure to maintain it vertical with the ground when disassembling No.1 sun gear.



21078TM84

5) Removing No.2 carrier sub assembly


- (1) Screw three M10 eye-bolt in No.2 carrier and lift up and remove No.2 carrier assy.



21078TM85

- (2) Remove No.2 sun gear


- ※ Be sure to maintain it vertical with the ground when disassembling No.2 sun gear.

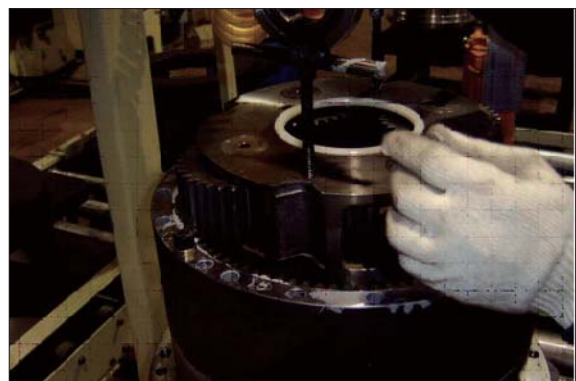

21078TM86

6) Removing ring gear


- (1) As the ring gear (88) is adhered to housing (81), disassemble ring gear (88) and housing (81) by lightly hammering slantwise upward using sharpen punch inserted between the ring gear and housing.
 - ※ Carefully disassembling ring gear not to make scratch on it.
- (2) Screw M14 eye-bolt in ring gear and lift up and remove it.

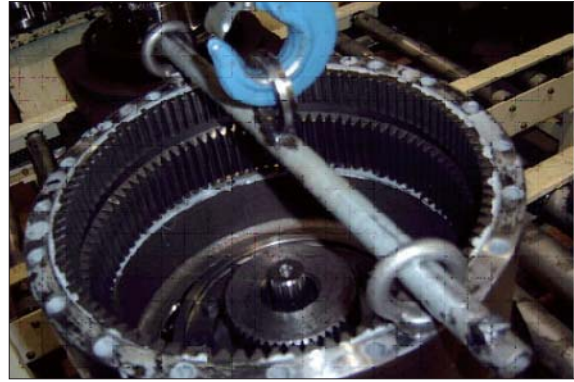

21078TM87

7) Removing coupling


- (1) Remove coupling.

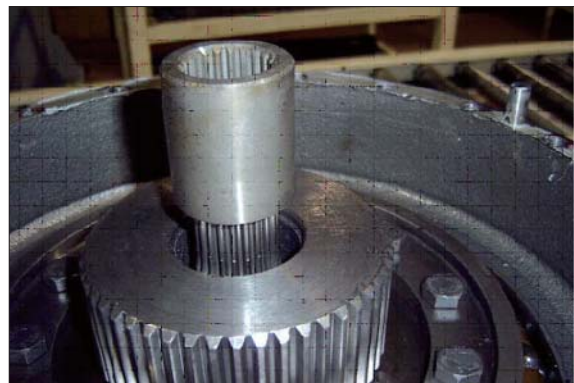

21078TM88

8) Removing retainer & shim


- (1) Remove M12 hexagon socket head bolts that secure retainer and motor.
- (2) Remove retainer & shim.

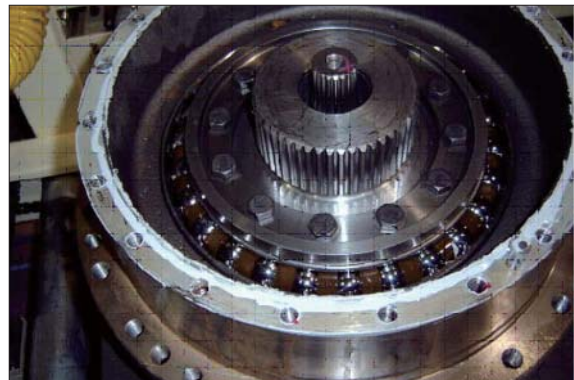

21078TM89

9) Removing housing sub assembly

- (1) Screw M12 eye bolt in housing and lift up housing assembly including angular bearing and floating seal.

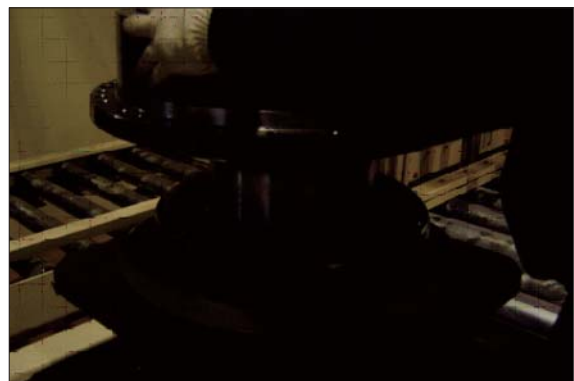

21078TM90

10) Removing floating seal


- (1) Lift up a piece of floating seal of motor side.



21078TM91

11) Disassembling housing assembly

- (1) After turning housing, lift up a piece of floating seal from housing and then remove it.
- ※ Don't disassemble angular bearing.

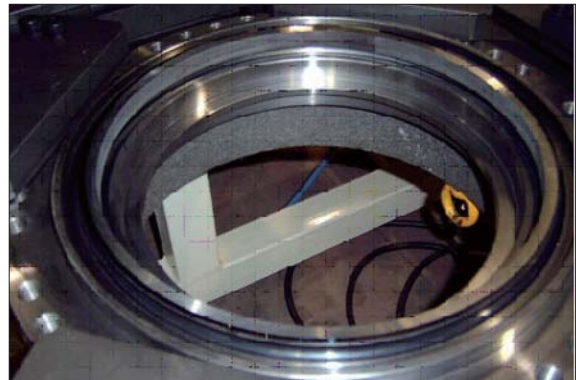

21078TM92

12) Disassembling No.1 carrier

- (1) Remove thrust ring (90-7) from carrier.
- (2) Knock spring pin (91-8) fully into No.1 pin (91-7).
- (3) Remove planetary, thrust washer, No.1 pin, bearing from carrier.



21078TM93



21078TM94



21078TM95

13) Disassembling No.2 carrier

- (1) Disassemble No.2 carriers, using the same method for No.1 carrier assembly.



21078TM96



21078TM97

6.1 ASSEMBLY REDUCTION GEAR

■ General notes

Clean every part by kerosene and dry them by air blow.

Surfaces to be applied by locktite must be decreased by solvent.

Check every part for any abnormalities.

Each hexagon socket head bolt should be used with locktite No.

262 applied on its threads.

Apply gear oil slightly on each part before assembling.

Take great care not to pinch your hand between parts or tools while assembling nor let fall parts on your foot while lifting them.

Inspection before reassembling

Thrust washer

- Check if there are seizure, abnormal wear or uneven wear.
- Check if wear is over the allowable limit.

Gears

- Check if there are pitting or seizure on the tooth surface.
- Check if there are cracks on the root of tooth by die check.

Bearings

- Rotate by hand to see if there are something unusual such as noise or uneven rotation.

Floating seal

- Check flaw or score on sliding surfaces or O-ring.



21078TM98

1) Assembling No.1 carrier

- (1) Put No.1 carrier (91-1) on a flat place.
- (2) Install No.1 needle bearing (91-5) into No.1 planetary gear (91-4), put 2 EA of No.1 thrust washer (91-6) on both sides of bearing, and then, install it into carrier.



21078TM99

- (3) Install No.1 pin (91-5) into No.1 carrier where the holes for No.1 pin (91-5) are to be in line with those of No.1 carrier, and then, install spring pins into the holes.



21078TM100


- (4) Caulk carrier holes as shown on the picture.
(5) Assembly thrust ring (90-7) into carrier.



21078TM101

2) Assembling No.2 carrier

- (1) Put No.2 carrier (90-1) on a flat place.
(2) Install No.2 needle bearing (90-3) into No.2 planetary gear (90-2), put 2 EA of No.2 thrust washer (90-4) on both sides of bearing, and then, install it into carrier.

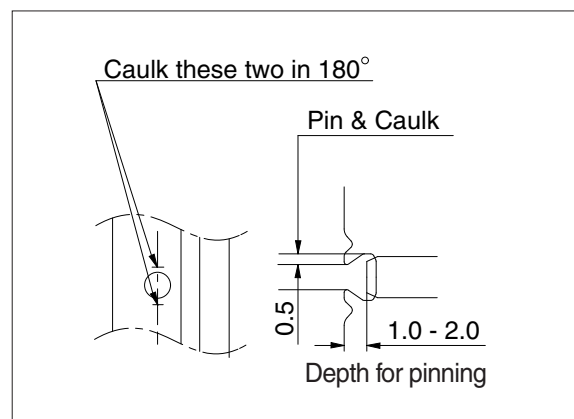

21078TM102

- (3) Install No.2 pin (90-5) into No.2 carrier where the holes for No.2 pin (90-5) are to be in line with those of No.2 carrier, and then, install spring pins into the holes.



21078TM103

- (4) Caulk carrier holes as shown on the picture.
- (5) Assembly thrust ring (90-7) into carrier.



21078TM104

3) Assembling floating seal (83) and main bearing (82)

- (1) Assemble floating seal into motor by use of pressing jig. Grease the contact parts for floating seal which is assembled into motor.
- (2) Heat bearing at 60~70°C and then, put into the motor side.



21078TM105

- ※ Be sure to maintain it vertical with the ground when assembling bearing and floating seal.



21078TM106

4) Assembling housing

- (1) Heat housing at 60~70°C while clearing it out and then, assemble floating seal into housing by use of pressing jig.
- ※ Be sure to maintain it vertical with the ground when assembling floating seal.



21078TM705

5) Installing housing assembly


- (1) Install 2 EA of M12 eye-bolt into housing assembly.
 - (2) Assemble housing into motor by use of hoist and eye-bolt.
- ※ Be sure to tighten eye-bolt deep enough.



21078TM108

6) Installing main bearing (82)


- (1) Heat main bearing at 60~70 °C and then, install.
- ※ Be sure to maintain it vertical with the ground when assembling bearing.

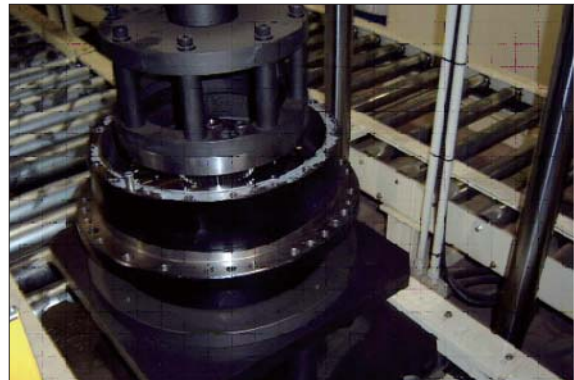

21078TM109

7) Installing retainer (85) and shim (84)


- (1) Measure clearance between main bearing and retainer by use of jig to decide the thickness of shim and select an appropriate shim, and then, assemble retainer.
- (2) Apply locktite (#262) on M12 hexagon head bolt, and then, bolt.

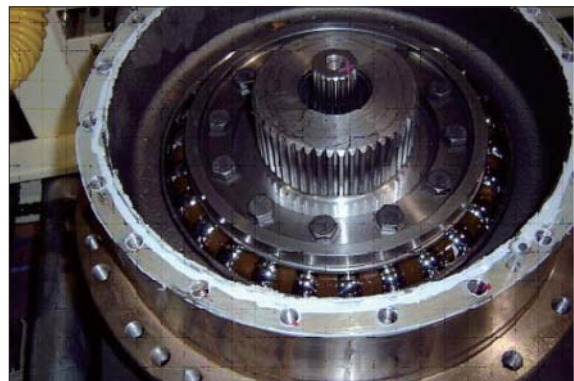

21078TM110

8) Installing coupling


- (1) Install coupling on spline of the motor.

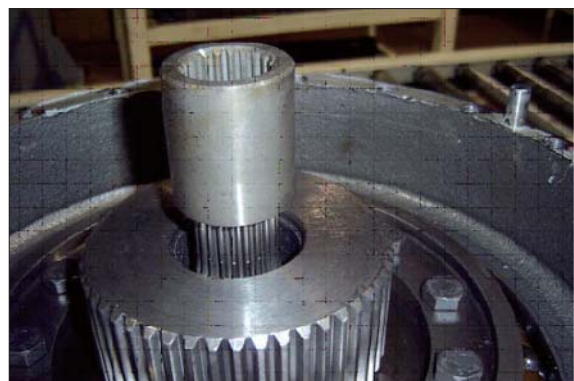


21078TM111

9) Installing ring gear

- (1) Apply three bone #1104 (loctite #515) on housing for ring gear without gap.
- (2) Insert lock pin into housing hole.
- (3) Install M14 eye-bolt on the tap of ring gear.
- (4) Lift ring gear and then, assemble into housing in order for hole of ring gear and parallel pin of housing to be in line.
- (5) Temporarily secure 4EA of M12 hexagon socket bolt and shim with cover thickness having appropriate torque.

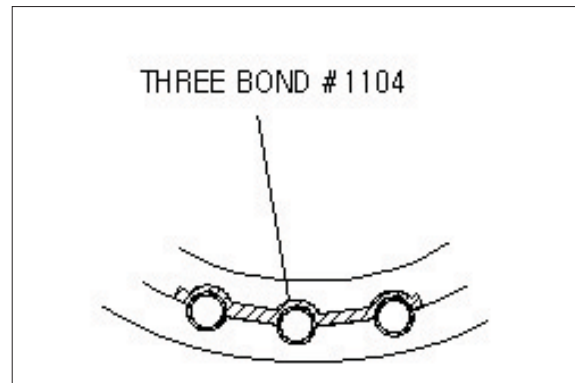

21078TM112A

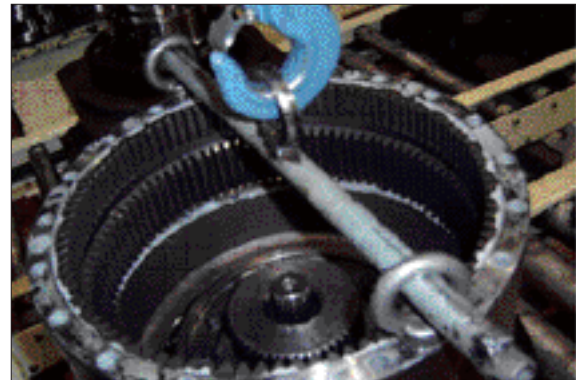

21078TM113

10) Installing No.2 carrier sub assembly

- (1) Install M10 eye-bolt on No.2 carrier assembly.
- (2) Lift No.2 carrier assembly and then, slowly put it down on ring gear.
- (3) Rotate planetary gear by hands and install on ring gear.



21078TM114


11) Installing No.2 sun gear (91-2)

- (1) Install No.2 sun gear on the spline of No.2 carrier and No.2 planetary gear, matching teeth of them.



21078TM115

- (2) Install No.2 sun gear on the spline of No.2 carrier and No.2 planetary gear, matching teeth of them.

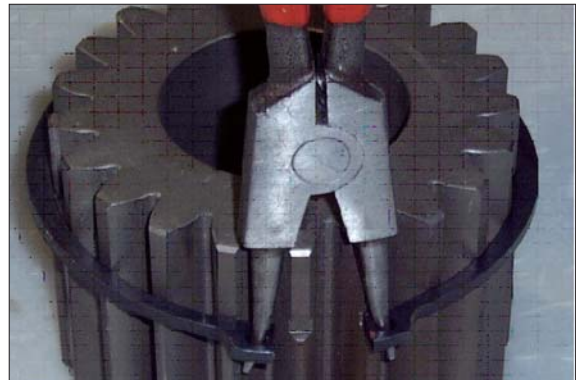

21078TM116

12) Installing No.1 carrier sub assembly

- (1) Install M10 eye-bolt on No.2 carrier assembly.
- (2) Lift No.1 carrier assembly and then, slowly put it down on ring gear.
- (3) Rotate planetary gear by hands and install on ring gear.



21078TM117

13) Installing No.1 sun gear (92)


- (1) Put down No.1 sun gear on No.1 carrier, maintaining it vertical with spline of coupling.
- (2) Install No.1 sun gear on No.1 planetary gear, matching their teeth.



21078TM118

14) Installing cover (93)

- (1) Beat pad (94) with plastic hammer, and press it into the center of cover.
- (2) Apply three bond #1104, loctite (#515) on the ring gear for cover without gap.
- (3) Put cover on ring gear, apply loctite (#262) on M12 hexagon socket head bolt, and then, bolt.

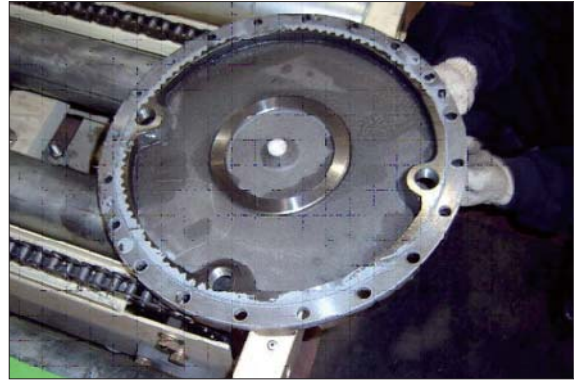

21078TM119

- (4) Fill gear oil (5.8 liter) into drain port.
- (5) Apply gear oil on PF3/4 hydraulic plug (97) and then, bolt.



21078TM120

GROUP 7 RCV LEVER

1. REMOVAL AND INSTALL

1) REMOVAL


- (1) Lower the work equipment to the ground and stop the engine.
- (2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.
- (3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ Escaping fluid under pressure can penetrate the skin causing serious injury.

- (4) Loosen the socket bolt (1).
Tightening torque : $1.05 \pm 0.2 \text{ kgf} \cdot \text{m}$
($7.6 \pm 1.45 \text{ lbf} \cdot \text{ft}$)
 - (5) Remove the cover of the console box.
 - (6) Disconnect pilot line hoses (3).
 - (7) Remove the pilot valve assembly (2).
- ※ When removing the pilot valve assembly, check that all the hoses have been disconnected.


2) INSTALL

- (1) Carry out installation in the reverse order to removal.
- (2) Confirm the hydraulic oil level and check the hydraulic oil leak or not.

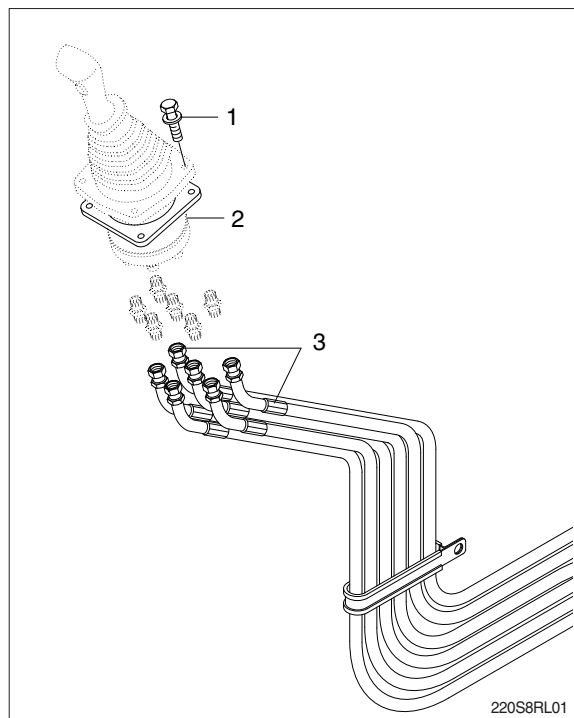


2. DISASSEMBLY AND ASSEMBLY

1) STRUCTURE

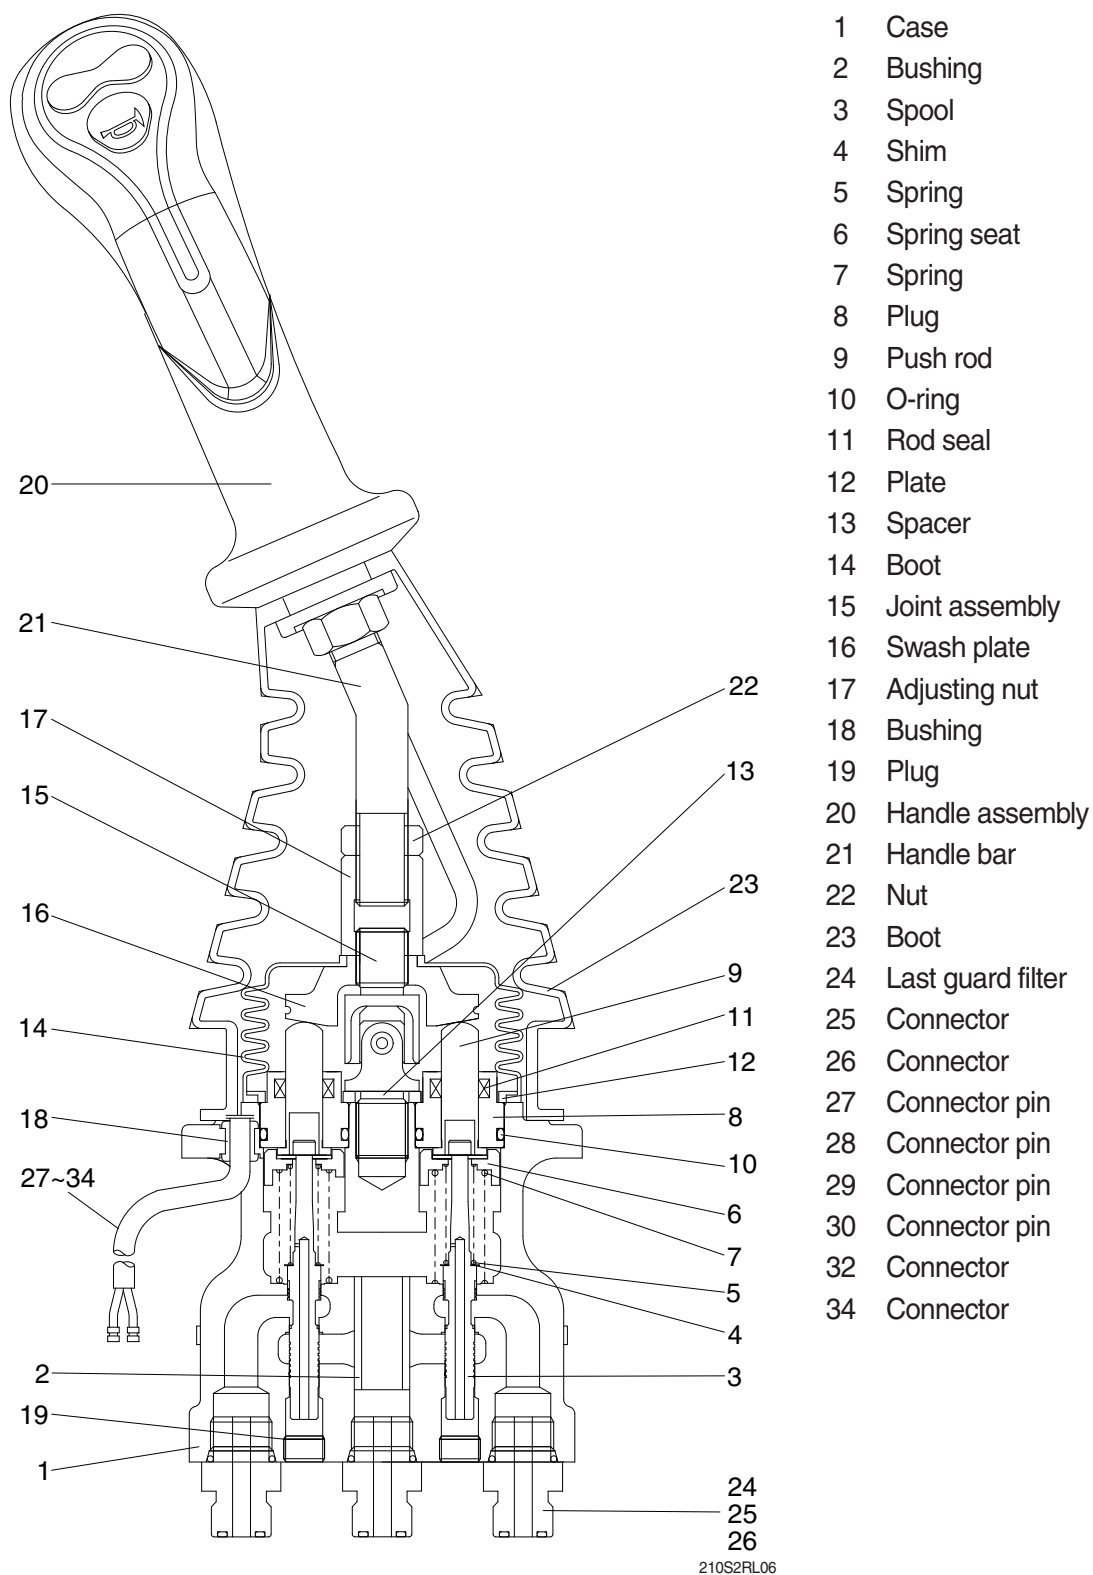

2) TOOLS AND TIGHTENING TORQUE

(1) Tools

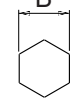Tool name	Remark	
Allen wrench	6	
Spanne	22	
	27	
(+) Driver	Length 150	
(-) Driver	Width 4~5	
Torque wrench	Capable of tightening with the specified torques	


(2) Tightening torque

Part name	Item	Size	Torque	
			kgf · m	lbf · ft
Joint	15	M14	3.8	27.5
Swash plate	16	M14	7.0 ± 0.40	50.6 ± 2.9
Adjusting nut	17	M14	7.0 ± 0.40	50.6 ± 2.9
Lock nut	22	M14	5.0 ± 0.35	36.2 ± 2.5


3) DISASSEMBLY

※ Procedures are based on the type M1.


- (1) Clean pilot valve with kerosene.
- ※ Put blind plugs into all ports
- (2) Fix pilot valve in a vise with copper (or lead) sheets.
- (3) Remove end of boot (23) from case (1) and take it out upwards.

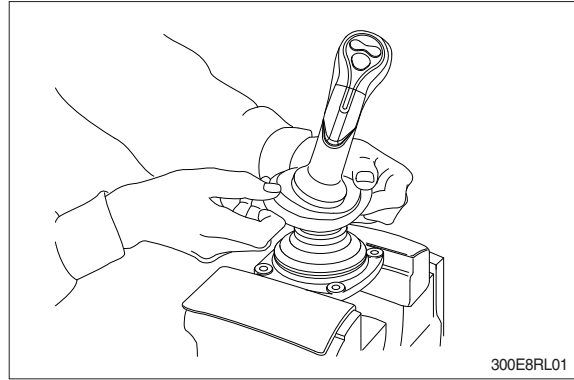


※ For valve with switch, remove cord also through hole of casing.

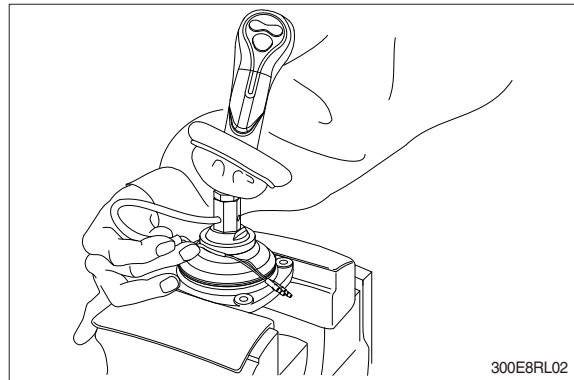



- (4) Loosen lock nut (22) and adjusting nut (17) with spanners on them respectively, and take out handle section as one body.

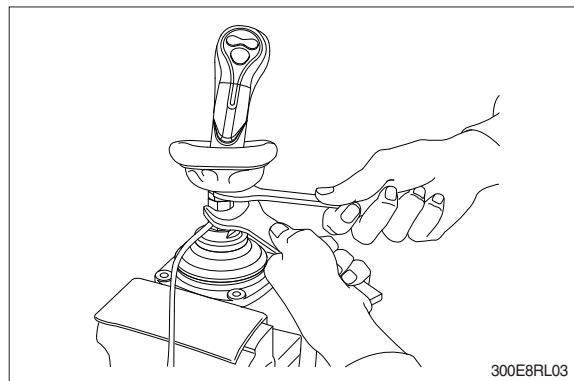

- (5) Remove the boot (14).


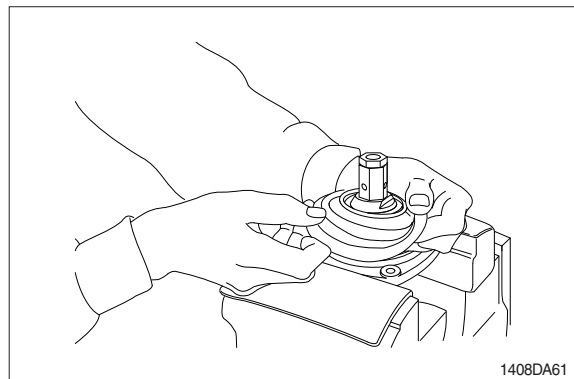


- (6) Loosen adjusting nut (17) and swash plate (16) with spanners on them respectively, and remove them.

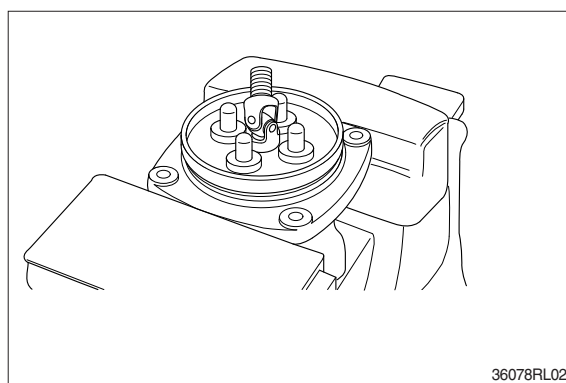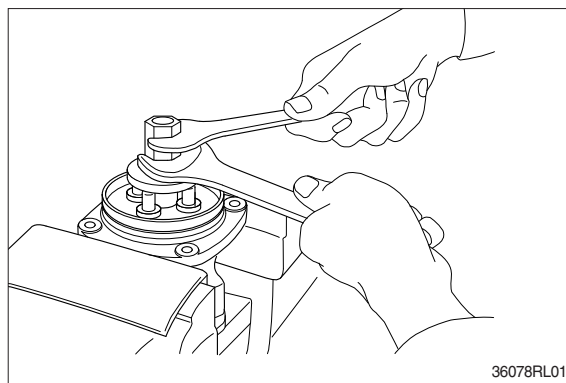


- (7) Turn joint anticlockwise to loosen it, utilizing jig (Special tool).

※ When return spring (7) is strong in force, plate (12), plug (8) and push rod (9) will come up on loosening joint. Pay attention to this.

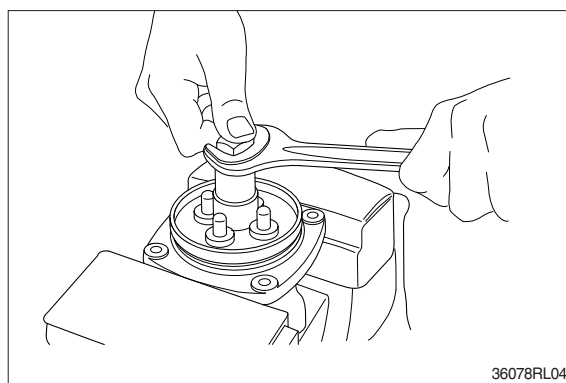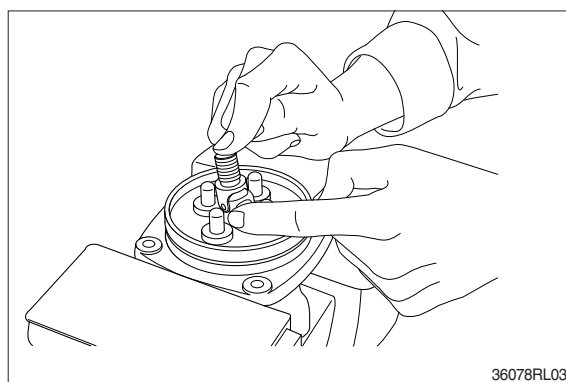

(8) Remove plate (12).

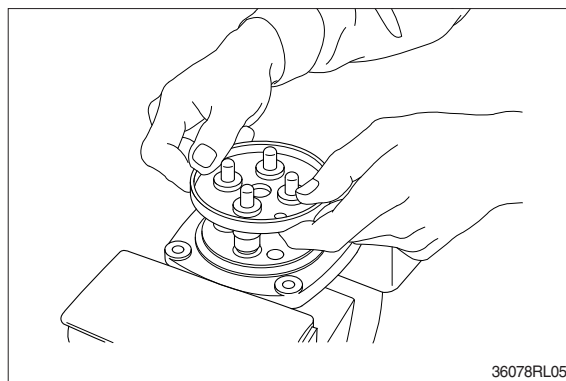


(9) When return spring (7) is weak in force, plug (8) stays in casing because of sliding resistance of O-ring.

※ Take it out with minus screwdriver.

Take it out, utilizing external periphery groove of plug and paying attention not to damage it by partial loading.


※ During taking out, plug may jump up due to return spring (7) force.

Pay attention to this.

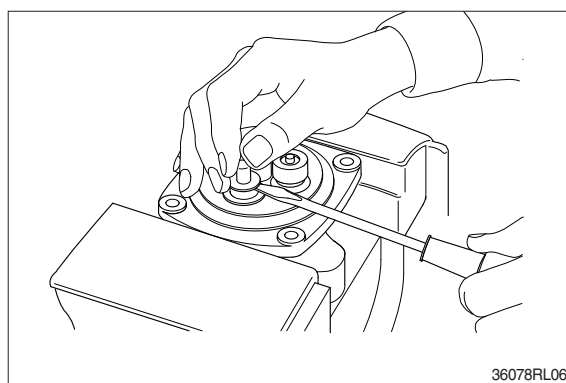

(10) Remove reducing valve subassembly and return spring (7) out of casing.

※ Record relative position of reducing valve subassembly and return springs.

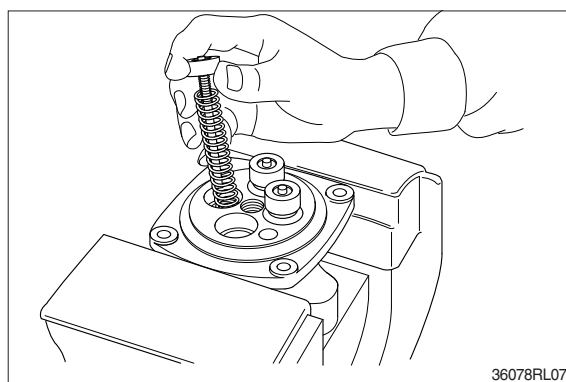


(11) Separate spool (3), spring seat (6), spring (5) and shim (4) individually.


※ Pay attention not to damage spool surface.

※ Record original position of spring seat (6).



※ Until being assembled, they should be handled as one subassembly group.

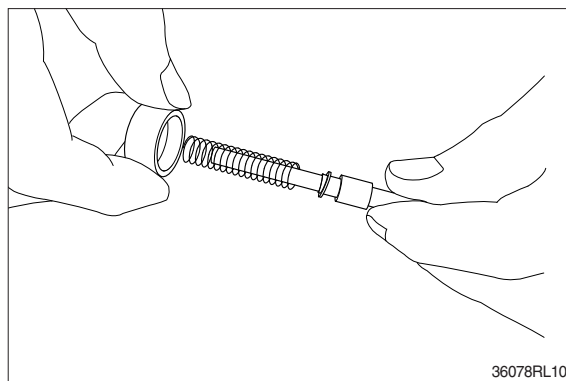



(12) Take push rod (9) out of plug (8).

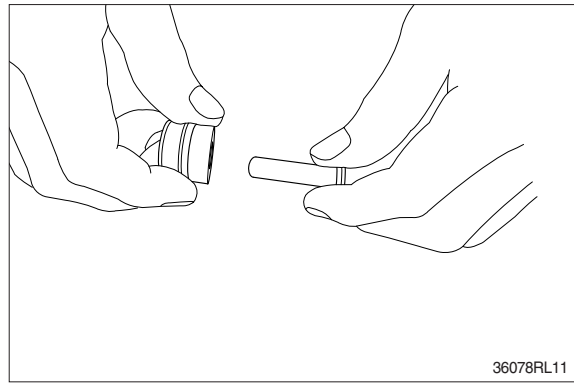

(13) Remove O-ring (10) and seal (11) from plug (8).
Use small minus screwdriver or so on to remove this seal.

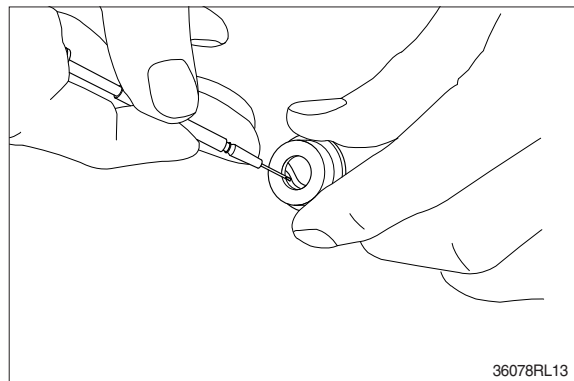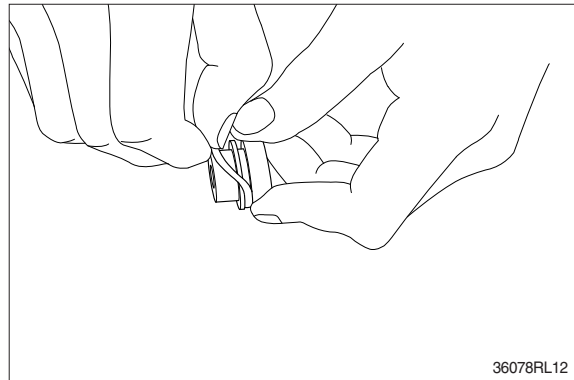

(14) Remove lock nut (22) and then boot (23).

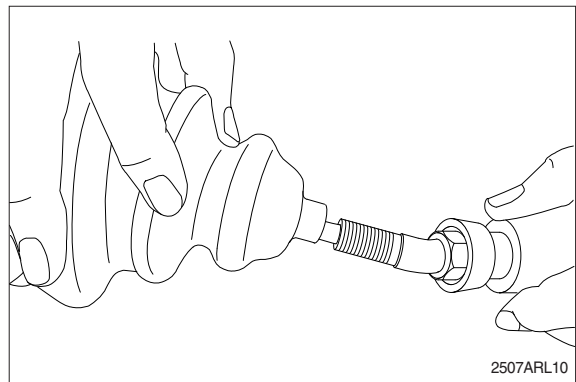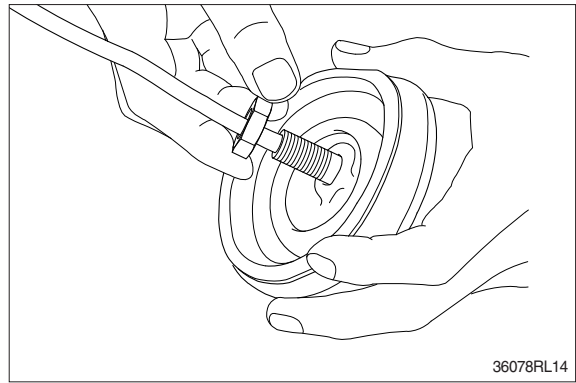

(15) Cleaning of parts


- ① Put all parts in rough cleaning vessel filled with kerosene and clean them (rough cleaning).
 - ※ If dirty part is cleaned with kerosene just after putting it in vessel, it may be damaged. Leave it in kerosene for a while to loosen dust and dirty oil.
 - ※ If this kerosene is polluted, parts will be damaged and functions of reassembled valve will be degraded.
Therefore, control cleanliness of kerosene fully.
- ② Put parts in final cleaning vessel filled with kerosene, turning it slowly to clean them even to their insides (finish cleaning).
 - ※ Do not dry parts with compressed air, since they will be damaged and/or rusted by dust and moisture in air.

(16) Rust prevention of parts


- Apply rust-preventives to all parts.
- ※ If left as they are after being cleaned, they will be rusted and will not display their functions fully after being reassembled.

4) ASSEMBLY


- (1) Put shim (4), springs (5) and spring seat (6) onto spool (3) in this order.

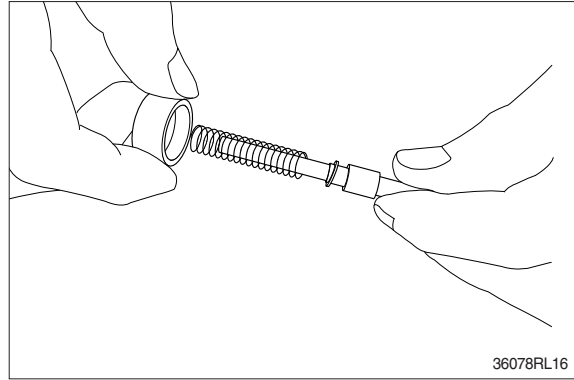


- (2) Assemble spring (7) into casing (1).
Assemble reducing valve subassembly into casing.
※ Assemble them to their original positions.

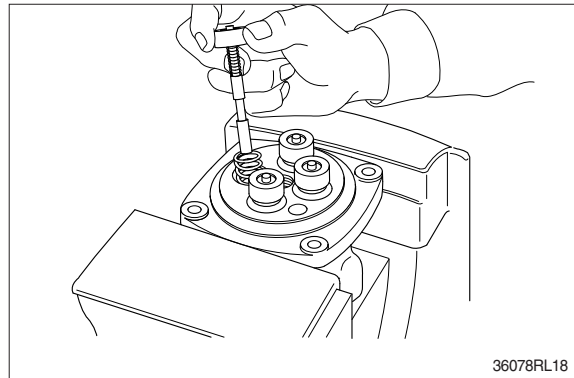


- (3) Assemble O-ring (10) onto plug (8).

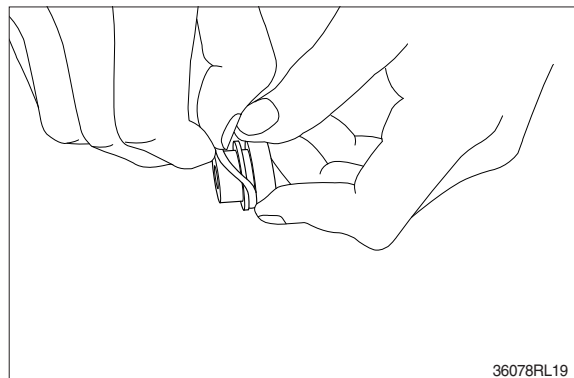


- (4) Assemble seal (11) to plug (8).
※ Assemble seal in such lip direction as shown below.

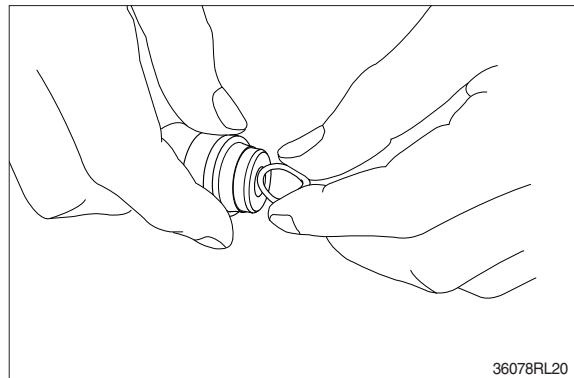


- (5) Assemble push rod (9) to plug (8).
※ Apply working oil on push-rod surface.

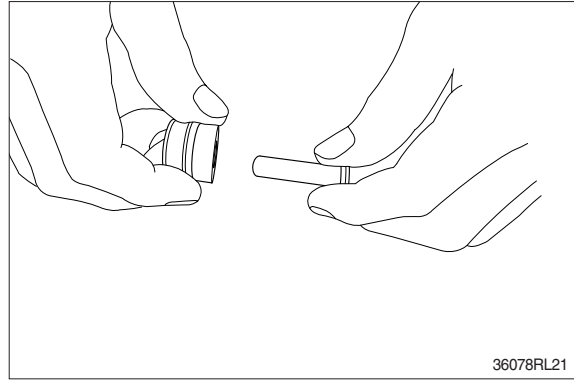

- (6) Assemble plug subassembly to casing.
※ When return spring is weak in force, subassembly stops due to resistance of O-ring.

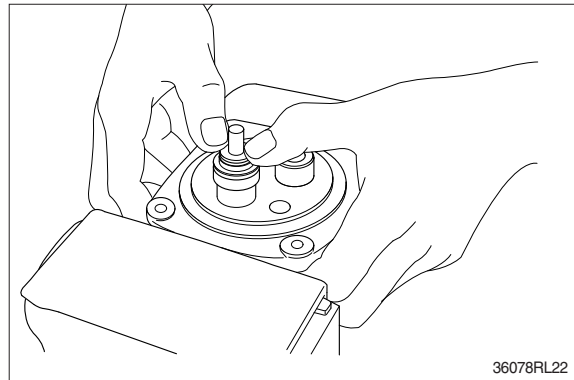


- (7) When return spring is strong in force, assemble 4 sets at the same time, utilizing plate (12), and tighten joint (15) temporarily.

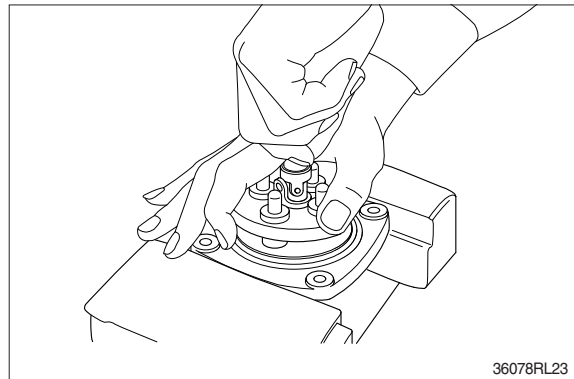


- (8) Fit plate (12).

- (9) Tighten joint (15) with the specified torque to casing, utilizing jig.

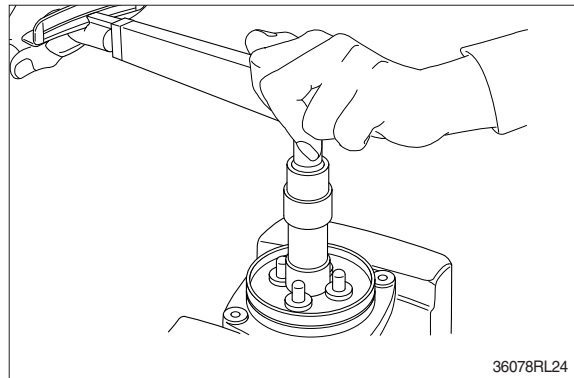


(10) Assemble swash plate (16) to joint (15).

- ※ Screw it to position that it contacts with 4 push rods evenly.
- ※ Do not screw it over.

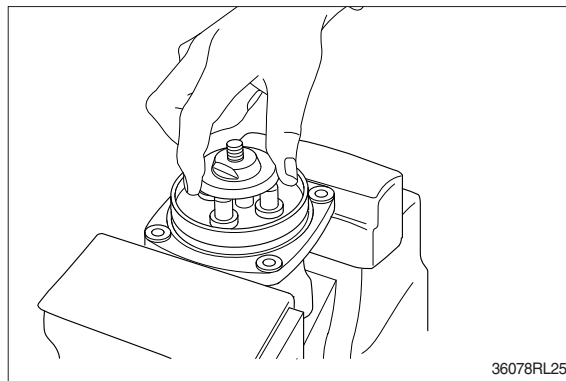


(11) Assemble adjusting nut (17), apply spanner to width across flat of plate (16) to fix it, and tighten adjusting nut to the specified torque.



- ※ During tightening, do not change position of disk.

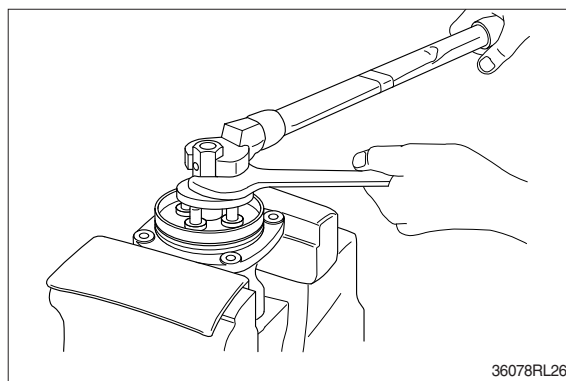


(12) Fit boot (14) to plate.

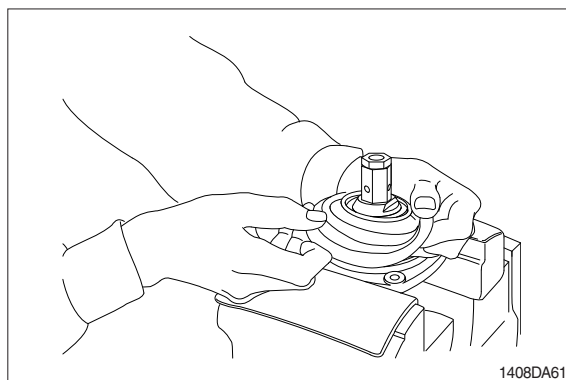


- (13) Fit boot (23) and lock nut (22), and handle subassembly is assembled completely.

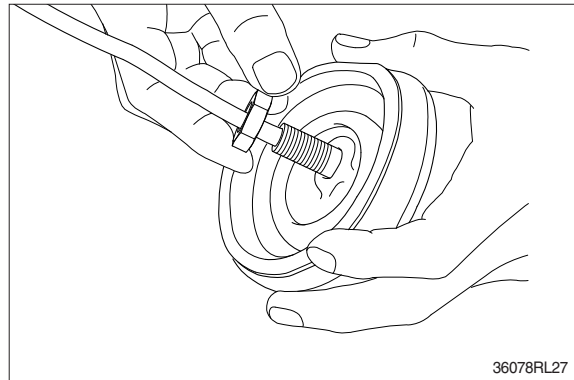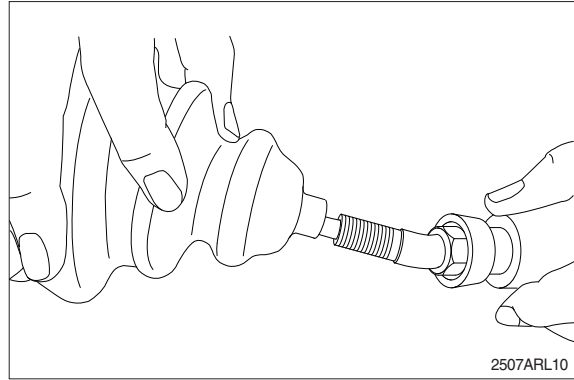


- (14) Pull out cord and tube through adjusting nut hole provided in direction 60 ° to 120 ° from casing hole.

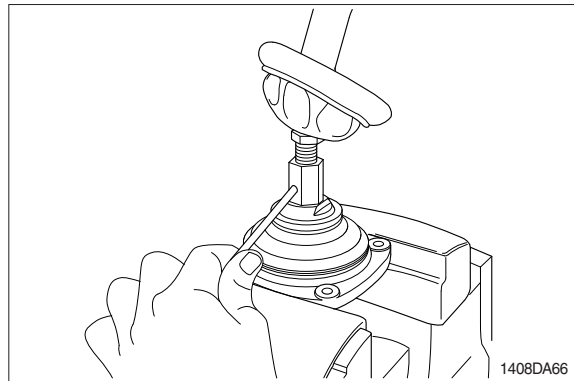


- (15) Assemble bushing (18) to plate and pass cord and tube through it.
※ Provide margin necessary to operation.

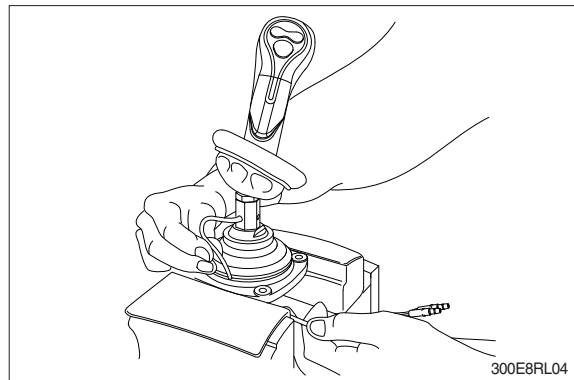


- (16) Determine handle direction, tighten lock nut (22) to specified torque to fix handle.

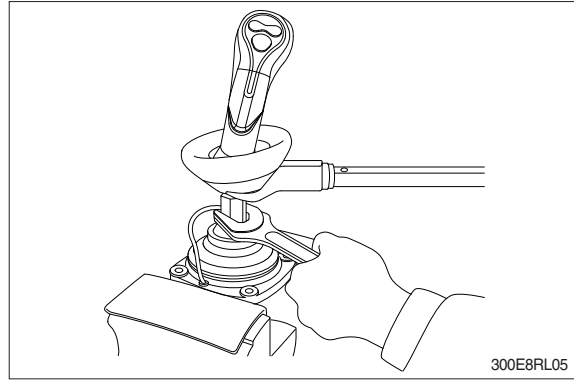

- (17) Apply grease to rotating section of joint and contacting faces of disk and push rod.

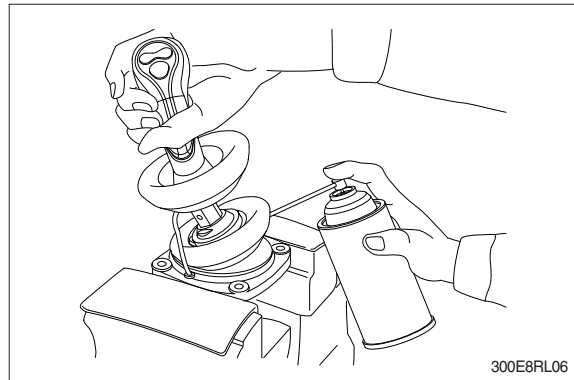

- (18) Assemble lower end of bellows to casing.
(19) Inject volatile rust-preventives through all ports and then put blind plugs in ports.

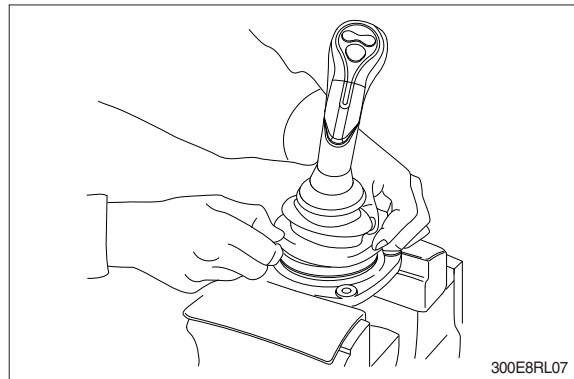

GROUP 8 TURNING JOINT

1. REMOVAL AND INSTALL

1) REMOVAL

- (1) Lower the work equipment to the ground and stop the engine.
- (2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.

- (3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ **Escaping fluid under pressure can penetrate the skin causing serious injury.**

※ When pipes and hoses are disconnected, the oil inside the piping will flow out, so catch it in oil pan.

- (4) Disconnect all hoses.


- (5) Sling the turning joint assembly (1) and remove the mounting bolt (2).

· Weight : 56 kg (123 lb)

· Tightening torque : $12.8 \pm 3.0 \text{ kgf} \cdot \text{m}$
($92.6 \pm 21.7 \text{ lbf} \cdot \text{ft}$)

- (6) Remove the turning joint assembly.


※ When removing the turning joint, check that all the hoses have been disconnected.

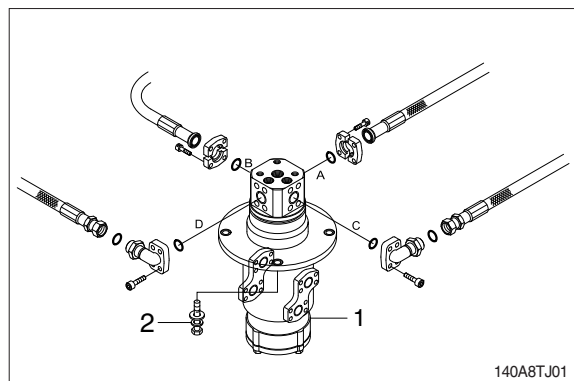

2) INSTALL


- (1) Carry out installation in the reverse order to removal.

※ Take care of turning joint direction.
※ Assemble hoses to their original positions.
※ Confirm the hydraulic oil level and check the hydraulic oil leak or not.

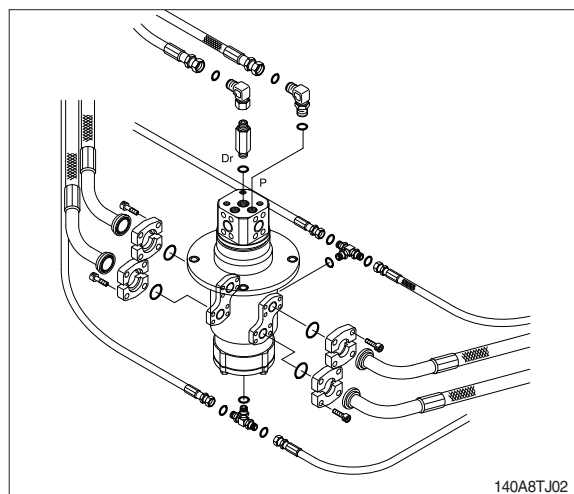

2. DISASSEMBLY AND ASSEMBLY

1) STRUCTURE

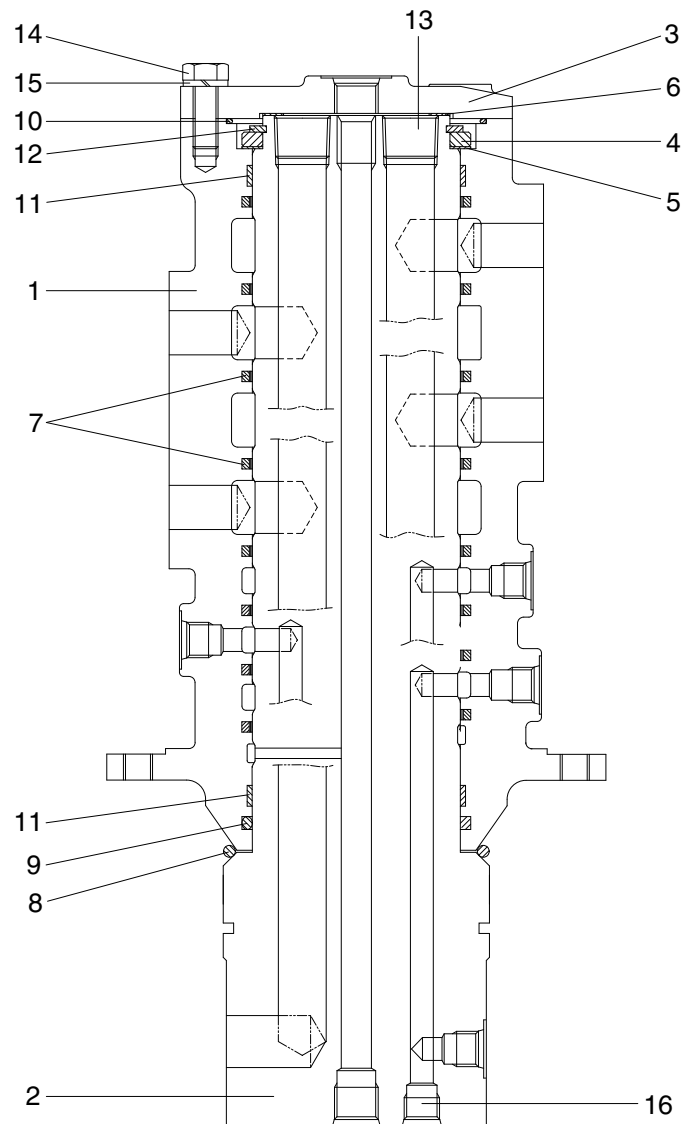


140A8TJ03

- | | | | | | |
|---|--------|----|---------------|----|---------------|
| 1 | Hub | 7 | Slipper seal | 13 | Plug |
| 2 | Shaft | 8 | O-ring | 14 | Hexagon bolt |
| 3 | Cover | 9 | O-ring | 15 | Spring washer |
| 4 | Spacer | 10 | O-ring | 16 | Plug |
| 5 | Shim | 11 | Wear ring | | |
| 6 | Shim | 12 | Retainer ring | | |

2) DISASSEMBLY


※ Before the disassembly, clean the turning joint.

- (1) Remove bolts (14), washer (15) and cover (3).

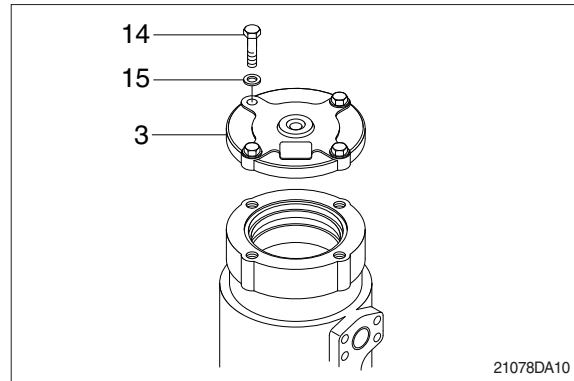

- (2) Remove shim (6) and O-ring (10).


- (3) Remove retainer ring (12), spacer (4) and shim (5).

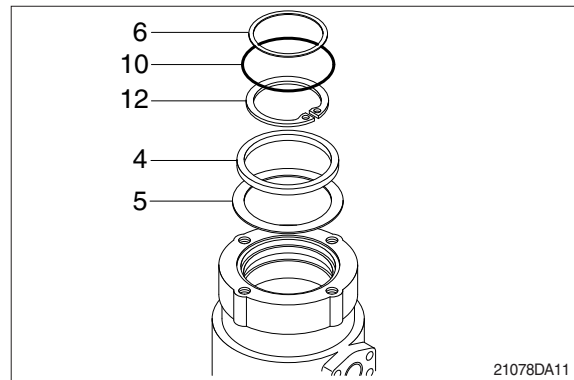


- (4) Place hub (1) on a V-block and by using a wood buffer at the shaft end, hit out shaft (2) to about 1/2 from the body with a hammer.

※ Take care not to damage the shaft (2) when remove hub (1) or rest it sideways.

※ Put a fitting mark on hub (1) and shaft (2).

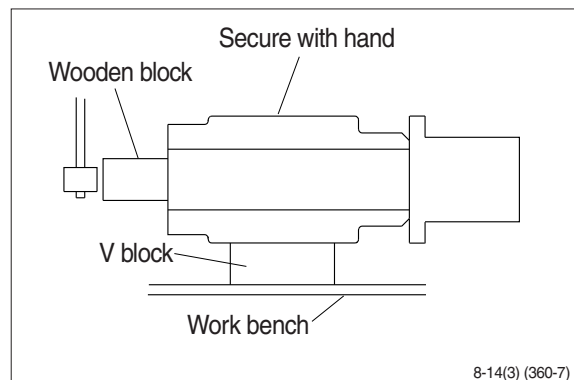

- (5) Remove six slipper seals (7) and O-ring (9), two wear ring (11) from hub (1).

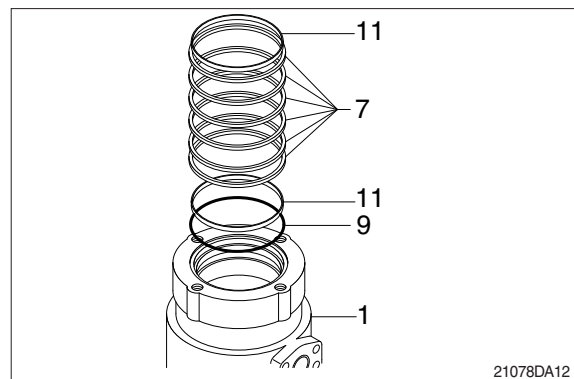


3) ASSEMBLY


- ※ Clean all parts.
- ※ As a general rule, replace oil seals and O-ring.
- ※ Coat the sliding surfaces of all parts with engine oil or grease before installing.

(1) Fix seven slipper seal (7) and O-ring (9), two wear ring (11) to hub (1).

(2) Fit O-ring (8) to shaft (2).

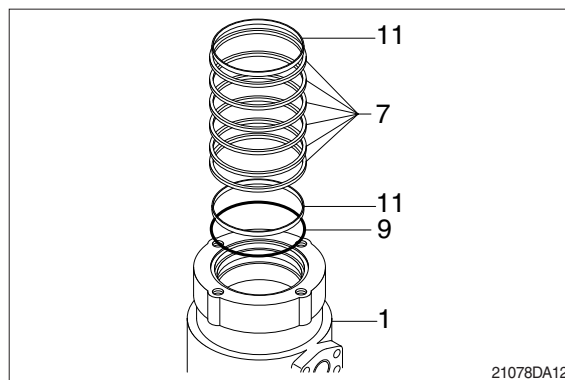


(3) Set shaft (2) on block, tap hub (1) with a plastic hammer to install.

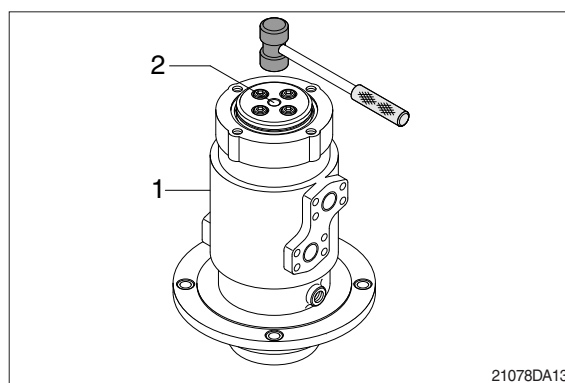

(4) Fit shim (5), spacer (4) and retainer ring (12) to shaft (2).


(5) Fit O-ring (10) to hub (1).

(6) Fit shim (6) to shaft (2).

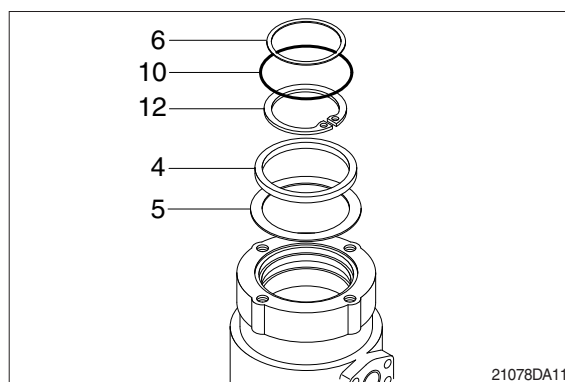

(7) Install cover (3) to body (1) and tighten bolts (14).

· Torque : 10~12.5 kgf · m
(72.3~90.4 lbf · ft)

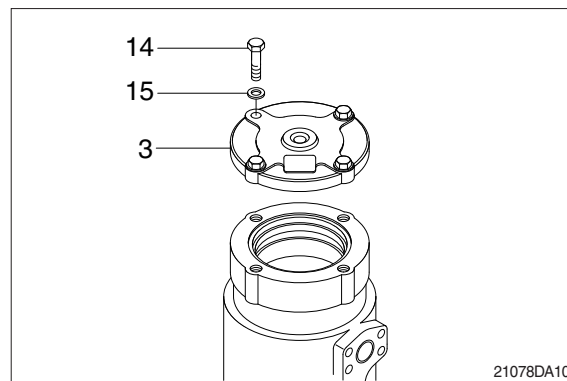

GROUP 9 BOOM, ARM AND BUCKET CYLINDER

1. REMOVAL AND INSTALL

1) BUCKET CYLINDER


(1) Removal

- ※ Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.
- ※ Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.
- ※ Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ Escaping fluid under pressure can penetrate the skin causing serious injury.


- ※ Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.

- ① Set block between bucket cylinder and arm.

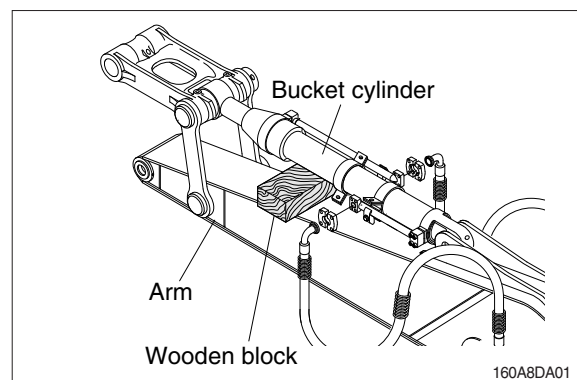


- ② Remove bolt (2), nut (3) and pull out pin (1).


- ※ Tie the rod with wire to prevent it from coming out.
 - Tightening torque (2) : $29.7 \pm 4.5 \text{ kgf} \cdot \text{m}$
($215 \pm 32.5 \text{ lbf} \cdot \text{ft}$)

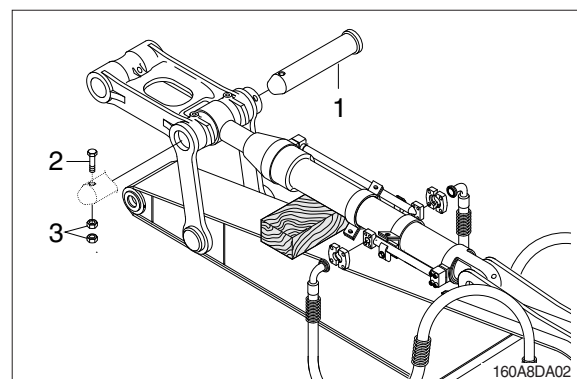

- ③ Disconnect bucket cylinder hoses (4), grease line hose (7) and put plugs (5) on cylinder pipe.

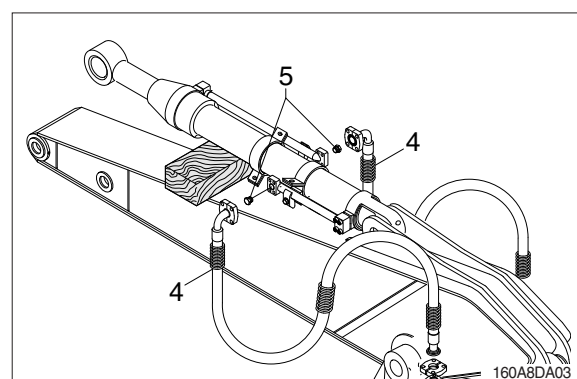

- ④ Sling bucket cylinder assembly (8) and remove bolt (6) then pull out pin (5).
- ⑤ Remove bucket cylinder assembly (8).
 - Weight : 104 kg (229 lb)
 - Tightening torque (6) : 29.7 ± 4.5 kgf · m
(215 ± 32.5 lbf · ft)

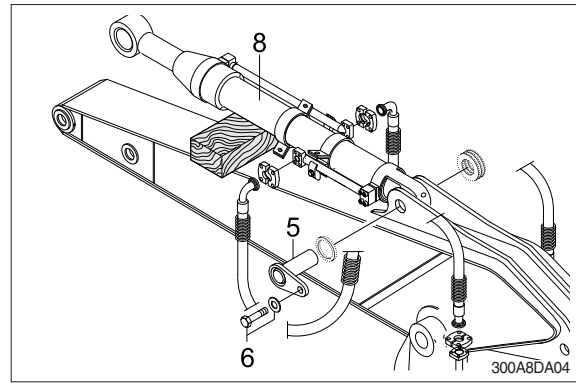

(2) Install

- ① Carry out installation in the reverse order to removal.
- ▲ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.**
- ※ Bleed the air from the bucket cylinder.
 - ※ Confirm the hydraulic oil level and check the hydraulic oil leak or not.


2) ARM CYLINDER

(1) Removal


- ※ Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.
- ※ Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.
- ※ Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ Escaping fluid under pressure can penetrate the skin causing serious injury.


- ※ Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.
- ① Set block between arm cylinder and boom.

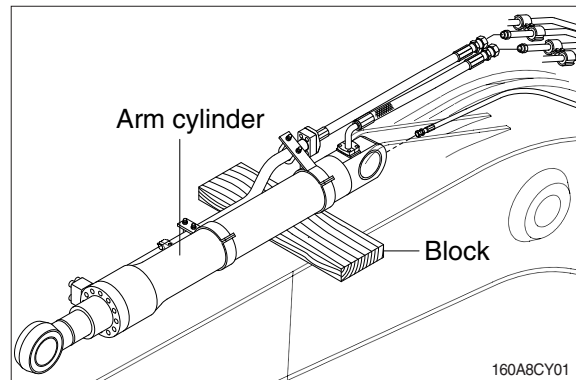


- ② Disconnect grease line hose (9).
- ③ Remove bolt (2) and pull out pin (1).
- ※ Tie the rod with wire to prevent it from coming out.
 - Tightening torque (2) : $29.7 \pm 4.5 \text{ kgf} \cdot \text{m}$
($215 \pm 32.5 \text{ lbf} \cdot \text{ft}$)

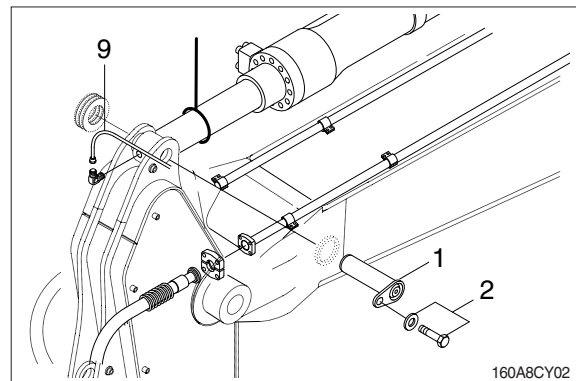

- ④ Disconnect arm cylinder hoses (4) and put plugs on cylinder pipe.
- ⑤ Disconnect greasing pipings (5).

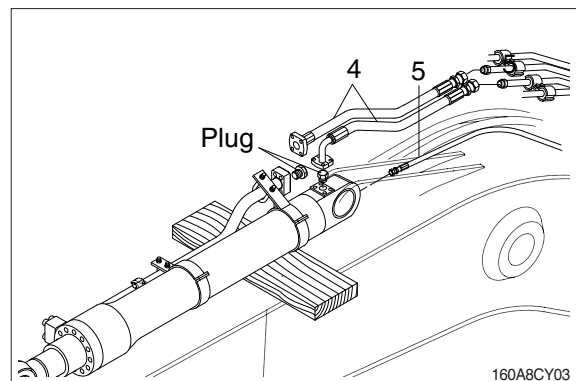

- ⑥ Sling arm cylinder assembly(8) and remove bolt (7) then pull out pin (6).
- Tightening torque (7) : $29.7 \pm 4.5 \text{ kgf} \cdot \text{m}$
($215 \pm 32.5 \text{ lbf} \cdot \text{ft}$)
- ⑦ Remove arm cylinder assembly (8).
- Weight : 145 kg (320 lb)

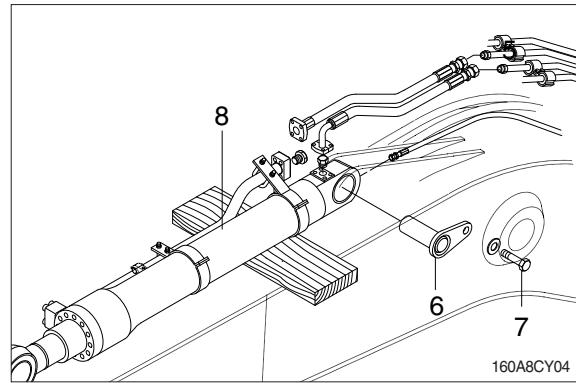

(2) Install

- ① Carry out installation in the reverse order to removal.
- ▲ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.**
- ※ Bleed the air from the arm cylinder.
 - ※ Confirm the hydraulic oil level and check the hydraulic oil leak or not.


3) BOOM CYLINDER

(1) Removal


- ※ Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.
- ※ Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.
- ※ Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ Escaping fluid under pressure can penetrate the skin causing serious injury.


- ※ Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.
- ① Disconnect greasing hoses (1).
- ② Sling boom cylinder assembly.

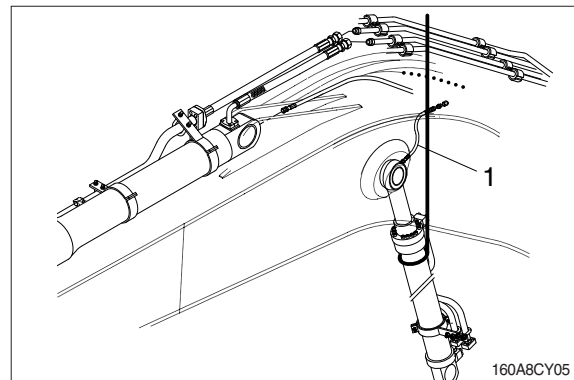


- ③ Remove bolt (4), stopper (5) and pull out pin (2).
- ※ Tie the rod with wire to prevent it from coming out.
 - Tightening torque (4) : $29.7 \pm 4.5 \text{ kgf} \cdot \text{m}$
($215 \pm 32.5 \text{ lbf} \cdot \text{ft}$)

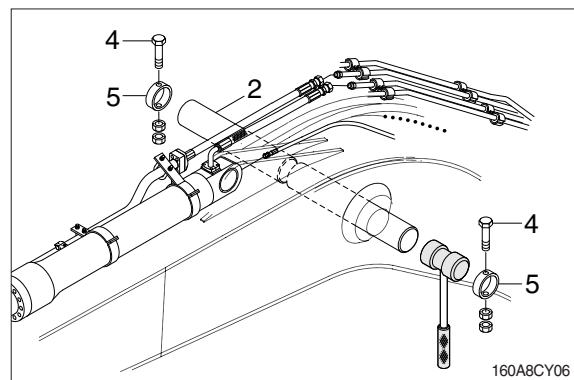


- ④ Lower the boom cylinder assembly (6) on a stand.

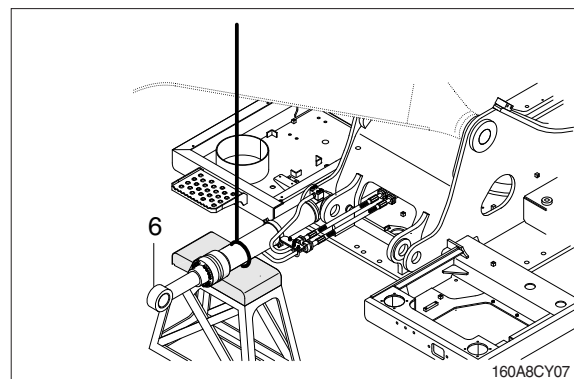

- ⑤ Disconnect boom cylinder hoses (7) and put plugs on cylinder pipe.

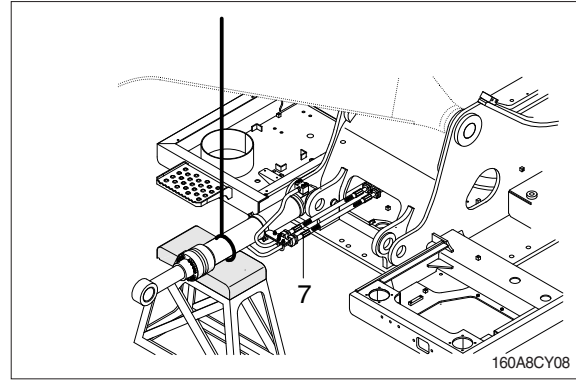

- ⑥ Remove bolt (9) and pull out pin (8).
· Tightening torque (9) : $29.7 \pm 4.5 \text{ kgf} \cdot \text{m}$
($215 \pm 32.5 \text{ lbf} \cdot \text{ft}$)
- ⑦ Remove boom cylinder assembly (6).
· Weight : 119 kg (262 lb)

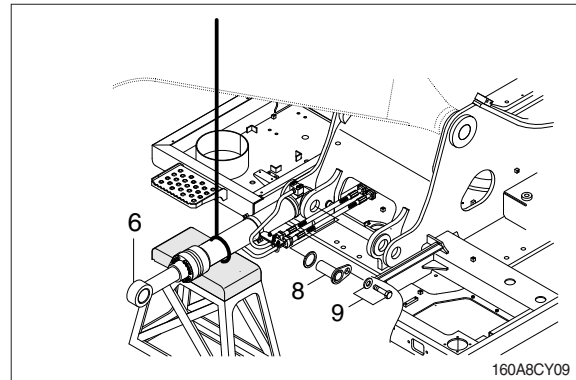

(2) Install

- ① Carry out installation in the reverse order to removal.


▲ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.

- ※ Bleed the air from the boom cylinder.
- ※ Confirmed the hydraulic oil level and check the hydraulic oil leak or not.


2. DISASSEMBLY AND ASSEMBLY

1) STRUCTURE

(1) Bucket cylinder

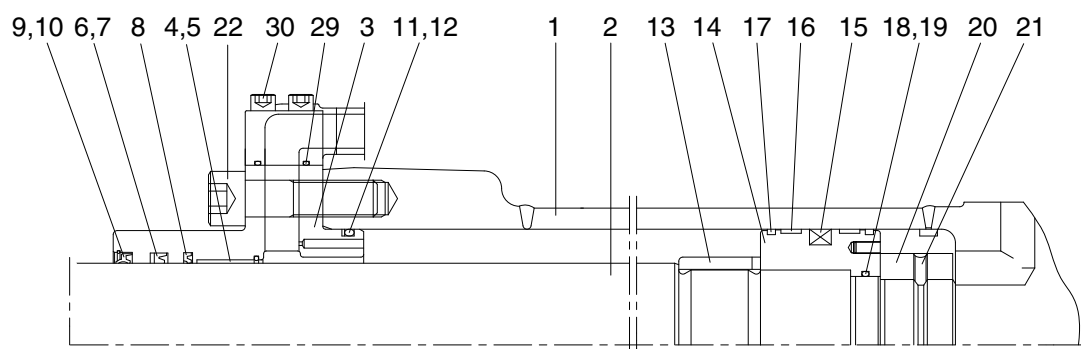


Internal detail

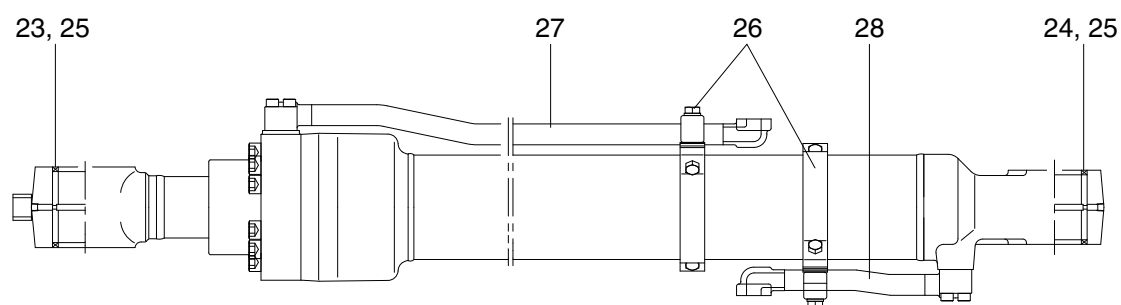


31K4-60111C

1	Tube assembly	11	O-ring	21	Hex socket headless set screw
2	Rod assembly	12	Back up ring	22	Hexagon socket head bolt
3	Gland	13	Cushion ring	23	Dimple bushing
4	DD2 bushing	14	Piston	24	Dimple bushing
5	Snap ring	15	Piston seal	25	Dust seal
6	Rod seal	16	Wear ring	26	Band assembly
7	Back up ring	17	Dust ring	27	Pipe assembly-R
8	Buffer ring	18	O-ring	28	Pipe assembly-B
9	Dust wiper	19	Back up ring	29	O-ring
10	Snap ring	20	Lock nut	30	Hexagon socket head bolt

Bucket cylinder (DY POWER)

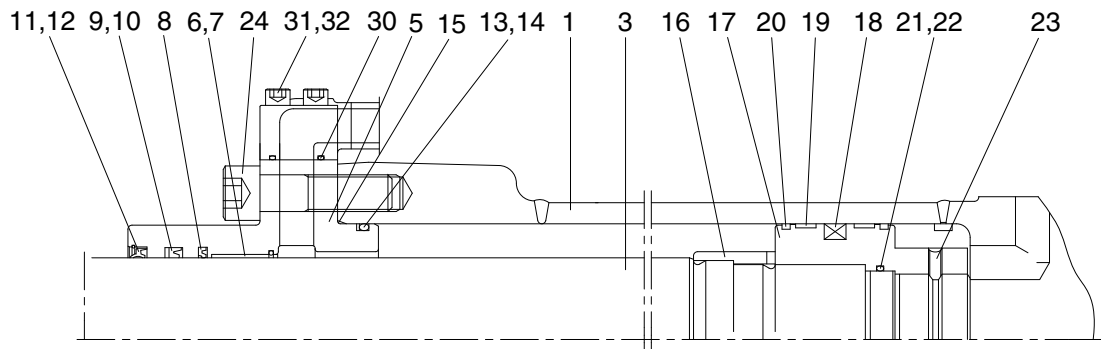


Internal detail

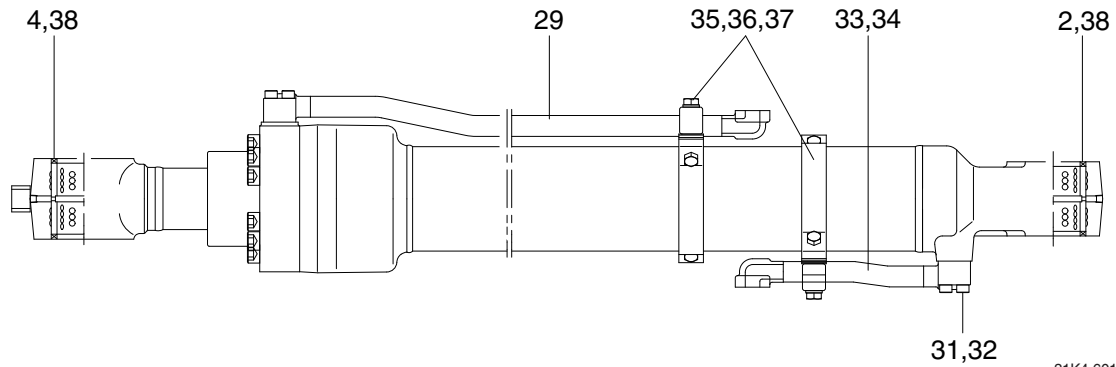


31K4-60111E

1	Tube assembly	14	Back up ring	27	Hexagon bolt
2	Pin bushing	15	O-ring	28	Spring washer
3	Rod assembly	16	Cushion ring	29	Pipe assy
4	Pin bushing	17	Piston	30	O-ring
5	Rod cover	18	Piston seal	31	Hexagon socket head bolt
6	Rod bushing	19	Wear ring	32	Spring washer
7	Retaining ring	20	Dust ring	33	Pipe assy
8	Buffer seal	21	O-ring	34	O-ring
9	U-packing	22	Back up ring	35	Clamp
10	Back up ring	23	Set screw	36	Spring washer
11	Dust wiper	24	Hexagon socket head bolt	37	Hexagon nut
12	Retaining ring	25	Pipe band assy	38	Pin wiper
13	O-ring	26	Pipe band		

(2) Arm cylinder (CHANGZHOU)

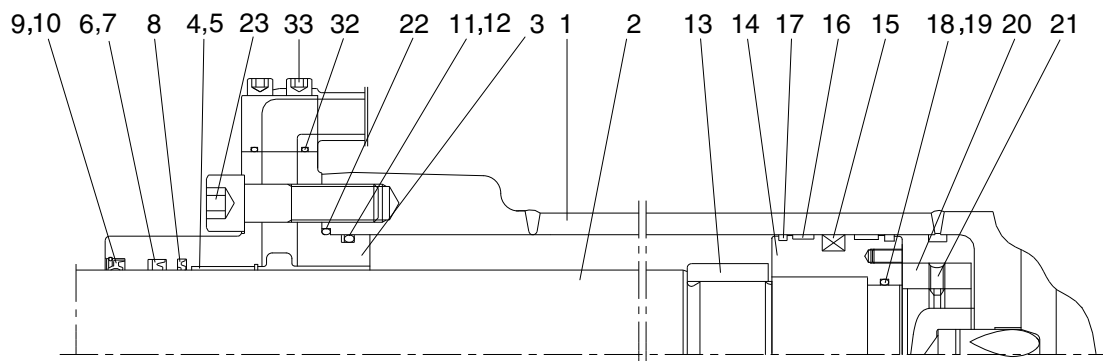


Internal detail

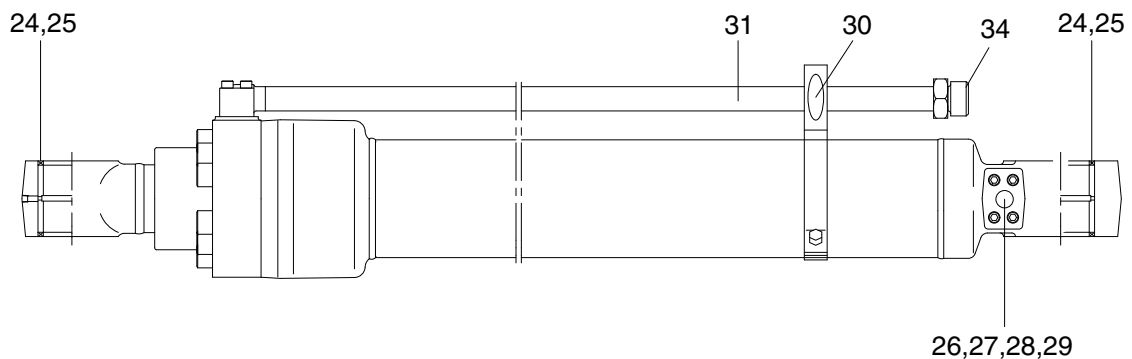


31K4-50150C

1	Tube assembly	13	Cushion ring	25	Dust seal
2	Rod assembly	14	Piston	26	Check valve
3	Gland	15	Piston seal	27	Coil spring
4	DD2 bushing	16	Wear ring	28	O-ring
5	Snap ring	17	Dust ring	29	Plug
6	Rod seal	18	O-ring	30	Band assembly
7	Back up ring	19	Back up ring	31	Pipe assembly-R
8	Buffer ring	20	Lock nut	32	O-ring
9	Dust wiper	21	Hex socket headless set screw	33	Hexagon socket head bolt
10	Snap ring	22	O-ring	34	O-ring
11	O-ring	23	Hexagon socket head bolt		
12	Back up ring	24	Dimple bushing		

Arm cylinder (DY POWER)

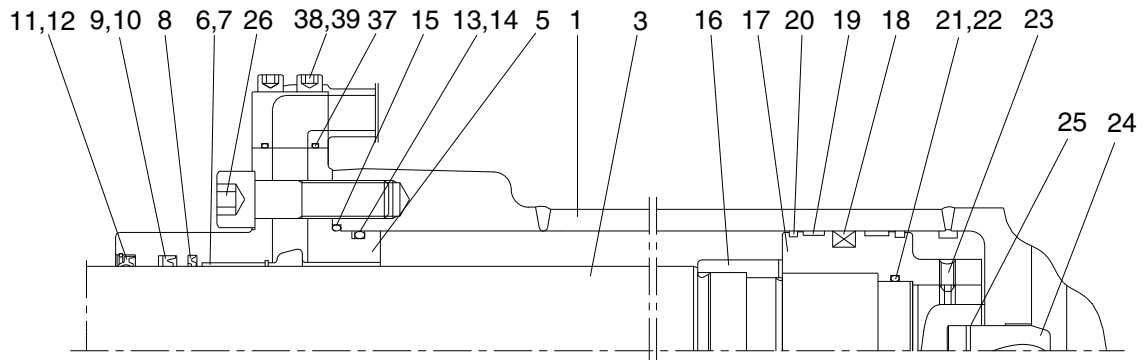


Internal detail

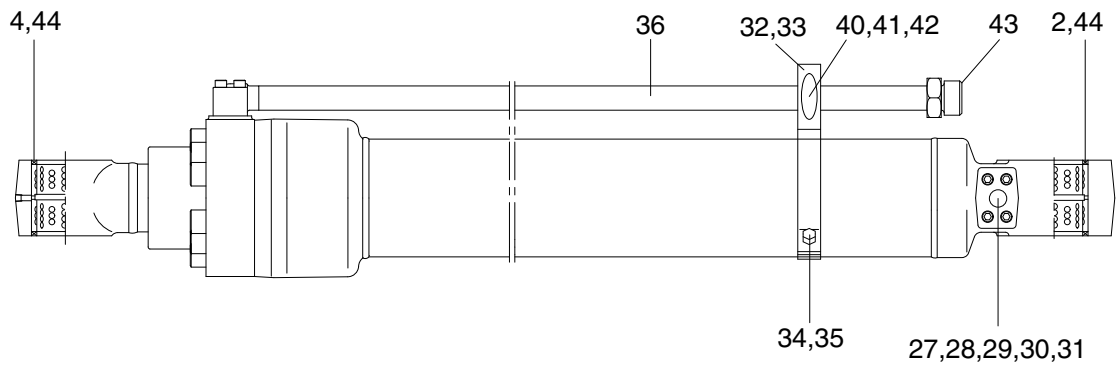


31K4-50150E

1 Tube assembly	16 Cushion ring	31 Plug
2 Pin bushing	17 Piston	32 Pipe band assy
3 Rod assembly	18 Piston seal	33 Pipe band
4 Pin bushing	19 Wear ring	34 Hexagon bolt
5 Rod cover	20 Dust ring	35 Washer
6 Rod bushing	21 O-ring	36 Pipe assy
7 Retaining ring	22 Back up ring	37 O-ring
8 Buffer seal	23 Set screw	38 Hexagon socket head bolt
9 U-packing	24 Cushion plunger	39 Spring washer
10 Back up ring	25 Stop ring	40 U-bolt
11 Dust wiper	26 Hexagon socket head bolt	41 Spring washer
12 Retaining ring	27 Check	42 Hexagon nut
13 O-ring	28 Spring	43 O-ring
14 Back up ring	29 Bracket	44 Pin wiper
15 O-ring	30 O-ring	

(3) Boom cylinder (CHANGZHOU)

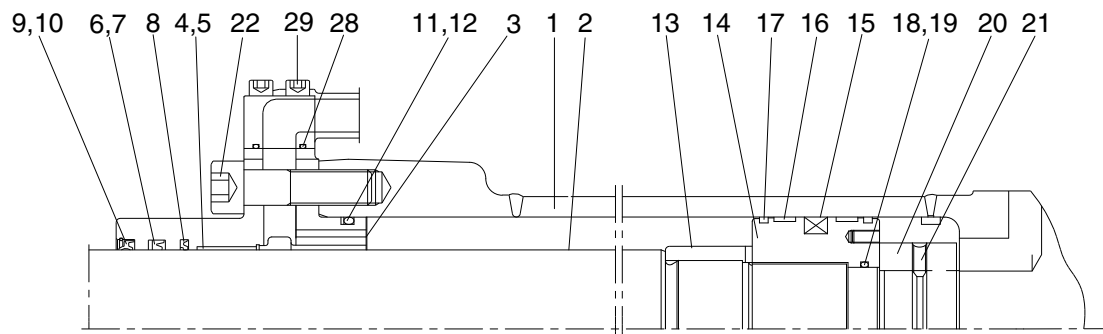


Internal detail

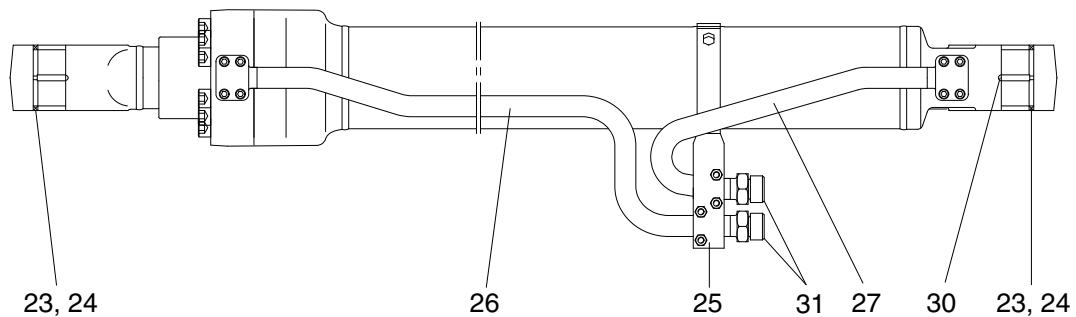


31Q4-50111CGG

- | | | |
|-----------------|----------------------------------|-----------------------------|
| 1 Tube assembly | 12 Back up ring | 23 Dimple bushing |
| 2 Rod assembly | 13 Cushion ring | 24 Dust seal |
| 3 Gland | 14 Piston | 25 Band assembly |
| 4 DD2 bushing | 15 Piston seal | 26 Pipe assembly-R |
| 5 Snap ring | 16 Wear ring | 27 Pipe assembly-B |
| 6 Rod seal | 17 Dust ring | 28 O-ring |
| 7 Back up ring | 18 O-ring | 29 Hexagon socket head bolt |
| 8 Buffer ring | 19 Back up ring | 30 Socket plug |
| 9 Dust wiper | 20 Lock nut | 31 O-ring |
| 10 Snap ring | 21 Hex socket headless set screw | |
| 11 O-ring | 22 Hexagon socket head bolt | |

Boom cylinder (DY POWER)

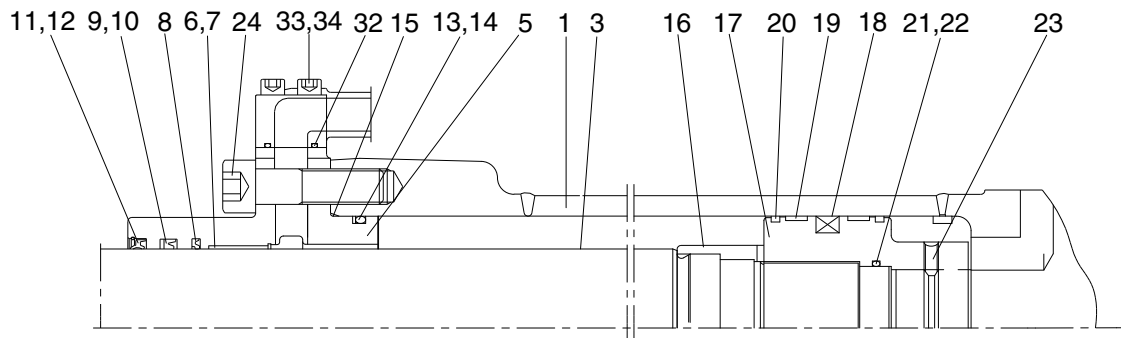


Internal detail

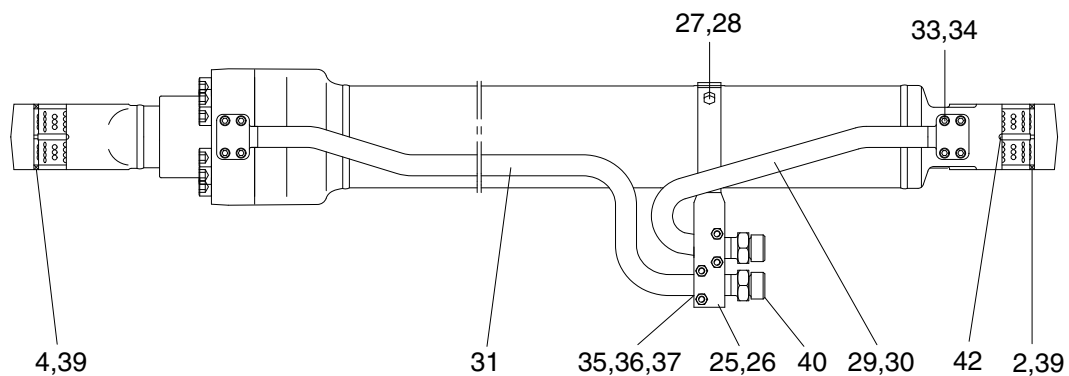

31Q4-50111EGG

1	Tube assembly	15	O-ring	29	Pipe assy
2	Pin bushing	16	Cushion ring	30	O-ring
3	Rod assembly	17	Piston	31	Pipe assy
4	Pin bushing	18	Piston seal	32	O-ring
5	Rod cover	19	Wear ring	33	Spring washer
6	Rod bushing	20	Dust ring	34	Hexagon socket head bolt
7	Retaining ring	21	O-ring	35	U-bolt
8	Buffer seal	22	Back up ring	36	Spring washer
9	U-packing	23	Set screw	37	Hexagon nut
10	Back up ring	24	Hexagon socket head bolt	38	O-ring
11	Dust wiper	25	Pipe band assy	39	Pin wiper
12	Retaining ring	26	Pipe band	40	O-ring
13	O-ring	27	Hexagon bolt	42	Plug
14	Back up ring	28	Spring washer		

(4) Dozer cylinder (SH PAC)

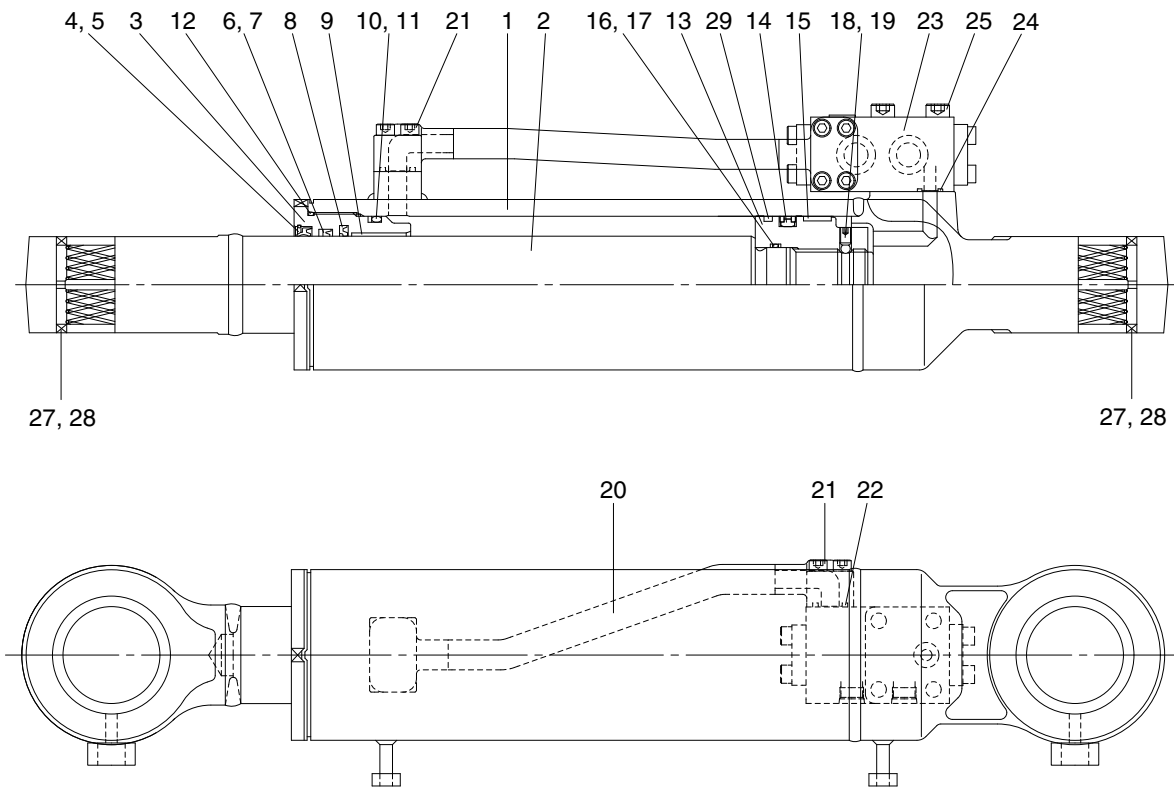

31Q4-70011


1	Tube assembly	11	Back up ring	21	Hexagon socket head bolt
2	Rod assembly	12	O-ring	22	O-ring
3	Gland	13	Piston	23	Check valve assembly
4	Dust wiper	14	Piston seal	24	O-ring
5	Retainer ring	15	Wear ring	25	Hexagon socket head bolt
6	Rod seal	16	O-ring	27	Pin bushing
7	Back up ring	17	Back up ring	28	Dust seal
8	Buffer ring	18	Steel ball	29	Dust ring
9	Dry bearing	19	Set screw		
10	O-ring	20	Pipe assembly		

Technical drawing of a cable assembly with callouts: 4,38; 27,28; 31; 35,36; 25,26; 37; 29,30; 41; 2,38.

1	Tube assembly	14	Back up ring	27	Hexagon bolt
2	Pin bushing	15	O-ring	28	Spring washer
3	Rod assembly	16	Cushion ring	29	Pipe assembly
4	Pin bushing	17	Piston	30	O-ring
5	Rod cover	18	Piston seal	31	Pipe assembly
6	Rod bushing	19	Wear ring	32	O-ring
7	Retaining ring	20	Dust ring	33	Spring washer
8	Buffer seal	21	O-ring	34	Hexagon socket head bolt
9	U-packing	22	Back up ring	35	Spring washer
10	Back up ring	23	Set screw	36	Hexagon bolt
11	Dust wiper	24	Hexagon socket bolt	37	O-ring
12	Retaining ring	25	Band assembly	38	Pin wiper
13	O-ring	26	Pipe band	41	Plug

2) TOOLS AND TIGHTENING TORQUE

 (1) Tools

Tools	Remark	
Allen wrench	6	
	8	
	10	
	12	
	14	
Spanner	7	
	8	
(-) Driver	Small and large sizes	
Torque wrench	Capable of tightening with the specified torques	

(2) Tightening torque

Part name		Item	Size	Torque	
				kgf · m	lbf · ft
Socket head bolt	Bucket cylinder	22★1★3	M14	15±2.0	108±14.5
		24★1★4	M14	19±1.0	137±7.2
		30★3	M10	5.4±0.5	39.1±3.6
		31★4	M10	5.75±0.25	41.6±1.8
	Boom cylinder	22★1★3	M14	15±2.0	108±14.5
		24★1★4	M14	19±1.0	137±7.2
		29★3	M8	2.7±0.3	19.5±2.2
		33★4	M8	3.25±0.25	23.5±1.8
	Arm cylinder	23★1★3	M16	23±2.0	166±14.5
		26★1★4	M16	30±2.0	217±14.5
		33★3	M10	5.4±0.5	39.1±3.6
		38★4	M10	5.75±0.25	41.6±11.8
	Dozer cylinder	21★5	M8	2.7±0.3	19.5±2.2
		25★5	M10	5.4±0.5	39.1±3.6
	Adjust cylinder	24★4	M14	19±1.0	137±7.2
		33★4	M8	3.25±0.25	23.5±1.8
Gland	Dozer cylinder	3★5	M105	85±8.5	615±61.5
Lock nut	Bucket cylinder	20★3	-	100±10.0	723±72.3
	Boom cylinder	20★3	-	100±10.0	723±72.3
	Arm cylinder	20★3	-	100±10.0	723±72.3

★1 : Apply loctite #243 on the thread of bolt.

★3 : CHANGZHOU

★4 : DY POWER

★5 : SH PAC

Part name		Item	Size	Torque	
				kgf · m	lbf · ft
Piston	Bucket cylinder	14★ ³	-	150±15.0	1085±108
		17★ ⁴	M60	130±13	940±94.0
	Boom cylinder	14★ ³	-	150±15.0	1085±108
		17★ ⁴	M65	130±13	940±94.0
	Arm cylinder	14★ ³ 17★ ⁴	- M70	150±15 190±19	1085±108 1374±137
Dozer cylinder	13★ ⁵	M52	150±15	1085±108	
Adjust cylinder	17★ ⁴	M65	130±13	940±94.0	
Set screw	Bucket cylinder	21★ ³	M8	2.7±0.3	19.5±2.2
		23★ ⁴	M12	5.25±0.25	38.0±1.8
	Boom cylinder	21★ ³	M8	2.7±0.3	19.5±2.2
		23★ ⁴	M12	5	36.2
	Arm cylinder	21★ ³ 23★ ⁴	M8 M12	2.7±0.3 5	19.5±2.2 36.2
Dozer cylinder	19★ ⁵	M8	2.7±0.3	19.5±2.2	
Adjust cylinder	23★ ⁴	M12	5	36.2	

★¹ : Apply loctite #243 on the thread of bolt.

★³ : CHANGZHOU

★⁴ : DY POWER

★⁵ : SH PAC

3) DISASSEMBLY


(1) Remove cylinder head and piston rod

※ Procedures are based on the bucket cylinder.

① Hold the clevis section of the tube in a vise.


※ Use mouth pieces so as not to damage the machined surface of the cylinder tube. Do not make use of the outside piping as a locking means.

② Pull out rod assembly (2) about 200mm (7.1in). Because the rod assembly is rather heavy, finish extending it with air pressure after the oil draining operation.

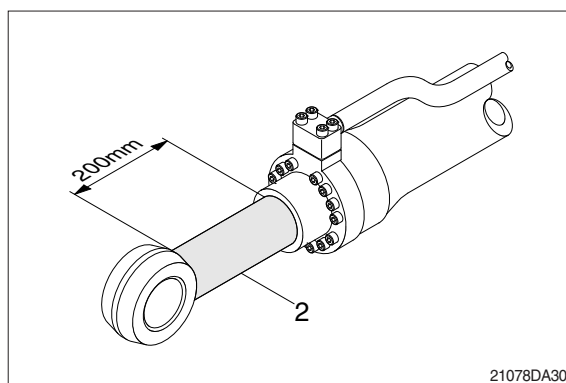


③ Loosen and remove socket bolts (22) of the gland in sequence.

※ Cover the extracted rod assembly (2) with rag to prevent it from being accidentally damaged during operation.

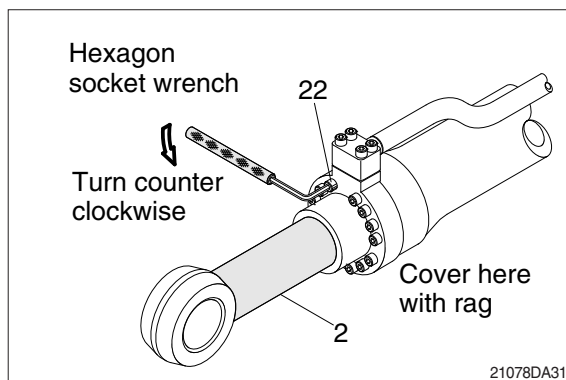


④ Draw out cylinder head and rod assembly together from tube assembly (1).

※ Since the rod assembly is heavy in this case, lift the tip of the rod assembly (2) with a crane or some means and draw it out. However, when rod assembly (2) has been drawn out to approximately two thirds of its length, lift it in its center to draw it completely.

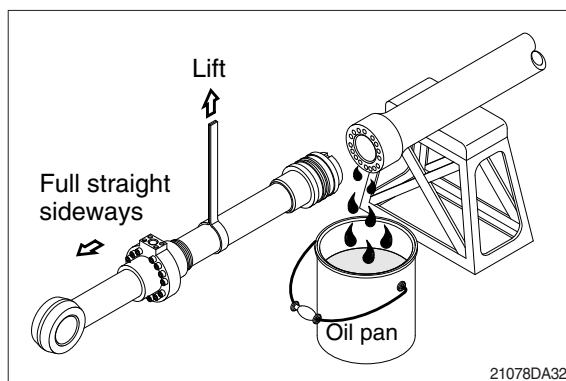


Note that the plated surface of rod assembly (2) is to be lifted. For this reason, do not use a wire sling and others that may damage it, but use a strong cloth belt or a rope.

- ⑤ Place the removed rod assembly on a wooden V-block that is set level.
- ※ Cover a V-block with soft rag.

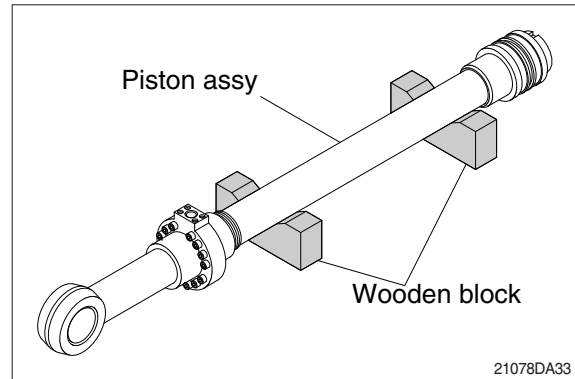


(2) Remove piston and cylinder head

- ① Remove set screw (21).
- ※ Since set screw (21) and lock nut (20) is tightened to a high torque, use a hydraulic and power wrench that utilizes a hydraulic cylinder, to remove the lock set screw (21) and lock nut (20).
- ② Remove piston assembly (14), back up ring (19), and O-ring (18).

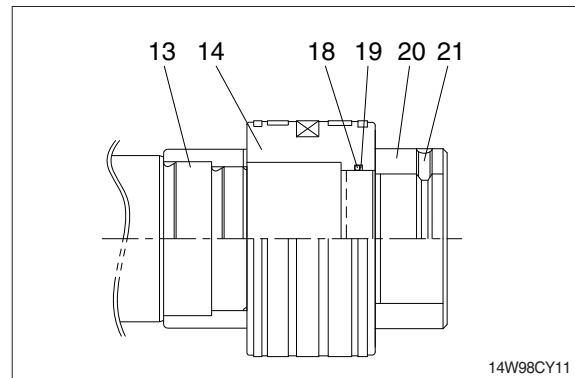


- ③ Remove the cylinder head assembly from rod assembly (2).
- ※ If it is too heavy to move, move it by striking the flanged part of cylinder head with a plastic hammer.
- ※ Pull it straight with cylinder head assembly lifted with a crane. Exercise care so as not to damage the lip of rod bushing (4) and packing (5,6,7,8,9,10) by the threads of rod assembly (2).

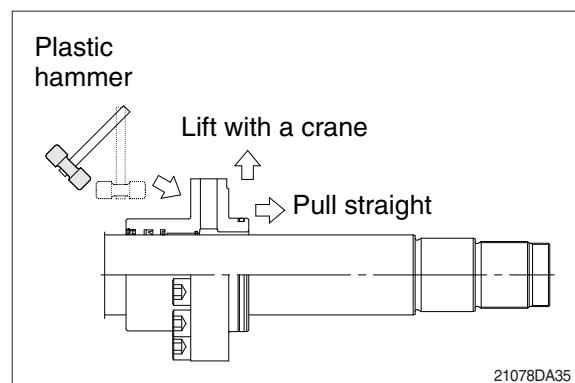


(3) Disassemble the piston assembly

- ① Remove wear ring (16).
 - ② Remove dust ring (17) and piston seal (15).
- ※ Exercise care in this operation not to damage the grooves.

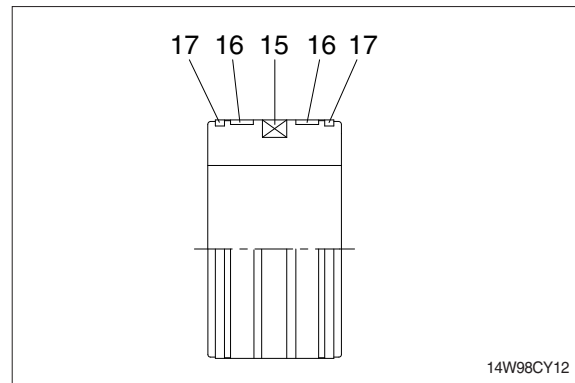

(4) Disassemble cylinder head assembly

- ① Remove back up ring (12) and O-ring (11).
 - ② Remove snap ring (10), dust wiper (9).
 - ③ Remove back up ring (7), rod seal (6) and buffer ring (8).
- ※ Exercise care in this operation not to damage the grooves.
- ※ Do not remove seal and ring, if does not damaged.
- ※ Do not remove bushing (4).

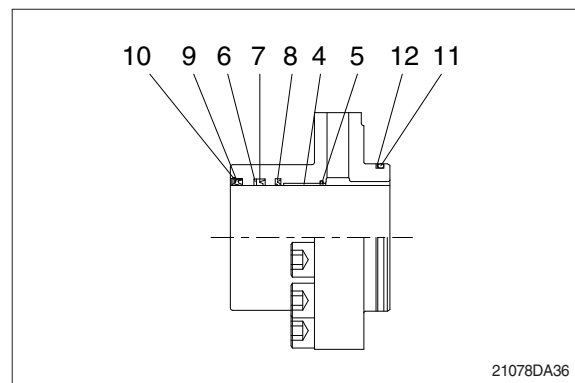


3) ASSEMBLY

(1) Assemble cylinder head assembly

- ※ Check for scratches or rough surfaces if found smooth with an oil stone.


- ① Coat the inner face of gland (3) with hydraulic oil.

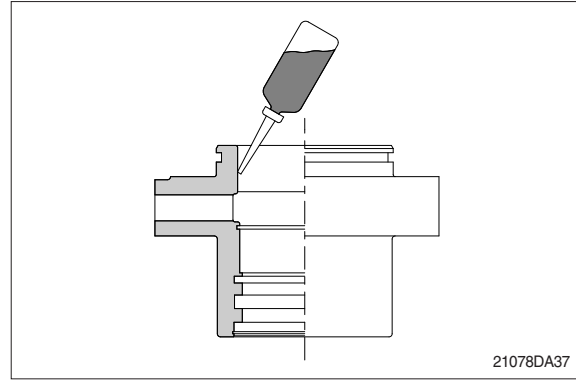

- ② Coat dust wiper (9) with grease and fit dust wiper (9) to the bottom of the hole of dust seal.

At this time, press a pad metal to the metal ring of dust seal.


- ③ Fit snap ring (10) to the stop face.

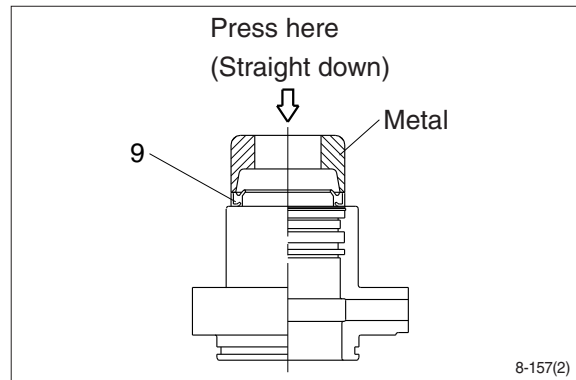

- ④ Fit back up ring (7), rod seal (6) and buffer ring (8) to corresponding grooves, in that order.


- ※ Coat each packing with hydraulic oil before fitting it.

- ※ Insert the backup ring until one side of it is inserted into groove.

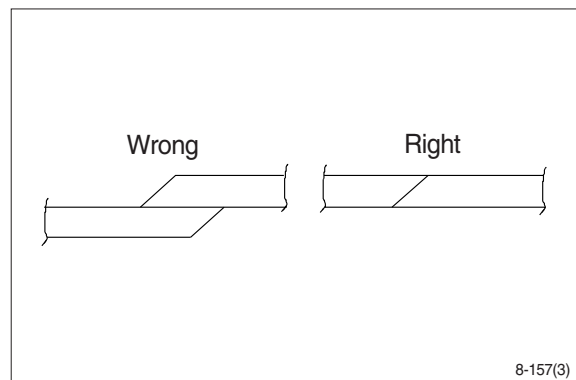


- ※ Rod seal (6) has its own fitting direction. Therefore, confirm it before fitting them.

- ※ Fitting rod seal (6) upside down may damage its lip. Therefore check the correct direction that is shown in fig.

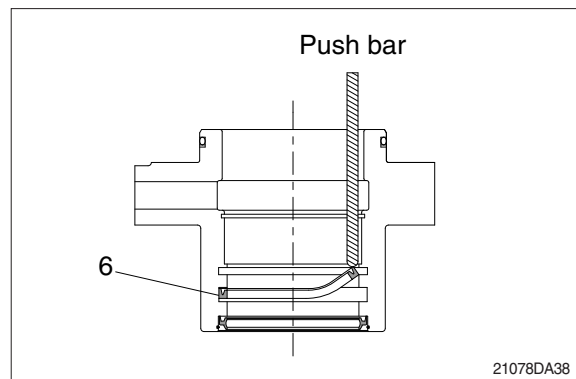


- ⑤ Fit back up ring (12) to gland (3).
- ※ Put the backup ring in the warm water of 30~50°C.
- ⑥ Fit O-ring (11) to gland (3).

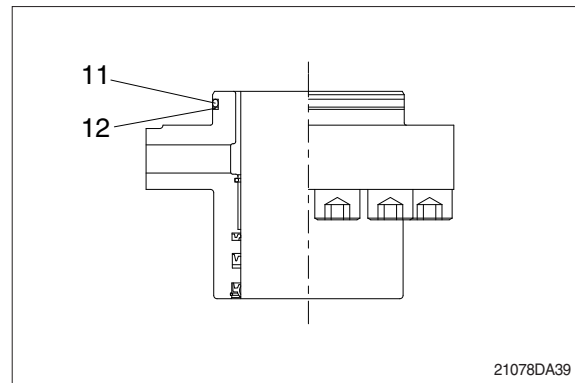


(2) Assemble piston assembly


- ※ Check for scratches or rough surfaces.
If found smooth with an oil stone.
- ① Coat the outer face of piston (14) with hydraulic oil.

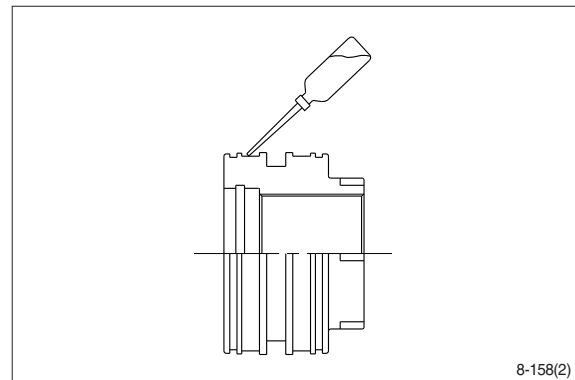

- ② Fit piston seal (15) to piston.
- ※ Put the piston seal in the warm water of 60~100°C for more than 5 minutes.
- ※ After assembling the piston seal, press its outer diameter to fit in.

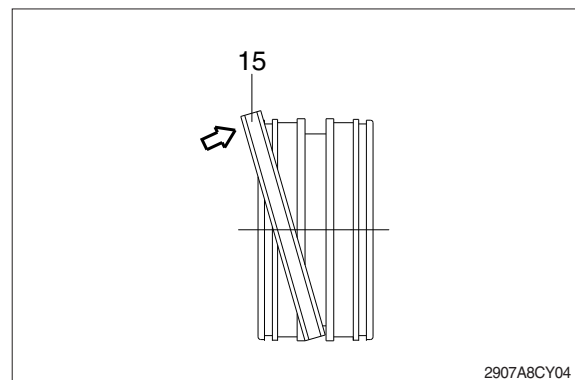


- ③ Fit wear ring (16) and dust ring (17) to piston (14).

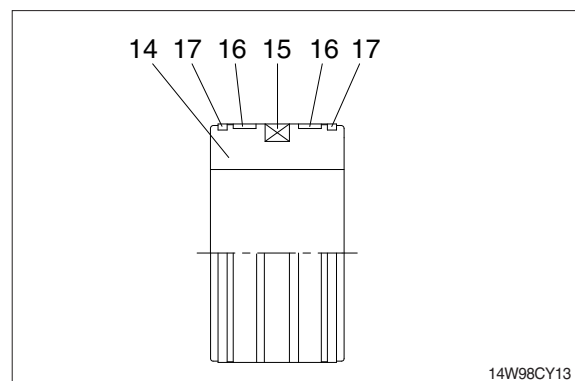


(3) Install piston and cylinder head


- ① Fix the rod assembly to the work bench.
- ② Apply hydraulic oil to the outer surface of rod assembly (2), the inner surface of piston and cylinder head.
- ③ Insert cylinder head assembly to rod assembly.

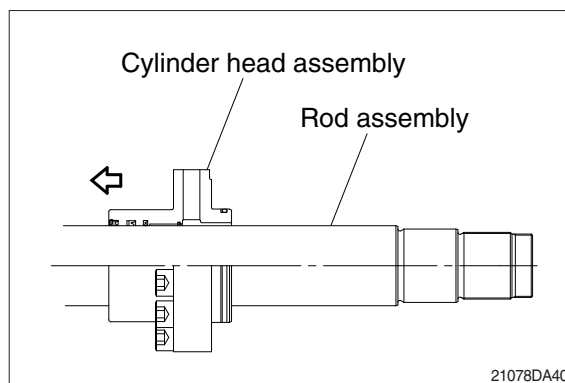


- ④ Insert cushion ring (13) to rod assembly.
- ※ Note that cushion ring (13) has a direction in which it should be fitted.

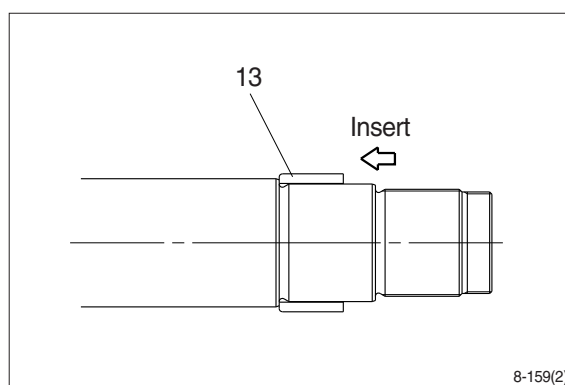

- ⑤ Fit piston assembly to rod assembly.
- Tightening torque : $150 \pm 15 \text{ kgf} \cdot \text{m}$
 $(1085 \pm 108 \text{ lbf} \cdot \text{ft})$
- ※ Refer to page 8-159.


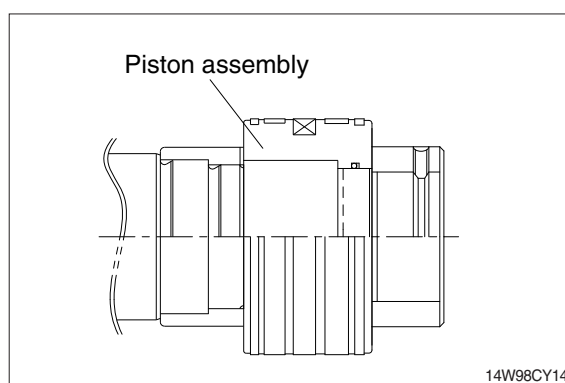


- ⑥ Fit lock nut (20) and tighten the set screw (21).
- Tightening torque :
- Item 20 : $100 \pm 10.0 \text{ kgf} \cdot \text{m}$
 $(723 \pm 72.3 \text{ lbf} \cdot \text{ft})$
- Item 21 : $2.7 \pm 0.3 \text{ kgf} \cdot \text{m}$ ($19.5 \pm 2.2 \text{ lbf} \cdot \text{ft}$)
- ※ Refer to page 8-159.

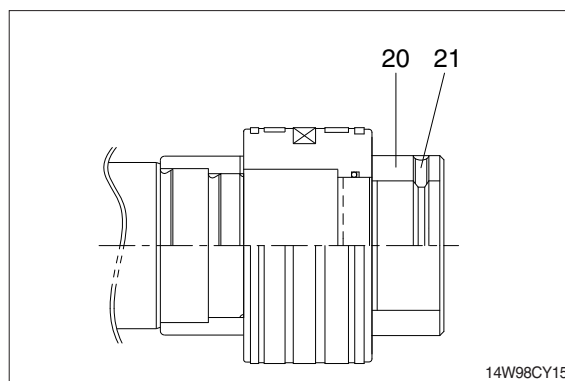

(3) Overall assemble

- ① Place a V-block on a rigid work bench. Mount the tube assembly (1) on it and fix the assembly by passing a bar through the clevis pin hole to lock the assembly.
- ② Insert the rod assembly in to the tube assembly, while lifting and moving the rod assembly with a crane.
 - ※ Be careful not to damage piston seal by thread of tube assembly.
- ③ Match the bolt holes in the cylinder head flange to the tapped holes in the tube assembly and tighten socket bolts to a specified torque.
 - ※ Refer to the table of tightening torque.

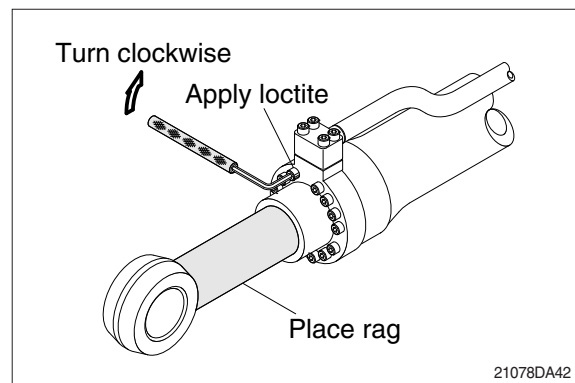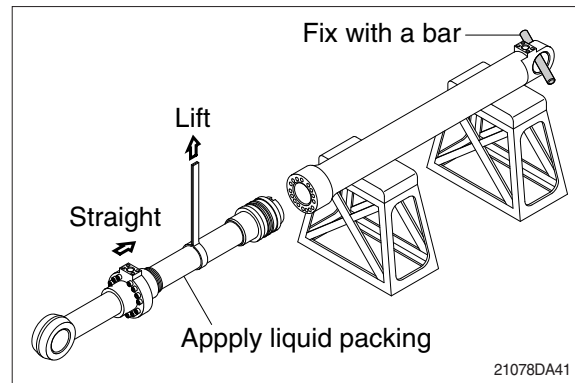

GROUP 10 UNDERCARRIAGE

1. TRACK LINK

1) REMOVAL

(1) Move track link until master pin is over front idler in the position put wooden block as shown.

(2) Loosen tension of the track link.

※ If track tension is not relieved when the grease valve is loosened, move the machine backwards and forwards.

※ Unscrew the grease nipple after release the tension by pushing the poppet only when necessarily required.



Grease leaking hole is not existing. So, while unscrew the grease nipple, grease is not leaking until the grease nipple is completely coming out. If the tension is not released in advance, the grease nipple can be suddenly popped out by pressurized grease.

(3) Push out master pin by using a suitable tool.

(4) Move the machine slowly in reverse, and lay out track link assembly (1).

※ Jack up the machine and put wooden block under the machine.


※ Don't get close to the sprocket side as the track shoe plate may fall down on your feet.

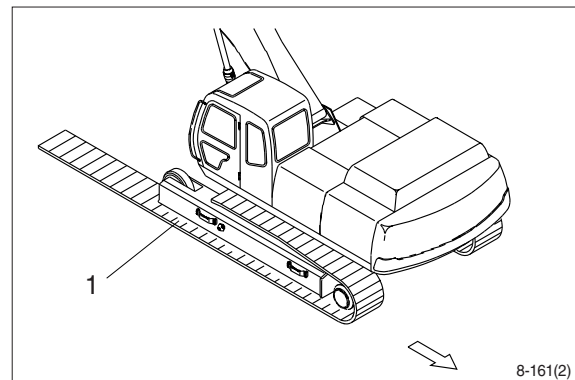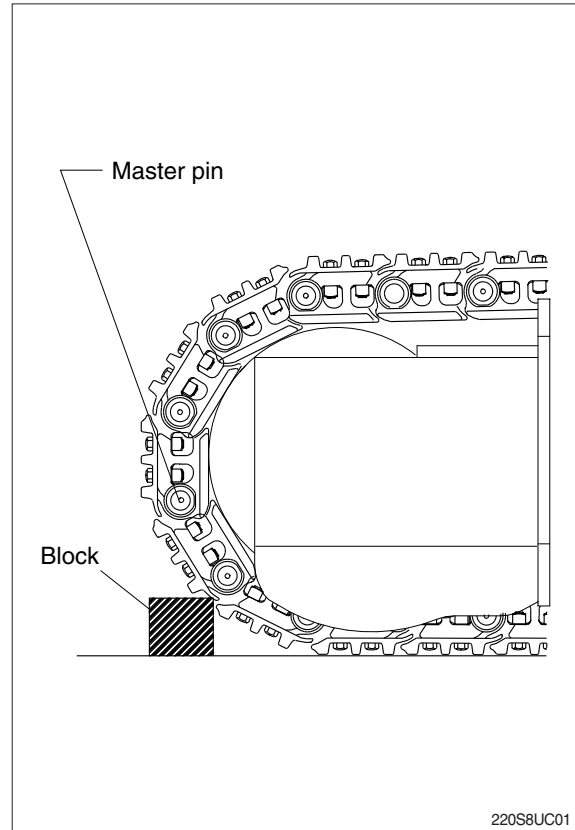

2) INSTALL

(1) Carry out installation in the reverse order to removal.


※ Adjust the tension of the track link.

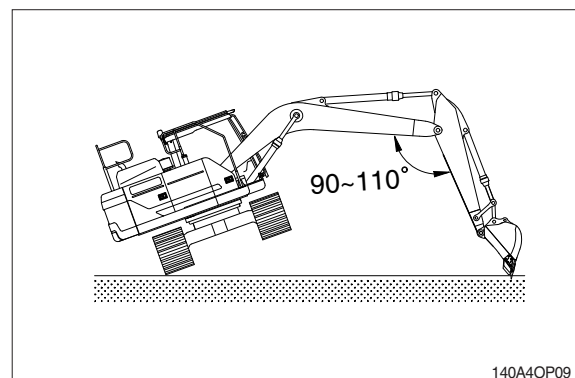


2. UPPER ROLLER

1) REMOVAL


- (1) Loosen tension of the track link.

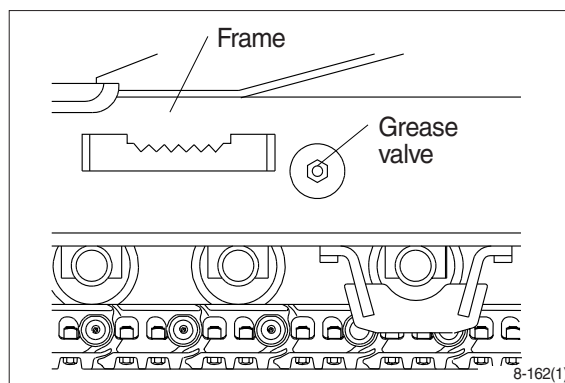

- (2) Jack up the track link height enough to permit upper roller removal.

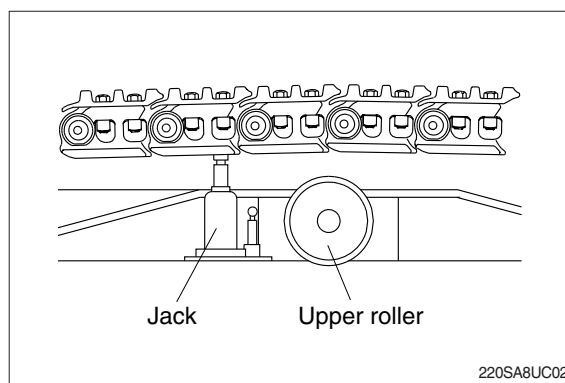

- (3) Loosen the lock nut (1).
- (4) Open bracket(2) with a screwdriver, push out from inside, and remove upper roller assembly.
- Weight : 19 kg (42 lb)
 - Tightening torque : 29.7 ± 4.5 kgf·m
(215 ± 32.5 lbf · ft)

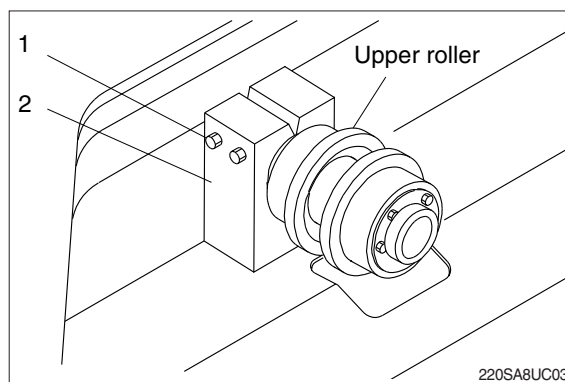


2) INSTALL

- (1) Carry out installation in the reverse order to removal.

3. LOWER ROLLER


1) REMOVAL

- (1) Loosen tension of the track link.

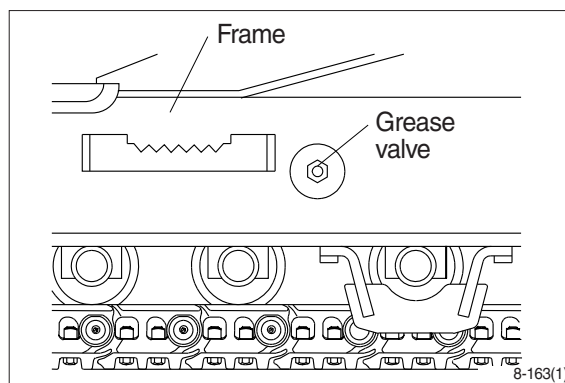

- (2) Using the work equipment, push up track frame on side which is to be removed.


※ After jack up the machine, set a block under the unit.

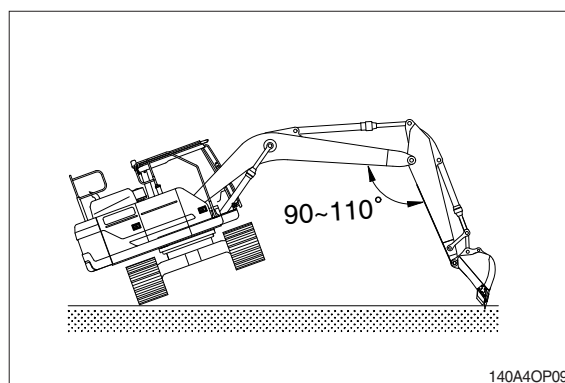

- (3) Remove the mounting bolt (1) and draw out the lower roller (2).

· Weight : 35 kg (77 lb)

· Tightening torque : 29.7 ± 4.5 kgf·m
(215 ± 32.5 lbf · ft)

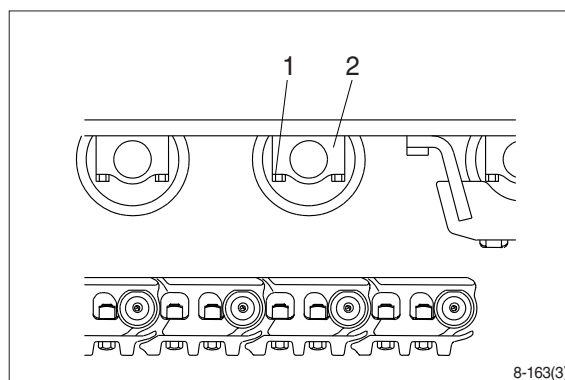


2) INSTALL

- (1) Carry out installation in the reverse order to removal.


4. IDLER AND RECOIL SPRING

1) REMOVAL


- (1) Remove the track link.
For detail, see removal of track link.

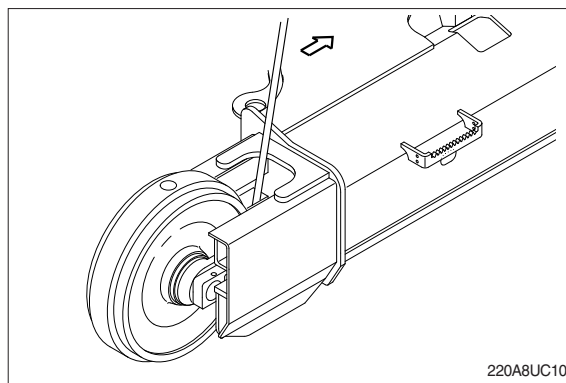

- (2) Sling the recoil spring (1) and pull out idler and recoil spring assembly from track frame, using a pry.
· Weight : 197 kg (434 lb)

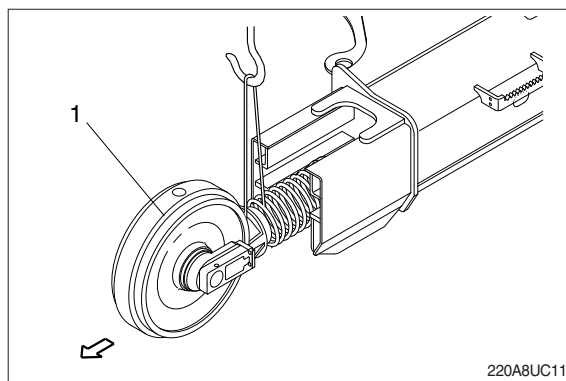


- (3) Remove the bolts (2), washers (3) and separate idler from recoil spring.
· Tightening torque : 29.7 ± 4.5 kgf·m
(215 ± 32.5 lbf · ft)

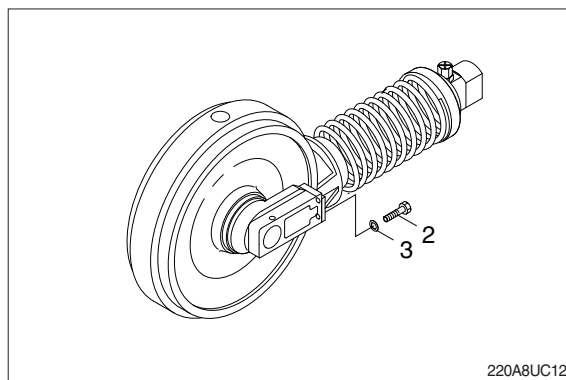


2) INSTALL

- (1) Carry out installation in the reverse order to removal.
- ※ Make sure that the boss on the end face of the recoil cylinder rod is in the hole of the track frame.

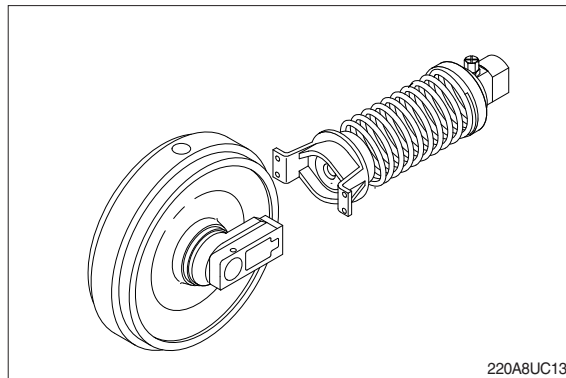

3) DISASSEMBLY AND ASSEMBLY OF IDLER

(1) Structure (standard)

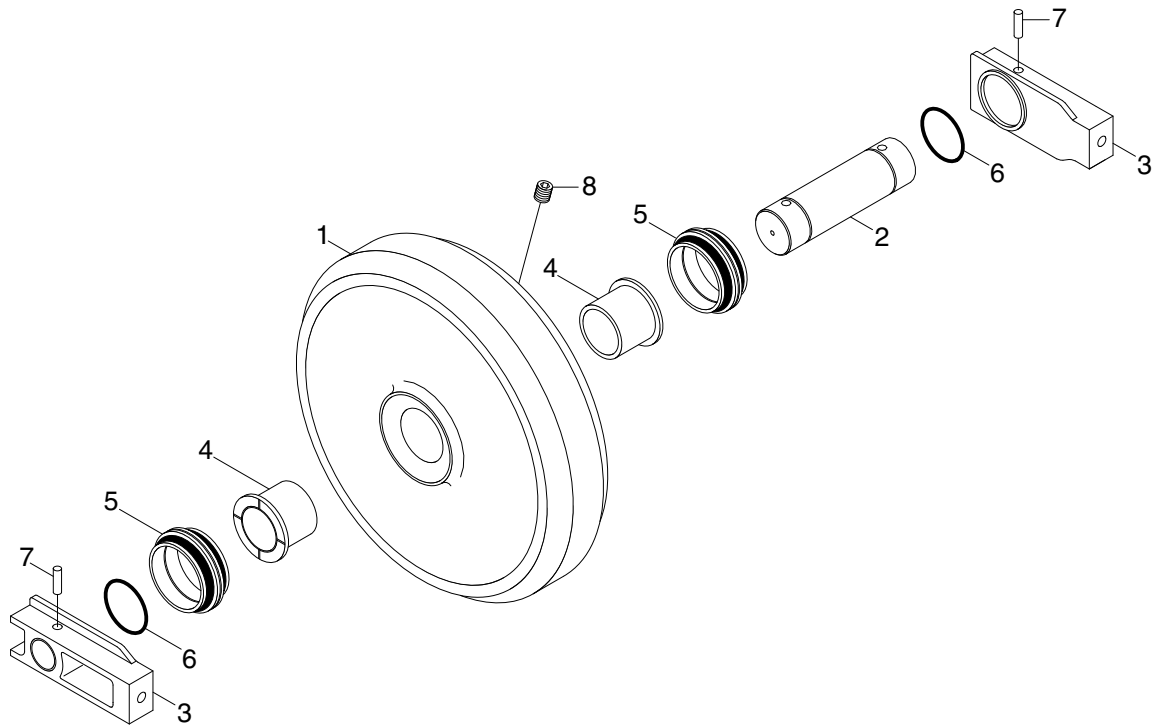


140A8DA43

1 Shell
2 Shaft
3 Bracket

4 Bushing
5 Seal set
6 O-ring

7 Spring pin
8 Plug

Structure (Option, high walker)

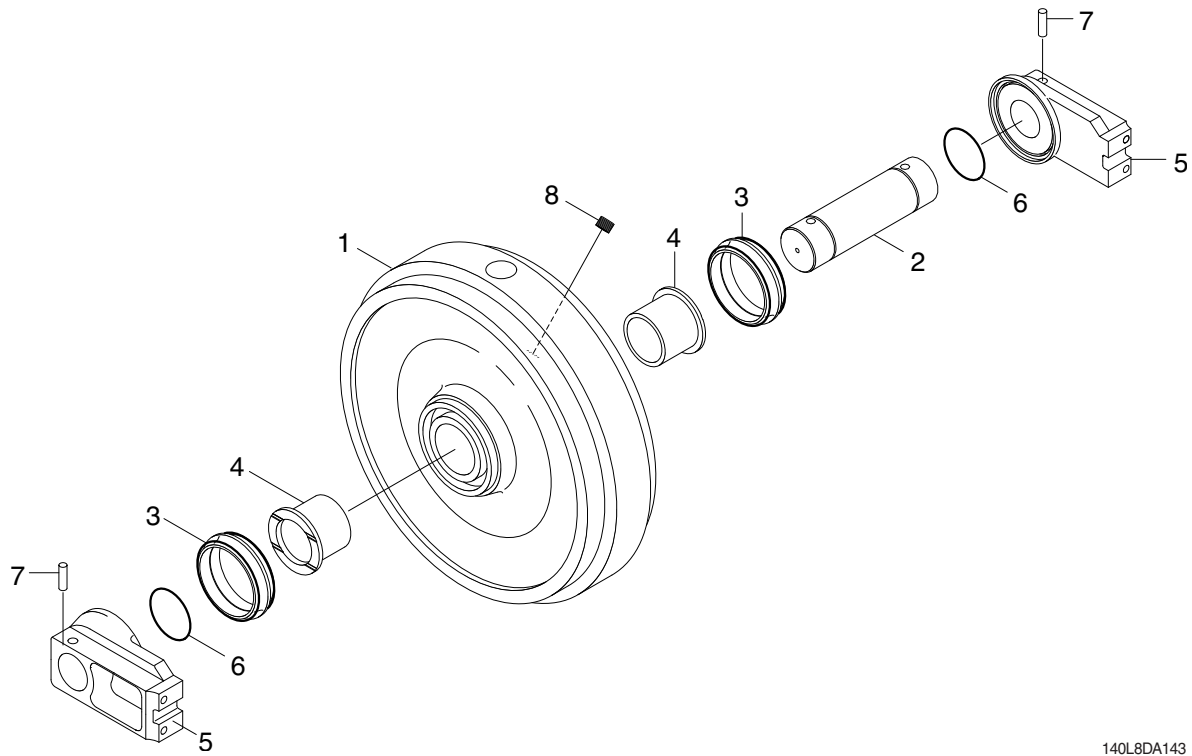

140L8DA143

1 Shell
2 Shaft
3 Seal assy


4 Bushing
5 Bracket
6 O-ring

7 Spring pin
8 Hex Plug


(2) Disassembly

※ The illustrations are base on the standard type.


- ① Remove plug and drain oil.
- ② Draw out the spring pin (7), using a press.

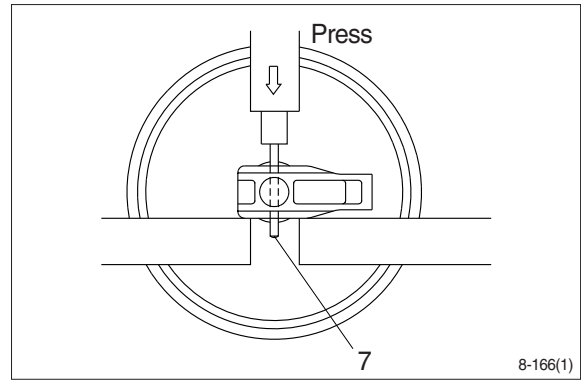

- ③ Pull out the shaft (2) with a press.
- ④ Remove seal (5) from idler (1) and bracket (3).
- ⑤ Remove O-ring (6) from shaft.

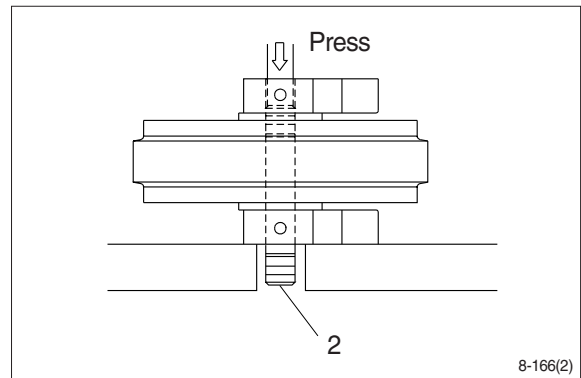

- ⑥ Remove the bushing (4) from idler, using a special tool.
Only remove bushing if replacement is necessity.

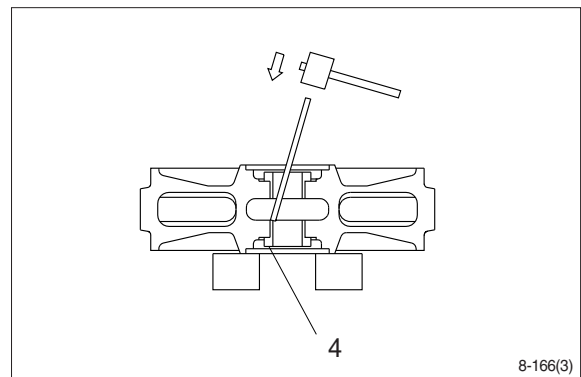


(3) Assembly


- ※ Before assembly, clean the parts.
- ※ Coat the sliding surfaces of all parts with oil.

- ① Cool up bushing (4) fully by some dry ice and press it into shell (1).


Do not press it at the normal temperature, or not knock in with a hammer even after the cooling.

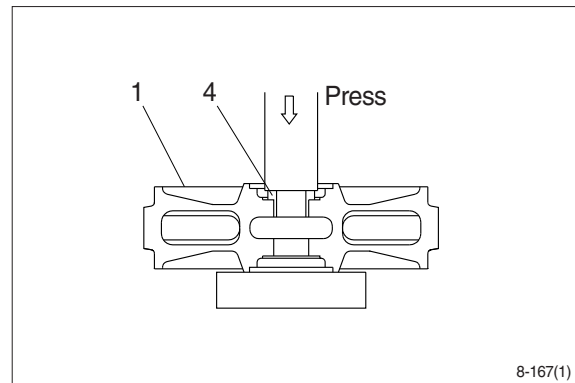


- ② Coat O-ring (6) with grease thinly, and install it to shaft (2).
- ③ Insert shaft (2) into bracket (3) and drive in the spring pin (7).

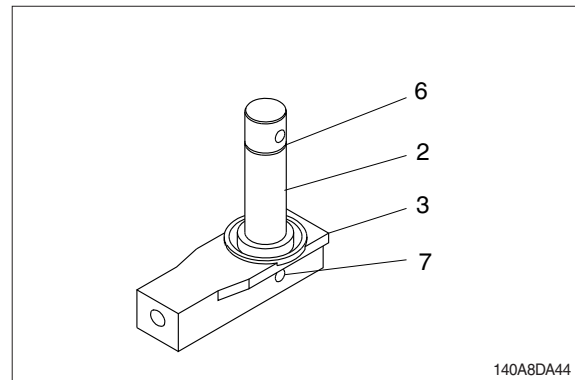


- ④ Install seal (5) to shell (1) and bracket (3).

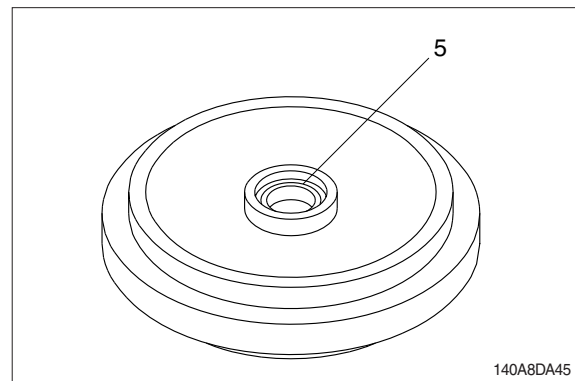


- ⑤ Install shaft (2) to shell (1).

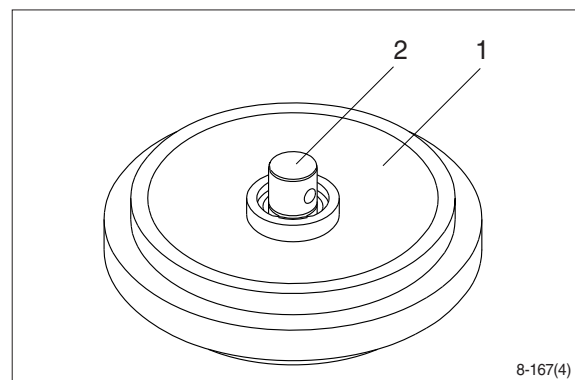


- ⑥ Install bracket (3) attached with seal (5).

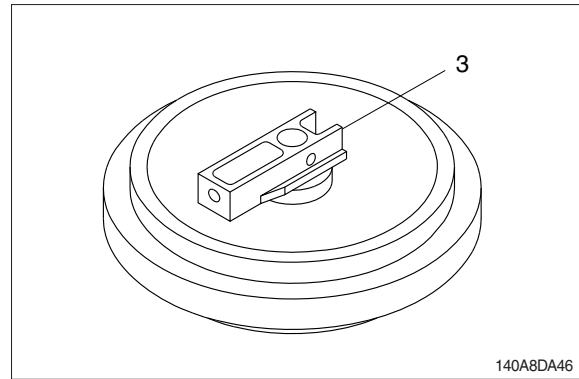

- ⑦ Knock in the spring pin (7) with a hammer.

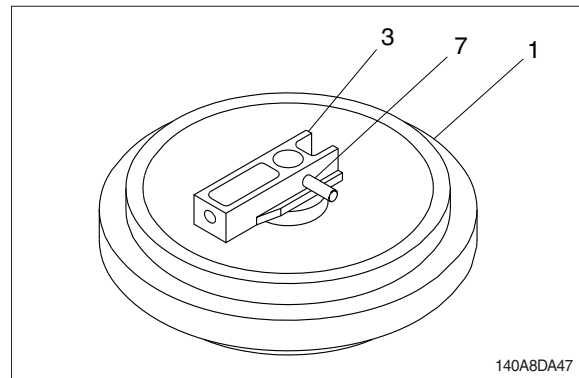


- ⑧ Lay bracket (3) on its side.
Supply engine oil to the specified level,
and tighten plug.

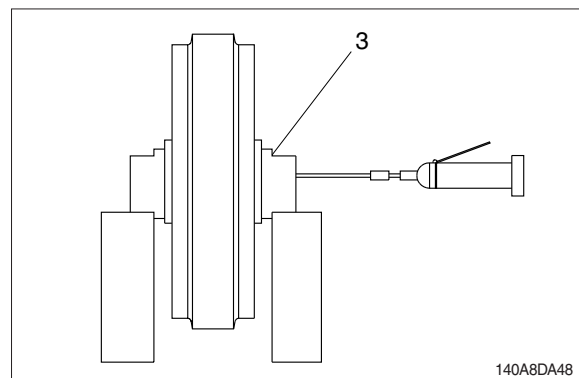

4) DISASSEMBLY AND ASSEMBLY OF RECOIL SPRING


(1) Structure (standard)

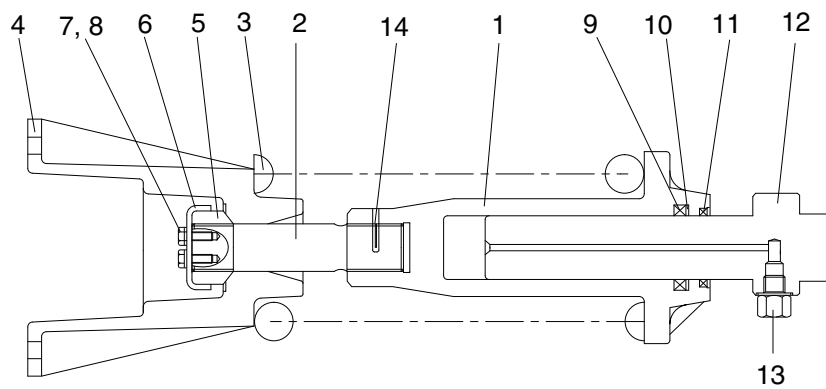

140LC8UC30

- | | | | | | |
|---|----------|----|---------------|----|--------------|
| 1 | Body | 6 | Lock plate | 11 | Dust seal |
| 2 | Tie bar | 7 | Bolt | 12 | Rod |
| 3 | Spring | 8 | Spring washer | 13 | Grease valve |
| 4 | Bracket | 9 | Rod packing | 14 | Spring pin |
| 5 | Lock nut | 10 | Back up ring | | |

Structure (Option, high walker)

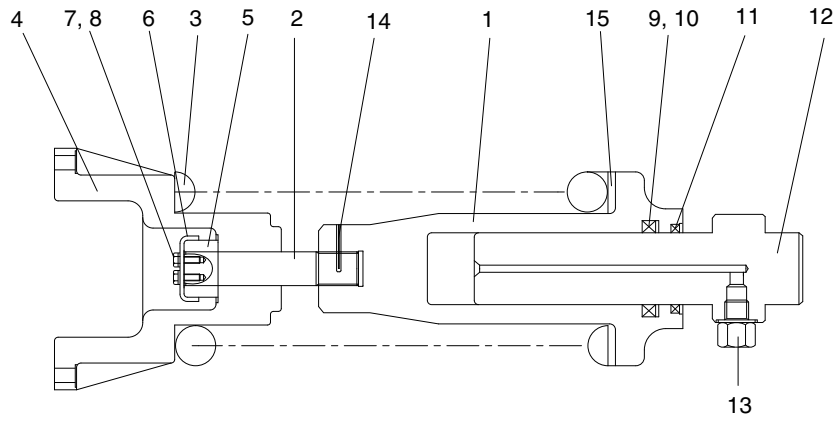

140L8UC130

- | | | | | | |
|---|----------|----|---------------|----|--------------|
| 1 | Body | 6 | Lock plate | 11 | Dust seal |
| 2 | Tie bar | 7 | Bolt | 12 | Rod assembly |
| 3 | Spring | 8 | Spring washer | 13 | Grease valve |
| 4 | Bracket | 9 | Rod seal | 14 | Spring pin |
| 5 | Lock nut | 10 | Back up ring | 15 | Spacer |

(2) Disassembly

※ The illustrations are base on the stand-ard type.

① Apply pressure on spring (3) with a press.
The spring is under a large installed load.


※ This is dangerous, so be sure to set properly.

② Remove bolt (7), spring washer (8) and lock plate (6).

③ Remove lock nut (5).


Take enough notice so that the press which pushes down the spring, should not be slipped out in its operation.

④ Lighten the press load slowly and remove bracket (4) and spring (3).

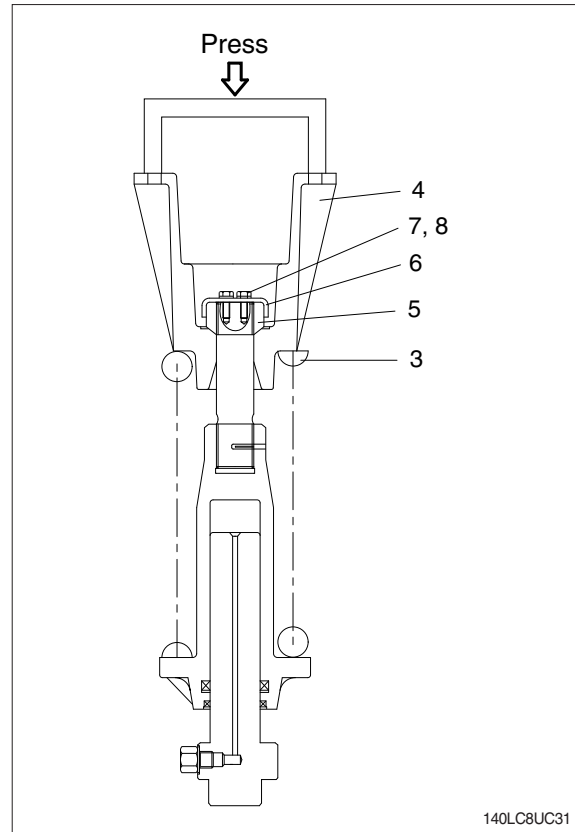


⑤ Remove rod (12) from body (1).

⑥ Remove grease valve (13) from rod (12).

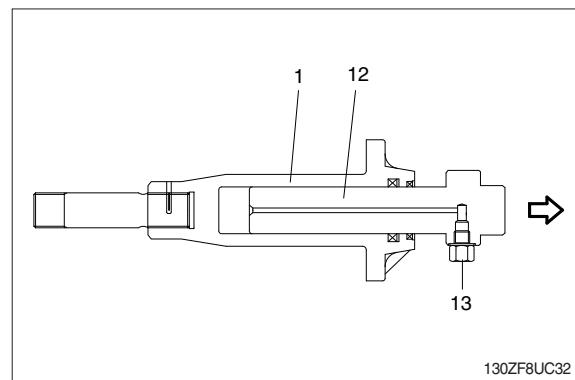


⑦ Remove rod seal (9), back up ring (10) and dust seal (11).

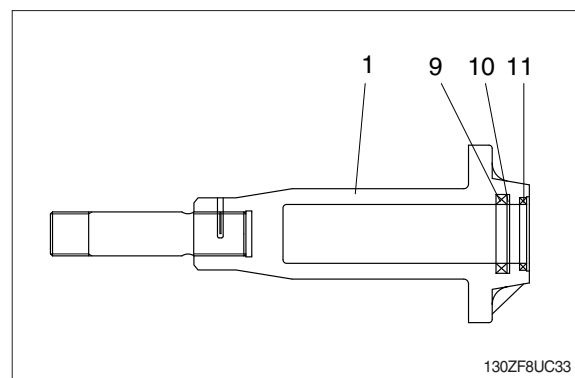

(3) Assembly

Install dust seal (11), back up ring (10) and rod seal (9) to body (1).

- ※ When installing dust seal (11) and rod seal (9), take full care so as not to damage the lip.

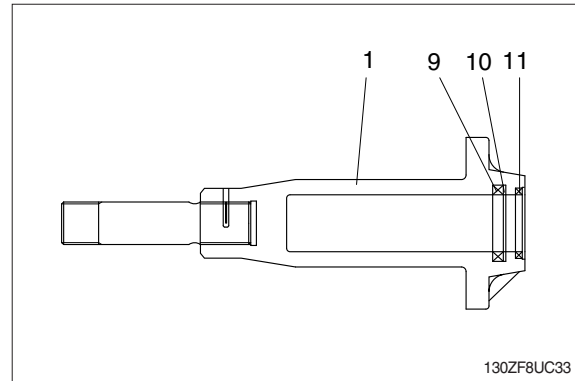


- ② Pour grease into body (1), then push in rod (12) by hand.

After take grease out of grease valve mounting hole, let air out.

- ※ If air letting is not sufficient, it may be difficult to adjust the tension of crawler.

- ③ Fit grease valve (13) to rod (12).

- Tightening torque : $13.0 \pm 0.5 \text{ kgf} \cdot \text{m}$
($94.0 \pm 3.6 \text{ lbf} \cdot \text{ft}$)

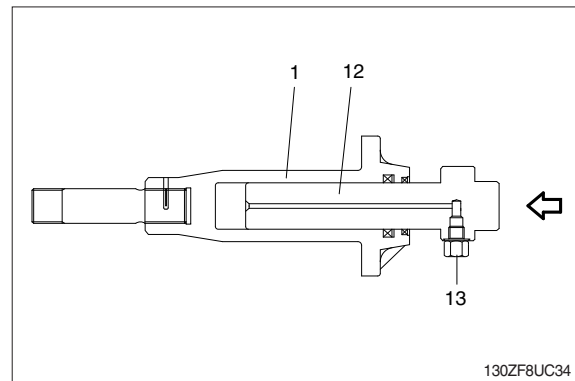


- ④ Install spring (3) and bracket (4) to body (1).

- ⑤ Apply pressure to spring (3) with a press and tighten lock nut (5).


- Spring set load
 - Standard : 8497 kg (18733 lb)
 - High walker : 11908 kg (26253 lb)

- ※ Apply sealant before assembling.

- ※ During the operation, pay attention specially to prevent the press from slipping out.


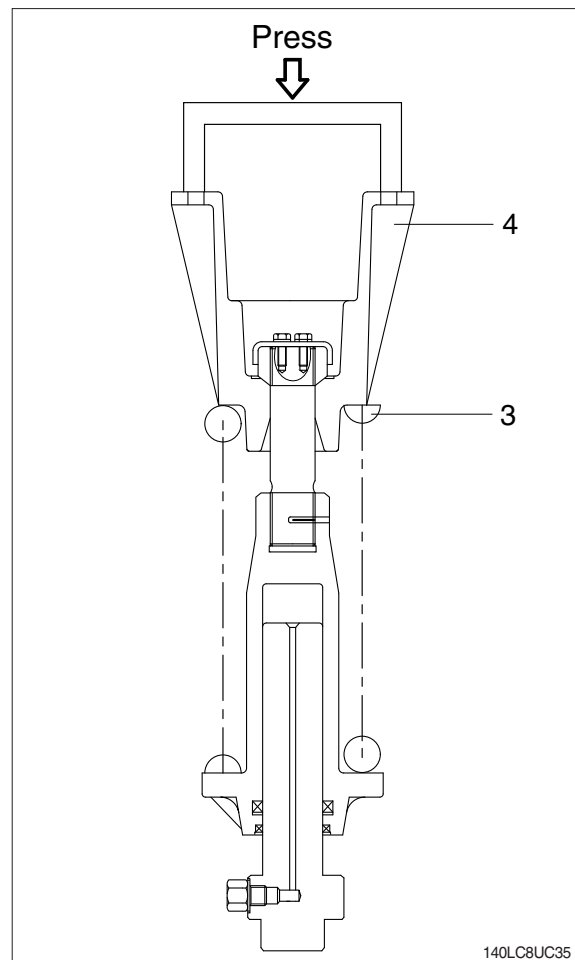


- ⑥ Lighten the press load and confirm the set length of spring (3).
- Standard : 405 ± 1.5 mm
 - High walker : 420 ± 1.5 mm
- ⑦ After the setting of spring (3), install lock plate (6), spring washer (8) and bolt (7).
- Tightening torque : 15 ± 0.5 kgf·m
(108 ± 3.6 lbf·ft)

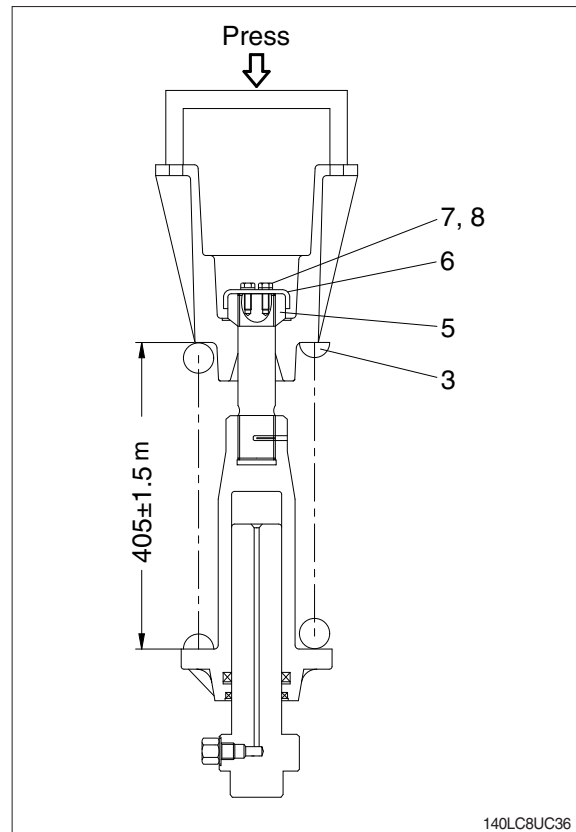


GROUP 11 WORK EQUIPMENT


1. STRUCTURE

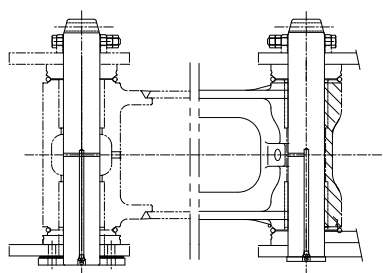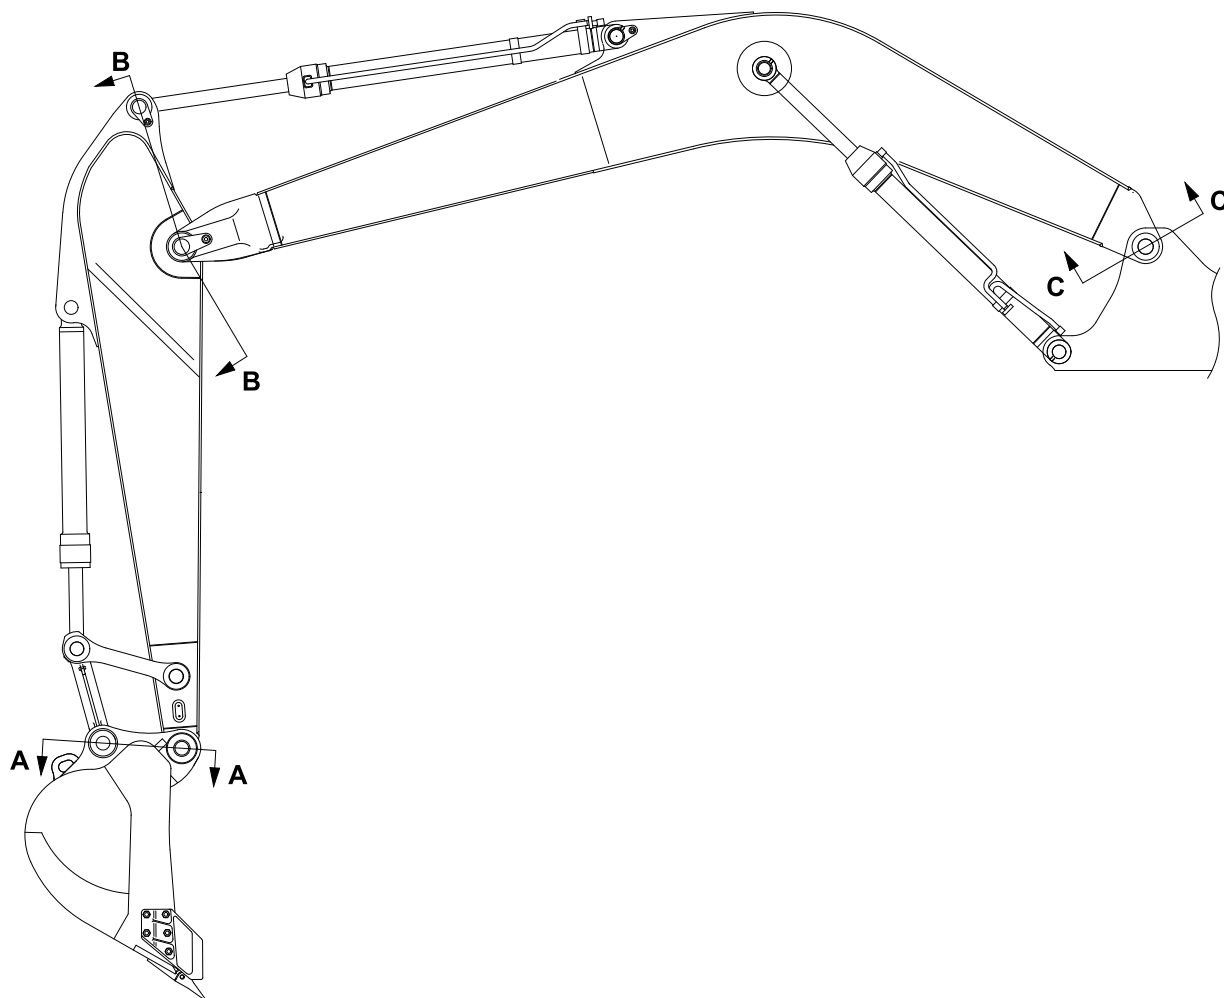

SECTION A

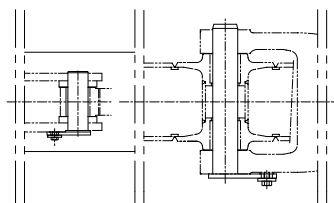

SECTION B

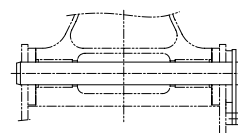

SECTION C


220A8WE10

2. REMOVAL AND INSTALL


1) BUCKET ASSEMBLY

(1) Removal


- ① Lower the work equipment completely to ground with back of bucket facing down.

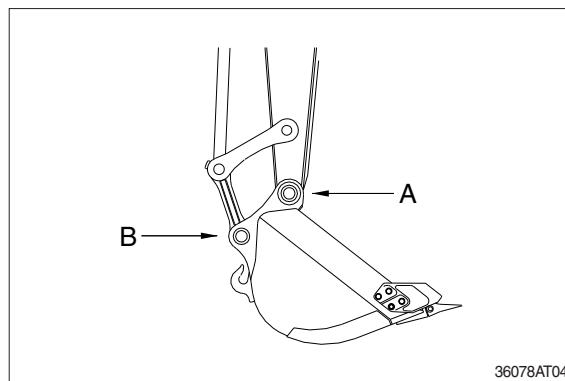

- ② Remove nut (1), bolt (2) and draw out the pin (A).
 - Tightening torque (1) : $29.7 \pm 4.5 \text{ kgf} \cdot \text{m}$
($215 \pm 32.5 \text{ lbf} \cdot \text{ft}$)

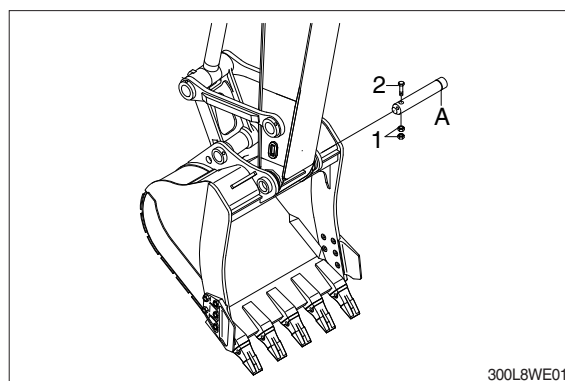

- ③ Remove nut (3), bolt (4) and draw out the pin (B).
 - Tightening torque (3) : $29.7 \pm 4.5 \text{ kgf} \cdot \text{m}$
($215 \pm 32.5 \text{ lbf} \cdot \text{ft}$)
 - Weight : 438 kg (966 lb)

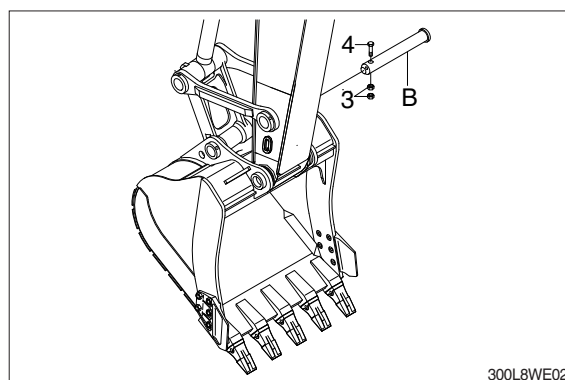


(2) Install

- ① Carry out installation in the reverse order to removal.

▲ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.

※ Adjust the bucket clearance.
For detail, see operation manual.

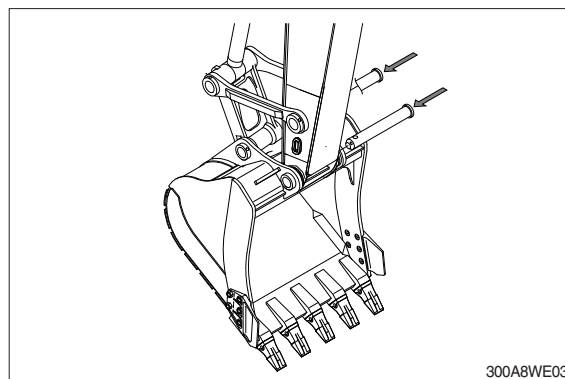

2) ARM ASSEMBLY

(1) Removal

※ Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ Escaping fluid under pressure can penetrate the skin causing serious injury.

① Remove bucket assembly.

For details, see removal of bucket assembly.

② Disconnect bucket cylinder hose (1).

▲ Fit blind plugs (5) in the piping at the chassis end securely to prevent oil from spurting out when the engine is started.

③ Sling arm cylinder assembly, remove spring, pin stopper and pull out pin.

※ Tie the rod with wire to prevent it from coming out.

④ For details, see removal of arm cylinder assembly.




Place a wooden block under the cylinder and bring the cylinder down to it.

⑤ Remove bolt (2), plate (3) and pull out the pin (4) then remove the arm assembly.

· Weight : 681 kg (1500 lb)

· Tightening torque (2) : 12.8 ± 3.0 kgf·m
(92.6 ± 21.7 lbf·ft)

※ When lifting the arm assembly, always lift the center of gravity.

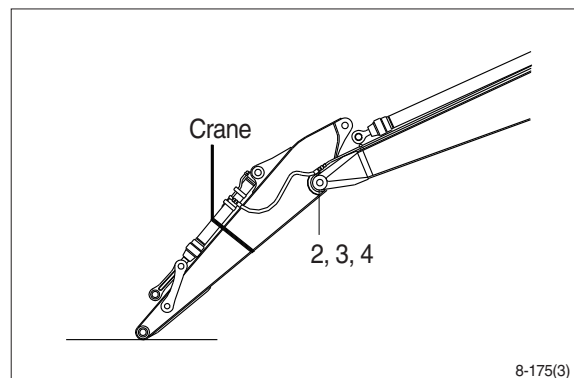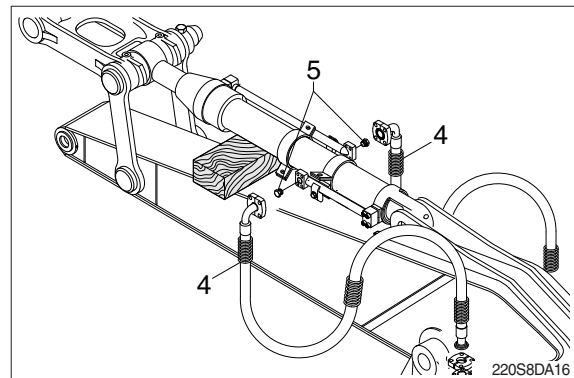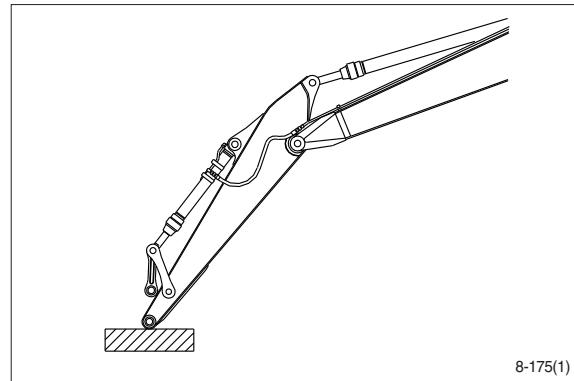

(2) Install

① Carry out installation in the reverse order to removal.


▲ When lifting the arm assembly, always lift the center of gravity.

※ Bleed the air from the cylinder.


3) BOOM ASSEMBLY

(1) Removal


- ① Remove arm and bucket assembly.
For details, see removal of arm and bucket assembly.
- ② Remove boom cylinder assembly from boom.
For details, see removal of boom cylinder assembly.

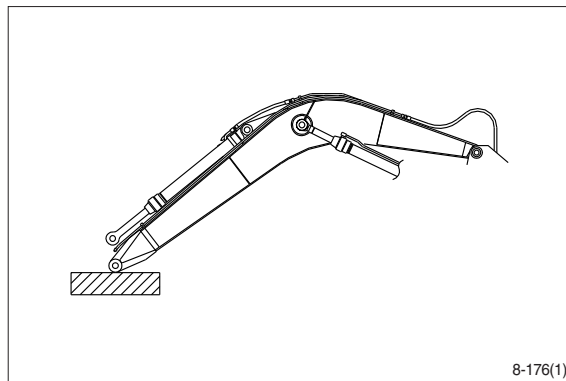

- ③ Disconnect head lamp wiring.
- ④ Disconnect bucket cylinder hose (2) and arm cylinder hose (1).
- ※ When the hose are disconnected, oil may spurt out.
- ⑤ Sling boom assembly (3).

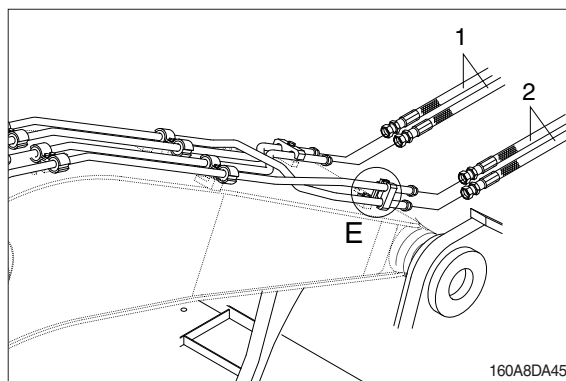

- ⑥ Remove bolt (4), plate (5) and pull out the pin (6) then remove boom assembly.
· Weight : 992 kg (2190 lb)
· Tightening torque (4) : 12.8 ± 3.0 kgf · m
(92.6 ± 21.7 lbf · ft)
- ※ When lifting the boom assembly always lift the center of gravity.

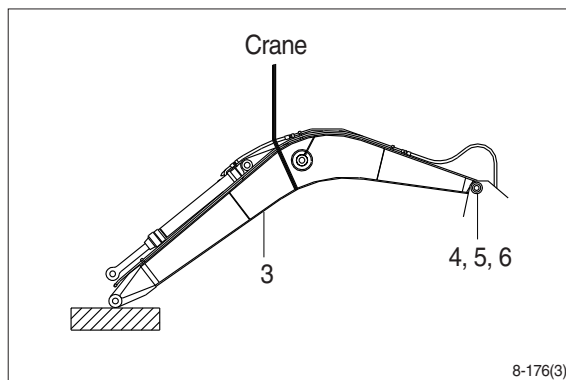

(2) Install

- ① Carry out installation in the reverse order to removal.
- ▲ When lifting the arm assembly, always lift the center of gravity.
- ※ Bleed the air from the cylinder.

