

SECTION 1 GENERAL

Group 1 Safety Hints	1-1
Group 2 Specifications	1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device	2-1
Group 2 Main Control Valve	2-21
Group 3 Swing Device	2-47
Group 4 Travel Device	2-58
Group 5 RCV Lever	2-73
Group 6 RCV Pedal	2-80

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit	3-1
Group 2 Main Circuit	3-2
Group 3 Pilot Circuit	3-5
Group 4 Single Operation	3-13
Group 5 Combined Operation	3-23

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Electrical Circuit(Up to #0111)	4-3
Group 3 Electrical Component Specification	4-19
Group 4 Connectors	4-28
Group 5 Electrical Circuit(1/2, #0112 and up, TIER II)	4-48

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline	5-1
Group 2 Mode selection System	5-3
Group 3 Automatic Deceleration System	5-6
Group 4 Power Boost System	5-7
Group 5 Travel Speed Control System	5-8
Group 6 Automatic Warming Up Function	5-9
Group 7 Engine Overheat Prevention Function	5-10
Group 8 Anti-Restart System	5-11

Group 9 Self-Diagnostic System	5-12
Group 10 Engine Control System	5-15
Group 11 EPPR(Electro Proportional Pressure Reducing) Valve	5-21
Group 12 Prolix Switch	5-24
Group 13 Monitoring System	5-25
Group 14 Outline(TIER II only)	5-40
Group 15 Mode selection system(TIER II only)	5-41
Group 16 Auto deceleration system(TIER II only)	5-43
Group 17 Power boost system(TIER II only)	5-44
Group 18 Automatic warming up function(TIER II only)	5-45
Group 19 Engine overheat prevention function(TIER II only)	5-46
Group 20 Self-diagnostic(ECM, TIER II only)	5-47

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting	6-1
Group 2 Hydraulic and Mechanical System	6-4
Group 3 Electrical System	6-24
Group 4 Mechatronics System	6-41
Group 5 Electrical system(TIER II only)	6-58
Group 6 Mechatronics System(TIER II only)	6-63

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test	7-1
Group 2 Major Components	7-21
Group 3 Track and Work Equipment	7-31

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution	8-1
Group 2 Tightening Torque	8-4
Group 3 Pump Device	8-7
Group 4 Main Control Valve	8-30
Group 5 Swing Device	8-43
Group 6 Travel Device	8-67
Group 7 RCV Lever	8-92
Group 8 Turning Joint	8-107
Group 9 Boom, Arm and Bucket Cylinder	8-112
Group 10 Undercarriage	8-129
Group 11 Work Equipment	8-141

SECTION 9 COMPONENT MOUNTING TORQUE

Group 1	Introduction guide	9-1
Group 2	Engine system	9-2
Group 3	Electric system	9-4
Group 4	Hydraulic system	9-6
Group 5	Undercarriage	9-10
Group 6	Structure	9-11
Group 7	Work equipment	9-14