


## **SECTION 4 ELECTRICAL SYSTEM**

Group 1 Component Location .....	4-1
Group 2 Electrical Circuit .....	4-3
Group 3 Electrical Component Specification .....	4-20
Group 4 Connectors .....	4-28

# SECTION 4 ELECTRICAL SYSTEM

## GROUP 1 COMPONENT LOCATION


### 1. LOCATION 1

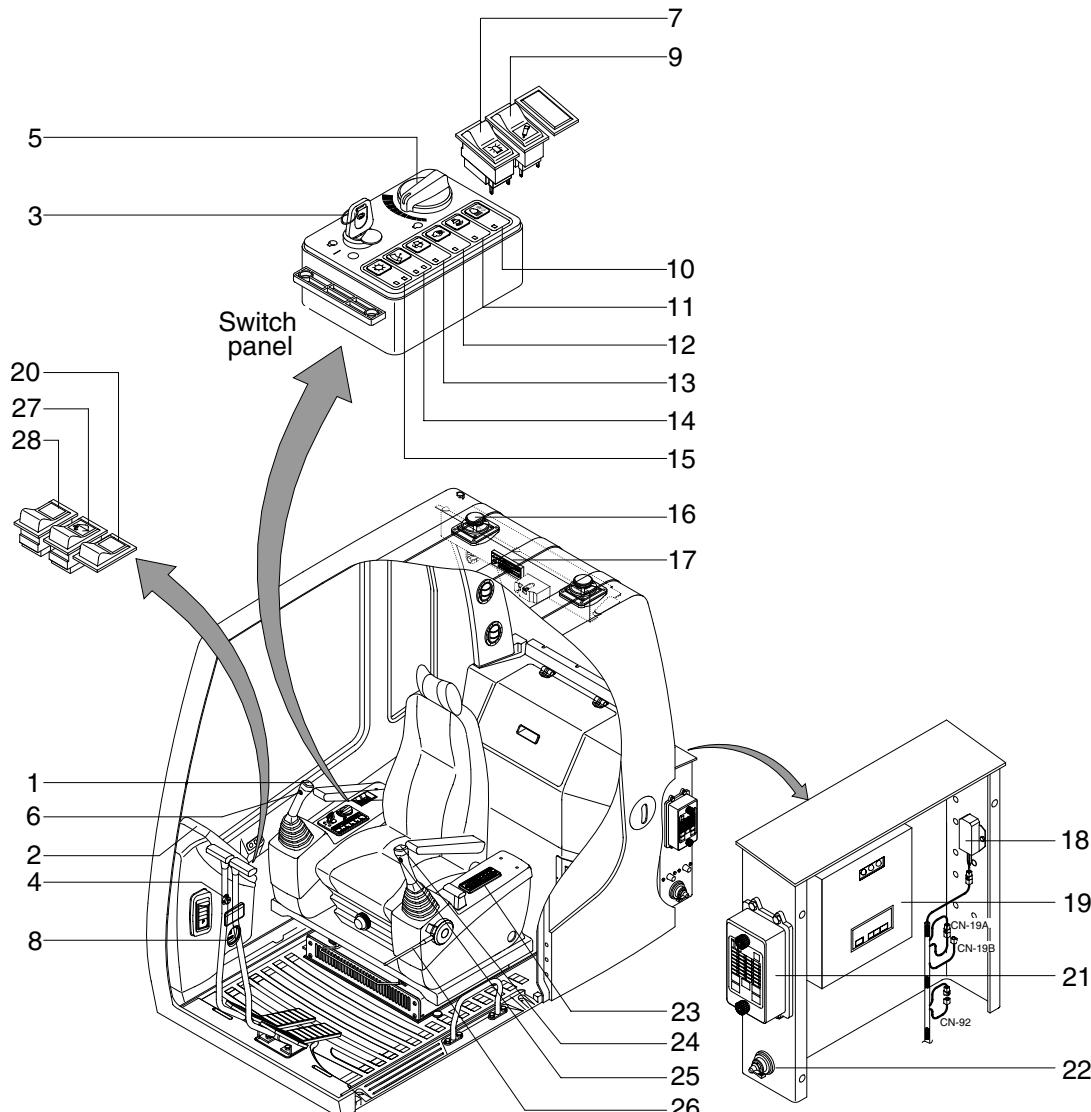

30074EL01B

1	Horn switch	11	Travel alarm stop switch	21	Fuse box
2	Cluster	12	Preheat switch	22	Master switch
3	Starting switch	13	Washer switch	23	Air con & heater switch panel
4	Cigar lighter	14	Wiper switch	24	One touch decel switch
5	Accel dial	15	Main light switch	25	Power max switch
6	Breaker switch	16	Speaker	26	Safety lever
7	Beacon switch	17	Cassette & radio	27	Overload switch
8	Service meter	18	Prolix resistor	28	Quick clamp switch
9	Breaker selection switch	19	MCU controller		
10	Cab light switch	20	ECONO switch		

## 2. LOCATION 2

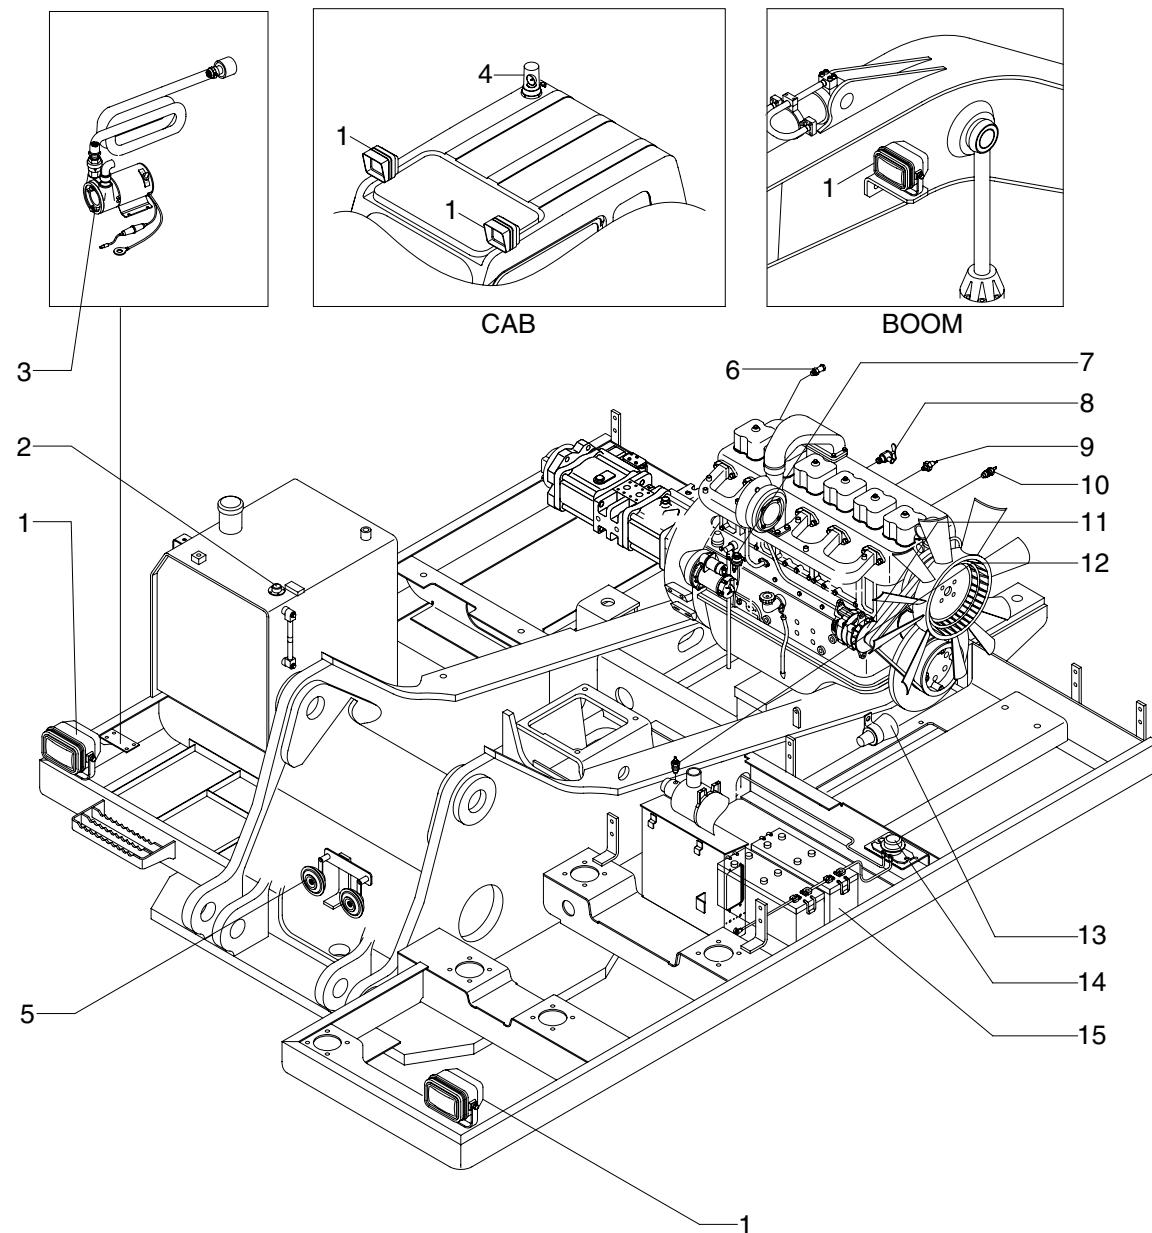

30007A4EL02

- |                    |                              |                        |
|--------------------|------------------------------|------------------------|
| 1 Lamp             | 6 Speed sensor               | 11 Alternator          |
| 2 Fuel sender      | 7 Start relay                | 12 Air cleaner switch  |
| 3 Fuel filler pump | 8 Heater valve               | 13 Travel alarm buzzer |
| 4 Beacon lamp      | 9 Engine oil pressure switch | 14 Battery relay       |
| 5 Horn             | 10 Temp sender               | 15 Battery             |