

SECTION 1 GENERAL

Group 1 Safety Hints	1-1
Group 2 Specifications	1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device	2-1
Group 2 Main Control Valve	2-6
Group 3 Swing Device	2-28
Group 4 Travel Device	2-38
Group 5 RCV Lever	2-47

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit	3-1
Group 2 Main Circuit	3-2
Group 3 Pilot Circuit	3-5
Group 4 Single Operation	3-10
Group 5 Combined Operation	3-25

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Monitoring system	4-3
Group 3 Electrical Circuit	4-14
Group 4 Electrical Component Specification	4-30
Group 5 Connectors	4-37
Group 6 Fault codes	4-57

SECTION 5 TROUBLESHOOTING

Group 1 Before Troubleshooting	5-1
Group 2 Hydraulic and Mechanical System	5-4
Group 3 Electrical System	5-24

SECTION 6 MAINTENANCE STANDARD

Group 1 Operational Performance Test	6-1
Group 2 Major Components	6-21
Group 3 Track and Work Equipment	6-30

SECTION 7 DISASSEMBLY AND ASSEMBLY

Group 1	Precaution	7-1
Group 2	Tightening Torque	7-4
Group 3	Pump Device	7-7
Group 4	Main Control Valve	7-38
Group 5	Swing Device	7-51
Group 6	Travel Device	7-72
Group 7	RCV Lever	7-100
Group 8	Turning Joint	7-114
Group 9	Boom, Arm and Bucket Cylinder	7-119
Group 10	Undercarriage	7-138
Group 11	Work Equipment	7-150

SECTION 8 COMPONENT MOUNTING TORQUE

Group 1	Introduction Guide	8-1
Group 2	Engine System	8-2
Group 3	Electric System	8-4
Group 4	Hydraulic System	8-5
Group 5	Undercarriage	8-7
Group 6	Structure	8-8
Group 7	Work Equipment	8-10